



MCUXpresso SDK Documentation

Release 25.09.00-pvw2



NXP
Aug 12, 2025



Table of contents

1	FRDM-K22F	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	55
1.3.1	Getting Started with MCUXpresso SDK Repository	55
1.4	Release Notes	68
1.4.1	MCUXpresso SDK Release Notes	68
1.5	ChangeLog	73
1.5.1	MCUXpresso SDK Changelog	73
1.6	Driver API Reference Manual	124
1.7	Middleware Documentation	125
1.7.1	Multicore	125
1.7.2	FreeMASTER	125
1.7.3	FreeRTOS	125
1.7.4	File systemFatfs	125
2	MK22F51212	127
2.1	ADC16: 16-bit SAR Analog-to-Digital Converter Driver	127
2.2	Clock Driver	136
2.3	CMP: Analog Comparator Driver	160
2.4	CRC: Cyclic Redundancy Check Driver	164
2.5	DAC: Digital-to-Analog Converter Driver	167
2.6	DMAMUX: Direct Memory Access Multiplexer Driver	172
2.7	DSPI: Serial Peripheral Interface Driver	173
2.8	DSPI Driver	173
2.9	DSPI eDMA Driver	197
2.10	eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver	203
2.11	EWM: External Watchdog Monitor Driver	222
2.12	FGPIO Driver	225
2.13	C90TFS Flash Driver	225
2.14	FlexBus: External Bus Interface Driver	225
2.15	ftfx adapter	231
2.16	Ftftx CACHE Driver	231
2.17	ftfx controller	232
2.18	ftfx feature	249
2.19	Ftftx FLASH Driver	249
2.20	Ftftx FLEXNVM Driver	263
2.21	ftfx utilities	274
2.22	FTM: FlexTimer Driver	274
2.23	GPIO: General-Purpose Input/Output Driver	297
2.24	GPIO Driver	298
2.25	I2C: Inter-Integrated Circuit Driver	300
2.26	I2C Driver	300
2.27	I2C eDMA Driver	315
2.28	Common Driver	316

2.29	Lin_lpuart_driver	328
2.30	LLWU: Low-Leakage Wakeup Unit Driver	336
2.31	LPTMR: Low-Power Timer	340
2.32	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	345
2.33	LPUART Driver	345
2.34	LPUART eDMA Driver	364
2.35	MCM: Miscellaneous Control Module	367
2.36	PDB: Programmable Delay Block	371
2.37	PIT: Periodic Interrupt Timer	382
2.38	PMC: Power Management Controller	386
2.39	PORT: Port Control and Interrupts	392
2.40	RCM: Reset Control Module Driver	399
2.41	RNGA: Random Number Generator Accelerator Driver	405
2.42	RTC: Real Time Clock	406
2.43	SAI: Serial Audio Interface	413
2.44	SAI Driver	413
2.45	SAI EDMA Driver	439
2.46	SIM: System Integration Module Driver	446
2.47	Smart Card	447
2.48	Smart Card PHY Driver	455
2.49	Smart Card PHY GPIO Driver	456
2.50	Smart Card PHY TDA8035 Driver	456
2.51	Smart Card UART Driver	456
2.52	SMC: System Mode Controller Driver	459
2.53	UART: Universal Asynchronous Receiver/Transmitter Driver	465
2.54	UART Driver	465
2.55	UART eDMA Driver	481
2.56	VREF: Voltage Reference Driver	483
2.57	WDOG: Watchdog Timer Driver	487
3	Middleware	495
3.1	File System	495
3.1.1	FatFs	495
3.2	Motor Control	497
3.2.1	FreeMASTER	497
3.3	MultiCore	534
3.3.1	Multicore SDK	534
4	RTOS	631
4.1	FreeRTOS	631
4.1.1	FreeRTOS kernel	631
4.1.2	FreeRTOS drivers	637
4.1.3	backoffalgorithm	637
4.1.4	corehttp	640
4.1.5	corejson	642
4.1.6	coremqtt	645
4.1.7	coremqtt-agent	648
4.1.8	corepkcs11	652
4.1.9	freertos-plus-tcp	655


This documentation contains information specific to the frdmk22f board.

Chapter 1

FRDM-K22F

1.1 Overview

Form-factor compatible with the Arduino R3 pin layout. Peripherals enable rapid prototyping, including a 6-axis digital accelerometer and magnetometer to create full eCompass capabilities, a tri-colored LED and 2 user push-buttons for direct interaction, and connectivity for use with Bluetooth and 2.4 GHz radio add-on modules. OpenSDAv2 offers options for serial communication, flash programming, and run-control debugging. The FRDM-K22F is enabled with the ARM mbed development platform, which means you can quickly get started designing with no downloads or installations.

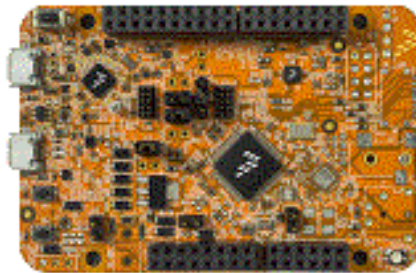

MCU device and part on board is shown below:

- Device: MK22F51212
- PartNumber: MK22FN512VLH12

1.2 Getting Started with MCUXpresso SDK Package


1.2.1 Getting Started with MCUXpresso SDK Package

Overview

The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN).

For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

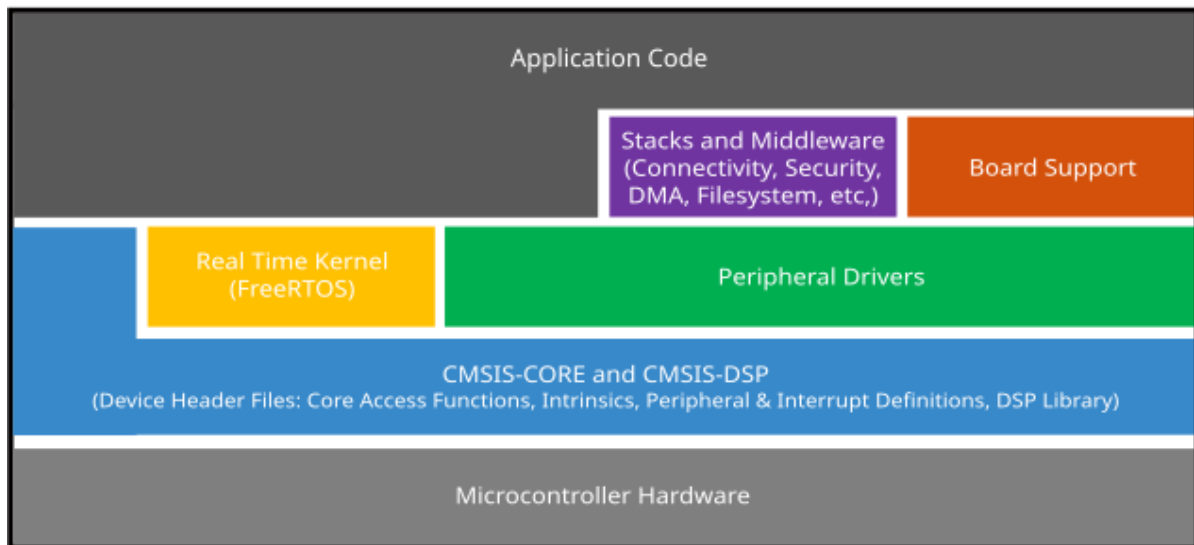

MCUXpresso SDK board support package folders


MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):

- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.
- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` example (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

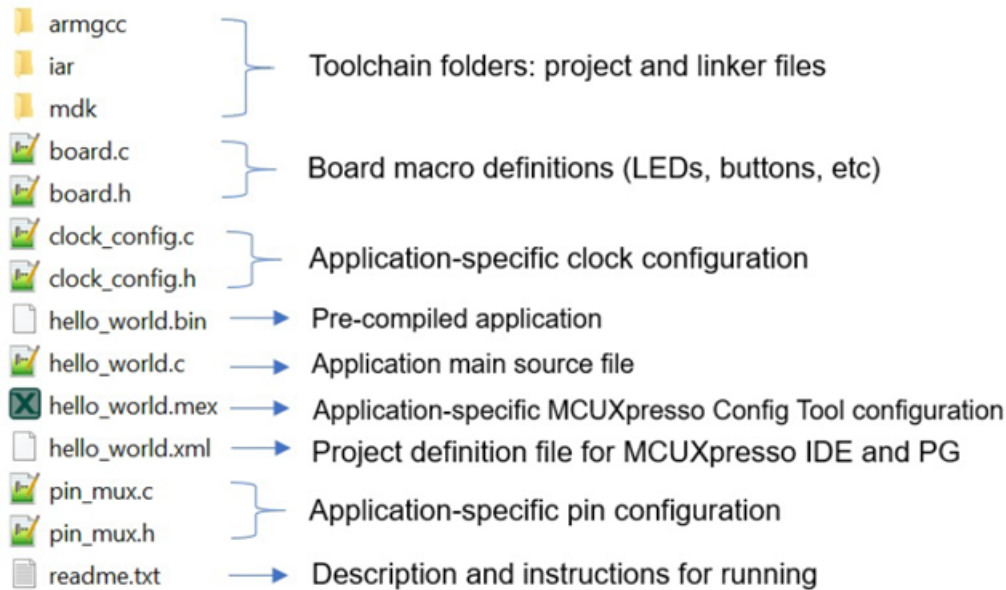

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications
- `devices/<device_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the `rtos` folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.

Run a demo using MCUXpresso IDE

Note: Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.


This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is

used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

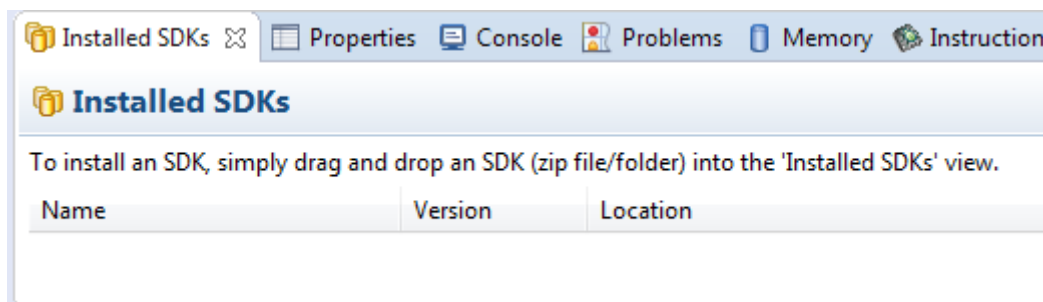

2. On the **Quickstart Panel**, click **Import SDK example(s)...**

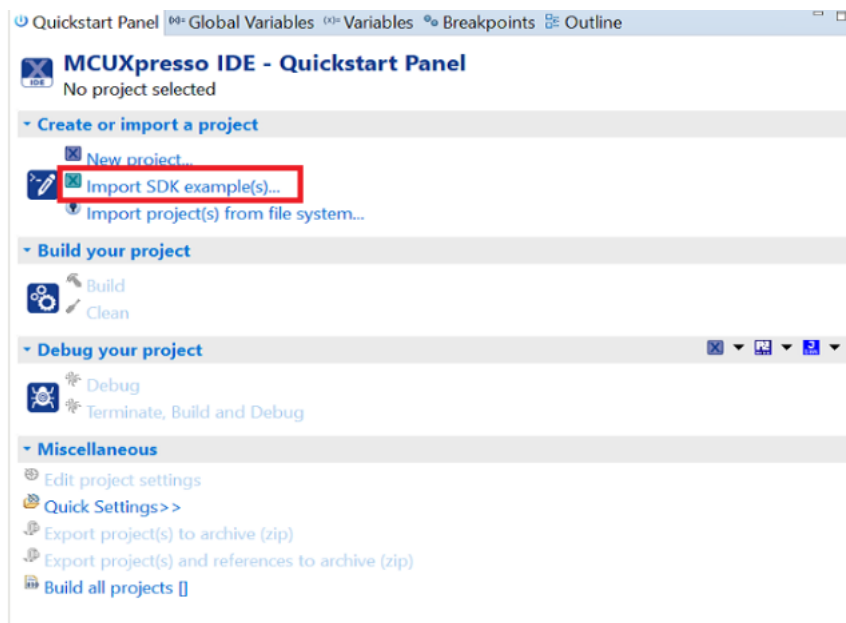

3. Expand the `demo_apps` folder and select `hello_world`.
4. Click **Next**.

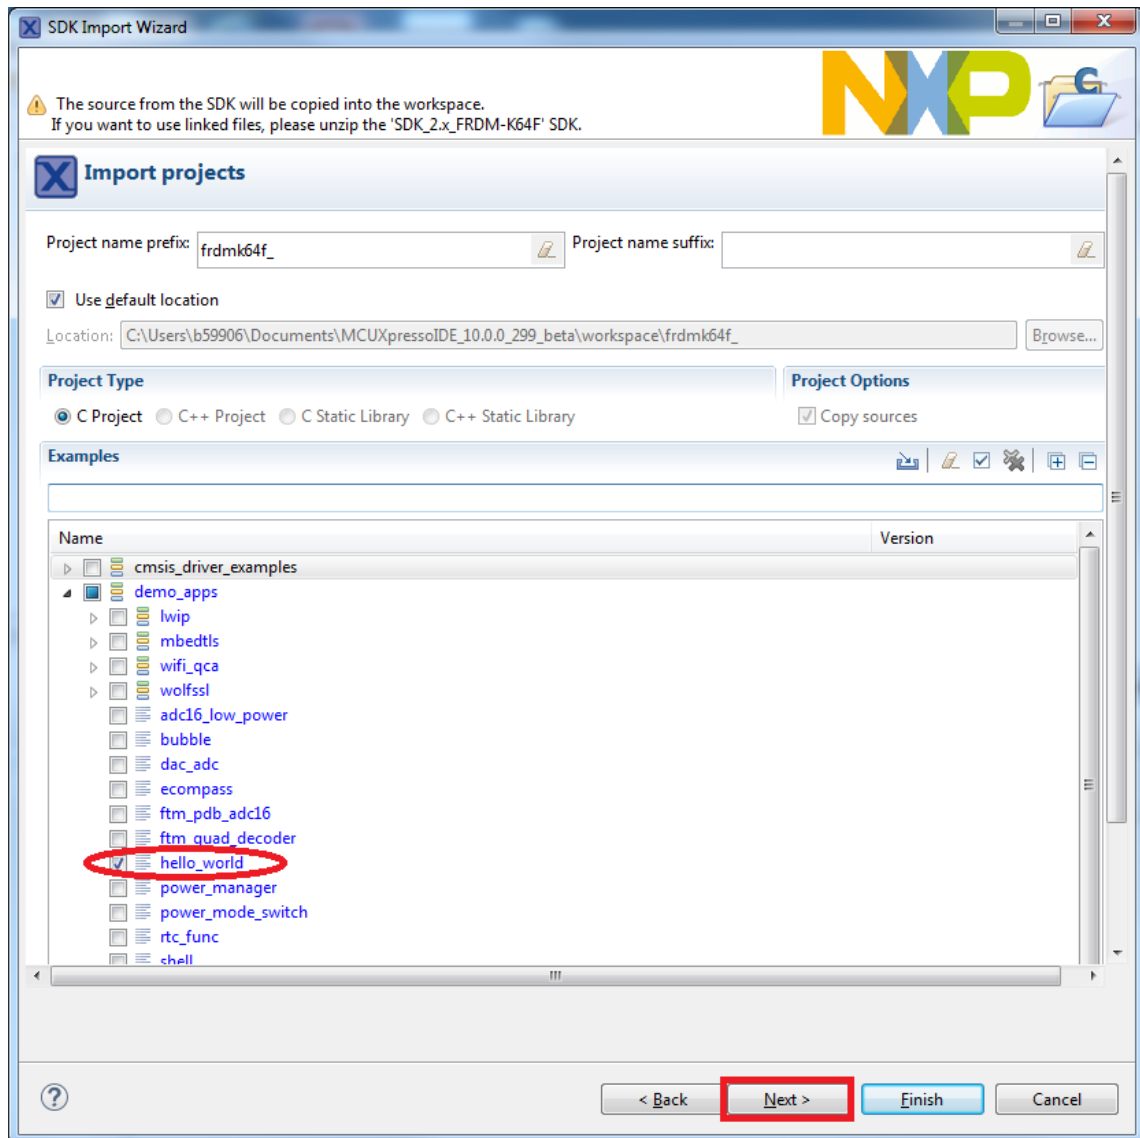


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.

To download and run the application, perform the following steps:


1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference `BOARD_DEBUG_UART_BAUDRATE` variable in `board.h` file)
 2. No parity

3. 8 data bits

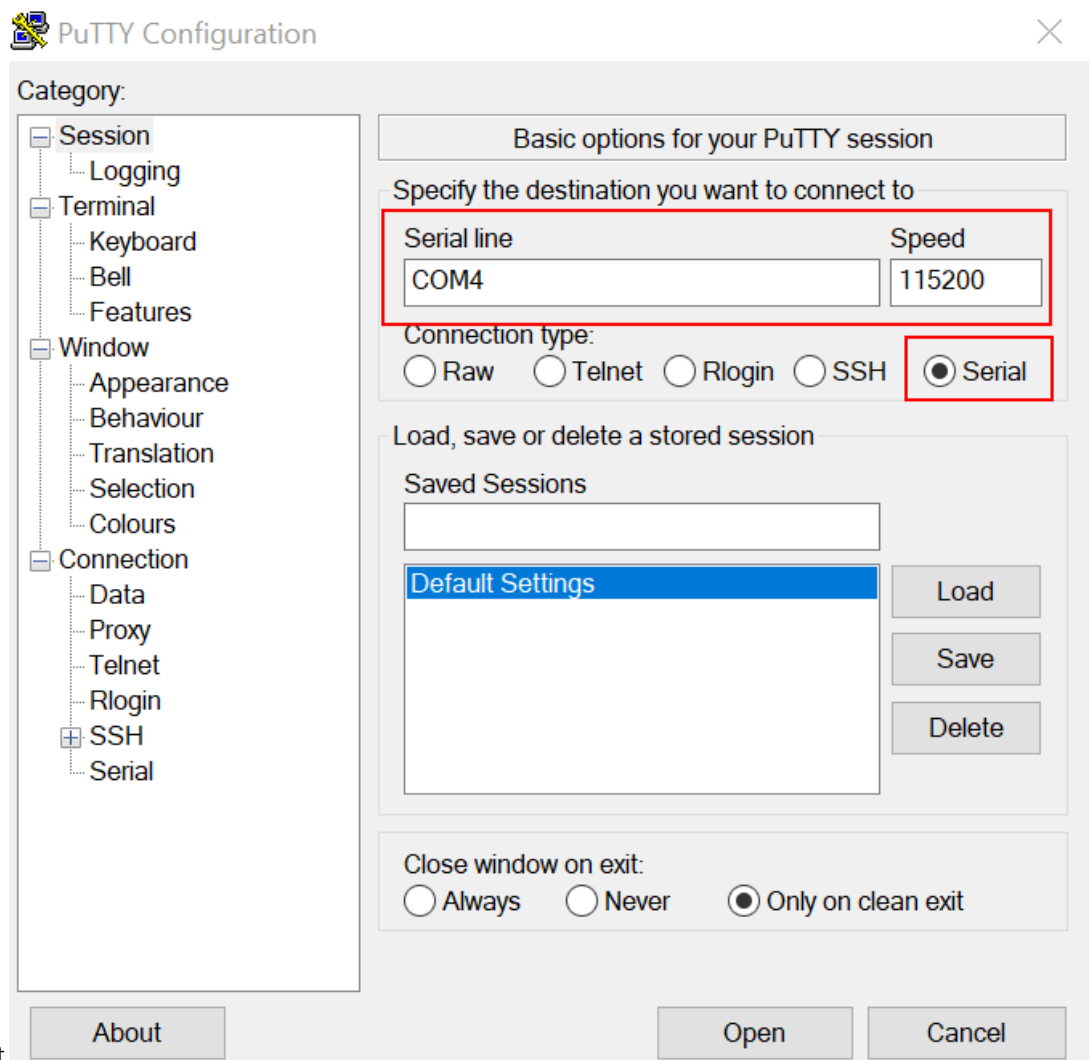

4. 1 stop bit

4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

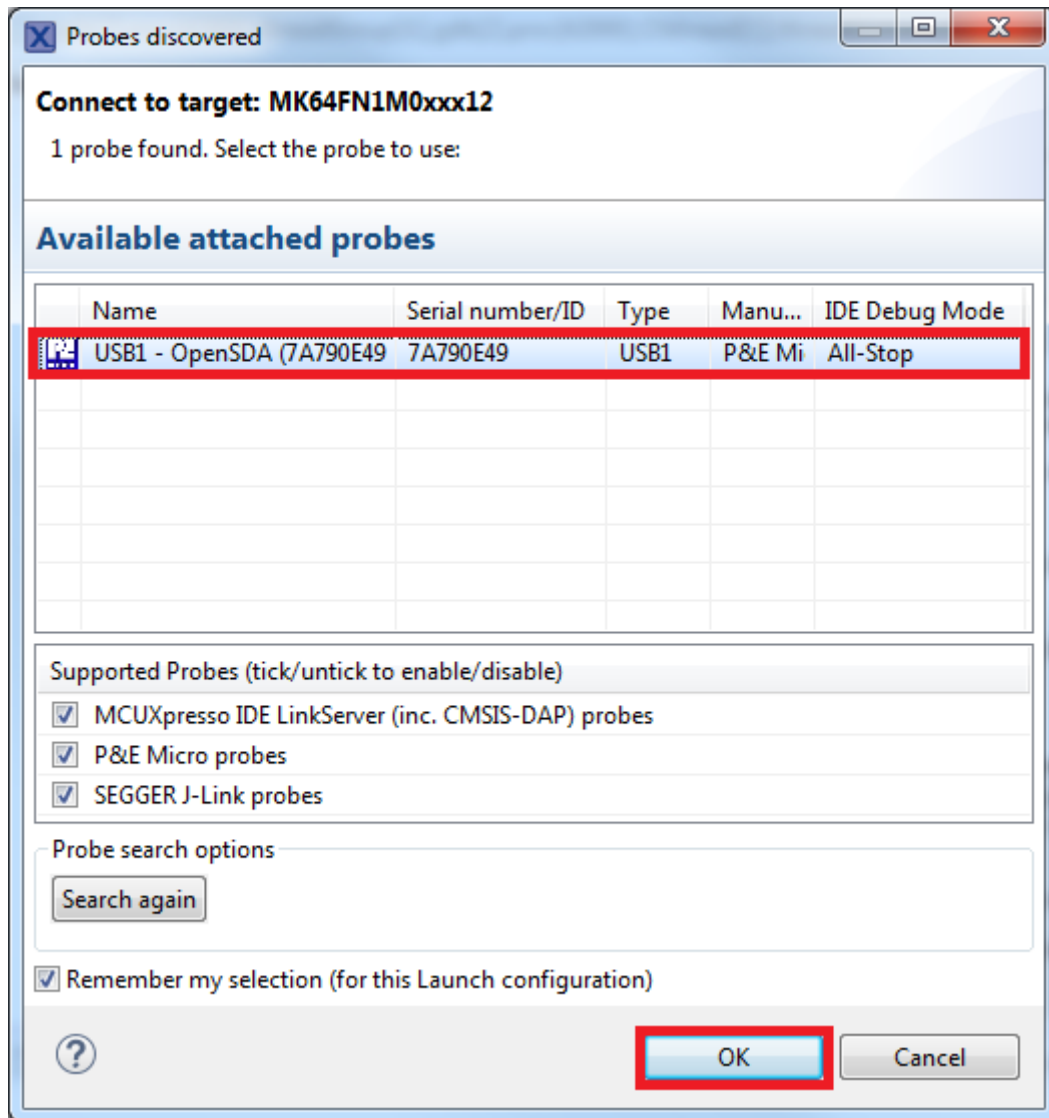

- The application is downloaded to the target and automatically runs to `main()`.
- Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

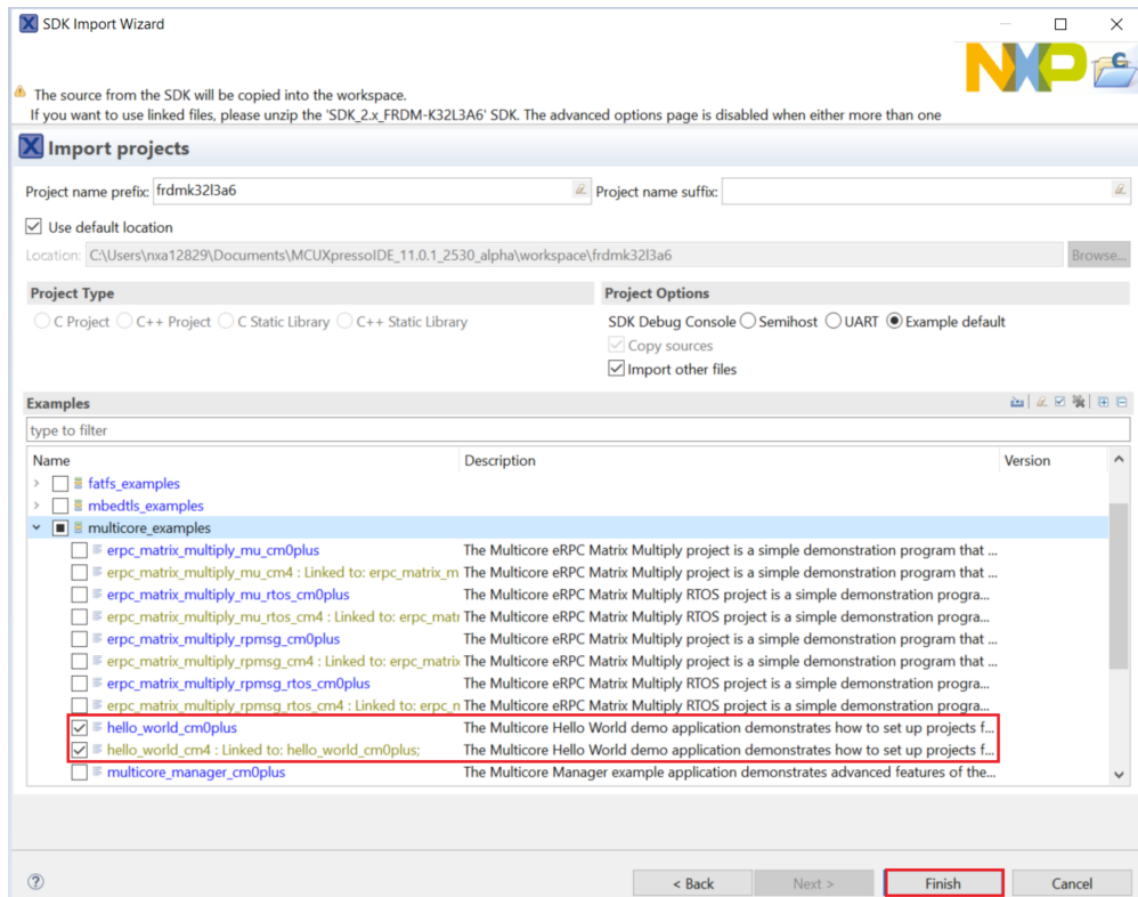


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

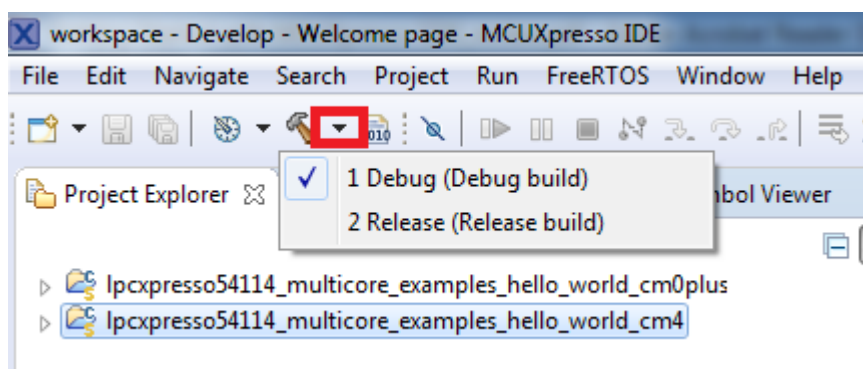




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations -> Set Active -> Release**. This alternate navigation using the menu item is **Project -> Build Configuration -> Set Active -> Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

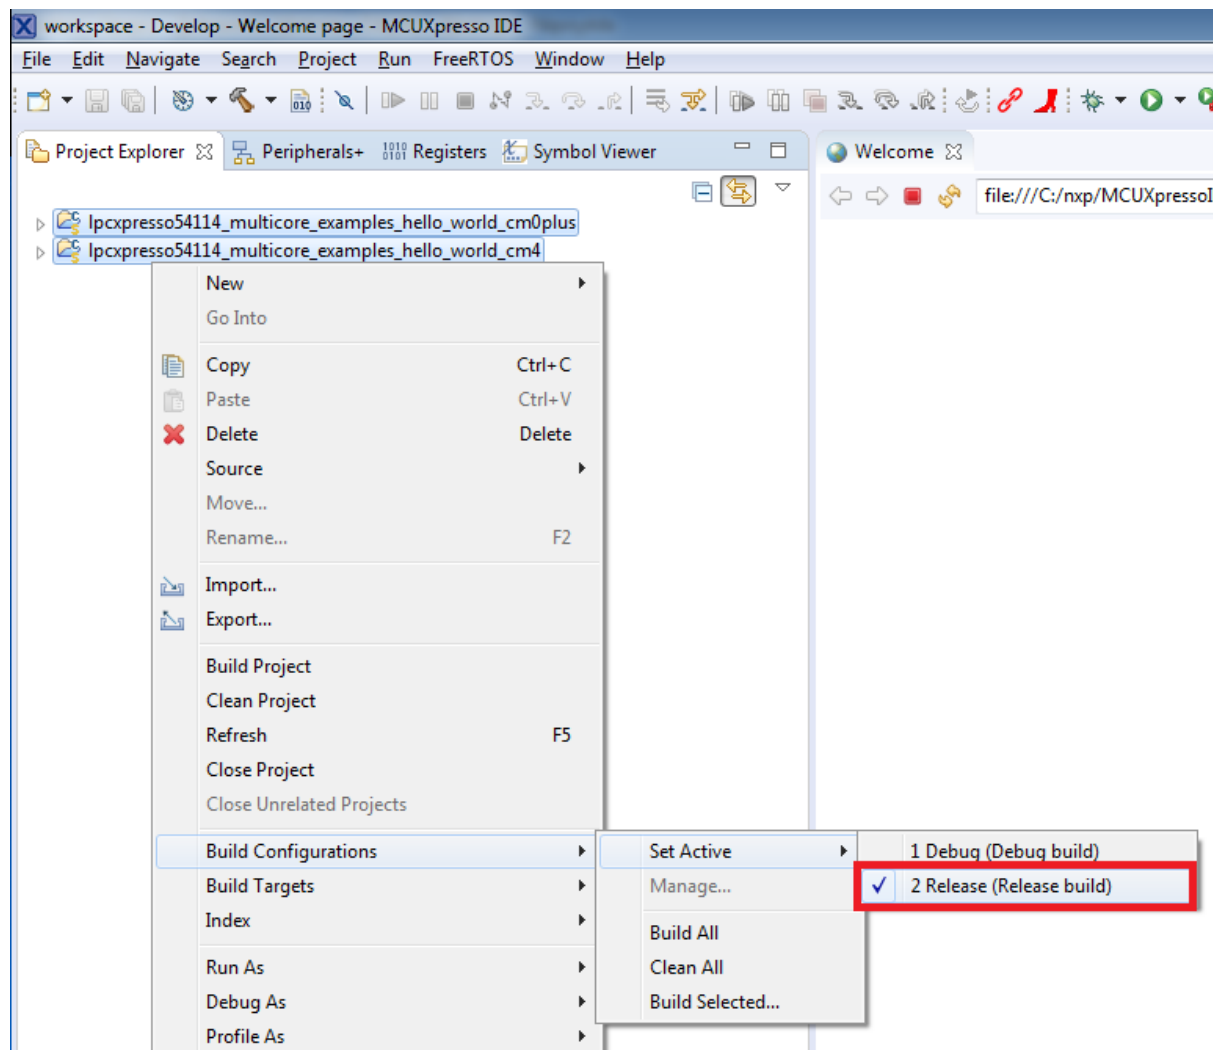


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

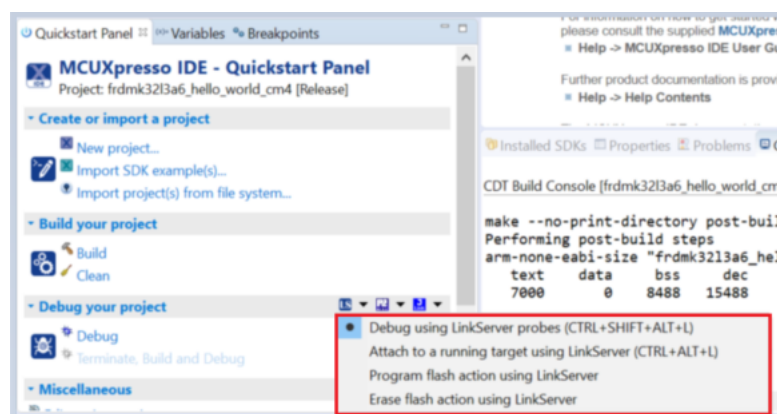

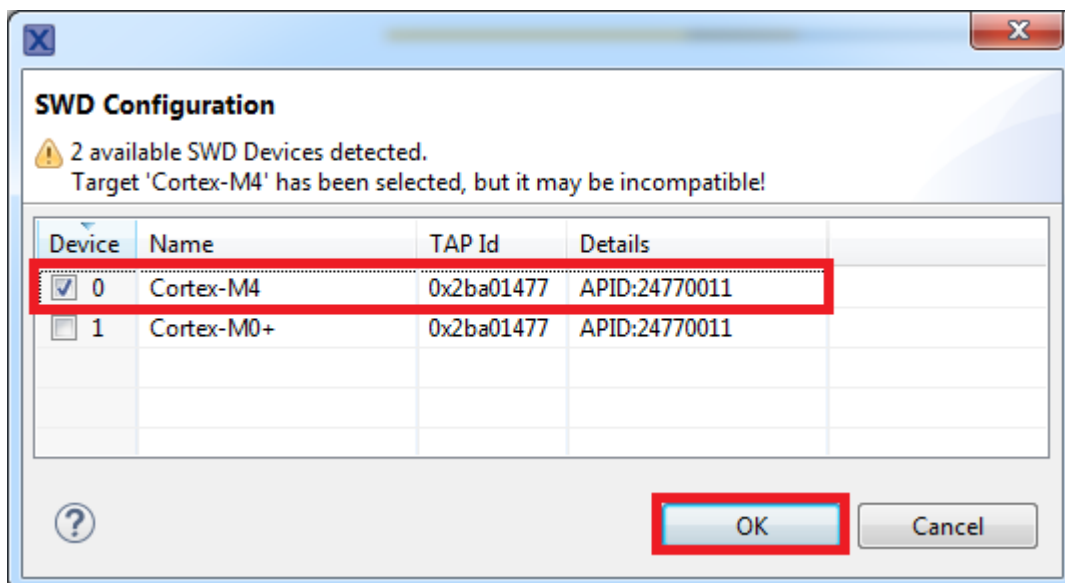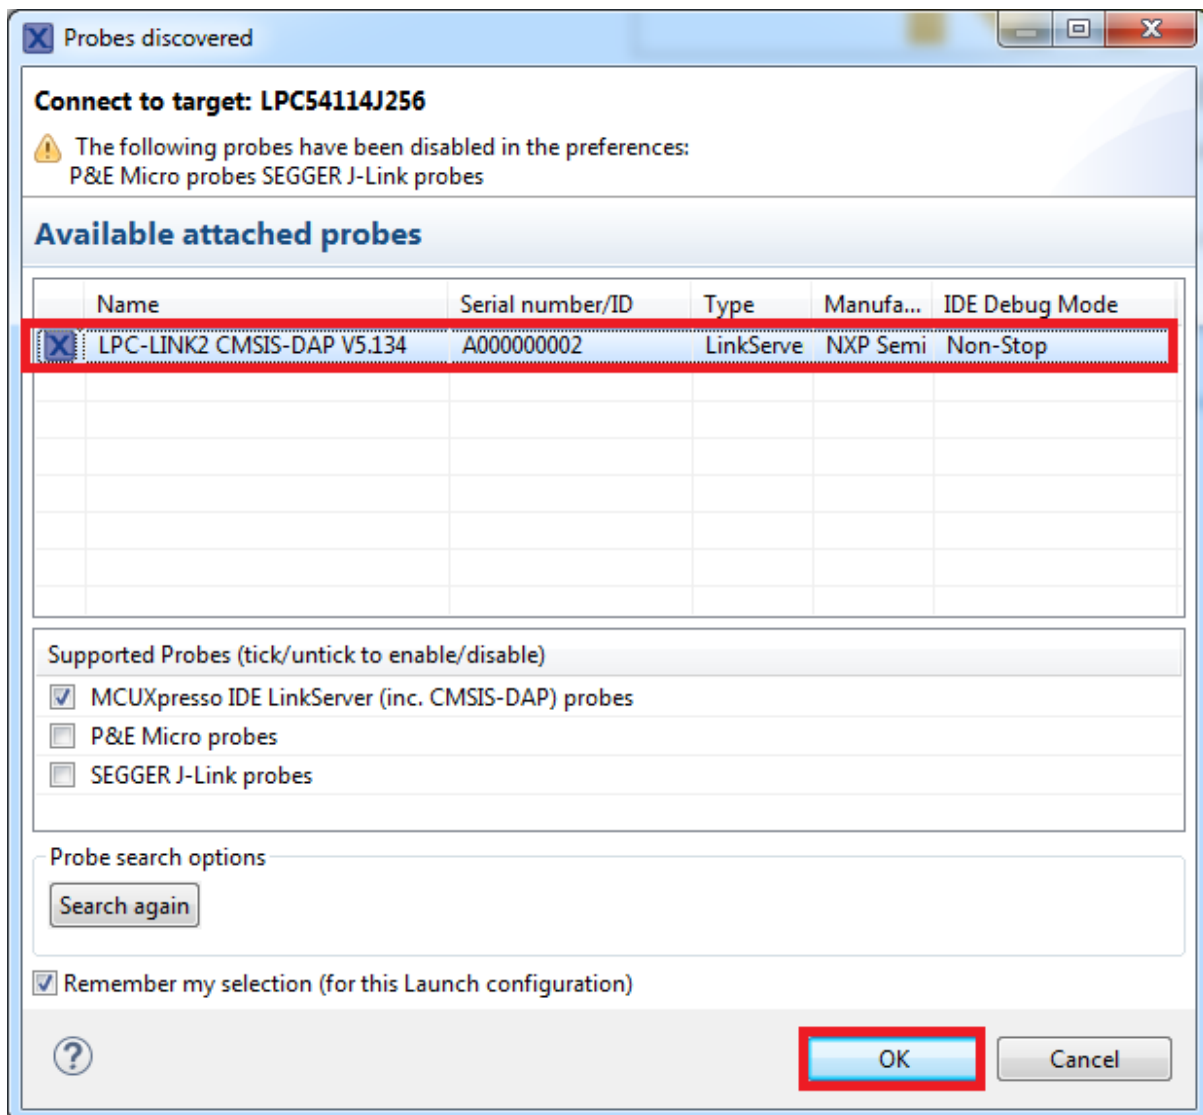

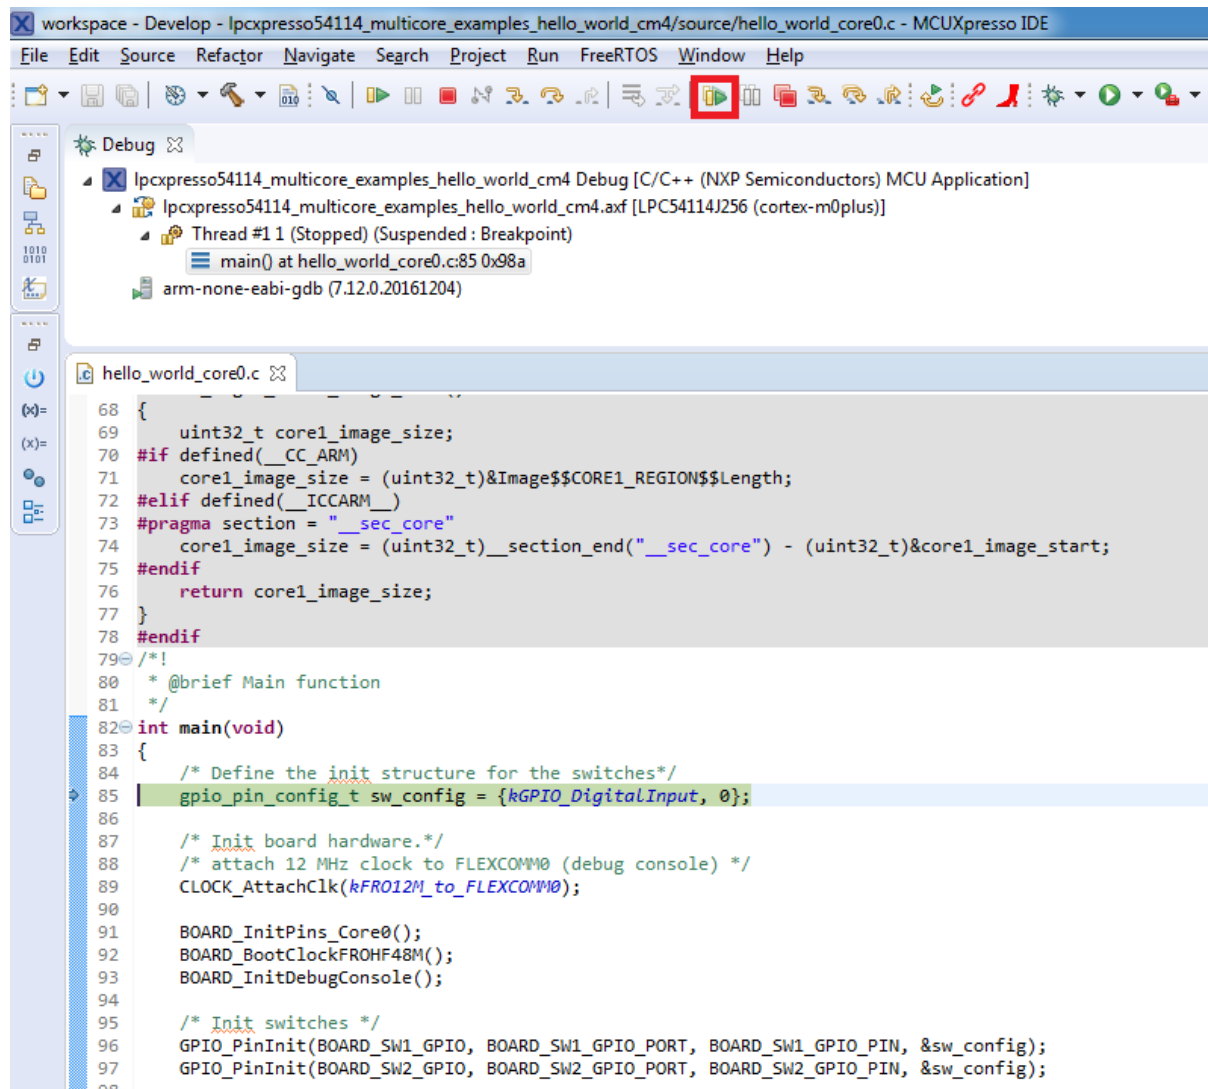



After clicking the “Resume All Debug sessions” button, the hello_world multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

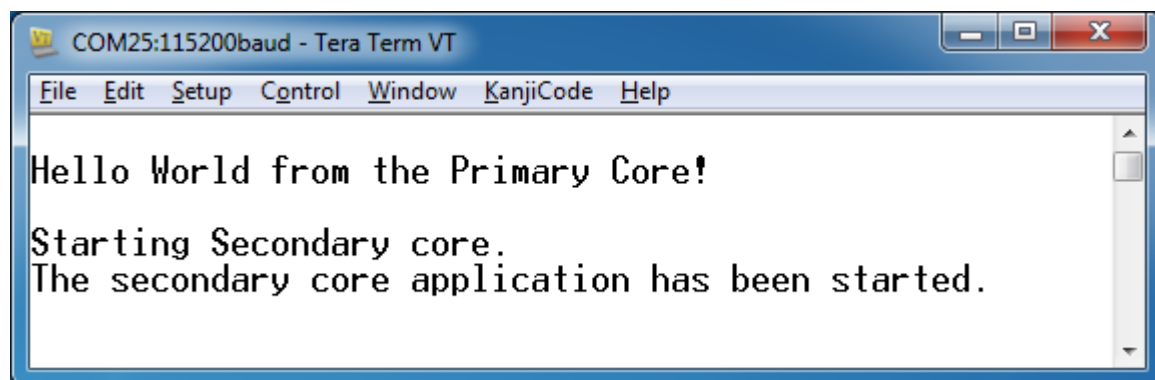


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the lpcxpresso54114_multicore_examples_hello_world_cm0plus project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

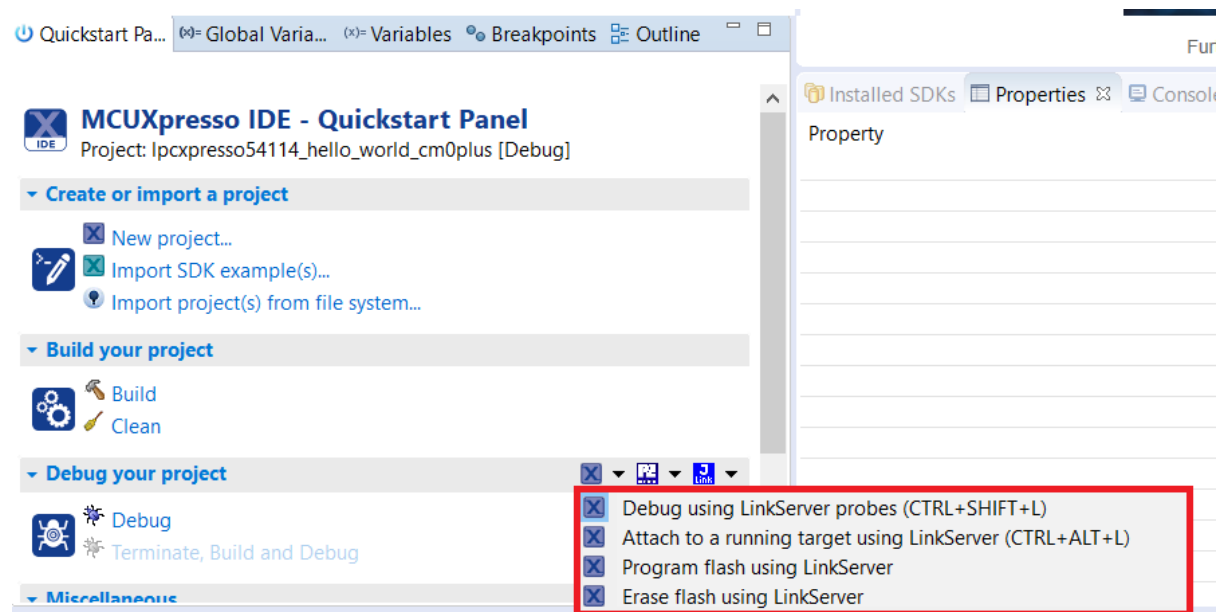


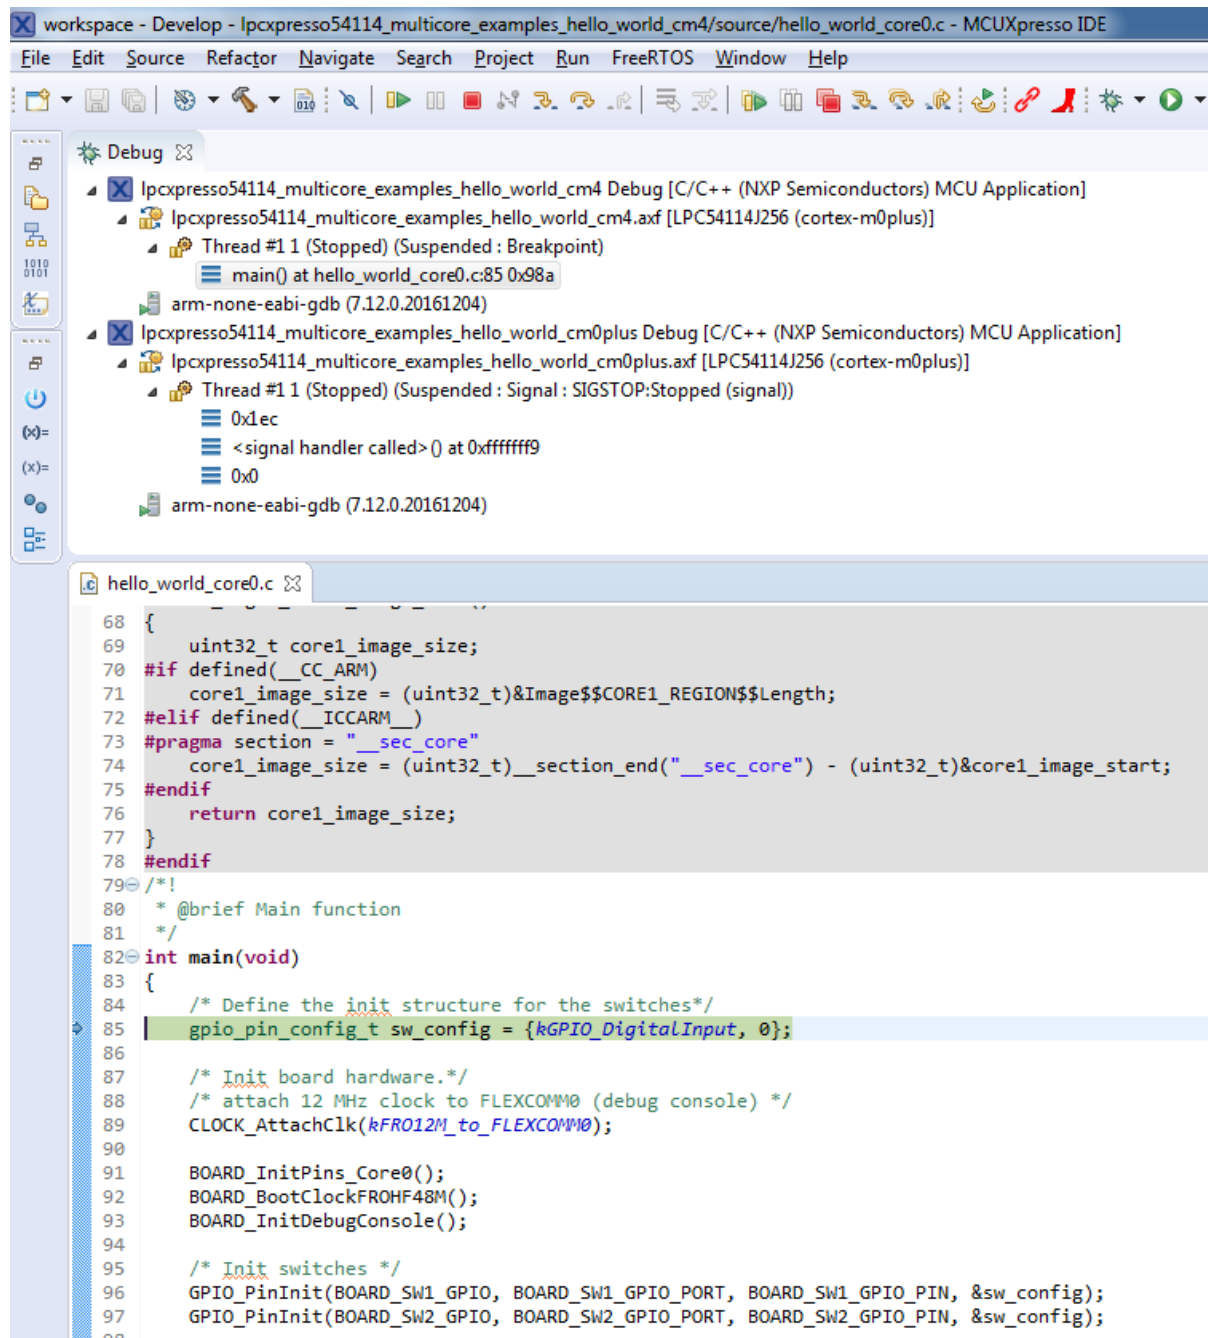


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

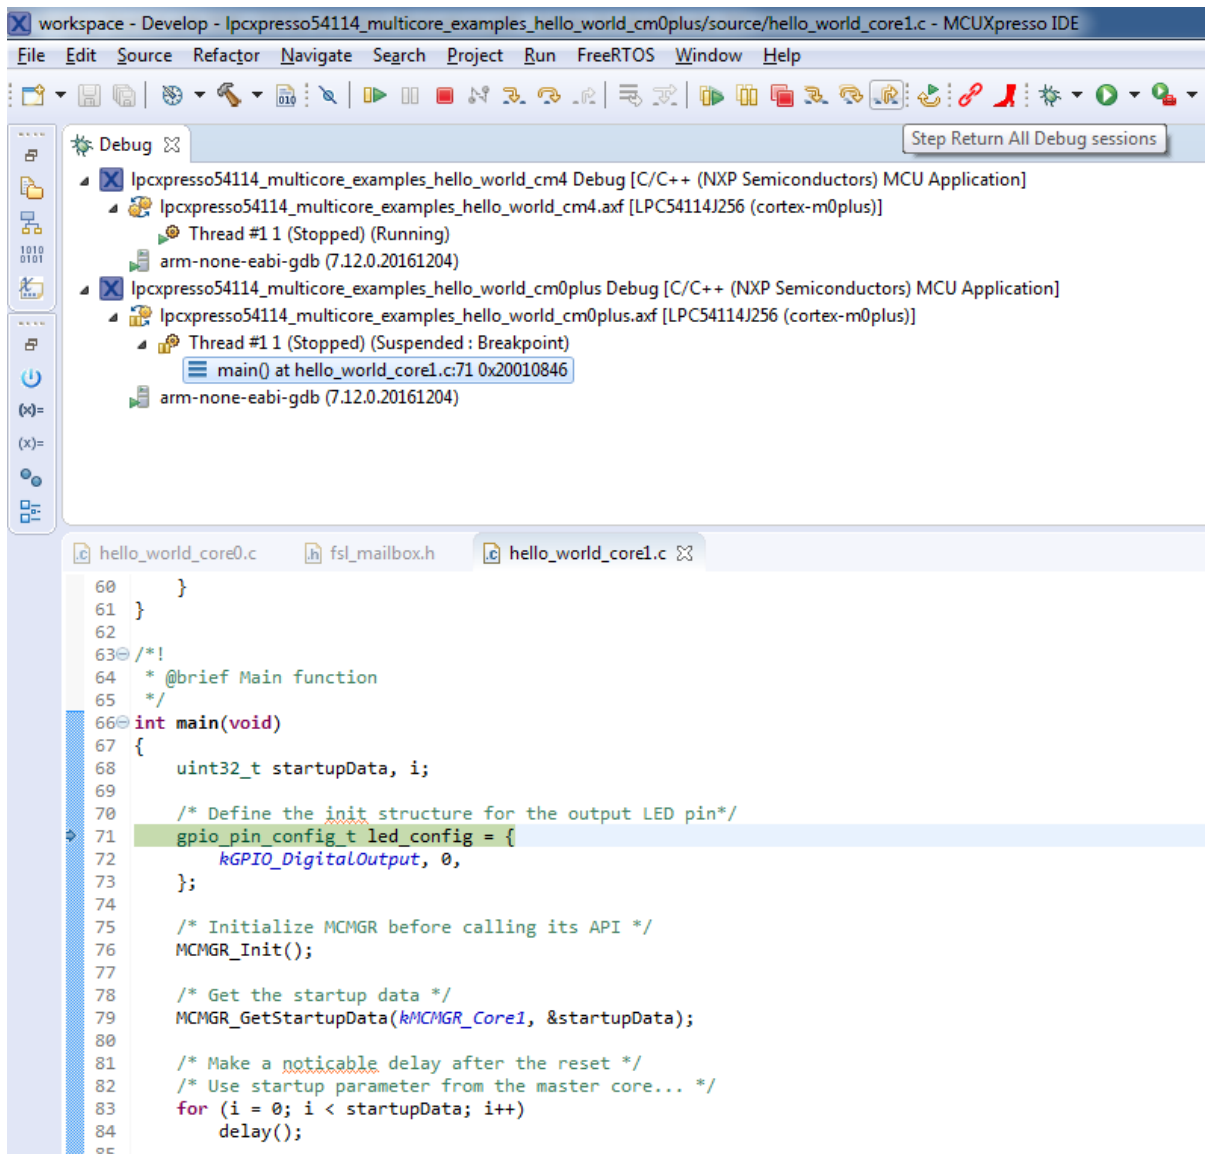


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

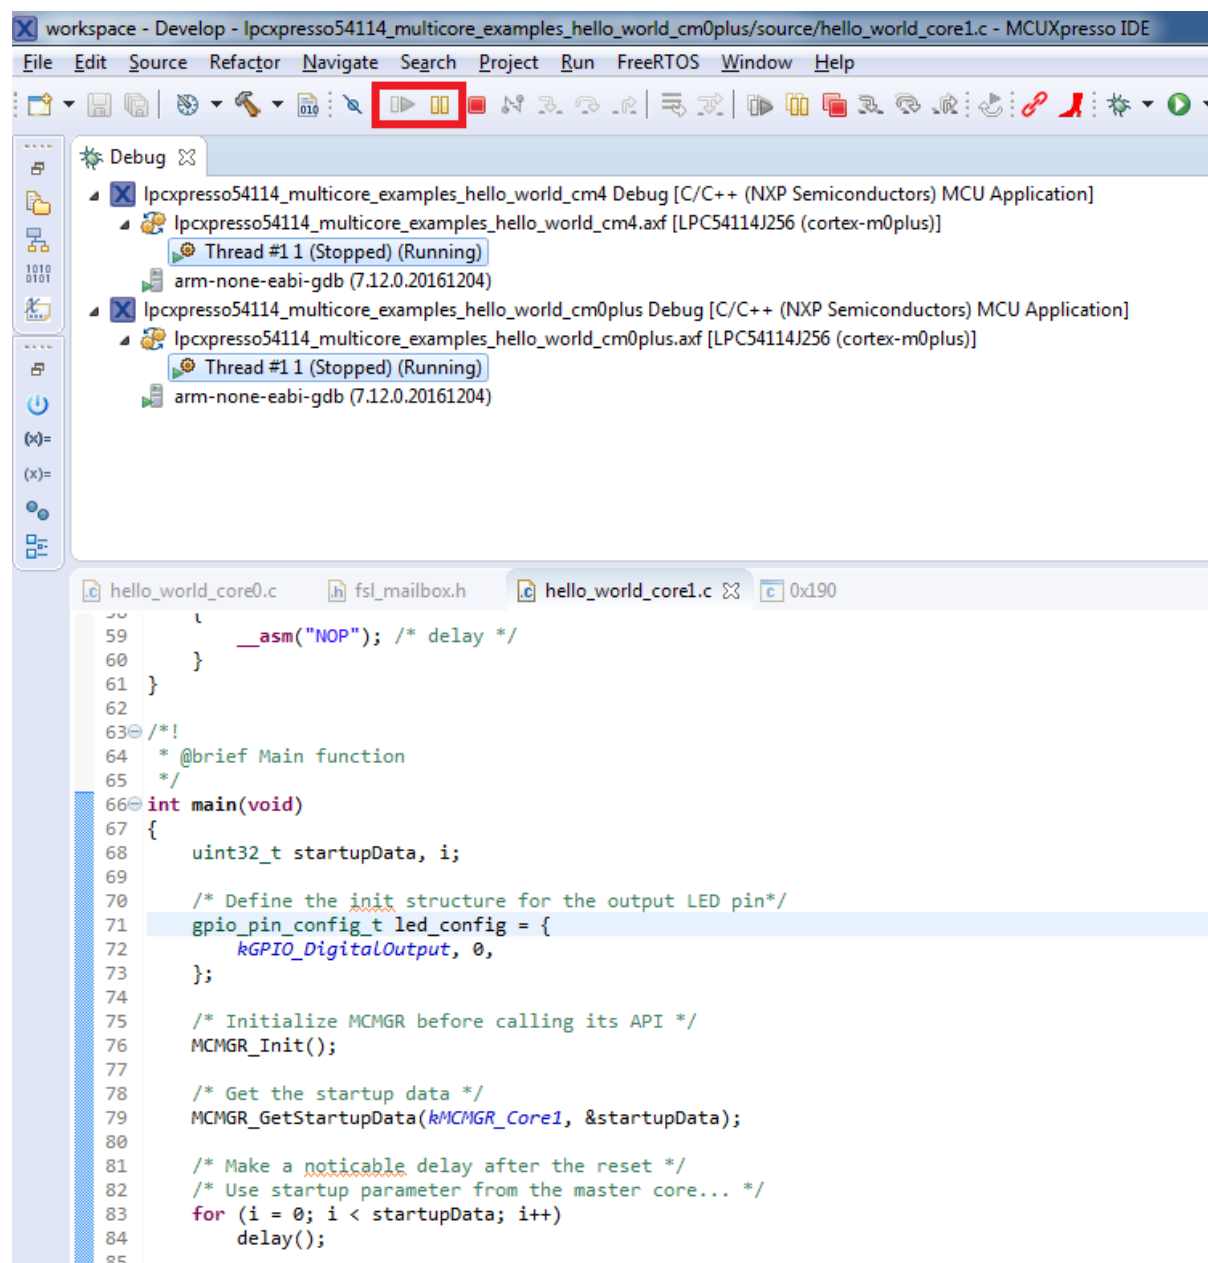

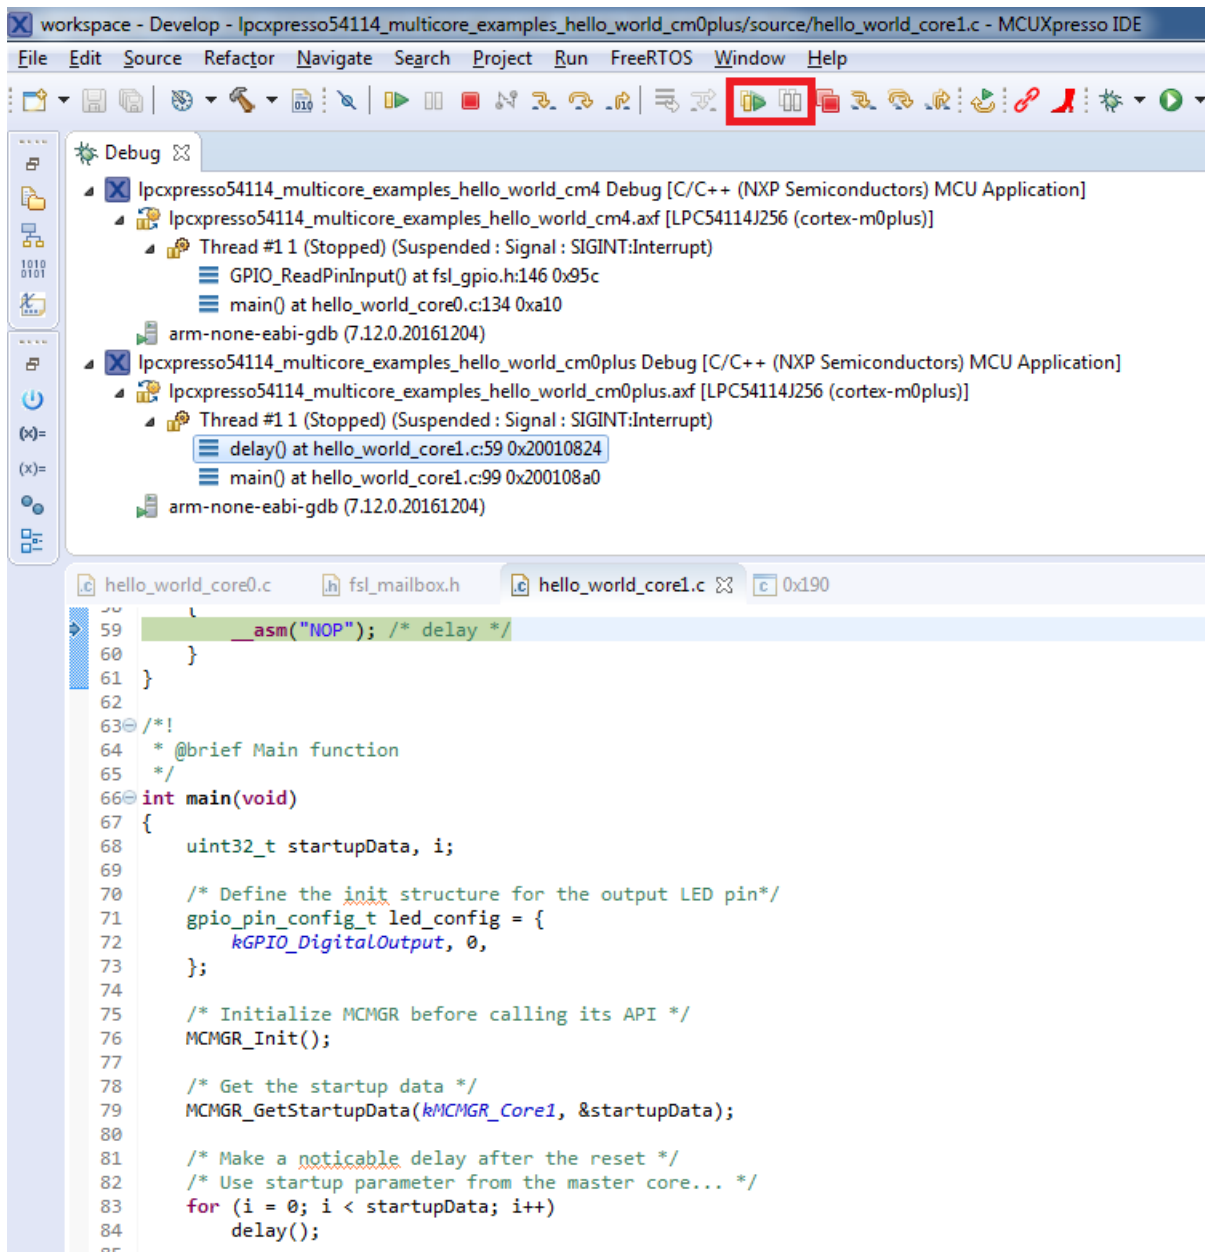


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the hello_world example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the `trustzone_examples/` folder and select `hello_world_s`. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

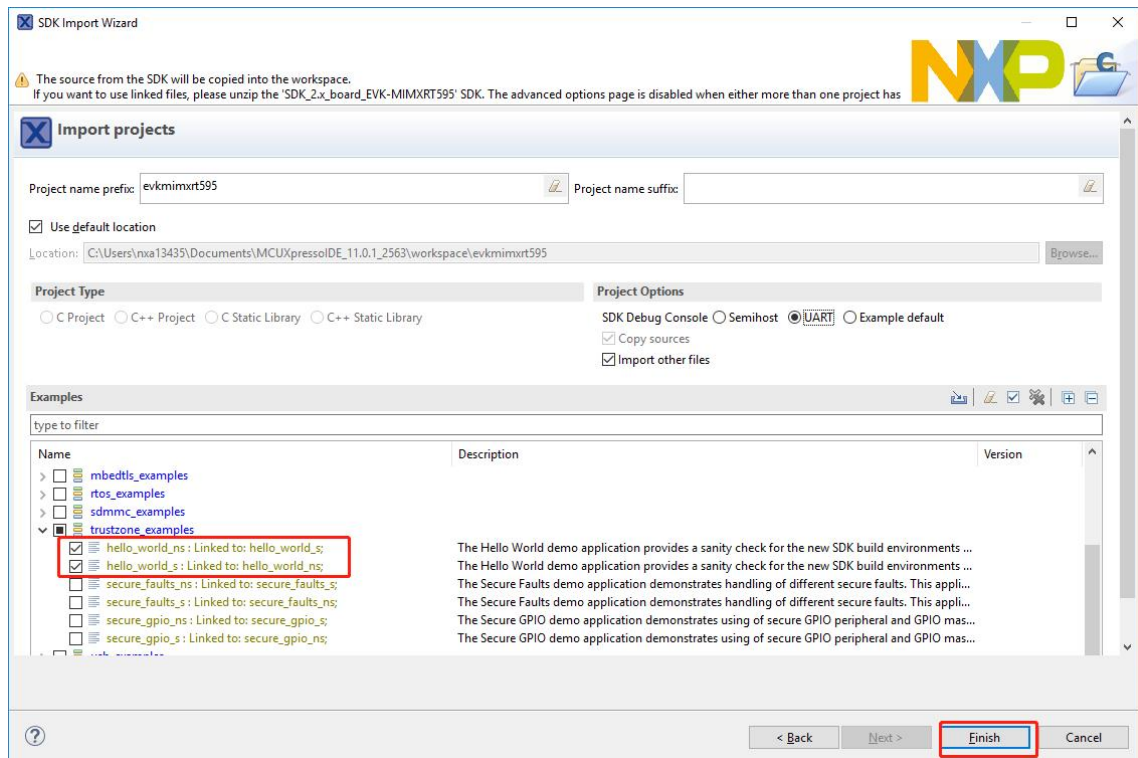


3. Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

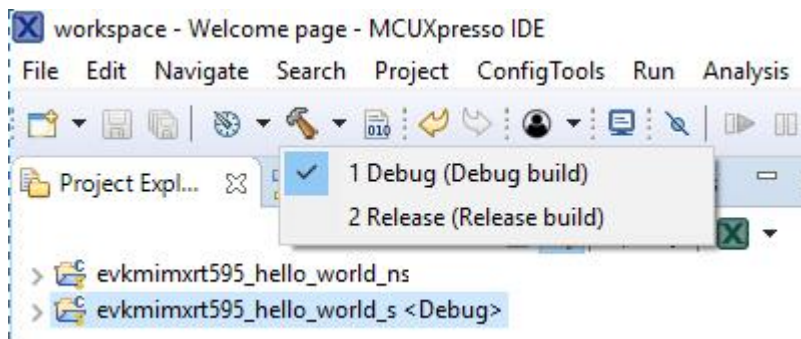


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

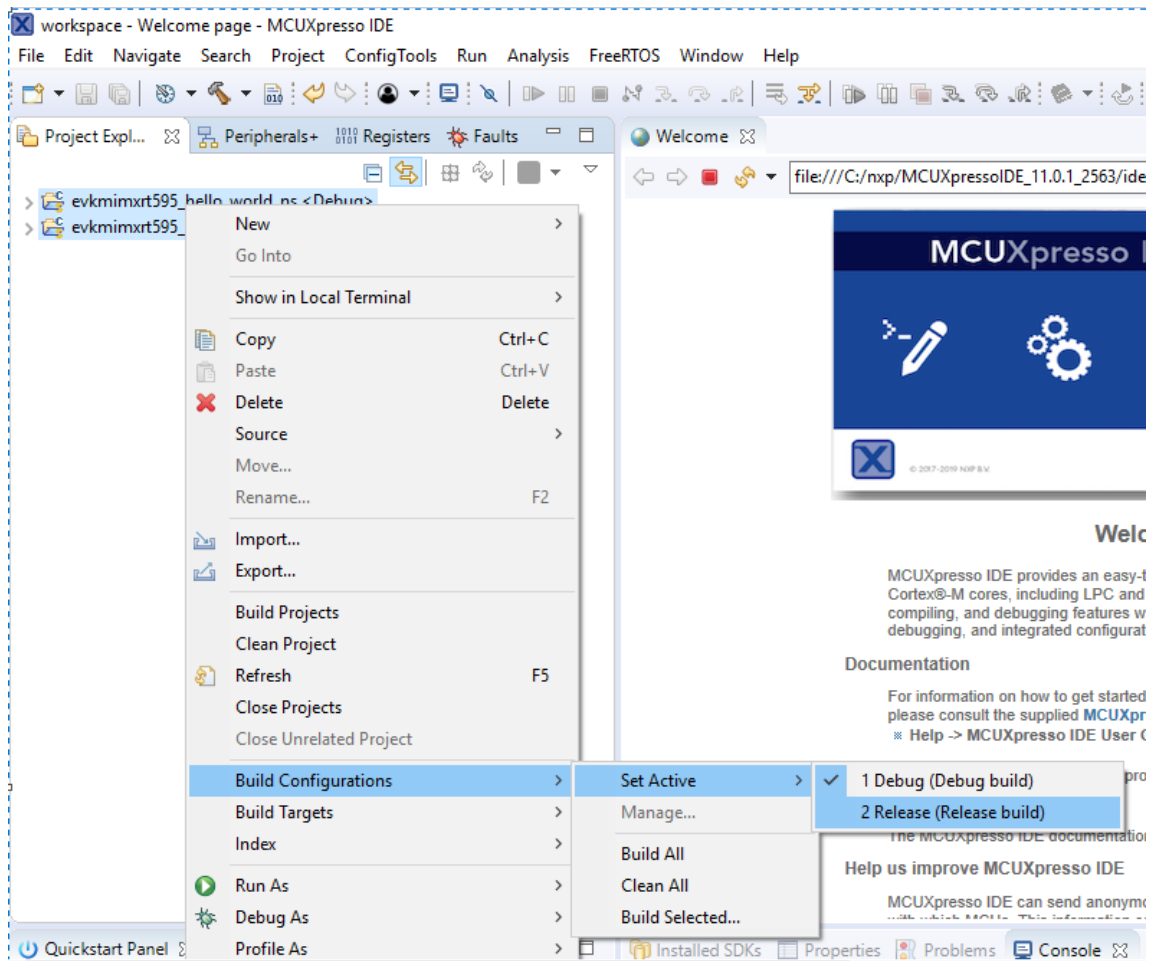

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring <board_name>_hello_world_s is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

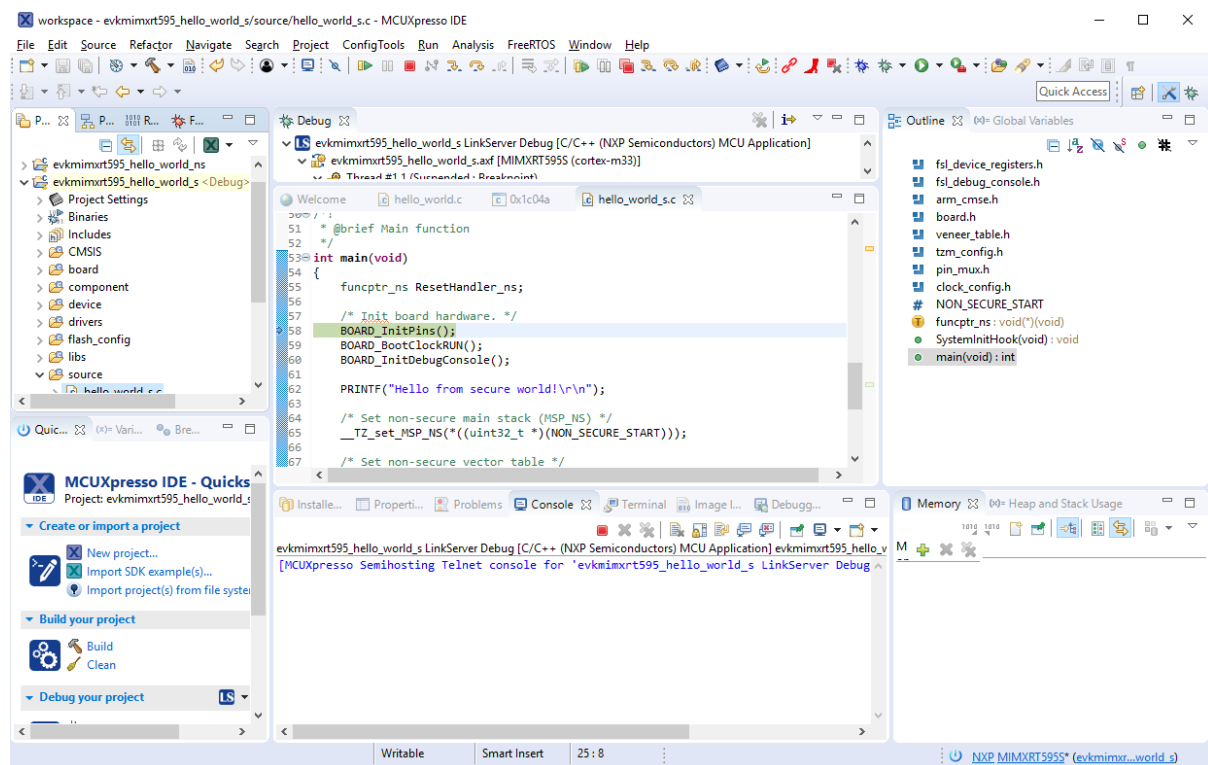

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

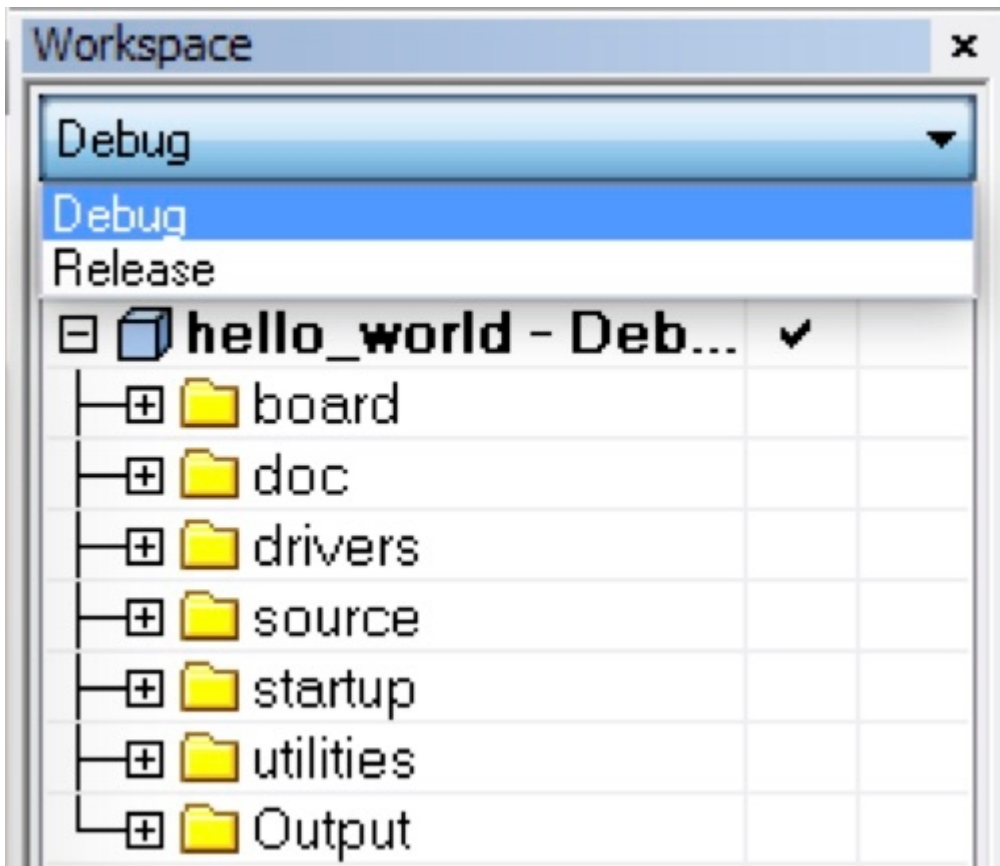


3. To build the demo application, click **Make**, highlighted in red in following figure.

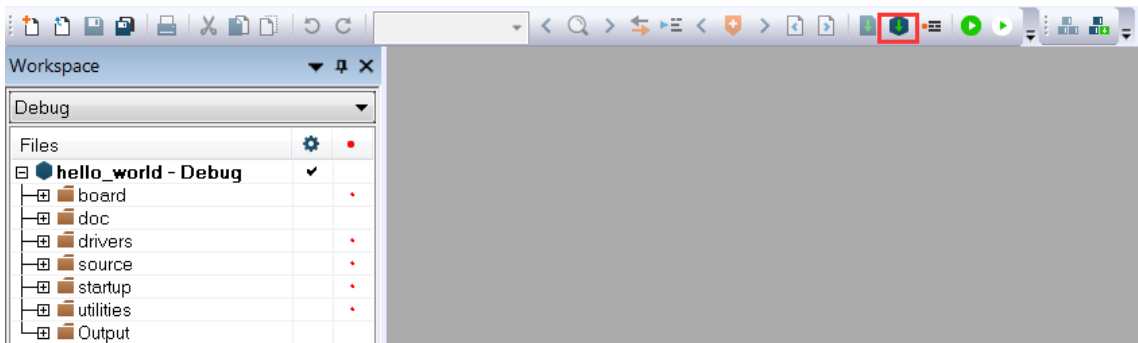

4. The build completes without errors.

Run an example application To download and run the application, perform these steps:

1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 2. No parity
 3. 8 data bits

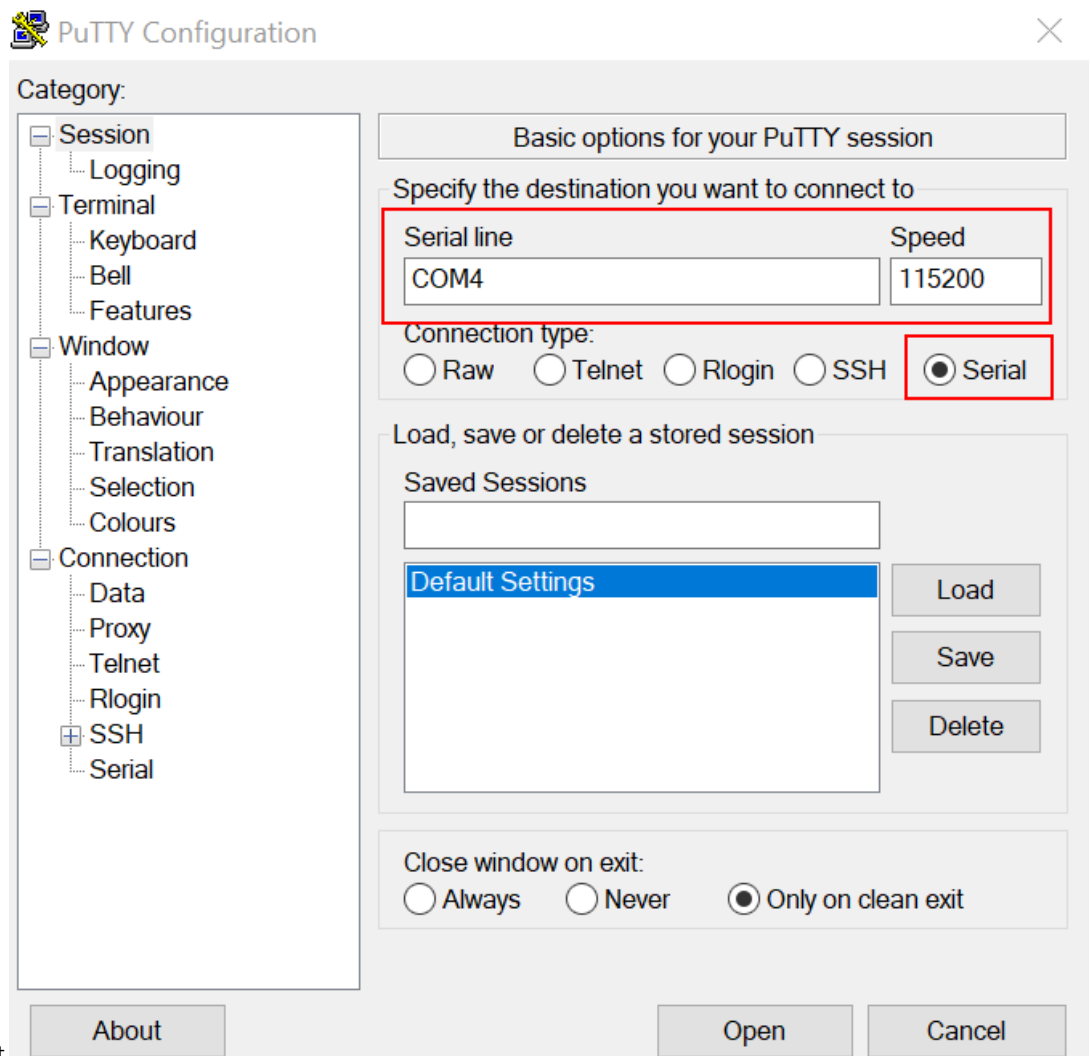


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the `main()` function.

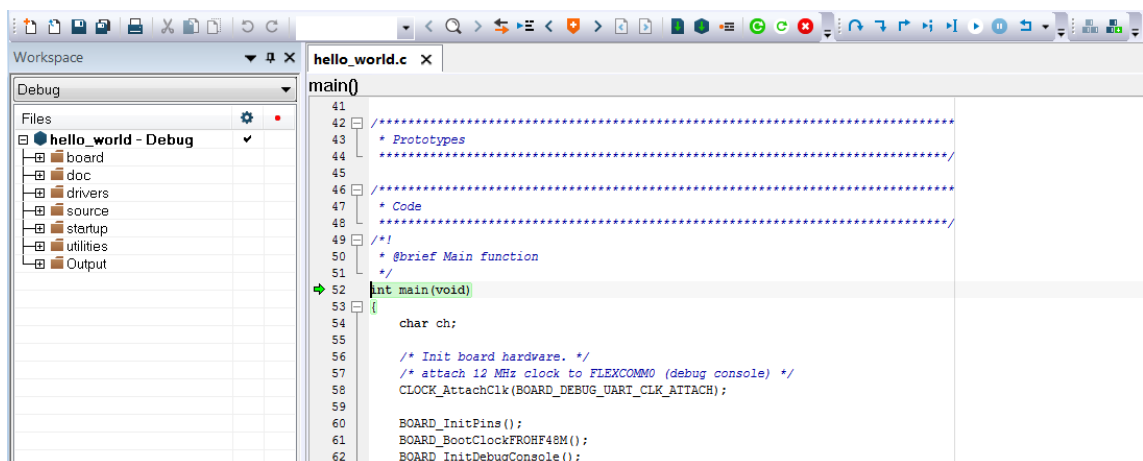

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
→ eww
```


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*function`.

Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

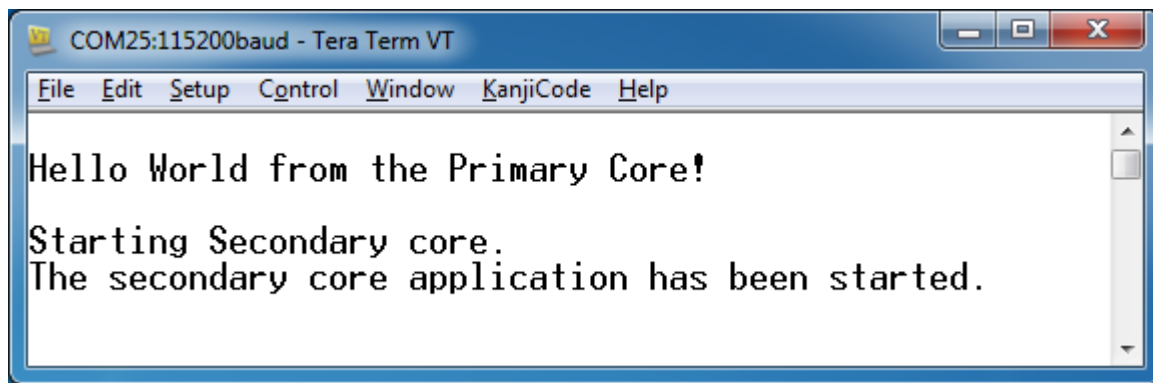

An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_  
↪ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.  
↪eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

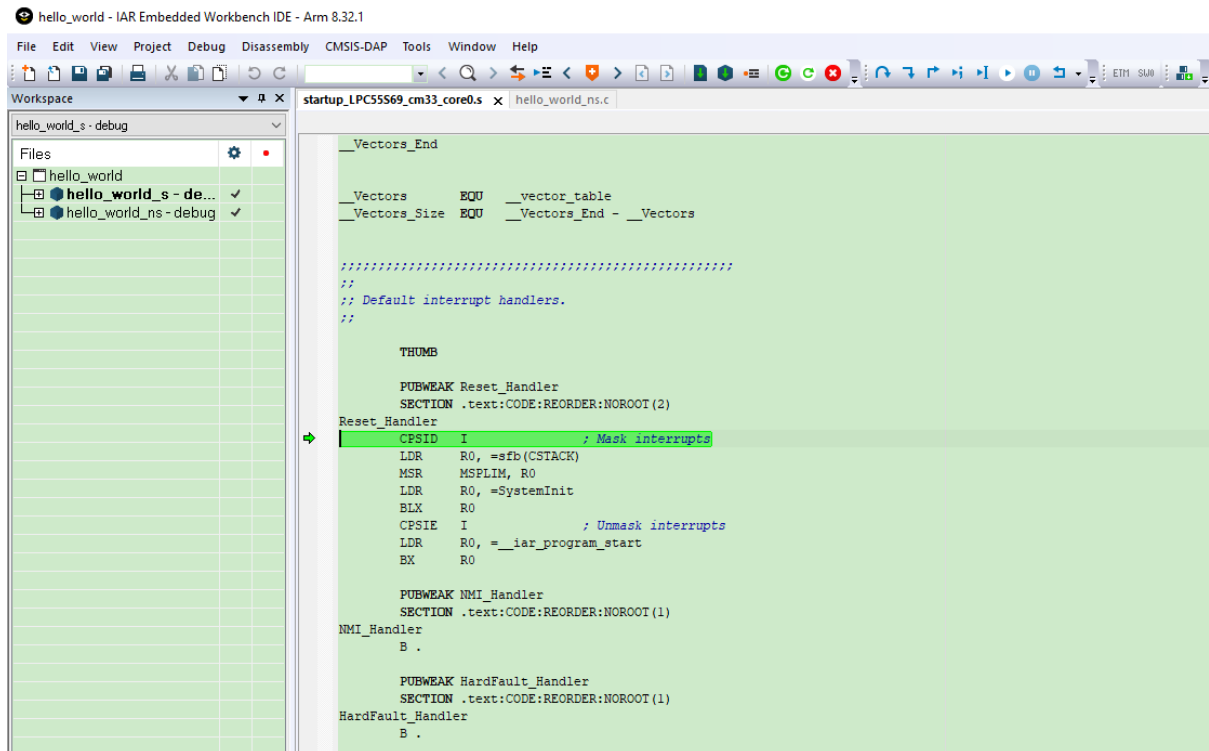


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

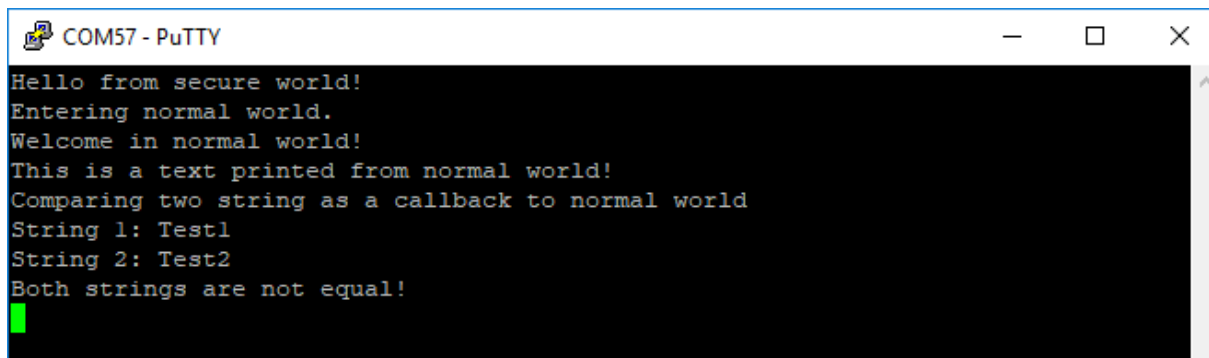

Note: If the application is running in RAM (debug/release build target), in **Options**>**Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the __ns download issue on i.MXRT500.

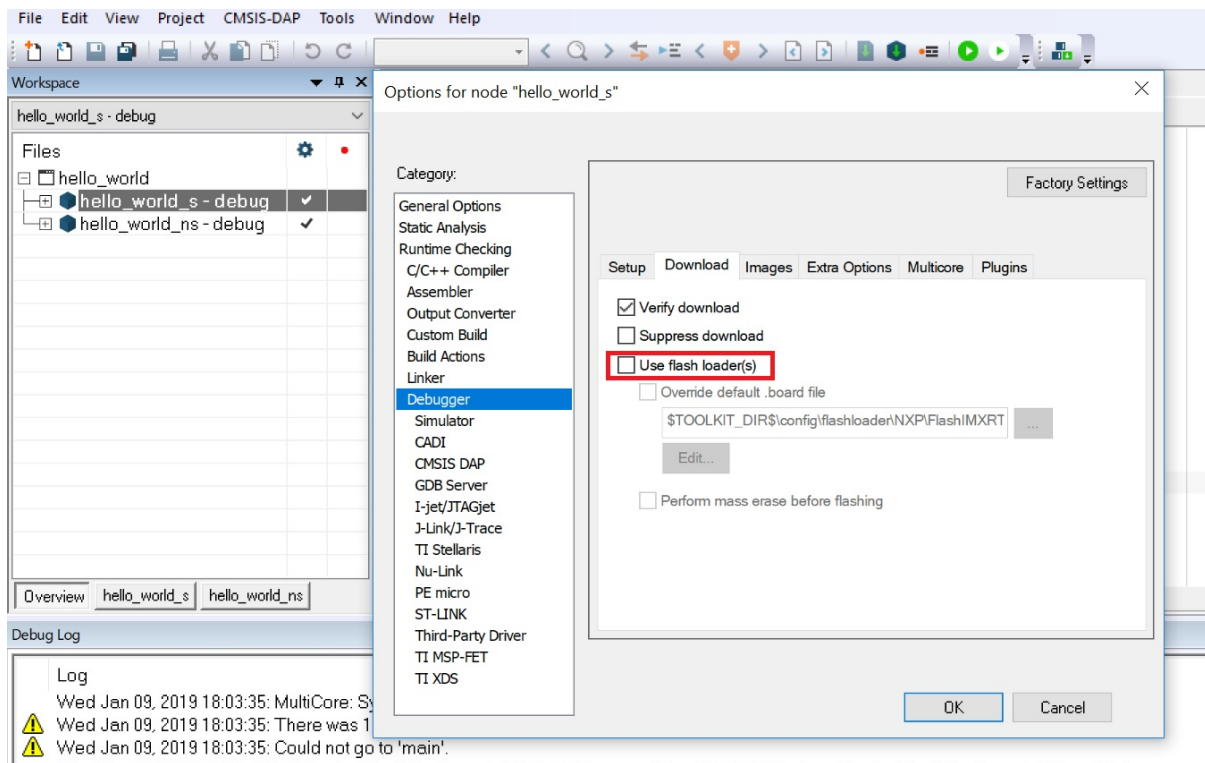


Run a demo using Keil MDK/μVision

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called μVision. In the IDE, select the **Pack Installer** icon.

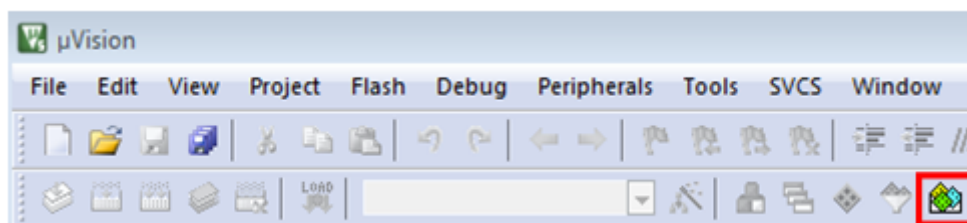

2. After the installation finishes, close the Pack Installer window and return to the μVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

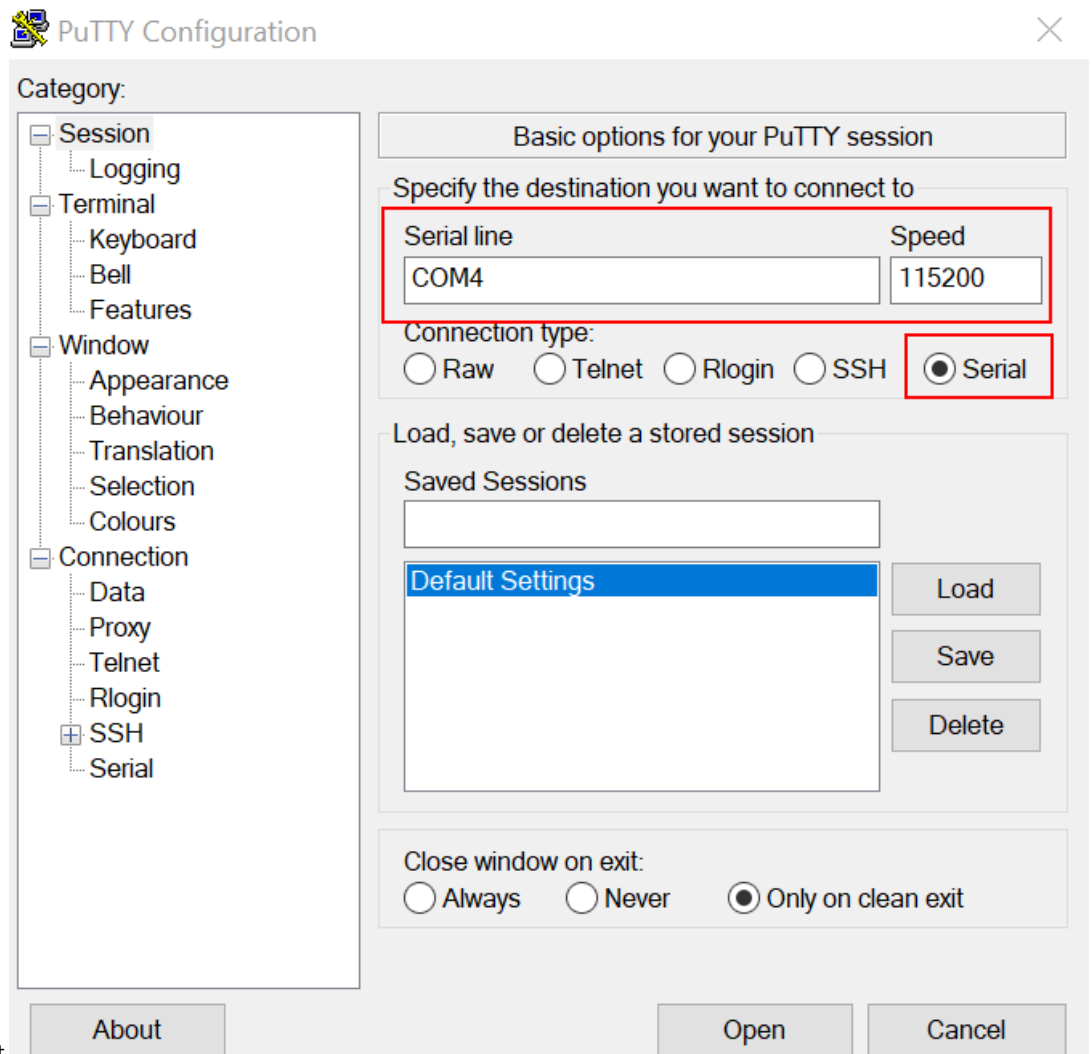


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

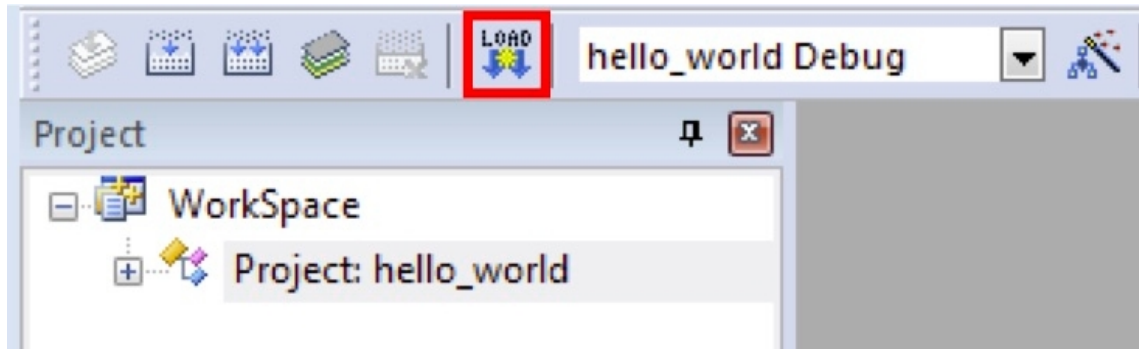

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

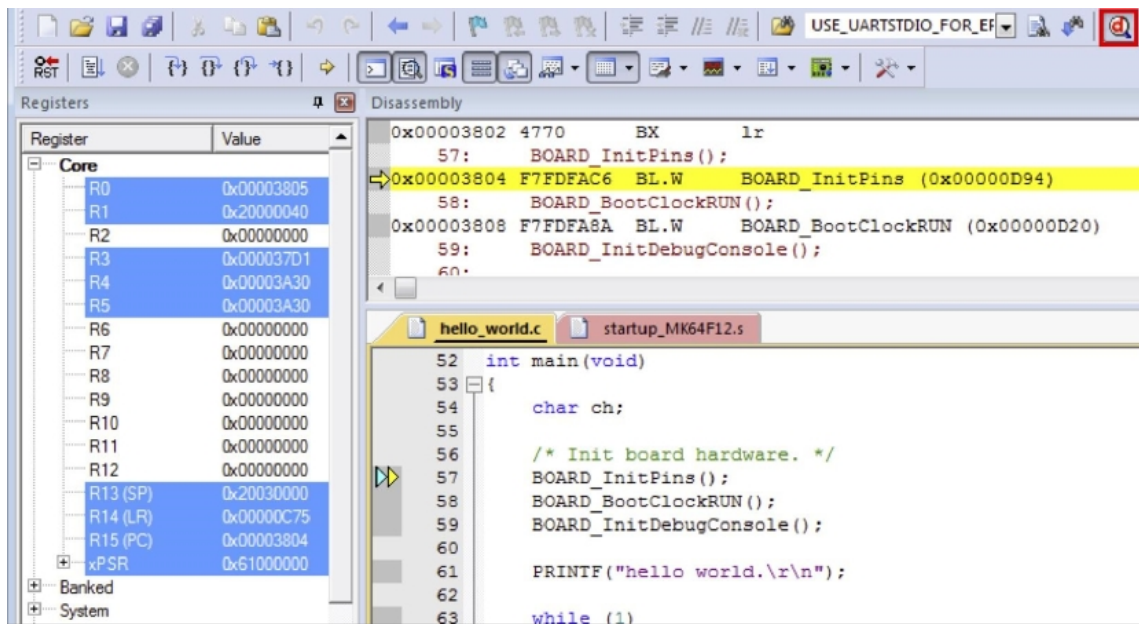

6. Run the code by clicking the **Run** button to start the application.

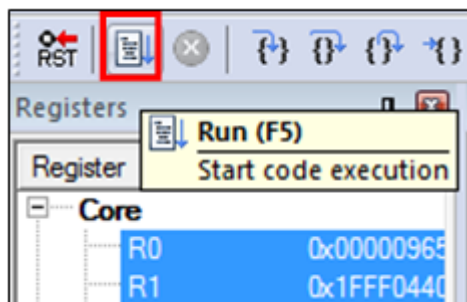

The `hello_world` application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/μVision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
→cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μVision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

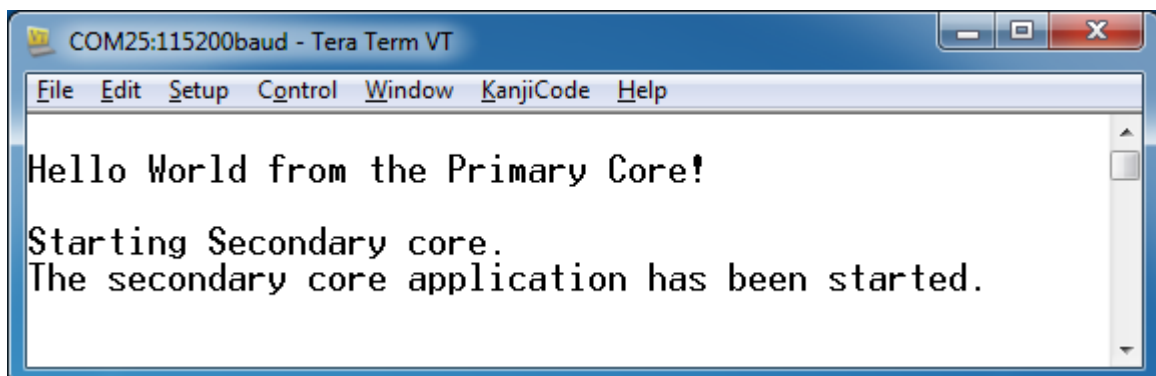

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

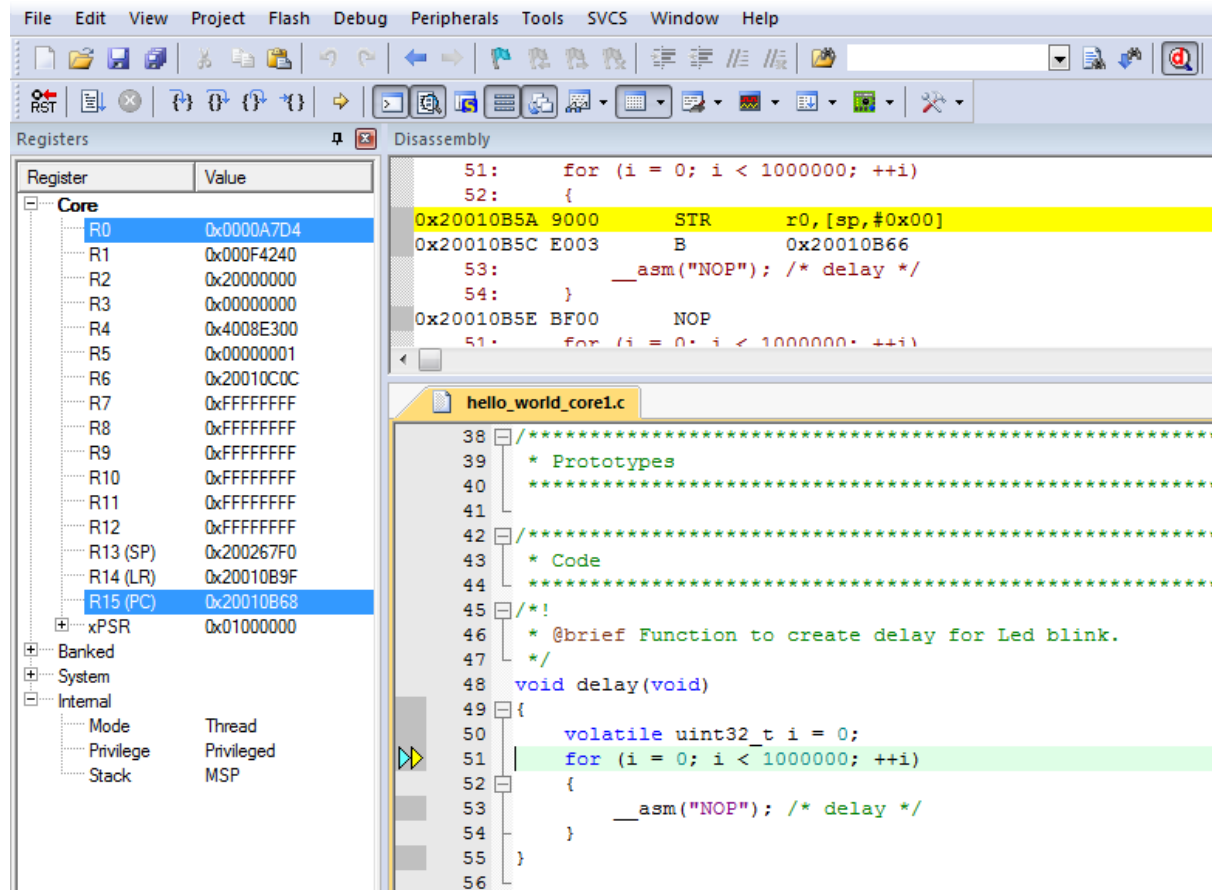

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪ mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪ mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪ uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
→ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

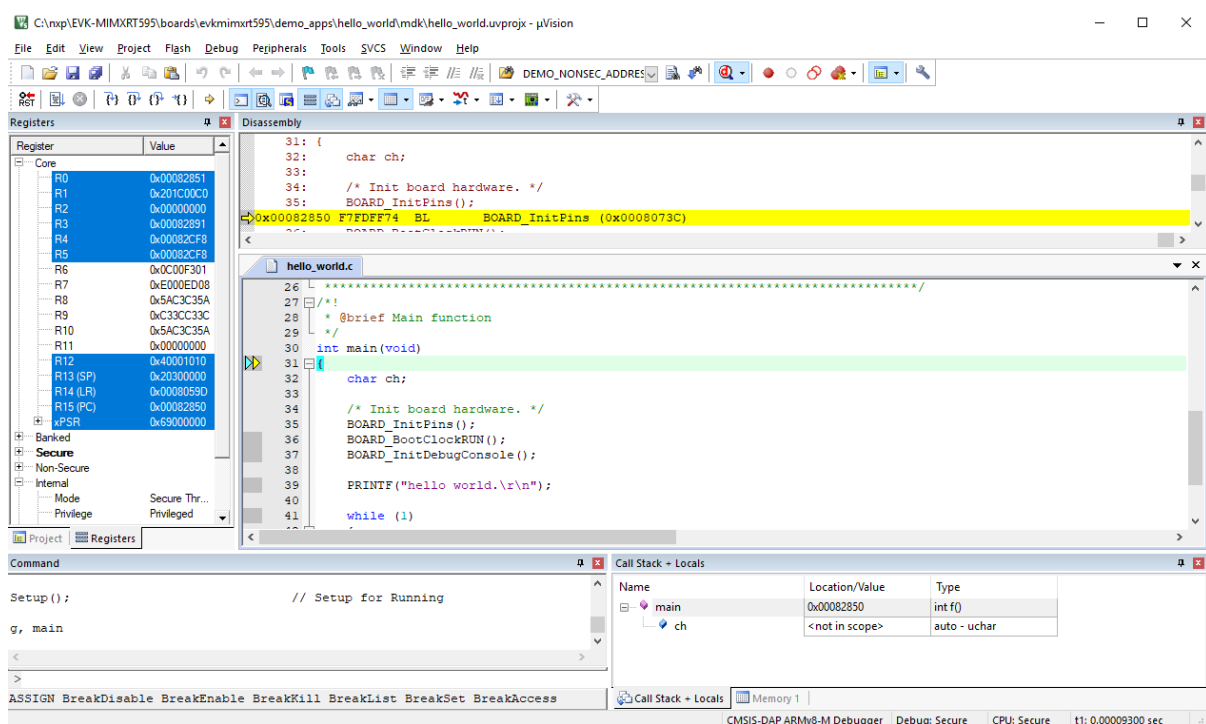

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

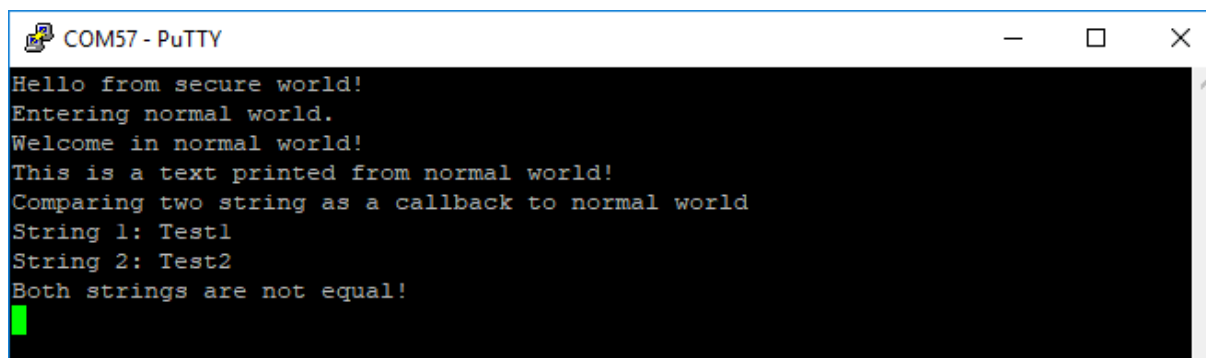

Run a demo using Arm GCC

This section describes the steps to configure the command-line Arm GCC tools to build, run, and debug demo applications and necessary driver libraries provided in the MCUXpresso SDK. The `hello_world` demo application is targeted which is used as an example.

Set up toolchain This section contains the steps to install the necessary components required to build and run an MCUXpresso SDK demo application with the Arm GCC toolchain, as supported by the MCUXpresso SDK. There are many ways to use Arm GCC tools, but this example focuses on a Windows operating system environment.


Install GCC Arm Embedded tool chain Download and run the installer from GNU Arm Embedded Toolchain. This is the actual toolset (in other words, compiler, linker, and so on). The GCC toolchain should correspond to the latest supported version, as described in **MCUXpresso SDK Release Notes**.

Install MinGW (only required on Windows OS) The Minimalist GNU for Windows (MinGW) development tools provide a set of tools that are not dependent on third-party C-Runtime DLLs (such as Cygwin). The build environment used by the MCUXpresso SDK does not use the MinGW build tools, but does leverage the base install of both MinGW and MSYS. MSYS provides a basic shell with a Unix-like interface and tools.


1. Download the latest MinGW mingw-get-setup installer from [MinGW](#).
2. Run the installer. The recommended installation path is `C:\MinGW`, however, you may install to any location.

Note: The installation path cannot contain any spaces.

3. Ensure that the **mingw32-base** and **msys-base** are selected under **Basic Setup**.

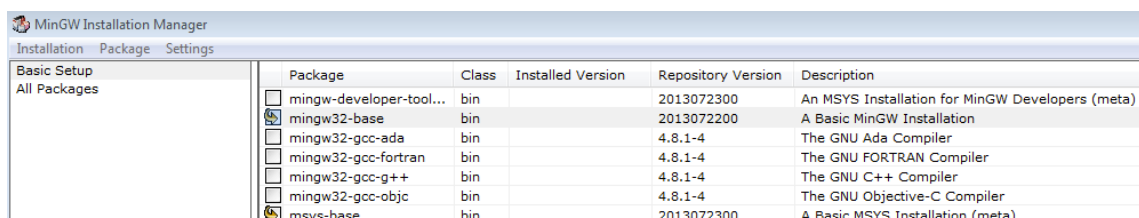

4. In the **Installation** menu, click **Apply Changes** and follow the remaining instructions to complete the installation.

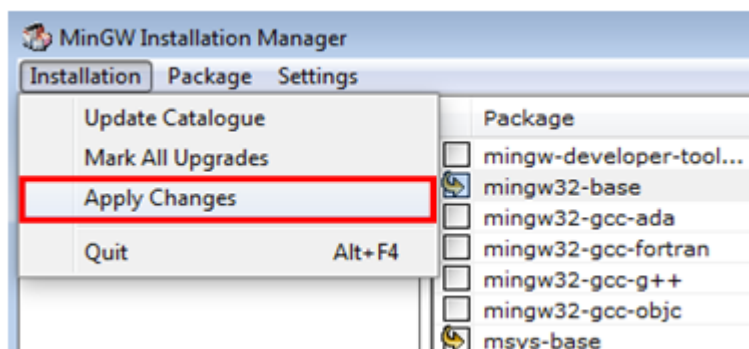


5. Add the appropriate item to the Windows operating system path environment variable. It can be found under **Control Panel->System and Security->System->Advanced System Settings** in the **Environment Variables...** section. The path is:


```
<mingw_install_dir>\bin
```

Assuming the default installation path, C:\MinGW, an example is shown below. If the path is not set correctly, the toolchain will not work.

Note: If you have C:\MinGW\msys\x.x\bin in your PATH variable (as required by Kinetis SDK 1.0.0), remove it to ensure that the new GCC build system works correctly.

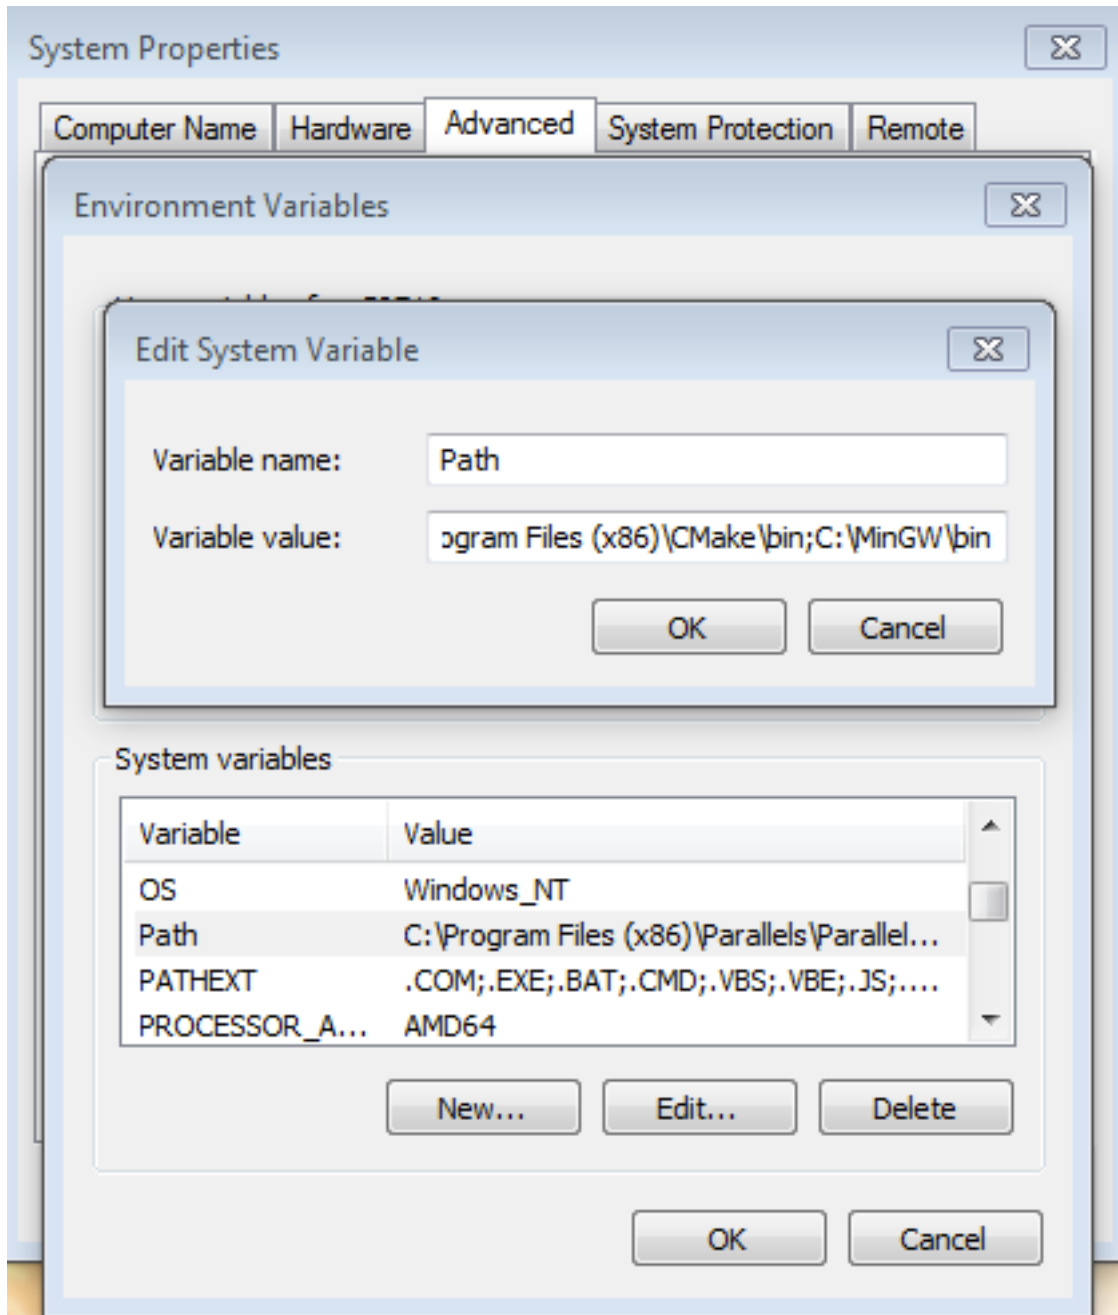


Add a new system environment variable for ARMGCC_DIR Create a new *system* environment variable and name it as ARMGCC_DIR. The value of this variable should point to the Arm GCC Embedded tool chain installation path. For this example, the path is:

```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major
```

See the installation folder of the GNU Arm GCC Embedded tools for the exact pathname of your installation.

Short path should be used for path setting, you could convert the path to short path by running command for %I in (.) do echo %~sI


```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>for %I in (.) do echo %~sI
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>echo C:\PROGRA~2\GNUTOO~1\82018~1
C:\PROGRA~2\GNUTOO~1\82018~1
```

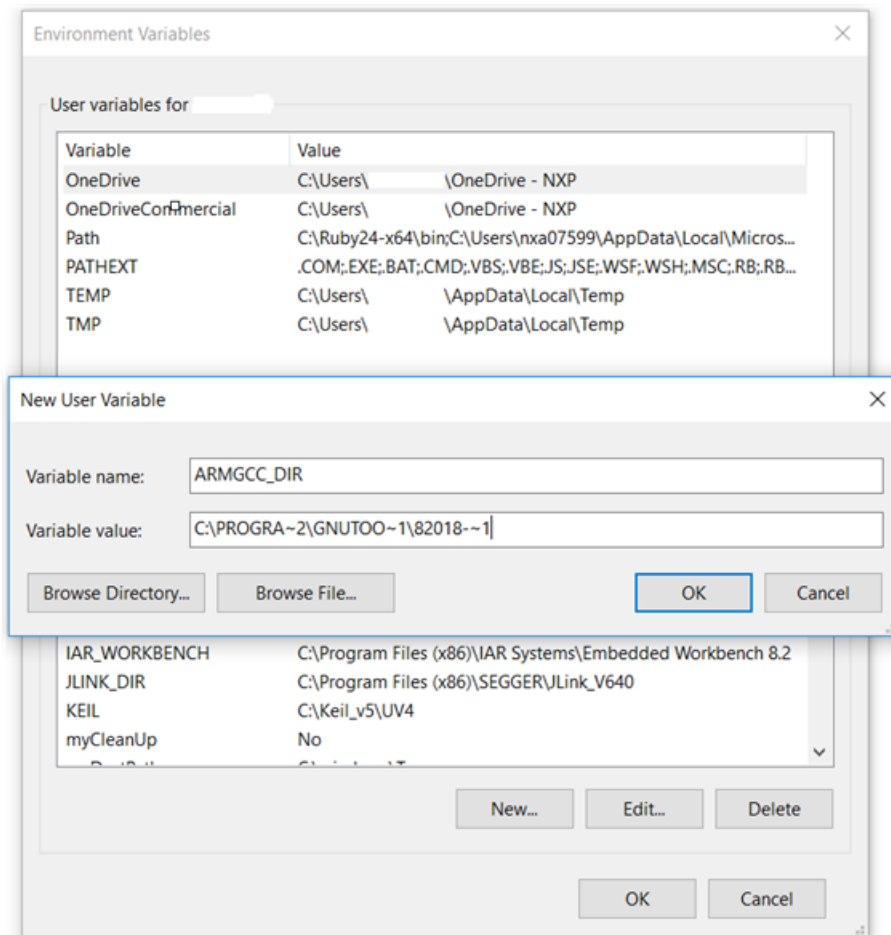

Install CMake

Windows OS

1. Download CMake 3.0.x from www.cmake.org/cmake/resources/software.html.
2. Install CMake, ensuring that the option **Add CMake to system PATH** is selected when installing. The user chooses to select whether it is installed into the PATH for all users or just the current user. In this example, it is installed for all users.

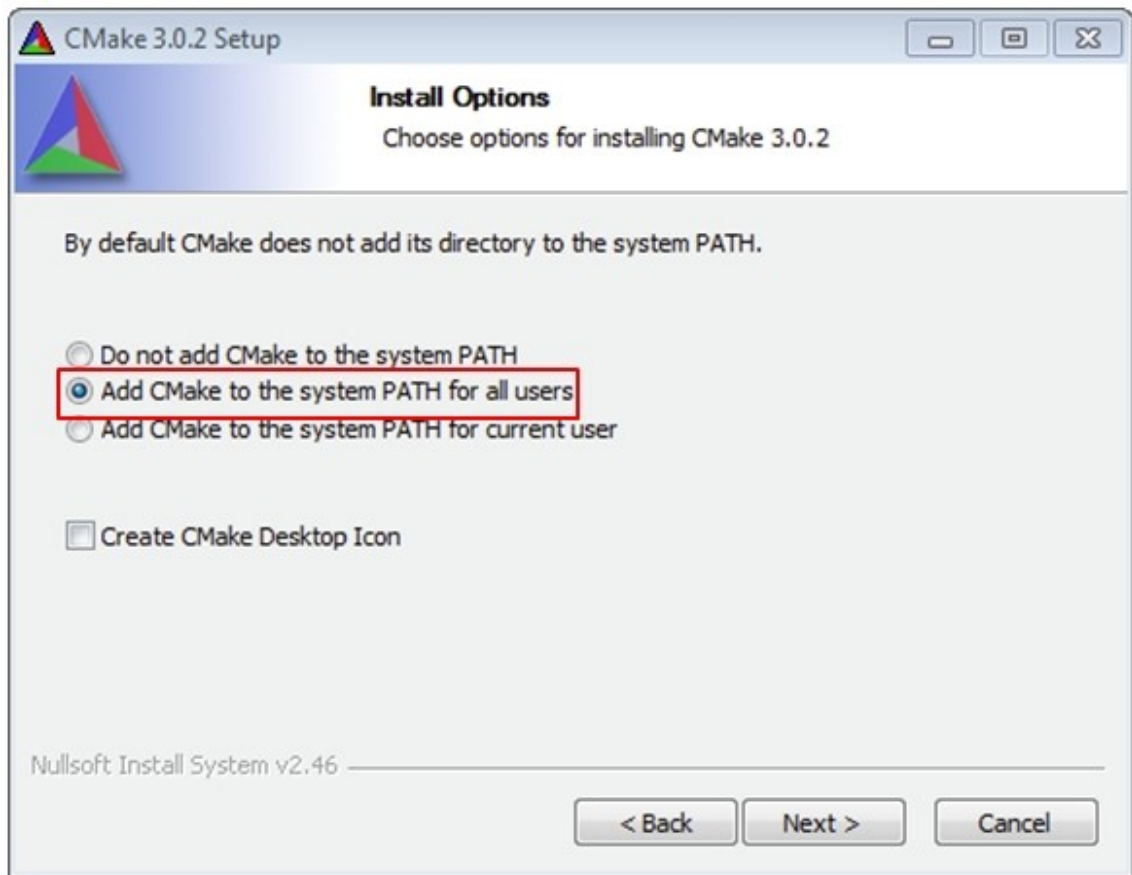

3. Follow the remaining instructions of the installer.
4. You may need to reboot your system for the PATH changes to take effect.
5. Make sure `sh.exe` is not in the Environment Variable PATH. This is a limitation of mingw32-make.


Linux OS It depends on the distributions of Linux Operation System. Here we use Ubuntu as an example.

Open shell and use following commands to install cmake and its version. Ensure the cmake version is above 3.0.x.

```
$ sudo apt-get install cmake
$ cmake --version
```

Build an example application To build an example application, follow these steps.

1. Open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system **Start** menu, go to **Programs > GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

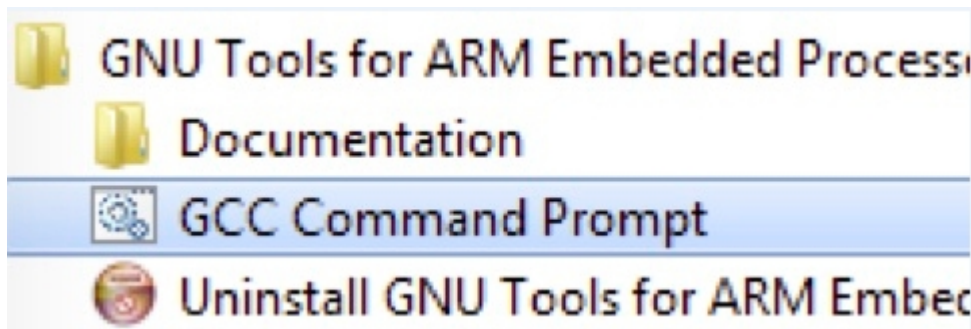

2. Change the directory to the example application project directory which has a path similar to the following:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc
```

For this example, the exact path is:

Note: To change directories, use the `cd` command.

3. Type **build_debug.bat** on the command line or double click on **build_debug.bat** file in Windows Explorer to build it. The output is as shown in following figure.


```
[ 84%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_smc.c.obj
[ 92%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_clock.c.obj
[100%] Linking C executable debug\hello_world.elf
[100%] Built target hello_world.elf

C:\nxp\SDK_2.0_FRDM-K64F\boards\frdmk64f\demo_apps\hello_world\armgcc>IF "" == "
" <pause >
Press any key to continue . . .
```

Run an example application This section describes steps to run a demo application using J-Link GDB Server application. To install J-Link host driver and update the on-board debugger firmware to Jlink firmware, see [On-board debugger](#).

After the J-Link interface is configured and connected, follow these steps to download and run the demo applications:

1. Connect the development platform to your PC via USB cable between the on-board debugger USB connector and the PC USB connector. If using a standalone J-Link debug pod, connect it to the SWD/JTAG connector of the board.
2. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)
 2. No parity
 3. 8 data bits
 4. 1 stop bit

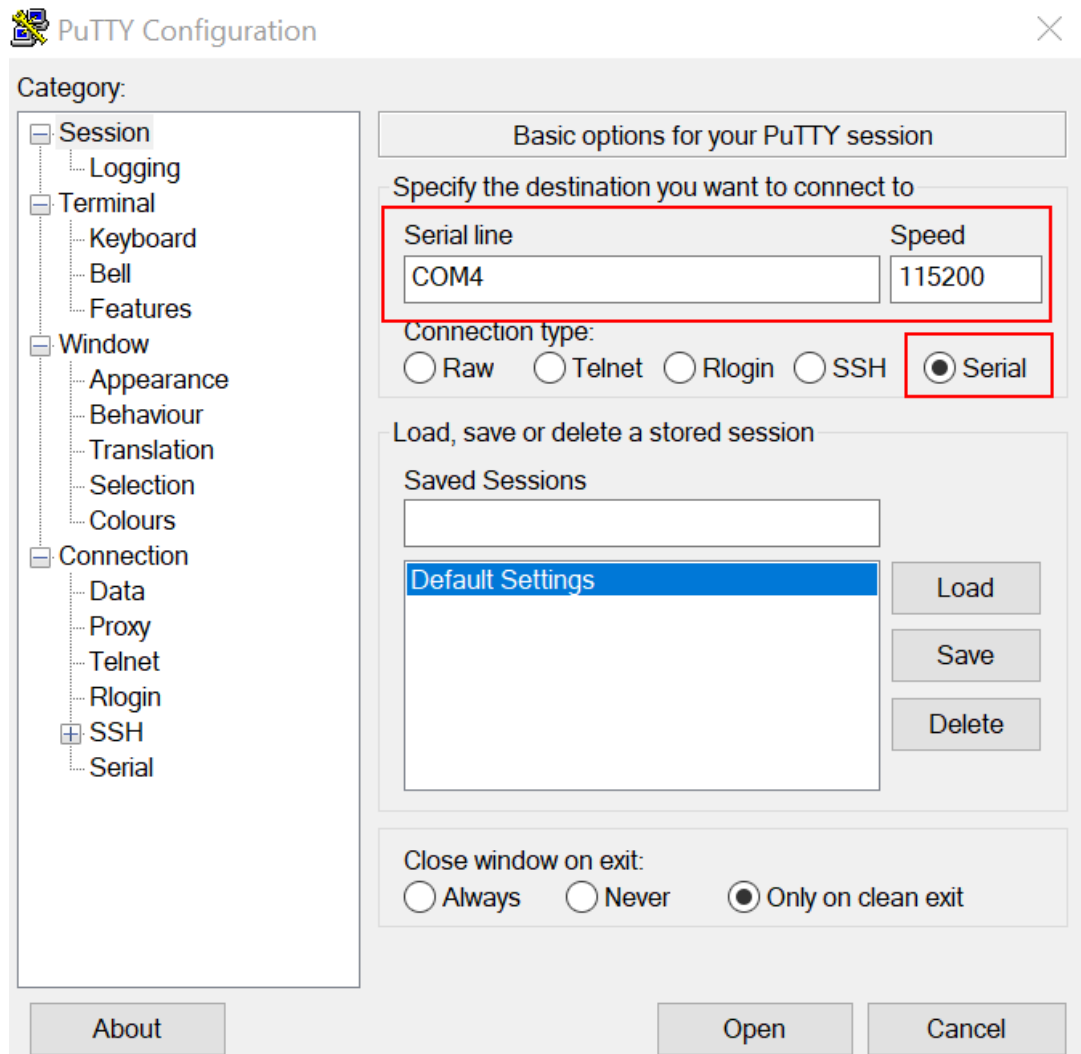


3. To launch the application, open the Windows **Start** menu and select **Programs > SEGGER > J-Link <version> J-Link GDB Server**.


Note: It is assumed that the J-Link software is already installed.

The **SEGGER J-Link GDB Server Config** settings dialog appears.


4. Make sure to check the following options.
 1. **Target interface:** The debug connection on board uses internal SWD signaling. In case of a wrong setting J-Link is unable to communicate with device under test.
 2. **Script file:** If required, a J-Link init script file can be used for board initialization. The file with the ".jlinkscript" file extension is located in the <install_dir>/boards/<board_name>/ directory.
 3. Under the **Server settings**, check the GDB port for connection with the gdb target remote command. For more information, see step 9.
 4. There is a command line version of J-Link GDB server "JLinkGDBServerCL.exe". Typical path is C:\Program Files\SEGGER\JLink\. To start the J-Link GDB server with the same settings as are selected in the UI, you can use these command line options.

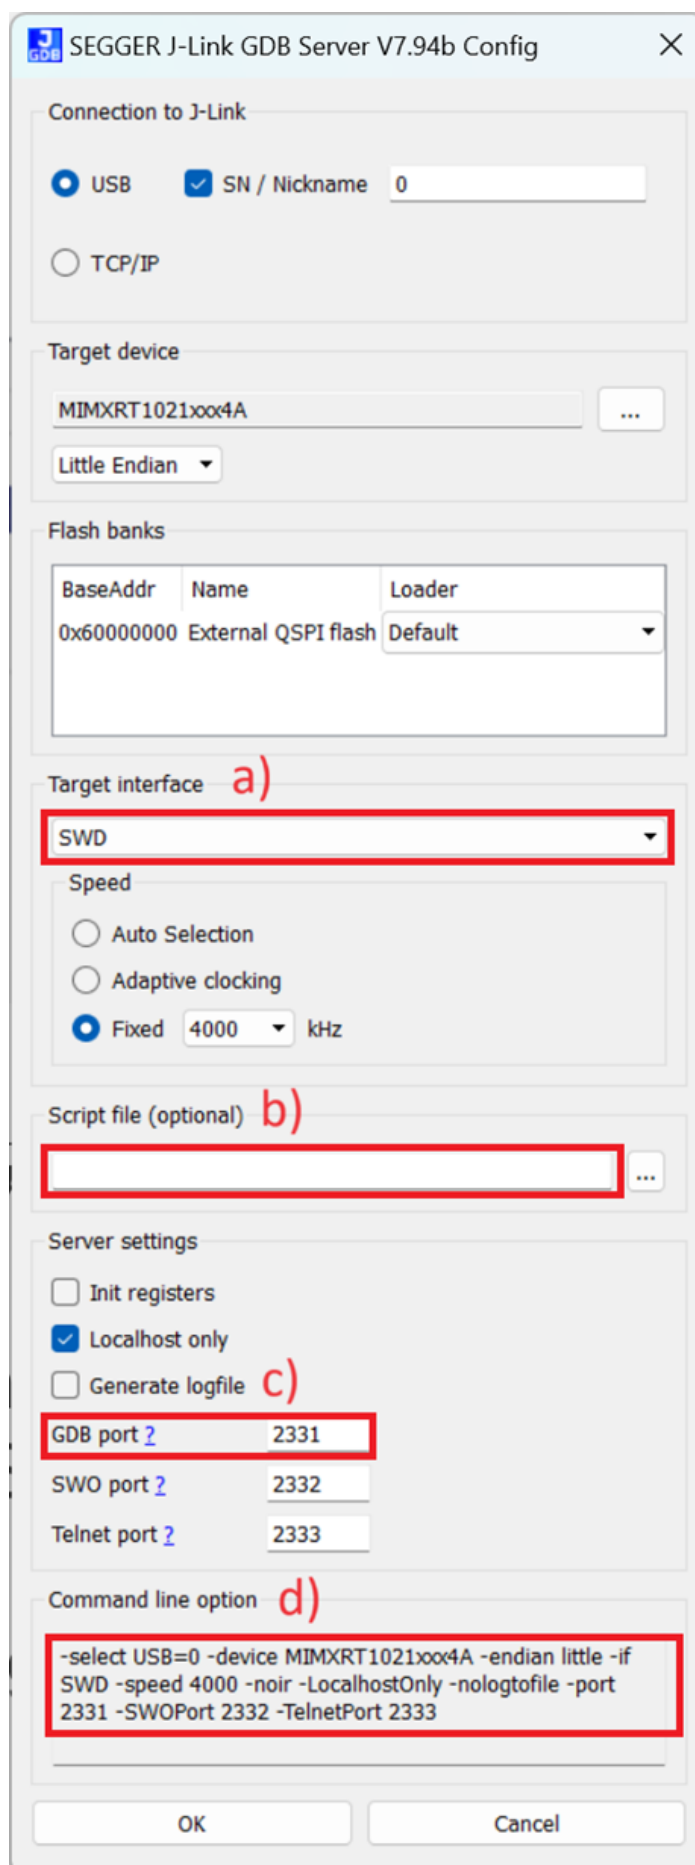

5. After it is connected, the screen should look like this figure:

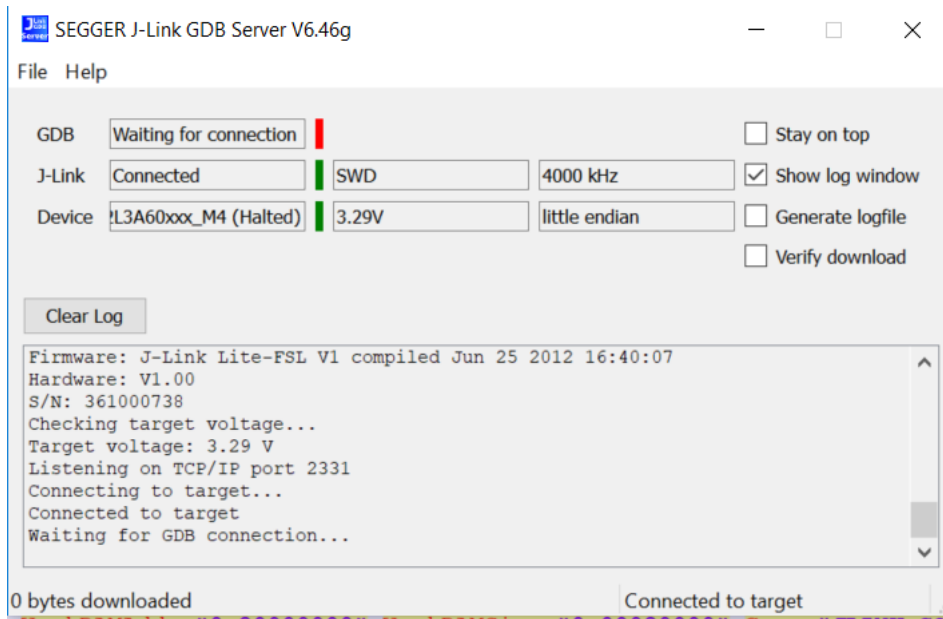

6. If not already running, open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system Start menu, go to **Programs - GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

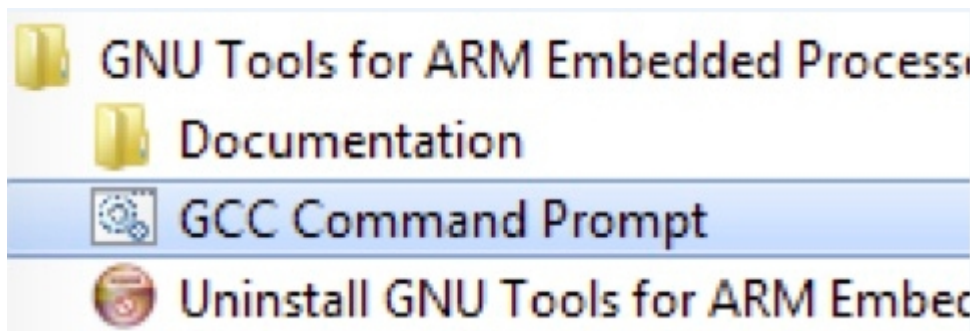


7. Change to the directory that contains the example application output. The output can be found in using one of these paths, depending on the build target selected:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/debug
```

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/release
```

8. Run the `arm-none-eabi-gdb.exe <application_name>.elf` command. For this example, it is `arm-none-eabi-gdb.exe hello_world.elf`.

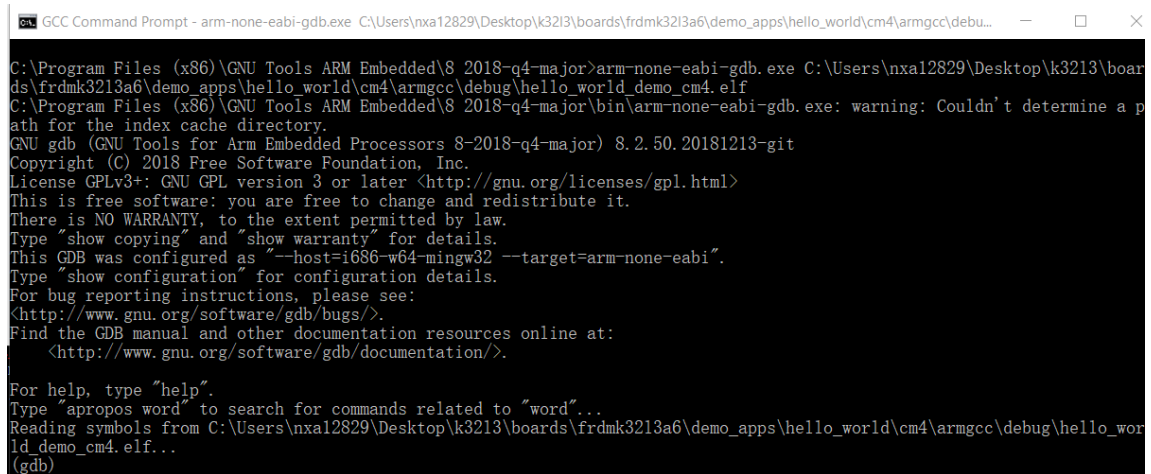

```

GCC Command Prompt - arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major>arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major\bin>arm-none-eabi-gdb.exe: warning: Couldn't determine a path for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf...
(gdb)

```

9. Run these commands:

1. target remote localhost:2331
2. monitor reset
3. monitor halt
4. load
5. monitor reset

10. The application is now downloaded and halted. Execute the `monitor go` command to start the demo application.

The `hello_world` application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



```

COM4 - PuTTY
hello world.

```

Build a multicore example application This section describes the steps to build and run a dual-core application. The demo application build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/armgcc
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/armgcc/build_debug.bat
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/armgcc/build_debug.bat
```

Build both applications separately following steps for single core examples as described in **Build an example application**.

```

GCC Command Prompt - build_debug.bat

[ 47%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 52%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 56%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 60%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 65%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 69%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 73%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 78%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 82%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 86%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system/K32L3A60_cm0plus.c.obj
[ 91%] Building ASM object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm0plus.S.obj
[ 95%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/middleware/multicore/mcmgr/src/mcmgr.c.obj
[100%] Linking C executable debug\hello_world_cm0plus.elf
[100%] Built target hello_world_cm0plus.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm0plus\armgcc>IF "" == "" (pause)
Press any key to continue . . .

GCC Command Prompt - build_debug.bat

[ 50%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_lpuart.c.obj
[ 54%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 58%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 62%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 66%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 70%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 75%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 79%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 83%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 87%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 91%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system/K32L3A60_cm4.c.obj
[ 95%] Building ASM object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm4.S.obj
[100%] Linking C executable debug\hello_world_cm4.elf
[100%] Built target hello_world_cm4.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm4\armgcc>IF "" == "" (pause)
Press any key to continue . . .


```

Run a multicore example application When running a multicore application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single-core application, applies, as described in **Run an example application**.

The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single-core and dual-core applications in Arm GCC.

Both the primary and the auxiliary image is loaded into the SPI flash memory. After execution of the monitor go command, the primary core application is executed. During the primary core code execution, the auxiliary core code is reallocated from the flash memory to the RAM, and the auxiliary core is released from the reset. The hello_world multicore application is now running

and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

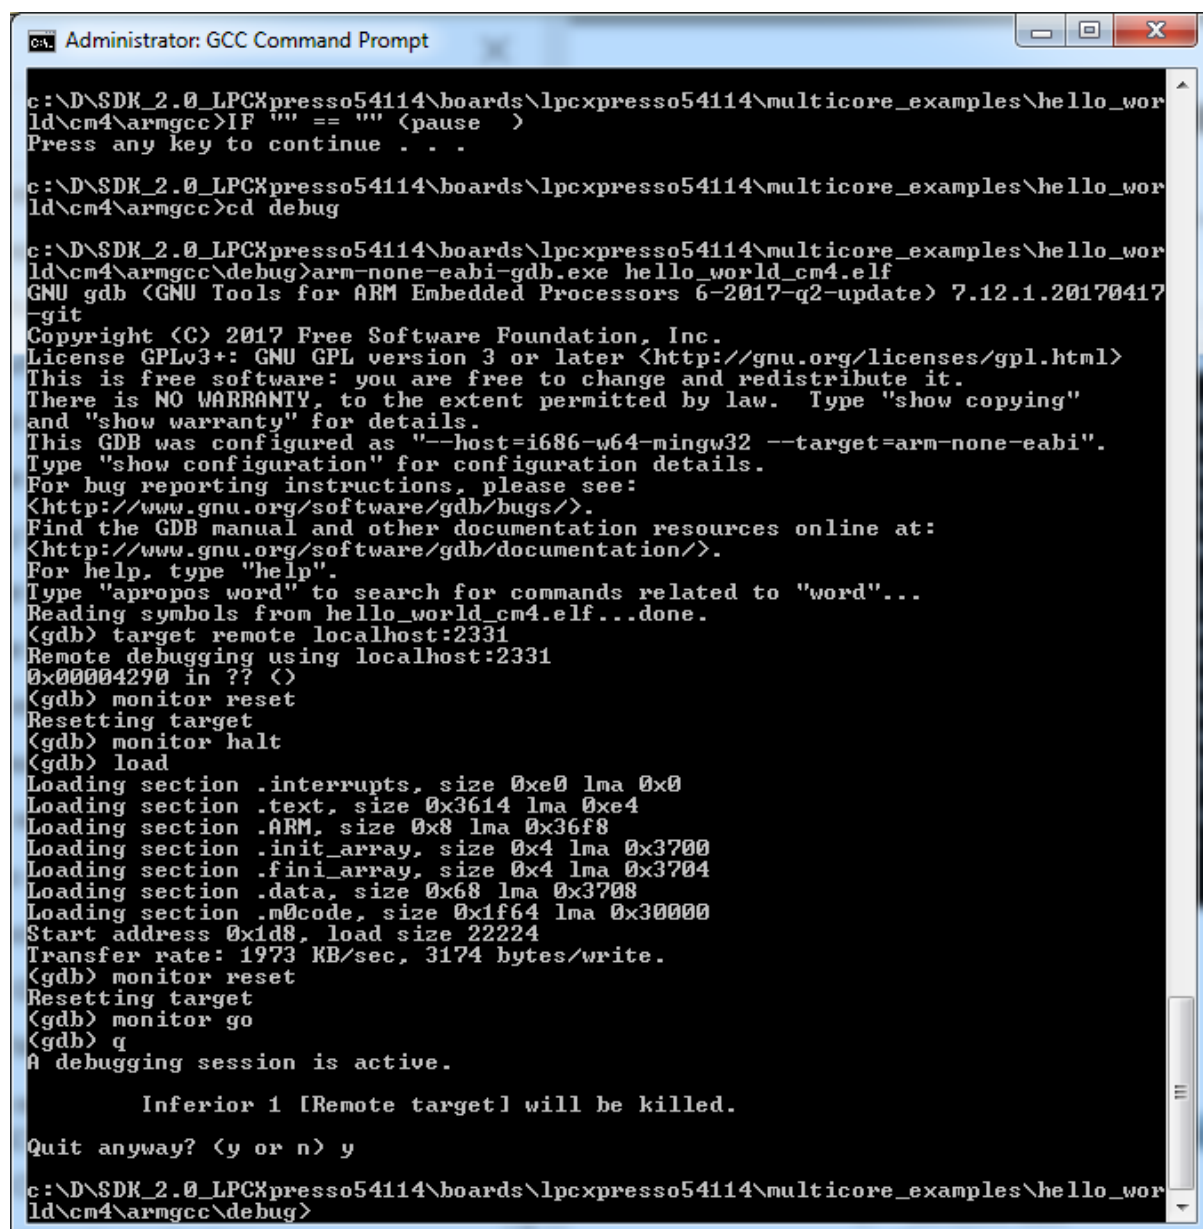

```

Administrator: GCC Command Prompt

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc>IF "" == "" <pause >
Press any key to continue . . .

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc>cd debug


c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc\debug>arm-none-eabi-gdb.exe hello_world_cm4.elf
GNU gdb (GNU Tools for ARM Embedded Processors 6-2017-q2-update) 7.12.1.20170417-git
Copyright (C) 2017 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.
For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from hello_world_cm4.elf...done.
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
0x00004290 in ?? ()
(gdb) monitor reset
Resetting target
(gdb) monitor halt
(gdb) load
Loading section .interrupts, size 0xe0 lma 0x0
Loading section .text, size 0x3614 lma 0xe4
Loading section .ARM, size 0x8 lma 0x36f8
Loading section .init_array, size 0x4 lma 0x3700
Loading section .fini_array, size 0x4 lma 0x3704
Loading section .data, size 0x68 lma 0x3708
Loading section .m0code, size 0x1f64 lma 0x30000
Start address 0x1d8, load size 22224
Transfer rate: 1973 KB/sec, 3174 bytes/write.
(gdb) monitor reset
Resetting target
(gdb) monitor go
(gdb) q
A debugging session is active.

    Inferior 1 [Remote target] will be killed.

Quit anyway? (y or n) y

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc\debug>

```

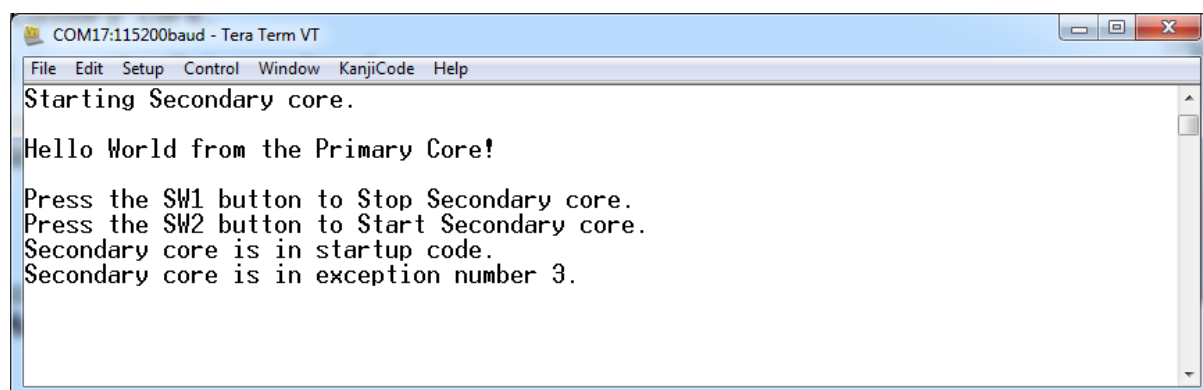

```

COM17:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help
Starting Secondary core.

Hello World from the Primary Core!

Press the SW1 button to Stop Secondary core.
Press the SW2 button to Start Secondary core.
Secondary core is in startup code.
Secondary core is in exception number 3.

```

Build a TrustZone example application This section describes the steps to build and run a TrustZone application. The demo application build scripts are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/  
↪<application_name>_ns/armgcc
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/  
↪<application_name>_s/armgcc
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/armgcc/build_  
↪debug.bat
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/armgcc/build_  
↪debug.bat
```

Build both applications separately, following steps for single core examples as described in **Build an example application**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because the CMSE library is not ready.

```
C:\WINDOWS\system32\cmd.exe
[ 55%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_
l_assert.c.obj
[ 59%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c
.obj
[ 62%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
flexspi.c.obj
[ 66%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
cache.c.obj
[ 70%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/seria
l_manager.c.obj
[ 74%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/seria
l_port_uart.c.obj
[ 77%] Building ASM object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startu
p_MIMXRT595S_cm33.S.obj
[ 81%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c
.obj
[ 85%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
usart.c.obj
[ 88%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
gpio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
iap.c.obj
[100%] Linking C executable debug\hello_world_s.elf
[100%] Built target hello_world_s.elf
C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_s\armgcc>IF "" == "" (paus
e)
Press any key to continue . . .
```

```

C:\WINDOWS\system32\cmd.exe
[ 52%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c.obj
[ 56%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_assert.c.obj
[ 60%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexspi.c.obj
[ 64%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_cache.c.obj
[ 68%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_manager.c.obj
[ 72%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_port_uart.c.obj
[ 76%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_usart.c.obj
[ 80%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c.obj
[ 84%] Building ASM object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startup_MIMXRT595S_cm33.S.obj
[ 88%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_gpio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_iap.c.obj
[100%] Linking C executable debug\hello_world_ns.elf
[100%] Built target hello_world_ns.elf

C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_ns\armgcc>IF "" == "" (pause)
Press any key to continue . . .

```

Run a TrustZone example application When running a TrustZone application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single core application, apply, as described in **Run an example application**.

To download and run the TrustZone application, perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single core and TrustZone applications in Arm GCC.

Then, run these commands:

1. arm-none-eabi-gdb.exe
2. target remote localhost:2331
3. monitor reset
4. monitor halt
5. monitor exec SetFlashDLNoRMWThreshold = 0x20000
6. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_ns/armgcc/debug/hello_world_ns.elf
7. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_s/armgcc/debug/hello_world_s.elf
8. monitor reset

The application is now downloaded and halted. Execute the `c` command to start the demo application.

```

C:\nxp\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world>arm-none-eabi-gdb
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major\bin\arm-none-eabi-gdb.exe: warning: Couldn't determine a p
ath for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software; you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word".
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
warning: No executable has been specified and target does not support
determining executable automatically. Try using the "file" command.
0x0001c04a in ?? ()
(gdb) load hello_world_ns/armgcc/debug/hello_world_ns.elf
Loading section .interrupts, size 0x168 lma 0xc0000
Loading section .text, size 0x1d30 lma 0xc0180
Loading section .ARM, size 0x8 lma 0xc1eb0
Loading section .init_array, size 0x4 lma 0xc1eb8
Loading section .fini_array, size 0x4 lma 0xc1ebc
Loading section .data, size 0x60 lma 0xc1ec0
Start address 0xc0234, load size 7944
Transfer rate: 74 KB/sec, 1324 bytes/write.
(gdb) load hello_world_s/armgcc/debug/hello_world_s.elf
Loading section .flash_config, size 0x200 lma 0x1007f400
Loading section .interrupts, size 0x168 lma 0x10080000
Loading section .text, size 0x4d54 lma 0x10080180
Loading section .ARM, size 0x8 lma 0x10084ed4
Loading section .init_array, size 0x4 lma 0x10084edc
Loading section .fini_array, size 0x4 lma 0x10084ee0
Loading section .data, size 0x68 lma 0x10084ee4
Loading section .gnu.sgstubs, size 0x20 lma 0x100bfe00
Start address 0x10080234, load size 20820
Transfer rate: 123 KB/sec, 2313 bytes/write.
(gdb) c
Continuing.

```

```

COM57 - PuTTY
Hello from secure world!
Entering normal world.
Welcome in normal world!
This is a text printed from normal world!
Comparing two string as a callback to normal world
String 1: Test1
String 2: Test2
Both strings are not equal!

```

MCUXpresso Config Tools

MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK μ Vision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port

This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:

```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.


2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbed/DAPLink** interface:




2. P&E Micro:




3. J-Link:



4. P&E Micro OSJTAG:



5. MRB-KW01:



On-board Debugger

This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the

CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/mbed bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.


Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.

- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

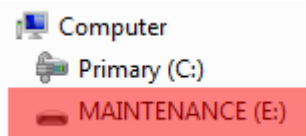

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER  
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces

The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files

With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then extern "C" should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

1.3 Getting Started with MCUXpresso SDK GitHub


1.3.1 Getting Started with MCUXpresso SDK Repository

Installation

NOTE

If the installation instruction asks/selects whether to have the tool installation path added to the PATH variable, agree/select the choice. This option ensures that the tool can be used in any terminal in any path. *Verify the installation* after each tool installation.

Install Prerequisites with MCUXpresso Installer The MCUXpresso Installer offers a quick and easy way to install the basic tools needed. The MCUXpresso Installer can be obtained from <https://github.com/nxp-mcuxpresso/vscode-for-mcux/wiki/Dependency-Installation>. The MCUXpresso Installer is an automated installation process, simply select MCUXpresso SDK Developer from the menu and click install. If you prefer to install the basic tools manually, refer to the next section.

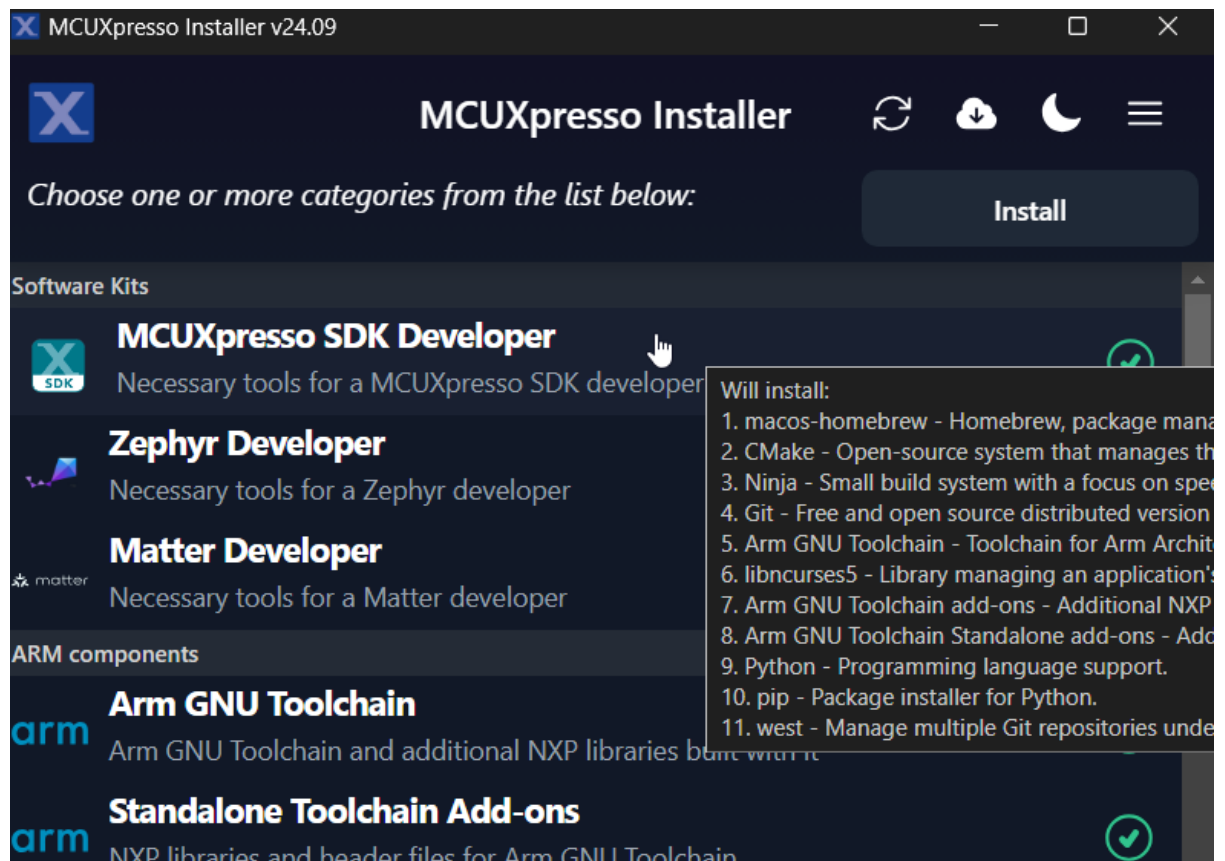

Alternative: Manual Installation

Basic tools

Git Git is a free and open source distributed version control system. Git is designed to handle everything from small to large projects with speed and efficiency. To install Git, visit the official [Git website](#). Download the appropriate version(you may use the latest one) for your operating system (Windows, macOS, Linux). Then run the installer and follow the installation instructions.

User `git --version` to check the version if you have a version installed.

Then configure your username and email using the commands:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python Install python 3.10 or latest. Follow the [Python Download](#) guide.

Use `python --version` to check the version if you have a version installed.

West Please use the west version equal or greater than 1.2.0

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a different
↪source using option '-i'.
# for example, in China you could try: pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple
pip install -U west
```

Build And Configuration System

CMake It is strongly recommended to use CMake version equal or later than 3.30.0. You can get latest CMake distributions from [the official CMake download page](#).

For Windows, you can directly use the .msi installer like [cmake-3.31.4-windows-x86_64.msi](#) to install.

For Linux, CMake can be installed using the system package manager or by getting binaries from [the official CMake download page](#).

After installation, you can use `cmake --version` to check the version.

Ninja Please use the ninja version equal or later than 1.12.1.

By default, Windows comes with the Ninja program. If the default Ninja version is too old, you can directly download the [ninja binary](#) and register the ninja executor location path into your system path variable to work.

For Linux, you can use your [system package manager](#) or you can directly download the [ninja binary](#) to work.

After installation, you can use `ninja --version` to check the version.

Kconfig MCUXpresso SDK uses Kconfig python implementation. We customize it based on our needs and integrate it into our build and configuration system. The Kconfiglib sources are placed under `mcuxsdk/scripts/kconfig` folder.

Please make sure [python](#) environment is setup ready then you can use the Kconfig.

Ruby Our build system supports IDE project generation for iar, mdk, codewarrior and xtensa to provide OOB from build to debug. This feature is implemented with ruby. You can follow the guide ruby environment setup to setup the ruby environment. Since we provide a built-in portable ruby, it is just a simple one cmd installation.

If you only work with CLI, you can skip this step.

Toolchain MCUXpresso SDK supports all mainstream toolchains for embedded development. You can install your used or interested toolchains following the guides.

Toolchain	Download and Installation Guide	Note
Armgcc	Arm GNU Toolchain Install Guide	ARMGCC is default toolchain
IAR	IAR Installation and Licensing quick reference guide	
MDK	MDK Installation	
Armclang	Installing Arm Compiler for Embedded	
Zephyr	Zephyr SDK	
Codewarrior	NXP CodeWarrior	
Xtensa	Tensilica Tools	
NXP S32Compiler RISC-V Zen-V	NXP Website	

After you have installed the toolchains, register them in the system environment variables. This will allow the west build to recognize them:

Toolchain	Environment Variable	Example	Cmd Line Argument
Armgcc	AR-MGCC_DIR	C:\armgcc for windows/usr for Linux. Typically arm-none-eabi-* is installed under /usr/bin	– toolchain armgcc
IAR	IAR_DIR	C:\iar\ewarm-9.60.3 for Windows/opt/iarsystems/bxarm-9.60.3 for Linux	– toolchain iar
MDK	MDK_DIR	C:\Keil_v5 for Windows.MDK IDE is not officially supported with Linux.	– toolchain mdk
Armclang	ARM-CLANG_DIR	C:\ArmCompilerforEmbedded6.22 for Windows/opt/ArmCompilerforEmbedded6.21 for Linux	– toolchain mdk
Zephyr	ZEPHYR_DIR	c:\NXP\zephyr-sdk-<version> for windows/opt/zephyr-sdk-<version> for Linux	– toolchain zephyr
CodeWarrior	CW_DIR	C:\Freescall\CW MCU v11.2 for windowsCodeWarrior is not supported with Linux	– toolchain code-warrior
Xtensa	XCC_DIR	C:\xtensa\XtDevTools\install\tools\RI-2023.11-win32\XtensaTools for windows/opt/xtensa/XtDevTools/install/tools/RI-2023.11-Linux/XtensaTools for Linux	– toolchain xtensa
NXP S32Compiler RISC-V Zen-V	RISCV-LVM_DIR	C:\riscv-llvm-win32_b298_b298_2024.08.12 for Windows/opt/riscv-llvm-Linux-x64_b298_b298_2024.08.12 for Linux	– toolchain riscv-llvm

- The <toolchain>_DIR is the root installation folder, not the binary location folder. For IAR, it is directory containing following installation folders:

```

└─ arm
└─ common
└─ install-info

```

- MDK IDE using armclang toolchain only officially supports Windows. In Linux, please directly use armclang toolchain by setting ARMCLANG_DIR. In Windows, since most Keil users will install MDK IDE instead of standalone armclang toolchain, the MDK_DIR has higher priority than ARMCLANG_DIR.
- For Xtensa toolchain, please set the XTENSA_CORE environment variable. Here's an example list:

Device Core	XTENSA_CORE
RT500 fusion1	nxp_rt500_RI23_11_newlib
RT600 hifi4	nxp_rt600_RI23_11_newlib
RT700 hifi1	rt700_hifi1_RI23_11_nlib
RT700 hifi4	t700_hifi4_RI23_11_nlib
i.MX8ULP fusion1	fusion_nxp02_dsp_prod

- In Windows, the short path is used in environment variables. If any toolchain is using the long path, you can open a command window from the toolchain folder and use below command to get the short path: `for %i in (.) do echo %~fsi`

Tool installation check Once installed, open a terminal or command prompt and type the associated command to verify the installation.

If you see the version number, you have successfully installed the tool. Else, check whether the tool's installation path is added into the PATH variable. You can add the installation path to the PATH with the commands below:

- Windows: Open command prompt or powershell, run below command to show the user PATH variable.

```
reg query HKEY_CURRENT_USER\Environment /v PATH
```

The tool installation path should be `C:\Users\xxx\AppData\Local\Programs\Git\cmd`. If the path is not seen in the output from above, append the path value to the PATH variable with the command below:

```
reg add HKEY_CURRENT_USER\Environment /v PATH /d "%PATH%;C:\Users\xxx\AppData\
↪Local\Programs\Git\cmd"
```

Then close the command prompt or powershell and verify the tool command again.

- Linux:
 1. Open the `$HOME/.bashrc` file using a text editor, such as `vim`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bashrc` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.
- macOS:
 1. Open the `$HOME/.bash_profile` file using a text editor, such as `nano`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bash_profile` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.

Get MCUXpresso SDK Repo

Establish SDK Workspace To get the MCUXpresso SDK repository, use the `west` tool to clone the manifest repository and checkout all the west projects.

```
# Initialize west with the manifest repository
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests/ mcuxpresso-sdk

# Update the west projects
cd mcuxpresso-sdk
west update

# Allow the usage of west extensions provided by MCUXpresso SDK
west config commands.allow_extensions true
```

Install Python Dependency(If do tool installation manually) To create a Python virtual environment in the west workspace core repo directory `mcuxsdk`, follow these steps:

1. Navigate to the core directory:

```
cd mcuxsdk
```

2. [Optional] Create and activate the virtual environment: If you don't want to use the python virtual environment, skip this step. **We strongly suggest you use `venv` to avoid conflicts with other projects using python.**

```
python -m venv .venv

# For Linux/MacOS
source .venv/bin/activate

# For Windows
.\.venv\Scripts\activate
# If you are using powershell and see the issue that the activate script cannot be run.
# You may fix the issue by opening the powershell as administrator and run below command:
powershell Set-ExecutionPolicy RemoteSigned
# then run above activate command again.
```

Once activated, your shell will be prefixed with `(.venv)`. The virtual environment can be deactivated at any time by running `deactivate` command.

Remember to activate the virtual environment every time you start working in this directory. If you are using some modern shell like `zsh`, there are some powerful plugins to help you auto switch `venv` among workspaces. For example, `zsh-autoswitch-virtualenv`.

3. Install the required Python packages:

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a
↪ different source using option '-i'.
# for example, in China you could try: pip3 install -r mcuxsdk/scripts/requirements.txt -i https://pypi.
↪ tuna.tsinghua.edu.cn/simple
pip install -r scripts/requirements.txt
```

Explore Contents

This section helps you build basic understanding of current fundamental project content and guides you how to build and run the provided example project in whole SDK delivery.

Folder View The whole MCUXpresso SDK project, after you have done the `west init` and `west update` operations follow the guideline at [Getting Started Guide](#), have below folder structure:

Folder	Description
manifests	Manifest repo, contains the manifest file to initialize and update the west workspace.
mcuxsdk	The MCUXpresso SDK source code, examples, middleware integration and script files.

All the projects record in the **Manifest repo** are checked out to the folder `mcuxsdk/`, the layout of `mcuxsdk` folder is shown as below:

Folder	Description
arch	Arch related files such as ARM CMSIS core files, RISC-V files and the build files related to the architecture.
cmake	The cmake modules, files which organize the build system.
components	Software components.
devices	Device support package which categorized by device series. For each device, header file, feature file, startup file and linker files are provided, also device specific drivers are included.
docs	Documentation source and build configuration for this sphinx built online documentation.
drivers	Peripheral drivers.
examples	Various demos and examples, support files on different supported boards. For each board support, there are board configuration files.
middleware	Middleware components integrated into SDK.
rtos	Rtos components integrated into SDK.
scripts	Script files for the west extension command and build system support.
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.

Examples Project The examples project is part of the whole SDK delivery, and locates in the folder `mcuxsdk/examples` of west workspace.

Examples files are placed in folder of `<example_category>`, these examples include (but are not limited to)

- `demo_apps`: Basic demo set to start using SDK, including `hello_world` and `led_blinky`.
- `driver_examples`: Simple applications that show how to use the peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI transfer using DMA).

Board porting layers are placed in folder of `_boards/<board_name>` which aims at providing the board specific parts for examples code mentioned above.

Run a demo using MCUXpresso for VS Code


This section explains how to configure MCUXpresso for VS Code to build, run, and debug example applications. This guide uses the `hello_world` demo application as an example. However, these

steps can be applied to any example application in the MCUXpresso SDK.

Build an example application This section assumes that the user has already obtained the SDK as outlined in [Get MCUXpresso SDK Repo](#).


To build an example application:

1. Import the SDK into your workspace. Click **Import Repository** from the **QUICKSTART PANEL**.

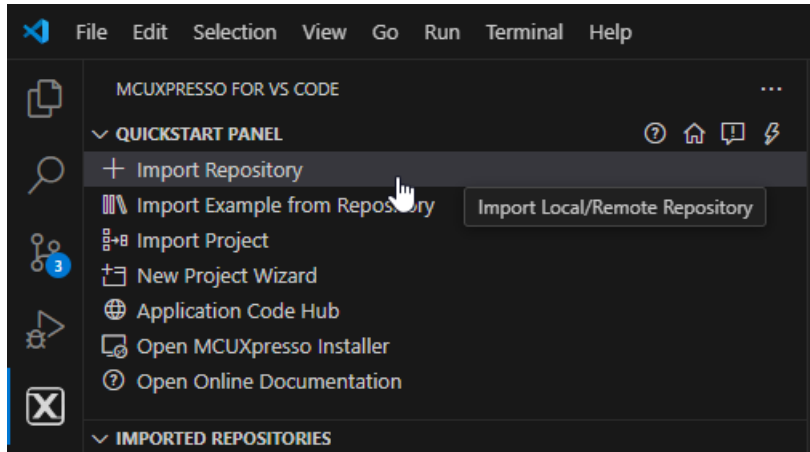


Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details.

Select **Local** if you've already obtained the SDK as seen in [Get MCUXpresso SDK Repo](#). Select your location and click **Import**.

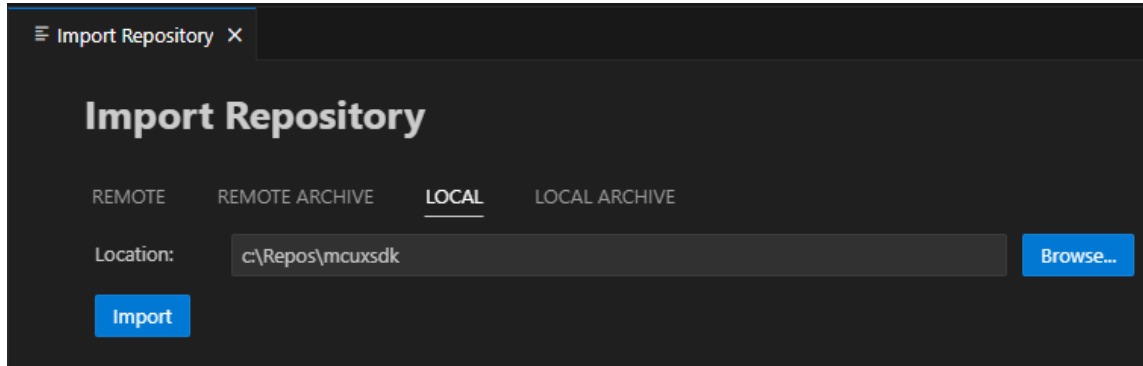

2. Click **Import Example from Repository** from the **QUICKSTART PANEL**.

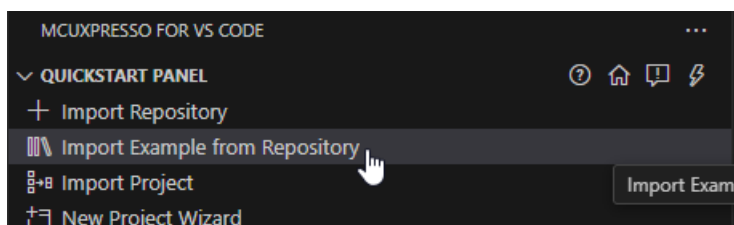

In the dropdown menu, select the MCUXpresso SDK, the Arm GNU Toolchain, your board, template, and application type. Click **Import**.

Import Example from Repository

Repository: c:\Repos\mcuxsdk (MCUXpresso SDK Repository) | ▾

Toolchain: (Arm GNU Toolchain 13.2.rel1 (Build arm-13.7)) 13.2.1 20231009 | ▾

Board: FRDM-MCXC444 | ▾

 FRDM-MCXC444

Template: demo_apps/hello_world | ▾

The HelloWorld demo prints the "Hello World" string to the terminal using the SDK UART drivers and repeat what user input. The purpose of this demo is to show how to use the UART, and to provide a simple project for debugging and further development.
Please refer to [README](#) file for more details.

App type: Freestanding application | ▾

Name: frdmmcxc444_hello_world

Location: c:\nxp_examples [Browse...](#)


Note: Path doesn't exist. Folder(s) will be created.

☐ Open readme file after project is imported

[Import](#)

Note: The MCUXpresso SDK projects can be imported as **Repository applications** or **Freestanding applications**. The difference between the two is the import location. Projects imported as Repository examples will be located inside the MCUXpresso SDK, whereas Freestanding examples can be imported to a user-defined location. Select between these by designating your selection in the **App type** dropdown menu.

- VS Code will prompt you to confirm if the imported files are trusted. Click **Yes**.
- Navigate to the **PROJECTS** view. Find your project and click the **Build Project** icon.

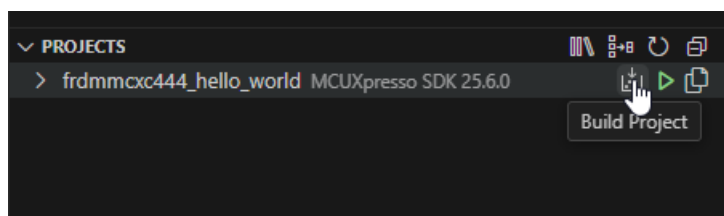

The integrated terminal will open at the bottom and will display the build output.


```

[17/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/components/debug_console_lite/fsl_debug_console.c.obj
[18/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/devices/MCXC/MCXC444/drivers/fsl_clock.c.obj
[19/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/lpuart/fsl_lpuart.c.obj
[20/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/uart/fsl_uart.c.obj
[21/21] Linking C executable hello_world.elf
Memory region      Used Size  Region Size  %age Used
  m_interrupts:     192 B      512 B      37.50%
  m_flash_config:    16 B       16 B     100.00%
  m_text:          7892 B    261104 B      3.02%
  m_data:          2128 B     32 KB      6.49%
build finished successfully.
Terminal will be reused by tasks, press any key to close it.


```

Run an example application **Note:** for full details on MCUXpresso for VS Code debug probe support, see [MCUXpresso for VS Code Wiki](#).

1. Open the **Serial Monitor** from the VS Code's integrated terminal. Select the VCom Port for your device and set the baud rate to 115200.

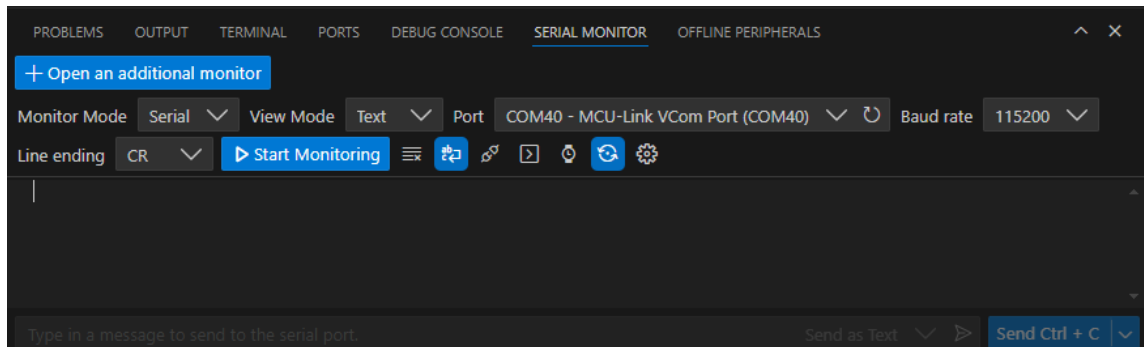

2. Navigate to the **PROJECTS** view and click the play button to initiate a debug session.

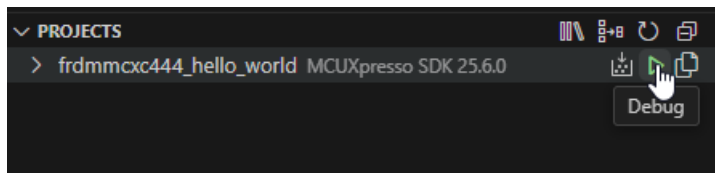

The debug session will begin. The debug controls are initially at the top.

```

18  /*****
21
22  /*****
23  * Variables
24  *****/
25
26  /*****
27  * Code
28  *****/
29  /*!
30  * @brief Main function
31  */
32  int main(void)
33  {
34      char ch;
35
36      /* Init board hardware. */
37      BOARD_InitHardware();
38
39      PRINTF("hello world.\r\n");
40
41      while (1)
42      {
43          ch = GETCHAR();
44          PUTCHAR(ch);
45      }
46  }
47

```

3. Click **Continue** on the debug controls to resume execution of the code. Observe the output on the **Serial Monitor**.

```

PROBLEMS  OUTPUT  TERMINAL  PERIPHERALS  RTOS DETAILS  PORTS  DEBUG CONSOLE  SERIAL MONITOR
+ Open an additional monitor
Monitor Mode Serial View Mode Text Port COM40 - MCU-Link VCom Port (COM40)
[ ] Stop Monitoring [ ] [ ] [ ] [ ] [ ]
---- Opened the serial port COM40 ----
hello world.
|

```

Running a demo using ARMGCC CLI/IAR/MDK

Supported Boards Use the west extension `west list_project` to understand the board support scope for a specified example. All supported build command will be listed in output:

```

west list_project -p examples/demo_apps/hello_world [-t armgcc]

INFO: [ 1][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↳ evk9mimx8ulp -Dcore_id=cm33]
INFO: [ 2][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↳ evkbimxrt1050]
INFO: [ 3][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_

```

(continues on next page)

(continued from previous page)

```

↪ evkbnimxrt1060]
INFO: [ 4][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm4]
INFO: [ 5][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm7]
INFO: [ 6][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1060]
INFO: [ 7][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt7ulp]
...

```

The supported toolchains and build targets for an example are decided by the example-self example.yml and board example.yml, please refer Example Toolchains and Targets for more details.

Build the project Use west build -h to see help information for west build command. Compared to zephyr's west build, MCUXpresso SDK's west build command provides following additional options for mcux examples:

- --toolchain: specify the toolchain for this build, default armgcc.
- --config: value for CMAKE_BUILD_TYPE. If not provided, build system will get all the example supported build targets and use the first debug target as the default one. Please refer Example Toolchains and Targets for more details about example supported build targets.

Here are some typical usages for generating a SDK example:

```

# Generate example with default settings, default used device is the mainset MK22F51212
west build -b frdmk22f examples/demo_apps/hello_world

# Just print cmake commands, do not execute it
west build -b frdmk22f examples/demo_apps/hello_world --dry-run

# Generate example with other toolchain like iar, default armgcc
west build -b frdmk22f examples/demo_apps/hello_world --toolchain iar

# Generate example with other config type
west build -b frdmk22f examples/demo_apps/hello_world --config release

# Generate example with other devices with --device
west build -b frdmk22f examples/demo_apps/hello_world --device MK22F12810 --config release

```

For multicore devices, you shall specify the corresponding core id by passing the command line argument -Dcore_id. For example

```

west build -b evkbnimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug

```

For shield, please use the --shield to specify the shield to run, like

```

west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪ Dcore_id=cm33_core0

```

Sysbuild(System build) To support multicore project building, we ported Sysbuild from Zephyr. It supports combine multiple projects for compilation. You can build all projects by adding --sysbuild for main application. For example:

```

west build -b evkbnimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always

```

For more details, please refer to System build.

Config a Project Example in MCUXpresso SDK is configured and tested with pre-defined configuration. You can follow steps blow to change the configuration.

1. Run cmake configuration


```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Please note the project will be built without --cmake-only parameter.

2. Run guiconfig target

```
west build -t guiconfig
```

Then you will get the Kconfig GUI launched, like

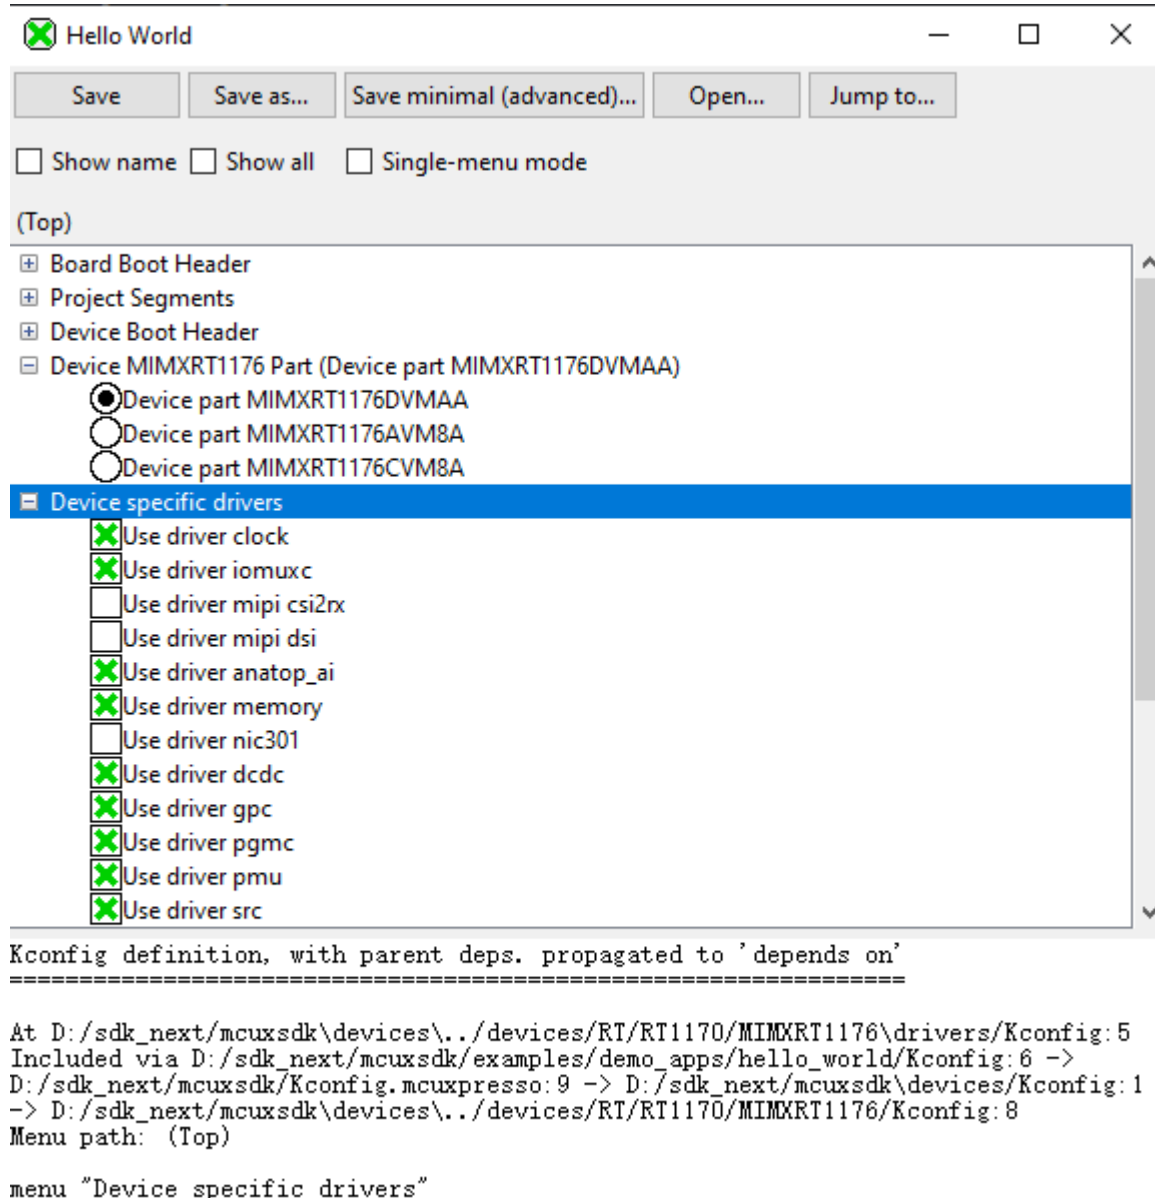

You can reconfigure the project by selecting/deselecting Kconfig options.

After saving and closing the Kconfig GUI, you can directly run `west build` to build with the new configuration.

Flash *Note:* Please refer Flash and Debug The Example to enable west flash/debug support.
Flash the hello_world example:

```
west flash -r linkserver
```

Debug Start a gdb interface by following command:


```
west debug -r linkserver
```

Work with IDE Project The above build functionalities are all with CLI. If you want to use the toolchain IDE to work to enjoy the better user experience especially for debugging or you are already used to develop with IDEs like IAR, MDK, Xtensa and CodeWarrior in the embedded world, you can play with our IDE project generation functionality.

This is the cmd to generate the evkbmimxrt1170 hello_world IAR IDE project files.

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_↵  
↵ flexspi_nor_debug -p always -t guiproject
```

By default, the IDE project files are generated in mcuxsdk/build/<toolchain> folder, you can open the project file with the IDE tool to work:

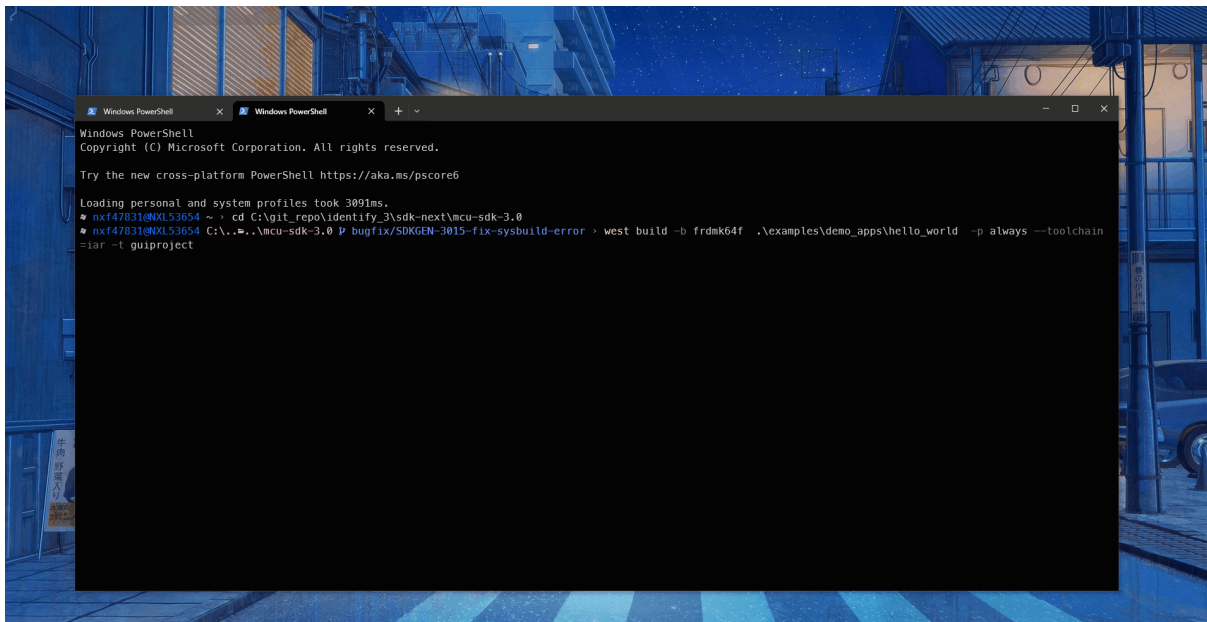

Note, please follow the [Installation](#) to setup the environment especially make sure that [ruby](#) has been installed.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC

further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.60.4
- Keil MDK, version is 5.41
- MCUXpresso for VS Code v25.06
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

De- vel- op- ment board	MCU devices			
FRDM	MK22FN128VDC10,	MK22FN128VLH10,	MK22FN128VLL10,	MK22FN128VMP10,
K22F	MK22FN128CAH12,	MK22FN256CAH12,	MK22FN256VDC12,	MK22FN256VLH12,
	MK22FN256VLL12,	MK22FN256VMP12,	MK22FN512CAP12,	MK22FN512VDC12,
	MK22FN512VFX12,	MK22FN512VLH12,	MK22FN512VLL12,	MK22FN512VMP12,
	MK02FN128VFM10,	MK02FN128VLF10,	MK02FN128VLH10,	MK02FN64VFM10,
	MK02FN64VLF10,	MK02FN64VLH10		

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

USB Type-C PD Stack See the *MCUXpresso SDK USB Type-C PD Stack User's Guide* (document MCUXSDKUSBPUG) for more information

USB Host, Device, OTG Stack See the MCUXpresso SDK USB Stack User's Guide (document MCUXSDKUSBSUG) for more information.

TinyCBOR Concise Binary Object Representation (CBOR) Library

SDMMC stack The SDMMC software is integrated with MCUXpresso SDK to support SD/MMC/SDIO standard specification. This also includes a host adapter layer for bare-metal/RTOS applications.

PKCS#11 The PKCS#11 standard specifies an application programming interface (API), called "Cryptoki," for devices that hold cryptographic information and perform cryptographic functions. Cryptoki follows a simple object based approach, addressing the goals of technology independence (any kind of device) and resource sharing (multiple applications accessing multiple devices), presenting to applications a common, logical view of the device called a "cryptographic token".

Multicore Multicore Software Development Kit

LVGL LVGL Open Source Graphics Library

llhttp HTTP parser llhttp

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

File systemFatfs The FatFs file system is integrated with the MCUXpresso SDK and can be used to access either the SD card or the USB memory stick when the SD card driver or the USB Mass Storage Device class implementation is used.

emWin The MCUXpresso SDK is pre-integrated with the SEGGER emWin GUI middleware. The AppWizard provides developers and designers with a flexible tool to create stunning user interface applications, without writing any code.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eiQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known issues

This section lists the known issues, limitations, and/or workarounds.

Build warning in freertos_tickless example

A build warning appears in the freertos_tickless example while working in the ArmGCC environment.

```
.. code-block:: none
  `c:\c\pkg\cmsis\core\include\core_cm0plus.h:854:52: warning: array subscript 14 is above array bounds
  ↳ of 'volatile uint32_t[8]' {aka 'volatile long unsigned int[8]'} [-Warray-bounds]`.
```

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

Example freertos_lpspi fail before the console output

The example freertos_lpspi fails before the message “LPSPi master transfer completed successfully.” appears in the console output.

Console output:

```

FreeRTOS LPSPi example start.
This example use one lpspi instance as master and another as slave on a single board.
Master and slave are both use interrupt way.
Please make sure you make the correct line connection. Basically, the connection is:
LPSPi_master -- LPSPi_slave
```

(continues on next page)

(continued from previous page)

```
CLK -- CLK
PCS -- PCS
SOUT -- SIN
SIN -- SOUT  ````
```

Importing FTM_PDB_ADC16 project into MCUXpresso Config tool reports FTM driver error

When you import the FTM_PDB_ADC16 project using the MCUXpresso Config Tool an error is prompted. The error prompts that the FTM driver is not aligned with the peripheral components. It is recommended not to import this project into the MCUXpresso Config Tool.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version
-

ADC16

[2.3.0]

- Improvements
 - Added new API `ADC16_EnableAsynchronousClockOutput()` to enable/disable ADACK output.
 - In `ADC16_GetDefaultConfig()`, set `enableAsynchronousClock` to false.

[2.2.0]

- Improvements
 - Added hardware average mode in `adc_config_t` structure, then the hardware average mode can be set by invoking `ADC16_Init()` function.

[2.1.0]

- New Features:
 - Supported KM series' new ADC reference voltage source, bandgap from PMC.

[2.0.3]

- Bug Fixes
 - Fixed IAR warning Pa082: the order of volatile access should be defined.

[2.0.2]

- Improvements
 - Used conversion control feature macro instead of that in IO map.

[2.0.1]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 16.4, 10.1, 13.2, 14.4 and 17.7.

[2.0.0]

- Initial version
-

CLOCK

[2.5.3]

- Bug Fixes
 - Fixed an issue that in `CLOCK_SetFbeMode()` C4 register not updated.

[2.5.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 18.1.

[2.5.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, rule 10.8, rule 12.2 and so on.

[2.5.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.
 - Fixed IAR warning Pa082 for the clock driver.

[2.4.0]

- New Features
 - Added two APIs to set slow and fast internal reference clock variable.

[2.3.0]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 10.4, rule 10.1, rule 10.6, rule 13.5, rule 10.8.
 - Fixed incorrect External Oscillator Configuration sequence and ensure oscillator configuration be executed before it be enabled.
- New Features
 - Added new API CLOCK_DelayAtLeastUs() implemented by DWT to allow users set delay in unit of microsecond.

[2.2.1]

- Bug Fixes
 - Fixed the issue that MCG could not switch to FEE/FBE/PBE modes when OSCERCLK clock not enabled.

[2.2.0]

- New Features
 - Updated CLOCK_SetFeiMode/CLOCK_SetFbiMode/CLOCK_BootToFeiMode() to support set MCG_C4[DMX32]=1 in FEI/FBI modes.
- Bug Fixes
 - Updated IP_CLOCKS array, remove unused gates and add missing gates.

[2.1.0]

- Other Changes
 - Merged fsl_mcg and fsl_osc into fsl_clock.

[2.0.0]

- Initial version.
-

CMP

[2.0.3]

- Improvements
 - Updated to clear CMP settings in DeInit function.

[2.0.2]

- Bug Fixes
 - Fixed the violations of MISRA 2012 rules:
 - * Rule 10.3

[2.0.1]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, rule 10.3, rule 10.1, rule 10.4 and rule 17.7.

[2.0.0]

- Initial version.
-

COMMON

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs InitCriticalSectionMeasurementContext, DisableGlobalIRQEx and EnableGlobalIRQEx so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irqs that mount under irqsteer interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with zephyr.

[2.4.0]

- New Features
 - Added EnableIRQWithPriority, IRQ_SetPriority, and IRQ_ClearPendingIRQ for ARM.
 - Added MSDK_EnableCpuCycleCounter, MSDK_GetCpuCycleCount for ARM.

[2.3.3]

- New Features
 - Added NETC into status group.

[2.3.2]

- Improvements
 - Make driver aarch64 compatible

[2.3.1]

- Bug Fixes
 - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
 - Added new feature macro switch “FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

CRC

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

DAC

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues:
 - * Rule 10.3, 10.8 and 17.7.

[2.0.1]

- Bug Fixes
 - Moved the default DAC_Enable(..., true) from DAC_Init() to the application code so that users can enable the DAC's output.

[2.0.0]

- Initial version.
-

DMAMUX

[2.1.2]

- Bug Fixes
 - Add macro FSL_DMAMUX_CHANNEL_NUM to calculate correct DMAMUX channel number when input EDAM channel number.

[2.1.1]

- Improvements
 - Add macro `FSL_FEATURE_DMAMUX_CHANNEL_NEEDS_ENDIAN_CONVERT` and `DMAMUX_CHANNEL_ENDIAN_CONVERTn` do channel endian convert.

[2.1.0]

- Improvements
 - Modify the type of parameter source from `uint32_t` to `int32_t` in the `DMA_MUX_SetSource`.

[2.0.5]

- Improvements
 - Added feature `FSL_FEATURE_DMAMUX_CHCFG_REGISTER_WIDTH` for the difference of CHCFG register width.

[2.0.4]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.0.3]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 10.4 and rule 10.3.

[2.0.2]

- New Features
 - Added an always-on enable feature to a DMA channel for ULP1 DMAMUX support.

[2.0.1]

- Bug Fixes
 - Fixed the build warning issue by changing the type of parameter source from `uint8_t` to `uint32_t` when setting DMA request source in `DMAMUX_SetSourceChange`.

[2.0.0]

- Initial version.
-

DSPI**[2.2.7]**

- Improvements
 - Added macros to disable some features.

[2.2.6]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API.

[2.2.5]

- Improvements
 - Initialized the EDMA configuration structure in the DSPI EDMA driver.

[2.2.4]

- Bug Fixes
 - Fixed bug that instance with shared TR/RX EDMA request cannot transfer 1 datawidth of data as master in single transfer.

[2.2.3]

- Improvements
 - Added macro of getting maximum transfer size using EDMA way.

[2.2.2]

- Bug Fixes
 - MISRA C-2012 issue fixed:
 - * Fixed rules, containing: 10.8, 10.3.
 - Fixed the build warning issue.
 - Fixed the bug that PCS would temporarily pull down for a while during master initialization.
 - Fixed compiling error of undefined identifier g_dspiDummyData.
 - Changed the type of kDSPI_AllStatusFlag and kDSPI_AllInterruptEnable from int to uint32_t to fix Pe068 warning of integer conversion.
 - Eliminated IAR Pa082 warning in DSPI_MasterTransferDMA.

[2.2.1]

- Bug Fixes
 - Fixed the bug for double execution of transfer complete callback in master interrupt transfer mode. In the interrupt routine, the DSPI interrupt may drop in the situation of the interrupt pending by itself while receiving the last frame, adding check to the transfer state to execute the callback function.
 - Fixed wrong logic in DSPI_SetFifoEnable().
 - MISRA C-2012 issue fixed.
 - * Fixed rules, containing: rule-12.1, rule-17.7, rule-16.4, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.1, rule-10.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3, and rule-8.5.

[2.2.0]

- New Features
 - Added gasket feature for SPI EDMA driver, which reduces one channel used in the EDMA master transfer. With this feature support, only two channels are needed. For example, if the gasket feature is supported, we could use the `DSPI_MasterTransferCreateHandleEDMA` function like below:
`DSPI_MasterTransferCreateHandleEDMA(EXAMPLE_DSPI_MASTER_BASEADDR, &g_dspi_edma_m_handle, DSPI_MasterUserCallback, &userData, &dspiEdmaMasterRxRegToRxDataHandle, NULL, &dspiEdmaMasterIntermediaryToTxRegHandle);`
 - Added dummy data setup API to allow users to configure the dummy data to be transferred.
 - Added new APIs for half-duplex transfer function. Users can send and receive data by one API in the polling/interrupt/EDMA way, and they can choose either to transmit first or to receive first. Additionally, the PCS pin can be configured as assert status in transmission (between transmit and receive) by setting the `isPcsAssertInTransfer` to true.

[2.1.4]

- Bug Fixes
 - DSPI EDMA driver: the DSPI instance has been separated, so the DMA request source can now transfer up to 32767 Bytes data in one `DSPI_MasterTransferEDMA()` transfer.

[2.1.3]

- Bug Fixes
 - DSPI EDMA driver can no longer support the case that the transfer data size is odd, but the `bitsPerFrame` is greater than 8.
- Improvements
 - Added `#ifndef/#endif` to allow users to change the default TX value at compile time.

[2.1.2]

- Bug Fixes
 - `DSPI_MasterTransferBlocking` function would hang in some corner cases (for example, some cases with `bitsPerFrame` is 4,6 and `kDSPI_MasterPcsContinuous` transfer mode).

[2.1.1]

- Bug Fixes
 - Set the EOQ (End Of Queue) bit to TRUE for the last transfer in transactional APIs.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.

[2.0.0]

- Initial version.
-

DSPI_EDMA

[2.2.7]

- Improvements
 - Added macro to disable slave functionality.

[2.2.6]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.2.5]

- Refer DSPI driver change log 2.0.0 to 2.4.1
-

EDMA

[2.4.5]

- Bug Fixes
 - Fixed memory convert would convert NULL as zero address issue.

[2.4.4]

- Bug Fixes
 - Fixed comments by replacing STCD with TCD
 - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.
 - Fixed violations of MISRA C-2012 rule 10.8,5.6.

[2.4.3]

- Improvements
 - Added FSL_FEATURE_MEMORY_HAS_ADDRESS_OFFSET to convert the address between system mapped address and dma quick access address.
- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt for the non scatter gather case.

[2.4.2]

- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt by correct the initial value of the header.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.4.1]

- Bug Fixes
 - Added clear CITER and BITER registers in `EDMA_AbortTransfer` to make sure the TCD registers in a correct state for next calling of `EDMA_SubmitTransfer`.
 - Removed the clear DONE status for ESG not enabled case to avoid DONE bit cleared unexpectedly.

[2.4.0]

- Improvements
 - Added api `EDMA_EnableContinuousChannelLinkMode` to support continuous link mode.
 - Added apis `EDMA_SetMajorOffsetConfig/EDMA_TcdSetMajorOffsetConfig` to support major loop address offset feature.
 - Added api `EDMA_EnableChannelMinorLoopMapping` for minor loop offset feature.
 - Removed the redundant IRQ Handler in edma driver.

[2.3.2]

- Improvements
 - Fixed HIS ccm issue in function `EDMA_PrepareTransferConfig`.
 - Fixed violations of MISRA C-2012 rule 11.6, 10.7, 10.3, 18.1.
- Bug Fixes
 - Added ACTIVE & BITER & CITER bitfields to determine the channel status to fixed the issue of the transfer request cannot submit by function `EDMA_SubmitTransfer` when channel is idle.

[2.3.1]

- Improvements
 - Added source/destination address alignment check.
 - Added driver IRQ handler support for multi DMA instance in one SOC.

[2.3.0]

- Improvements
 - Added new api `EDMA_PrepareTransferConfig` to allow different configurations of width and offset.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4, 10.1.

- Fixed the Coverity issue regarding out-of-bounds write.

[2.2.0]

- Improvements
 - Added peripheral-to-peripheral support in EDMA driver.

[2.1.9]

- Bug Fixes
 - Fixed MISRA issue: Rule 10.7 and 10.8 in function `EDMA_DisableChannelInterrupts` and `EDMA_SubmitTransfer`.
 - Fixed MISRA issue: Rule 10.7 in function `EDMA_EnableAsyncRequest`.

[2.1.8]

- Bug Fixes
 - Fixed incorrect channel preemption base address used in `EDMA_SetChannelPreemptionConfig` API which causes incorrect configuration of the channel preemption register.

[2.1.7]

- Bug Fixes
 - Fixed incorrect transfer size setting.
 - * Added 8 bytes transfer configuration and feature for RT series;
 - * Added feature to support 16 bytes transfer for Kinetis.
 - Fixed the issue that `EDMA_HandleIRQ` would go to incorrect branch when TCD was not used and callback function not registered.

[2.1.6]

- Bug Fixes
 - Fixed KW3X MISRA Issue.
 - * Rule 14.4, 10.8, 10.4, 10.7, 10.1, 10.3, 13.5, and 13.2.
- Improvements
 - Cleared the IRQ handler unavailable for specific platform with macro `FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SHARED_OFFSET`.

[2.1.5]

- Improvements
 - Improved EDMA IRQ handler to support half interrupt feature.

[2.1.4]

- Bug Fixes
 - Cleared enabled request, status during EDMA_Init for the case that EDMA is halted before reinitialization.

[2.1.3]

- Bug Fixes
 - Added clear DONE bit in IRQ handler to avoid overwrite TCD issue.
 - Optimized above solution for the case that transfer request occurs in callback.

[2.1.2]

- Improvements
 - Added interface to get next TCD address.
 - Added interface to get the unused TCD number.

[2.1.1]

- Improvements
 - Added documentation for eDMA data flow when scatter/gather is implemented for the EDMA_HandleIRQ API.
 - Updated and corrected some related comments in the EDMA_HandleIRQ API and edma_handle_t struct.

[2.1.0]

- Improvements
 - Changed the EDMA_GetRemainingBytes API into EDMA_GetRemainingMajorLoopCount due to eDMA IP limitation (see API comments/note for further details).

[2.0.5]

- Improvements
 - Added pubweak DriverIRQHandler for K32H844P (16 channels shared).

[2.0.4]

- Improvements
 - Added support for SoCs with multiple eDMA instances.
 - Added pubweak DriverIRQHandler for KL28T DMA1 and MCIMX7U5_M4.

[2.0.3]

- Bug Fixes
 - Fixed the incorrect pubweak IRQHandler name issue, which caused re-definition build errors when client set his/her own IRQHandler, by changing the 32-channel IRQHandler name to DriverIRQHandler.

[2.0.2]

- Bug Fixes
 - Fixed incorrect minorLoopBytes type definition in `_edma_transfer_config` struct, and defined `minorLoopBytes` as `uint32_t` instead of `uint16_t`.

[2.0.1]

- Bug Fixes
 - Fixed the eDMA callback issue (which did not check valid status) in `EDMA_HandleIRQ` API.

[2.0.0]

- Initial version.
-

EWM

[2.0.4]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules: 10.1, 10.3.

[2.0.2]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules: 10.3, 10.4.

[2.0.1]

- Bug Fixes
 - Fixed the hard fault in `EWM_Deinit`.

[2.0.0]

- Initial version.
-

FLASH

[3.2.0]

- New Feature
 - Basic support for FTFC

[3.1.3]

- New Feature
 - Support 512KB flash for Kinetis E serials.

[3.1.2]

- Bug Fixes — Remove redundant comments.

[3.1.1]

- Bug Fixes — MISRA C-2012 issue fixed: rule 10.3

[3.1.0]

- New Feature
 - Support erase flash asynchronously.

[3.0.2]

- Bug Fixes — MISRA C-2012 issue fixed: rule 8.4, 17.7, 10.4, 16.1, 21.15, 11.3, 10.7 — building warning -Wnull-dereference on arm compiler v6

[3.0.1]

- New Features
 - Added support FlexNVM alias for (kw37/38/39).

[3.0.0]

- Improvements
 - Reorganized FTFx flash driver source file.
 - Extracted flash cache driver from FTFx driver.
 - Extracted flexnvm flash driver from FTFx driver.

[2.3.1]

- Bug Fixes
 - Unified Flash IFR design from K3.
 - New encoding rule for K3 flash size.

[2.3.0]

- New Features
 - Added support for device with LP flash (K3S/G).
 - Added flash prefetch speculation APIs.
- Improvements
 - Refined flash_cache_clear function.
 - Reorganized the member of flash_config_t struct.

[2.2.0]

- New Features
 - Supported FTFL device in FLASH_Swap API.
 - Supported various pflash start addresses.
 - Added support for KV58 in cache clear function.
 - Added support for device with secondary flash (KW40).
- Bug Fixes
 - Compiled execute-in-ram functions as PIC binary code for driver use.
 - Added missed flexram properties.
 - Fixed unaligned variable issue for execute-in-ram function code array.

[2.1.0]

- Improvements
 - Updated coding style to align with KSDK 2.0.
 - Different-alignment-size support for pflash and flexnvm.
 - Improved the implementation of execute-in-ram functions.

[2.0.0]

- Initial version
-

FLEXBUS

[2.1.1]

- Bug Fixes
- MISRA C-2012 issue fixed: rule 10.3, 10.4, and 14.4.

[2.1.0]

- Bug Fixes
 - Added secondary wait states (SWS), which enabled flag into configuration structure, and updated FLEXBUS_Init() function according to SWS.
 - Fixed MISRA issues regarding rule 10.1/10.4.

[2.0.2]

- Bug Fixes
 - Removed dissociated chip clearing operation while initializing the FLEXBUS module. Only the associated chip's register will be cleared.

[2.0.1]

- Bug Fixes
 - Corrected FLEXBUS_Deinit() function to disable clock.

[2.0.0]

- Initial version.
-

FTM**[2.7.2]**

- Improvements
 - Add API FTM_ERRATA_010856 for ERR010856 workaround.

[2.7.1]

- Bug Fixes
 - Added function macro when accsee FLTCTRL register FSTATE bit to prevent access nonexistent register.
 - Added function macro to prevent access nonexistent FTM channel for API FTM_ConfigSinglePWM() and FTM_ConfigCombinePWM().

[2.7.0]

- Improvements
 - Support period dithering and edge dithering feature with new APIs:
 - * FTM_SetPeriodDithering()
 - * FTM_SetEdgeDithering()
 - Support get channel n output and input state feature with new APIs:
 - * FTM_GetChannelOutputState()
 - * FTM_GetChannelInputState()
 - Support configure deadtime for specific combined channel pair with new API:
 - * FTM_SetPairDeadTime()
 - Support filter clock prescale, fault output state.
 - Support new APIs to configure PWM and Modified Combine PWM:
 - * FTM_ConfigSinglePWM()
 - * FTM_ConfigCombinePWM()
 - Support new API to configure channel software output control:
 - * FTM_SetSoftwareOutputCtrl()
 - * FTM_GetSoftwareOutputValue()
 - * FTM_GetSoftwareOutputEnable()
 - Support new API to update FTM counter initial value, modulo value and chanle value:
 - * FTM_SetInitialModuloValue()
 - * FTM_SetChannelValue()

[2.6.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.6.0]

- Improvements
 - Added support to half and full cycle reload feature with new APIs:
 - * FTM_SetLdok()
 - * FTM_SetHalfCycPeriod()
 - * FTM_LoadFreq()
- Bug Fixes
 - Set the HWRSTCNT and SWRSTCNT bits to optional at initialization.

[2.5.0]

- Improvements
 - Added FTM_CalculateCounterClkDiv to help calculates the counter clock prescaler.
 - Modify FTM_UpdatePwmDutycycle API to make it return pwm duty cycles status.
- Bug Fixes
 - Fixed TPM_SetupPwm can't configure 100% center align combined PWM issues.

[2.4.1]

- Bug Fixes
 - Added function macro to determine if FTM instance has only basic features, to prevent access to protected register bits.

[2.4.0]

- Improvements
 - Added CNTIN register initialization in FTM_SetTimerPeriod API.
 - Added a new API to read the captured value of a FTM channel configured in capture mode:
 - * FTM_GetInputCaptureValue()

[2.3.0]

- Improvements
 - Added support of EdgeAligned/CenterAligned/Asymmetrical combine PWM mode in FTM_SetupPWM() and FTM_SetupPwmMode() APIs.
 - Remove kFTM_ComplementaryPwm from support PWM mode, and add new parameter "enableComplementary" in structure ftm_chnl_pwm_signal_param_t.
 - Rename FTM_SetupFault() API to FTM_SetupFaultInput() to avoid ambiguity.

[2.2.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 14.4 and 17.7.

[2.2.2]

- Bug Fixes
 - Fixed the issue that when FTM instance has only TPM features cannot be initialized by FTM_Init() function. By added function macro to assert FTM is TPM only instance.

[2.2.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.1, 10.3, 10.4, 10.6, 10.7 and 11.9.

[2.2.0]

- Bug Fixes
 - Fixed the issue of comparison between signed and unsigned integer expressions.
- Improvements
 - Added support of complementary mode in FTM_SetupPWM() and FTM_SetupPwmMode() APIs.
 - Added new parameter “enableDeadtime” in structure ftm_chnl_pwm_signal_param_t.

[2.1.1]

- Bug Fixes
 - Fixed COVERITY integer handing issue where the right operand of a left bit shift statement should not be a negative value. This appears in FTM_SetReloadPoints().

[2.1.0]

- Improvements
 - Added a new API FTM_SetupPwmMode() to allow the user to set the channel match value in units of timer ticks. New configure structure called ftm_chnl_pwm_config_param_t was added to configure the channel's PWM parameters. This API is similar with FTM_SetupPwm() API, but the new API will not set the timer period(MOD value), it will be useful for users to set the PWM parameters without changing the timer period.
- Bug Fixes
 - Added feature macro to enable/disable the external trigger source configuration.

[2.0.4]

- Improvements
 - Added a new API to enable DMA transfer:
 - * FTM_EnableDmaTransfer()

[2.0.3]

- Bug Fixes
 - Updated the FTM driver to enable fault input after configuring polarity.

[2.0.2]

- Improvements
 - Added support to Quad Decoder feature with new APIs:
 - * FTM_GetQuadDecoderFlags()
 - * FTM_SetQuadDecoderModuloValue()
 - * FTM_GetQuadDecoderCounterValue()
 - * FTM_ClearQuadDecoderCounterValue()

[2.0.1]

- Bug Fixes
 - Updated the FTM driver to fix write to ELSA and ELSB bits.
 - FTM combine mode: set the COMBINE bit before writing to CnV register.

[2.0.0]

- Initial version.
-

GPIO

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API GPIO_GetPinsDMARequestFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQS) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of _PinXXX() and _PortXXX.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “_PinConfigure” to “GPIO_PinInit”.
-

I2C**[2.0.10]**

- Bug Fixes
 - Fixed coverity issues.

[2.0.9]

- Bug Fixes
 - Fixed the MISRA-2012 violations.
 - * Fixed rule 8.4, 10.1, 10.4, 13.5, 20.8.

[2.0.8]

- Bug Fixes
 - Fixed the bug that DFEN bit of I2C Status register 2 could not be set in I2C_MasterInit.
 - MISRA C-2012 issue fixed: rule 14.2, 15.7, and 16.4.
 - Eliminated IAR Pa082 warnings from I2C_MasterTransferDMA and I2C_MasterTransferCallbackDMA by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 11.9, 14.4, 15.7, 17.7.
- Improvements
 - Improved timeout mechanism when waiting certain state in transfer API.
 - Updated the I2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.
 - Moved the master manually acknowledge byte operation into static function I2C_MasterAckByte.
 - Fixed control/status clean flow issue inside I2C_MasterReadBlocking to avoid potential issue that pending status is cleaned before it’s proceeded.

[2.0.7]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 11.9 ,15.7 ,14.4 ,10.4 ,10.8 ,10.3, 10.1, 10.6, 13.5, 11.3, 13.2, 17.7, 5.7, 8.3, 8.5, 11.1, 16.1.
 - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
 - Fixed variable redefine issue by moving i2cBases from fsl_i2c.h to fsl_i2c.c.
- Improvements
 - Added I2C_MASTER_FACK_CONTROL macro to enable FACK control for master transfer receive flow with IP supporting double buffer, then master could hold the SCL by manually setting TX AK/NAK during data transfer.

[2.0.6]

- Bug Fixes
 - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed by the subaddress.

[2.0.5]

- Improvements
 - Added I2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.

[2.0.4]

- Bug Fixes
 - Added a proper handle for transfer config flag kI2C_TransferNoStartFlag to support transmit with kI2C_TransferNoStartFlag flag. Support write only or write+read with no start flag; does not support read only with no start flag.

[2.0.3]

- Bug Fixes
 - Removed enableHighDrive member in the master/slave configuration structure because the operation to HDRS bit is useless, the user need to use DSE bit in port register to configure the high drive capability.
 - Added register reset operation in I2C_MasterInit and I2C_SlaveInit APIs. Fixed issue where I2C could not switch between master and slave mode.
 - Improved slave IRQ handler to handle the corner case that stop flag and address match flag come synchronously.

[2.0.2]

- Bug Fixes
 - Fixed issue in master receive and slave transmit mode with no stop flag. The master could not succeed to start next transfer because the master could not send out re-start signal.

- Fixed the out-of-order issue of data transfer due to memory barrier.
- Added hold time configuration for slave. By leaving the SCL divider and MULT reset values when configured to slave mode, the setup and hold time of the slave is then reduced outside of spec for lower baudrates. This can cause intermittent arbitration loss on the master side.
- New Features
 - Added address nak event for master.
 - Added general call event for slave.

[2.0.1]

- New Features
 - Added double buffer enable configuration for SoCs which have the DFEN bit in S2 register.
 - Added flexible transmit/receive buffer size support in I2C_SlaveHandleIRQ.
 - Added start flag clear, address match, and release bus operation in I2C_SlaveWrite/ReadBlocking API.
- Bug Fixes
 - Changed the kI2C_SlaveRepeatedStartEvent to kI2C_SlaveStartEvent.

[2.0.0]

- Initial version.
-

LLWU

[2.0.5]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.
 - Fixed the issue that function LLWU_SetExternalWakeupPinMode() does not work on 32-bit width platforms.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3, 10.4, 10.6, 10.7, 11.3.
 - Fixed issue that LLWU_ClearExternalWakeupPinFlag may clear other filter flags by mistake on platforms with 32-bit LLWU registers.

[2.0.3]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 16.4.

[2.0.2]

- Improvements
 - Corrected driver function LLWU_SetResetPinMode parameter name.
- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, 10.8, 10.4, 10.3.

[2.0.1]

- Other Changes
 - Updates for KL8x.

[2.0.0]

- Initial version.
-

LPTMR

[2.2.1]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated lptmr_prescaler_clock_select_t, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART**[2.9.2]**

- Bug Fixes
 - Fixed coverity issues.

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags `kLPUART_NoiseErrorInRxDataRegFlag` and `kLPUART_ParityErrorInRxDataRegFlag` with `kLPUART_NoiseErrorFlag` and `kLPUART_ParityErrorFlag`.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in `LPUART_TransferDMAHandleIRQ` and `LPUART_TransferEdmaHandleIRQ` to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in `lpuart_transfer_t`.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling `LPUART_TransferReceiveNonBlocking`, the received data count returned by `LPUART_TransferGetReceiveCount` is wrong.

[2.5.0]

- Bug Fixes
 - Added missing interrupt enable masks `kLPUART_Match1InterruptEnable` and `kLPUART_Match2InterruptEnable`.
 - Fixed bug in `LPUART_EnableInterrupts`, `LPUART_DisableInterrupts` and `LPUART_GetEnabledInterrupts` that the `BAUD[LBKDIE]` bit field should be soc specific.
 - Fixed bug in `LPUART_TransferHandleIRQ` that idle line interrupt should be disabled when rx data size is zero.
 - Deleted unused status flags `kLPUART_NoiseErrorInRxDataRegFlag` and `kLPUART_ParityErrorInRxDataRegFlag`, since firstly their function are the same as `kLPUART_NoiseErrorFlag` and `kLPUART_ParityErrorFlag`, secondly to obtain them one data word must be read out thus interfering with the receiving process.
 - Fixed bug in `LPUART_GetStatusFlags` that the `STAT[LBKDIF]`, `STAT[MA1F]` and `STAT[MA2F]` should be soc specific.
 - Fixed bug in `LPUART_ClearStatusFlags` that tx/rx FIFO is reset by mistake when clearing flags.

- Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
- Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
- Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
 - Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
 - Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
 - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
 - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements

- Added check for `kLPUART_TransmissionCompleteFlag` in `LPUART_WriteBlocking`, `LPUART_TransferHandleIRQ`, `LPUART_TransferSendDMACallback` and `LPUART_SendEDMACallback` to ensure all the data would be sent out to bus.
- Rounded up the calculated `sbr` value in `LPUART_SetBaudRate` and `LPUART_Init` to achieve more accurate baudrate setting. Changed `osr` from `uint32_t` to `uint8_t` since `osr`'s biggest value is 31.
- Modified `LPUART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using `LPUART_EnableTxDMA` and `LPUART_EnableRxDMA`.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `LPUART_TransferNonBlocking` function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.
 - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in `LPUART_RTOS_Init` struct from `rtos_lpuart_config` to `lpuart_rtos_config_t`.
- Bug Fixes

- Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may have a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0
-

MCM

[2.2.0]

- Improvements
 - Support platforms with less features.

[2.1.0]

- Others
 - Remove byteID from mcm_lmem_fault_attribute_t for document update.

[2.0.0]

- Initial version.
-

PDB**[2.0.4]**

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1 and 10.4.

[2.0.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 17.7.

[2.0.2]

- Improvement:
 - Used macros in feature file instead of that in IO map.

[2.0.1]

- Changed PDB register base array to const.

[2.0.0]

- Initial version.
-

PIT**[2.2.0]**

- Bug Fixes
 - According to ERR050763, PIT_LDVAL_STAT register is not reliable in dynamic load mode, so remove the status check in PIT_SetRtiTimerPeriod which added since 2.1.1.
 - Removed not used bit PIT_RTI_TCTRL_CHN_MASK.
- Improvements
 - Added more guide about get RTI load status in PIT_SetRtiTimerPeriod's API comment.
 - Change PIT_RTI_Deinit to inline API.
 - Ensure PIT peripheral clock enabled in PIT_RTI_Init.
- New Features
 - Added PIT_ClearRtiSyncStatus API to clear the RTI_LDVAL_STAT register.

[2.1.1]

- Bug Fixes
 - Enable PIT when using RTI to ensure RTI can work properly in debug mode.
- Improvements
 - Added status check in PIT_SetRtiTimerPeriod to ensure the load value is synchronized into the RTI clock domain.
 - Added note for PIT_RTI_Init to remind users wait RTI sync.

[2.1.0]

- New Features
 - Support RTI (Real Time Interrupt) timer.

[2.0.5]

- Improvements
 - Support workaround for ERR007914. This workaround guarantee the write to MCR register is not ignored.

[2.0.4]

- Bug Fixes
 - Fixed PIT_SetTimerPeriod implementation, the load value trigger should be PIT clock cycles minus 1.

[2.0.3]

- Bug Fixes
 - Clear all status bits for all channels to make sure the status of all TCTRL registers is clean.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Bug Fixes
 - Cleared timer enable bit for all channels in function PIT_Init() to make sure all channels stay in disable status before setting other configurations.
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, rule 10.4.

[2.0.0]

- Initial version.
-

PMC**[2.0.3]**

- Bug Fixes
 - Fixed the violation of MISRA C-2012 rule 11.3.

[2.0.2]

- Bug Fixes
 - Fixed the violations of MISRA 2012 rules:
 - * Rule 10.3.

[2.0.1]

- Bug Fixes
 - Fixed MISRA issues.
 - * Rule 10.8, Rule 10.3.

[2.0.0]

- Initial version.
-

PORT**[2.5.1]**

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4□11.3□11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.
-

RCM

[2.0.4]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rule 10.3

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules.

[2.0.2]

- Bug Fixes
 - Fixed MISRA issue.
 - * Rule 10.8, rule 10.1, rule 13.2, rule 3.1.

[2.0.1]

- Bug Fixes
 - Fixed kRCM_SourceSw bit shift issue.

[2.0.0]

- Initial version.
-

RNGA**[2.0.2]**

- Bug fix:
 - Fix MISRA issue.

[2.0.1]

- Bug fix:
 - Fixed C++ build warning in RNGA driver.

[2.0.0]

- Initial version.
-

RTC**[2.3.3]**

- Bug Fixes
 - Fix RTC_GetDatetime function validating datetime issue.

[2.3.2]

- Improvements
 - Handle errata 010716: Disable the counter before setting alarm register and then reen-able the counter.

[2.3.1]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.3.0]

- Improvements
 - Added API RTC_EnableLPOClock to set 1kHz LPO clock.
 - Added API RTC_EnableCrystalClock to replace API RTC_SetClockSource.

[2.2.2]

- Improvements
 - Refine _rtc_interrupt_enable order.

[2.2.1]

- Bug Fixes
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of bit field mask checking.
 - Fixed the issue of hard code in RTC_Init.

[2.2.0]

- Bug Fixes
 - Fixed MISRA C-2012 issue.
 - * Fixed rule contain: rule-17.7, rule-14.4, rule-10.4, rule-10.7, rule-10.1, rule-10.3.
 - Fixed central repository code formatting issue.
- Improvements
 - Added an API for enabling wakeup pin.

[2.1.0]

- Improvements
 - Added feature macro check for many features.

[2.0.0]

- Initial version.
-

SAI

[2.4.8]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.4.7]

- Added conditional support for bit clock swap feature
- Added common IRQ handler entry SAI_DriverIRQHandler.

[2.4.6]

- Bug Fixes
 - Fixed the IAR build warning.

[2.4.5]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.4.4]

- Bug Fixes
 - Fixed enumeration sai_fifo_combine_t - add RX configuration.

[2.4.3]

- Bug Fixes
 - Fixed enumeration sai_fifo_combine_t value configuration issue.

[2.4.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.4.1]

- Bug Fixes
 - Fixed bitWidth incorrectly assigned issue.

[2.4.0]

- Improvements
 - Removed deprecated APIs.

[2.3.8]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.3.7]

- Improvements
 - Change feature “FSL_FEATURE_SAI_FIFO_COUNT” to “FSL_FEATURE_SAI_HAS_FIFO”.
 - Added feature “FSL_FEATURE_SAI_FIFO_COUNTn(x)” to align SAI fifo count function with IP in function

[2.3.6]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 5.6.

[2.3.5]

- Improvements
 - Make driver to be aarch64 compatible.

[2.3.4]

- Bug Fixes
 - Corrected the fifo combine feature macro used in driver.

[2.3.3]

- Bug Fixes
 - Added bit clock polarity configuration when sai act as slave.
 - Fixed out of bound access coverity issue.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.3.2]

- Bug Fixes
 - Corrected the frame sync configuration when sai act as slave.

[2.3.1]

- Bug Fixes
 - Corrected the peripheral name in function SAI0_DriverIRQHandler.
 - Fixed violations of MISRA C-2012 rule 17.7.

[2.3.0]

- Bug Fixes
 - Fixed the build error caused by the SOC has no fifo feature.

[2.2.3]

- Bug Fixes
 - Corrected the peripheral name in function SAI0_DriverIRQHandler.

[2.2.2]

- Bug Fixes
 - Fixed the issue of MISRA 2004 rule 9.3.
 - Fixed sign-compare warning.
 - Fixed the PA082 build warning.
 - Fixed sign-compare warning.
 - Fixed violations of MISRA C-2012 rule 10.3,17.7,10.4,8.4,10.7,10.8,14.4,17.7,11.6,10.1,10.6,8.4,14.3,16.4,18.2
 - Allow to reset Rx or Tx FIFO pointers only when Rx or Tx is disabled.
- Improvements
 - Added 24bit raw audio data width support in sai sdma driver.
 - Disabled the interrupt/DMA request in the SAI_Init to avoid generates unexpected sai FIFO requests.

[2.2.1]

- Improvements
 - Added mclk post divider support in function SAI_SetMasterClockDivider.
 - Removed useless configuration code in SAI_RxSetSerialDataConfig.
- Bug Fixes
 - Fixed the SAI SDMA driver build issue caused by the wrong structure member name used in the function SAI_TransferRxSetConfigSDMA/SAI_TransferTxSetConfigSDMA.
 - Fixed BAD BIT SHIFT OPERATION issue caused by the FSL_FEATURE_SAI_CHANNEL_COUNTn.
 - Applied ERR05144: not set FCONT = 1 when TMR > 0, otherwise the TX may not work.

[2.2.0]

- Improvements
 - Added new APIs for parameters collection and simplified user interfaces:
 - * SAI_Init
 - * SAI_SetMasterClockConfig
 - * SAI_TxSetBitClockRate
 - * SAI_TxSetSerialDataConfig
 - * SAI_TxSetFrameSyncConfig
 - * SAI_TxSetFifoConfig
 - * SAI_TxSetBitclockConfig
 - * SAI_TxSetConfig
 - * SAI_TxSetTransferConfig
 - * SAI_RxSetBitClockRate
 - * SAI_RxSetSerialDataConfig
 - * SAI_RxSetFrameSyncConfig
 - * SAI_RxSetFifoConfig

- * SAI_RxSetBitclockConfig
- * SAI_RXSetConfig
- * SAI_RxSetTransferConfig
- * SAI_GetClassicI2SConfig
- * SAI_GetLeftJustifiedConfig
- * SAI_GetRightJustifiedConfig
- * SAI_GetTDMConfig

[2.1.9]

- Improvements
 - Improved SAI driver comment for clock polarity.
 - Added enumeration for SAI for sample inputs on different edges.
 - Changed FSL_FEATURE_SAI_CHANNEL_COUNT to FSL_FEATURE_SAI_CHANNEL_COUNTn(base) for the difference between the different SAI instances.
- Added new APIs:
 - SAI_TxSetBitClockDirection
 - SAI_RxSetBitClockDirection
 - SAI_RxSetFrameSyncDirection
 - SAI_TxSetFrameSyncDirection

[2.1.8]

- Improvements
 - Added feature macro test for the sync mode2 and mode 3.
 - Added feature macro test for masterClockHz in sai_transfer_format_t.

[2.1.7]

- Improvements
 - Added feature macro test for the mclkSource member in sai_config_t.
 - Changed “FSL_FEATURE_SAI5_SAI6_SHARE_IRQ” to “FSL_FEATURE_SAI_SAI5_SAI6_SHARE_IRQ”.
 - Added #ifndef #endif check for SAI_XFER_QUEUE_SIZE to allow redefinition.
- Bug Fixes
 - Fixed build error caused by feature macro test for mclkSource.

[2.1.6]

- Improvements
 - Added feature macro test for mclkSourceClockHz check.
 - Added bit clock source name for general devices.
- Bug Fixes
 - Fixed incorrect channel numbers setting while calling RX/TX set format together.

[2.1.5]

- Bug Fixes
 - Corrected SAI3 driver IRQ handler name.
 - Added I2S4/5/6 IRQ handler.
 - Added base in handler structure to support different instances sharing one IRQ number.
- New Features
 - Updated SAI driver for MCR bit MICS.
 - Added 192 KHZ/384 KHZ in the sample rate enumeration.
 - Added multi FIFO interrupt/SDMA transfer support for TX/RX.
 - Added an API to read/write multi FIFO data in a blocking method.
 - Added bclk bypass support when bclk is same with mclk.

[2.1.4]

- New Features
 - Added an API to enable/disable auto FIFO error recovery in platforms that support this feature.
 - Added an API to set data packing feature in platforms which support this feature.

[2.1.3]

- New Features
 - Added feature to make I2S frame sync length configurable according to bitWidth.

[2.1.2]

- Bug Fixes
 - Added 24-bit support for SAI eDMA transfer. All data shall be 32 bits for send/receive, as eDMA cannot directly handle 3-Byte transfer.

[2.1.1]

- Improvements
 - Reduced code size while not using transactional API.

[2.1.0]

- Improvements
 - API name changes:
 - * SAI_GetSendRemainingBytes -> SAI_GetSentCount.
 - * SAI_GetReceiveRemainingBytes -> SAI_GetReceivedCount.
 - * All names of transactional APIs were added with “Transfer” prefix.
 - * All transactional APIs use base and handle as input parameter.
 - * Unified the parameter names.

- Bug Fixes
 - Fixed WLC bug while reading TCSR/RCSR registers.
 - Fixed MOE enable flow issue. Moved MOE enable after MICS settings in SAI_TxInit/SAI_RxInit.

[2.0.0]

- Initial version.
-

SAI_EDMA

[2.7.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.7.2]

- Improvements
 - Add macros `MCUX_SDK_SAI_EDMA_TX_ENABLE_INTERNAL` and `MCUX_SDK_SAI_EDMA_RX_ENABLE_INTERNAL` to let the user decide whether to enable SAI when calling `SAI_TransferSendEDMA/SAI_TransferReceiveEDMA`.

[2.7.1]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.7.0]

- Improvements
 - Updated api `SAI_TransferReceiveEDMA` to support voice channel block interleave transfer.
 - Updated api `SAI_TransferSendEDMA` to support voice channel block interleave transfer.
 - Added new api `SAI_TransferSetInterleaveType` to support channel interleave type configurations.

[2.6.0]

- Improvements
 - Removed deprecated APIs.

[2.5.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 20.7.

[2.5.0]

- Improvements
 - Added new api SAI_TransferSendLoopEDMA/SAI_TransferReceiveLoopEDMA to support loop transfer.
 - Added multi sai channel transfer support.

[2.4.0]

- Improvements
 - Added new api SAI_TransferGetValidTransferSlotsEDMA which can be used to get valid transfer slot count in the sai edma transfer queue.
 - Deprecated the api SAI_TransferRxSetFormatEDMA and SAI_TransferTxSetFormatEDMA.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3,10.4.

[2.3.2]

- Refer SAI driver change log 2.1.0 to 2.3.2
-

SIM**[2.2.0]**

- Improvements
 - Added API to trigger TRGMUX.

[2.1.3]

- Improvements
 - Updated function SIM_GetUniqueId to support different register names.

[2.1.2]

- Bug Fixes
 - Fixed SIM_GetUniqueId bug that could not get UIDH.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.4

[2.1.0]

- Improvements
 - Added new APIs: SIM_GetRfAddr() and SIM_EnableSystickClock().

[2.0.0]

- Initial version.
-

SMC

[2.0.7]

- Bug Fixes
 - Fixed MISRA-2012 issue 10.3.

[2.0.6]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule 10.3, rule 11.3.

[2.0.5]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule 15.7, rule 14.4, rule 10.3, rule 10.1, rule 10.4.

[2.0.4]

- Bug Fixes
 - When entering stop modes, used RAM function for the flash synchronization issue. Application should make sure that, the RW data of fsl_smc.c is located in memory region which is not powered off in stop modes.

[2.0.3]

- Improvements
 - Added APIs SMC_PreEnterStopModes, SMC_PreEnterWaitModes, SMC_PostExitWaitModes, and SMC_PostExitStopModes.

[2.0.2]

- Bug Fixes
 - Added DSB before WFI while ISB after WFI.
- Other Changes
 - Updated SMC_SetPowerModeVlpw implementation.

[2.0.1]

- Other Changes
 - Updated for KL8x.

[2.0.0]

- Initial version.
-

UART**[2.5.1]**

- Improvements
 - Use separate data for TX and RX in `uart_transfer_t`.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling `UART_TransferReceiveNonBlocking`, the received data count returned by `UART_TransferGetReceiveCount` is wrong.

[2.5.0]

- New Features
 - Added APIs `UART_GetRxFifoCount`/`UART_GetTxFifoCount` to get rx/tx FIFO data count.
 - Added APIs `UART_SetRxFifoWatermark`/`UART_SetTxFifoWatermark` to set rx/tx FIFO water mark.
- Bug Fixes
 - Fixed bug of race condition during UART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable registers.
 - Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.0]

- Bug Fixes
 - Fixed the bug that, when framing/parity/noise/overflow flag or idle line detect flag is set, receive FIFO should be flushed to avoid FIFO pointer being in unknown state, since FIFO has no valid data.
- Improvements
 - Modified `UART_TransferHandleIRQ` so that `txState` will be set to idle only when all data has been sent out to bus.
 - Modified `UART_TransferGetSendCount` so that this API returns the real byte count that UART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.0]

- New Features
 - Added UART hardware FIFO enable/disable API.
- Improvements
 - Added check for `kUART_TransmissionCompleteFlag` in `UART_TransferHandleIRQ`, `UART_SendEDMACallback` and `UART_TransferSendDMACallback` to ensure all the data would be sent out to bus.
- Bug Fixes
 - Eliminated IAR Pa082 warnings from `UART_TransferGetRxRingBufferLength`, `UART_GetEnabledInterrupts`, `UART_GetStatusFlags` and `UART_TransferHandleIRQ`.
 - Added code in `UART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 14.4, 11.6, 17.7.

[2.1.6]

- Bug Fixes
 - Fixed the issue of register's being in repeatedly reading status while performing the IRQ routine.

[2.1.5]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `UART_TransferNonBlocking` function. If an idle line is detected, a callback will be triggered with status `kStatus_UART_IdleLineDetected` returned. This feature may be useful when the number of received bytes is less than the expected receive data size. Before triggering the callback, data in the FIFO is read out (if it has FIFO), and no interrupt will be disabled except for the case that the receive data size reaches 0.
 - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, you can set the watermark value to whatever you want (should not be bigger than the RX FIFO size). Data is then received and a callback will be triggered when data receive ends.

[2.1.4]

- Improvements
 - Changed parameter type in `UART_RTOS_Init()` struct `rtos_uart_config` → `uart_rtos_config_t`.
- Bug Fixes
 - Disabled UART receive interrupt instead of global interrupt when reading data from ring buffer. With ring buffer used, receive nonblocking will disable global interrupt to protect the ring buffer. This has a negative effect on other IPs using interrupt.

[2.1.3]

- New Features
 - Added RX framing error and parity error status check when using interrupt transfer.

[2.1.2]

- Bug Fixes
 - Fixed baud rate fine adjust bug to make the computed baud rate more accurate.

[2.1.1]

- Bug Fixes
 - Removed needless check of event flags and assert in UART_RTOS_Receive.
 - Always waited for RX event flag in UART_RTOS_Receive.

[2.1.0]

- Improvements
 - Added transactional API.

[2.0.0]

- Initial version.
-

UART_EDMA**[2.5.2]**

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.5.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.5.0]

- Refer UART driver change log 2.1.0 to 2.5.0
-

VREF**[2.1.3]**

- Improvements
 - Add timeout for APIs with dfmea issues.

[2.1.2]

- Bug Fixes
 - Fixed the violation of MISRA-2012 rule 10.3.
 - Fixed MISRA C-2012 rule 10.3, rule 10.4 violation.

[2.1.1]

- Bug Fixes
 - MISRA-2012 issue fixed.
 - * Fixed rules containing: rule-10.4, rule-10.3, rule-10.1.

[2.1.0]

- Improvements
 - Added new functions to support L5K board: added VREF_SetTrim2V1Val() and VREF_GetTrim2V1Val() functions to supply 2V1 output mode.

[2.0.0]

- Initial version.
-

WDOG

[2.0.2]

- Improvements
 - WDG_Init() adds a 256 bus clock delay for WCT window finish.

[2.0.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, 10.6, 10.7 11.9 and 17.7.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MK22F51212](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 Multicore

[Multicore SDK](#)

1.7.2 FreeMASTER

[freemaster](#)

1.7.3 FreeRTOS

[FreeRTOS](#)

1.7.4 File systemFatfs

[FatFs](#)

Chapter 2

MK22F51212

2.1 ADC16: 16-bit SAR Analog-to-Digital Converter Driver

`void ADC16_Init(ADC_Type *base, const adc16_config_t *config)`

Initializes the ADC16 module.

Parameters

- `base` – ADC16 peripheral base address.
- `config` – Pointer to configuration structure. See “*adc16_config_t*”.

`void ADC16_Deinit(ADC_Type *base)`

De-initializes the ADC16 module.

Parameters

- `base` – ADC16 peripheral base address.

`void ADC16_GetDefaultConfig(adc16_config_t *config)`

Gets an available pre-defined settings for the converter’s configuration.

This function initializes the converter configuration structure with available settings. The default values are as follows.

```
config->referenceVoltageSource = kADC16_ReferenceVoltageSourceVref;
config->clockSource            = kADC16_ClockSourceAsynchronousClock;
config->enableAsynchronousClock = false;
config->clockDivider            = kADC16_ClockDivider8;
config->resolution              = kADC16_ResolutionSE12Bit;
config->longSampleMode          = kADC16_LongSampleDisabled;
config->enableHighSpeed         = false;
config->enableLowPower          = false;
config->enableContinuousConversion = false;
```

Parameters

- `config` – Pointer to the configuration structure.

`status_t ADC16_DoAutoCalibration(ADC_Type *base)`

Automates the hardware calibration.

This auto calibration helps to adjust the plus/minus side gain automatically. Execute the calibration before using the converter. Note that the hardware trigger should be used during the calibration.

Parameters

- `base` – ADC16 peripheral base address.

Return values

- `kStatus_Success` – Calibration is done successfully.
- `kStatus_Fail` – Calibration has failed.

Returns

Execution status.

`static inline void ADC16_SetOffsetValue(ADC_Type *base, int16_t value)`

Sets the offset value for the conversion result.

This offset value takes effect on the conversion result. If the offset value is not zero, the reading result is subtracted by it. Note, the hardware calibration fills the offset value automatically.

Parameters

- `base` – ADC16 peripheral base address.
- `value` – Setting offset value.

`static inline void ADC16_EnableDMA(ADC_Type *base, bool enable)`

Enables generating the DMA trigger when the conversion is complete.

Parameters

- `base` – ADC16 peripheral base address.
- `enable` – Switcher of the DMA feature. “true” means enabled, “false” means not enabled.

`static inline void ADC16_EnableHardwareTrigger(ADC_Type *base, bool enable)`

Enables the hardware trigger mode.

Parameters

- `base` – ADC16 peripheral base address.
- `enable` – Switcher of the hardware trigger feature. “true” means enabled, “false” means not enabled.

`void ADC16_SetChannelMuxMode(ADC_Type *base, adc16_channel_mux_mode_t mode)`

Sets the channel mux mode.

Some sample pins share the same channel index. The channel mux mode decides which pin is used for an indicated channel.

Parameters

- `base` – ADC16 peripheral base address.
- `mode` – Setting channel mux mode. See “`adc16_channel_mux_mode_t`”.

`void ADC16_SetHardwareCompareConfig(ADC_Type *base, const
adc16_hardware_compare_config_t *config)`

Configures the hardware compare mode.

The hardware compare mode provides a way to process the conversion result automatically by using hardware. Only the result in the compare range is available. To compare the range, see “`adc16_hardware_compare_mode_t`” or the appropriate reference manual for more information.

Parameters

- `base` – ADC16 peripheral base address.

- `config` – Pointer to the “`adc16_hardware_compare_config_t`” structure. Passing “NULL” disables the feature.

`void ADC16_SetHardwareAverage(ADC_Type *base, adc16_hardware_average_mode_t mode)`

Sets the hardware average mode.

The hardware average mode provides a way to process the conversion result automatically by using hardware. The multiple conversion results are accumulated and averaged internally making them easier to read.

Parameters

- `base` – ADC16 peripheral base address.
- `mode` – Setting the hardware average mode. See “`adc16_hardware_average_mode_t`”.

`void ADC16_SetPGAConfig(ADC_Type *base, const adc16_pga_config_t *config)`

Configures the PGA for the converter’s front end.

Parameters

- `base` – ADC16 peripheral base address.
- `config` – Pointer to the “`adc16_pga_config_t`” structure. Passing “NULL” disables the feature.

`uint32_t ADC16_GetStatusFlags(ADC_Type *base)`

Gets the status flags of the converter.

Parameters

- `base` – ADC16 peripheral base address.

Returns

Flags’ mask if indicated flags are asserted. See “`_adc16_status_flags`”.

`void ADC16_ClearStatusFlags(ADC_Type *base, uint32_t mask)`

Clears the status flags of the converter.

Parameters

- `base` – ADC16 peripheral base address.
- `mask` – Mask value for the cleared flags. See “`_adc16_status_flags`”.

`static inline void ADC16_EnableAsynchronousClockOutput(ADC_Type *base, bool enable)`

Enable/disable ADC Asynchronous clock output to other modules.

Parameters

- `base` – ADC16 peripheral base address.
- `enable` – Used to enable/disable ADC ADACK output.
 - **true** Asynchronous clock and clock output is enabled regardless of the state of the ADC.
 - **false** Asynchronous clock output disabled, asynchronous clock is enabled only if it is selected as input clock and a conversion is active.

`void ADC16_SetChannelConfig(ADC_Type *base, uint32_t channelGroup, const adc16_channel_config_t *config)`

Configures the conversion channel.

This operation triggers the conversion when in software trigger mode. When in hardware trigger mode, this API configures the channel while the external trigger source helps to trigger the conversion.

Note that the “Channel Group” has a detailed description. To allow sequential conversions of the ADC to be triggered by internal peripherals, the ADC has more than one group of status and control registers, one for each conversion. The channel group parameter indicates which group of registers are used, for example, channel group 0 is for Group A registers and channel group 1 is for Group B registers. The channel groups are used in a “ping-pong” approach to control the ADC operation. At any point, only one of the channel groups is actively controlling ADC conversions. The channel group 0 is used for both software and hardware trigger modes. Channel group 1 and greater indicates multiple channel group registers for use only in hardware trigger mode. See the chip configuration information in the appropriate MCU reference manual for the number of SC1n registers (channel groups) specific to this device. Channel group 1 or greater are not used for software trigger operation. Therefore, writing to these channel groups does not initiate a new conversion. Updating the channel group 0 while a different channel group is actively controlling a conversion is allowed and vice versa. Writing any of the channel group registers while that specific channel group is actively controlling a conversion aborts the current conversion.

Parameters

- base – ADC16 peripheral base address.
- channelGroup – Channel group index.
- config – Pointer to the “adc16_channel_config_t” structure for the conversion channel.

```
static inline uint32_t ADC16_GetChannelConversionValue(ADC_Type *base, uint32_t
                                                    channelGroup)
```

Gets the conversion value.

Parameters

- base – ADC16 peripheral base address.
- channelGroup – Channel group index.

Returns

Conversion value.

```
uint32_t ADC16_GetChannelStatusFlags(ADC_Type *base, uint32_t channelGroup)
```

Gets the status flags of channel.

Parameters

- base – ADC16 peripheral base address.
- channelGroup – Channel group index.

Returns

Flags’ mask if indicated flags are asserted. See “_adc16_channel_status_flags”.

```
FSL_ADC16_DRIVER_VERSION
```

ADC16 driver version 2.3.0.

```
enum _adc16_channel_status_flags
```

Channel status flags.

Values:

```
enumerator kADC16_ChannelConversionDoneFlag
```

Conversion done.

```
enum _adc16_status_flags
```

Converter status flags.

Values:

enumerator kADC16_ActiveFlag

Converter is active.

enumerator kADC16_CalibrationFailedFlag

Calibration is failed.

enum _adc_channel_mux_mode

Channel multiplexer mode for each channel.

For some ADC16 channels, there are two pin selections in channel multiplexer. For example, ADC0_SE4a and ADC0_SE4b are the different channels that share the same channel number.

Values:

enumerator kADC16_ChannelMuxA

For channel with channel mux a.

enumerator kADC16_ChannelMuxB

For channel with channel mux b.

enum _adc16_clock_divider

Clock divider for the converter.

Values:

enumerator kADC16_ClockDivider1

For divider 1 from the input clock to the module.

enumerator kADC16_ClockDivider2

For divider 2 from the input clock to the module.

enumerator kADC16_ClockDivider4

For divider 4 from the input clock to the module.

enumerator kADC16_ClockDivider8

For divider 8 from the input clock to the module.

enum _adc16_resolution

Converter's resolution.

Values:

enumerator kADC16_Resolution8or9Bit

Single End 8-bit or Differential Sample 9-bit.

enumerator kADC16_Resolution12or13Bit

Single End 12-bit or Differential Sample 13-bit.

enumerator kADC16_Resolution10or11Bit

Single End 10-bit or Differential Sample 11-bit.

enumerator kADC16_ResolutionSE8Bit

Single End 8-bit.

enumerator kADC16_ResolutionSE12Bit

Single End 12-bit.

enumerator kADC16_ResolutionSE10Bit

Single End 10-bit.

enumerator kADC16_ResolutionDF9Bit

Differential Sample 9-bit.

enumerator kADC16__ResolutionDF13Bit
Differential Sample 13-bit.

enumerator kADC16__ResolutionDF11Bit
Differential Sample 11-bit.

enum __adc16__clock__source
Clock source.

Values:

enumerator kADC16__ClockSourceAlt0
Selection 0 of the clock source.

enumerator kADC16__ClockSourceAlt1
Selection 1 of the clock source.

enumerator kADC16__ClockSourceAlt2
Selection 2 of the clock source.

enumerator kADC16__ClockSourceAlt3
Selection 3 of the clock source.

enumerator kADC16__ClockSourceAsynchronousClock
Using internal asynchronous clock.

enum __adc16__long__sample__mode
Long sample mode.

Values:

enumerator kADC16__LongSampleCycle24
20 extra ADCK cycles, 24 ADCK cycles total.

enumerator kADC16__LongSampleCycle16
12 extra ADCK cycles, 16 ADCK cycles total.

enumerator kADC16__LongSampleCycle10
6 extra ADCK cycles, 10 ADCK cycles total.

enumerator kADC16__LongSampleCycle6
2 extra ADCK cycles, 6 ADCK cycles total.

enumerator kADC16__LongSampleDisabled
Disable the long sample feature.

enum __adc16__reference__voltage__source
Reference voltage source.

Values:

enumerator kADC16__ReferenceVoltageSourceVref
For external pins pair of VrefH and VrefL.

enumerator kADC16__ReferenceVoltageSourceValt
For alternate reference pair of ValtH and ValtL.

enum __adc16__hardware__average__mode
Hardware average mode.

Values:

enumerator kADC16__HardwareAverageCount4
For hardware average with 4 samples.

enumerator kADC16__HardwareAverageCount8

For hardware average with 8 samples.

enumerator kADC16__HardwareAverageCount16

For hardware average with 16 samples.

enumerator kADC16__HardwareAverageCount32

For hardware average with 32 samples.

enumerator kADC16__HardwareAverageDisabled

Disable the hardware average feature.

enum _adc16__hardware__compare__mode

Hardware compare mode.

Values:

enumerator kADC16__HardwareCompareMode0

x < value1.

enumerator kADC16__HardwareCompareMode1

x > value1.

enumerator kADC16__HardwareCompareMode2

if value1 <= value2, then x < value1 || x > value2; else, value1 > x > value2.

enumerator kADC16__HardwareCompareMode3

if value1 <= value2, then value1 <= x <= value2; else x >= value1 || x <= value2.

enum _adc16__pga__gain

PGA's Gain mode.

Values:

enumerator kADC16__PGAGainValueOf1

For amplifier gain of 1.

enumerator kADC16__PGAGainValueOf2

For amplifier gain of 2.

enumerator kADC16__PGAGainValueOf4

For amplifier gain of 4.

enumerator kADC16__PGAGainValueOf8

For amplifier gain of 8.

enumerator kADC16__PGAGainValueOf16

For amplifier gain of 16.

enumerator kADC16__PGAGainValueOf32

For amplifier gain of 32.

enumerator kADC16__PGAGainValueOf64

For amplifier gain of 64.

typedef enum _adc_channel_mux_mode adc16_channel_mux_mode_t

Channel multiplexer mode for each channel.

For some ADC16 channels, there are two pin selections in channel multiplexer. For example, ADC0_SE4a and ADC0_SE4b are the different channels that share the same channel number.

typedef enum _adc16_clock_divider adc16_clock_divider_t

Clock divider for the converter.

```
typedef enum _adc16_resolution adc16_resolution_t
    Converter's resolution.

typedef enum _adc16_clock_source adc16_clock_source_t
    Clock source.

typedef enum _adc16_long_sample_mode adc16_long_sample_mode_t
    Long sample mode.

typedef enum _adc16_reference_voltage_source adc16_reference_voltage_source_t
    Reference voltage source.

typedef enum _adc16_hardware_average_mode adc16_hardware_average_mode_t
    Hardware average mode.

typedef enum _adc16_hardware_compare_mode adc16_hardware_compare_mode_t
    Hardware compare mode.

typedef enum _adc16_pga_gain adc16_pga_gain_t
    PGA's Gain mode.

typedef struct _adc16_config adc16_config_t
    ADC16 converter configuration.

typedef struct _adc16_hardware_compare_config adc16_hardware_compare_config_t
    ADC16 Hardware comparison configuration.

typedef struct _adc16_channel_config adc16_channel_config_t
    ADC16 channel conversion configuration.

typedef struct _adc16_pga_config adc16_pga_config_t
    ADC16 programmable gain amplifier configuration.

struct _adc16_config
    #include <fsl_adc16.h> ADC16 converter configuration.
```

Public Members

```
adc16_reference_voltage_source_t referenceVoltageSource
    Select the reference voltage source.

adc16_clock_source_t clockSource
    Select the input clock source to converter.

bool enableAsynchronousClock
    Enable the asynchronous clock output.

adc16_clock_divider_t clockDivider
    Select the divider of input clock source.

adc16_resolution_t resolution
    Select the sample resolution mode.

adc16_long_sample_mode_t longSampleMode
    Select the long sample mode.

bool enableHighSpeed
    Enable the high-speed mode.

bool enableLowPower
    Enable low power.
```

bool enableContinuousConversion

Enable continuous conversion mode.

adc16_hardware_average_mode_t hardwareAverageMode

Set hardware average mode.

struct __adc16_hardware_compare_config

#include <fsl_adc16.h> ADC16 Hardware comparison configuration.

Public Members

adc16_hardware_compare_mode_t hardwareCompareMode

Select the hardware compare mode. See “adc16_hardware_compare_mode_t”.

int16_t value1

Setting value1 for hardware compare mode.

int16_t value2

Setting value2 for hardware compare mode.

struct __adc16_channel_config

#include <fsl_adc16.h> ADC16 channel conversion configuration.

Public Members

uint32_t channelNumber

Setting the conversion channel number. The available range is 0-31. See channel connection information for each chip in Reference Manual document.

bool enableInterruptOnConversionCompleted

Generate an interrupt request once the conversion is completed.

bool enableDifferentialConversion

Using Differential sample mode.

struct __adc16_pga_config

#include <fsl_adc16.h> ADC16 programmable gain amplifier configuration.

Public Members

adc16_pga_gain_t pgaGain

Setting PGA gain.

bool enableRunInNormalMode

Enable PGA working in normal mode, or low power mode by default.

bool disablePgaChopping

Disable the PGA chopping function. The PGA employs chopping to remove/reduce offset and 1/f noise and offers an offset measurement configuration that aids the offset calibration.

bool enableRunInOffsetMeasurement

Enable the PGA working in offset measurement mode. When this feature is enabled, the PGA disconnects itself from the external inputs and auto-configures into offset measurement mode. With this field set, run the ADC in the recommended settings and enable the maximum hardware averaging to get the PGA offset number. The output is the (PGA offset * (64+1)) for the given PGA setting.

2.2 Clock Driver

enum _clock_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_CoreSysClk

Core/system clock

enumerator kCLOCK_PlatClk

Platform clock

enumerator kCLOCK_BusClk

Bus clock

enumerator kCLOCK_FlexBusClk

FlexBus clock

enumerator kCLOCK_FlashClk

Flash clock

enumerator kCLOCK_FastPeriphClk

Fast peripheral clock

enumerator kCLOCK_PllFllSelClk

The clock after SIM[PLLFLSEL].

enumerator kCLOCK_Er32kClk

External reference 32K clock (ERCLK32K)

enumerator kCLOCK_Osc0ErClk

OSC0 external reference clock (OSC0ERCLK)

enumerator kCLOCK_Osc1ErClk

OSC1 external reference clock (OSC1ERCLK)

enumerator kCLOCK_Osc0ErClkUndiv

OSC0 external reference undivided clock(OSC0ERCLK_UNDIV).

enumerator kCLOCK_McgFixedFreqClk

MCG fixed frequency clock (MCGFFCLK)

enumerator kCLOCK_McgInternalRefClk

MCG internal reference clock (MCGIRCLK)

enumerator kCLOCK_McgFllClk

MCGFLLCLK

enumerator kCLOCK_McgPll0Clk

MCGPLL0CLK

enumerator kCLOCK_McgPll1Clk

MCGPLL1CLK

enumerator kCLOCK_McgExtPllClk

EXT_PLLCLK

enumerator kCLOCK_McgPeriphClk

MCG peripheral clock (MCGPCLK)

enumerator kCLOCK_McgIrc48MClk

MCG IRC48M clock

enumerator kCLOCK_LpoClk
LPO clock

enum _clock_usb_src
USB clock source definition.

Values:

enumerator kCLOCK_UsbSrcPll0
Use PLL0.

enumerator kCLOCK_UsbSrcIrc48M
Use IRC48M.

enumerator kCLOCK_UsbSrcExt
Use USB_CLKIN.

enum _clock_ip_name
Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

Values:

enumerator kCLOCK_IpInvalid

enumerator kCLOCK_Ewm0

enumerator kCLOCK_I2c0

enumerator kCLOCK_I2c1

enumerator kCLOCK_Uart0

enumerator kCLOCK_Uart1

enumerator kCLOCK_Uart2

enumerator kCLOCK_Usbfs0

enumerator kCLOCK_Cmp0

enumerator kCLOCK_Cmp1

enumerator kCLOCK_Vref0

enumerator kCLOCK_Lptmr0

enumerator kCLOCK_PortA

enumerator kCLOCK_PortB

enumerator kCLOCK_PortC

enumerator kCLOCK_PortD

enumerator kCLOCK_PortE

enumerator kCLOCK_Ftf0

enumerator kCLOCK_Dmamux0

enumerator kCLOCK_Ftm3

enumerator kCLOCK_Adc1

enumerator kCLOCK_Dac1

enumerator kCLOCK_Rnga0
enumerator kCLOCK_Lpuart0
enumerator kCLOCK_Spi0
enumerator kCLOCK_Spi1
enumerator kCLOCK_Sai0
enumerator kCLOCK_Crc0
enumerator kCLOCK_Pdb0
enumerator kCLOCK_Pit0
enumerator kCLOCK_Ftm0
enumerator kCLOCK_Ftm1
enumerator kCLOCK_Ftm2
enumerator kCLOCK_Adc0
enumerator kCLOCK_Rtc0
enumerator kCLOCK_Dac0
enumerator kCLOCK_Flexbus0
enumerator kCLOCK_Dma0

enum __osc_mode

OSC work mode.

Values:

enumerator kOSC_ModeExt

Use an external clock.

enumerator kOSC_ModeOscLowPower

Oscillator low power.

enumerator kOSC_ModeOscHighGain

Oscillator high gain.

enum __osc_cap_load

Oscillator capacitor load setting.

Values:

enumerator kOSC_Cap2P

2 pF capacitor load

enumerator kOSC_Cap4P

4 pF capacitor load

enumerator kOSC_Cap8P

8 pF capacitor load

enumerator kOSC_Cap16P

16 pF capacitor load

enum _oscer_enable_mode

OSCERCLK enable mode.

Values:

enumerator kOSC_ErClkEnable

Enable.

enumerator kOSC_ErClkEnableInStop

Enable in stop mode.

enum _mcg_fl_src

MCG FLL reference clock source select.

Values:

enumerator kMCG_FllSrcExternal

External reference clock is selected

enumerator kMCG_FllSrcInternal

The slow internal reference clock is selected

enum _mcg_irc_mode

MCG internal reference clock select.

Values:

enumerator kMCG_IrcSlow

Slow internal reference clock selected

enumerator kMCG_IrcFast

Fast internal reference clock selected

enum _mcg_dmx32

MCG DCO Maximum Frequency with 32.768 kHz Reference.

Values:

enumerator kMCG_Dmx32Default

DCO has a default range of 25%

enumerator kMCG_Dmx32Fine

DCO is fine-tuned for maximum frequency with 32.768 kHz reference

enum _mcg_drs

MCG DCO range select.

Values:

enumerator kMCG_DrsLow

Low frequency range

enumerator kMCG_DrsMid

Mid frequency range

enumerator kMCG_DrsMidHigh

Mid-High frequency range

enumerator kMCG_DrsHigh

High frequency range

enum _mcg_pll_ref_src

MCG PLL reference clock select.

Values:

enumerator kMCG_PllRefOsc0
Selects OSC0 as PLL reference clock

enumerator kMCG_PllRefOsc1
Selects OSC1 as PLL reference clock

enum __mcg_clkout_src
MCGOUT clock source.

Values:

enumerator kMCG_ClkOutSrcOut
Output of the FLL is selected (reset default)

enumerator kMCG_ClkOutSrcInternal
Internal reference clock is selected

enumerator kMCG_ClkOutSrcExternal
External reference clock is selected

enum __mcg_atm_select
MCG Automatic Trim Machine Select.

Values:

enumerator kMCG_AtmSel32k
32 kHz Internal Reference Clock selected

enumerator kMCG_AtmSel4m
4 MHz Internal Reference Clock selected

enum __mcg_oscsel
MCG OSC Clock Select.

Values:

enumerator kMCG_OscselOsc
Selects System Oscillator (OSCCLK)

enumerator kMCG_OscselRtc
Selects 32 kHz RTC Oscillator

enumerator kMCG_OscselIrc
Selects 48 MHz IRC Oscillator

enum __mcg_pll_clk_select
MCG PLLCS select.

Values:

enumerator kMCG_PllClkSelPll0
PLL0 output clock is selected

enumerator kMCG_PllClkSelPll1

enum __mcg_monitor_mode
MCG clock monitor mode.

Values:

enumerator kMCG_MonitorNone
Clock monitor is disabled.

enumerator kMCG_MonitorInt
Trigger interrupt when clock lost.

enumerator kMCG_MonitorReset
System reset when clock lost.

MCG status. Enumeration `_mcg_status`.

Values:

enumerator kStatus_MCG_ModeUnreachable
Can't switch to target mode.

enumerator kStatus_MCG_ModeInvalid
Current mode invalid for the specific function.

enumerator kStatus_MCG_AtmBusClockInvalid
Invalid bus clock for ATM.

enumerator kStatus_MCG_AtmDesiredFreqInvalid
Invalid desired frequency for ATM.

enumerator kStatus_MCG_AtmIrcUsed
IRC is used when using ATM.

enumerator kStatus_MCG_AtmHardwareFail
Hardware fail occurs during ATM.

enumerator kStatus_MCG_SourceUsed
Can't change the clock source because it is in use.

MCG status flags. Enumeration `_mcg_status_flags_t`.

Values:

enumerator kMCG_Osc0LostFlag
OSC0 lost.

enumerator kMCG_Osc0InitFlag
OSC0 crystal initialized.

enumerator kMCG_RtcOscLostFlag
RTC OSC lost.

enumerator kMCG_Pll0LostFlag
PLL0 lost.

enumerator kMCG_Pll0LockFlag
PLL0 locked.

MCG internal reference clock (MCGIRCLK) enable mode definition. Enumeration `_mcg_irclk_enable_mode`.

Values:

enumerator kMCG_IrclkEnable
MCGIRCLK enable.

enumerator kMCG_IrclkEnableInStop
MCGIRCLK enable in stop mode.

MCG PLL clock enable mode definition. Enumeration `_mcg_pll_enable_mode`.

Values:

enumerator kMCG_PllEnableIndependent

MCGPLLCLK enable independent of the MCG clock mode. Generally, the PLL is disabled in FLL modes (FEI/FBI/FEE/FBE). Setting the PLL clock enable independent, enables the PLL in the FLL modes.

enumerator kMCG_PllEnableInStop

MCGPLLCLK enable in STOP mode.

enum __mcg_mode

MCG mode definitions.

Values:

enumerator kMCG_ModeFEI

FEI - FLL Engaged Internal

enumerator kMCG_ModeFBI

FBI - FLL Bypassed Internal

enumerator kMCG_ModeBLPI

BLPI - Bypassed Low Power Internal

enumerator kMCG_ModeFEE

FEE - FLL Engaged External

enumerator kMCG_ModeFBE

FBE - FLL Bypassed External

enumerator kMCG_ModeBLPE

BLPE - Bypassed Low Power External

enumerator kMCG_ModePBE

PBE - PLL Bypassed External

enumerator kMCG_ModePEE

PEE - PLL Engaged External

enumerator kMCG_ModeError

Unknown mode

typedef enum *_clock_name* clock_name_t

Clock name used to get clock frequency.

typedef enum *_clock_usb_src* clock_usb_src_t

USB clock source definition.

typedef enum *_clock_ip_name* clock_ip_name_t

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

typedef struct *_sim_clock_config* sim_clock_config_t

SIM configuration structure for clock setting.

typedef enum *_osc_mode* osc_mode_t

OSC work mode.

typedef struct *_oscer_config* oscer_config_t

OSC configuration for OSCERCLK.

typedef struct *_osc_config* osc_config_t

OSC Initialization Configuration Structure.

Defines the configuration data structure to initialize the OSC. When porting to a new board, set the following members according to the board setting:

- a. freq: The external frequency.
- b. workMode: The OSC module mode.

typedef enum *_mcg_fll_src* mcg_fll_src_t

MCG FLL reference clock source select.

typedef enum *_mcg_irc_mode* mcg_irc_mode_t

MCG internal reference clock select.

typedef enum *_mcg_dmx32* mcg_dmx32_t

MCG DCO Maximum Frequency with 32.768 kHz Reference.

typedef enum *_mcg_drs* mcg_drs_t

MCG DCO range select.

typedef enum *_mcg_pll_ref_src* mcg_pll_ref_src_t

MCG PLL reference clock select.

typedef enum *_mcg_clkout_src* mcg_clkout_src_t

MCGOUT clock source.

typedef enum *_mcg_atm_select* mcg_atm_select_t

MCG Automatic Trim Machine Select.

typedef enum *_mcg_oscsel* mcg_oscsel_t

MCG OSC Clock Select.

typedef enum *_mcg_pll_clk_select* mcg_pll_clk_select_t

MCG PLLCS select.

typedef enum *_mcg_monitor_mode* mcg_monitor_mode_t

MCG clock monitor mode.

typedef enum *_mcg_mode* mcg_mode_t

MCG mode definitions.

typedef struct *_mcg_pll_config* mcg_pll_config_t

MCG PLL configuration.

typedef struct *_mcg_config* mcg_config_t

MCG mode change configuration structure.

When porting to a new board, set the following members according to the board setting:

- a. frdiv: If the FLL uses the external reference clock, set this value to ensure that the external reference clock divided by frdiv is in the 31.25 kHz to 39.0625 kHz range.
- b. The PLL reference clock divider PRDIV: PLL reference clock frequency after PRDIV should be in the FSL_FEATURE_MCG_PLL_REF_MIN to FSL_FEATURE_MCG_PLL_REF_MAX range.

volatile uint32_t g_xtal0Freq

External XTAL0 (OSC0) clock frequency.

The XTAL0/EXTAL0 (OSC0) clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtal0Freq to set the value in the clock driver. For example, if XTAL0 is 8 MHz:

```
Set up the OSC0
CLOCK_InitOsc0(...);
Set the XTAL0 value to the clock driver.
CLOCK_SetXtal0Freq(8000000);
```


This is important for the multicore platforms where only one core needs to set up the OSC0 using the `CLOCK_InitOsc0`. All other cores need to call the `CLOCK_SetXtal0Freq` to get a valid clock frequency.

`volatile uint32_t g_xtal32Freq`

External XTAL32/EXTAL32/RTC_CLKIN clock frequency.

The XTAL32/EXTAL32/RTC_CLKIN clock frequency in Hz. When the clock is set up, use the function `CLOCK_SetXtal32Freq` to set the value in the clock driver.

This is important for the multicore platforms where only one core needs to set up the clock. All other cores need to call the `CLOCK_SetXtal32Freq` to get a valid clock frequency.

`static inline void CLOCK_EnableClock(clock_ip_name_t name)`

Enable the clock for specific IP.

Parameters

- `name` – Which clock to enable, see `clock_ip_name_t`.

`static inline void CLOCK_DisableClock(clock_ip_name_t name)`

Disable the clock for specific IP.

Parameters

- `name` – Which clock to disable, see `clock_ip_name_t`.

`static inline void CLOCK_SetLpuartClock(uint32_t src)`

Set LPUART clock source.

Parameters

- `src` – The value to set LPUART clock source.

`static inline void CLOCK_SetEr32kClock(uint32_t src)`

Set ERCLK32K source.

Parameters

- `src` – The value to set ERCLK32K clock source.

`static inline void CLOCK_SetTraceClock(uint32_t src)`

Set debug trace clock source.

Parameters

- `src` – The value to set debug trace clock source.

`static inline void CLOCK_SetPllFllSelClock(uint32_t src)`

Set PLLFLLSEL clock source.

Parameters

- `src` – The value to set PLLFLLSEL clock source.

`static inline void CLOCK_SetClkOutClock(uint32_t src)`

Set CLKOUT source.

Parameters

- `src` – The value to set CLKOUT source.

`static inline void CLOCK_SetRtcClkOutClock(uint32_t src)`

Set RTC_CLKOUT source.

Parameters

- `src` – The value to set RTC_CLKOUT source.

bool CLOCK_EnableUsbfs0Clock(*clock_usb_src_t* src, uint32_t freq)

Enable USB FS clock.

Parameters

- src – USB FS clock source.
- freq – The frequency specified by src.

Return values

- true – The clock is set successfully.
- false – The clock source is invalid to get proper USB FS clock.

static inline void CLOCK_DisableUsbfs0Clock(void)

Disable USB FS clock.

Disable USB FS clock.

static inline void CLOCK_SetOutDiv(uint32_t outdiv1, uint32_t outdiv2, uint32_t outdiv3,
uint32_t outdiv4)

System clock divider.

Set the SIM_CLKDIV1[OUTDIV1], SIM_CLKDIV1[OUTDIV2], SIM_CLKDIV1[OUTDIV3],
SIM_CLKDIV1[OUTDIV4].

Parameters

- outdiv1 – Clock 1 output divider value.
- outdiv2 – Clock 2 output divider value.
- outdiv3 – Clock 3 output divider value.
- outdiv4 – Clock 4 output divider value.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Gets the clock frequency for a specific clock name.

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in *clock_name_t*. The MCG must be properly configured before using this function.

Parameters

- clockName – Clock names defined in *clock_name_t*

Returns

Clock frequency value in Hertz

uint32_t CLOCK_GetCoreSysClkFreq(void)

Get the core clock or system clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetPlatClkFreq(void)

Get the platform clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetBusClkFreq(void)

Get the bus clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFlexBusClkFreq(void)

Get the flexbus clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFlashClkFreq(void)

Get the flash clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetPllFllSelClkFreq(void)

Get the output clock frequency selected by SIM[PLLFLLSEL].

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetEr32kClkFreq(void)

Get the external reference 32K clock frequency (ERCLK32K).

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetOsc0ErClkUndivFreq(void)

Get the OSC0 external reference undivided clock frequency (OSC0ERCLK_UNDIV).

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetOsc0ErClkFreq(void)

Get the OSC0 external reference clock frequency (OSC0ERCLK).

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetOsc0ErClkDivFreq(void)

Get the OSC0 external reference divided clock frequency.

Returns

Clock frequency in Hz.

void CLOCK_SetSimConfig(*sim_clock_config_t* const *config)

Set the clock configure in SIM module.

This function sets system layer clock settings in SIM module.

Parameters

- config – Pointer to the configure structure.

static inline void CLOCK_SetSimSafeDivs(void)

Set the system clock dividers in SIM to safe value.

The system level clocks (core clock, bus clock, flexbus clock and flash clock) must be in allowed ranges. During MCG clock mode switch, the MCG output clock changes then the system level clocks may be out of range. This function could be used before MCG mode change, to make sure system level clocks are in allowed range.

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.5.3.

MCG_INTERNAL_IRC_48M

IRC48M clock frequency in Hz.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

DMAMUX_CLOCKS

Clock ip name array for DMAMUX.

RTC_CLOCKS

Clock ip name array for RTC.

SAI_CLOCKS

Clock ip name array for SAI.

PORT_CLOCKS

Clock ip name array for PORT.

FLEXBUS_CLOCKS

Clock ip name array for FLEXBUS.

EWM_CLOCKS

Clock ip name array for EWM.

PIT_CLOCKS

Clock ip name array for PIT.

DSPI_CLOCKS

Clock ip name array for DSPI.

LPTMR_CLOCKS

Clock ip name array for LPTMR.

FTM_CLOCKS

Clock ip name array for FTM.

EDMA_CLOCKS

Clock ip name array for EDMA.

LPUART_CLOCKS

Clock ip name array for LPUART.

DAC_CLOCKS

Clock ip name array for DAC.

ADC16_CLOCKS

Clock ip name array for ADC16.

VREF_CLOCKS

Clock ip name array for VREF.

UART_CLOCKS

Clock ip name array for UART.

RNGA_CLOCKS

Clock ip name array for RNGA.

CRC_CLOCKS

Clock ip name array for CRC.

I2C_CLOCKS

Clock ip name array for I2C.

FTF_CLOCKS

Clock ip name array for FTF.

PDB_CLOCKS

Clock ip name array for PDB.

CMP_CLOCKS

Clock ip name array for CMP.

LPO_CLK_FREQ

LPO clock frequency.

SYS_CLK

Peripherals clock source definition.

BUS_CLK

FAST_CLK

I2C0_CLK_SRC

I2C1_CLK_SRC

DSPI0_CLK_SRC

DSPI1_CLK_SRC

UART0_CLK_SRC

UART1_CLK_SRC

UART2_CLK_SRC

CLK_GATE_REG_OFFSET_SHIFT

CLK_GATE_REG_OFFSET_MASK

CLK_GATE_BIT_SHIFT_SHIFT

CLK_GATE_BIT_SHIFT_MASK

CLK_GATE_DEFINE(reg_offset, bit_shift)

CLK_GATE_ABSTRACT_REG_OFFSET(x)

CLK_GATE_ABSTRACT_BITS_SHIFT(x)

uint32_t CLOCK_GetOutClkFreq(void)

Gets the MCG output clock (MCGOUTCLK) frequency.

This function gets the MCG output clock frequency in Hz based on the current MCG register value.

Returns

The frequency of MCGOUTCLK.

uint32_t CLOCK_GetFllFreq(void)

Gets the MCG FLL clock (MCGFLLCLK) frequency.

This function gets the MCG FLL clock frequency in Hz based on the current MCG register value. The FLL is enabled in FEI/FBI/FEE/FBE mode and disabled in low power state in other modes.

Returns

The frequency of MCGFLLCLK.

uint32_t CLOCK_GetInternalRefClkFreq(void)

Gets the MCG internal reference clock (MCGIRCLK) frequency.

This function gets the MCG internal reference clock frequency in Hz based on the current MCG register value.

Returns

The frequency of MCGIRCLK.

uint32_t CLOCK_GetFixedFreqClkFreq(void)

Gets the MCG fixed frequency clock (MCGFFCLK) frequency.

This function gets the MCG fixed frequency clock frequency in Hz based on the current MCG register value.

Returns

The frequency of MCGFFCLK.

uint32_t CLOCK_GetPlloFreq(void)

Gets the MCG PLL0 clock (MCGPLL0CLK) frequency.

This function gets the MCG PLL0 clock frequency in Hz based on the current MCG register value.

Returns

The frequency of MCGPLL0CLK.

static inline void CLOCK_SetLowPowerEnable(bool enable)

Enables or disables the MCG low power.

Enabling the MCG low power disables the PLL and FLL in bypass modes. In other words, in FBE and PBE modes, enabling low power sets the MCG to BLPE mode. In FBI and PBI modes, enabling low power sets the MCG to BLPI mode. When disabling the MCG low power, the PLL or FLL are enabled based on MCG settings.

Parameters

- enable – True to enable MCG low power, false to disable MCG low power.

status_t CLOCK_SetInternalRefClkConfig(uint8_t enableMode, mcg_irc_mode_t ircs, uint8_t fcrdiv)

Configures the Internal Reference clock (MCGIRCLK).

This function sets the MCGIRCLK base on parameters. It also selects the IRC source. If the fast IRC is used, this function sets the fast IRC divider. This function also sets whether the MCGIRCLK is enabled in stop mode. Calling this function in FBI/PBI/BLPI modes may change the system clock. As a result, using the function in these modes it is not allowed.

Parameters

- enableMode – MCGIRCLK enable mode, OR'ed value of the enumeration `_mcg_ircclk_enable_mode`.
- ircs – MCGIRCLK clock source, choose fast or slow.
- fcrdiv – Fast IRC divider setting (FCRDIV).

Return values

- kStatus_MCG_SourceUsed – Because the internal reference clock is used as a clock source, the configuration should not be changed. Otherwise, a glitch occurs.
- kStatus_Success – MCGIRCLK configuration finished successfully.

status_t CLOCK_SetExternalRefClkConfig(mcg_oscsel_t oscsel)

Selects the MCG external reference clock.

Selects the MCG external reference clock source, changes the MCG_C7[OSCSSEL], and waits for the clock source to be stable. Because the external reference clock should not be changed in FEE/FBE/BLPE/PBE/PEE modes, do not call this function in these modes.

Parameters

- `oscsel` – MCG external reference clock source, `MCG_C7[OSCSEL]`.

Return values

- `kStatus_MCG_SourceUsed` – Because the external reference clock is used as a clock source, the configuration should not be changed. Otherwise, a glitch occurs.
- `kStatus_Success` – External reference clock set successfully.

```
static inline void CLOCK_SetFllExtRefDiv(uint8_t frdiv)
```

Set the FLL external reference clock divider value.

Sets the FLL external reference clock divider value, the register `MCG_C1[FRDIV]`.

Parameters

- `frdiv` – The FLL external reference clock divider value, `MCG_C1[FRDIV]`.

```
void CLOCK_EnablePll0(mcg_pll_config_t const *config)
```

Enables the PLL0 in FLL mode.

This function sets us the PLL0 in FLL mode and reconfigures the PLL0. Ensure that the PLL reference clock is enabled before calling this function and that the PLL0 is not used as a clock source. The function `CLOCK_CalcPllDiv` gets the correct PLL divider values.

Parameters

- `config` – Pointer to the configuration structure.

```
static inline void CLOCK_DisablePll0(void)
```

Disables the PLL0 in FLL mode.

This function disables the PLL0 in FLL mode. It should be used together with the `CLOCK_EnablePll0`.

```
uint32_t CLOCK_CalcPllDiv(uint32_t refFreq, uint32_t desireFreq, uint8_t *prdiv, uint8_t *vdiv)
```

Calculates the PLL divider setting for a desired output frequency.

This function calculates the correct reference clock divider (PRDIV) and VCO divider (VDIV) to generate a desired PLL output frequency. It returns the closest frequency match with the corresponding PRDIV/VDIV returned from parameters. If a desired frequency is not valid, this function returns 0.

Parameters

- `refFreq` – PLL reference clock frequency.
- `desireFreq` – Desired PLL output frequency.
- `prdiv` – PRDIV value to generate desired PLL frequency.
- `vdiv` – VDIV value to generate desired PLL frequency.

Returns

Closest frequency match that the PLL was able generate.

```
void CLOCK_SetOsc0MonitorMode(mcg_monitor_mode_t mode)
```

Sets the OSC0 clock monitor mode.

This function sets the OSC0 clock monitor mode. See `mcg_monitor_mode_t` for details.

Parameters

- `mode` – Monitor mode to set.

```
void CLOCK_SetRtcOscMonitorMode(mcg_monitor_mode_t mode)
```

Sets the RTC OSC clock monitor mode.

This function sets the RTC OSC clock monitor mode. See `mcg_monitor_mode_t` for details.

Parameters

- mode – Monitor mode to set.

void CLOCK_SetPll0MonitorMode(*mcg_monitor_mode_t* mode)

Sets the PLL0 clock monitor mode.

This function sets the PLL0 clock monitor mode. See *mcg_monitor_mode_t* for details.

Parameters

- mode – Monitor mode to set.

uint32_t CLOCK_GetStatusFlags(void)

Gets the MCG status flags.

This function gets the MCG clock status flags. All status flags are returned as a logical OR of the enumeration refer to *_mcg_status_flags_t*. To check a specific flag, compare the return value with the flag.

Example:

To check the clock lost lock status of OSC0 and PLL0.

```
uint32_t mcgFlags;

mcgFlags = CLOCK_GetStatusFlags();

if (mcgFlags & kMCG_Osc0LostFlag)
{
    OSC0 clock lock lost. Do something.
}
if (mcgFlags & kMCG_Pll0LostFlag)
{
    PLL0 clock lock lost. Do something.
}
```

Returns

Logical OR value of the enumeration *_mcg_status_flags_t*.

void CLOCK_ClearStatusFlags(uint32_t mask)

Clears the MCG status flags.

This function clears the MCG clock lock lost status. The parameter is a logical OR value of the flags to clear. See the enumeration *_mcg_status_flags_t*.

Example:

To clear the clock lost lock status flags of OSC0 and PLL0.

```
CLOCK_ClearStatusFlags(kMCG_Osc0LostFlag | kMCG_Pll0LostFlag);
```

Parameters

- mask – The status flags to clear. This is a logical OR of members of the enumeration *_mcg_status_flags_t*.

static inline void OSC_SetExtRefClkConfig(OSC_Type *base, *oscer_config_t* const *config)

Configures the OSC external reference clock (OSCERCLK).

This function configures the OSC external reference clock (OSCERCLK). This is an example to enable the OSCERCLK in normal and stop modes and also set the output divider to 1:

```
oscer_config_t config =
{
    .enableMode = kOSC_ErClkEnable | kOSC_ErClkEnableInStop,
```

(continues on next page)

(continued from previous page)

```
.erclkDiv = 1U,  
};  
  
OSC_SetExtRefClkConfig(OSC, &config);
```

Parameters

- base – OSC peripheral address.
- config – Pointer to the configuration structure.

```
static inline void OSC_SetCapLoad(OSC_Type *base, uint8_t capLoad)
```

Sets the capacitor load configuration for the oscillator.

This function sets the specified capacitors configuration for the oscillator. This should be done in the early system level initialization function call based on the system configuration.

Example:

```
To enable only 2 pF and 8 pF capacitor load, please use like this.  
OSC_SetCapLoad(OSC, kOSC_Cap2P | kOSC_Cap8P);
```

Parameters

- base – OSC peripheral address.
- capLoad – OR'ed value for the capacitor load option, see `_osc_cap_load`.

```
void CLOCK_InitOsc0(osc_config_t const *config)
```

Initializes the OSC0.

This function initializes the OSC0 according to the board configuration.

Parameters

- config – Pointer to the OSC0 configuration structure.

```
void CLOCK_DeinitOsc0(void)
```

Deinitializes the OSC0.

This function deinitializes the OSC0.

```
static inline void CLOCK_SetXtal0Freq(uint32_t freq)
```

Sets the XTAL0 frequency based on board settings.

Parameters

- freq – The XTAL0/EXTAL0 input clock frequency in Hz.

```
static inline void CLOCK_SetXtal32Freq(uint32_t freq)
```

Sets the XTAL32/RTC_CLKIN frequency based on board settings.

Parameters

- freq – The XTAL32/EXTAL32/RTC_CLKIN input clock frequency in Hz.

```
void CLOCK_SetSlowIrcFreq(uint32_t freq)
```

Set the Slow IRC frequency based on the trimmed value.

Parameters

- freq – The Slow IRC frequency input clock frequency in Hz.

`void CLOCK_SetFastIrcFreq(uint32_t freq)`

Set the Fast IRC frequency based on the trimmed value.

Parameters

- `freq` – The Fast IRC frequency input clock frequency in Hz.

`status_t CLOCK_TrimInternalRefClk(uint32_t extFreq, uint32_t desireFreq, uint32_t *actualFreq, mcg_atm_select_t atms)`

Auto trims the internal reference clock.

This function trims the internal reference clock by using the external clock. If successful, it returns the `kStatus_Success` and the frequency after trimming is received in the parameter `actualFreq`. If an error occurs, the error code is returned.

Parameters

- `extFreq` – External clock frequency, which should be a bus clock.
- `desireFreq` – Frequency to trim to.
- `actualFreq` – Actual frequency after trimming.
- `atms` – Trim fast or slow internal reference clock.

Return values

- `kStatus_Success` – ATM success.
- `kStatus_MCG_AtmBusClockInvalid` – The bus clock is not in allowed range for the ATM.
- `kStatus_MCG_AtmDesiredFreqInvalid` – MCGIRCLK could not be trimmed to the desired frequency.
- `kStatus_MCG_AtmIrcUsed` – Could not trim because MCGIRCLK is used as a bus clock source.
- `kStatus_MCG_AtmHardwareFail` – Hardware fails while trimming.

`mcg_mode_t CLOCK_GetMode(void)`

Gets the current MCG mode.

This function checks the MCG registers and determines the current MCG mode.

Returns

Current MCG mode or error code; See `mcg_mode_t`.

`status_t CLOCK_SetFeiMode(mcg_dm32_t dm32, mcg_drs_t drs, void (*fllStableDelay)(void))`

Sets the MCG to FEI mode.

This function sets the MCG to FEI mode. If setting to FEI mode fails from the current mode, this function returns an error.

Note: If `dm32` is set to `kMCG_Dm32Fine`, the slow IRC must not be trimmed to a frequency above 32768 Hz.

Parameters

- `dm32` – DMX32 in FEI mode.
- `drs` – The DCO range selection.
- `fllStableDelay` – Delay function to ensure that the FLL is stable. Passing NULL does not cause a delay.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

`status_t` `CLOCK_SetFeeMode(uint8_t frdiv, mcg_dmx32_t dmx32, mcg_drs_t drs, void (*fllStableDelay)(void))`

Sets the MCG to FEE mode.

This function sets the MCG to FEE mode. If setting to FEE mode fails from the current mode, this function returns an error.

Parameters

- `frdiv` – FLL reference clock divider setting, `FRDIV`.
- `dmx32` – `DMX32` in FEE mode.
- `drs` – The DCO range selection.
- `fllStableDelay` – Delay function to make sure FLL is stable. Passing `NULL` does not cause a delay.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

`status_t` `CLOCK_SetFbiMode(mcg_dmx32_t dmx32, mcg_drs_t drs, void (*fllStableDelay)(void))`

Sets the MCG to FBI mode.

This function sets the MCG to FBI mode. If setting to FBI mode fails from the current mode, this function returns an error.

Note: If `dmx32` is set to `kMCG_Dmx32Fine`, the slow IRC must not be trimmed to frequency above 32768 Hz.

Parameters

- `dmx32` – `DMX32` in FBI mode.
- `drs` – The DCO range selection.
- `fllStableDelay` – Delay function to make sure FLL is stable. If the FLL is not used in FBI mode, this parameter can be `NULL`. Passing `NULL` does not cause a delay.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

`status_t` `CLOCK_SetFbeMode(uint8_t frdiv, mcg_dmx32_t dmx32, mcg_drs_t drs, void (*fllStableDelay)(void))`

Sets the MCG to FBE mode.

This function sets the MCG to FBE mode. If setting to FBE mode fails from the current mode, this function returns an error.

Parameters

- `frdiv` – FLL reference clock divider setting, `FRDIV`.
- `dmx32` – `DMX32` in FBE mode.
- `drs` – The DCO range selection.

- `flStableDelay` – Delay function to make sure FLL is stable. If the FLL is not used in FBE mode, this parameter can be NULL. Passing NULL does not cause a delay.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

status_t `CLOCK_SetBlpiMode(void)`

Sets the MCG to BLPI mode.

This function sets the MCG to BLPI mode. If setting to BLPI mode fails from the current mode, this function returns an error.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

status_t `CLOCK_SetBlpeMode(void)`

Sets the MCG to BLPE mode.

This function sets the MCG to BLPE mode. If setting to BLPE mode fails from the current mode, this function returns an error.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

status_t `CLOCK_SetPbeMode(mcg_pll_clk_select_t pllcs, mcg_pll_config_t const *config)`

Sets the MCG to PBE mode.

This function sets the MCG to PBE mode. If setting to PBE mode fails from the current mode, this function returns an error.

Note:

- a. The parameter `pllcs` selects the PLL. For platforms with only one PLL, the parameter `pllcs` is kept for interface compatibility.
 - b. The parameter `config` is the PLL configuration structure. On some platforms, it is possible to choose the external PLL directly, which renders the configuration structure not necessary. In this case, pass in NULL. For example: `CLOCK_SetPbeMode(kMCG_OscselOsc, kMCG_PllClkSelExtPll, NULL);`
-

Parameters

- `pllcs` – The PLL selection, PLLCS.
- `config` – Pointer to the PLL configuration.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

status_t `CLOCK_SetPeeMode(void)`

Sets the MCG to PEE mode.

This function sets the MCG to PEE mode.

Note: This function only changes the CLKS to use the PLL/FLL output. If the PRDIV/VDIV are different than in the PBE mode, set them up in PBE mode and wait. When the clock is stable, switch to PEE mode.

Return values

- `kStatus_MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus_Success` – Switched to the target mode successfully.

status_t `CLOCK_ExternalModeToFbeModeQuick(void)`

Switches the MCG to FBE mode from the external mode.

This function switches the MCG from external modes (PEE/PBE/BLPE/FEE) to the FBE mode quickly. The external clock is used as the system clock source and PLL is disabled. However, the FLL settings are not configured. This is a lite function with a small code size, which is useful during the mode switch. For example, to switch from PEE mode to FEI mode:

```
CLOCK_ExternalModeToFbeModeQuick();
CLOCK_SetFeiMode(...);
```

Return values

- `kStatus_Success` – Switched successfully.
- `kStatus_MCG_ModeInvalid` – If the current mode is not an external mode, do not call this function.

status_t `CLOCK_InternalModeToFbiModeQuick(void)`

Switches the MCG to FBI mode from internal modes.

This function switches the MCG from internal modes (PEI/PBI/BLPI/FEI) to the FBI mode quickly. The MCGIRCLK is used as the system clock source and PLL is disabled. However, FLL settings are not configured. This is a lite function with a small code size, which is useful during the mode switch. For example, to switch from PEI mode to FEE mode:

```
CLOCK_InternalModeToFbiModeQuick();
CLOCK_SetFeeMode(...);
```

Return values

- `kStatus_Success` – Switched successfully.
- `kStatus_MCG_ModeInvalid` – If the current mode is not an internal mode, do not call this function.

status_t `CLOCK_BootToFeiMode(mcg_dmx32_t dmx32, mcg_drs_t drs, void (*flStableDelay)(void))`

Sets the MCG to FEI mode during system boot up.

This function sets the MCG to FEI mode from the reset mode. It can also be used to set up MCG during system boot up.

Note: If `dmx32` is set to `kMCG_Dmx32Fine`, the slow IRC must not be trimmed to frequency above 32768 Hz.

Parameters

- `dmx32` – DMX32 in FEI mode.
- `drs` – The DCO range selection.

- `flStableDelay` – Delay function to ensure that the FLL is stable.

Return values

- `kStatus__MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus__Success` – Switched to the target mode successfully.

status_t `CLOCK_BootToFeeMode(mcg_oscsel_t oscsel, uint8_t frdiv, mcg_dmx32_t dmx32, mcg_drs_t drs, void (*flStableDelay)(void))`

Sets the MCG to FEE mode during system bootup.

This function sets MCG to FEE mode from the reset mode. It can also be used to set up the MCG during system boot up.

Parameters

- `oscsel` – OSC clock select, `OSCSSEL`.
- `frdiv` – FLL reference clock divider setting, `FRDIV`.
- `dmx32` – `DMX32` in FEE mode.
- `drs` – The DCO range selection.
- `flStableDelay` – Delay function to ensure that the FLL is stable.

Return values

- `kStatus__MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus__Success` – Switched to the target mode successfully.

status_t `CLOCK_BootToBlpiMode(uint8_t fcrdiv, mcg_irc_mode_t ircs, uint8_t ircEnableMode)`

Sets the MCG to BLPI mode during system boot up.

This function sets the MCG to BLPI mode from the reset mode. It can also be used to set up the MCG during system boot up.

Parameters

- `fcrdiv` – Fast IRC divider, `FCRDIV`.
- `ircs` – The internal reference clock to select, `IRCS`.
- `ircEnableMode` – The `MCGIRCLK` enable mode, OR'ed value of the enumeration `_mcg_ircclk_enable_mode`.

Return values

- `kStatus__MCG_SourceUsed` – Could not change `MCGIRCLK` setting.
- `kStatus__Success` – Switched to the target mode successfully.

status_t `CLOCK_BootToBlpeMode(mcg_oscsel_t oscsel)`

Sets the MCG to BLPE mode during system boot up.

This function sets the MCG to BLPE mode from the reset mode. It can also be used to set up the MCG during system boot up.

Parameters

- `oscsel` – OSC clock select, `MCG_C7[OSCSSEL]`.

Return values

- `kStatus__MCG_ModeUnreachable` – Could not switch to the target mode.
- `kStatus__Success` – Switched to the target mode successfully.

status_t CLOCK_BootToPeeMode(*mcg_oscsel_t* oscsel, *mcg_pll_clk_select_t* pllcs, *mcg_pll_config_t* const *config)

Sets the MCG to PEE mode during system boot up.

This function sets the MCG to PEE mode from reset mode. It can also be used to set up the MCG during system boot up.

Parameters

- oscsel – OSC clock select, MCG_C7[OSCSSEL].
- pllcs – The PLL selection, PLLCS.
- config – Pointer to the PLL configuration.

Return values

- kStatus_MCG_ModeUnreachable – Could not switch to the target mode.
- kStatus_Success – Switched to the target mode successfully.

status_t CLOCK_SetMcgConfig(*mcg_config_t* const *config)

Sets the MCG to a target mode.

This function sets MCG to a target mode defined by the configuration structure. If switching to the target mode fails, this function chooses the correct path.

Note: If the external clock is used in the target mode, ensure that it is enabled. For example, if the OSC0 is used, set up OSC0 correctly before calling this function.

Parameters

- config – Pointer to the target MCG mode configuration structure.

Returns

Return kStatus_Success if switched successfully; Otherwise, it returns an error code *_mcg_status*.

uint8_t pllFllSel

PLL/FLL/IRC48M selection.

uint8_t er32kSrc

ERCLK32K source selection.

uint32_t clkdiv1

SIM_CLKDIV1.

uint8_t enableMode

OSCERCLK enable mode. OR'ed value of *_oscer_enable_mode*.

uint8_t erclkDiv

Divider for OSCERCLK.

uint32_t freq

External clock frequency.

uint8_t capLoad

Capacitor load setting.

osc_mode_t workMode

OSC work mode setting.

oscer_config_t oscerConfig

Configuration for OSCERCLK.

`uint8_t enableMode`

Enable mode. OR'ed value of enumeration `_mcg_pll_enable_mode`.

`uint8_t prdiv`

Reference divider PRDIV.

`uint8_t vdiv`

VCO divider VDIV.

`mcg_mode_t mcgMode`

MCG mode.

`uint8_t irclkEnableMode`

MCGIRCLK enable mode.

`mcg_irc_mode_t ircs`

Source, MCG_C2[IRCS].

`uint8_t ferdiv`

Divider, MCG_SC[FCRDIV].

`uint8_t frdiv`

Divider MCG_C1[FRDIV].

`mcg_drs_t drs`

DCO range MCG_C4[DRST_DRS].

`mcg_dmx32_t dmx32`

MCG_C4[DMX32].

`mcg_oscsel_t oscsel`

OSC select MCG_C7[OSCSEL].

`mcg_pll_config_t pll0Config`

MCGPLL0CLK configuration.

`MCG_CONFIG_CHECK_PARAM`

Configures whether to check a parameter in a function.

Some MCG settings must be changed with conditions, for example:

- a. MCGIRCLK settings, such as the source, divider, and the trim value should not change when MCGIRCLK is used as a system clock source.
- b. MCG_C7[OSCSEL] should not be changed when the external reference clock is used as a system clock source. For example, in FBE/BLPE/PBE modes.
- c. The users should only switch between the supported clock modes.

MCG functions check the parameter and MCG status before setting, if not allowed to change, the functions return error. The parameter checking increases code size, if code size is a critical requirement, change `MCG_CONFIG_CHECK_PARAM` to 0 to disable parameter checking.

`FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL`

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

struct __sim_clock_config

#include <fsl_clock.h> SIM configuration structure for clock setting.

struct __oscer_config

#include <fsl_clock.h> OSC configuration for OSCERCLK.

struct __osc_config

#include <fsl_clock.h> OSC Initialization Configuration Structure.

Defines the configuration data structure to initialize the OSC. When porting to a new board, set the following members according to the board setting:

- a. freq: The external frequency.
- b. workMode: The OSC module mode.

struct __mcg_pll_config

#include <fsl_clock.h> MCG PLL configuration.

struct __mcg_config

#include <fsl_clock.h> MCG mode change configuration structure.

When porting to a new board, set the following members according to the board setting:

- a. frdiv: If the FLL uses the external reference clock, set this value to ensure that the external reference clock divided by frdiv is in the 31.25 kHz to 39.0625 kHz range.
- b. The PLL reference clock divider PRDIV: PLL reference clock frequency after PRDIV should be in the FSL_FEATURE_MCG_PLL_REF_MIN to FSL_FEATURE_MCG_PLL_REF_MAX range.

2.3 CMP: Analog Comparator Driver

void CMP_Init(CMP_Type *base, const *cmp_config_t* *config)

Initializes the CMP.

This function initializes the CMP module. The operations included are as follows.

- Enabling the clock for CMP module.
- Configuring the comparator.
- Enabling the CMP module. Note that for some devices, multiple CMP instances share the same clock gate. In this case, to enable the clock for any instance enables all CMPs. See the appropriate MCU reference manual for the clock assignment of the CMP.

Parameters

- base – CMP peripheral base address.
- config – Pointer to the configuration structure.

void CMP_Deinit(CMP_Type *base)

De-initializes the CMP module.

This function de-initializes the CMP module. The operations included are as follows.

- Disabling the CMP module.
- Disabling the clock for CMP module.

This function disables the clock for the CMP. Note that for some devices, multiple CMP instances share the same clock gate. In this case, before disabling the clock for the CMP, ensure that all the CMP instances are not used.

Parameters

- base – CMP peripheral base address.

static inline void CMP_Enable(CMP_Type *base, bool enable)

Enables/disables the CMP module.

Parameters

- base – CMP peripheral base address.
- enable – Enables or disables the module.

void CMP_GetDefaultConfig(*cmp_config_t* *config)

Initializes the CMP user configuration structure.

This function initializes the user configuration structure to these default values.

```
config->enableCmp      = true;
config->hysteresisMode = kCMP_HysteresisLevel0;
config->enableHighSpeed = false;
config->enableInvertOutput = false;
config->useUnfilteredOutput = false;
config->enablePinOut    = false;
config->enableTriggerMode = false;
```

Parameters

- config – Pointer to the configuration structure.

void CMP_SetInputChannels(CMP_Type *base, uint8_t positiveChannel, uint8_t negativeChannel)

Sets the input channels for the comparator.

This function sets the input channels for the comparator. Note that two input channels cannot be set the same way in the application. When the user selects the same input from the analog mux to the positive and negative port, the comparator is disabled automatically.

Parameters

- base – CMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

void CMP_EnableDMA(CMP_Type *base, bool enable)

Enables/disables the DMA request for rising/falling events.

This function enables/disables the DMA request for rising/falling events. Either event triggers the generation of the DMA request from CMP if the DMA feature is enabled. Both events are ignored for generating the DMA request from the CMP if the DMA is disabled.

Parameters

- base – CMP peripheral base address.
- enable – Enables or disables the feature.

static inline void CMP_EnableWindowMode(CMP_Type *base, bool enable)

Enables/disables the window mode.

Parameters

- base – CMP peripheral base address.
- enable – Enables or disables the feature.

static inline void CMP_EnablePassThroughMode(CMP_Type *base, bool enable)
Enables/disables the pass through mode.

Parameters

- base – CMP peripheral base address.
- enable – Enables or disables the feature.

void CMP_SetFilterConfig(CMP_Type *base, const *cmp_filter_config_t* *config)
Configures the filter.

Parameters

- base – CMP peripheral base address.
- config – Pointer to the configuration structure.

void CMP_SetDACConfig(CMP_Type *base, const *cmp_dac_config_t* *config)
Configures the internal DAC.

Parameters

- base – CMP peripheral base address.
- config – Pointer to the configuration structure. “NULL” disables the feature.

void CMP_EnableInterrupts(CMP_Type *base, uint32_t mask)
Enables the interrupts.

Parameters

- base – CMP peripheral base address.
- mask – Mask value for interrupts. See “_cmp_interrupt_enable”.

void CMP_DisableInterrupts(CMP_Type *base, uint32_t mask)
Disables the interrupts.

Parameters

- base – CMP peripheral base address.
- mask – Mask value for interrupts. See “_cmp_interrupt_enable”.

uint32_t CMP_GetStatusFlags(CMP_Type *base)
Gets the status flags.

Parameters

- base – CMP peripheral base address.

Returns

Mask value for the asserted flags. See “_cmp_status_flags”.

void CMP_ClearStatusFlags(CMP_Type *base, uint32_t mask)
Clears the status flags.

Parameters

- base – CMP peripheral base address.
- mask – Mask value for the flags. See “_cmp_status_flags”.

FSL_CMP_DRIVER_VERSION
CMP driver version 2.0.3.

enum _cmp_interrupt_enable
Interrupt enable/disable mask.

Values:

enumerator kCMP_OutputRisingInterruptEnable

Comparator interrupt enable rising.

enumerator kCMP_OutputFallingInterruptEnable

Comparator interrupt enable falling.

enum _cmp_status_flags

Status flags' mask.

Values:

enumerator kCMP_OutputRisingEventFlag

Rising-edge on the comparison output has occurred.

enumerator kCMP_OutputFallingEventFlag

Falling-edge on the comparison output has occurred.

enumerator kCMP_OutputAssertEventFlag

Return the current value of the analog comparator output.

enum _cmp_hysteresis_mode

CMP Hysteresis mode.

Values:

enumerator kCMP_HysteresisLevel0

Hysteresis level 0.

enumerator kCMP_HysteresisLevel1

Hysteresis level 1.

enumerator kCMP_HysteresisLevel2

Hysteresis level 2.

enumerator kCMP_HysteresisLevel3

Hysteresis level 3.

enum _cmp_reference_voltage_source

CMP Voltage Reference source.

Values:

enumerator kCMP_VrefSourceVin1

Vin1 is selected as a resistor ladder network supply reference Vin.

enumerator kCMP_VrefSourceVin2

Vin2 is selected as a resistor ladder network supply reference Vin.

typedef enum _cmp_hysteresis_mode cmp_hysteresis_mode_t

CMP Hysteresis mode.

typedef enum _cmp_reference_voltage_source cmp_reference_voltage_source_t

CMP Voltage Reference source.

typedef struct _cmp_config cmp_config_t

Configures the comparator.

typedef struct _cmp_filter_config cmp_filter_config_t

Configures the filter.

typedef struct _cmp_dac_config cmp_dac_config_t

Configures the internal DAC.

struct _cmp_config

#include <fsl_cmp.h> Configures the comparator.

Public Members

bool enableCmp

Enable the CMP module.

cmp_hysteresis_mode_t hysteresisMode

CMP Hysteresis mode.

bool enableHighSpeed

Enable High-speed (HS) comparison mode.

bool enableInvertOutput

Enable the inverted comparator output.

bool useUnfilteredOutput

Set the compare output(COUT) to equal COUTA(true) or COUT(false).

bool enablePinOut

The comparator output is available on the associated pin.

bool enableTriggerMode

Enable the trigger mode.

struct _cmp_filter_config

#include <fsl_cmp.h> Configures the filter.

Public Members

bool enableSample

Using the external SAMPLE as a sampling clock input or using a divided bus clock.

uint8_t filterCount

Filter Sample Count. Available range is 1-7; 0 disables the filter.

uint8_t filterPeriod

Filter Sample Period. The divider to the bus clock. Available range is 0-255.

struct _cmp_dac_config

#include <fsl_cmp.h> Configures the internal DAC.

Public Members

cmp_reference_voltage_source_t referenceVoltageSource

Supply voltage reference source.

uint8_t DACValue

Value for the DAC Output Voltage. Available range is 0-63.

2.4 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.4.

Current version: 2.0.4

Change log:

- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum `_crc_bits`

CRC bit width.

Values:

enumerator `kCrcBits16`

Generate 16-bit CRC code

enumerator `kCrcBits32`

Generate 32-bit CRC code

enum `_crc_result`

CRC result type.

Values:

enumerator `kCrcFinalChecksum`

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator `kCrcIntermediateChecksum`

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for `CRC_Init()` to continue adding data to this checksum.

typedef enum `_crc_bits` `crc_bits_t`

CRC bit width.

typedef enum `_crc_result` `crc_result_t`

CRC result type.

typedef struct `_crc_config` `crc_config_t`

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void `CRC_Init(CRC_Type *base, const crc_config_t *config)`

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- `base` – CRC peripheral address.
- `config` – CRC module configuration structure.

static inline void `CRC_Deinit(CRC_Type *base)`

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- base – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

struct `_crc_config`

`#include <fsl_crc.h>` CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1\_0000\_0010\_0001 = x^{12} + x^5 + 1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from `CRC_Get16bitResult()` or `CRC_Get32bitResult()`

2.5 DAC: Digital-to-Analog Converter Driver

void `DAC_Init(DAC_Type *base, const dac_config_t *config)`

Initializes the DAC module.

This function initializes the DAC module including the following operations.

- Enabling the clock for DAC module.
- Configuring the DAC converter with a user configuration.
- Enabling the DAC module.

Parameters

- `base` – DAC peripheral base address.
- `config` – Pointer to the configuration structure. See “`dac_config_t`”.

void `DAC_Deinit(DAC_Type *base)`

De-initializes the DAC module.

This function de-initializes the DAC module including the following operations.

- Disabling the DAC module.
- Disabling the clock for the DAC module.

Parameters

- `base` – DAC peripheral base address.

void DAC_GetDefaultConfig(*dac_config_t* *config)

Initializes the DAC user configuration structure.

This function initializes the user configuration structure to a default value. The default values are as follows.

```
config->referenceVoltageSource = kDAC_ReferenceVoltageSourceVref2;  
config->enableLowPowerMode = false;
```

Parameters

- config – Pointer to the configuration structure. See “*dac_config_t*”.

static inline void DAC_Enable(DAC_Type *base, bool enable)

Enables the DAC module.

Parameters

- base – DAC peripheral base address.
- enable – Enables or disables the feature.

static inline void DAC_EnableBuffer(DAC_Type *base, bool enable)

Enables the DAC buffer.

Parameters

- base – DAC peripheral base address.
- enable – Enables or disables the feature.

void DAC_SetBufferConfig(DAC_Type *base, const *dac_buffer_config_t* *config)

Configures the CMP buffer.

Parameters

- base – DAC peripheral base address.
- config – Pointer to the configuration structure. See “*dac_buffer_config_t*”.

void DAC_GetDefaultBufferConfig(*dac_buffer_config_t* *config)

Initializes the DAC buffer configuration structure.

This function initializes the DAC buffer configuration structure to default values. The default values are as follows.

```
config->triggerMode = kDAC_BufferTriggerBySoftwareMode;  
config->watermark   = kDAC_BufferWatermark1Word;  
config->workMode    = kDAC_BufferWorkAsNormalMode;  
config->upperLimit   = DAC_DATL_COUNT - 1U;
```

Parameters

- config – Pointer to the configuration structure. See “*dac_buffer_config_t*”.

static inline void DAC_EnableBufferDMA(DAC_Type *base, bool enable)

Enables the DMA for DAC buffer.

Parameters

- base – DAC peripheral base address.
- enable – Enables or disables the feature.

void DAC_SetBufferValue(DAC_Type *base, uint8_t index, uint16_t value)

Sets the value for items in the buffer.

Parameters

- `base` – DAC peripheral base address.
- `index` – Setting the index for items in the buffer. The available index should not exceed the size of the DAC buffer.
- `value` – Setting the value for items in the buffer. 12-bits are available.

`static inline void DAC_DoSoftwareTriggerBuffer(DAC_Type *base)`

Triggers the buffer using software and updates the read pointer of the DAC buffer.

This function triggers the function using software. The read pointer of the DAC buffer is updated with one step after this function is called. Changing the read pointer depends on the buffer's work mode.

Parameters

- `base` – DAC peripheral base address.

`static inline uint8_t DAC_GetBufferReadPointer(DAC_Type *base)`

Gets the current read pointer of the DAC buffer.

This function gets the current read pointer of the DAC buffer. The current output value depends on the item indexed by the read pointer. It is updated either by a software trigger or a hardware trigger.

Parameters

- `base` – DAC peripheral base address.

Returns

The current read pointer of the DAC buffer.

`void DAC_SetBufferReadPointer(DAC_Type *base, uint8_t index)`

Sets the current read pointer of the DAC buffer.

This function sets the current read pointer of the DAC buffer. The current output value depends on the item indexed by the read pointer. It is updated either by a software trigger or a hardware trigger. After the read pointer changes, the DAC output value also changes.

Parameters

- `base` – DAC peripheral base address.
- `index` – Setting an index value for the pointer.

`void DAC_EnableBufferInterrupts(DAC_Type *base, uint32_t mask)`

Enables interrupts for the DAC buffer.

Parameters

- `base` – DAC peripheral base address.
- `mask` – Mask value for interrupts. See “`_dac_buffer_interrupt_enable`”.

`void DAC_DisableBufferInterrupts(DAC_Type *base, uint32_t mask)`

Disables interrupts for the DAC buffer.

Parameters

- `base` – DAC peripheral base address.
- `mask` – Mask value for interrupts. See “`_dac_buffer_interrupt_enable`”.

`uint8_t DAC_GetBufferStatusFlags(DAC_Type *base)`

Gets the flags of events for the DAC buffer.

Parameters

- `base` – DAC peripheral base address.

Returns

Mask value for the asserted flags. See “_dac_buffer_status_flags”.

void DAC_ClearBufferStatusFlags(DAC_Type *base, uint32_t mask)

Clears the flags of events for the DAC buffer.

Parameters

- base – DAC peripheral base address.
- mask – Mask value for flags. See “_dac_buffer_status_flags_t”.

FSL_DAC_DRIVER_VERSION

DAC driver version 2.0.2.

enum _dac_buffer_status_flags

DAC buffer flags.

Values:

enumerator kDAC_BufferWatermarkFlag

DAC Buffer Watermark Flag.

enumerator kDAC_BufferReadPointerTopPositionFlag

DAC Buffer Read Pointer Top Position Flag.

enumerator kDAC_BufferReadPointerBottomPositionFlag

DAC Buffer Read Pointer Bottom Position Flag.

enum _dac_buffer_interrupt_enable

DAC buffer interrupts.

Values:

enumerator kDAC_BufferWatermarkInterruptEnable

DAC Buffer Watermark Interrupt Enable.

enumerator kDAC_BufferReadPointerTopInterruptEnable

DAC Buffer Read Pointer Top Flag Interrupt Enable.

enumerator kDAC_BufferReadPointerBottomInterruptEnable

DAC Buffer Read Pointer Bottom Flag Interrupt Enable

enum _dac_reference_voltage_source

DAC reference voltage source.

Values:

enumerator kDAC_ReferenceVoltageSourceVref1

The DAC selects DACREF_1 as the reference voltage.

enumerator kDAC_ReferenceVoltageSourceVref2

The DAC selects DACREF_2 as the reference voltage.

enum _dac_buffer_trigger_mode

DAC buffer trigger mode.

Values:

enumerator kDAC_BufferTriggerByHardwareMode

The DAC hardware trigger is selected.

enumerator kDAC_BufferTriggerBySoftwareMode

The DAC software trigger is selected.

enum `_dac_buffer_watermark`

DAC buffer watermark.

Values:

enumerator `kDAC_BufferWatermark1Word`

1 word away from the upper limit.

enumerator `kDAC_BufferWatermark2Word`

2 words away from the upper limit.

enumerator `kDAC_BufferWatermark3Word`

3 words away from the upper limit.

enumerator `kDAC_BufferWatermark4Word`

4 words away from the upper limit.

enum `_dac_buffer_work_mode`

DAC buffer work mode.

Values:

enumerator `kDAC_BufferWorkAsNormalMode`

Normal mode.

enumerator `kDAC_BufferWorkAsSwingMode`

Swing mode.

enumerator `kDAC_BufferWorkAsOneTimeScanMode`

One-Time Scan mode.

enumerator `kDAC_BufferWorkAsFIFOMode`

FIFO mode.

typedef enum `_dac_reference_voltage_source` `dac_reference_voltage_source_t`

DAC reference voltage source.

typedef enum `_dac_buffer_trigger_mode` `dac_buffer_trigger_mode_t`

DAC buffer trigger mode.

typedef enum `_dac_buffer_watermark` `dac_buffer_watermark_t`

DAC buffer watermark.

typedef enum `_dac_buffer_work_mode` `dac_buffer_work_mode_t`

DAC buffer work mode.

typedef struct `_dac_config` `dac_config_t`

DAC module configuration.

typedef struct `_dac_buffer_config` `dac_buffer_config_t`

DAC buffer configuration.

struct `_dac_config`

`#include <fsl_dac.h>` DAC module configuration.

Public Members

`dac_reference_voltage_source_t` `referenceVoltageSource`

Select the DAC reference voltage source.

bool `enableLowPowerMode`

Enable the low-power mode.

struct `_dac_buffer_config`
`#include <fsl_dac.h>` DAC buffer configuration.

Public Members

`dac_buffer_trigger_mode_t` triggerMode

Select the buffer's trigger mode.

`dac_buffer_watermark_t` watermark

Select the buffer's watermark.

`dac_buffer_work_mode_t` workMode

Select the buffer's work mode.

`uint8_t` upperLimit

Set the upper limit for the buffer index. Normally, 0-15 is available for a buffer with 16 items.

2.6 DMAMUX: Direct Memory Access Multiplexer Driver

void `DMAMUX_Init(DMAMUX_Type *base)`

Initializes the DMAMUX peripheral.

This function ungates the DMAMUX clock.

Parameters

- `base` – DMAMUX peripheral base address.

void `DMAMUX_Deinit(DMAMUX_Type *base)`

Deinitializes the DMAMUX peripheral.

This function gates the DMAMUX clock.

Parameters

- `base` – DMAMUX peripheral base address.

static inline void `DMAMUX_EnableChannel(DMAMUX_Type *base, uint32_t channel)`

Enables the DMAMUX channel.

This function enables the DMAMUX channel.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

static inline void `DMAMUX_DisableChannel(DMAMUX_Type *base, uint32_t channel)`

Disables the DMAMUX channel.

This function disables the DMAMUX channel.

Note: The user must disable the DMAMUX channel before configuring it.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

```
static inline void DMAMUX_SetSource(DMAMUX_Type *base, uint32_t channel, int32_t source)
```

Configures the DMAMUX channel source.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.
- source – Channel source, which is used to trigger the DMA transfer. User need to use the `dma_request_source_t` type as the input parameter.

```
static inline void DMAMUX_EnablePeriodTrigger(DMAMUX_Type *base, uint32_t channel)
```

Enables the DMAMUX period trigger.

This function enables the DMAMUX period trigger feature.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.

```
static inline void DMAMUX_DisablePeriodTrigger(DMAMUX_Type *base, uint32_t channel)
```

Disables the DMAMUX period trigger.

This function disables the DMAMUX period trigger.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.

```
FSL_DMAMUX_DRIVER_VERSION
```

DMAMUX driver version 2.1.1.

2.7 DSPI: Serial Peripheral Interface Driver

2.8 DSPI Driver

```
void DSPI_MasterInit(SPI_Type *base, const dspi_master_config_t *masterConfig, uint32_t  
srcClock_Hz)
```

Initializes the DSPI master.

This function initializes the DSPI master configuration. This is an example use case.

```
dspi_master_config_t masterConfig;
masterConfig.whichCtar          = kDSPI_Ctar0;
masterConfig.ctarConfig.baudRate    = 500000000U;
masterConfig.ctarConfig.bitsPerFrame = 8;
masterConfig.ctarConfig.cpol        = kDSPI_ClockPolarityActiveHigh;
masterConfig.ctarConfig.cpha        = kDSPI_ClockPhaseFirstEdge;
masterConfig.ctarConfig.direction   = kDSPI_MsbFirst;
masterConfig.ctarConfig.pcsToSckDelayInNanoSec = 1000000000U / masterConfig.ctarConfig.  
↪ baudRate;
masterConfig.ctarConfig.lastSckToPcsDelayInNanoSec = 1000000000U / masterConfig.ctarConfig.  
↪ baudRate;
masterConfig.ctarConfig.betweenTransferDelayInNanoSec = 1000000000U / masterConfig.ctarConfig.  
↪ baudRate;
masterConfig.whichPcs            = kDSPI_Pcs0;
masterConfig.pcsActiveHighOrLow  = kDSPI_PcsActiveLow;
```

(continues on next page)

(continued from previous page)

```

masterConfig.enableContinuousSCK          = false;
masterConfig.enableRxFifoOverWrite        = false;
masterConfig.enableModifiedTimingFormat   = false;
masterConfig.samplePoint                   = kDSPI_SckToSin0Clock;
DSPI_MasterInit(base, &masterConfig, srcClock_Hz);

```

Parameters

- base – DSPI peripheral address.
- masterConfig – Pointer to the structure `dspi_master_config_t`.
- srcClock_Hz – Module source input clock in Hertz.

void DSPI_MasterGetDefaultConfig(*dspi_master_config_t* *masterConfig)

Sets the `dspi_master_config_t` structure to default values.

The purpose of this API is to get the configuration structure initialized for the `DSPI_MasterInit()`. Users may use the initialized structure unchanged in the `DSPI_MasterInit()` or modify the structure before calling the `DSPI_MasterInit()`. Example:

```

dspi_master_config_t masterConfig;
DSPI_MasterGetDefaultConfig(&masterConfig);

```

Parameters

- masterConfig – pointer to `dspi_master_config_t` structure

void DSPI_SlaveInit(SPI_Type *base, const *dspi_slave_config_t* *slaveConfig)

DSPI slave configuration.

This function initializes the DSPI slave configuration. This is an example use case.

```

dspi_slave_config_t slaveConfig;
slaveConfig->whichCtar          = kDSPI_Ctar0;
slaveConfig->ctarConfig.bitsPerFrame = 8;
slaveConfig->ctarConfig.cpol      = kDSPI_ClockPolarityActiveHigh;
slaveConfig->ctarConfig.cpha      = kDSPI_ClockPhaseFirstEdge;
slaveConfig->enableContinuousSCK   = false;
slaveConfig->enableRxFifoOverWrite = false;
slaveConfig->enableModifiedTimingFormat = false;
slaveConfig->samplePoint           = kDSPI_SckToSin0Clock;
DSPI_SlaveInit(base, &slaveConfig);

```

Parameters

- base – DSPI peripheral address.
- slaveConfig – Pointer to the structure `dspi_slave_config_t`.

void DSPI_SlaveGetDefaultConfig(*dspi_slave_config_t* *slaveConfig)

Sets the `dspi_slave_config_t` structure to a default value.

The purpose of this API is to get the configuration structure initialized for the `DSPI_SlaveInit()`. Users may use the initialized structure unchanged in the `DSPI_SlaveInit()` or modify the structure before calling the `DSPI_SlaveInit()`. This is an example.

```

dspi_slave_config_t slaveConfig;
DSPI_SlaveGetDefaultConfig(&slaveConfig);

```

Parameters

- slaveConfig – Pointer to the `dspi_slave_config_t` structure.

```
void DSPI_Deinit(SPI_Type *base)
```

De-initializes the DSPI peripheral. Call this API to disable the DSPI clock.

Parameters

- base – DSPI peripheral address.

```
static inline void DSPI_Enable(SPI_Type *base, bool enable)
```

Enables the DSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – DSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

```
static inline uint32_t DSPI_GetStatusFlags(SPI_Type *base)
```

Gets the DSPI status flag state.

Parameters

- base – DSPI peripheral address.

Returns

DSPI status (in SR register).

```
static inline void DSPI_ClearStatusFlags(SPI_Type *base, uint32_t statusFlags)
```

Clears the DSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status bit to clear. The list of status bits is defined in the **dspi_status_and_interrupt_request_t**. The function uses these bit positions in its algorithm to clear the desired flag state. This is an example.

```
DSPI_ClearStatusFlags(base, kDSPI_TxCompleteFlag|kDSPI_EndOfQueueFlag);
```

Parameters

- base – DSPI peripheral address.
- statusFlags – The status flag used from the type `dspi_flags`.

```
void DSPI_EnableInterrupts(SPI_Type *base, uint32_t mask)
```

Enables the DSPI interrupts.

This function configures various interrupt masks of the DSPI. The parameters are a base and an interrupt mask.

```
DSPI_EnableInterrupts(base, kDSPI_TxCompleteInterruptEnable | kDSPI_
↳EndOfQueueInterruptEnable );
```

Note: For Tx Fill and Rx FIFO drain requests, enable the interrupt request and disable the DMA request. Do not use this API(write to RSER register) while DSPI is in running state.

Parameters

- base – DSPI peripheral address.
- mask – The interrupt mask; use the enum `_dspi_interrupt_enable`.

```
static inline void DSPI_DisableInterrupts(SPI_Type *base, uint32_t mask)
```

Disables the DSPI interrupts.

```
DSPI_DisableInterrupts(base, kDSPI_TxCompleteInterruptEnable | kDSPI_
↳EndOfQueueInterruptEnable );
```


Parameters

- base – DSPI peripheral address.
- mask – The interrupt mask; use the enum `_dspi_interrupt_enable`.

```
static inline void DSPI_EnableDMA(SPI_Type *base, uint32_t mask)
```

Enables the DSPI DMA request.

This function configures the Rx and Tx DMA mask of the DSPI. The parameters are a base and a DMA mask.

```
DSPI_EnableDMA(base, kDSPI_TxDmaEnable | kDSPI_RxDmaEnable);
```

Parameters

- base – DSPI peripheral address.
- mask – The interrupt mask; use the enum `_dspi_dma_enable`.

```
static inline void DSPI_DisableDMA(SPI_Type *base, uint32_t mask)
```

Disables the DSPI DMA request.

This function configures the Rx and Tx DMA mask of the DSPI. The parameters are a base and a DMA mask.

```
SPI_DisableDMA(base, kDSPI_TxDmaEnable | kDSPI_RxDmaEnable);
```

Parameters

- base – DSPI peripheral address.
- mask – The interrupt mask; use the enum `_dspi_dma_enable`.

```
static inline uint32_t DSPI_MasterGetTxRegisterAddress(SPI_Type *base)
```

Gets the DSPI master PUSHHR data register address for the DMA operation.

This function gets the DSPI master PUSHHR data register address because this value is needed for the DMA operation.

Parameters

- base – DSPI peripheral address.

Returns

The DSPI master PUSHHR data register address.

```
static inline uint32_t DSPI_SlaveGetTxRegisterAddress(SPI_Type *base)
```

Gets the DSPI slave PUSHHR data register address for the DMA operation.

This function gets the DSPI slave PUSHHR data register address as this value is needed for the DMA operation.

Parameters

- base – DSPI peripheral address.

Returns

The DSPI slave PUSHHR data register address.

```
static inline uint32_t DSPI_GetRxRegisterAddress(SPI_Type *base)
```

Gets the DSPI POPR data register address for the DMA operation.

This function gets the DSPI POPR data register address as this value is needed for the DMA operation.

Parameters

- base – DSPI peripheral address.

Returns

The DSPI POPR data register address.

```
uint32_t DSPI_GetInstance(SPI_Type *base)
```

Get instance number for DSPI module.

Parameters

- base – DSPI peripheral base address.

```
static inline void DSPI_SetMasterSlaveMode(SPI_Type *base, dspi_master_slave_mode_t mode)
```

Configures the DSPI for master or slave.

Parameters

- base – DSPI peripheral address.
- mode – Mode setting (master or slave) of type `dspi_master_slave_mode_t`.

```
static inline bool DSPI_IsMaster(SPI_Type *base)
```

Returns whether the DSPI module is in master mode.

Parameters

- base – DSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

```
static inline void DSPI_StartTransfer(SPI_Type *base)
```

Starts the DSPI transfers and clears HALT bit in MCR.

This function sets the module to start data transfer in either master or slave mode.

Parameters

- base – DSPI peripheral address.

```
static inline void DSPI_StopTransfer(SPI_Type *base)
```

Stops DSPI transfers and sets the HALT bit in MCR.

This function stops data transfers in either master or slave modes.

Parameters

- base – DSPI peripheral address.

```
static inline void DSPI_SetFifoEnable(SPI_Type *base, bool enableTxFifo, bool enableRxFifo)
```

Enables or disables the DSPI FIFOs.

This function allows the caller to disable/enable the Tx and Rx FIFOs independently.

Note: To disable, pass in a logic 0 (false) for the particular FIFO configuration. To enable, pass in a logic 1 (true).

Parameters

- base – DSPI peripheral address.
- enableTxFifo – Disables (false) the TX FIFO; Otherwise, enables (true) the TX FIFO
- enableRxFifo – Disables (false) the RX FIFO; Otherwise, enables (true) the RX FIFO

```
static inline void DSPI_FlushFifo(SPI_Type *base, bool flushTxFifo, bool flushRxFifo)
```

Flushes the DSPI FIFOs.

Parameters

- base – DSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO; Otherwise, does not flush (false) the Tx FIFO
- flushRxFifo – Flushes (true) the Rx FIFO; Otherwise, does not flush (false) the Rx FIFO

```
static inline void DSPI_SetAllPcsPolarity(SPI_Type *base, uint32_t mask)
```

Configures the DSPI peripheral chip select polarity simultaneously. For example, PCS0 and PCS1 are set to active low and other PCS is set to active high. Note that the number of PCSs is specific to the device.

```
DSPI_SetAllPcsPolarity(base, kDSPI_Pcs0ActiveLow | kDSPI_Pcs1ActiveLow);
```

Parameters

- base – DSPI peripheral address.
- mask – The PCS polarity mask; use the enum `_dspi_pcs_polarity`.

```
uint32_t DSPI_MasterSetBaudRate(SPI_Type *base, dspi_ctar_selection_t whichCtar, uint32_t  
                                baudRate_Bps, uint32_t srcClock_Hz)
```

Sets the DSPI baud rate in bits per second.

This function takes in the desired baudRate_Bps (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate, and returns the calculated baud rate in bits-per-second. It requires that the caller also provide the frequency of the module source clock (in Hertz).

Parameters

- base – DSPI peripheral address.
- whichCtar – The desired Clock and Transfer Attributes Register (CTAR) of the type `dspi_ctar_selection_t`
- baudRate_Bps – The desired baud rate in bits per second
- srcClock_Hz – Module source input clock in Hertz

Returns

The actual calculated baud rate

```
void DSPI_MasterSetDelayScaler(SPI_Type *base, dspi_ctar_selection_t whichCtar, uint32_t  
                                prescaler, uint32_t scaler, dspi_delay_type_t whichDelay)
```

Manually configures the delay prescaler and scaler for a particular CTAR.

This function configures the PCS to SCK delay pre-scalar (PcsSCK) and scalar (CSSCK), after SCK delay pre-scalar (PASC) and scalar (ASC), and the delay after transfer pre-scalar (PDT) and scalar (DT).

These delay names are available in the type `dspi_delay_type_t`.

The user passes the delay to the configuration along with the prescaler and scaler value. This allows the user to directly set the prescaler/scaler values if pre-calculated or to manually increment either value.

Parameters

- base – DSPI peripheral address.

- `whichCtar` – The desired Clock and Transfer Attributes Register (CTAR) of type `dspi_ctar_selection_t`.
- `prescaler` – The prescaler delay value (can be an integer 0, 1, 2, or 3).
- `scaler` – The scaler delay value (can be any integer between 0 to 15).
- `whichDelay` – The desired delay to configure; must be of type `dspi_delay_type_t`

```
uint32_t DSPI_MasterSetDelayTimes(SPI_Type *base, dspi_ctar_selection_t whichCtar,
                                dspi_delay_type_t whichDelay, uint32_t srcClock_Hz,
                                uint32_t delayTimeInNanoSec)
```

Calculates the delay prescaler and scaler based on the desired delay input in nanoseconds.

This function calculates the values for the following. PCS to SCK delay pre-scaler (PCSSCK) and scalar (CSSCK), or After SCK delay pre-scaler (PASC) and scalar (ASC), or Delay after transfer pre-scaler (PDT) and scalar (DT).

These delay names are available in the type `dspi_delay_type_t`.

The user passes which delay to configure along with the desired delay value in nanoseconds. The function calculates the values needed for the prescaler and scaler. Note that returning the calculated delay as an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. The higher-level peripheral driver alerts the user of an out of range delay input.

Parameters

- `base` – DSPI peripheral address.
- `whichCtar` – The desired Clock and Transfer Attributes Register (CTAR) of type `dspi_ctar_selection_t`.
- `whichDelay` – The desired delay to configure, must be of type `dspi_delay_type_t`
- `srcClock_Hz` – Module source input clock in Hertz
- `delayTimeInNanoSec` – The desired delay value in nanoseconds.

Returns

The actual calculated delay value.

```
static inline void DSPI_MasterWriteData(SPI_Type *base, dspi_command_data_config_t
                                       *command, uint16_t data)
```

Writes data into the data buffer for master mode.

In master mode, the 16-bit data is appended to the 16-bit command info. The command portion provides characteristics of the data, such as the optional continuous chip select operation between transfers, the desired Clock and Transfer Attributes register to use for the associated SPI frame, the desired PCS signal to use for the data transfer, whether the current transfer is the last in the queue, and whether to clear the transfer count (normally needed when sending the first frame of a data packet). This is an example.

```
dspi_command_data_config_t commandConfig;
commandConfig.isPcsContinuous = true;
commandConfig.whichCtar = kDSPICTar0;
commandConfig.whichPcs = kDSPIPcs0;
commandConfig.clearTransferCount = false;
commandConfig.isEndOfQueue = false;
DSPI_MasterWriteData(base, &commandConfig, dataWord);
```

Parameters

- base – DSPI peripheral address.
- command – Pointer to the command structure.
- data – The data word to be sent.

void DSPI_GetDefaultDataCommandConfig(*dspi_command_data_config_t* *command)

Sets the *dspi_command_data_config_t* structure to default values.

The purpose of this API is to get the configuration structure initialized for use in the **DSPI_MasterWrite_xx()**. Users may use the initialized structure unchanged in the **DSPI_MasterWrite_xx()** or modify the structure before calling the **DSPI_MasterWrite_xx()**. This is an example.

```
dspi_command_data_config_t command;  
DSPI_GetDefaultDataCommandConfig(&command);
```

Parameters

- command – Pointer to the *dspi_command_data_config_t* structure.

void DSPI_MasterWriteDataBlocking(*SPI_Type* *base, *dspi_command_data_config_t* *command, *uint16_t* data)

Writes data into the data buffer master mode and waits till complete to return.

In master mode, the 16-bit data is appended to the 16-bit command info. The command portion provides characteristics of the data, such as the optional continuous chip select operation between transfers, the desired Clock and Transfer Attributes register to use for the associated SPI frame, the desired PCS signal to use for the data transfer, whether the current transfer is the last in the queue, and whether to clear the transfer count (normally needed when sending the first frame of a data packet). This is an example.

```
dspi_command_config_t commandConfig;  
commandConfig.isPcsContinuous = true;  
commandConfig.whichCtar = kDSPICTar0;  
commandConfig.whichPcs = kDSPIPcs1;  
commandConfig.clearTransferCount = false;  
commandConfig.isEndOfQueue = false;  
DSPI_MasterWriteDataBlocking(base, &commandConfig, dataWord);
```

Note: This function does not return until after the transmit is complete. Also note that the DSPI must be enabled and running to transmit data (MCR[MDIS] & [HALT] = 0). Because the SPI is a synchronous protocol, the received data is available when the transmit completes.

Parameters

- base – DSPI peripheral address.
- command – Pointer to the command structure.
- data – The data word to be sent.

static inline *uint32_t* DSPI_MasterGetFormattedCommand(*dspi_command_data_config_t* *command)

Returns the DSPI command word formatted to the PUSHHR data register bit field.

This function allows the caller to pass in the data command structure and returns the command word formatted according to the DSPI PUSHHR register bit field placement. The user can then “OR” the returned command word with the desired data to send and use the function **DSPI_HAL_WriteCommandDataMastermode** or

DSPI_HAL_WriteCommandDataMastermodeBlocking to write the entire 32-bit command data word to the PUSHHR. This helps improve performance in cases where the command structure is constant. For example, the user calls this function before starting a transfer to generate the command word. When they are ready to transmit the data, they OR this formatted command word with the desired data to transmit. This process increases transmit performance when compared to calling send functions, such as **DSPI_HAL_WriteDataMastermode**, which format the command word each time a data word is to be sent.

Parameters

- `command` – Pointer to the command structure.

Returns

The command word formatted to the PUSHHR data register bit field.

`void DSPI_MasterWriteCommandDataBlocking(SPI_Type *base, uint32_t data)`

Writes a 32-bit data word (16-bit command appended with 16-bit data) into the data buffer master mode and waits till complete to return.

In this function, the user must append the 16-bit data to the 16-bit command information and then provide the total 32-bit word as the data to send. The command portion provides characteristics of the data, such as the optional continuous chip select operation between transfers, the desired Clock and Transfer Attributes register to use for the associated SPI frame, the desired PCS signal to use for the data transfer, whether the current transfer is the last in the queue, and whether to clear the transfer count (normally needed when sending the first frame of a data packet). The user is responsible for appending this command with the data to send. This is an example:

```
dataWord = <16-bit command> | <16-bit data>;
DSPI_MasterWriteCommandDataBlocking(base, dataWord);
```

For a blocking polling transfer, see methods below.

Option 1
<code>uint32_t command_to_send = DSPI_MasterGetFormattedCommand(&command);</code>
<code>uint32_t data0 = command_to_send data_need_to_send_0;</code>
<code>uint32_t data1 = command_to_send data_need_to_send_1;</code>
<code>uint32_t data2 = command_to_send data_need_to_send_2;</code>
<code>DSPI_MasterWriteCommandDataBlocking(base,data0);</code>
<code>DSPI_MasterWriteCommandDataBlocking(base,data1);</code>
<code>DSPI_MasterWriteCommandDataBlocking(base,data2);</code>

Option 2
<code>DSPI_MasterWriteDataBlocking(base,&command,data_need_to_send_0);</code>
<code>DSPI_MasterWriteDataBlocking(base,&command,data_need_to_send_1);</code>
<code>DSPI_MasterWriteDataBlocking(base,&command,data_need_to_send_2);</code>

Note: This function does not return until after the transmit is complete. Also note that the DSPI must be enabled and running to transmit data (MCR[MDIS] & [HALT] = 0). Because the SPI is a synchronous protocol, the received data is available when the transmit completes.

Parameters

- `base` – DSPI peripheral address.
- `data` – The data word (command and data combined) to be sent.

```
static inline void DSPI_SlaveWriteData(SPI_Type *base, uint32_t data)
```

Writes data into the data buffer in slave mode.

In slave mode, up to 16-bit words may be written.

Parameters

- `base` – DSPI peripheral address.
- `data` – The data to send.

```
void DSPI_SlaveWriteDataBlocking(SPI_Type *base, uint32_t data)
```

Writes data into the data buffer in slave mode, waits till data was transmitted, and returns.

In slave mode, up to 16-bit words may be written. The function first clears the transmit complete flag, writes data into data register, and finally waits until the data is transmitted.

Parameters

- `base` – DSPI peripheral address.
- `data` – The data to send.

```
static inline uint32_t DSPI_ReadData(SPI_Type *base)
```

Reads data from the data buffer.

Parameters

- `base` – DSPI peripheral address.

Returns

The data from the read data buffer.

```
void DSPI_SetDummyData(SPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- `base` – DSPI peripheral address.
- `dummyData` – Data to be transferred when tx buffer is NULL.

```
void DSPI_MasterTransferCreateHandle(SPI_Type *base, dspi_master_handle_t *handle,  
                                     dspi_master_transfer_callback_t callback, void  
                                     *userData)
```

Initializes the DSPI master handle.

This function initializes the DSPI handle, which can be used for other DSPI transactional APIs. Usually, for a specified DSPI instance, call this API once to get the initialized handle.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – DSPI handle pointer to `_dspi_master_handle`.
- `callback` – DSPI callback.
- `userData` – Callback function parameter.

```
status_t DSPI_MasterTransferBlocking(SPI_Type *base, dspi_transfer_t *transfer)
```

DSPI master transfer data using polling.

This function transfers data using polling. This is a blocking function, which does not return until all transfers have been completed.

Parameters

- base – DSPI peripheral base address.
- transfer – Pointer to the `dspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` DSPI_MasterTransferNonBlocking(`SPI_Type` *base, `dspi_master_handle_t` *handle, `dspi_transfer_t` *transfer)

DSPI master transfer data using interrupts.

This function transfers data using interrupts. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Parameters

- base – DSPI peripheral base address.
- handle – Pointer to the `_dspi_master_handle` structure which stores the transfer state.
- transfer – Pointer to the `dspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` DSPI_MasterHalfDuplexTransferBlocking(`SPI_Type` *base, `dspi_half_duplex_transfer_t` *xfer)

Transfers a block of data using a polling method.

This function will do a half-duplex transfer for DSPI master, This is a blocking function, which does not return until all transfer have been completed. And data transfer will be half-duplex, users can set transmit first or receive first.

Parameters

- base – DSPI base pointer
- xfer – pointer to `dspi_half_duplex_transfer_t` structure

Returns

status of `status_t`.

`status_t` DSPI_MasterHalfDuplexTransferNonBlocking(`SPI_Type` *base, `dspi_master_handle_t` *handle, `dspi_half_duplex_transfer_t` *xfer)

Performs a non-blocking DSPI interrupt transfer.

This function transfers data using interrupts, the transfer mechanism is half-duplex. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Parameters

- base – DSPI peripheral base address.
- handle – pointer to `_dspi_master_handle` structure which stores the transfer state
- xfer – pointer to `dspi_half_duplex_transfer_t` structure

Returns

status of `status_t`.

`status_t` DSPI_MasterTransferGetCount(`SPI_Type` *base, `dspi_master_handle_t` *handle, `size_t` *count)

Gets the master transfer count.

This function gets the master transfer count.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – Pointer to the `_dspi_master_handle` structure which stores the transfer state.
- `count` – The number of bytes transferred by using the non-blocking transaction.

Returns

status of `status_t`.

```
void DSPI_MasterTransferAbort(SPI_Type *base, dspi_master_handle_t *handle)
```

DSPI master aborts a transfer using an interrupt.

This function aborts a transfer using an interrupt.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – Pointer to the `_dspi_master_handle` structure which stores the transfer state.

```
void DSPI_MasterTransferHandleIRQ(SPI_Type *base, dspi_master_handle_t *handle)
```

DSPI Master IRQ handler function.

This function processes the DSPI transmit and receive IRQ.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – Pointer to the `_dspi_master_handle` structure which stores the transfer state.

```
void DSPI_SlaveTransferCreateHandle(SPI_Type *base, dspi_slave_handle_t *handle,  
                                   dspi_slave_transfer_callback_t callback, void *userData)
```

Initializes the DSPI slave handle.

This function initializes the DSPI handle, which can be used for other DSPI transactional APIs. Usually, for a specified DSPI instance, call this API once to get the initialized handle.

Parameters

- `handle` – DSPI handle pointer to the `_dspi_slave_handle`.
- `base` – DSPI peripheral base address.
- `callback` – DSPI callback.
- `userData` – Callback function parameter.

```
status_t DSPI_SlaveTransferNonBlocking(SPI_Type *base, dspi_slave_handle_t *handle,  
                                       dspi_transfer_t *transfer)
```

DSPI slave transfers data using an interrupt.

This function transfers data using an interrupt. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Parameters

- `base` – DSPI peripheral base address.

- `handle` – Pointer to the `_dspi_slave_handle` structure which stores the transfer state.
- `transfer` – Pointer to the `dspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` DSPI_SlaveTransferGetCount(`SPI_Type` *`base`, `dspi_slave_handle_t` *`handle`, `size_t` *`count`)

Gets the slave transfer count.

This function gets the slave transfer count.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – Pointer to the `_dspi_master_handle` structure which stores the transfer state.
- `count` – The number of bytes transferred by using the non-blocking transaction.

Returns

status of `status_t`.

`void` DSPI_SlaveTransferAbort(`SPI_Type` *`base`, `dspi_slave_handle_t` *`handle`)

DSPI slave aborts a transfer using an interrupt.

This function aborts a transfer using an interrupt.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – Pointer to the `_dspi_slave_handle` structure which stores the transfer state.

`void` DSPI_SlaveTransferHandleIRQ(`SPI_Type` *`base`, `dspi_slave_handle_t` *`handle`)

DSPI Master IRQ handler function.

This function processes the DSPI transmit and receive IRQ.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – Pointer to the `_dspi_slave_handle` structure which stores the transfer state.

`uint8_t` DSPI_GetDummyDataInstance(`SPI_Type` *`base`)

brief Dummy data for each instance.

The purpose of this API is to avoid MISRA rule8.5 : Multiple declarations of externally-linked object or function `g_dspiDummyData`.

param `base` DSPI peripheral base address.

FSL_DSPI_DRIVER_VERSION

DSPI driver version 2.2.7.

Status for the DSPI driver.

Values:

enumerator `kStatus_DSPI_Busy`

DSPI transfer is busy.

enumerator kStatus_DSPI_Error
DSPI driver error.

enumerator kStatus_DSPI_Idle
DSPI is idle.

enumerator kStatus_DSPI_OutOfRange
DSPI transfer out of range.

enum _dspi_flags
DSPI status flags in SPIx_SR register.

Values:

enumerator kDSPI_TxCompleteFlag
Transfer Complete Flag.

enumerator kDSPI_EndOfQueueFlag
End of Queue Flag.

enumerator kDSPI_TxFifoUnderflowFlag
Transmit FIFO Underflow Flag.

enumerator kDSPI_TxFifoFillRequestFlag
Transmit FIFO Fill Flag.

enumerator kDSPI_RxFifoOverflowFlag
Receive FIFO Overflow Flag.

enumerator kDSPI_RxFifoDrainRequestFlag
Receive FIFO Drain Flag.

enumerator kDSPI_TxAndRxStatusFlag
The module is in Stopped/Running state.

enumerator kDSPI_AllStatusFlag
All statuses above.

enum _dspi_interrupt_enable
DSPI interrupt source.

Values:

enumerator kDSPI_TxCompleteInterruptEnable
TCF interrupt enable.

enumerator kDSPI_EndOfQueueInterruptEnable
EOQF interrupt enable.

enumerator kDSPI_TxFifoUnderflowInterruptEnable
TFUF interrupt enable.

enumerator kDSPI_TxFifoFillRequestInterruptEnable
TFFF interrupt enable, DMA disable.

enumerator kDSPI_RxFifoOverflowInterruptEnable
RFOF interrupt enable.

enumerator kDSPI_RxFifoDrainRequestInterruptEnable
RFDF interrupt enable, DMA disable.

enumerator kDSPI_AllInterruptEnable
All above interrupts enable.

enum _dspi_dma_enable

DSPI DMA source.

Values:

enumerator kDSPI_TxDmaEnable

TFFF flag generates DMA requests. No Tx interrupt request.

enumerator kDSPI_RxDmaEnable

RFDF flag generates DMA requests. No Rx interrupt request.

enum _dspi_master_slave_mode

DSPI master or slave mode configuration.

Values:

enumerator kDSPI_Master

DSPI peripheral operates in master mode.

enumerator kDSPI_Slave

DSPI peripheral operates in slave mode.

enum _dspi_master_sample_point

DSPI Sample Point: Controls when the DSPI master samples SIN in the Modified Transfer Format. This field is valid only when the CPHA bit in the CTAR register is 0.

Values:

enumerator kDSPI_SckToSin0Clock

0 system clocks between SCK edge and SIN sample.

enumerator kDSPI_SckToSin1Clock

1 system clock between SCK edge and SIN sample.

enumerator kDSPI_SckToSin2Clock

2 system clocks between SCK edge and SIN sample.

enum _dspi_which_pcs_config

DSPI Peripheral Chip Select (Pcs) configuration (which Pcs to configure).

Values:

enumerator kDSPI_Pcs0

Pcs[0]

enumerator kDSPI_Pcs1

Pcs[1]

enumerator kDSPI_Pcs2

Pcs[2]

enumerator kDSPI_Pcs3

Pcs[3]

enumerator kDSPI_Pcs4

Pcs[4]

enumerator kDSPI_Pcs5

Pcs[5]

enum _dspi_pcs_polarity_config

DSPI Peripheral Chip Select (Pcs) Polarity configuration.

Values:

enumerator kDSPI_PcsActiveHigh

Pcs Active High (idles low).

enumerator kDSPI_PcsActiveLow

Pcs Active Low (idles high).

enum _dspi_pcs_polarity

DSPI Peripheral Chip Select (Pcs) Polarity.

Values:

enumerator kDSPI_Pcs0ActiveLow

Pcs0 Active Low (idles high).

enumerator kDSPI_Pcs1ActiveLow

Pcs1 Active Low (idles high).

enumerator kDSPI_Pcs2ActiveLow

Pcs2 Active Low (idles high).

enumerator kDSPI_Pcs3ActiveLow

Pcs3 Active Low (idles high).

enumerator kDSPI_Pcs4ActiveLow

Pcs4 Active Low (idles high).

enumerator kDSPI_Pcs5ActiveLow

Pcs5 Active Low (idles high).

enumerator kDSPI_PcsAllActiveLow

Pcs0 to Pcs5 Active Low (idles high).

enum _dspi_clock_polarity

DSPI clock polarity configuration for a given CTAR.

Values:

enumerator kDSPI_ClockPolarityActiveHigh

CPOL=0. Active-high DSPI clock (idles low).

enumerator kDSPI_ClockPolarityActiveLow

CPOL=1. Active-low DSPI clock (idles high).

enum _dspi_clock_phase

DSPI clock phase configuration for a given CTAR.

Values:

enumerator kDSPI_ClockPhaseFirstEdge

CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator kDSPI_ClockPhaseSecondEdge

CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum _dspi_shift_direction

DSPI data shifter direction options for a given CTAR.

Values:

enumerator kDSPI_MsbFirst

Data transfers start with most significant bit.

enumerator kDSPI_LsbFirst

Data transfers start with least significant bit. Shifting out of LSB is not supported for slave

enum __dspi_delay_type

DSPI delay type selection.

Values:

enumerator kDSPI_PcsToSck

Pcs-to-SCK delay.

enumerator kDSPI_LastSckToPcs

The last SCK edge to Pcs delay.

enumerator kDSPI_BetweenTransfer

Delay between transfers.

enum __dspi_ctar_selection

DSPI Clock and Transfer Attributes Register (CTAR) selection.

Values:

enumerator kDSPI_Ctar0

CTAR0 selection option for master or slave mode; note that CTAR0 and CTAR0_SLAVE are the same register address.

enumerator kDSPI_Ctar1

CTAR1 selection option for master mode only.

enumerator kDSPI_Ctar2

CTAR2 selection option for master mode only; note that some devices do not support CTAR2.

enumerator kDSPI_Ctar3

CTAR3 selection option for master mode only; note that some devices do not support CTAR3.

enumerator kDSPI_Ctar4

CTAR4 selection option for master mode only; note that some devices do not support CTAR4.

enumerator kDSPI_Ctar5

CTAR5 selection option for master mode only; note that some devices do not support CTAR5.

enumerator kDSPI_Ctar6

CTAR6 selection option for master mode only; note that some devices do not support CTAR6.

enumerator kDSPI_Ctar7

CTAR7 selection option for master mode only; note that some devices do not support CTAR7.

enum __dspi_transfer_config_flag_for_master

Use this enumeration for the DSPI master transfer configFlags.

Values:

enumerator kDSPI_MasterCtar0

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR0 setting.

enumerator kDSPI_MasterCtar1

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR1 setting.

enumerator kDSPI_MasterCtar2

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR2 setting.

enumerator kDSPI_MasterCtar3

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR3 setting.

enumerator kDSPI_MasterCtar4

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR4 setting.

enumerator kDSPI_MasterCtar5

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR5 setting.

enumerator kDSPI_MasterCtar6

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR6 setting.

enumerator kDSPI_MasterCtar7

DSPI master CTAR shift macro; used internally. DSPI master transfer use CTAR7 setting.

enumerator kDSPI_MasterPcs0

DSPI master PCS shift macro; used internally. DSPI master transfer use PCS0 signal.

enumerator kDSPI_MasterPcs1

DSPI master PCS shift macro; used internally. DSPI master transfer use PCS1 signal.

enumerator kDSPI_MasterPcs2

DSPI master PCS shift macro; used internally. DSPI master transfer use PCS2 signal.

enumerator kDSPI_MasterPcs3

DSPI master PCS shift macro; used internally. DSPI master transfer use PCS3 signal.

enumerator kDSPI_MasterPcs4

DSPI master PCS shift macro; used internally. DSPI master transfer use PCS4 signal.

enumerator kDSPI_MasterPcs5

DSPI master PCS shift macro; used internally. DSPI master transfer use PCS5 signal.

enumerator kDSPI_MasterPcsContinuous

Indicates whether the PCS signal is continuous.

enumerator kDSPI_MasterActiveAfterTransfer

Indicates whether the PCS signal is active after the last frame transfer.

enum _dspi_transfer_config_flag_for_slave

Use this enumeration for the DSPI slave transfer configFlags.

Values:

enumerator kDSPI_SlaveCtar0

DSPI slave CTAR shift macro; used internally. DSPI slave transfer use CTAR0 setting.
DSPI slave can only use PCS0.

enum _dspi_transfer_state

DSPI transfer state, which is used for DSPI transactional API state machine.

Values:

enumerator kDSPI_Idle

Nothing in the transmitter/receiver.

enumerator kDSPI_Busy

Transfer queue is not finished.

enumerator `kDSPI_Error`

Transfer error.

typedef enum *_dspi_master_slave_mode* `dspi_master_slave_mode_t`

DSPI master or slave mode configuration.

typedef enum *_dspi_master_sample_point* `dspi_master_sample_point_t`

DSPI Sample Point: Controls when the DSPI master samples SIN in the Modified Transfer Format. This field is valid only when the CPHA bit in the CTAR register is 0.

typedef enum *_dspi_which_pcs_config* `dspi_which_pcs_t`

DSPI Peripheral Chip Select (Pcs) configuration (which Pcs to configure).

typedef enum *_dspi_pcs_polarity_config* `dspi_pcs_polarity_config_t`

DSPI Peripheral Chip Select (Pcs) Polarity configuration.

typedef enum *_dspi_clock_polarity* `dspi_clock_polarity_t`

DSPI clock polarity configuration for a given CTAR.

typedef enum *_dspi_clock_phase* `dspi_clock_phase_t`

DSPI clock phase configuration for a given CTAR.

typedef enum *_dspi_shift_direction* `dspi_shift_direction_t`

DSPI data shifter direction options for a given CTAR.

typedef enum *_dspi_delay_type* `dspi_delay_type_t`

DSPI delay type selection.

typedef enum *_dspi_ctar_selection* `dspi_ctar_selection_t`

DSPI Clock and Transfer Attributes Register (CTAR) selection.

typedef struct *_dspi_command_data_config* `dspi_command_data_config_t`

DSPI master command data configuration used for the SPIx_PUSHR.

typedef struct *_dspi_master_ctar_config* `dspi_master_ctar_config_t`

DSPI master ctar configuration structure.

typedef struct *_dspi_master_config* `dspi_master_config_t`

DSPI master configuration structure.

typedef struct *_dspi_slave_ctar_config* `dspi_slave_ctar_config_t`

DSPI slave ctar configuration structure.

typedef struct *_dspi_slave_config* `dspi_slave_config_t`

DSPI slave configuration structure.

typedef struct *_dspi_master_handle* `dspi_master_handle_t`

Forward declaration of the `_dspi_master_handle` typedefs.

The master handle.

typedef struct *_dspi_slave_handle* `dspi_slave_handle_t`

Forward declaration of the `_dspi_slave_handle` typedefs.

The slave handle.

typedef void (**dspi_master_transfer_callback_t*)(SPI_Type *base, *dspi_master_handle_t* *handle, *status_t* status, void *userData)

Completion callback function pointer type.

Param base

DSPI peripheral address.

Param handle

Pointer to the handle for the DSPI master.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*dspi_slave_transfer_callback_t)(SPI_Type *base, dspi_slave_handle_t *handle,
status_t status, void *userData)
```

Completion callback function pointer type.

Param base

DSPI peripheral address.

Param handle

Pointer to the handle for the DSPI slave.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef struct _dspi_transfer dspi_transfer_t
```

DSPI master/slave transfer structure.

```
typedef struct _dspi_half_duplex_transfer dspi_half_duplex_transfer_t
```

DSPI half-duplex(master) transfer structure.

```
volatile uint8_t g_dspiDummyData[]
```

Global variable for dummy data value setting.

DSPI_DUMMY_DATA

DSPI dummy data if there is no Tx data.

Dummy data used for Tx if there is no txData.

DSPI_MASTER_CTAR_SHIFT

DSPI master CTAR shift macro; used internally.

DSPI_MASTER_CTAR_MASK

DSPI master CTAR mask macro; used internally.

DSPI_MASTER_PCS_SHIFT

DSPI master PCS shift macro; used internally.

DSPI_MASTER_PCS_MASK

DSPI master PCS mask macro; used internally.

DSPI_SLAVE_CTAR_SHIFT

DSPI slave CTAR shift macro; used internally.

DSPI_SLAVE_CTAR_MASK

DSPI slave CTAR mask macro; used internally.

```
struct _dspi_command_data_config
```

#include <fsl_dspi.h> DSPI master command date configuration used for the SPIx_PUSHR.

Public Members

bool isPcsContinuous

Option to enable the continuous assertion of the chip select between transfers.

uint8_t whichCtar

The desired Clock and Transfer Attributes Register (CTAR) to use for CTAS.

uint8_t whichPcs

The desired PCS signal to use for the data transfer.

bool isEndOfQueue

Signals that the current transfer is the last in the queue.

bool clearTransferCount

Clears the SPI Transfer Counter (SPI_TCNT) before transmission starts.

struct _dspi_master_ctar_config

#include <fsl_dspi.h> DSPI master ctar configuration structure.

Public Members

uint32_t baudRate

Baud Rate for DSPI.

uint32_t bitsPerFrame

Bits per frame, minimum 4, maximum 16.

dspi_clock_polarity_t cpol

Clock polarity.

dspi_clock_phase_t cpha

Clock phase.

dspi_shift_direction_t direction

MSB or LSB data shift direction.

uint32_t pcsToSckDelayInNanoSec

PCS to SCK delay time in nanoseconds; setting to 0 sets the minimum delay. It also sets the boundary value if out of range.

uint32_t lastSckToPcsDelayInNanoSec

The last SCK to PCS delay time in nanoseconds; setting to 0 sets the minimum delay. It also sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec

After the SCK delay time in nanoseconds; setting to 0 sets the minimum delay. It also sets the boundary value if out of range.

struct _dspi_master_config

#include <fsl_dspi.h> DSPI master configuration structure.

Public Members

dspi_ctar_selection_t whichCtar

The desired CTAR to use.

dspi_master_ctar_config_t ctarConfig

Set the ctarConfig to the desired CTAR.

dspi_which_pcs_t whichPcs

The desired Peripheral Chip Select (pcs).

dspi_pcs_polarity_config_t pcsActiveHighOrLow

The desired PCS active high or low.

`bool enableContinuousSCK`

CONT_SCKE, continuous SCK enable. Note that the continuous SCK is only supported for CPHA = 1.

`bool enableRxFifoOverWrite`

ROOE, receive FIFO overflow overwrite enable. If ROOE = 0, the incoming data is ignored and the data from the transfer that generated the overflow is also ignored. If ROOE = 1, the incoming data is shifted to the shift register.

`bool enableModifiedTimingFormat`

Enables a modified transfer format to be used if true.

`dspi_master_sample_point_t samplePoint`

Controls when the module master samples SIN in the Modified Transfer Format. It's valid only when CPHA=0.

`struct __dspi_slave_ctar_config`

#include <fsl_dspi.h> DSPI slave ctar configuration structure.

Public Members

`uint32_t bitsPerFrame`

Bits per frame, minimum 4, maximum 16.

`dspi_clock_polarity_t cpol`

Clock polarity.

`dspi_clock_phase_t cpha`

Clock phase. Slave only supports MSB and does not support LSB.

`struct __dspi_slave_config`

#include <fsl_dspi.h> DSPI slave configuration structure.

Public Members

`dspi_ctar_selection_t whichCtar`

The desired CTAR to use.

`dspi_slave_ctar_config_t ctarConfig`

Set the ctarConfig to the desired CTAR.

`bool enableContinuousSCK`

CONT_SCKE, continuous SCK enable. Note that the continuous SCK is only supported for CPHA = 1.

`bool enableRxFifoOverWrite`

ROOE, receive FIFO overflow overwrite enable. If ROOE = 0, the incoming data is ignored and the data from the transfer that generated the overflow is also ignored. If ROOE = 1, the incoming data is shifted to the shift register.

`bool enableModifiedTimingFormat`

Enables a modified transfer format to be used if true.

`dspi_master_sample_point_t samplePoint`

Controls when the module master samples SIN in the Modified Transfer Format. It's valid only when CPHA=0.

`struct __dspi_transfer`

#include <fsl_dspi.h> DSPI master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize

Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from `_dspi_transfer_config_flag_for_master` if the transfer is used for master or `_dspi_transfer_config_flag_for_slave` enumeration if the transfer is used for slave.

struct `_dspi_half_duplex_transfer`

#include <fsl_dspi.h> DSPI half-duplex(master) transfer structure.

Public Members

const uint8_t *txData

Send buffer

uint8_t *rxData

Receive buffer

size_t txDataSize

Transfer bytes for transmit

size_t rxDataSize

Transfer bytes

uint32_t configFlags

Transfer configuration flags; set from `_dspi_transfer_config_flag_for_master`.

bool isPcsAssertInTransfer

If Pcs pin keep assert between transmit and receive. true for assert and false for de-assert.

bool isTransmitFirst

True for transmit first and false for receive first.

struct `_dspi_master_handle`

#include <fsl_dspi.h> DSPI master transfer handle structure used for transactional API.

Public Members

uint32_t bitsPerFrame

The desired number of bits per frame.

volatile uint32_t command

The desired data command.

volatile uint32_t lastCommand

The desired last data command.

uint8_t fifoSize

FIFO dataSize.

volatile bool isPcsActiveAfterTransfer

Indicates whether the PCS signal is active after the last frame transfer.

volatile bool isThereExtraByte

Indicates whether there are extra bytes.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t remainingSendByteCount

A number of bytes remaining to send.

volatile size_t remainingReceiveByteCount

A number of bytes remaining to receive.

size_t totalByteCount

A number of transfer bytes

volatile uint8_t state

DSPI transfer state, see `_dspi_transfer_state`.

dspi_master_transfer_callback_t callback

Completion callback.

void *userData

Callback user data.

struct `_dspi_slave_handle`

#include <fsl_dspi.h> DSPI slave transfer handle structure used for the transactional API.

Public Members

uint32_t bitsPerFrame

The desired number of bits per frame.

volatile bool isThereExtraByte

Indicates whether there are extra bytes.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t remainingSendByteCount

A number of bytes remaining to send.

volatile size_t remainingReceiveByteCount

A number of bytes remaining to receive.

size_t totalByteCount

A number of transfer bytes

volatile uint8_t state

DSPI transfer state.

volatile uint32_t errorCount

Error count for slave transfer.

dspi_slave_transfer_callback_t callback

Completion callback.

void *userData

Callback user data.

2.9 DSPI eDMA Driver

```
void DSPI_MasterTransferCreateHandleEDMA(SPI_Type *base, dspi_master_edma_handle_t
                                         *handle, dspi_master_edma_transfer_callback_t
                                         callback, void *userData, edma_handle_t
                                         *edmaRxRegToRxDataHandle, edma_handle_t
                                         *edmaTxDataToIntermediaryHandle,
                                         edma_handle_t
                                         *edmaIntermediaryToTxRegHandle)
```

Initializes the DSPI master eDMA handle.

This function initializes the DSPI eDMA handle which can be used for other DSPI transactional APIs. Usually, for a specified DSPI instance, call this API once to get the initialized handle.

Note: DSPI eDMA has separated (RX and TX as two sources) or shared (RX and TX are the same source) DMA request source.

- For the separated DMA request source, enable and set the RX DMAMUX source for edmaRxRegToRxDataHandle and TX DMAMUX source for edmaIntermediaryToTxRegHandle.
 - For the shared DMA request source, enable and set the RX/RX DMAMUX source for the edmaRxRegToRxDataHandle.
-

Parameters

- base – DSPI peripheral base address.
- handle – DSPI handle pointer to *_dspi_master_edma_handle*.
- callback – DSPI callback.
- userData – A callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to *edma_handle_t*.
- edmaTxDataToIntermediaryHandle – edmaTxDataToIntermediaryHandle pointer to *edma_handle_t*.
- edmaIntermediaryToTxRegHandle – edmaIntermediaryToTxRegHandle pointer to *edma_handle_t*.

```
status_t DSPI_MasterTransferEDMA(SPI_Type *base, dspi_master_edma_handle_t *handle,
                                  dspi_transfer_t *transfer)
```

DSPI master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The max transfer size of each transfer depends on whether the instance's Tx/Rx shares the same DMA request. If

FSL_FEATURE_DSPI_HAS_SEPARATE_DMA_RX_TX_REQn(x) is true, then the max transfer size is 32767 datawidth of data, otherwise is 511.

Parameters

- base – DSPI peripheral base address.
- handle – A pointer to the `_dspi_master_edma_handle` structure which stores the transfer state.
- transfer – A pointer to the `dspi_transfer_t` structure.

Returns

status of `status_t`.

status_t DSPI_MasterHalfDuplexTransferEDMA(*SPI_Type *base, dspi_master_edma_handle_t *handle, dspi_half_duplex_transfer_t *xfer*)

Transfers a block of data using a eDMA method.

This function transfers data using eDNA, the transfer mechanism is half-duplex. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Parameters

- base – DSPI base pointer
- handle – A pointer to the `_dspi_master_edma_handle` structure which stores the transfer state.
- xfer – A pointer to the `dspi_half_duplex_transfer_t` structure.

Returns

status of `status_t`.

void DSPI_MasterTransferAbortEDMA(*SPI_Type *base, dspi_master_edma_handle_t *handle*)

DSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – DSPI peripheral base address.
- handle – A pointer to the `_dspi_master_edma_handle` structure which stores the transfer state.

status_t DSPI_MasterTransferGetCountEDMA(*SPI_Type *base, dspi_master_edma_handle_t *handle, size_t *count*)

Gets the master eDMA transfer count.

This function gets the master eDMA transfer count.

Parameters

- base – DSPI peripheral base address.
- handle – A pointer to the `_dspi_master_edma_handle` structure which stores the transfer state.
- count – A number of bytes transferred by the non-blocking transaction.

Returns

status of `status_t`.

```
void DSPI_SlaveTransferCreateHandleEDMA(SPI_Type *base, dspi_slave_edma_handle_t *handle,
                                         dspi_slave_edma_transfer_callback_t callback, void
                                         *userData, edma_handle_t
                                         *edmaRxRegToRxDataHandle, edma_handle_t
                                         *edmaTxDataToTxRegHandle)
```

Initializes the DSPI slave eDMA handle.

This function initializes the DSPI eDMA handle which can be used for other DSPI transactional APIs. Usually, for a specified DSPI instance, call this API once to get the initialized handle.

Note: DSPI eDMA has separated (RN and TX in 2 sources) or shared (RX and TX are the same source) DMA request source.

- For the separated DMA request source, enable and set the RX DMAMUX source for `edmaRxRegToRxDataHandle` and TX DMAMUX source for `edmaTxDataToTxRegHandle`.
 - For the shared DMA request source, enable and set the RX/RX DMAMUX source for the `edmaRxRegToRxDataHandle`.
-

Parameters

- `base` – DSPI peripheral base address.
- `handle` – DSPI handle pointer to `_dspi_slave_edma_handle`.
- `callback` – DSPI callback.
- `userData` – A callback function parameter.
- `edmaRxRegToRxDataHandle` – `edmaRxRegToRxDataHandle` pointer to `edma_handle_t`.
- `edmaTxDataToTxRegHandle` – `edmaTxDataToTxRegHandle` pointer to `edma_handle_t`.

```
status_t DSPI_SlaveTransferEDMA(SPI_Type *base, dspi_slave_edma_handle_t *handle,
                                dspi_transfer_t *transfer)
```

DSPI slave transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called. Note that the slave eDMA transfer doesn't support `transfer_size` is 1 when the `bitsPerFrame` is greater than eight.

Note: The max transfer size of each transfer depends on whether the instance's Tx/Rx shares the same DMA request. If **FSL_FEATURE_DSPI_HAS_SEPARATE_DMA_RX_TX_REQn(x)** is true, then the max transfer size is 32767 datawidth of data, otherwise is 511.

Parameters

- `base` – DSPI peripheral base address.
- `handle` – A pointer to the `_dspi_slave_edma_handle` structure which stores the transfer state.
- `transfer` – A pointer to the `dspi_transfer_t` structure.

Returns

status of `status_t`.


```
void DSPI_SlaveTransferAbortEDMA(SPI_Type *base, dspi_slave_edma_handle_t *handle)
```

DSPI slave aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- *base* – DSPI peripheral base address.
- *handle* – A pointer to the *_dspi_slave_edma_handle* structure which stores the transfer state.

```
status_t DSPI_SlaveTransferGetCountEDMA(SPI_Type *base, dspi_slave_edma_handle_t *handle,  
                                         size_t *count)
```

Gets the slave eDMA transfer count.

This function gets the slave eDMA transfer count.

Parameters

- *base* – DSPI peripheral base address.
- *handle* – A pointer to the *_dspi_slave_edma_handle* structure which stores the transfer state.
- *count* – A number of bytes transferred so far by the non-blocking transaction.

Returns

status of *status_t*.

```
FSL_DSPI_EDMA_DRIVER_VERSION
```

DSPI EDMA driver version 2.2.7.

```
typedef struct _dspi_master_edma_handle dspi_master_edma_handle_t
```

Forward declaration of the DSPI eDMA master handle typedefs.

```
typedef struct _dspi_slave_edma_handle dspi_slave_edma_handle_t
```

Forward declaration of the DSPI eDMA slave handle typedefs.

```
typedef void (*dspi_master_edma_transfer_callback_t)(SPI_Type *base,  
dspi_master_edma_handle_t *handle, status_t status, void *userData)
```

Completion callback function pointer type.

Param base

DSPI peripheral base address.

Param handle

A pointer to the handle for the DSPI master.

Param status

Success or error code describing whether the transfer completed.

Param userData

An arbitrary pointer-dataSized value passed from the application.

```
typedef void (*dspi_slave_edma_transfer_callback_t)(SPI_Type *base, dspi_slave_edma_handle_t  
*handle, status_t status, void *userData)
```

Completion callback function pointer type.

Param base

DSPI peripheral base address.

Param handle

A pointer to the handle for the DSPI slave.

Param status

Success or error code describing whether the transfer completed.

Param userData

An arbitrary pointer-dataSized value passed from the application.

DSPI_EDMA_MAX_TRANSFER_SIZE(base, width)

DSPI EDMA max transfer data size calculate.

Parameters

- base – DSPI peripheral base address.
- width – Transfer width

struct _dspi_master_edma_handle

#include <fsl_dspi_edma.h> DSPI master eDMA transfer handle structure used for the transactional API.

Public Members

uint32_t bitsPerFrame

The desired number of bits per frame.

volatile uint32_t command

The desired data command.

volatile uint32_t lastCommand

The desired last data command.

uint8_t fifoSize

FIFO dataSize.

volatile bool isPcsActiveAfterTransfer

Indicates whether the PCS signal keeps active after the last frame transfer.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

volatile uint8_t state

DSPI transfer state, see _dspi_transfer_state.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t remainingSendByteCount

A number of bytes remaining to send.

volatile size_t remainingReceiveByteCount

A number of bytes remaining to receive.

size_t totalByteCount

A number of transfer bytes

uint32_t rxBuffIfNull

Used if there is not rxData for DMA purpose.

uint32_t txBuffIfNull

Used if there is not txData for DMA purpose.

dspi_master_edma_transfer_callback_t callback

Completion callback.

void *userData

Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle

edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToIntermediaryHandle

edma_handle_t handle point used for TxData to Intermediary

edma_handle_t *edmaIntermediaryToTxRegHandle

edma_handle_t handle point used for Intermediary to TxReg

edma_tcd_t dspSoftwareTCD[2]

SoftwareTCD , internal used

struct _dsp_slave_edma_handle

#include <fsl_dspi_edma.h> DSPI slave eDMA transfer handle structure used for the transactional API.

Public Members

uint32_t bitsPerFrame

The desired number of bits per frame.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t remainingSendByteCount

A number of bytes remaining to send.

volatile size_t remainingReceiveByteCount

A number of bytes remaining to receive.

size_t totalByteCount

A number of transfer bytes

uint32_t rxBuffIfNull

Used if there is not rxData for DMA purpose.

uint32_t txBuffIfNull

Used if there is not txData for DMA purpose.

uint32_t txLastData

Used if there is an extra byte when 16bits per frame for DMA purpose.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

volatile uint8_t state

DSPI transfer state.

dspi_slave_edma_transfer_callback_t callback

Completion callback.

void *userData

Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle

edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle

edma_handle_t handle point used for TxData to TxReg

2.10 eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

void EDMA_Init(DMA_Type *base, const *edma_config_t* *config)

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure. All emda enabled request will be cleared in this function.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “*edma_config_t*”.

void EDMA_Deinit(DMA_Type *base)

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_InstallTCD(DMA_Type *base, uint32_t channel, *edma_tcd_t* *tcd)

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_GetDefaultConfig(*edma_config_t* *config)

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
config.enableContinuousLinkMode = false;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

static inline void EDMA_EnableContinuousChannelLinkMode(DMA_Type *base, bool enable)
Enable/Disable continuous channel link mode.

Note: Do not use continuous link mode with a channel linking to itself if there is only one minor loop iteration per service request, for example, if the channel's NBYTES value is the same as either the source or destination size. The same data transfer profile can be achieved by simply increasing the NBYTES value, which provides more efficient, faster processing.

Parameters

- base – EDMA peripheral base address.
- enable – true is enable, false is disable.

static inline void EDMA_EnableMinorLoopMapping(DMA_Type *base, bool enable)
Enable/Disable minor loop mapping.

The TCDn.word2 is redefined to include individual enable fields, an offset field, and the NBYTES field.

Parameters

- base – EDMA peripheral base address.
- enable – true is enable, false is disable.

void EDMA_ResetChannel(DMA_Type *base, uint32_t channel)
Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_SetTransferConfig(DMA_Type *base, uint32_t channel, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the eDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_SetMinorOffsetConfig(DMA_Type *base, uint32_t channel, const
                               edma_minor_offset_config_t *config)
```

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_SetChannelPreemptionConfig(DMA_Type *base, uint32_t channel, const
                                     edma_channel_preemption_config_t *config)
```

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

```
void EDMA_SetChannelLink(DMA_Type *base, uint32_t channel, edma_channel_link_type_t
                        linkType, uint32_t linkedChannel)
```

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- linkType – A channel link type, which can be one of the following:
 - kEDMA_LinkNone
 - kEDMA_MinorLink

- kEDMA_MajorLink
- linkedChannel – The linked channel number.

void EDMA_SetBandWidth(DMA_Type *base, uint32_t channel, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

void EDMA_SetModulo(DMA_Type *base, uint32_t channel, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_EnableAsyncRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

static inline void EDMA_EnableAutoStopRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

```
void EDMA_EnableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)
```

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_DisableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)
```

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined `edma_interrupt_enable_t` type.

```
void EDMA_SetMajorOffsetConfig(DMA_Type *base, uint32_t channel, int32_t sourceOffset,  
                               int32_t destOffset)
```

Configures the eDMA channel TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- channel – edma channel number.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

```
void EDMA_TcdReset(edma_tcd_t *tcd)
```

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.

```
void EDMA_TcdSetTransferConfig(edma_tcd_t *tcd, const edma_transfer_config_t *config,  
                              edma_tcd_t *nextTcd)
```

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:


```
edma_transfer_t config = {  
    ...  
}  
edma_tcd_t tcd __aligned(32);  
edma_tcd_t nextTcd __aligned(32);  
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_TcdSetMinorOffsetConfig(edma_tcd_t *tcd, const edma_minor_offset_config_t  
                                *config)
```

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_TcdSetChannelLink(edma_tcd_t *tcd, edma_channel_link_type_t linkType, uint32_t  
                           linkedChannel)
```

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- tcd – Point to the TCD structure.
- linkType – Channel link type, it can be one of:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
static inline void EDMA_TcdSetBandWidth(edma_tcd_t *tcd, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA_TcdSetModulo(edma_tcd_t *tcd, edma_modulo_t srcModulo, edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA_TcdEnableAutoStopRequest(edma_tcd_t *tcd, bool enable)
```

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

```
void EDMA_TcdEnableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA_TcdDisableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

void EDMA__TcdSetMajorOffsetConfig(*edma_tcd_t* *tcd, int32_t sourceOffset, int32_t destOffset)

Configures the eDMA TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- tcd – A point to the TCD structure.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

static inline void EDMA__EnableChannelRequest(DMA_Type *base, uint32_t channel)

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA__DisableChannelRequest(DMA_Type *base, uint32_t channel)

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA__TriggerChannelStart(DMA_Type *base, uint32_t channel)

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

uint32_t EDMA__GetRemainingMajorLoopCount(DMA_Type *base, uint32_t channel)

Gets the remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

- a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)
-

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

```
static inline uint32_t EDMA_GetErrorStatusFlags(DMA_Type *base)
```

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the `_edma_error_status_flags` type to decode the return variables.

```
uint32_t EDMA_GetChannelStatusFlags(DMA_Type *base, uint32_t channel)
```

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the `_edma_channel_status_flags` type to decode the return variables.

```
void EDMA_ClearChannelStatusFlags(DMA_Type *base, uint32_t channel, uint32_t mask)
```

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined `_edma_channel_status_flags` type.

```
void EDMA_CreateHandle(edma_handle_t *handle, DMA_Type *base, uint32_t channel)
```

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_InstallTCDMemory(edma_handle_t *handle, edma_tcd_t *tcdPool, uint32_t tcdSize)
```

Installs the TCDs memory pool into the eDMA handle.

This function is called after the `EDMA_CreateHandle` to use scatter/gather feature. This function shall only be used while users need to use scatter gather mode. Scatter gather mode enables EDMA to load a new transfer control block (tcd) in hardware, and automatically reconfigure that DMA channel for a new transfer. Users need to prepare tcd memory and also configure tcds using interface `EDMA_SubmitTransfer`.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

void EDMA_SetCallback(*edma_handle_t* *handle, *edma_callback* callback, void *userData)

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes. This function will be called every time one tcd finished transfer.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

void EDMA_PrepareTransferConfig(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t destWidth, int16_t destOffset, uint32_t bytesEachRequest, uint32_t transferBytes)

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type *edma_transfer_t*.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

void EDMA_PrepareTransfer(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferBytes, *edma_transfer_type_t* transferType)

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- `config` – The user configuration structure of type `edma_transfer_t`.
- `srcAddr` – eDMA transfer source address.
- `srcWidth` – eDMA transfer source address width(bytes).
- `destAddr` – eDMA transfer destination address.
- `destWidth` – eDMA transfer destination address width(bytes).
- `bytesEachRequest` – eDMA transfer bytes per channel request.
- `transferBytes` – eDMA transfer bytes to be transferred.
- `transferType` – eDMA transfer type.

`status_t` EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDEMemory before.

Parameters

- `handle` – eDMA handle pointer.
- `config` – Pointer to eDMA transfer configuration structure.

Return values

- `kStatus_EDMA_Success` – It means submit transfer request succeed.
- `kStatus_EDMA_QueueFull` – It means TCD queue is full. Submit transfer request is not allowed.
- `kStatus_EDMA_Busy` – It means the given channel is busy, need to submit request later.

`void` EDMA_StartTransfer(*edma_handle_t* *handle)

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- `handle` – eDMA handle pointer.

`void` EDMA_StopTransfer(*edma_handle_t* *handle)

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call EDMA_StartTransfer() again to resume the transfer.

Parameters

- `handle` – eDMA handle pointer.

`void` EDMA_AbortTransfer(*edma_handle_t* *handle)

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- `handle` – DMA handle pointer.

static inline uint32_t EDMA_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

void EDMA_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Note: For the case using TCD queue, when the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled).

For instance, when the time interrupt of TCD[0] happens, the TCD[1] has already been loaded into the eDMA engine. As sga and sga_index are calculated based on the DLAST_SGA bitfield lies in the TCD_CSR register, the sga_index in this case should be 2 (DLAST_SGA of TCD[1] stores the address of TCD[2]). Thus, the “tcdUsed” updated should be (tcdUsed - 2U) which indicates the number of TCDs can be loaded in the memory pool (because TCD[0] and TCD[1] have been loaded into the eDMA engine at this point already).

For the last two continuous ISRs in a scatter/gather process, they both load the last TCD (The last ISR does not load a new TCD) from the memory pool to the eDMA engine when major loop completes. Therefore, ensure that the header and tcdUsed updated are identical for them. tcdUsed are both 0 in this case as no TCD to be loaded.

See the “eDMA basic data flow” in the eDMA Functional description section of the Reference Manual for further details.

Parameters

- handle – eDMA handle pointer.

FSL_EDMA_DRIVER_VERSION

eDMA driver version

Version 2.4.5.

enum __edma_transfer_size

eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable

Disable modulo

enumerator kEDMA_Modulo2bytes

Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes

Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes

Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes

Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes

Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes

Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes

Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes

Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes

Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes

Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes

Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes

Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes

Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes

Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes

Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes

Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes

Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes

Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes

Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes

Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes

Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes

Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes

Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes

Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes

Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes

Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes

Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes

Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes

Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes

Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes

Circular buffer size is 2 G bytes.

enum _edma_bandwidth

Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone

No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle

eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle

eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type

Channel link type.

Values:

enumerator kEDMA_LinkNone

No channel link

enumerator kEDMA_MinorLink

Channel link after each minor loop

enumerator kEDMA_MajorLink

Channel link while major loop count exhausted

_edma_channel_status_flags eDMA channel status flags.

Values:

enumerator kEDMA_DoneFlag

DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag

eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag

eDMA interrupt flag, set while an interrupt occurred of this channel

_edma_error_status_flags eDMA channel error status flags.

Values:

enumerator kEDMA_DestinationBusErrorFlag

Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag

Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag

Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag

NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag

Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag

Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag

Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag

Source address not aligned with source size

enumerator kEDMA_ErrorChannelFlag

Error channel number of the cancelled channel number

enumerator kEDMA_ChannelPriorityErrorFlag

Channel priority is not unique.

enumerator kEDMA_TransferCanceledFlag

Transfer cancelled

enumerator kEDMA_ValidFlag

No error occurred, this bit is 0. Otherwise, it is 1.

enum _edma_interrupt_enable

eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable

Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable

Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable

Enable interrupt while major count to half value.

enum _edma_transfer_type

eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory

Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory

Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral

Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral

Transfer from Peripheral to peripheral

_edma_transfer_status eDMA transfer status

Values:

enumerator kStatus_EDMA_QueueFull

TCD queue is full.

enumerator kStatus_EDMA_Busy

Channel is busy and can't handle the transfer request.

typedef enum _edma_transfer_size edma_transfer_size_t

eDMA transfer configuration

typedef enum _edma_modulo edma_modulo_t

eDMA modulo configuration

```
typedef enum _edma_bandwidth edma__bandwidth__t
```

Bandwidth control.

```
typedef enum _edma_channel_link_type edma__channel__link__type__t
```

Channel link type.

```
typedef enum _edma_interrupt_enable edma__interrupt__enable__t
```

eDMA interrupt source

```
typedef enum _edma_transfer_type edma__transfer__type__t
```

eDMA transfer type

```
typedef struct _edma_config edma__config__t
```

eDMA global configuration structure.

```
typedef struct _edma_transfer_config edma__transfer__config__t
```

eDMA transfer configuration

This structure configures the source/destination transfer attribute.

```
typedef struct _edma_channel_Preemption_config edma__channel__Preemption__config__t
```

eDMA channel priority configuration

```
typedef struct _edma_minor_offset_config edma__minor__offset__config__t
```

eDMA minor offset configuration

```
typedef struct _edma_tcd edma__tcd__t
```

eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

```
typedef void (*edma__callback)(struct _edma_handle *handle, void *userData, bool transferDone, uint32_t tcDs)
```

Define callback function for eDMA.

This callback function is called in the EDMA interrupt handle. In normal mode, run into callback function means the transfer users need is done. In scatter gather mode, run into callback function means a transfer control block (tcd) is finished. Not all transfer finished, users can get the finished tcd numbers using interface `EDMA_GetUnusedTCDNumber`.

Param handle

EDMA handle pointer, users shall not touch the values inside.

Param userData

The callback user parameter pointer. Users can use this parameter to involve things users need to change in EDMA callback function.

Param transferDone

If the current loaded transfer done. In normal mode it means if all transfer done. In scatter gather mode, this parameter shows is the current transfer block in EDMA register is done. As the load of core is different, it will be different if the new tcd loaded into EDMA registers while this callback called. If true, it always means new tcd still not loaded into registers, while false means new tcd already loaded into registers.

Param tcDs

How many tcDs are done from the last callback. This parameter only used in scatter gather mode. It tells user how many tcDs are finished between the last callback and this.

```
typedef struct _edma_handle edma__handle__t
```

eDMA transfer handle structure

DMA_DCHPRI_INDEX(channel)

Compute the offset unit from DCHPRI3.

struct __edma_config

#include <fsl_edma.h> eDMA global configuration structure.

Public Members

bool enableContinuousLinkMode

Enable (true) continuous link mode. Upon minor loop completion, the channel activates again if that channel has a minor loop channel link enabled and the link channel is itself.

bool enableHaltOnError

Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

bool enableRoundRobinArbitration

Enable (true) round robin channel arbitration method or fixed priority arbitration is used for channel selection

bool enableDebugMode

Enable(true) eDMA debug mode. When in debug mode, the eDMA stalls the start of a new channel. Executing channels are allowed to complete.

struct __edma_transfer_config

#include <fsl_edma.h> eDMA transfer configuration

This structure configures the source/destination transfer attribute.

Public Members

uint32_t srcAddr

Source data address.

uint32_t destAddr

Destination data address.

edma_transfer_size_t srcTransferSize

Source data transfer size.

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset applied to the current source address to form the next-state value as each source read is completed.

int16_t destOffset

Sign-extended offset applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

Bytes to transfer in a minor loop

uint32_t majorLoopCounts

Major loop iteration count.

struct __edma_channel_Preemption_config

#include <fsl_edma.h> eDMA channel priority configuration

Public Members

bool enableChannelPreemption

If true: a channel can be suspended by other channel with higher priority

bool enablePreemptAbility

If true: a channel can suspend other channel with low priority

uint8_t channelPriority

Channel priority

struct __edma__minor_offset_config

#include <fsl_edma.h> eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset

Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset

Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset

Offset for a minor loop mapping.

struct __edma__tcd

#include <fsl_edma.h> eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

Public Members

__IO uint32_t SADDR

SADDR register, used to save source address

__IO uint16_t SOFF

SOFF register, save offset bytes every transfer

__IO uint16_t ATTR

ATTR register, source/destination transfer size and modulo

__IO uint32_t NBYTES

Nbytes register, minor loop length in bytes

__IO uint32_t SLAST

SLAST register

__IO uint32_t DADDR

DADDR register, used for destination address

__IO uint16_t DOFF

DOFF register, used for destination offset

__IO uint16_t CITER

CITER register, current minor loop numbers, for unfinished minor loop.

__IO uint32_t DLAST_SGA

DLASTSGA register, next tcd address used in scatter-gather mode

__IO uint16_t CSR
CSR register, for TCD control status

__IO uint16_t BITER
BITER register, begin minor loop count.

struct __edma_handle
#include <fsl_edma.h> eDMA transfer handle structure

Public Members

edma_callback callback
Callback function for major count exhausted.

void *userData
Callback function parameter.

DMA_Type *base
eDMA peripheral base address.

edma_tcd_t *tcdPool
Pointer to memory stored TCDs.

uint8_t channel
eDMA channel number.

volatile int8_t header
The first TCD index. Should point to the next TCD to be loaded into the eDMA engine.

volatile int8_t tail
The last TCD index. Should point to the next TCD to be stored into the memory pool.

volatile int8_t tcdUsed
The number of used TCD slots. Should reflect the number of TCDs can be used/loaded in the memory.

volatile int8_t tcdSize
The total number of TCD slots in the queue.

uint8_t flags
The status of the current channel.

2.11 EWM: External Watchdog Monitor Driver

void EWM_Init(EWM_Type *base, const *ewm_config_t* *config)
Initializes the EWM peripheral.

This function is used to initialize the EWM. After calling, the EWM runs immediately according to the configuration. Note that, except for the interrupt enable control bit, other control bits and registers are write once after a CPU reset. Modifying them more than once generates a bus transfer error.

This is an example.

```
ewm_config_t config;  
EWM_GetDefaultConfig(&config);  
config.compareHighValue = 0xAAU;  
EWM_Init(ewm_base,&config);
```

Parameters

- base – EWM peripheral base address
- config – The configuration of the EWM

void EWM_Deinit(EWM_Type *base)

Deinitializes the EWM peripheral.

This function is used to shut down the EWM.

Parameters

- base – EWM peripheral base address

void EWM_GetDefaultConfig(*ewm_config_t* *config)

Initializes the EWM configuration structure.

This function initializes the EWM configuration structure to default values. The default values are as follows.

```
ewmConfig->enableEwm = true;
ewmConfig->enableEwmInput = false;
ewmConfig->setInputAssertLogic = false;
ewmConfig->enableInterrupt = false;
ewmConfig->ewm_lpo_clock_source_t = kEWM_LpoClockSource0;
ewmConfig->prescaler = 0;
ewmConfig->compareLowValue = 0;
ewmConfig->compareHighValue = 0xFEU;
```

See also:

`ewm_config_t`

Parameters

- config – Pointer to the EWM configuration structure.

static inline void EWM_EnableInterrupts(EWM_Type *base, uint32_t mask)

Enables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to enable The parameter can be combination of the following source if defined
 - kEWM_InterruptEnable

static inline void EWM_DisableInterrupts(EWM_Type *base, uint32_t mask)

Disables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to disable The parameter can be combination of the following source if defined
 - kEWM_InterruptEnable

static inline uint32_t EWM_GetStatusFlags(EWM_Type *base)

Gets all status flags.

This function gets all status flags.

This is an example for getting the running flag.

```
uint32_t status;  
status = EWM_GetStatusFlags(ewm_base) & kEWM_RunningFlag;
```

See also:

`_ewm_status_flags_t`

- True: a related status flag has been set.
- False: a related status flag is not set.

Parameters

- base – EWM peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

void EWM_Refresh(EWM_Type *base)

Services the EWM.

This function resets the EWM counter to zero.

Parameters

- base – EWM peripheral base address

FSL_EWM_DRIVER_VERSION

EWM driver version 2.0.4.

enum _ewm_lpo_clock_source

Describes EWM clock source.

Values:

enumerator kEWM_LpoClockSource0
EWM clock sourced from lpo_clk[0]

enumerator kEWM_LpoClockSource1
EWM clock sourced from lpo_clk[1]

enumerator kEWM_LpoClockSource2
EWM clock sourced from lpo_clk[2]

enumerator kEWM_LpoClockSource3
EWM clock sourced from lpo_clk[3]

enum _ewm_interrupt_enable_t

EWM interrupt configuration structure with default settings all disabled.

This structure contains the settings for all of EWM interrupt configurations.

Values:

enumerator kEWM_InterruptEnable
Enable the EWM to generate an interrupt

enum `_ewm_status_flags_t`

EWM status flags.

This structure contains the constants for the EWM status flags for use in the EWM functions.

Values:

enumerator `kEWM_RunningFlag`

Running flag, set when EWM is enabled

typedef enum `_ewm_lpo_clock_source` `ewm_lpo_clock_source_t`

Describes EWM clock source.

typedef struct `_ewm_config` `ewm_config_t`

Data structure for EWM configuration.

This structure is used to configure the EWM.

struct `_ewm_config`

#include <fsl_ewm.h> Data structure for EWM configuration.

This structure is used to configure the EWM.

Public Members

bool `enableEwm`

Enable EWM module

bool `enableEwmInput`

Enable EWM_in input

bool `setInputAssertLogic`

EWM_in signal assertion state

bool `enableInterrupt`

Enable EWM interrupt

`ewm_lpo_clock_source_t` `clockSource`

Clock source select

uint8_t `prescaler`

Clock prescaler value

uint8_t `compareLowValue`

Compare low-register value

uint8_t `compareHighValue`

Compare high-register value

2.12 FGPIO Driver

2.13 C90TFS Flash Driver

2.14 FlexBus: External Bus Interface Driver

`void FLEXBUS_Init(FB_Type *base, const flexbus_config_t *config)`

Initializes and configures the FlexBus module.

This function enables the clock gate for FlexBus module. Only chip 0 is validated and set to known values. Other chips are disabled. Note that in this function, certain parameters, depending on external memories, must be set before using the FLEXBUS_Init() function. This example shows how to set up the `uart_state_t` and the `flexbus_config_t` parameters and how to call the FLEXBUS_Init function by passing in these parameters.

```
flexbus_config_t flexbusConfig;
FLEXBUS_GetDefaultConfig(&flexbusConfig);
flexbusConfig.waitStates      = 2U;
flexbusConfig.chipBaseAddress = 0x60000000U;
flexbusConfig.chipBaseAddressMask = 7U;
FLEXBUS_Init(FB, &flexbusConfig);
```

Parameters

- base – FlexBus peripheral address.
- config – Pointer to the configuration structure

`void FLEXBUS_Deinit(FB_Type *base)`

De-initializes a FlexBus instance.

This function disables the clock gate of the FlexBus module clock.

Parameters

- base – FlexBus peripheral address.

`void FLEXBUS_GetDefaultConfig(flexbus_config_t *config)`

Initializes the FlexBus configuration structure.

This function initializes the FlexBus configuration structure to default value. The default values are.

```
fbConfig->chip                = 0;
fbConfig->writeProtect        = 0;
fbConfig->burstWrite          = 0;
fbConfig->burstRead           = 0;
fbConfig->byteEnableMode      = 0;
fbConfig->autoAcknowledge     = true;
fbConfig->extendTransferAddress = 0;
fbConfig->secondaryWaitStates = 0;
fbConfig->byteLaneShift       = kFLEXBUS_NotShifted;
fbConfig->writeAddressHold     = kFLEXBUS_Hold1Cycle;
fbConfig->readAddressHold      = kFLEXBUS_Hold1Or0Cycles;
fbConfig->addressSetup         = kFLEXBUS_FirstRisingEdge;
fbConfig->portSize             = kFLEXBUS_1Byte;
fbConfig->group1MultiplexControl = kFLEXBUS_MultiplexGroup1_FB_ALE;
fbConfig->group2MultiplexControl = kFLEXBUS_MultiplexGroup2_FB_CS4;
fbConfig->group3MultiplexControl = kFLEXBUS_MultiplexGroup3_FB_CS5;
fbConfig->group4MultiplexControl = kFLEXBUS_MultiplexGroup4_FB_TBST;
fbConfig->group5MultiplexControl = kFLEXBUS_MultiplexGroup5_FB_TA;
```

See also:

FLEXBUS_Init

Parameters

- config – Pointer to the initialization structure.

FSL_FLEXBUS_DRIVER_VERSION

Version 2.1.1.

enum _flexbus_port_size

Defines port size for FlexBus peripheral.

Values:

enumerator kFLEXBUS_4Bytes

32-bit port size

enumerator kFLEXBUS_1Byte

8-bit port size

enumerator kFLEXBUS_2Bytes

16-bit port size

enum _flexbus_write_address_hold

Defines number of cycles to hold address and attributes for FlexBus peripheral.

Values:

enumerator kFLEXBUS_Hold1Cycle

Hold address and attributes one cycles after FB_CS_n negates on writes

enumerator kFLEXBUS_Hold2Cycles

Hold address and attributes two cycles after FB_CS_n negates on writes

enumerator kFLEXBUS_Hold3Cycles

Hold address and attributes three cycles after FB_CS_n negates on writes

enumerator kFLEXBUS_Hold4Cycles

Hold address and attributes four cycles after FB_CS_n negates on writes

enum _flexbus_read_address_hold

Defines number of cycles to hold address and attributes for FlexBus peripheral.

Values:

enumerator kFLEXBUS_Hold1Or0Cycles

Hold address and attributes 1 or 0 cycles on reads

enumerator kFLEXBUS_Hold2Or1Cycles

Hold address and attributes 2 or 1 cycles on reads

enumerator kFLEXBUS_Hold3Or2Cycle

Hold address and attributes 3 or 2 cycles on reads

enumerator kFLEXBUS_Hold4Or3Cycle

Hold address and attributes 4 or 3 cycles on reads

enum _flexbus_address_setup

Address setup for FlexBus peripheral.

Values:

enumerator kFLEXBUS_FirstRisingEdge

Assert FB_CS_n on first rising clock edge after address is asserted

enumerator kFLEXBUS_SecondRisingEdge

Assert FB_CS_n on second rising clock edge after address is asserted

enumerator kFLEXBUS_ThirdRisingEdge

Assert FB_CS_n on third rising clock edge after address is asserted

enumerator kFLEXBUS_FourthRisingEdge

Assert FB_CS_n on fourth rising clock edge after address is asserted

enum _flexbus_bytelane_shift

Defines byte-lane shift for FlexBus peripheral.

Values:

enumerator kFLEXBUS_NotShifted

Not shifted. Data is left-justified on FB_AD

enumerator kFLEXBUS_Shifted

Shifted. Data is right justified on FB_AD

enum _flexbus_multiplex_group1_signal

Defines multiplex group1 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup1_FB_ALE

FB_ALE

enumerator kFLEXBUS_MultiplexGroup1_FB_CS1

FB_CS1

enumerator kFLEXBUS_MultiplexGroup1_FB_TS

FB_TS

enum _flexbus_multiplex_group2_signal

Defines multiplex group2 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup2_FB_CS4

FB_CS4

enumerator kFLEXBUS_MultiplexGroup2_FB_TSIZ0

FB_TSIZ0

enumerator kFLEXBUS_MultiplexGroup2_FB_BE_31_24

FB_BE_31_24

enum _flexbus_multiplex_group3_signal

Defines multiplex group3 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup3_FB_CS5

FB_CS5

enumerator kFLEXBUS_MultiplexGroup3_FB_TSIZ1

FB_TSIZ1

enumerator kFLEXBUS_MultiplexGroup3_FB_BE_23_16

FB_BE_23_16

enum _flexbus_multiplex_group4_signal

Defines multiplex group4 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup4_FB_TBST

FB_TBST

```

    enumerator kFLEXBUS_MultiplexGroup4_FB_CS2
        FB_CS2
    enumerator kFLEXBUS_MultiplexGroup4_FB_BE_15_8
        FB_BE_15_8
enum _flexbus_multiplex_group5_signal
    Defines multiplex group5 valid signals.
    Values:
    enumerator kFLEXBUS_MultiplexGroup5_FB_TA
        FB_TA
    enumerator kFLEXBUS_MultiplexGroup5_FB_CS3
        FB_CS3
    enumerator kFLEXBUS_MultiplexGroup5_FB_BE_7_0
        FB_BE_7_0
typedef enum _flexbus_port_size flexbus_port_size_t
    Defines port size for FlexBus peripheral.
typedef enum _flexbus_write_address_hold flexbus_write_address_hold_t
    Defines number of cycles to hold address and attributes for FlexBus peripheral.
typedef enum _flexbus_read_address_hold flexbus_read_address_hold_t
    Defines number of cycles to hold address and attributes for FlexBus peripheral.
typedef enum _flexbus_address_setup flexbus_address_setup_t
    Address setup for FlexBus peripheral.
typedef enum _flexbus_bytelane_shift flexbus_bytelane_shift_t
    Defines byte-lane shift for FlexBus peripheral.
typedef enum _flexbus_multiplex_group1_signal flexbus_multiplex_group1_t
    Defines multiplex group1 valid signals.
typedef enum _flexbus_multiplex_group2_signal flexbus_multiplex_group2_t
    Defines multiplex group2 valid signals.
typedef enum _flexbus_multiplex_group3_signal flexbus_multiplex_group3_t
    Defines multiplex group3 valid signals.
typedef enum _flexbus_multiplex_group4_signal flexbus_multiplex_group4_t
    Defines multiplex group4 valid signals.
typedef enum _flexbus_multiplex_group5_signal flexbus_multiplex_group5_t
    Defines multiplex group5 valid signals.
typedef struct _flexbus_config flexbus_config_t
    Configuration structure that the user needs to set.
struct _flexbus_config
    #include <fsl_flexbus.h> Configuration structure that the user needs to set.

```

Public Members

```

uint8_t chip
    Chip FlexBus for validation

```

`uint8_t` waitStates
Value of wait states

`uint8_t` secondaryWaitStates
Value of secondary wait states

`uint32_t` chipBaseAddress
Chip base address for using FlexBus

`uint32_t` chipBaseAddressMask
Chip base address mask

`bool` writeProtect
Write protected

`bool` burstWrite
Burst-Write enable

`bool` burstRead
Burst-Read enable

`bool` byteEnableMode
Byte-enable mode support

`bool` autoAcknowledge
Auto acknowledge setting

`bool` extendTransferAddress
Extend transfer start/extend address latch enable

`bool` secondaryWaitStatesEnable
Enable secondary wait states

flexbus_port_size_t portSize
Port size of transfer

flexbus_bytelane_shift_t byteLaneShift
Byte-lane shift enable

flexbus_write_address_hold_t writeAddressHold
Write address hold or deselect option

flexbus_read_address_hold_t readAddressHold
Read address hold or deselect option

flexbus_address_setup_t addressSetup
Address setup setting

flexbus_multiplex_group1_t group1MultiplexControl
FlexBus Signal Group 1 Multiplex control

flexbus_multiplex_group2_t group2MultiplexControl
FlexBus Signal Group 2 Multiplex control

flexbus_multiplex_group3_t group3MultiplexControl
FlexBus Signal Group 3 Multiplex control

flexbus_multiplex_group4_t group4MultiplexControl
FlexBus Signal Group 4 Multiplex control

flexbus_multiplex_group5_t group5MultiplexControl
FlexBus Signal Group 5 Multiplex control

2.15 ftfx adapter

2.16 Ftfx CACHE Driver

enum _ftfx_cache_ram_func_constants

Constants for execute-in-RAM flash function.

Values:

enumerator kFTFx_CACHE_RamFuncMaxSizeInWords

The maximum size of execute-in-RAM function.

typedef struct _flash_prefetch_speculation_status ftfx_prefetch_speculation_status_t

FTFx prefetch speculation status.

typedef struct _ftfx_cache_config ftfx_cache_config_t

FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

status_t FTFx_CACHE_Init(ftfx_cache_config_t *config)

Initializes the global FTFx cache structure members.

This function checks and initializes the Flash module for the other FTFx cache APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

status_t FTFx_CACHE_ClearCachePrefetchSpeculation(ftfx_cache_config_t *config, bool isPreProcess)

Process the cache/prefetch/speculation to the flash.

Parameters

- config – A pointer to the storage for the driver runtime state.
- isPreProcess – The possible option used to control flash cache/prefetch/speculation

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – Invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

status_t FTFx_CACHE_PflashSetPrefetchSpeculation(ftfx_prefetch_speculation_status_t *speculationStatus)

Sets the PFlash prefetch speculation to the intended speculation status.

Parameters

- speculationStatus – The expected protect status to set to the PFlash protection register. Each bit is

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidSpeculationOption` – An invalid speculation option argument is provided.

`status_t FTFx_CACHE_PflashGetPrefetchSpeculation(ftfx_prefetch_speculation_status_t *speculationStatus)`

Gets the PFlash prefetch speculation status.

Parameters

- `speculationStatus` – Speculation status returned by the PFlash IP.

Return values

`kStatus_FTFx_Success` – API was executed successfully.

`struct _flash_prefetch_speculation_status`

`#include <fsl_ftfx_cache.h>` FTFx prefetch speculation status.

Public Members

`bool instructionOff`

Instruction speculation.

`bool dataOff`

Data speculation.

`union function_bit_operation_ptr_t`

`#include <fsl_ftfx_cache.h>`

Public Members

`uint32_t commadAddr`

`void (*callFlashCommand)(volatile uint32_t *base, uint32_t bitMask, uint32_t bitShift, uint32_t bitValue)`

`struct _ftfx_cache_config`

`#include <fsl_ftfx_cache.h>` FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

`uint8_t flashMemoryIndex`

0 - primary flash; 1 - secondary flash

`function_bit_operation_ptr_t bitOperFuncAddr`

An buffer point to the flash execute-in-RAM function.

2.17 ftfx controller

FTFx driver status codes.

Values:

enumerator kStatus_FTFx_Success

API is executed successfully

enumerator kStatus_FTFx_InvalidArgument

Invalid argument

enumerator kStatus_FTFx_SizeError

Error size

enumerator kStatus_FTFx_AlignmentError

Parameter is not aligned with the specified baseline

enumerator kStatus_FTFx_AddressError

Address is out of range

enumerator kStatus_FTFx_AccessError

Invalid instruction codes and out-of bound addresses

enumerator kStatus_FTFx_ProtectionViolation

The program/erase operation is requested to execute on protected areas

enumerator kStatus_FTFx_CommandFailure

Run-time error during command execution.

enumerator kStatus_FTFx_UnknownProperty

Unknown property.

enumerator kStatus_FTFx_EraseKeyError

API erase key is invalid.

enumerator kStatus_FTFx_RegionExecuteOnly

The current region is execute-only.

enumerator kStatus_FTFx_ExecuteInRamFunctionNotReady

Execute-in-RAM function is not available.

enumerator kStatus_FTFx_PartitionStatusUpdateFailure

Failed to update partition status.

enumerator kStatus_FTFx_SetFlexramAsEepromError

Failed to set FlexRAM as EEPROM.

enumerator kStatus_FTFx_RecoverFlexramAsRamError

Failed to recover FlexRAM as RAM.

enumerator kStatus_FTFx_SetFlexramAsRamError

Failed to set FlexRAM as RAM.

enumerator kStatus_FTFx_RecoverFlexramAsEepromError

Failed to recover FlexRAM as EEPROM.

enumerator kStatus_FTFx_CommandNotSupported

Flash API is not supported.

enumerator kStatus_FTFx_SwapSystemNotInUninitialized

Swap system is not in an uninitialized state.

enumerator kStatus_FTFx_SwapIndicatorAddressError

The swap indicator address is invalid.

enumerator kStatus_FTFx_ReadOnlyProperty

The flash property is read-only.

enumerator kStatus_FTFx_InvalidPropertyValue

The flash property value is out of range.

enumerator kStatus_FTFx_InvalidSpeculationOption

The option of flash prefetch speculation is invalid.

enumerator kStatus_FTFx_CommandOperationInProgress

The option of flash command is processing.

enum _ftfx_driver_api_keys

Enumeration for FTFx driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFTFx_ApiEraseKey

Key value used to validate all FTFx erase APIs.

void FTFx_API_Init(*ftfx_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

status_t FTFx_API_UpdateFlexnvmPartitionStatus(*ftfx_config_t* *config)

Updates FlexNVM memory partition status according to data flash 0 IFR.

This function updates FlexNVM memory partition status.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FTFx_CMD_Erase(*ftfx_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the flash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.

- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_EraseSectorNonBlocking(ftfx_config_t *config, uint32_t start, uint32_t key)`

Erases the flash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address.

Parameters

- `config` – The pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t FTFx_CMD_EraseAll(ftfx_config_t *config, uint32_t key)`

Erases entire flash.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllUnsecure(ftfx_config_t *config, uint32_t key)`

Erases the entire flash, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllExecuteOnlySegments(ftfx_config_t *config, uint32_t key)`

Erases all program flash execute-only segments defined by the FXACC registers.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_Program(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramOnce(ftfx_config_t *config, uint32_t index, const uint8_t *src, uint32_t lengthInBytes)`

Programs Program Once Field through parameters.

This function programs the Program Once Field with the desired data for a given flash area as determined by the index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating which area of the Program Once Field to be programmed.
- `src` – A pointer to the source buffer of data that is to be programmed into the Program Once Field.

- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramSection(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

status_t FTFx_CMD_ProgramPartition(*ftfx_config_t* *config, *ftfx_partition_flexram_load_opt_t* option, *uint32_t* eepromDataSizeCode, *uint32_t* flexnvmPartitionCode, *uint8_t* CSEcKeySize, *uint8_t* CFE)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- config – Pointer to storage for the driver runtime state.
- option – The option used to set FlexRAM load behavior during reset.
- eepromDataSizeCode – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- flexnvmPartitionCode – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – Invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.

status_t FTFx_CMD_ReadOnce(*ftfx_config_t* *config, *uint32_t* index, *uint8_t* *dst, *uint32_t* lengthInBytes)

Reads the Program Once Field through parameters.

This function reads the read once feild with given index and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- index – The index indicating the area of program once field to be read.
- dst – A pointer to the destination buffer of data that is used to store data to be read.
- lengthInBytes – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.

- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ReadResource(ftfx_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyErase(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAll(ftfx_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAllExecuteOnlySegments(ftfx_config_t *config,
ftfx_margin_value_t margin)`

Verifies whether the program flash execute-only segments have been erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyProgram(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_REG_GetSecurityState(ftfx_config_t *config, ftfx_security_state_t *state)`

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t FTFx_CMD_SecurityBypass(ftfx_config_t *config, const uint8_t *backdoorKey)`

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_SetFlexramFunction(ftfx_config_t *config, ftfx_flexram_func_opt_t option)`

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_SwapControl(ftfx_config_t *config, uint32_t address, ftfx_swap_control_opt_t option, ftfx_swap_state_config_t *returnInfo)`

Configures the Swap function or checks the swap state of the Flash module.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `address` – Address used to configure the flash Swap function.

- `option` – The possible option used to configure Flash Swap function or check the flash Swap status
- `returnInfo` – A pointer to the data which is used to return the information of flash Swap.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`enum _ftfx_partition_flexram_load_option`

Enumeration for the FlexRAM load during reset option.

Values:

`enumerator kFTFx_PartitionFlexramLoadOptLoadedWithValidEepromData`
FlexRAM is loaded with valid EEPROM data during reset sequence.

`enumerator kFTFx_PartitionFlexramLoadOptNotLoaded`
FlexRAM is not loaded during reset sequence.

`enum _ftfx_read_resource_opt`

Enumeration for the two possible options of flash read resource command.

Values:

`enumerator kFTFx_ResourceOptionFlashIfc`
Select code for Program flash 0 IFR, Program flash swap 0 IFR, Data flash 0 IFR

`enumerator kFTFx_ResourceOptionVersionId`
Select code for the version ID

`enum _ftfx_margin_value`

Enumeration for supported FTFx margin levels.

Values:

`enumerator kFTFx_MarginValueNormal`
Use the 'normal' read level for 1s.

`enumerator kFTFx_MarginValueUser`
Apply the 'User' margin to the normal read-1 level.

`enumerator kFTFx_MarginValueFactory`
Apply the 'Factory' margin to the normal read-1 level.

enumerator kFTFx_MarginValueInvalid

Not real margin level, Used to determine the range of valid margin level.

enum _ftfx_security_state

Enumeration for the three possible FTFx security states.

Values:

enumerator kFTFx_SecurityStateNotSecure

Flash is not secure.

enumerator kFTFx_SecurityStateBackdoorEnabled

Flash backdoor is enabled.

enumerator kFTFx_SecurityStateBackdoorDisabled

Flash backdoor is disabled.

enum _ftfx_flexram_function_option

Enumeration for the two possible options of set FlexRAM function command.

Values:

enumerator kFTFx_FlexramFuncOptAvailableAsRam

An option used to make FlexRAM available as RAM

enumerator kFTFx_FlexramFuncOptAvailableForEeprom

An option used to make FlexRAM available for EEPROM

enum _flash_acceleration_ram_property

Enumeration for acceleration ram property.

Values:

enumerator kFLASH_AccelerationRamSize

enum _ftfx_swap_control_option

Enumeration for the possible options of Swap control commands.

Values:

enumerator kFTFx_SwapControlOptionInitializeSystem

An option used to initialize the Swap system

enumerator kFTFx_SwapControlOptionSetInUpdateState

An option used to set the Swap in an update state

enumerator kFTFx_SwapControlOptionSetInCompleteState

An option used to set the Swap in a complete state

enumerator kFTFx_SwapControlOptionReportStatus

An option used to report the Swap status

enumerator kFTFx_SwapControlOptionDisableSystem

An option used to disable the Swap status

enum _ftfx_swap_state

Enumeration for the possible flash Swap status.

Values:

enumerator kFTFx_SwapStateUninitialized

Flash Swap system is in an uninitialized state.

enumerator kFTFx_SwapStateReady

Flash Swap system is in a ready state.

enumerator kFTFx_SwapStateUpdate

Flash Swap system is in an update state.

enumerator kFTFx_SwapStateUpdateErased

Flash Swap system is in an updateErased state.

enumerator kFTFx_SwapStateComplete

Flash Swap system is in a complete state.

enumerator kFTFx_SwapStateDisabled

Flash Swap system is in a disabled state.

enum _ftfx_swap_block_status

Enumeration for the possible flash Swap block status.

Values:

enumerator kFTFx_SwapBlockStatusLowerHalfProgramBlocksAtZero

Swap block status is that lower half program block at zero.

enumerator kFTFx_SwapBlockStatusUpperHalfProgramBlocksAtZero

Swap block status is that upper half program block at zero.

enum _ftfx_memory_type

Enumeration for FTFx memory type.

Values:

enumerator kFTFx_MemTypePflash

enumerator kFTFx_MemTypeFlexnvm

typedef enum _ftfx_partition_flexram_load_option ftfx_partition_flexram_load_opt_t

Enumeration for the FlexRAM load during reset option.

typedef enum _ftfx_read_resource_opt ftfx_read_resource_opt_t

Enumeration for the two possible options of flash read resource command.

typedef enum _ftfx_margin_value ftfx_margin_value_t

Enumeration for supported FTFx margin levels.

typedef enum _ftfx_security_state ftfx_security_state_t

Enumeration for the three possible FTFx security states.

typedef enum _ftfx_flexram_function_option ftfx_flexram_func_opt_t

Enumeration for the two possible options of set FlexRAM function command.

typedef enum _ftfx_swap_control_option ftfx_swap_control_opt_t

Enumeration for the possible options of Swap control commands.

typedef enum _ftfx_swap_state ftfx_swap_state_t

Enumeration for the possible flash Swap status.

typedef enum _ftfx_swap_block_status ftfx_swap_block_status_t

Enumeration for the possible flash Swap block status.

typedef struct _ftfx_swap_state_config ftfx_swap_state_config_t

Flash Swap information.

typedef struct _ftfx_special_mem ftfx_spec_mem_t

ftfx special memory access information.

typedef struct _ftfx_mem_descriptor ftfx_mem_desc_t

Flash memory descriptor.

```
typedef struct _ftfx_ops_config ftfx_ops_config_t
```

Active FTFx information for the current operation.

```
typedef struct _ftfx_ifr_descriptor ftfx_ifr_desc_t
```

Flash IFR memory descriptor.

```
typedef struct _ftfx_config ftfx_config_t
```

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

```
struct _ftfx_swap_state_config
```

#include <fsl_ftfx_controller.h> Flash Swap information.

Public Members

ftfx_swap_state_t flashSwapState

The current Swap system status.

ftfx_swap_block_status_t currentSwapBlockStatus

The current Swap block status.

ftfx_swap_block_status_t nextSwapBlockStatus

The next Swap block status.

```
struct _ftfx_special_mem
```

#include <fsl_ftfx_controller.h> ftfx special memory access information.

Public Members

uint32_t base

Base address of flash special memory.

uint32_t size

size of flash special memory.

uint32_t count

flash special memory count.

```
struct _ftfx_mem_descriptor
```

#include <fsl_ftfx_controller.h> Flash memory descriptor.

Public Members

uint32_t blockBase

A base address of the flash block

uint32_t aliasBlockBase

A base address of the alias flash block

uint32_t totalSize

The size of the flash block.

uint32_t sectorSize

The size in bytes of a sector of flash.

uint32_t blockCount

A number of flash blocks.

struct `_ftfx_ops_config`
#include <fsl_ftfx_controller.h> Active FTFx information for the current operation.

Public Members

uint32_t convertedAddress
A converted address for the current flash type.

struct `_ftfx_ifr_descriptor`
#include <fsl_ftfx_controller.h> Flash IFR memory descriptor.

union `function_ptr_t`
#include <fsl_ftfx_controller.h>

Public Members

uint32_t commadAddr

void (*callFlashCommand)(volatile uint8_t *FTMRx_fstat)

struct `_ftfx_config`
#include <fsl_ftfx_controller.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

uint32_t flexramBlockBase
The base address of the FlexRAM/acceleration RAM

uint32_t flexramTotalSize
The size of the FlexRAM/acceleration RAM

uint16_t eepromTotalSize
The size of EEPROM area which was partitioned from FlexRAM

function_ptr_t runCmdFuncAddr
An buffer point to the flash execute-in-RAM function.

struct `__unnamed11__`

Public Members

uint8_t type
Type of flash block.

uint8_t index
Index of flash block.

struct `feature`

struct `addrAligment`

struct `feature`

struct `resRange`

Public Members

uint8_t versionIdStart

Version ID start address

uint32_t pflashIfrStart

Program Flash 0 IFR start address

uint32_t dflashIfrStart

Data Flash 0 IFR start address

uint32_t pflashSwapIfrStart

Program Flash Swap IFR start address

struct idxInfo

2.18 ftfx feature

FTFx_DRIVER_IS_FLASH_RESIDENT

Flash driver location.

Used for the flash resident application.

FTFx_DRIVER_IS_EXPORTED

Flash Driver Export option.

Used for the MCUXpresso SDK application.

FTFx_FLASH1_HAS_PROT_CONTROL

Indicates whether the secondary flash has its own protection register in flash module.

FTFx_FLASH1_HAS_XACC_CONTROL

Indicates whether the secondary flash has its own Execute-Only access register in flash module.

FTFx_DRIVER_HAS_FLASH1_SUPPORT

Indicates whether the secondary flash is supported in the Flash driver.

FTFx_FLASH_COUNT

FTFx_FLASH1_IS_INDEPENDENT_BLOCK

2.19 Ftftx FLASH Driver

status_t FLASH_Init(*flash_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_Erase(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)`

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- `config` – The pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the appropriate number of flash sectors based on the desired start address and length were erased successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_EraseSectorNonBlocking(flash_config_t *config, uint32_t start, uint32_t key)`

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address, and it is executed asynchronously.

NOTE: This function can only erase one flash sector at a time, and the other commands can be executed after the previous command has been completed.

Parameters

- `config` – The pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.

`status_t FLASH_EraseAll(flash_config_t *config, uint32_t key)`

Erases entire flexnvm.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the all pflash and flexnvm were erased successfully, the swap and eeprom have been reset to unconfigured state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_EraseAllUnsecure(flash_config_t *config, uint32_t key)`

Erases the entire flexnvm, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protected sectors of flash were reset to unprotected status.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_Program(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data were programed successfully into flash based on desired start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ProgramOnce(flash_config_t *config, uint32_t index, uint8_t *src, uint32_t lengthInBytes)`

Program the Program-Once-Field through parameters.

This function Program the Program-once-feild with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `src` – A pointer to the source buffer of data that is used to store data to be write.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; The index indicating the area of program once field was programed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ProgramSection(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into flash based on start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t FLASH_ReadResource(flash_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ReadOnce(flash_config_t *config, uint32_t index, uint8_t *dst, uint32_t lengthInBytes)`

Reads the Program Once Field through parameters.

This function reads the read once feild with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been successfully read form Program flash0 IFR map and Program Once field based on index and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_VerifyErase(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region has been erased.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_VerifyEraseAll(flash_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; all program flash and flexnvm were in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_VerifyProgram(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, *ftfx_margin_value_t* margin, uint32_t *failedAddress, uint32_t *failedData)

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be verified. Must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- expectedData – A pointer to the expected data that is to be verified against.
- margin – Read margin choice.
- failedAddress – A pointer to the returned failing address.
- failedData – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programed into specified FLASH region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_GetSecurityState(*flash_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flash was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLASH_SecurityBypass(*flash_config_t* *config, const uint8_t *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_SetFlexramFunction(*flash_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

status_t FLASH_Swap(*flash_config_t* *config, uint32_t address, bool isSetEnable)

Swaps the lower half flash with the higher half flash.

Parameters

- config – A pointer to the storage for the driver runtime state.
- address – Address used to configure the flash swap function
- isSetEnable – The possible option used to configure the Flash Swap function or check the flash Swap status.

Return values

- kStatus_FTFx_Success – API was executed successfully; the lower half flash and higher half flash have been swapped.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – Parameter is not aligned with specified baseline.
- kStatus_FTFx_SwapIndicatorAddressError – Swap indicator address is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.
- kStatus_FTFx_SwapSystemNotInUninitialized – Swap system is not in an uninitialized state.

status_t FLASH_IsProtected(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, *flash_prot_state_t* *protection_state)

Returns the protection state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash protect status for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be checked. Must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be checked. Must be word-aligned.
- protection_state – A pointer to the value returned for the current protection status code for the desired flash area.

Return values

- kStatus_FTFx_Success – API was executed successfully; the protection state of specified FLASH region was stored to protection_state.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – Parameter is not aligned with specified baseline.

- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t FLASH_IsExecuteOnly(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, flash_xacc_state_t *access_state)`

Returns the access state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash access status for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be checked. Must be word-aligned.
- `access_state` – A pointer to the value returned for the current access status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the executeOnly state of specified FLASH region was stored to `access_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned to the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t FLASH_PflashSetProtection(flash_config_t *config, pflash_prot_status_t *protectStatus)`

Sets the PFlash Protection to the intended protection status.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the PFlash protection register. Each bit is corresponding to protection of 1/32(64) of the total PFlash. The least significant bit is corresponding to the lowest address area of PFlash. The most significant bit is corresponding to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region is protected.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLASH_PflashGetProtection(flash_config_t *config, pflash_prot_status_t *protectStatus)`

Gets the PFlash protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – Protect status returned by the PFlash IP. Each bit is corresponding to the protection of 1/32(64) of the total PFlash. The least significant bit corresponds to the lowest address area of the PFlash. The most significant bit corresponds to the highest address area of PFlash. There

are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the Protection state was stored to `protectStatus`;
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLASH_GetProperty(*flash_config_t* *config, *flash_property_tag_t* whichProperty, *uint32_t* *value)

Returns the desired flash property.

Parameters

- config – A pointer to the storage for the driver runtime state.
- whichProperty – The desired property from the list of properties in enum `flash_property_tag_t`
- value – A pointer to the value returned for the desired flash property.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the flash property was stored to value.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_UnknownProperty` – An unknown property tag.

`status_t` FLASH_GetCommandState(void)

Get previous command status.

This function is used to obtain the execution status of the previous command.

Return values

- `kStatus_FTFx_Success` – The previous command is executed successfully.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`FSL_FLASH_DRIVER_VERSION`

Flash driver version for SDK.

Version 3.1.3.

`FSL_FLASH_DRIVER_VERSION_ROM`

Flash driver version for ROM.

Version 3.0.0.

`enum _flash_protection_state`

Enumeration for the three possible flash protection levels.

Values:

enumerator `kFLASH_ProtectionStateUnprotected`

Flash region is not protected.

enumerator kFLASH_ProtectionStateProtected

Flash region is protected.

enumerator kFLASH_ProtectionStateMixed

Flash is mixed with protected and unprotected region.

enum _flash_execute_only_access_state

Enumeration for the three possible flash execute access levels.

Values:

enumerator kFLASH_AccessStateUnLimited

Flash region is unlimited.

enumerator kFLASH_AccessStateExecuteOnly

Flash region is execute only.

enumerator kFLASH_AccessStateMixed

Flash is mixed with unlimited and execute only region.

enum _flash_property_tag

Enumeration for various flash properties.

Values:

enumerator kFLASH_PropertyPflash0SectorSize

Pflash sector size property.

enumerator kFLASH_PropertyPflash0TotalSize

Pflash total size property.

enumerator kFLASH_PropertyPflash0BlockSize

Pflash block size property.

enumerator kFLASH_PropertyPflash0BlockCount

Pflash block count property.

enumerator kFLASH_PropertyPflash0BlockBaseAddr

Pflash block base address property.

enumerator kFLASH_PropertyPflash0FacSupport

Pflash fac support property.

enumerator kFLASH_PropertyPflash0AccessSegmentSize

Pflash access segment size property.

enumerator kFLASH_PropertyPflash0AccessSegmentCount

Pflash access segment count property.

enumerator kFLASH_PropertyPflash1SectorSize

Pflash sector size property.

enumerator kFLASH_PropertyPflash1TotalSize

Pflash total size property.

enumerator kFLASH_PropertyPflash1BlockSize

Pflash block size property.

enumerator kFLASH_PropertyPflash1BlockCount

Pflash block count property.

enumerator kFLASH_PropertyPflash1BlockBaseAddr

Pflash block base address property.

enumerator kFLASH_PropertyPflash1FacSupport

Pflash fac support property.

enumerator kFLASH_PropertyPflash1AccessSegmentSize

Pflash access segment size property.

enumerator kFLASH_PropertyPflash1AccessSegmentCount

Pflash access segment count property.

enumerator kFLASH_PropertyFlexRamBlockBaseAddr

FlexRam block base address property.

enumerator kFLASH_PropertyFlexRamTotalSize

FlexRam total size property.

typedef enum *_flash_protection_state* flash_prot_state_t

Enumeration for the three possible flash protection levels.

typedef union *_pflash_protection_status* pflash_prot_status_t

PFlash protection status.

typedef enum *_flash_execute_only_access_state* flash_xacc_state_t

Enumeration for the three possible flash execute access levels.

typedef enum *_flash_property_tag* flash_property_tag_t

Enumeration for various flash properties.

typedef struct *_flash_config* flash_config_t

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

kStatus_FLASH_Success

kFLASH_ApiEraseKey

union *_pflash_protection_status*

#include <fsl_ftfx_flash.h> PFlash protection status.

Public Members

uint32_t protl

PROT[31:0] .

uint32_t proth

PROT[63:32].

uint8_t protsl

PROTS[7:0] .

uint8_t protsh

PROTS[15:8] .

uint8_t reserved[2]

struct *_flash_config*

#include <fsl_ftfx_flash.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

2.20 Ftftx FLEXNVM Driver

status_t FLEXNVM_Init(*flexnvm_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLEXNVM_DflashErase(*flexnvm_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the appropriate number of date flash sectors based on the desired start address and length were erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FLEXNVM_EraseAll(*flexnvm_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- config – Pointer to the storage for the driver runtime state.
- key – A value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the entire flexnvm has been erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_EraseKeyError – API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLEXNVM_EraseAllUnsecure(*flexnvm_config_t* *config, uint32_t key)

Erases the entire flexnvm, including protected sectors.

Parameters

- config – Pointer to the storage for the driver runtime state.
- key – A value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the flexnvm is not in security state.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_EraseKeyError – API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLEXNVM_DflashProgram(*flexnvm_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified data flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_DflashProgramSection(*flexnvm_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified data flash area.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.

- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t FLEXNVM_ProgramPartition(flexnvm_config_t *config,
ftfx_partition_flexram_load_opt_t option, uint32_t
eepromDataSizeCode, uint32_t flexnvmPartitionCode)`

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLEXNVM_ProgramPartition_CSE(flexnvm_config_t *config,
ftfx_partition_flexram_load_opt_t option, uint32_t
eepromDataSizeCode, uint32_t
flexnvmPartitionCode, uint8_t CSEcKeySize, uint8_t
SFE)`

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM. This is the CSE enabled version for IP's like FTFC.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eeepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.
- `CSEcKeySize` – CSEc/SHE key size, see RM for details and possible values
- `SFE` – Security Flag Extension (SFE), see RM for details and possible values

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLEXNVM_ReadResource(flexnvm_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashVerifyErase(flexnvm_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified data flash region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_VerifyEraseAll(flexnvm_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the entire flexnvm region is in erased state.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashVerifyProgram(flexnvm_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into specified data flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

status_t FLEXNVM_GetSecurityState(*flexnvm_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- config – A pointer to storage for the driver runtime state.
- state – A pointer to the value returned for the current security status code:

Return values

- kStatus_FTFx_Success – API was executed successfully; the security state of flexnvm was stored to state.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.

status_t FLEXNVM_SecurityBypass(*flexnvm_config_t* *config, const uint8_t *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- config – A pointer to the storage for the driver runtime state.
- backdoorKey – A pointer to the user buffer containing the backdoor key.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FLEXNVM_SetFlexramFunction(*flexnvm_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- config – A pointer to the storage for the driver runtime state.
- option – The option used to set the work mode of FlexRAM.

Return values

- kStatus_FTFx_Success – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashSetProtection(flexnvm_config_t *config, uint8_t protectStatus)`

Sets the DFlash protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the DFlash protection register. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified DFlash region is protected.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLEXNVM_DflashGetProtection(flexnvm_config_t *config, uint8_t *protectStatus)`

Gets the DFlash protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash, and so on. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

`status_t FLEXNVM_EepromSetProtection(flexnvm_config_t *config, uint8_t protectStatus)`

Sets the EEPROM protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the EEPROM protection register. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of EEPROM, and so on. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLEXNVM_EepromGetProtection(flexnvm_config_t *config, uint8_t *protectStatus)`

Gets the EEPROM protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of the EEPROM. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

`status_t FLEXNVM_GetProperty(flexnvm_config_t *config, flexnvm_property_tag_t whichProperty, uint32_t *value)`

Returns the desired flexnvm property.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `whichProperty` – The desired property from the list of properties in enum `flexnvm_property_tag_t`
- `value` – A pointer to the value returned for the desired flexnvm property.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_UnknownProperty` – An unknown property tag.

`enum _flexnvm_property_tag`

Enumeration for various flexnvm properties.

Values:

enumerator `kFLEXNVM_PropertyDflashSectorSize`
Dflash sector size property.

enumerator `kFLEXNVM_PropertyDflashTotalSize`
Dflash total size property.

enumerator `kFLEXNVM_PropertyDflashBlockSize`
Dflash block size property.

enumerator `kFLEXNVM_PropertyDflashBlockCount`
Dflash block count property.

enumerator kFLEXNVM_PropertyDflashBlockBaseAddr

Dflash block base address property.

enumerator kFLEXNVM_PropertyAliasDflashBlockBaseAddr

Dflash block base address Alias property.

enumerator kFLEXNVM_PropertyFlexRamBlockBaseAddr

FlexRam block base address property.

enumerator kFLEXNVM_PropertyFlexRamTotalSize

FlexRam total size property.

enumerator kFLEXNVM_PropertyEepromTotalSize

EEPROM total size property.

typedef enum *_flexnvm_property_tag* flexnvm_property_tag_t

Enumeration for various flexnvm properties.

typedef struct *_flexnvm_config* flexnvm_config_t

Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

status_t FLEXNVM_EepromWrite(*flexnvm_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs the EEPROM with data at locations passed in through parameters.

This function programs the emulated EEPROM with the desired data for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be programmed. Must be word-aligned.
- src – A pointer to the source buffer of data that is to be programmed into the flash.
- lengthInBytes – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- kStatus_FTFx_Success – API was executed successfully; the desired data have been successfully programmed into specified eeprom region.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AddressError – Address is out of range.
- kStatus_FTFx_SetFlexramAsEepromError – Failed to set flexram as eeprom.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_RecoverFlexramAsRamError – Failed to recover the FlexRAM as RAM.

struct *_flexnvm_config*

#include <fsl_ftfx_flexnvm.h> Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

2.21 ftfx utilities

ALIGN_DOWN(x, a)

Alignment(down) utility.

ALIGN_UP(x, a)

Alignment(up) utility.

MAKE_VERSION(major, minor, bugfix)

Constructs the version number for drivers.

MAKE_STATUS(group, code)

Constructs a status code value from a group and a code number.

FOUR_CHAR_CODE(a, b, c, d)

Constructs the four character code for the Flash driver API key.

B1P4(b)

bytes2word utility.

B1P3(b)

B1P2(b)

B1P1(b)

B2P3(b)

B2P2(b)

B2P1(b)

B3P2(b)

B3P1(b)

BYTE2WORD_1_3(x, y)

BYTE2WORD_2_2(x, y)

BYTE2WORD_3_1(x, y)

BYTE2WORD_1_1_2(x, y, z)

BYTE2WORD_1_2_1(x, y, z)

BYTE2WORD_2_1_1(x, y, z)

BYTE2WORD_1_1_1_1(x, y, z, w)

2.22 FTM: FlexTimer Driver

status_t FTM_Init(FTM_Type *base, const *ftm_config_t* *config)

Ungates the FTM clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application which is using the FTM driver. If the FTM instance has only TPM features, please use the TPM driver.

Parameters

- base – FTM peripheral base address
- config – Pointer to the user configuration structure.

Returns

kStatus_Success indicates success; Else indicates failure.

void FTM_Deinit(FTM_Type *base)

Gates the FTM clock.

Parameters

- base – FTM peripheral base address

void FTM_GetDefaultConfig(*ftm_config_t* *config)

Fills in the FTM configuration structure with the default settings.

The default values are:

```
config->prescale = kFTM_Prescale_Divide_1;
config->bdmMode = kFTM_BdmMode_0;
config->pwmSyncMode = kFTM_SoftwareTrigger;
config->reloadPoints = 0;
config->faultMode = kFTM_Fault_Disable;
config->faultFilterValue = 0;
config->deadTimePrescale = kFTM_Deadtime_Prescale_1;
config->deadTimeValue = 0;
config->extTriggers = 0;
config->chnlInitState = 0;
config->chnlPolarity = 0;
config->useGlobalTimeBase = false;
config->hwTriggerResetCount = false;
config->swTriggerResetCount = true;
```

Parameters

- config – Pointer to the user configuration structure.

static inline *ftm_clock_prescale_t* FTM_CalculateCounterClkDiv(FTM_Type *base, uint32_t counterPeriod_Hz, uint32_t srcClock_Hz)

brief Calculates the counter clock prescaler.

This function calculates the values for SC[PS] bit.

param base FTM peripheral base address param counterPeriod_Hz The desired frequency in Hz which corresponding to the time when the counter reaches the mod value param srcClock_Hz FTM counter clock in Hz

return Calculated clock prescaler value, see *ftm_clock_prescale_t*.

status_t FTM_SetupPwm(FTM_Type *base, const *ftm_chnl_pwm_signal_param_t* *chnlParams, uint8_t numOfChnls, *ftm_pwm_mode_t* mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Configures the PWM signal parameters.

Call this function to configure the PWM signal period, mode, duty cycle, and edge. Use this function to configure all FTM channels that are used to output a PWM signal.

Parameters

- base – FTM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)

- numOfChnls – Number of channels to configure; This should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration `ftm_pwm_mode_t`
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – FTM counter clock in Hz

Returns

`kStatus_Success` if the PWM setup was successful `kStatus_Error` on failure

`status_t` FTM_UpdatePwmDutycycle(FTM_Type *base, *ftm_chnl_t* chnlNumber, *ftm_pwm_mode_t* currentPwmMode, `uint8_t` dutyCyclePercent)

Updates the duty cycle of an active PWM signal.

Parameters

- base – FTM peripheral base address
- chnlNumber – The channel/channel pair number. In combined mode, this represents the channel pair number
- currentPwmMode – The current PWM mode set during PWM setup
- dutyCyclePercent – New PWM pulse width; The value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

Returns

`kStatus_Success` if the PWM update was successful `kStatus_Error` on failure

`void` FTM_UpdateChnlEdgeLevelSelect(FTM_Type *base, *ftm_chnl_t* chnlNumber, `uint8_t` level)

Updates the edge level selection for a channel.

Parameters

- base – FTM peripheral base address
- chnlNumber – The channel number
- level – The level to be set to the ELSnB:ELSnA field; Valid values are 00, 01, 10, 11. See the Kinetis SoC reference manual for details about this field.

`status_t` FTM_SetupPwmMode(FTM_Type *base, *const ftm_chnl_pwm_config_param_t* *chnlParams, `uint8_t` numOfChnls, *ftm_pwm_mode_t* mode)

Configures the PWM mode parameters.

Call this function to configure the PWM signal mode, duty cycle in ticks, and edge. Use this function to configure all FTM channels that are used to output a PWM signal. Please note that: This API is similar with FTM_SetupPwm() API, but will not set the timer period, and this API will set channel match value in timer ticks, not period percent.

Parameters

- base – FTM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)
- numOfChnls – Number of channels to configure; This should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration `ftm_pwm_mode_t`

Returns

`kStatus_Success` if the PWM setup was successful `kStatus_Error` on failure

```
void FTM_ConfigSinglePWM(FTM_Type *base, const ftm_chnl_param_t *chnlParams, ftm_chnl_t
                        chnlNumber)
```

Configure FTM edge aligned PWM or center aligned PWM by each channel.

This function configure PWM signal by setting channel n value register. Need to invoke FTM_SetInitialModuloValue to configure FTM period.

Parameters

- base – FTM peripheral base address
- chnlParams – PWM configuration structure pointer.
- chnlPairNumber – Channel number.

```
void FTM_ConfigCombinePWM(FTM_Type *base, const ftm_chnl_param_t *chnlParams,
                          ftm_chnl_t chnlPairNumber)
```

Configure FTM Combine PWM, Modified Combine PWM or Asymmetrical PWM by each channel pair.

This function configure PWM signal by setting channel n value register. Need to invoke FTM_SetInitialModuloValue to configure FTM period.

Parameters

- base – FTM peripheral base address
- chnlParams – PWM configuration structure pointer.
- chnlPairNumber – Channel pair number, options are 0, 1, 2, 3.

```
void FTM_SetupInputCapture(FTM_Type *base, ftm_chnl_t chnlNumber,
                           ftm_input_capture_edge_t captureMode, uint32_t filterValue)
```

Enables capturing an input signal on the channel using the function parameters.

When the edge specified in the captureMode argument occurs on the channel, the FTM counter is captured into the CnV register. The user has to read the CnV register separately to get this value. The filter function is disabled if the filterVal argument passed in is 0. The filter function is available only for channels 0, 1, 2, 3.

Parameters

- base – FTM peripheral base address
- chnlNumber – The channel number
- captureMode – Specifies which edge to capture
- filterValue – Filter value, specify 0 to disable filter. Available only for channels 0-3.

```
void FTM_SetupOutputCompare(FTM_Type *base, ftm_chnl_t chnlNumber,
                             ftm_output_compare_mode_t compareMode, uint32_t
                             compareValue)
```

Configures the FTM to generate timed pulses.

When the FTM counter matches the value of compareVal argument (this is written into CnV reg), the channel output is changed based on what is specified in the compareMode argument.

Parameters

- base – FTM peripheral base address
- chnlNumber – The channel number
- compareMode – Action to take on the channel output when the compare condition is met

- `compareValue` – Value to be programmed in the CnV register.

```
void FTM_SetupDualEdgeCapture(FTM_Type *base, ftm_chnl_t chnlPairNumber, const  
                             ftm_dual_edge_capture_param_t *edgeParam, uint32_t  
                             filterValue)
```

Configures the dual edge capture mode of the FTM.

This function sets up the dual edge capture mode on a channel pair. The capture edge for the channel pair and the capture mode (one-shot or continuous) is specified in the parameter argument. The filter function is disabled if the `filterVal` argument passed is zero. The filter function is available only on channels 0 and 2. The user has to read the channel CnV registers separately to get the capture values.

Parameters

- `base` – FTM peripheral base address
- `chnlPairNumber` – The FTM channel pair number; options are 0, 1, 2, 3
- `edgeParam` – Sets up the dual edge capture function
- `filterValue` – Filter value, specify 0 to disable filter. Available only for channel pair 0 and 1.

```
void FTM_EnableInterrupts(FTM_Type *base, uint32_t mask)
```

Enables the selected FTM interrupts.

Parameters

- `base` – FTM peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `ftm_interrupt_enable_t`

```
void FTM_DisableInterrupts(FTM_Type *base, uint32_t mask)
```

Disables the selected FTM interrupts.

Parameters

- `base` – FTM peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `ftm_interrupt_enable_t`

```
uint32_t FTM_GetEnabledInterrupts(FTM_Type *base)
```

Gets the enabled FTM interrupts.

Parameters

- `base` – FTM peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `ftm_interrupt_enable_t`

```
uint32_t FTM_GetInstance(FTM_Type *base)
```

Gets the instance from the base address.

Parameters

- `base` – FTM peripheral base address

Returns

The FTM instance

```
uint32_t FTM_GetStatusFlags(FTM_Type *base)
```

Gets the FTM status flags.

Parameters

- base – FTM peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `ftm_status_flags_t`

```
void FTM_ClearStatusFlags(FTM_Type *base, uint32_t mask)
```

Clears the FTM status flags.

Parameters

- base – FTM peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `ftm_status_flags_t`

```
static inline void FTM_SetTimerPeriod(FTM_Type *base, uint32_t ticks)
```

Sets the timer period in units of ticks.

Timers counts from 0 until it equals the count value set here. The count value is written to the MOD register.

Note:

- a. This API allows the user to use the FTM module as a timer. Do not mix usage of this API with FTM's PWM setup API's.
 - b. Call the utility macros provided in the `fsl_common.h` to convert usec or msec to ticks.
-

Parameters

- base – FTM peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.

```
static inline void FTM_SetInitialModuloValue(FTM_Type *base, uint16_t initialValue, uint16_t moduloValue)
```

Set initial value and modulo value for FTM.

Parameters

- base – FTM peripheral base address
- initialValue – FTM counter initial value.
- moduloValue – FTM counter modulo value.

```
static inline uint32_t FTM_GetCurrentTimerCount(FTM_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – FTM peripheral base address

Returns

The current counter value in ticks


```
static inline void FTM_SetChannelMatchValue(FTM_Type *base, ftm_chnl_t chnlNumber,
                                             uint16_t value)
```

Set channel match value for output.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to set.
- value – Channel match value for output.

```
static inline uint32_t FTM_GetInputCaptureValue(FTM_Type *base, ftm_chnl_t chnlNumber)
```

Reads the captured value.

This function returns the captured value of a FTM channel configured in input capture or dual edge capture mode.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to be read

Returns

The captured FTM counter value of the input modes.

```
static inline void FTM_StartTimer(FTM_Type *base, ftm_clock_source_t clockSource)
```

Starts the FTM counter.

Parameters

- base – FTM peripheral base address
- clockSource – FTM clock source; After the clock source is set, the counter starts running.

```
static inline void FTM_StopTimer(FTM_Type *base)
```

Stops the FTM counter.

Parameters

- base – FTM peripheral base address

```
static inline uint32_t FTM_GetSoftwareOutputValue(FTM_Type *base)
```

Get channel software output status.

Parameters

- base – FTM peripheral base address

Returns

Status of channel software output, logical OR value of `ftm_channel_index_t`.

```
static inline uint32_t FTM_GetSoftwareOutputEnable(FTM_Type *base)
```

Get channel software enable status.

Parameters

- base – FTM peripheral base address

Returns

Status of channel software enable, logical OR value of `ftm_channel_index_t`.

```
static inline void FTM_SetSoftwareOutputCtrl(FTM_Type *base, uint32_t chnlEnable, uint32_t chnlValue)
```

Enables or disables the channel software output control and set channel software output value.

Parameters

- base – FTM peripheral base address
- chnlEnable – Channels to enable or disable software output control, logical OR of enumeration `ftm_channel_index_t` members.
- chnlValue – Channels output value, logical OR of enumeration `ftm_channel_index_t` members

```
static inline void FTM_SetSoftwareCtrlEnable(FTM_Type *base, ftm_chnl_t chnlNumber, bool value)
```

Enables or disables the channel software output control.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to be enabled or disabled
- value – true: channel output is affected by software output control false: channel output is unaffected by software output control

```
static inline void FTM_SetSoftwareCtrlVal(FTM_Type *base, ftm_chnl_t chnlNumber, bool value)
```

Sets the channel software output control value.

Parameters

- base – FTM peripheral base address.
- chnlNumber – Channel to be configured
- value – true to set 1, false to set 0

```
static inline void FTM_SetFaultControlEnable(FTM_Type *base, ftm_chnl_t chnlPairNumber, bool value)
```

This function enables/disables the fault control in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: Enable fault control for this channel pair; false: No fault control

```
static inline void FTM_SetDeadTimeEnable(FTM_Type *base, ftm_chnl_t chnlPairNumber, bool value)
```

This function enables/disables the dead time insertion in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: Insert dead time in this channel pair; false: No dead time inserted

```
static inline void FTM_SetComplementaryEnable(FTM_Type *base, ftm_chnl_t chnlPairNumber, bool value)
```

This function enables/disables complementary mode in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: enable complementary mode; false: disable complementary mode

```
static inline void FTM_SetInvertEnable(FTM_Type *base, ftm_chnl_t chnlPairNumber, bool value)
```

This function enables/disables inverting control in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: enable inverting; false: disable inverting

```
void FTM_SetupQuadDecode(FTM_Type *base, const ftm_phase_params_t *phaseAParams,  
                          const ftm_phase_params_t *phaseBParams,  
                          ftm_quad_decode_mode_t quadMode)
```

Configures the parameters and activates the quadrature decoder mode.

Parameters

- base – FTM peripheral base address
- phaseAParams – Phase A configuration parameters
- phaseBParams – Phase B configuration parameters
- quadMode – Selects encoding mode used in quadrature decoder mode

```
static inline void FTM_SetQuadDecoderModuloValue(FTM_Type *base, uint32_t startValue,  
                                                  uint32_t overValue)
```

Sets the modulo values for Quad Decoder.

The modulo values configure the minimum and maximum values that the Quad decoder counter can reach. After the counter goes over, the counter value goes to the other side and decrease/increase again.

Parameters

- base – FTM peripheral base address.
- startValue – The low limit value for Quad Decoder counter.
- overValue – The high limit value for Quad Decoder counter.

```
static inline uint32_t FTM_GetQuadDecoderCounterValue(FTM_Type *base)
```

Gets the current Quad Decoder counter value.

Parameters

- base – FTM peripheral base address.

Returns

Current quad Decoder counter value.

```
static inline void FTM_ClearQuadDecoderCounterValue(FTM_Type *base)
```

Clears the current Quad Decoder counter value.

The counter is set as the initial value.

Parameters

- base – FTM peripheral base address.

FSL_FTM_DRIVER_VERSION

FTM driver version 2.7.1.

enum _ftm_chnl

List of FTM channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kFTM_Chnl_0
FTM channel number 0

enumerator kFTM_Chnl_1
FTM channel number 1

enumerator kFTM_Chnl_2
FTM channel number 2

enumerator kFTM_Chnl_3
FTM channel number 3

enumerator kFTM_Chnl_4
FTM channel number 4

enumerator kFTM_Chnl_5
FTM channel number 5

enumerator kFTM_Chnl_6
FTM channel number 6

enumerator kFTM_Chnl_7
FTM channel number 7

enum _ftm_fault_input

List of FTM faults.

Values:

enumerator kFTM_Fault_0
FTM fault 0 input pin

enumerator kFTM_Fault_1
FTM fault 1 input pin

enumerator kFTM_Fault_2
FTM fault 2 input pin

enumerator kFTM_Fault_3
FTM fault 3 input pin

enum _ftm_pwm_mode

FTM PWM operation modes.

Values:

enumerator kFTM_EdgeAlignedPwm
Edge-aligned PWM

enumerator kFTM_CenterAlignedPwm
Center-aligned PWM

enumerator kFTM_EdgeAlignedCombinedPwm

Edge-aligned combined PWM

enumerator kFTM_CenterAlignedCombinedPwm

Center-aligned combined PWM

enumerator kFTM_AsymmetricalCombinedPwm

Asymmetrical combined PWM

enum _ftm_pwm_level_select

FTM PWM output pulse mode: high-true, low-true or no output.

Note: kFTM_NoPwmSignal: ELSnB:ELSnA = 0:0 kFTM_LowTrue: ELSnB:ELSnA = 0:1
EPWM: Channel n output is forced low at counter overflow, forced high at channel n match.
CPWM: Channel n output is forced low at channel n match when counting down, and forced high at channel n match when counting up. Combined PWM: Channel n output is forced high at beginning of period and at channel n+1 match. It is forced low at the channel n match. kFTM_HighTrue: ELSnB:ELSnA = 1:0 EPWM: Channel n output is forced high at counter overflow, forced low at channel n match. CPWM: Channel n output is forced high at channel n match when counting down, and forced low at channel n match when counting up. Combined PWM: Channel n output is forced low at beginning of period and at channel n+1 match. It is forced high at the channel n match.

Values:

enumerator kFTM_NoPwmSignal

No PWM output on pin

enumerator kFTM_LowTrue

Low true pulses

enumerator kFTM_HighTrue

High true pulses

enum _ftm_output_compare_mode

FlexTimer output compare mode.

Values:

enumerator kFTM_NoOutputSignal

No channel output when counter reaches CnV

enumerator kFTM_ToggleOnMatch

Toggle output

enumerator kFTM_ClearOnMatch

Clear output

enumerator kFTM_SetOnMatch

Set output

enum _ftm_input_capture_edge

FlexTimer input capture edge.

Values:

enumerator kFTM_RisingEdge

Capture on rising edge only

enumerator kFTM_FallingEdge

Capture on falling edge only

enumerator kFTM_RiseAndFallEdge
Capture on rising or falling edge

enum _ftm_dual_edge_capture_mode
FlexTimer dual edge capture modes.

Values:

enumerator kFTM_OneShot
One-shot capture mode

enumerator kFTM_Continuous
Continuous capture mode

enum _ftm_quad_decode_mode
FlexTimer quadrature decode modes.

Values:

enumerator kFTM_QuadPhaseEncode
Phase A and Phase B encoding mode

enumerator kFTM_QuadCountAndDir
Count and direction encoding mode

enum _ftm_phase_polarity
FlexTimer quadrature phase polarities.

Values:

enumerator kFTM_QuadPhaseNormal
Phase input signal is not inverted

enumerator kFTM_QuadPhaseInvert
Phase input signal is inverted

enum _ftm_deadtime_prescale
FlexTimer pre-scaler factor for the dead time insertion.

Values:

enumerator kFTM_Deadtime_Prescale_1
Divide by 1

enumerator kFTM_Deadtime_Prescale_4
Divide by 4

enumerator kFTM_Deadtime_Prescale_16
Divide by 16

enum _ftm_clock_source
FlexTimer clock source selection.

Values:

enumerator kFTM_SystemClock
System clock selected

enumerator kFTM_FixedClock
Fixed frequency clock

enumerator kFTM_ExternalClock
External clock

enum _ftm_clock_prescale

FlexTimer pre-scaler factor selection for the clock source.

Values:

enumerator kFTM_Prescale_Divide_1

Divide by 1

enumerator kFTM_Prescale_Divide_2

Divide by 2

enumerator kFTM_Prescale_Divide_4

Divide by 4

enumerator kFTM_Prescale_Divide_8

Divide by 8

enumerator kFTM_Prescale_Divide_16

Divide by 16

enumerator kFTM_Prescale_Divide_32

Divide by 32

enumerator kFTM_Prescale_Divide_64

Divide by 64

enumerator kFTM_Prescale_Divide_128

Divide by 128

enum _ftm_bdm_mode

Options for the FlexTimer behaviour in BDM Mode.

Values:

enumerator kFTM_BdmMode_0

FTM counter stopped, CH(n)F bit can be set, FTM channels in functional mode, writes to MOD,CNTIN and C(n)V registers bypass the register buffers

enumerator kFTM_BdmMode_1

FTM counter stopped, CH(n)F bit is not set, FTM channels outputs are forced to their safe value , writes to MOD,CNTIN and C(n)V registers bypass the register buffers

enumerator kFTM_BdmMode_2

FTM counter stopped, CH(n)F bit is not set, FTM channels outputs are frozen when chip enters in BDM mode, writes to MOD,CNTIN and C(n)V registers bypass the register buffers

enumerator kFTM_BdmMode_3

FTM counter in functional mode, CH(n)F bit can be set, FTM channels in functional mode, writes to MOD,CNTIN and C(n)V registers is in fully functional mode

enum _ftm_fault_mode

Options for the FTM fault control mode.

Values:

enumerator kFTM_Fault_Disable

Fault control is disabled for all channels

enumerator kFTM_Fault_EvenChnls

Enabled for even channels only(0,2,4,6) with manual fault clearing

enumerator kFTM_Fault_AllChnlsMan

Enabled for all channels with manual fault clearing

enumerator kFTM_Fault_AllChnlsAuto

Enabled for all channels with automatic fault clearing

enum _ftm_external_trigger

FTM external trigger options.

Note: Actual available external trigger sources are SoC-specific

Values:

enumerator kFTM_Chnl0Trigger

Generate trigger when counter equals chnl 0 CnV reg

enumerator kFTM_Chnl1Trigger

Generate trigger when counter equals chnl 1 CnV reg

enumerator kFTM_Chnl2Trigger

Generate trigger when counter equals chnl 2 CnV reg

enumerator kFTM_Chnl3Trigger

Generate trigger when counter equals chnl 3 CnV reg

enumerator kFTM_Chnl4Trigger

Generate trigger when counter equals chnl 4 CnV reg

enumerator kFTM_Chnl5Trigger

Generate trigger when counter equals chnl 5 CnV reg

enumerator kFTM_Chnl6Trigger

Available on certain SoC's, generate trigger when counter equals chnl 6 CnV reg

enumerator kFTM_Chnl7Trigger

Available on certain SoC's, generate trigger when counter equals chnl 7 CnV reg

enumerator kFTM_InitTrigger

Generate Trigger when counter is updated with CNTIN

enumerator kFTM_ReloadInitTrigger

Available on certain SoC's, trigger on reload point

enum _ftm_pwm_sync_method

FlexTimer PWM sync options to update registers with buffer.

Values:

enumerator kFTM_SoftwareTrigger

Software triggers PWM sync

enumerator kFTM_HardwareTrigger_0

Hardware trigger 0 causes PWM sync

enumerator kFTM_HardwareTrigger_1

Hardware trigger 1 causes PWM sync

enumerator kFTM_HardwareTrigger_2

Hardware trigger 2 causes PWM sync

enum _ftm_reload_point

FTM options available as loading point for register reload.

Note: Actual available reload points are SoC-specific

Values:

enumerator kFTM_Chnl0Match

Channel 0 match included as a reload point

enumerator kFTM_Chnl1Match

Channel 1 match included as a reload point

enumerator kFTM_Chnl2Match

Channel 2 match included as a reload point

enumerator kFTM_Chnl3Match

Channel 3 match included as a reload point

enumerator kFTM_Chnl4Match

Channel 4 match included as a reload point

enumerator kFTM_Chnl5Match

Channel 5 match included as a reload point

enumerator kFTM_Chnl6Match

Channel 6 match included as a reload point

enumerator kFTM_Chnl7Match

Channel 7 match included as a reload point

enumerator kFTM_CntMax

Use in up-down count mode only, reload when counter reaches the maximum value

enumerator kFTM_CntMin

Use in up-down count mode only, reload when counter reaches the minimum value

enumerator kFTM_HalfCycMatch

Available on certain SoC's, half cycle match reload point

enum _ftm_interrupt_enable

List of FTM interrupts.

Note: Actual available interrupts are SoC-specific

Values:

enumerator kFTM_Chnl0InterruptEnable

Channel 0 interrupt

enumerator kFTM_Chnl1InterruptEnable

Channel 1 interrupt

enumerator kFTM_Chnl2InterruptEnable

Channel 2 interrupt

enumerator kFTM_Chnl3InterruptEnable

Channel 3 interrupt

enumerator kFTM_Chnl4InterruptEnable

Channel 4 interrupt

enumerator kFTM_Chnl5InterruptEnable

Channel 5 interrupt

enumerator kFTM_Chnl6InterruptEnable

Channel 6 interrupt

enumerator kFTM_Chnl7InterruptEnable

Channel 7 interrupt

enumerator kFTM_FaultInterruptEnable

Fault interrupt

enumerator kFTM_TimeOverflowInterruptEnable

Time overflow interrupt

enumerator kFTM_ReloadInterruptEnable

Reload interrupt; Available only on certain SoC's

enum _ftm_status_flags

List of FTM flags.

Note: Actual available flags are SoC-specific

Values:

enumerator kFTM_Chnl0Flag

Channel 0 Flag

enumerator kFTM_Chnl1Flag

Channel 1 Flag

enumerator kFTM_Chnl2Flag

Channel 2 Flag

enumerator kFTM_Chnl3Flag

Channel 3 Flag

enumerator kFTM_Chnl4Flag

Channel 4 Flag

enumerator kFTM_Chnl5Flag

Channel 5 Flag

enumerator kFTM_Chnl6Flag

Channel 6 Flag

enumerator kFTM_Chnl7Flag

Channel 7 Flag

enumerator kFTM_FaultFlag

Fault Flag

enumerator kFTM_TimeOverflowFlag

Time overflow Flag

enumerator kFTM_ChnlTriggerFlag

Channel trigger Flag

enumerator kFTM_ReloadFlag

Reload Flag; Available only on certain SoC's

enum _ftm_channel_index

List of FTM channel index used in logic OR.

Values:

enumerator kFTM_Chnl0_Mask

Channel 0 Mask

enumerator kFTM_Chnl1_Mask
Channel 1 Mask

enumerator kFTM_Chnl2_Mask
Channel 2 Mask

enumerator kFTM_Chnl3_Mask
Channel 3 Mask

enumerator kFTM_Chnl4_Mask
Channel 4 Mask

enumerator kFTM_Chnl5_Mask
Channel 5 Mask

enumerator kFTM_Chnl6_Mask
Channel 6 Mask

enumerator kFTM_Chnl7_Mask
Channel 7 Mask

typedef enum *ftm_chnl* ftm_chnl_t
List of FTM channels.

Note: Actual number of available channels is SoC dependent

typedef enum *ftm_fault_input* ftm_fault_input_t
List of FTM faults.

typedef enum *ftm_pwm_mode* ftm_pwm_mode_t
FTM PWM operation modes.

typedef enum *ftm_pwm_level_select* ftm_pwm_level_select_t
FTM PWM output pulse mode: high-true, low-true or no output.

Note: kFTM_NoPwmSignal: ELSnB:ELSnA = 0:0 kFTM_LowTrue: ELSnB:ELSnA = 0:1 EPWM: Channel n output is forced low at counter overflow, forced high at channel n match. CPWM: Channel n output is forced low at channel n match when counting down, and forced high at channel n match when counting up. Combined PWM: Channel n output is forced high at beginning of period and at channel n+1 match. It is forced low at the channel n match. kFTM_HighTrue: ELSnB:ELSnA = 1:0 EPWM: Channel n output is forced high at counter overflow, forced low at channel n match. CPWM: Channel n output is forced high at channel n match when counting down, and forced low at channel n match when counting up. Combined PWM: Channel n output is forced low at beginning of period and at channel n+1 match. It is forced high at the channel n match.

typedef struct *ftm_chnl_pwm_signal_param* ftm_chnl_pwm_signal_param_t
Options to configure a FTM channel's PWM signal.

typedef struct *ftm_chnl_pwm_config_param* ftm_chnl_pwm_config_param_t
Options to configure a FTM channel using precise setting.

typedef struct *ftm_chnl_param* ftm_chnl_param_t
General options to configure a FTM channel using precise setting.

typedef enum *ftm_output_compare_mode* ftm_output_compare_mode_t
FlexTimer output compare mode.

`typedef enum _ftm_input_capture_edge ftm_input_capture_edge_t`
FlexTimer input capture edge.

`typedef enum _ftm_dual_edge_capture_mode ftm_dual_edge_capture_mode_t`
FlexTimer dual edge capture modes.

`typedef struct _ftm_dual_edge_capture_param ftm_dual_edge_capture_param_t`
FlexTimer dual edge capture parameters.

`typedef enum _ftm_quad_decode_mode ftm_quad_decode_mode_t`
FlexTimer quadrature decode modes.

`typedef enum _ftm_phase_polarity ftm_phase_polarity_t`
FlexTimer quadrature phase polarities.

`typedef struct _ftm_phase_param ftm_phase_params_t`
FlexTimer quadrature decode phase parameters.

`typedef struct _ftm_fault_param ftm_fault_param_t`
Structure is used to hold the parameters to configure a FTM fault.

`typedef enum _ftm_deadtime_prescale ftm_deadtime_prescale_t`
FlexTimer pre-scaler factor for the dead time insertion.

`typedef enum _ftm_clock_source ftm_clock_source_t`
FlexTimer clock source selection.

`typedef enum _ftm_clock_prescale ftm_clock_prescale_t`
FlexTimer pre-scaler factor selection for the clock source.

`typedef enum _ftm_bdm_mode ftm_bdm_mode_t`
Options for the FlexTimer behaviour in BDM Mode.

`typedef enum _ftm_fault_mode ftm_fault_mode_t`
Options for the FTM fault control mode.

`typedef enum _ftm_external_trigger ftm_external_trigger_t`
FTM external trigger options.

Note: Actual available external trigger sources are SoC-specific

`typedef enum _ftm_pwm_sync_method ftm_pwm_sync_method_t`
FlexTimer PWM sync options to update registers with buffer.

`typedef enum _ftm_reload_point ftm_reload_point_t`
FTM options available as loading point for register reload.

Note: Actual available reload points are SoC-specific

`typedef enum _ftm_interrupt_enable ftm_interrupt_enable_t`
List of FTM interrupts.

Note: Actual available interrupts are SoC-specific

```
typedef enum _ftm_status_flags ftm_status_flags_t
```

List of FTM flags.

Note: Actual available flags are SoC-specific

```
typedef enum _ftm_channel_index ftm_channel_index_t
```

List of FTM channel index used in logic OR.

```
typedef struct _ftm_config ftm_config_t
```

FTM configuration structure.

This structure holds the configuration settings for the FTM peripheral. To initialize this structure to reasonable defaults, call the `FTM_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
void FTM_SetupFaultInput(FTM_Type *base, ftm_fault_input_t faultNumber, const  
                        ftm_fault_param_t *faultParams)
```

Sets up the working of the FTM fault inputs protection.

FTM can have up to 4 fault inputs. This function sets up fault parameters, fault level, and input filter.

Parameters

- `base` – FTM peripheral base address
- `faultNumber` – FTM fault to configure.
- `faultParams` – Parameters passed in to set up the fault

```
static inline void FTM_SetGlobalTimeBaseOutputEnable(FTM_Type *base, bool enable)
```

Enables or disables the FTM global time base signal generation to other FTMs.

Parameters

- `base` – FTM peripheral base address
- `enable` – `true` to enable, `false` to disable

```
static inline void FTM_SetOutputMask(FTM_Type *base, ftm_chnl_t chnlNumber, bool mask)
```

Sets the FTM peripheral timer channel output mask.

Parameters

- `base` – FTM peripheral base address
- `chnlNumber` – Channel to be configured
- `mask` – `true`: masked, channel is forced to its inactive state; `false`: un-masked

```
static inline void FTM_SetPwmOutputEnable(FTM_Type *base, ftm_chnl_t chnlNumber, bool  
                                         value)
```

Allows users to enable an output on an FTM channel.

To enable the PWM channel output call this function with `val=true`. For input mode, call this function with `val=false`.

Parameters

- `base` – FTM peripheral base address
- `chnlNumber` – Channel to be configured
- `value` – `true`: enable output; `false`: output is disabled, used in input mode

```
static inline void FTM_SetSoftwareTrigger(FTM_Type *base, bool enable)
```

Enables or disables the FTM software trigger for PWM synchronization.

Parameters

- base – FTM peripheral base address
- enable – true: software trigger is selected, false: software trigger is not selected

```
static inline void FTM_SetWriteProtection(FTM_Type *base, bool enable)
```

Enables or disables the FTM write protection.

Parameters

- base – FTM peripheral base address
- enable – true: Write-protection is enabled, false: Write-protection is disabled

```
static inline void FTM_EnableDmaTransfer(FTM_Type *base, ftm_chnl_t chnlNumber, bool enable)
```

Enable DMA transfer or not.

Note: CHnIE bit needs to be set when calling this API. The channel DMA transfer request is generated and the channel interrupt is not generated if (CHnF = 1) when DMA and CHnIE bits are set.

Parameters

- base – FTM peripheral base address.
- chnlNumber – Channel to be configured
- enable – true to enable, false to disable

```
static inline void FTM_SetLdok(FTM_Type *base, bool value)
```

Enable the LDOK bit.

This function enables loading updated values.

Parameters

- base – FTM peripheral base address
- value – true: loading updated values is enabled; false: loading updated values is disabled.

```
static inline void FTM_SetHalfCycReloadMatchValue(FTM_Type *base, uint32_t ticks)
```

Sets the half cycle relade period in units of ticks.

This function can be called to set the half-cycle reload value when half-cycle matching is enabled as a reload point. Note: Need enable kFTM_HalfCycMatch as reload point, and when this API call after FTM_StartTimer(), the new HCR value will not be active until next reload point (need call FTM_SetLdok to set LDOK) or register synchronization.

Parameters

- base – FTM peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.

```
static inline void FTM_SetLoadFreq(FTM_Type *base, uint32_t loadfreq)
```

Set load frequency value.

Parameters

- base – FTM peripheral base address.

- loadfreq – PWM reload frequency, range: 0 ~ 31.

struct *_ftm_chnl_pwm_signal_param*

#include <fsl_ftm.h> Options to configure a FTM channel's PWM signal.

Public Members

ftm_chnl_t chnlNumber

The channel/channel pair number. In combined mode, this represents the channel pair number.

ftm_pwm_level_select_t level

PWM output active level select.

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0 = inactive signal(0% duty cycle)... 100 = always active signal (100% duty cycle).

uint8_t firstEdgeDelayPercent

Used only in kFTM_AsymmetricalCombinedPwm mode to generate an asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure leave as 0; Should be specified as a percentage of the PWM period

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

bool enableDeadtime

Used only in combined PWM mode with enable complementary. true: The deadtime insertion in this pair of channels is enabled; false: The deadtime insertion in this pair of channels is disabled.

struct *_ftm_chnl_pwm_config_param*

#include <fsl_ftm.h> Options to configure a FTM channel using precise setting.

Public Members

ftm_chnl_t chnlNumber

The channel/channel pair number. In combined mode, this represents the channel pair number.

ftm_pwm_level_select_t level

PWM output active level select.

uint16_t dutyValue

PWM pulse width, the uint of this value is timer ticks.

uint16_t firstEdgeValue

Used only in kFTM_AsymmetricalCombinedPwm mode to generate an asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure leave as 0, uint of this value is timer ticks.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

bool enableDeadtime

Used only in combined PWM mode with enable complementary. true: The deadtime insertion in this pair of channels is enabled; false: The deadtime insertion in this pair of channels is disabled.

struct `_ftm_chnl_param`

#include <fsl_ftm.h> General options to configure a FTM channel using precise setting.

Public Members

ftm_pwm_mode_t mode

PWM output mode.

ftm_pwm_level_select_t level

PWM output active level select.

uint16_t initialValue

FTM counter initial value.

uint16_t moduloValue

FTM counter modulo value.

uint16_t chnlValue

FTM channel n match value.

uint16_t combinedChnlValue

FTM combined channel n+1 match value, used only in (modified) combined PWM mode.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

bool enableDeadtime

Used only in combined PWM mode with enable complementary. true: The deadtime insertion in this pair of channels is enabled; false: The deadtime insertion in this pair of channels is disabled.

struct `_ftm_dual_edge_capture_param`

#include <fsl_ftm.h> FlexTimer dual edge capture parameters.

Public Members

ftm_dual_edge_capture_mode_t mode

Dual Edge Capture mode

ftm_input_capture_edge_t currChanEdgeMode

Input capture edge select for channel n

ftm_input_capture_edge_t nextChanEdgeMode

Input capture edge select for channel n+1

struct `_ftm_phase_param`

#include <fsl_ftm.h> FlexTimer quadrature decode phase parameters.

Public Members

bool enablePhaseFilter

True: enable phase filter; false: disable filter

uint32_t phaseFilterVal

Filter value, used only if phase filter is enabled

ftm_phase_polarity_t phasePolarity
Phase polarity

struct *_ftm_fault_param*

#include <fsl_ftm.h> Structure is used to hold the parameters to configure a FTM fault.

Public Members

bool enableFaultInput

True: Fault input is enabled; false: Fault input is disabled

bool faultLevel

True: Fault polarity is active low; in other words, '0' indicates a fault; False: Fault polarity is active high

bool useFaultFilter

True: Use the filtered fault signal; False: Use the direct path from fault input

struct *_ftm_config*

#include <fsl_ftm.h> FTM configuration structure.

This structure holds the configuration settings for the FTM peripheral. To initialize this structure to reasonable defaults, call the `FTM_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

ftm_clock_prescale_t prescale

FTM clock prescale value

ftm_bdm_mode_t bdmMode

FTM behavior in BDM mode

uint32_t pwmSyncMode

Synchronization methods to use to update buffered registers; Multiple update modes can be used by providing an OR'ed list of options available in enumeration *ftm_pwm_sync_method_t*.

uint32_t reloadPoints

FTM reload points; When using this, the PWM synchronization is not required. Multiple reload points can be used by providing an OR'ed list of options available in enumeration *ftm_reload_point_t*.

ftm_fault_mode_t faultMode

FTM fault control mode

uint8_t faultFilterValue

Fault input filter value

ftm_deadtime_prescale_t deadTimePrescale

The dead time prescalar value

uint32_t deadTimeValue

The dead time value *deadTimeValue*'s available range is 0-1023 when register has DT-VALEX, otherwise its available range is 0-63.

uint32_t extTriggers

External triggers to enable. Multiple trigger sources can be enabled by providing an OR'ed list of options available in enumeration `ftm_external_trigger_t`.

uint8_t chnlInitState

Defines the initialization value of the channels in OUTINT register

uint8_t chnlPolarity

Defines the output polarity of the channels in POL register

bool useGlobalTimeBase

True: Use of an external global time base is enabled; False: disabled

bool swTriggerResetCount

FTM counter synchronization activated by software trigger, active when (`syncMethod & FTM_SYNC_SWSYNC_MASK`) != 0U

bool hwTriggerResetCount

FTM counter synchronization activated by hardware trigger, active when (`syncMethod & (FTM_SYNC_TRIG0_MASK | FTM_SYNC_TRIG1_MASK | FTM_SYNC_TRIG2_MASK)`) != 0U

2.23 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW

User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW

User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW

User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureR
User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureN
User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO_IgnoreAttributeCheck
Ignores the attribute check

typedef enum *_gpio_pin_direction* gpio_pin_direction_t
GPIO direction definition.

typedef enum *_gpio_checker_attribute* gpio_checker_attribute_t
GPIO checker attribute.

typedef struct *_gpio_pin_config* gpio_pin_config_t
The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

GPIO__FIT__REG(value)

struct *_gpio_pin_config*
#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

gpio_pin_direction_t pinDirection
GPIO direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

2.24 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)
Initializes the GPIO peripheral.
This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDeinit(GPIO_Type *base)
Denitalizes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

`void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const gpio_pin_config_t *config)`

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the `GPIO_PinInit()` function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

`static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)`

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

`static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)`

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

`static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)`

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

`static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)`

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)
```

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
uint32_t GPIO_PortGetInterruptFlags(GPIO_Type *base)
```

Reads the GPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

Return values

The – current GPIO port interrupt status flag, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

```
void GPIO_PortClearInterruptFlags(GPIO_Type *base, uint32_t mask)
```

Clears multiple GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
void GPIO_CheckAttributeBytes(GPIO_Type *base, gpio_checker_attribute_t attribute)
```

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.25 I2C: Inter-Integrated Circuit Driver

2.26 I2C Driver

```
void I2C_MasterInit(I2C_Type *base, const i2c_master_config_t *masterConfig, uint32_t  
srcClock_Hz)
```

Initializes the I2C peripheral. Call this API to ungate the I2C clock and configure the I2C with master configuration.

Note: This API should be called at the beginning of the application. Otherwise, any operation to the I2C module can cause a hard fault because the clock is not enabled. The configuration structure can be custom filled or it can be set with default values by using the I2C_MasterGetDefaultConfig(). After calling this API, the master is ready to transfer. This is an example.

```
i2c_master_config_t config = {  
    .enableMaster = true,  
    .enableStopHold = false,  
    .highDrive = false,  
    .baudRate_Bps = 100000,  
    .glitchFilterWidth = 0  
};  
I2C_MasterInit(I2C0, &config, 12000000U);
```

Parameters

- base – I2C base pointer
- masterConfig – A pointer to the master configuration structure
- srcClock_Hz – I2C peripheral clock frequency in Hz

void I2C_SlaveInit(I2C_Type *base, const i2c_slave_config_t *slaveConfig, uint32_t srcClock_Hz)
Initializes the I2C peripheral. Call this API to ungate the I2C clock and initialize the I2C with the slave configuration.

Note: This API should be called at the beginning of the application. Otherwise, any operation to the I2C module can cause a hard fault because the clock is not enabled. The configuration structure can partly be set with default values by I2C_SlaveGetDefaultConfig() or it can be custom filled by the user. This is an example.

```
i2c_slave_config_t config = {  
    .enableSlave = true,  
    .enableGeneralCall = false,  
    .addressingMode = kI2C_Address7bit,  
    .slaveAddress = 0x1DU,  
    .enableWakeUp = false,  
    .enablehighDrive = false,  
    .enableBaudRateCtl = false,  
    .sclStopHoldTime_ns = 4000  
};  
I2C_SlaveInit(I2C0, &config, 12000000U);
```

Parameters

- base – I2C base pointer
- slaveConfig – A pointer to the slave configuration structure
- srcClock_Hz – I2C peripheral clock frequency in Hz

void I2C_MasterDeinit(I2C_Type *base)
De-initializes the I2C master peripheral. Call this API to gate the I2C clock. The I2C master module can't work unless the I2C_MasterInit is called.

Parameters

- base – I2C base pointer

`void I2C_SlaveDeinit(I2C_Type *base)`

De-initializes the I2C slave peripheral. Calling this API gates the I2C clock. The I2C slave module can't work unless the I2C_SlaveInit is called to enable the clock.

Parameters

- base – I2C base pointer

`uint32_t I2C_GetInstance(I2C_Type *base)`

Get instance number for I2C module.

Parameters

- base – I2C peripheral base address.

`void I2C_MasterGetDefaultConfig(i2c_master_config_t *masterConfig)`

Sets the I2C master configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in the I2C_MasterConfigure(). Use the initialized structure unchanged in the I2C_MasterConfigure() or modify the structure before calling the I2C_MasterConfigure(). This is an example.

```
i2c_master_config_t config;  
I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – A pointer to the master configuration structure.

`void I2C_SlaveGetDefaultConfig(i2c_slave_config_t *slaveConfig)`

Sets the I2C slave configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in the I2C_SlaveConfigure(). Modify fields of the structure before calling the I2C_SlaveConfigure(). This is an example.

```
i2c_slave_config_t config;  
I2C_SlaveGetDefaultConfig(&config);
```

Parameters

- slaveConfig – A pointer to the slave configuration structure.

`static inline void I2C_Enable(I2C_Type *base, bool enable)`

Enables or disables the I2C peripheral operation.

Parameters

- base – I2C base pointer
- enable – Pass true to enable and false to disable the module.

`uint32_t I2C_MasterGetStatusFlags(I2C_Type *base)`

Gets the I2C status flags.

Parameters

- base – I2C base pointer

Returns

status flag, use status flag to AND `_i2c_flags` to get the related status.

```
static inline uint32_t I2C_SlaveGetStatusFlags(I2C_Type *base)
```

Gets the I2C status flags.

Parameters

- base – I2C base pointer

Returns

status flag, use status flag to AND `_i2c_flags` to get the related status.

```
static inline void I2C_MasterClearStatusFlags(I2C_Type *base, uint32_t statusMask)
```

Clears the I2C status flag state.

The following status register flags can be cleared `kI2C_ArbitrationLostFlag` and `kI2C_IntPendingFlag`.

Parameters

- base – I2C base pointer
- statusMask – The status flag mask, defined in type `i2c_status_flag_t`. The parameter can be any combination of the following values:
 - `kI2C_StartDetectFlag` (if available)
 - `kI2C_StopDetectFlag` (if available)
 - `kI2C_ArbitrationLostFlag`
 - `kI2C_IntPendingFlagFlag`

```
static inline void I2C_SlaveClearStatusFlags(I2C_Type *base, uint32_t statusMask)
```

Clears the I2C status flag state.

The following status register flags can be cleared `kI2C_ArbitrationLostFlag` and `kI2C_IntPendingFlag`

Parameters

- base – I2C base pointer
- statusMask – The status flag mask, defined in type `i2c_status_flag_t`. The parameter can be any combination of the following values:
 - `kI2C_StartDetectFlag` (if available)
 - `kI2C_StopDetectFlag` (if available)
 - `kI2C_ArbitrationLostFlag`
 - `kI2C_IntPendingFlagFlag`

```
void I2C_EnableInterrupts(I2C_Type *base, uint32_t mask)
```

Enables I2C interrupt requests.

Parameters

- base – I2C base pointer
- mask – interrupt source The parameter can be combination of the following source if defined:
 - `kI2C_GlobalInterruptEnable`
 - `kI2C_StopDetectInterruptEnable/kI2C_StartDetectInterruptEnable`
 - `kI2C_SdaTimeoutInterruptEnable`

`void I2C_DisableInterrupts(I2C_Type *base, uint32_t mask)`

Disables I2C interrupt requests.

Parameters

- `base` – I2C base pointer
- `mask` – interrupt source The parameter can be combination of the following source if defined:
 - `kI2C_GlobalInterruptEnable`
 - `kI2C_StopDetectInterruptEnable/kI2C_StartDetectInterruptEnable`
 - `kI2C_SdaTimeoutInterruptEnable`

`static inline void I2C_EnableDMA(I2C_Type *base, bool enable)`

Enables/disables the I2C DMA interrupt.

Parameters

- `base` – I2C base pointer
- `enable` – true to enable, false to disable

`static inline uint32_t I2C_GetDataRegAddr(I2C_Type *base)`

Gets the I2C tx/rx data register address. This API is used to provide a transfer address for I2C DMA transfer configuration.

Parameters

- `base` – I2C base pointer

Returns

data register address

`void I2C_MasterSetBaudRate(I2C_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)`

Sets the I2C master transfer baud rate.

Parameters

- `base` – I2C base pointer
- `baudRate_Bps` – the baud rate value in bps
- `srcClock_Hz` – Source clock

`status_t I2C_MasterStart(I2C_Type *base, uint8_t address, i2c_direction_t direction)`

Sends a START on the I2C bus.

This function is used to initiate a new master mode transfer by sending the START signal. The slave address is sent following the I2C START signal.

Parameters

- `base` – I2C peripheral base pointer
- `address` – 7-bit slave device address.
- `direction` – Master transfer directions(transmit/receive).

Return values

- `kStatus_Success` – Successfully send the start signal.
- `kStatus_I2C_Busy` – Current bus is busy.

`status_t I2C_MasterStop(I2C_Type *base)`

Sends a STOP signal on the I2C bus.

Return values

- `kStatus_Success` – Successfully send the stop signal.
- `kStatus_I2C_Timeout` – Send stop signal failed, timeout.

status_t I2C_MasterRepeatedStart(I2C_Type *base, uint8_t address, i2c_direction_t direction)

Sends a REPEATED START on the I2C bus.

Parameters

- `base` – I2C peripheral base pointer
- `address` – 7-bit slave device address.
- `direction` – Master transfer directions(transmit/receive).

Return values

- `kStatus_Success` – Successfully send the start signal.
- `kStatus_I2C_Busy` – Current bus is busy but not occupied by current I2C master.

status_t I2C_MasterWriteBlocking(I2C_Type *base, const uint8_t *txBuff, size_t txSize, uint32_t flags)

Performs a polling send transaction on the I2C bus.

Parameters

- `base` – The I2C peripheral base pointer.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.
- `flags` – Transfer control flag to decide whether need to send a stop, use `kI2C_TransferDefaultFlag` to issue a stop and `kI2C_TransferNoStop` to not send a stop.

Return values

- `kStatus_Success` – Successfully complete the data transmission.
- `kStatus_I2C_ArbitrationLost` – Transfer error, arbitration lost.
- `kStatus_I2C_Nak` – Transfer error, receive NAK during transfer.

status_t I2C_MasterReadBlocking(I2C_Type *base, uint8_t *rxBuff, size_t rxSize, uint32_t flags)

Performs a polling receive transaction on the I2C bus.

Note: The `I2C_MasterReadBlocking` function stops the bus before reading the final byte. Without stopping the bus prior for the final read, the bus issues another read, resulting in garbage data being read into the data register.

Parameters

- `base` – I2C peripheral base pointer.
- `rxBuff` – The pointer to the data to store the received data.
- `rxSize` – The length in bytes of the data to be received.
- `flags` – Transfer control flag to decide whether need to send a stop, use `kI2C_TransferDefaultFlag` to issue a stop and `kI2C_TransferNoStop` to not send a stop.

Return values

- `kStatus_Success` – Successfully complete the data transmission.

- `kStatus_I2C_Timeout` – Send stop signal failed, timeout.

status_t I2C_SlaveWriteBlocking(I2C_Type *base, const uint8_t *txBuff, size_t txSize)

Performs a polling send transaction on the I2C bus.

Parameters

- `base` – The I2C peripheral base pointer.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Successfully complete the data transmission.
- `kStatus_I2C_ArbitrationLost` – Transfer error, arbitration lost.
- `kStatus_I2C_Nak` – Transfer error, receive NAK during transfer.

status_t I2C_SlaveReadBlocking(I2C_Type *base, uint8_t *rxBuff, size_t rxSize)

Performs a polling receive transaction on the I2C bus.

Parameters

- `base` – I2C peripheral base pointer.
- `rxBuff` – The pointer to the data to store the received data.
- `rxSize` – The length in bytes of the data to be received.

Return values

- `kStatus_Success` – Successfully complete data receive.
- `kStatus_I2C_Timeout` – Wait status flag timeout.

status_t I2C_MasterTransferBlocking(I2C_Type *base, *i2c_master_transfer_t* *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to arbitration lost or receiving a NAK.

Parameters

- `base` – I2C peripheral base address.
- `xfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Successfully complete the data transmission.
- `kStatus_I2C_Busy` – Previous transmission still not finished.
- `kStatus_I2C_Timeout` – Transfer error, wait signal timeout.
- `kStatus_I2C_ArbitrationLost` – Transfer error, arbitration lost.
- `kStatus_I2C_Nak` – Transfer error, receive NAK during transfer.

void I2C_MasterTransferCreateHandle(I2C_Type *base, *i2c_master_handle_t* *handle,
i2c_master_transfer_callback_t callback, *void* *userData)

Initializes the I2C handle which is used in transactional functions.

Parameters

- `base` – I2C base pointer.

- `handle` – pointer to `i2c_master_handle_t` structure to store the transfer state.
- `callback` – pointer to user callback function.
- `userData` – user parameter passed to the callback function.

`status_t I2C_MasterTransferNonBlocking(I2C_Type *base, i2c_master_handle_t *handle, i2c_master_transfer_t *xfer)`

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: Calling the API returns immediately after transfer initiates. The user needs to call `I2C_MasterGetTransferCount` to poll the transfer status to check whether the transfer is finished. If the return status is not `kStatus_I2C_Busy`, the transfer is finished.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_master_handle_t` structure which stores the transfer state.
- `xfer` – pointer to `i2c_master_transfer_t` structure.

Return values

- `kStatus_Success` – Successfully start the data transmission.
- `kStatus_I2C_Busy` – Previous transmission still not finished.
- `kStatus_I2C_Timeout` – Transfer error, wait signal timeout.

`status_t I2C_MasterTransferGetCount(I2C_Type *base, i2c_master_handle_t *handle, size_t *count)`

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_master_handle_t` structure which stores the transfer state.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – count is Invalid.
- `kStatus_Success` – Successfully return the count.

`status_t I2C_MasterTransferAbort(I2C_Type *base, i2c_master_handle_t *handle)`

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_master_handle_t` structure which stores the transfer state

Return values

- `kStatus_I2C_Timeout` – Timeout during polling flag.
- `kStatus_Success` – Successfully abort the transfer.

`void I2C_MasterTransferHandleIRQ(I2C_Type *base, void *i2cHandle)`

Master interrupt handler.

Parameters

- `base` – I2C base pointer.
- `i2cHandle` – pointer to `i2c_master_handle_t` structure.

`void I2C_SlaveTransferCreateHandle(I2C_Type *base, i2c_slave_handle_t *handle, i2c_slave_transfer_callback_t callback, void *userData)`

Initializes the I2C handle which is used in transactional functions.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_slave_handle_t` structure to store the transfer state.
- `callback` – pointer to user callback function.
- `userData` – user parameter passed to the callback function.

`status_t I2C_SlaveTransferNonBlocking(I2C_Type *base, i2c_slave_handle_t *handle, uint32_t eventMask)`

Starts accepting slave transfers.

Call this API after calling the `I2C_SlaveInit()` and `I2C_SlaveTransferCreateHandle()` to start processing transactions driven by an I2C master. The slave monitors the I2C bus and passes events to the callback that was passed into the call to `I2C_SlaveTransferCreateHandle()`. The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of `i2c_slave_transfer_event_t` enumerators for the events you wish to receive. The `kI2C_SlaveTransmitEvent` and `kLPI2C_SlaveReceiveEvent` events are always enabled and do not need to be included in the mask. Alternatively, pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the `kI2C_SlaveAllEvents` constant is provided as a convenient way to enable all events.

Parameters

- `base` – The I2C peripheral base address.
- `handle` – Pointer to `i2c_slave_handle_t` structure which stores the transfer state.
- `eventMask` – Bit mask formed by OR'ing together `i2c_slave_transfer_event_t` enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and `kI2C_SlaveAllEvents` to enable all events.

Return values

- `kStatus_Success` – Slave transfers were successfully started.
- `kStatus_I2C_Busy` – Slave transfers have already been started on this handle.

`void I2C_SlaveTransferAbort(I2C_Type *base, i2c_slave_handle_t *handle)`

Aborts the slave transfer.

Note: This API can be called at any time to stop slave for handling the bus events.

Parameters

- base – I2C base pointer.
- handle – pointer to `i2c_slave_handle_t` structure which stores the transfer state.

`status_t I2C_SlaveTransferGetCount(I2C_Type *base, i2c_slave_handle_t *handle, size_t *count)`

Gets the slave transfer remaining bytes during a interrupt non-blocking transfer.

Parameters

- base – I2C base pointer.
- handle – pointer to `i2c_slave_handle_t` structure.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – count is Invalid.
- `kStatus_Success` – Successfully return the count.

`void I2C_SlaveTransferHandleIRQ(I2C_Type *base, void *i2cHandle)`

Slave interrupt handler.

Parameters

- base – I2C base pointer.
- `i2cHandle` – pointer to `i2c_slave_handle_t` structure which stores the transfer state

`FSL_I2C_DRIVER_VERSION`

I2C driver version.

I2C status return codes.

Values:

enumerator `kStatus_I2C_Busy`

I2C is busy with current transfer.

enumerator `kStatus_I2C_Idle`

Bus is Idle.

enumerator `kStatus_I2C_Nak`

NAK received during transfer.

enumerator `kStatus_I2C_ArbitrationLost`

Arbitration lost during transfer.

enumerator `kStatus_I2C_Timeout`

Timeout polling status flags.

enumerator `kStatus_I2C_Addr_Nak`

NAK received during the address probe.

enum `_i2c_flags`

I2C peripheral flags.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kI2C_ReceiveNakFlag

I2C receive NAK flag.

enumerator kI2C_IntPendingFlag

I2C interrupt pending flag. This flag can be cleared.

enumerator kI2C_TransferDirectionFlag

I2C transfer direction flag.

enumerator kI2C_RangeAddressMatchFlag

I2C range address match flag.

enumerator kI2C_ArbitrationLostFlag

I2C arbitration lost flag. This flag can be cleared.

enumerator kI2C_BusBusyFlag

I2C bus busy flag.

enumerator kI2C_AddressMatchFlag

I2C address match flag.

enumerator kI2C_TransferCompleteFlag

I2C transfer complete flag.

enumerator kI2C_StopDetectFlag

I2C stop detect flag. This flag can be cleared.

enumerator kI2C_StartDetectFlag

I2C start detect flag. This flag can be cleared.

enum _i2c_interrupt_enable

I2C feature interrupt source.

Values:

enumerator kI2C_GlobalInterruptEnable

I2C global interrupt.

enumerator kI2C_StopDetectInterruptEnable

I2C stop detect interrupt.

enumerator kI2C_StartStopDetectInterruptEnable

I2C start&stop detect interrupt.

enum _i2c_direction

The direction of master and slave transfers.

Values:

enumerator kI2C_Write

Master transmits to the slave.

enumerator kI2C_Read

Master receives from the slave.

enum _i2c_slave_address_mode

Addressing mode.

Values:

enumerator kI2C_Address7bit

7-bit addressing mode.

enumerator kI2C_RangeMatch

Range address match addressing mode.

enum __i2c_master_transfer_flags

I2C transfer control flag.

Values:

enumerator kI2C_TransferDefaultFlag

A transfer starts with a start signal, stops with a stop signal.

enumerator kI2C_TransferNoStartFlag

A transfer starts without a start signal, only support write only or write+read with no start flag, do not support read only with no start flag.

enumerator kI2C_TransferRepeatedStartFlag

A transfer starts with a repeated start signal.

enumerator kI2C_TransferNoStopFlag

A transfer ends without a stop signal.

enum __i2c_slave_transfer_event

Set of events sent to the callback for nonblocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to I2C_SlaveTransferNonBlocking() to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kI2C_SlaveTransmitEvent

A callback is requested to provide data to transmit (slave-transmitter role).

enumerator kI2C_SlaveReceiveEvent

A callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kI2C_SlaveTransmitAckEvent

A callback needs to either transmit an ACK or NACK.

enumerator kI2C_SlaveStartEvent

A start/repeated start was detected.

enumerator kI2C_SlaveCompletionEvent

A stop was detected or finished transfer, completing the transfer.

enumerator kI2C_SlaveGeneralCallEvent

Received the general call address after a start or repeated start.

enumerator kI2C_SlaveAllEvents

A bit mask of all available events.

Common sets of flags used by the driver.

Values:

enumerator `kClearFlags`

All flags which are cleared by the driver upon starting a transfer.

enumerator `kIrqFlags`

typedef enum `_i2c_direction` `i2c_direction_t`

The direction of master and slave transfers.

typedef enum `_i2c_slave_address_mode` `i2c_slave_address_mode_t`

Addressing mode.

typedef enum `_i2c_slave_transfer_event` `i2c_slave_transfer_event_t`

Set of events sent to the callback for nonblocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `I2C_SlaveTransferNonBlocking()` to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct `_i2c_master_config` `i2c_master_config_t`

I2C master user configuration.

typedef struct `_i2c_slave_config` `i2c_slave_config_t`

I2C slave user configuration.

typedef struct `_i2c_master_handle` `i2c_master_handle_t`

I2C master handle typedef.

typedef void (*`i2c_master_transfer_callback_t`)(`I2C_Type` *base, `i2c_master_handle_t` *handle, `status_t` status, void *userData)

I2C master transfer callback typedef.

typedef struct `_i2c_slave_handle` `i2c_slave_handle_t`

I2C slave handle typedef.

typedef struct `_i2c_master_transfer` `i2c_master_transfer_t`

I2C master transfer structure.

typedef struct `_i2c_slave_transfer` `i2c_slave_transfer_t`

I2C slave transfer structure.

typedef void (*`i2c_slave_transfer_callback_t`)(`I2C_Type` *base, `i2c_slave_transfer_t` *xfer, void *userData)

I2C slave transfer callback typedef.

`I2C_RETRY_TIMES`

Retry times for waiting flag.

`I2C_MASTER_FACK_CONTROL`

Master Fast ack control, control if master needs to manually write ack, this is used to low the speed of transfer for SoCs with feature `FSL_FEATURE_I2C_HAS_DOUBLE_BUFFERING`.

`I2C_HAS_STOP_DETECT`

struct `_i2c_master_config`

`#include <fsl_i2c.h>` I2C master user configuration.

Public Members

bool enableMaster

Enables the I2C peripheral at initialization time.

bool enableStopHold

Controls the stop hold enable.

bool enableDoubleBuffering

Controls double buffer enable; notice that enabling the double buffer disables the clock stretch.

uint32_t baudRate_Bps

Baud rate configuration of I2C peripheral.

uint8_t glitchFilterWidth

Controls the width of the glitch.

struct __i2c_slave_config

#include <fsl_i2c.h> I2C slave user configuration.

Public Members

bool enableSlave

Enables the I2C peripheral at initialization time.

bool enableGeneralCall

Enables the general call addressing mode.

bool enableWakeUp

Enables/disables waking up MCU from low-power mode.

bool enableDoubleBuffering

Controls a double buffer enable; notice that enabling the double buffer disables the clock stretch.

bool enableBaudRateCtl

Enables/disables independent slave baud rate on SCL in very fast I2C modes.

uint16_t slaveAddress

A slave address configuration.

uint16_t upperAddress

A maximum boundary slave address used in a range matching mode.

i2c_slave_address_mode_t addressingMode

An addressing mode configuration of *i2c_slave_address_mode_config_t*.

uint32_t sclStopHoldTime_ns

the delay from the rising edge of SCL (I2C clock) to the rising edge of SDA (I2C data) while SCL is high (stop condition), SDA hold time and SCL start hold time are also configured according to the SCL stop hold time.

struct __i2c_master_transfer

#include <fsl_i2c.h> I2C master transfer structure.

Public Members

uint32_t flags

A transfer flag which controls the transfer.

uint8_t slaveAddress

7-bit slave address.

i2c_direction_t direction

A transfer direction, read or write.

uint32_t subaddress

A sub address. Transferred MSB first.

uint8_t subaddressSize

A size of the command buffer.

uint8_t *volatile data

A transfer buffer.

volatile size_t dataSize

A transfer size.

struct __i2c_master_handle

#include <fsl_i2c.h> I2C master handle structure.

Public Members

i2c_master_transfer_t transfer

I2C master transfer copy.

size_t transferSize

Total bytes to be transferred.

uint8_t state

A transfer state maintained during transfer.

i2c_master_transfer_callback_t completionCallback

A callback function called when the transfer is finished.

void *userData

A callback parameter passed to the callback function.

struct __i2c_slave_transfer

#include <fsl_i2c.h> I2C slave transfer structure.

Public Members

i2c_slave_transfer_event_t event

A reason that the callback is invoked.

uint8_t *volatile data

A transfer buffer.

volatile size_t dataSize

A transfer size.

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kI2C_SlaveCompletionEvent.

size_t transferredCount

A number of bytes actually transferred since the start or since the last repeated start.

struct __i2c_slave_handle

#include <fsl_i2c.h> I2C slave handle structure.

Public Members

volatile bool isBusy

Indicates whether a transfer is busy.

i2c_slave_transfer_t transfer

I2C slave transfer copy.

uint32_t eventMask

A mask of enabled events.

i2c_slave_transfer_callback_t callback

A callback function called at the transfer event.

void *userData

A callback parameter passed to the callback.

2.27 I2C eDMA Driver

```
void I2C_MasterCreateEDMAHandle(I2C_Type *base, i2c_master_edma_handle_t *handle,
                                i2c_master_edma_transfer_callback_t callback, void
                                *userData, edma_handle_t *edmaHandle)
```

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – I2C peripheral base address.
- handle – A pointer to the *i2c_master_edma_handle_t* structure.
- callback – A pointer to the user callback function.
- userData – A user parameter passed to the callback function.
- edmaHandle – eDMA handle pointer.

```
status_t I2C_MasterTransferEDMA(I2C_Type *base, i2c_master_edma_handle_t *handle,
                                i2c_master_transfer_t *xfer)
```

Performs a master eDMA non-blocking transfer on the I2C bus.

Parameters

- base – I2C peripheral base address.
- handle – A pointer to the *i2c_master_edma_handle_t* structure.
- xfer – A pointer to the transfer structure of *i2c_master_transfer_t*.

Return values

- kStatus_Success – Successfully completed the data transmission.
- kStatus_I2C_Busy – A previous transmission is still not finished.
- kStatus_I2C_Timeout – Transfer error, waits for a signal timeout.
- kStatus_I2C_ArbitrationLost – Transfer error, arbitration lost.
- kStatus_I2C_Nak – Transfer error, receive NAK during transfer.

```
status_t I2C_MasterTransferGetCountEDMA(I2C_Type *base, i2c_master_edma_handle_t *handle,
                                          size_t *count)
```

Gets a master transfer status during the eDMA non-blocking transfer.

Parameters

- `base` – I2C peripheral base address.
- `handle` – A pointer to the `i2c_master_edma_handle_t` structure.
- `count` – A number of bytes transferred by the non-blocking transaction.

`void I2C_MasterTransferAbortEDMA(I2C_Type *base, i2c_master_edma_handle_t *handle)`
Aborts a master eDMA non-blocking transfer early.

Parameters

- `base` – I2C peripheral base address.
- `handle` – A pointer to the `i2c_master_edma_handle_t` structure.

`FSL_I2C_EDMA_DRIVER_VERSION`

I2C EDMA driver version.

`typedef struct i2c_master_edma_handle i2c_master_edma_handle_t`
Retry times for waiting flag.

I2C master eDMA handle typedef.

`typedef void (*i2c_master_edma_transfer_callback_t)(I2C_Type *base, i2c_master_edma_handle_t *handle, status_t status, void *userData)`

I2C master eDMA transfer callback typedef.

`struct i2c_master_edma_handle`

`#include <fsl_i2c_edma.h>` I2C master eDMA transfer structure.

Public Members

`i2c_master_transfer_t` transfer
I2C master transfer structure.

`size_t` transferSize
Total bytes to be transferred.

`uint8_t` nbytes
eDMA minor byte transfer count initially configured.

`uint8_t` state
I2C master transfer status.

`edma_handle_t *dmaHandle`
The eDMA handler used.

`i2c_master_edma_transfer_callback_t` completionCallback
A callback function called after the eDMA transfer is finished.

`void *userData`
A callback parameter passed to the callback function.

2.28 Common Driver

`FSL_COMMON_DRIVER_VERSION`
common driver version.

`DEBUG_CONSOLE_DEVICE_TYPE_NONE`
No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART

Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART

Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI

Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC

Debug console based on USB CDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM

Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART

Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART

Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_UART

Debug console based on LPC_UART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(*a*, *b*)

Computes the minimum of *a* and *b*.

MAX(*a*, *b*)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(addr, val)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

enum _status_groups

Status group numbers.

Values:

enumerator kStatusGroup_Generic

Group number for generic status codes.

enumerator kStatusGroup_FLASH

Group number for FLASH status codes.

enumerator kStatusGroup_LPSPI

Group number for LPSPI status codes.

enumerator kStatusGroup_FLEXIO_SPI

Group number for FLEXIO SPI status codes.

enumerator kStatusGroup_DSPI

Group number for DSPI status codes.

enumerator kStatusGroup_FLEXIO_UART

Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C
Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C
Group number for LPI2C status codes.

enumerator kStatusGroup_UART
Group number for UART status codes.

enumerator kStatusGroup_I2C
Group number for UART status codes.

enumerator kStatusGroup_LPSCI
Group number for LPSCI status codes.

enumerator kStatusGroup_LPUART
Group number for LPUART status codes.

enumerator kStatusGroup_SPI
Group number for SPI status code.

enumerator kStatusGroup_XRDC
Group number for XRDC status code.

enumerator kStatusGroup_SEMA42
Group number for SEMA42 status code.

enumerator kStatusGroup_SDHC
Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPI
Group number for ECSPI status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator `kStatusGroup_DebugConsole`
Group number for debug console status codes.

enumerator `kStatusGroup_SEMC`
Group number for SEMC status codes.

enumerator `kStatusGroup_ApplicationRangeStart`
Starting number for application groups.

enumerator `kStatusGroup_IAP`
Group number for IAP status codes

enumerator `kStatusGroup_SFA`
Group number for SFA status codes

enumerator `kStatusGroup_SPC`
Group number for SPC status codes.

enumerator `kStatusGroup_PUF`
Group number for PUF status codes.

enumerator `kStatusGroup_TOUCH_PANEL`
Group number for touch panel status codes

enumerator `kStatusGroup_VBAT`
Group number for VBAT status codes

enumerator `kStatusGroup_XSPI`
Group number for XSPI status codes

enumerator `kStatusGroup_PNGDEC`
Group number for PNGDEC status codes

enumerator `kStatusGroup_JPEGDEC`
Group number for JPEGDEC status codes

enumerator `kStatusGroup_AUDMIX`
Group number for AUDMIX status codes

enumerator `kStatusGroup_HAL_GPIO`
Group number for HAL GPIO status codes.

enumerator `kStatusGroup_HAL_UART`
Group number for HAL UART status codes.

enumerator `kStatusGroup_HAL_TIMER`
Group number for HAL TIMER status codes.

enumerator `kStatusGroup_HAL_SPI`
Group number for HAL SPI status codes.

enumerator `kStatusGroup_HAL_I2C`
Group number for HAL I2C status codes.

enumerator `kStatusGroup_HAL_FLASH`
Group number for HAL FLASH status codes.

enumerator `kStatusGroup_HAL_PWM`
Group number for HAL PWM status codes.

enumerator `kStatusGroup_HAL_RNG`
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

enumerator kStatusGroup_OSA
Group number for OSA status codes.

enumerator kStatusGroup_COMMON_TASK
Group number for Common task status codes.

enumerator kStatusGroup_MSG
Group number for messaging status codes.

enumerator kStatusGroup_SDK_OCOTP
Group number for OCOTP status codes.

enumerator kStatusGroup_SDK_FLEXSPINOR
Group number for FLEXSPINOR status codes.

enumerator kStatusGroup_CODEC
Group number for codec status codes.

enumerator kStatusGroup_ASRC
Group number for codec status ASRC.

enumerator kStatusGroup_OTFAD
Group number for codec status codes.

enumerator kStatusGroup_SDIOSLV
Group number for SDIOSLV status codes.

enumerator kStatusGroup_MECC
Group number for MECC status codes.

enumerator kStatusGroup_ENET_QOS
Group number for ENET_QOS status codes.

enumerator kStatusGroup_LOG
Group number for LOG status codes.

enumerator kStatusGroup_I3CBUS
Group number for I3CBUS status codes.

enumerator kStatusGroup_QSCI
Group number for QSCI status codes.

enumerator kStatusGroup_ELEMU
Group number for ELEMU status codes.

enumerator kStatusGroup_QUEUEDSPI
Group number for QSPI status codes.

enumerator kStatusGroup_POWER_MANAGER
Group number for POWER_MANAGER status codes.

enumerator kStatusGroup_IPED
Group number for IPED status codes.

enumerator kStatusGroup_ELS_PKC
Group number for ELS PKC status codes.

enumerator kStatusGroup_CSS_PKC
Group number for CSS PKC status codes.

enumerator kStatusGroup_HOSTIF
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT

Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT

Group number for A-format status codes.

Generic status return codes.

Values:

enumerator kStatus_Success

Generic status for Success.

enumerator kStatus_Fail

Generic status for Fail.

enumerator kStatus_ReadOnly

Generic status for read only failure.

enumerator kStatus_OutOfRange

Generic status for out of range access.

enumerator kStatus_InvalidArgument

Generic status for invalid argument check.

enumerator kStatus_Timeout

Generic status for timeout.

enumerator kStatus_NoTransferInProgress

Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

static inline *status_t* EnableIRQ(IRQn_Type interrupt)

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt enabled successfully
- kStatus_Fail – Failed to enable the interrupt

static inline *status_t* DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt disabled successfully
- kStatus_Fail – Failed to disable the interrupt

static inline *status_t* EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

```
static inline status_t IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)
```

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

```
static inline status_t IRQ_ClearPendingIRQ(IRQn_Type interrupt)
```

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

```
static inline uint32_t DisableGlobalIRQ(void)
```

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

```
static inline void EnableGlobalIRQ(uint32_t primask)
```

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

```
static inline bool __SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t  
newValue)
```


`static inline uint32_t _SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)`

`FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ`

Macro to use the default weak IRQ handler in drivers.

`MAKE_STATUS(group, code)`

Construct a status code value from a group and code number.

`MAKE_VERSION(major, minor, bugfix)`

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused		Major Version		Minor Version		Bug Fix	
31	25 24	17 16	9 8	0			

`ARRAY_SIZE(x)`

Computes the number of elements in an array.

`UINT64_H(X)`

Macro to get upper 32 bits of a 64-bit value

`UINT64_L(X)`

Macro to get lower 32 bits of a 64-bit value

`SUPPRESS_FALL_THROUGH_WARNING()`

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING();” need to be added at the end of each case section which misses “break;”statement.

`MSDK_REG_SECURE_ADDR(x)`

Convert the register address to the one used in secure mode.

`MSDK_REG_NONSECURE_ADDR(x)`

Convert the register address to the one used in non-secure mode.

`MSDK_INVALID_IRQ_HANDLER`

Invalid IRQ handler address.

2.29 Lin_lpuart_driver

`FSL_LIN_LPUART_DRIVER_VERSION`

LIN LPUART driver version.

`enum _lin_lpuart_stop_bit_count`

Values:

enumerator `kLPUART_OneStopBit`

One stop bit

enumerator `kLPUART_TwoStopBit`

Two stop bits

`enum _lin_lpuart_flags`

Values:

enumerator `kLPUART_TxDataRegEmptyFlag`

Transmit data register empty flag, sets when transmit buffer is empty

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start bit

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2

enumerator kLPUART_NoiseErrorInRxDataRegFlag

NOISY bit, sets if noise detected in current data word

enumerator kLPUART_ParityErrorInRxDataRegFlag

PARITY bit, sets if noise detected in current data word

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred

enum _lin_lpuart_interrupt_enable

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect.

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge.

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty.

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete.

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full.

enumerator kLPUART_IdleLineInterruptEnable
Idle line.

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun.

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag.

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag.

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag.

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow.

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow.

enum _lin_lpuart_status

Values:

enumerator kStatus_LPUART_TxBusy
TX busy

enumerator kStatus_LPUART_RxBusy
RX busy

enumerator kStatus_LPUART_TxIdle
LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle
LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge
TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge
RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually
Some flag can't manually clear

enumerator kStatus_LPUART_Error
Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun
LPUART RX software ring buffer overrun.

```

enumerator kStatus_LPUART_RxHardwareOverrun
    LPUART RX receiver overrun.
enumerator kStatus_LPUART_NoiseError
    LPUART noise error.
enumerator kStatus_LPUART_FramingError
    LPUART framing error.
enumerator kStatus_LPUART_ParityError
    LPUART parity error.
enum lin_lpuart_bit_count_per_char_t
    Values:
    enumerator LPUART_8_BITS_PER_CHAR
        8-bit data characters
    enumerator LPUART_9_BITS_PER_CHAR
        9-bit data characters
    enumerator LPUART_10_BITS_PER_CHAR
        10-bit data characters
typedef enum lin_lpuart_stop_bit_count lin_lpuart_stop_bit_count_t
static inline bool LIN_LPUART_GetRxDataPolarity(const LPUART_Type *base)
static inline void LIN_LPUART_SetRxDataPolarity(LPUART_Type *base, bool polarity)
static inline void LIN_LPUART_WriteByte(LPUART_Type *base, uint8_t data)
static inline void LIN_LPUART_ReadByte(const LPUART_Type *base, uint8_t *readData)
status_t LIN_LPUART_CalculateBaudRate(LPUART_Type *base, uint32_t baudRate_Bps,
                                     uint32_t srcClock_Hz, uint32_t *osr, uint16_t *sbr)

```

Calculates the best osr and sbr value for configured baudrate.

Parameters

- base – LPUART peripheral base address
- baudRate_Bps – user configuration structure of type #lin_user_config_t
- srcClock_Hz – pointer to the LIN_LPUART driver state structure
- osr – pointer to osr value
- sbr – pointer to sbr value

Returns

An error code or *lin_status_t*

```
void LIN_LPUART_SetBaudRate(LPUART_Type *base, uint32_t *osr, uint16_t *sbr)
```

Configure baudrate according to osr and sbr value.

Parameters

- base – LPUART peripheral base address
- osr – pointer to osr value
- sbr – pointer to sbr value

```
lin_status_t LIN_LPUART_Init(LPUART_Type *base, lin_user_config_t *linUserConfig,  
                             lin_state_t *linCurrentState, uint32_t linSourceClockFreq)
```

Initializes an LIN_LPUART instance for LIN Network.

The caller provides memory for the driver state structures during initialization. The user must select the LIN_LPUART clock source in the application to initialize the LIN_LPUART. This function initializes a LPUART instance for operation. This function will initialize the run-time state structure to keep track of the on-going transfers, initialize the module to user defined settings and default settings, set break field length to be 13 bit times minimum, enable the break detect interrupt, Rx complete interrupt, frame error detect interrupt, and enable the LPUART module transmitter and receiver

Parameters

- base – LPUART peripheral base address
- linUserConfig – user configuration structure of type #lin_user_config_t
- linCurrentState – pointer to the LIN_LPUART driver state structure

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_Deinit(LPUART_Type *base)
```

Shuts down the LIN_LPUART by disabling interrupts and transmitter/receiver.

Parameters

- base – LPUART peripheral base address

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_SendFrameDataBlocking(LPUART_Type *base, const uint8_t *txBuff,  
                                                uint8_t txSize, uint32_t timeoutMSec)
```

Sends Frame data out through the LIN_LPUART module using blocking method. This function will calculate the checksum byte and send it with the frame data. Blocking means that the function does not return until the transmission is complete.

Parameters

- base – LPUART peripheral base address
- txBuff – source buffer containing 8-bit data chars to send
- txSize – the number of bytes to send
- timeoutMSec – timeout value in milli seconds

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_SendFrameData(LPUART_Type *base, const uint8_t *txBuff, uint8_t  
                                       txSize)
```

Sends frame data out through the LIN_LPUART module using non-blocking method. This enables an a-sync method for transmitting data. Non-blocking means that the function returns immediately. The application has to get the transmit status to know when the transmit is complete. This function will calculate the checksum byte and send it with the frame data.

Parameters

- base – LPUART peripheral base address
- txBuff – source buffer containing 8-bit data chars to send
- txSize – the number of bytes to send

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetTransmitStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking transmission. While sending frame data using non-blocking method, users can use this function to get status of that transmission. This function returns `LIN_TX_BUSY` while sending, or `LIN_TIMEOUT` if timeout has occurred, or return `LIN_SUCCESS` when the transmission is complete. The `bytesRemaining` shows number of bytes that still needed to transmit.

Parameters

- `base` – LPUART peripheral base address
- `bytesRemaining` – Number of bytes still needed to transmit

Returns

`lin_status_t` `LIN_TX_BUSY`, `LIN_SUCCESS` or `LIN_TIMEOUT`

`lin_status_t LIN_LPUART_RecvFrmDataBlocking(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize, uint32_t timeoutMSec)`

Receives frame data through the `LIN_LPUART` module using blocking method. This function will check the checksum byte. If the checksum is correct, it will receive the frame data. Blocking means that the function does not return until the reception is complete.

Parameters

- `base` – LPUART peripheral base address
- `rxBuff` – buffer containing 8-bit received data
- `rxSize` – the number of bytes to receive
- `timeoutMSec` – timeout value in milli seconds

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_RecvFrmData(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize)`

Receives frame data through the `LIN_LPUART` module using non-blocking method. This function will check the checksum byte. If the checksum is correct, it will receive it with the frame data. Non-blocking means that the function returns immediately. The application has to get the receive status to know when the reception is complete.

Parameters

- `base` – LPUART peripheral base address
- `rxBuff` – buffer containing 8-bit received data
- `rxSize` – the number of bytes to receive

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_AbortTransferData(LPUART_Type *base)`

Aborts an on-going non-blocking transmission/reception. While performing a non-blocking transferring data, users can call this function to terminate immediately the transferring.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetReceiveStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking reception While receiving frame data using non-blocking method, users can use this function to get status of that receiving. This function return the current event ID, LIN_RX_BUSY while receiving and return LIN_SUCCESS, or timeout (LIN_TIMEOUT) when the reception is complete. The bytesRemaining shows number of bytes that still needed to receive.

Parameters

- base – LPUART peripheral base address
- bytesRemaining – Number of bytes still needed to receive

Returns

`lin_status_t` LIN_RX_BUSY, LIN_TIMEOUT or LIN_SUCCESS

`lin_status_t LIN_LPUART_GoToSleepMode(LPUART_Type *base)`

This function puts current node to sleep mode This function changes current node state to LIN_NODE_STATE_SLEEP_MODE.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GotoIdleState(LPUART_Type *base)`

Puts current LIN node to Idle state This function changes current node state to LIN_NODE_STATE_IDLE.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_SendWakeupSignal(LPUART_Type *base)`

Sends a wakeup signal through the LIN_LPUART interface.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_MasterSendHeader(LPUART_Type *base, uint8_t id)`

Sends frame header out through the LIN_LPUART module using a non-blocking method. This function sends LIN Break field, sync field then the ID with correct parity.

Parameters

- base – LPUART peripheral base address
- id – Frame Identifier

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_EnableIRQ(LPUART_Type *base)`

Enables LIN_LPUART hardware interrupts.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t` LIN_LPUART_DisableIRQ(LPUART_Type *base)

Disables LIN_LPUART hardware interrupts.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t` LIN_LPUART_AutoBaudCapture(uint32_t instance)

This function capture bits time to detect break char, calculate baudrate from sync bits and enable transceiver if autobaud successful. This function should only be used in Slave. The timer should be in mode input capture of both rising and falling edges. The timer input capture pin should be externally connected to RXD pin.

Parameters

- instance – LPUART instance

Returns

`lin_status_t`

`void` LIN_LPUART_IRQHandler(LPUART_Type *base)

LIN_LPUART RX TX interrupt handler.

Parameters

- base – LPUART peripheral base address

Returns

`void`

`LIN_LPUART_TRANSMISSION_COMPLETE_TIMEOUT`

Max loops to wait for LPUART transmission complete.

When de-initializing the LIN LPUART module, the program shall wait for the previous transmission to complete. This parameter defines how many loops to check completion before return error. If defined as 0, driver will wait forever until completion.

`AUTOBAUD_BAUDRATE_TOLERANCE`

`BIT_RATE_TOLERANCE_UNSYNC`

`BIT_DURATION_MAX_19200`

`BIT_DURATION_MIN_19200`

`BIT_DURATION_MAX_14400`

`BIT_DURATION_MIN_14400`

`BIT_DURATION_MAX_9600`

`BIT_DURATION_MIN_9600`

`BIT_DURATION_MAX_4800`

`BIT_DURATION_MIN_4800`

`BIT_DURATION_MAX_2400`

`BIT_DURATION_MIN_2400`

TWO_BIT_DURATION_MAX_19200
TWO_BIT_DURATION_MIN_19200
TWO_BIT_DURATION_MAX_14400
TWO_BIT_DURATION_MIN_14400
TWO_BIT_DURATION_MAX_9600
TWO_BIT_DURATION_MIN_9600
TWO_BIT_DURATION_MAX_4800
TWO_BIT_DURATION_MIN_4800
TWO_BIT_DURATION_MAX_2400
TWO_BIT_DURATION_MIN_2400
AUTOBAUD_BREAK_TIME_MIN

2.30 LLWU: Low-Leakage Wakeup Unit Driver

static inline void LLWU_GetVersionId(LLWU_Type *base, *llwu_version_id_t* *versionId)

Gets the LLWU version ID.

This function gets the LLWU version ID, including the major version number, the minor version number, and the feature specification number.

Parameters

- base – LLWU peripheral base address.
- versionId – A pointer to the version ID structure.

static inline void LLWU_GetParam(LLWU_Type *base, *llwu_param_t* *param)

Gets the LLWU parameter.

This function gets the LLWU parameter, including a wakeup pin number, a module number, a DMA number, and a pin filter number.

Parameters

- base – LLWU peripheral base address.
- param – A pointer to the LLWU parameter structure.

void LLWU_SetExternalWakeupPinMode(LLWU_Type *base, uint32_t pinIndex,
llwu_external_pin_mode_t pinMode)

Sets the external input pin source mode.

This function sets the external input pin source mode that is used as a wake up source.

Parameters

- base – LLWU peripheral base address.
- pinIndex – A pin index to be enabled as an external wakeup source starting from 1.
- pinMode – A pin configuration mode defined in the *llwu_external_pin_modes_t*.

```
bool LLWU_GetExternalWakeupPinFlag(LLWU_Type *base, uint32_t pinIndex)
```

Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

Parameters

- base – LLWU peripheral base address.
- pinIndex – A pin index, which starts from 1.

Returns

True if the specific pin is a wakeup source.

```
void LLWU_ClearExternalWakeupPinFlag(LLWU_Type *base, uint32_t pinIndex)
```

Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

Parameters

- base – LLWU peripheral base address.
- pinIndex – A pin index, which starts from 1.

```
static inline void LLWU_EnableInternalModuleInterruptWakup(LLWU_Type *base, uint32_t  
                                                           moduleIndex, bool enable)
```

Enables/disables the internal module source.

This function enables/disables the internal module source mode that is used as a wake up source.

Parameters

- base – LLWU peripheral base address.
- moduleIndex – A module index to be enabled as an internal wakeup source starting from 1.
- enable – An enable or a disable setting

```
static inline void LLWU_EnableInternalModuleDmaRequestWakup(LLWU_Type *base, uint32_t  
                                                            moduleIndex, bool enable)
```

Enables/disables the internal module DMA wakeup source.

This function enables/disables the internal DMA that is used as a wake up source.

Parameters

- base – LLWU peripheral base address.
- moduleIndex – An internal module index which is used as a DMA request source, starting from 1.
- enable – Enable or disable the DMA request source

```
void LLWU_SetPinFilterMode(LLWU_Type *base, uint32_t filterIndex,  
                           llwu_external_pin_filter_mode_t filterMode)
```

Sets the pin filter configuration.

This function sets the pin filter configuration.

Parameters

- base – LLWU peripheral base address.
- filterIndex – A pin filter index used to enable/disable the digital filter, starting from 1.
- filterMode – A filter mode configuration

`bool LLWU_GetPinFilterFlag(LLWU_Type *base, uint32_t filterIndex)`

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- `base` – LLWU peripheral base address.
- `filterIndex` – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

`void LLWU_ClearPinFilterFlag(LLWU_Type *base, uint32_t filterIndex)`

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- `base` – LLWU peripheral base address.
- `filterIndex` – A pin filter index to clear the flag, starting from 1.

`void LLWU_SetResetPinMode(LLWU_Type *base, bool pinEnable, bool pinFilterEnable)`

Sets the reset pin mode.

This function determines how the reset pin is used as a low leakage mode exit source.

Parameters

- `base` – LLWU peripheral base address.
- `pinEnable` – Enable reset the pin filter
- `pinFilterEnable` – Specify whether the pin filter is enabled in Low-Leakage power mode.

`FSL_LLWU_DRIVER_VERSION`

LLWU driver version.

`enum _llwu_external_pin_mode`

External input pin control modes.

Values:

enumerator `kLLWU_ExternalPinDisable`

Pin disabled as a wakeup input.

enumerator `kLLWU_ExternalPinRisingEdge`

Pin enabled with the rising edge detection.

enumerator `kLLWU_ExternalPinFallingEdge`

Pin enabled with the falling edge detection.

enumerator `kLLWU_ExternalPinAnyEdge`

Pin enabled with any change detection.

`enum _llwu_pin_filter_mode`

Digital filter control modes.

Values:

enumerator `kLLWU_PinFilterDisable`

Filter disabled.

enumerator kLLWU_PinFilterRisingEdge

Filter positive edge detection.

enumerator kLLWU_PinFilterFallingEdge

Filter negative edge detection.

enumerator kLLWU_PinFilterAnyEdge

Filter any edge detection.

typedef enum *_llwu_external_pin_mode* llwu_external_pin_mode_t

External input pin control modes.

typedef enum *_llwu_pin_filter_mode* llwu_pin_filter_mode_t

Digital filter control modes.

typedef struct *_llwu_version_id* llwu_version_id_t

IP version ID definition.

typedef struct *_llwu_param* llwu_param_t

IP parameter definition.

typedef struct *_llwu_external_pin_filter_mode* llwu_external_pin_filter_mode_t

An external input pin filter control structure.

LLWU_REG_VAL(x)

struct *_llwu_version_id*

#include <fsl_llwu.h> IP version ID definition.

Public Members

uint16_t feature

A feature specification number.

uint8_t minor

The minor version number.

uint8_t major

The major version number.

struct *_llwu_param*

#include <fsl_llwu.h> IP parameter definition.

Public Members

uint8_t filters

A number of the pin filter.

uint8_t dmas

A number of the wakeup DMA.

uint8_t modules

A number of the wakeup module.

uint8_t pins

A number of the wake up pin.

struct *_llwu_external_pin_filter_mode*

#include <fsl_llwu.h> An external input pin filter control structure.

Public Members

uint32_t pinIndex

A pin number

llwu_pin_filter_mode_t filterMode

Filter mode

2.31 LPTMR: Low-Power Timer

void LPTMR_Init(LPTMR_Type *base, const *lptmr_config_t* *config)

Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

void LPTMR_Deinit(LPTMR_Type *base)

Gates the LPTMR clock.

Parameters

- base – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *lptmr_interrupt_enable_t*

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the `fsl_common.h` to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

static inline void LPTMR_StartTimer(LPTMR_Type *base)

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

static inline void LPTMR_StopTimer(LPTMR_Type *base)

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

FSL_LPTMR_DRIVER_VERSION

Driver Version

enum _lptmr_pin_select

LPTMR pin selection used in pulse counter mode.

Values:

enumerator kLPTMR_PinSelectInput_0

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1

Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2

Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3

Pulse counter input 3 is selected

enum _lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh

Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow

Pulse Counter input source is active-low

enum _lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter

Pulse Counter mode

enum _lptmr_prescaler_glitch_value
LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0
Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1
Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2
Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3
Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4
Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5
Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6
Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7
Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8
Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enumerator kLPTMR_PrescalerClock_0
Prescaler/glitch filter clock 0 selected.

enumerator kLPTMR_PrescalerClock_1

Prescaler/glitch filter clock 1 selected.

enumerator kLPTMR_PrescalerClock_2

Prescaler/glitch filter clock 2 selected.

enumerator kLPTMR_PrescalerClock_3

Prescaler/glitch filter clock 3 selected.

enum _lptmr_interrupt_enable

List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable

Timer interrupt enable

enum _lptmr_status_flags

List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag

Timer compare flag

typedef enum _lptmr_pin_select lptmr_pin_select_t

LPTMR pin selection used in pulse counter mode.

typedef enum _lptmr_pin_polarity lptmr_pin_polarity_t

LPTMR pin polarity used in pulse counter mode.

typedef enum _lptmr_timer_mode lptmr_timer_mode_t

LPTMR timer mode selection.

typedef enum _lptmr_prescaler_glitch_value lptmr_prescaler_glitch_value_t

LPTMR prescaler/glitch filter values.

typedef enum _lptmr_prescaler_clock_select lptmr_prescaler_clock_select_t

LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

typedef enum _lptmr_interrupt_enable lptmr_interrupt_enable_t

List of the LPTMR interrupts.

typedef enum _lptmr_status_flags lptmr_status_flags_t

List of the LPTMR status flags.

typedef struct _lptmr_config lptmr_config_t

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)

Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address

- `enable` – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

`struct _lptmr_config`

`#include <fsl_lptmr.h>` LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

`lptmr_timer_mode_t` timerMode

Time counter mode or pulse counter mode

`lptmr_pin_select_t` pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

`lptmr_pin_polarity_t` pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

`bool` enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

`bool` bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

`lptmr_prescaler_clock_select_t` prescalerClockSource

LPTMR clock source

`lptmr_prescaler_glitch_value_t` value

Prescaler or glitch filter value

2.32 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.33 LPUART Driver

`static inline void LPUART_SoftwareReset(LPUART_Type *base)`

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- `base` – LPUART peripheral base address.

`status_t` LPUART_Init(LPUART_Type *base, const `lpuart_config_t` *config, uint32_t srcClock_Hz)

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the `LPUART_GetDefaultConfig()` function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;  
lpuartConfig.baudRate_Bps = 115200U;  
lpuartConfig.parityMode = kLPUART_ParityDisabled;  
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;  
lpuartConfig.isMsb = false;  
lpuartConfig.stopBitCount = kLPUART_OneStopBit;  
lpuartConfig.txFifoWatermark = 0;  
lpuartConfig.rxFifoWatermark = 1;  
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- config – Pointer to a user-defined configuration structure.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – LPUART initialize succeed

void LPUART_Deinit(LPUART_Type *base)

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

void LPUART_GetDefaultConfig(*lpuart_config_t* *config)

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: `lpuartConfig->baudRate_Bps = 115200U`; `lpuartConfig->parityMode = kLPUART_ParityDisabled`; `lpuartConfig->dataBitsCount = kLPUART_EightDataBits`; `lpuartConfig->isMsb = false`; `lpuartConfig->stopBitCount = kLPUART_OneStopBit`; `lpuartConfig->txFifoWatermark = 0`; `lpuartConfig->rxFifoWatermark = 1`; `lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit`; `lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1`; `lpuartConfig->enableTx = false`; `lpuartConfig->enableRx = false`;

Parameters

- config – Pointer to a configuration structure.

status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not supported in the current clock source.
- `kStatus_Success` – Set baudrate succeeded.

`void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)`

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – true to enable, false to disable.

`static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)`

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- `base` – LPUART peripheral base address.
- `address1` – LPUART slave address1.
- `address2` – LPUART slave address2.

`static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)`

Enable the LPUART match address feature.

Parameters

- `base` – LPUART peripheral base address.
- `match1` – true to enable match address1, false to disable.
- `match2` – true to enable match address2, false to disable.

`static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)`

Sets the rx FIFO watermark.

Parameters

- `base` – LPUART peripheral base address.
- `water` – Rx FIFO watermark.

static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

static inline void LPUART_TransferEnable16Bit(*lpuart_handle_t* *handle, bool enable)

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in *lpuart_handle_t*.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

uint32_t LPUART_GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators *_lpuart_flags*. To check for a specific status, compare the return value with enumerators in the *_lpuart_flags*. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the *_lpuart_flags*.

status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only cleared or set by hardware are: *kLPUART_TxDataRegEmptyFlag*, *kLPUART_TransmissionCompleteFlag*, *kLPUART_RxDataRegFullFlag*, *kLPUART_RxActiveFlag*, *kLPUART_NoiseErrorFlag*, *kLPUART_ParityErrorFlag*, *kLPUART_TxFifoEmptyFlag*, *kLPUART_RxFifoEmptyFlag* Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the *_lpuart_status_flag_t* to do the OR operation and get the mask.

Return values

- *kStatus_LPUART_FlagCannotClearManually* – The flag can't be cleared by this function but it is cleared automatically by hardware.
- *kStatus_Success* – Status in the mask are cleared.

Returns

0 succeed, others failed.

```
void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)
```

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This examples shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- `base` – LPUART peripheral base address.
- `mask` – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

```
void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)
```

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- `base` – LPUART peripheral base address.
- `mask` – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

```
uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)
```

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

```
static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)
```

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

static inline void LPUART__EnableTxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, STAT[TDRE], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART__EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

uint32_t LPUART__GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

static inline void LPUART__EnableTx(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART__EnableRx(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART__WriteByte(LPUART_Type *base, uint8_t data)

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

```
static inline uint8_t LPUART_ReadByte(LPUART_Type *base)
```

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

```
static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

```
void LPUART_SendAddress(LPUART_Type *base, uint8_t address)
```

Transmit an address frame in 9-bit data mode.

Parameters

- base – LPUART peripheral base address.
- address – LPUART slave address.

```
status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)
```

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

```
status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)
```

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.
- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.

- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

```
void LPUART__TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle,  
                                lpuart_transfer_callback_t callback, void *userData)
```

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `LPUART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as `ringBuffer`.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `callback` – Callback function.
- `userData` – User data.

```
status_t LPUART__TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,  
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the `kStatus_LPUART_TxIdle` as status parameter.

Note: The `kStatus_LPUART_TxIdle` is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the `kLPUART_TransmissionCompleteFlag` to ensure that the transmit is finished.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `lpuart_transfer_t`.

Return values

- `kStatus_Success` – Successfully start the data transmission.
- `kStatus_LPUART_TxBusy` – Previous transmission still not finished, data not all written to the TX register.
- `kStatus_InvalidArgument` – Invalid argument.

```
void LPUART__TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t  
                                     *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the `UART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if `ringBufferSize` is 32, then only 31 bytes are used for saving data.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `ringBuffer` – Start address of ring buffer for background receiving. Pass `NULL` to disable the ring buffer.
- `ringBufferSize` – size of the ring buffer.

`void LPUART__TransferStopRingBuffer(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`size_t LPUART__TransferGetRxRingBufferLength(LPUART_Type *base, lpuart_handle_t *handle)`

Get the length of received data in RX ring buffer.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

`void LPUART__TransferAbortSend(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the `remainBtyes` to find out how many bytes are not sent out.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t LPUART__TransferGetSendCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- `base` – LPUART peripheral base address.

- `handle` – LPUART handle pointer.
- `count` – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t` LPUART_TransferReceiveNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer, `size_t` *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to `xfer->data`, which returns with the parameter `receivedBytes` set to 5. For the remaining 5 bytes, the newly arrived data is saved from `xfer->data[5]`. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void` LPUART_TransferAbortReceive(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t` LPUART_TransferGetReceiveCount(LPUART_Type *base, *lpuart_handle_t* *handle, `uint32_t` *count)

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – LPUART peripheral base address.

- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)
LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)
LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_DriverIRQHandler(uint32_t instance)
LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- instance – LPUART instance.

FSL_LPUART_DRIVER_VERSION
LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator kStatus_LPUART_TxBusy
TX busy

enumerator kStatus_LPUART_RxBusy
RX busy

enumerator kStatus_LPUART_TxIdle
LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle
LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge
TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge
RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun

LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError

LPUART noise error.

enumerator kStatus_LPUART_FramingError

LPUART framing error.

enumerator kStatus_LPUART_ParityError

LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport

Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected

IDLE flag.

enumerator kStatus_LPUART_Timeout

LPUART times out.

enum _lpuart_parity_mode

LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled

Parity disabled

enumerator kLPUART_ParityEven

Parity enabled, type even, bit setting: PE | PT = 10

enumerator kLPUART_ParityOdd

Parity enabled, type odd, bit setting: PE | PT = 11

enum _lpuart_data_bits

LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits

Eight data bit

enumerator kLPUART_SevenDataBits

Seven data bit

enum _lpuart_stop_bit_count

LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit

One stop bit

enumerator kLPUART_TwoStopBit

Two stop bits

enum _lpuart_transmit_cts_source

LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin

CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult

CTS resource is the match result.

enum _lpuart_transmit_cts_config

LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart

CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle

CTS input is sampled when the transmitter is idle

enum _lpuart_idle_type_select

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum _lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128
the number of idle characters.

enum _lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable
Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable
Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag
Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t

LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t

LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t

LPUART stop bit count.

```
typedef enum _lpuart_transmit_cts_source lpuart_transmit_cts_source_t
    LPUART transmit CTS source.

typedef enum _lpuart_transmit_cts_config lpuart_transmit_cts_config_t
    LPUART transmit CTS configure.

typedef enum _lpuart_idle_type_select lpuart_idle_type_select_t
    LPUART idle flag type defines when the receiver starts counting.

typedef enum _lpuart_idle_config lpuart_idle_config_t
    LPUART idle detected configuration. This structure defines the number of idle characters
    that must be received before the IDLE flag is set.

typedef struct _lpuart_config lpuart_config_t
    LPUART configuration structure.

typedef struct _lpuart_transfer lpuart_transfer_t
    LPUART transfer structure.

typedef struct _lpuart_handle lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle,
status_t status, void *userData)
    LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES
    Retry times for waiting flag.

struct _lpuart_config
    #include <fsl_lpuart.h> LPUART configuration structure.
```

Public Members

```
uint32_t baudRate_Bps
    LPUART baud rate

lpuart_parity_mode_t parityMode
    Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount
    Data bits count, eight (default), seven

bool isMsb
    Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount
    Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark
    TX FIFO watermark

uint8_t rxFifoWatermark
    RX FIFO watermark
```

`bool enableRxRTS`
RX RTS enable

`bool enableTxCTS`
TX CTS enable

`lpuart_transmit_cts_source_t txCtsSource`
TX CTS source

`lpuart_transmit_cts_config_t txCtsConfig`
TX CTS configure

`lpuart_idle_type_select_t rxIdleType`
RX IDLE type.

`lpuart_idle_config_t rxIdleConfig`
RX IDLE configuration.

`bool enableTx`
Enable TX

`bool enableRx`
Enable RX

`struct __lpuart__transfer`
#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

`size_t dataSize`
The byte count to be transfer.

`struct __lpuart__handle`
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

`volatile size_t txDataSize`
Size of the remaining data to send.

`size_t txDataSizeAll`
Size of the data to send out.

`volatile size_t rxDataSize`
Size of the remaining data to receive.

`size_t rxDataSizeAll`
Size of the data to receive.

`size_t rxRingBufferSize`
Size of the ring buffer.

`volatile uint16_t rxRingBufferHead`
Index for the driver to store received data into ring buffer.

`volatile uint16_t rxRingBufferTail`
Index for the user to get data from the ring buffer.

`lpuart_transfer_callback_t callback`
Callback function.

`void *userData`
LPUART callback function parameter.

`volatile uint8_t txState`
TX transfer state.

`volatile uint8_t rxState`
RX transfer state.

`bool isSevenDataBits`
Seven data bits flag.

`bool is16bitData`
16bit data bits flag, only used for 9bit or 10bit data

`union __unnamed21__`

Public Members

`uint8_t *data`
The buffer of data to be transfer.

`uint8_t *rxData`
The buffer to receive data.

`uint16_t *rxData16`
The buffer to receive data.

`const uint8_t *txData`
The buffer of data to be sent.

`const uint16_t *txData16`
The buffer of data to be sent.

`union __unnamed23__`

Public Members

`const uint8_t *volatile txData`
Address of remaining data to send.

`const uint16_t *volatile txData16`
Address of remaining data to send.

`union __unnamed25__`

Public Members

`uint8_t *volatile rxData`
Address of remaining data to receive.

`uint16_t *volatile rxData16`
Address of remaining data to receive.

`union __unnamed27__`

Public Members

uint8_t *rxRingBuffer

Start address of the receiver ring buffer.

uint16_t *rxRingBuffer16

Start address of the receiver ring buffer.

2.34 LPUART eDMA Driver

```
void LPUART__TransferCreateHandleEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,  
                                     lpuart_edma_transfer_callback_t callback, void  
                                     *userData, edma_handle_t *txEdmaHandle,  
                                     edma_handle_t *rxEdmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- callback – Callback function.
- userData – User data.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

```
status_t LPUART__SendEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,  
                          lpuart_transfer_t *xfer)
```

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See lpuart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

```
status_t LPUART__ReceiveEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,  
                             lpuart_transfer_t *xfer)
```

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.
- xfer – LPUART eDMA transfer structure, see `lpuart_transfer_t`.

Return values

- `kStatus__Success` – if succeed, others fail.
- `kStatus__LPUART_RxBusy` – Previous transfer ongoing.
- `kStatus__InvalidArgument` – Invalid argument.

`void LPUART__TransferAbortSendEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle)`
Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.

`void LPUART__TransferAbortReceiveEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle)`
Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.

`status_t LPUART__TransferGetSendCountEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle, uint32_t *count)`

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- `kStatus__NoTransferInProgress` – No send in progress.
- `kStatus__InvalidArgument` – Parameter is invalid.
- `kStatus__Success` – Get successfully through the parameter count;

`status_t LPUART__TransferGetReceiveCountEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle, uint32_t *count)`

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)`
LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- `base` – LPUART peripheral base address.
- `lpuartEdmaHandle` – LPUART handle pointer.

`FSL_LPUART_EDMA_DRIVER_VERSION`

LPUART EDMA driver version.

`typedef struct _lpuart_edma_handle lpuart_edma_handle_t`

`typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, lpuart_edma_handle_t *handle, status_t status, void *userData)`

LPUART transfer callback function.

`struct _lpuart_edma_handle`

`#include <fsl_lpuart_edma.h>` LPUART eDMA handle.

Public Members

`lpuart_edma_transfer_callback_t` callback

Callback function.

`void *userData`

LPUART callback function parameter.

`size_t rxDataSizeAll`

Size of the data to receive.

`size_t txDataSizeAll`

Size of the data to send out.

`edma_handle_t *txEdmaHandle`

The eDMA TX channel used.

`edma_handle_t *rxEdmaHandle`

The eDMA RX channel used.

`uint8_t nbytes`

eDMA minor byte transfer count initially configured.

`volatile uint8_t txState`

TX transfer state.

`volatile uint8_t rxState`

RX transfer state

2.35 MCM: Miscellaneous Control Module

FSL_MCM_DRIVER_VERSION

MCM driver version.

Enum _mcm_interrupt_flag. Interrupt status flag mask. .

Values:

enumerator kMCM_CacheWriteBuffer
Cache Write Buffer Error Enable.

enumerator kMCM_ParityError
Cache Parity Error Enable.

enumerator kMCM_FPUInvalidOperation
FPU Invalid Operation Interrupt Enable.

enumerator kMCM_FPUDivideByZero
FPU Divide-by-zero Interrupt Enable.

enumerator kMCM_FPUOverflow
FPU Overflow Interrupt Enable.

enumerator kMCM_FPUUnderflow
FPU Underflow Interrupt Enable.

enumerator kMCM_FPUInexact
FPU Inexact Interrupt Enable.

enumerator kMCM_FPUInputDenormalInterrupt
FPU Input Denormal Interrupt Enable.

typedef union *_mcm_buffer_fault_attribute* mcm_buffer_fault_attribute_t
The union of buffer fault attribute.

typedef union *_mcm_lmem_fault_attribute* mcm_lmem_fault_attribute_t
The union of LMEM fault attribute.

static inline void MCM_EnableCrossbarRoundRobin(MCM_Type *base, bool enable)
Enables/Disables crossbar round robin.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable crossbar round robin.
 - **true** Enable crossbar round robin.
 - **false** disable crossbar round robin.

static inline void MCM_EnableInterruptStatus(MCM_Type *base, uint32_t mask)
Enables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(_mcm_interrupt_flag).

static inline void MCM_DisableInterruptStatus(MCM_Type *base, uint32_t mask)

Disables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(`_mcm_interrupt_flag`).

static inline uint16_t MCM_GetInterruptStatus(MCM_Type *base)

Gets the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline void MCM_ClearCacheWriteBufferErrorStatus(MCM_Type *base)

Clears the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultAddress(MCM_Type *base)

Gets buffer fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetBufferFaultAttribute(MCM_Type *base, *mcm_buffer_fault_attribute_t* *bufferfault)

Gets buffer fault attributes.

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultData(MCM_Type *base)

Gets buffer fault data.

Parameters

- base – MCM peripheral base address.

static inline void MCM_LimitCodeCachePeripheralWriteBuffering(MCM_Type *base, bool enable)

Limit code cache peripheral write buffering.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable limit code cache peripheral write buffering.
 - **true** Enable limit code cache peripheral write buffering.
 - **false** disable limit code cache peripheral write buffering.

static inline void MCM_BypassFixedCodeCacheMap(MCM_Type *base, bool enable)

Bypass fixed code cache map.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable bypass fixed code cache map.
 - **true** Enable bypass fixed code cache map.
 - **false** disable bypass fixed code cache map.

static inline void MCM_EnableCodeBusCache(MCM_Type *base, bool enable)

Enables/Disables code bus cache.

Parameters

- base – MCM peripheral base address.
- enable – Used to disable/enable code bus cache.
 - **true** Enable code bus cache.
 - **false** disable code bus cache.

static inline void MCM_ForceCodeCacheToNoAllocation(MCM_Type *base, bool enable)

Force code cache to no allocation.

Parameters

- base – MCM peripheral base address.
- enable – Used to force code cache to allocation or no allocation.
 - **true** Force code cache to no allocation.
 - **false** Force code cache to allocation.

static inline void MCM_EnableCodeCacheWriteBuffer(MCM_Type *base, bool enable)

Enables/Disables code cache write buffer.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable code cache write buffer.
 - **true** Enable code cache write buffer.
 - **false** Disable code cache write buffer.

static inline void MCM_ClearCodeBusCache(MCM_Type *base)

Clear code bus cache.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnablePcParityFaultReport(MCM_Type *base, bool enable)

Enables/Disables PC Parity Fault Report.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity Fault Report.
 - **true** Enable PC Parity Fault Report.
 - **false** disable PC Parity Fault Report.

static inline void MCM_EnablePcParity(MCM_Type *base, bool enable)

Enables/Disables PC Parity.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity.
 - **true** Enable PC Parity.
 - **false** disable PC Parity.

```
static inline void MCM_LockConfigState(MCM_Type *base)
```

Lock the configuration state.

Parameters

- base – MCM peripheral base address.

```
static inline void MCM_EnableCacheParityReporting(MCM_Type *base, bool enable)
```

Enables/Disables cache parity reporting.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable cache parity reporting.
 - **true** Enable cache parity reporting.
 - **false** disable cache parity reporting.

```
static inline uint32_t MCM_GetLmemFaultAddress(MCM_Type *base)
```

Gets LMEM fault address.

Parameters

- base – MCM peripheral base address.

```
static inline void MCM_GetLmemFaultAttribute(MCM_Type *base, mcm_lmem_fault_attribute_t  
*lmemFault)
```

Get LMEM fault attributes.

Parameters

- base – MCM peripheral base address.

```
static inline uint64_t MCM_GetLmemFaultData(MCM_Type *base)
```

Gets LMEM fault data.

Parameters

- base – MCM peripheral base address.

MCM_LMFATR_TYPE_MASK

MCM_LMFATR_MODE_MASK

MCM_LMFATR_BUFF_MASK

MCM_LMFATR_CACH_MASK

MCM_ISCR_STAT_MASK

FSL_COMPONENT_ID

```
union _mcm_buffer_fault_attribute
```

#include <fsl_mcm.h> The union of buffer fault attribute.

Public Members

```
uint32_t attribute
```

Indicates the faulting attributes, when a properly-enabled cache write buffer error interrupt event is detected.

```
struct _mcm_buffer_fault_attribute, _mcm_buffer_fault_attrib attribute_memory
```

```
struct _mcm_buffer_fault_attrib
```

#include <fsl_mcm.h>

Public Members

uint32_t busErrorDataAccessType

Indicates the type of cache write buffer access.

uint32_t busErrorPrivilegeLevel

Indicates the privilege level of the cache write buffer access.

uint32_t busErrorSize

Indicates the size of the cache write buffer access.

uint32_t busErrorAccess

Indicates the type of system bus access.

uint32_t busErrorMasterID

Indicates the crossbar switch bus master number of the captured cache write buffer bus error.

uint32_t busErrorOverrun

Indicates if another cache write buffer bus error is detected.

union _mcm_lmem_fault_attribute

#include <fsl_mcm.h> The union of LMEM fault attribute.

Public Members

uint32_t attribute

Indicates the attributes of the LMEM fault detected.

struct _mcm_lmem_fault_attribute._mcm_lmem_fault_attribut attribute__memory

struct _mcm_lmem_fault_attribut

#include <fsl_mcm.h>

Public Members

uint32_t parityFaultProtectionSignal

Indicates the features of parity fault protection signal.

uint32_t parityFaultMasterSize

Indicates the parity fault master size.

uint32_t parityFaultWrite

Indicates the parity fault is caused by read or write.

uint32_t backdoorAccess

Indicates the LMEM access fault is initiated by core access or backdoor access.

uint32_t parityFaultSyndrome

Indicates the parity fault syndrome.

uint32_t overrun

Indicates the number of faultss.

2.36 PDB: Programmable Delay Block

`void PDB_Init(PDB_Type *base, const pdb_config_t *config)`

Initializes the PDB module.

This function initializes the PDB module. The operations included are as follows.

- Enable the clock for PDB instance.
- Configure the PDB module.
- Enable the PDB module.

Parameters

- `base` – PDB peripheral base address.
- `config` – Pointer to the configuration structure. See “`pdb_config_t`”.

`void PDB_Deinit(PDB_Type *base)`

De-initializes the PDB module.

Parameters

- `base` – PDB peripheral base address.

`void PDB_GetDefaultConfig(pdb_config_t *config)`

Initializes the PDB user configuration structure.

This function initializes the user configuration structure to a default value. The default values are as follows.

```
config->loadValueMode = kPDB_LoadValueImmediately;
config->prescalerDivider = kPDB_PrescalerDivider1;
config->dividerMultiplicationFactor = kPDB_DividerMultiplicationFactor1;
config->triggerInputSource = kPDB_TriggerSoftware;
config->enableContinuousMode = false;
```

Parameters

- `config` – Pointer to configuration structure. See “`pdb_config_t`”.

`static inline void PDB_Enable(PDB_Type *base, bool enable)`

Enables the PDB module.

Parameters

- `base` – PDB peripheral base address.
- `enable` – Enable the module or not.

`static inline void PDB_DoSoftwareTrigger(PDB_Type *base)`

Triggers the PDB counter by software.

Parameters

- `base` – PDB peripheral base address.

`static inline void PDB_DoLoadValues(PDB_Type *base)`

Loads the counter values.

This function loads the counter values from the internal buffer. See “`pdb_load_value_mode_t`” about PDB’s load mode.

Parameters

- `base` – PDB peripheral base address.

static inline void PDB_EnableDMA(PDB_Type *base, bool enable)

Enables the DMA for the PDB module.

Parameters

- base – PDB peripheral base address.
- enable – Enable the feature or not.

static inline void PDB_EnableInterrupts(PDB_Type *base, uint32_t mask)

Enables the interrupts for the PDB module.

Parameters

- base – PDB peripheral base address.
- mask – Mask value for interrupts. See “_pdb_interrupt_enable”.

static inline void PDB_DisableInterrupts(PDB_Type *base, uint32_t mask)

Disables the interrupts for the PDB module.

Parameters

- base – PDB peripheral base address.
- mask – Mask value for interrupts. See “_pdb_interrupt_enable”.

static inline uint32_t PDB_GetStatusFlags(PDB_Type *base)

Gets the status flags of the PDB module.

Parameters

- base – PDB peripheral base address.

Returns

Mask value for asserted flags. See “_pdb_status_flags”.

static inline void PDB_ClearStatusFlags(PDB_Type *base, uint32_t mask)

Clears the status flags of the PDB module.

Parameters

- base – PDB peripheral base address.
- mask – Mask value of flags. See “_pdb_status_flags”.

static inline void PDB_SetModulusValue(PDB_Type *base, uint32_t value)

Specifies the counter period.

Parameters

- base – PDB peripheral base address.
- value – Setting value for the modulus. 16-bit is available.

static inline uint32_t PDB_GetCounterValue(PDB_Type *base)

Gets the PDB counter's current value.

Parameters

- base – PDB peripheral base address.

Returns

PDB counter's current value.

static inline void PDB_SetCounterDelayValue(PDB_Type *base, uint32_t value)

Sets the value for the PDB counter delay event.

Parameters

- base – PDB peripheral base address.

- `value` – Setting value for PDB counter delay event. 16-bit is available.

```
static inline void PDB_SetADCPreTriggerConfig(PDB_Type *base, pdb_adc_trigger_channel_t
                                              channel, pdb_adc_pretrigger_config_t *config)
```

Configures the ADC pre-trigger in the PDB module.

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for ADC instance.
- `config` – Pointer to the configuration structure. See “*pdb_adc_pretrigger_config_t*”.

```
static inline void PDB_SetADCPreTriggerDelayValue(PDB_Type *base, pdb_adc_trigger_channel_t
                                                  channel, pdb_adc_pretrigger_t
                                                  pretriggerNumber, uint32_t value)
```

Sets the value for the ADC pre-trigger delay event.

This function sets the value for ADC pre-trigger delay event. It specifies the delay value for the channel's corresponding pre-trigger. The pre-trigger asserts when the PDB counter is equal to the set value.

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for ADC instance.
- `pretriggerNumber` – Channel group index for ADC instance.
- `value` – Setting value for ADC pre-trigger delay event. 16-bit is available.

```
static inline uint32_t PDB_GetADCPreTriggerStatusFlags(PDB_Type *base,
                                                       pdb_adc_trigger_channel_t channel)
```

Gets the ADC pre-trigger's status flags.

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for ADC instance.

Returns

Mask value for asserted flags. See “*_pdb_adc_pretrigger_flags*”.

```
static inline void PDB_ClearADCPreTriggerStatusFlags(PDB_Type *base,
                                                      pdb_adc_trigger_channel_t channel,
                                                      uint32_t mask)
```

Clears the ADC pre-trigger status flags.

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for ADC instance.
- `mask` – Mask value for flags. See “*_pdb_adc_pretrigger_flags*”.

```
void PDB_SetDACTriggerConfig(PDB_Type *base, pdb_dac_trigger_channel_t channel,
                             pdb_dac_trigger_config_t *config)
```

Configures the DAC trigger in the PDB module.

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for DAC instance.

- `config` – Pointer to the configuration structure. See “`pdb_dac_trigger_config_t`”.

```
static inline void PDB_SetDACTriggerIntervalValue(PDB_Type *base, pdb_dac_trigger_channel_t
                                                    channel, uint32_t value)
```

Sets the value for the DAC interval event.

This function sets the value for DAC interval event. DAC interval trigger triggers the DAC module to update the buffer when the DAC interval counter is equal to the set value.

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for DAC instance.
- `value` – Setting value for the DAC interval event.

```
static inline void PDB_EnablePulseOutTrigger(PDB_Type *base, pdb_pulse_out_channel_mask_t
                                              channelMask, bool enable)
```

Enables the pulse out trigger channels.

Parameters

- `base` – PDB peripheral base address.
- `channelMask` – Channel mask value for multiple pulse out trigger channel.
- `enable` – Whether the feature is enabled or not.

```
static inline void PDB_SetPulseOutTriggerDelayValue(PDB_Type *base,
                                                    pdb_pulse_out_trigger_channel_t channel,
                                                    uint32_t value1, uint32_t value2)
```

Sets event values for the pulse out trigger.

This function is used to set event values for the pulse output trigger. These pulse output trigger delay values specify the delay for the PDB Pulse-out. Pulse-out goes high when the PDB counter is equal to the pulse output high value (`value1`). Pulse-out goes low when the PDB counter is equal to the pulse output low value (`value2`).

Parameters

- `base` – PDB peripheral base address.
- `channel` – Channel index for pulse out trigger channel.
- `value1` – Setting value for pulse out high.
- `value2` – Setting value for pulse out low.

FSL_PDB_DRIVER_VERSION

PDB driver version 2.0.4.

enum `__pdb_status_flags`

PDB flags.

Values:

enumerator `kPDB_LoadOKFlag`

This flag is automatically cleared when the values in buffers are loaded into the internal registers after the LDOK bit is set or the PDBEN is cleared.

enumerator `kPDB_DelayEventFlag`

PDB timer delay event flag.

enum __pdb_adc_pretrigger_flags

PDB ADC PreTrigger channel flags.

Values:

enumerator kPDB_ADCPreTriggerChannel0Flag

Pre-trigger 0 flag.

enumerator kPDB_ADCPreTriggerChannel1Flag

Pre-trigger 1 flag.

enumerator kPDB_ADCPreTriggerChannel0ErrorFlag

Pre-trigger 0 Error.

enumerator kPDB_ADCPreTriggerChannel1ErrorFlag

Pre-trigger 1 Error.

enum __pdb_interrupt_enable

PDB buffer interrupts.

Values:

enumerator kPDB_SequenceErrorInterruptEnable

PDB sequence error interrupt enable.

enumerator kPDB_DelayInterruptEnable

PDB delay interrupt enable.

enum __pdb_load_value_mode

PDB load value mode.

Selects the mode to load the internal values after doing the load operation (write 1 to PDBx_SC[LDOK]). These values are for the following operations.

- PDB counter (PDBx_MOD, PDBx_IDLY)
- ADC trigger (PDBx_CHnDLYm)
- DAC trigger (PDBx_DACINTx)
- CMP trigger (PDBx_POyDLY)

Values:

enumerator kPDB_LoadValueImmediately

Load immediately after 1 is written to LDOK.

enumerator kPDB_LoadValueOnCounterOverflow

Load when the PDB counter overflows (reaches the MOD register value).

enumerator kPDB_LoadValueOnTriggerInput

Load a trigger input event is detected.

enumerator kPDB_LoadValueOnCounterOverflowOrTriggerInput

Load either when the PDB counter overflows or a trigger input is detected.

enum __pdb_prescaler_divider

Prescaler divider.

Counting uses the peripheral clock divided by multiplication factor selected by times of MULT.

Values:

enumerator kPDB_PrescalerDivider1

Divider x1.

enumerator kPDB_PrescalerDivider2
Divider x2.

enumerator kPDB_PrescalerDivider4
Divider x4.

enumerator kPDB_PrescalerDivider8
Divider x8.

enumerator kPDB_PrescalerDivider16
Divider x16.

enumerator kPDB_PrescalerDivider32
Divider x32.

enumerator kPDB_PrescalerDivider64
Divider x64.

enumerator kPDB_PrescalerDivider128
Divider x128.

enum _pdb_divider_multiplication_factor
Multiplication factor select for prescaler.

Selects the multiplication factor of the prescaler divider for the counter clock.

Values:

enumerator kPDB_DividerMultiplicationFactor1
Multiplication factor is 1.

enumerator kPDB_DividerMultiplicationFactor10
Multiplication factor is 10.

enumerator kPDB_DividerMultiplicationFactor20
Multiplication factor is 20.

enumerator kPDB_DividerMultiplicationFactor40
Multiplication factor is 40.

enum _pdb_trigger_input_source
Trigger input source.

Selects the trigger input source for the PDB. The trigger input source can be internal or external (EXTRG pin), or the software trigger. See chip configuration details for the actual PDB input trigger connections.

Values:

enumerator kPDB_TriggerInput0
Trigger-In 0.

enumerator kPDB_TriggerInput1
Trigger-In 1.

enumerator kPDB_TriggerInput2
Trigger-In 2.

enumerator kPDB_TriggerInput3
Trigger-In 3.

enumerator kPDB_TriggerInput4
Trigger-In 4.

enumerator kPDB_TriggerInput5
Trigger-In 5.

enumerator kPDB_TriggerInput6
Trigger-In 6.

enumerator kPDB_TriggerInput7
Trigger-In 7.

enumerator kPDB_TriggerInput8
Trigger-In 8.

enumerator kPDB_TriggerInput9
Trigger-In 9.

enumerator kPDB_TriggerInput10
Trigger-In 10.

enumerator kPDB_TriggerInput11
Trigger-In 11.

enumerator kPDB_TriggerInput12
Trigger-In 12.

enumerator kPDB_TriggerInput13
Trigger-In 13.

enumerator kPDB_TriggerInput14
Trigger-In 14.

enumerator kPDB_TriggerSoftware
Trigger-In 15, software trigger.

enum _pdb_adc_trigger_channel
List of PDB ADC trigger channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPDB_ADCTriggerChannel0
PDB ADC trigger channel number 0

enumerator kPDB_ADCTriggerChannel1
PDB ADC trigger channel number 1

enumerator kPDB_ADCTriggerChannel2
PDB ADC trigger channel number 2

enumerator kPDB_ADCTriggerChannel3
PDB ADC trigger channel number 3

enum _pdb_adc_pretrigger
List of PDB ADC pretrigger.

Note: Actual number of available pretrigger channels is SoC dependent

Values:

enumerator kPDB_ADCPreTrigger0

PDB ADC pretrigger number 0

enumerator kPDB_ADCPreTrigger1

PDB ADC pretrigger number 1

enumerator kPDB_ADCPreTrigger2

PDB ADC pretrigger number 2

enumerator kPDB_ADCPreTrigger3

PDB ADC pretrigger number 3

enumerator kPDB_ADCPreTrigger4

PDB ADC pretrigger number 4

enumerator kPDB_ADCPreTrigger5

PDB ADC pretrigger number 5

enumerator kPDB_ADCPreTrigger6

PDB ADC pretrigger number 6

enumerator kPDB_ADCPreTrigger7

PDB ADC pretrigger number 7

enum _pdb_dac_trigger_channel

List of PDB DAC trigger channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPDB_DACTriggerChannel0

PDB DAC trigger channel number 0

enumerator kPDB_DACTriggerChannel1

PDB DAC trigger channel number 1

enum _pdb_pulse_out_trigger_channel

List of PDB pulse out trigger channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPDB_PulseOutTriggerChannel0

PDB pulse out trigger channel number 0

enumerator kPDB_PulseOutTriggerChannel1

PDB pulse out trigger channel number 1

enumerator kPDB_PulseOutTriggerChannel2

PDB pulse out trigger channel number 2

enumerator kPDB_PulseOutTriggerChannel3

PDB pulse out trigger channel number 3

enum *_pdb_pulse_out_channel_mask*

List of PDB pulse out trigger channels mask.

Note: Actual number of available channels mask is SoC dependent

Values:

enumerator *kPDB_PulseOutChannel0Mask*

PDB pulse out trigger channel number 0 mask

enumerator *kPDB_PulseOutChannel1Mask*

PDB pulse out trigger channel number 1 mask

enumerator *kPDB_PulseOutChannel2Mask*

PDB pulse out trigger channel number 2 mask

enumerator *kPDB_PulseOutChannel3Mask*

PDB pulse out trigger channel number 3 mask

typedef enum *_pdb_load_value_mode* *pdb_load_value_mode_t*

PDB load value mode.

Selects the mode to load the internal values after doing the load operation (write 1 to *PDBx_SC[LDOK]*). These values are for the following operations.

- PDB counter (*PDBx_MOD*, *PDBx_IDLY*)
- ADC trigger (*PDBx_CHnDLYm*)
- DAC trigger (*PDBx_DACINTx*)
- CMP trigger (*PDBx_POyDLY*)

typedef enum *_pdb_prescaler_divider* *pdb_prescaler_divider_t*

Prescaler divider.

Counting uses the peripheral clock divided by multiplication factor selected by times of *MULT*.

typedef enum *_pdb_divider_multiplication_factor* *pdb_divider_multiplication_factor_t*

Multiplication factor select for prescaler.

Selects the multiplication factor of the prescaler divider for the counter clock.

typedef enum *_pdb_trigger_input_source* *pdb_trigger_input_source_t*

Trigger input source.

Selects the trigger input source for the PDB. The trigger input source can be internal or external (*EXTRG* pin), or the software trigger. See chip configuration details for the actual PDB input trigger connections.

typedef enum *_pdb_adc_trigger_channel* *pdb_adc_trigger_channel_t*

List of PDB ADC trigger channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_pdb_adc_pretrigger* *pdb_adc_pretrigger_t*

List of PDB ADC pretrigger.

Note: Actual number of available pretrigger channels is SoC dependent

typedef enum *_pdb_dac_trigger_channel* pdb_dac_trigger_channel_t
List of PDB DAC trigger channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_pdb_pulse_out_trigger_channel* pdb_pulse_out_trigger_channel_t
List of PDB pulse out trigger channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_pdb_pulse_out_channel_mask* pdb_pulse_out_channel_mask_t
List of PDB pulse out trigger channels mask.

Note: Actual number of available channels mask is SoC dependent

typedef struct *_pdb_config* pdb_config_t
PDB module configuration.

typedef struct *_pdb_adc_pretrigger_config* pdb_adc_pretrigger_config_t
PDB ADC Pre-trigger configuration.

typedef struct *_pdb_dac_trigger_config* pdb_dac_trigger_config_t
PDB DAC trigger configuration.

struct _pdb_config
#include <fsl_pdb.h> PDB module configuration.

Public Members

pdb_load_value_mode_t loadValueMode
Select the load value mode.

pdb_prescaler_divider_t prescalerDivider
Select the prescaler divider.

pdb_divider_multiplication_factor_t dividerMultiplicationFactor
Multiplication factor select for prescaler.

pdb_trigger_input_source_t triggerInputSource
Select the trigger input source.

bool enableContinuousMode
Enable the PDB operation in Continuous mode.

struct _pdb_adc_pretrigger_config
#include <fsl_pdb.h> PDB ADC Pre-trigger configuration.

Public Members

uint32_t enablePreTriggerMask
PDB Channel Pre-trigger Enable.

uint32_t enableOutputMask
PDB Channel Pre-trigger Output Select. PDB channel's corresponding pre-trigger asserts when the counter reaches the channel delay register.

uint32_t enableBackToBackOperationMask

PDB Channel pre-trigger Back-to-Back Operation Enable. Back-to-back operation enables the ADC conversions complete to trigger the next PDB channel pre-trigger and trigger output, so that the ADC conversions can be triggered on next set of configuration and results registers.

struct __pdb_dac_trigger_config

#include <fsl_pdb.h> PDB DAC trigger configuration.

Public Members

bool enableExternalTriggerInput

Enables the external trigger for DAC interval counter.

bool enableIntervalTrigger

Enables the DAC interval trigger.

2.37 PIT: Periodic Interrupt Timer

void PIT_Init(PIT_Type *base, const *pit_config_t* *config)

Ungates the PIT clock, enables the PIT module, and configures the peripheral for basic operations.

Note: This API should be called at the beginning of the application using the PIT driver.

Parameters

- base – PIT peripheral base address
- config – Pointer to the user's PIT config structure

void PIT_Deinit(PIT_Type *base)

Gates the PIT clock and disables the PIT module.

Parameters

- base – PIT peripheral base address

static inline void PIT_GetDefaultConfig(*pit_config_t* *config)

Fills in the PIT configuration structure with the default settings.

The default values are as follows.

```
config->enableRunInDebug = false;
```

Parameters

- config – Pointer to the configuration structure.

static inline void PIT_SetTimerChainMode(PIT_Type *base, *pit_chnl_t* channel, bool enable)

Enables or disables chaining a timer with the previous timer.

When a timer has a chain mode enabled, it only counts after the previous timer has expired. If the timer n-1 has counted down to 0, counter n decrements the value by one. Each timer is 32-bits, which allows the developers to chain timers together and form a longer timer (64-bits and larger). The first timer (timer 0) can't be chained to any other timer.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number which is chained with the previous timer
- `enable` – Enable or disable chain. `true`: Current timer is chained with the previous timer. `false`: Timer doesn't chain with other timers.

`static inline void PIT_EnableInterrupts(PIT_Type *base, pit_chnl_t channel, uint32_t mask)`
Enables the selected PIT interrupts.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `pit_interrupt_enable_t`

`static inline void PIT_DisableInterrupts(PIT_Type *base, pit_chnl_t channel, uint32_t mask)`
Disables the selected PIT interrupts.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number
- `mask` – The interrupts to disable. This is a logical OR of members of the enumeration `pit_interrupt_enable_t`

`static inline uint32_t PIT_GetEnabledInterrupts(PIT_Type *base, pit_chnl_t channel)`
Gets the enabled PIT interrupts.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `pit_interrupt_enable_t`

`static inline uint32_t PIT_GetStatusFlags(PIT_Type *base, pit_chnl_t channel)`
Gets the PIT status flags.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number

Returns

The status flags. This is the logical OR of members of the enumeration `pit_status_flags_t`

`static inline void PIT_ClearStatusFlags(PIT_Type *base, pit_chnl_t channel, uint32_t mask)`
Clears the PIT status flags.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number
- `mask` – The status flags to clear. This is a logical OR of members of the enumeration `pit_status_flags_t`


```
static inline void PIT_SetTimerPeriod(PIT_Type *base, pit_chnl_t channel, uint32_t count)
```

Sets the timer period in units of count.

Timers begin counting from the value set by this function until it reaches 0, then it generates an interrupt and load this register value again. Writing a new value to this register does not restart the timer. Instead, the value is loaded after the timer expires.

Note: Users can call the utility macros provided in `fsl_common.h` to convert to ticks.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number
- `count` – Timer period in units of ticks

```
static inline uint32_t PIT_GetCurrentTimerCount(PIT_Type *base, pit_chnl_t channel)
```

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: Users can call the utility macros provided in `fsl_common.h` to convert ticks to usec or msec.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number

Returns

Current timer counting value in ticks

```
static inline void PIT_StartTimer(PIT_Type *base, pit_chnl_t channel)
```

Starts the timer counting.

After calling this function, timers load period value, count down to 0 and then load the respective start value again. Each time a timer reaches 0, it generates a trigger pulse and sets the timeout interrupt flag.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number.

```
static inline void PIT_StopTimer(PIT_Type *base, pit_chnl_t channel)
```

Stops the timer counting.

This function stops every timer counting. Timers reload their periods respectively after the next time they call the `PIT_DRV_StartTimer`.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number.

FSL_PIT_DRIVER_VERSION

PIT Driver Version 2.2.0.

enum __pit_chnl

List of PIT channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPIT_Chnl_0

PIT channel number 0

enumerator kPIT_Chnl_1

PIT channel number 1

enumerator kPIT_Chnl_2

PIT channel number 2

enumerator kPIT_Chnl_3

PIT channel number 3

enum __pit_interrupt_enable

List of PIT interrupts.

Values:

enumerator kPIT_TimerInterruptEnable

Timer interrupt enable

enum __pit_status_flags

List of PIT status flags.

Values:

enumerator kPIT_TimerFlag

Timer flag

typedef enum __pit_chnl pit_chnl_t

List of PIT channels.

Note: Actual number of available channels is SoC dependent

typedef enum __pit_interrupt_enable pit_interrupt_enable_t

List of PIT interrupts.

typedef enum __pit_status_flags pit_status_flags_t

List of PIT status flags.

typedef struct __pit_config pit_config_t

PIT configuration structure.

This structure holds the configuration settings for the PIT peripheral. To initialize this structure to reasonable defaults, call the PIT_GetDefaultConfig() function and pass a pointer to your config structure instance.

The configuration structure can be made constant so it resides in flash.

uint64_t PIT_GetLifetimeTimerCount(PIT_Type *base)

Reads the current lifetime counter value.

The lifetime timer is a 64-bit timer which chains timer 0 and timer 1 together. Timer 0 and 1 are chained by calling the PIT_SetTimerChainMode before using this timer. The period of lifetime timer is equal to the “period of timer 0 * period of timer 1”. For the 64-bit value, the higher 32-bit has the value of timer 1, and the lower 32-bit has the value of timer 0.

Parameters

- base – PIT peripheral base address

Returns

Current lifetime timer value

struct __pit_config

#include <fsl_pit.h> PIT configuration structure.

This structure holds the configuration settings for the PIT peripheral. To initialize this structure to reasonable defaults, call the PIT_GetDefaultConfig() function and pass a pointer to your config structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableRunInDebug

true: Timers run in debug mode; false: Timers stop in debug mode

2.38 PMC: Power Management Controller

static inline void PMC_GetVersionId(PMC_Type *base, pmc_version_id_t *versionId)

Gets the PMC version ID.

This function gets the PMC version ID, including major version number, minor version number, and a feature specification number.

Parameters

- base – PMC peripheral base address.
- versionId – Pointer to version ID structure.

void PMC_GetParam(PMC_Type *base, pmc_param_t *param)

Gets the PMC parameter.

This function gets the PMC parameter including the VLPO enable and the HVD enable.

Parameters

- base – PMC peripheral base address.
- param – Pointer to PMC param structure.

void PMC_ConfigureLowVoltDetect(PMC_Type *base, const pmc_low_volt_detect_config_t *config)

Configures the low-voltage detect setting.

This function configures the low-voltage detect setting, including the trip point voltage setting, enables or disables the interrupt, enables or disables the system reset.

Parameters

- base – PMC peripheral base address.
- config – Low-voltage detect configuration structure.

static inline bool PMC_GetLowVoltDetectFlag(PMC_Type *base)

Gets the Low-voltage Detect Flag status.

This function reads the current LVDF status. If it returns 1, a low-voltage event is detected.

Parameters

- base – PMC peripheral base address.

Returns

Current low-voltage detect flag

- true: Low-voltage detected
- false: Low-voltage not detected

static inline void PMC_ClearLowVoltDetectFlag(PMC_Type *base)

Acknowledges clearing the Low-voltage Detect flag.

This function acknowledges the low-voltage detection errors (write 1 to clear LVDF).

Parameters

- base – PMC peripheral base address.

void PMC_ConfigureLowVoltWarning(PMC_Type *base, const *pmc_low_volt_warning_config_t* *config)

Configures the low-voltage warning setting.

This function configures the low-voltage warning setting, including the trip point voltage setting and enabling or disabling the interrupt.

Parameters

- base – PMC peripheral base address.
- config – Low-voltage warning configuration structure.

static inline bool PMC_GetLowVoltWarningFlag(PMC_Type *base)

Gets the Low-voltage Warning Flag status.

This function polls the current LVWF status. When 1 is returned, it indicates a low-voltage warning event. LVWF is set when V Supply transitions below the trip point or after reset and V Supply is already below the V LVW.

Parameters

- base – PMC peripheral base address.

Returns

Current LVWF status

- true: Low-voltage Warning Flag is set.
- false: the Low-voltage Warning does not happen.

static inline void PMC_ClearLowVoltWarningFlag(PMC_Type *base)

Acknowledges the Low-voltage Warning flag.

This function acknowledges the low voltage warning errors (write 1 to clear LVWF).

Parameters

- base – PMC peripheral base address.

void PMC_ConfigureHighVoltDetect(PMC_Type *base, const *pmc_high_volt_detect_config_t* *config)

Configures the high-voltage detect setting.

This function configures the high-voltage detect setting, including the trip point voltage setting, enabling or disabling the interrupt, enabling or disabling the system reset.

Parameters

- base – PMC peripheral base address.
- config – High-voltage detect configuration structure.

```
static inline bool PMC_GetHighVoltDetectFlag(PMC_Type *base)
```

Gets the High-voltage Detect Flag status.

This function reads the current HVDF status. If it returns 1, a low voltage event is detected.

Parameters

- base – PMC peripheral base address.

Returns

Current high-voltage detect flag

- true: High-voltage detected
- false: High-voltage not detected

```
static inline void PMC_ClearHighVoltDetectFlag(PMC_Type *base)
```

Acknowledges clearing the High-voltage Detect flag.

This function acknowledges the high-voltage detection errors (write 1 to clear HVDF).

Parameters

- base – PMC peripheral base address.

```
void PMC_ConfigureBandgapBuffer(PMC_Type *base, const pmc_bandgap_buffer_config_t  
                                *config)
```

Configures the PMC bandgap.

This function configures the PMC bandgap, including the drive select and behavior in low-power mode.

Parameters

- base – PMC peripheral base address.
- config – Pointer to the configuration structure

```
static inline bool PMC_GetPeriphIOIsolationFlag(PMC_Type *base)
```

Gets the acknowledge Peripherals and I/O pads isolation flag.

This function reads the Acknowledge Isolation setting that indicates whether certain peripherals and the I/O pads are in a latched state as a result of having been in the VLLS mode.

Parameters

- base – PMC peripheral base address.
- base – Base address for current PMC instance.

Returns

ACK isolation 0 - Peripherals and I/O pads are in a normal run state. 1 - Certain peripherals and I/O pads are in an isolated and latched state.

```
static inline void PMC_ClearPeriphIOIsolationFlag(PMC_Type *base)
```

Acknowledges the isolation flag to Peripherals and I/O pads.

This function clears the ACK Isolation flag. Writing one to this setting when it is set releases the I/O pads and certain peripherals to their normal run mode state.

Parameters

- base – PMC peripheral base address.

```
static inline bool PMC_IsRegulatorInRunRegulation(PMC_Type *base)
```

Gets the regulator regulation status.

This function returns the regulator to run a regulation status. It provides the current status of the internal voltage regulator.

Parameters

- base – PMC peripheral base address.
- base – Base address for current PMC instance.

Returns

Regulation status 0 - Regulator is in a stop regulation or in transition to/from the regulation. 1 - Regulator is in a run regulation.

FSL_PMC_DRIVER_VERSION

PMC driver version.

Version 2.0.3.

enum _pmc_low_volt_detect_volt_select

Low-voltage Detect Voltage Select.

Values:

enumerator kPMC_LowVoltDetectLowTrip

Low-trip point selected (VLVD = VLVDL)

enumerator kPMC_LowVoltDetectHighTrip

High-trip point selected (VLVD = VLVDH)

enum _pmc_low_volt_warning_volt_select

Low-voltage Warning Voltage Select.

Values:

enumerator kPMC_LowVoltWarningLowTrip

Low-trip point selected (VLVW = VLVW1)

enumerator kPMC_LowVoltWarningMid1Trip

Mid 1 trip point selected (VLVW = VLVW2)

enumerator kPMC_LowVoltWarningMid2Trip

Mid 2 trip point selected (VLVW = VLVW3)

enumerator kPMC_LowVoltWarningHighTrip

High-trip point selected (VLVW = VLVW4)

enum _pmc_high_volt_detect_volt_select

High-voltage Detect Voltage Select.

Values:

enumerator kPMC_HighVoltDetectLowTrip

Low-trip point selected (VHVD = VHVDL)

enumerator kPMC_HighVoltDetectHighTrip

High-trip point selected (VHVD = VHVDH)

enum _pmc_bandgap_buffer_drive_select

Bandgap Buffer Drive Select.

Values:

enumerator kPMC_BandgapBufferDriveLow

Low-drive.

enumerator kPMC_BandgapBufferDriveHigh

High-drive.

enum `_pmc_vlp_freq_option`

VLPx Option.

Values:

enumerator `kPMC_FreqRestrict`

Frequency is restricted in VLPx mode.

enumerator `kPMC_FreqUnrestrict`

Frequency is unrestricted in VLPx mode.

typedef enum `_pmc_low_volt_detect_volt_select` `pmc_low_volt_detect_volt_select_t`

Low-voltage Detect Voltage Select.

typedef enum `_pmc_low_volt_warning_volt_select` `pmc_low_volt_warning_volt_select_t`

Low-voltage Warning Voltage Select.

typedef enum `_pmc_high_volt_detect_volt_select` `pmc_high_volt_detect_volt_select_t`

High-voltage Detect Voltage Select.

typedef enum `_pmc_bandgap_buffer_drive_select` `pmc_bandgap_buffer_drive_select_t`

Bandgap Buffer Drive Select.

typedef enum `_pmc_vlp_freq_option` `pmc_vlp_freq_mode_t`

VLPx Option.

typedef struct `_pmc_version_id` `pmc_version_id_t`

IP version ID definition.

typedef struct `_pmc_param` `pmc_param_t`

IP parameter definition.

typedef struct `_pmc_low_volt_detect_config` `pmc_low_volt_detect_config_t`

Low-voltage Detect Configuration Structure.

typedef struct `_pmc_low_volt_warning_config` `pmc_low_volt_warning_config_t`

Low-voltage Warning Configuration Structure.

typedef struct `_pmc_high_volt_detect_config` `pmc_high_volt_detect_config_t`

High-voltage Detect Configuration Structure.

typedef struct `_pmc_bandgap_buffer_config` `pmc_bandgap_buffer_config_t`

Bandgap Buffer configuration.

struct `_pmc_version_id`

#include <fsl_pmc.h> IP version ID definition.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor version number.

uint8_t major

Major version number.

struct `_pmc_param`

#include <fsl_pmc.h> IP parameter definition.

Public Members

bool vlpoEnable
VLPO enable.

bool hvdEnable
HVD enable.

struct __pmc_low_volt_detect_config
#include <fsl_pmc.h> Low-voltage Detect Configuration Structure.

Public Members

bool enableInt
Enable interrupt when Low-voltage detect

bool enableReset
Enable system reset when Low-voltage detect

pmc_low_volt_detect_volt_select_t voltSelect
Low-voltage detect trip point voltage selection

struct __pmc_low_volt_warning_config
#include <fsl_pmc.h> Low-voltage Warning Configuration Structure.

Public Members

bool enableInt
Enable interrupt when low-voltage warning

pmc_low_volt_warning_volt_select_t voltSelect
Low-voltage warning trip point voltage selection

struct __pmc_high_volt_detect_config
#include <fsl_pmc.h> High-voltage Detect Configuration Structure.

Public Members

bool enableInt
Enable interrupt when high-voltage detect

bool enableReset
Enable system reset when high-voltage detect

pmc_high_volt_detect_volt_select_t voltSelect
High-voltage detect trip point voltage selection

struct __pmc_bandgap_buffer_config
#include <fsl_pmc.h> Bandgap Buffer configuration.

Public Members

bool enable
Enable bandgap buffer.

bool enableInLowPowerMode
Enable bandgap buffer in low-power mode.

pmc_bandgap_buffer_drive_select_t drive
Bandgap buffer drive select.

2.39 PORT: Port Control and Interrupts

static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const *port_pin_config_t* *config)

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const *port_pin_config_t* *config)

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask, *port_interrupt_t* config)

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- `base` – PORT peripheral base pointer.
- `mask` – PORT pin number macro.
- `config` – PORT pin interrupt configuration.
 - `kPORT_InterruptOrDMADisabled`: Interrupt/DMA request disabled.
 - `kPORT_DMARisingEdge` : DMA request on rising edge(if the DMA requests exit).
 - `kPORT_DMAFallingEdge`: DMA request on falling edge(if the DMA requests exit).
 - `kPORT_DMAEitherEdge` : DMA request on either edge(if the DMA requests exit).
 - `kPORT_FlagRisingEdge` : Flag sets on rising edge(if the Flag states exit).
 - `kPORT_FlagFallingEdge` : Flag sets on falling edge(if the Flag states exit).
 - `kPORT_FlagEitherEdge` : Flag sets on either edge(if the Flag states exit).
 - `kPORT_InterruptLogicZero` : Interrupt when logic zero.
 - `kPORT_InterruptRisingEdge` : Interrupt on rising edge.
 - `kPORT_InterruptFallingEdge`: Interrupt on falling edge.
 - `kPORT_InterruptEitherEdge` : Interrupt on either edge.
 - `kPORT_InterruptLogicOne` : Interrupt when logic one.
 - `kPORT_ActiveHighTriggerOutputEnable` : Enable active high-trigger output (if the trigger states exit).
 - `kPORT_ActiveLowTriggerOutputEnable` : Enable active low-trigger output (if the trigger states exit)..

`static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, port_mux_t mux)`

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the `PORT_SetPinsConfig`, because the `PORT_SetPinsConfig` need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : `kPORT_PinDisabledOrAnalog`). This function is recommended to use to reset the pin mux

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `mux` – pin muxing slot selection.
 - `kPORT_PinDisabledOrAnalog`: Pin disabled or work in analog function.
 - `kPORT_MuxAsGpio` : Set as GPIO.
 - `kPORT_MuxAlt2` : chip-specific.
 - `kPORT_MuxAlt3` : chip-specific.
 - `kPORT_MuxAlt4` : chip-specific.
 - `kPORT_MuxAlt5` : chip-specific.
 - `kPORT_MuxAlt6` : chip-specific.
 - `kPORT_MuxAlt7` : chip-specific.

```
static inline void PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)
```

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- enable – PORT digital filter configuration.

```
static inline void PORT_SetDigitalFilterConfig(PORT_Type *base, const  
                                              port_digital_filter_config_t *config)
```

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- config – PORT digital filter configuration structure.

```
static inline void PORT_SetPinInterruptConfig(PORT_Type *base, uint32_t pin, port_interrupt_t  
                                              config)
```

Configures the port pin interrupt/DMA request.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT pin interrupt configuration.
 - kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kPORT_InterruptLogicZero : Interrupt when logic zero.
 - kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - kPORT_InterruptEitherEdge : Interrupt on either edge.
 - kPORT_InterruptLogicOne : Interrupt when logic one.
 - kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

```
static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
```

Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.

- pin – PORT pin number.
- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline uint32_t PORT_GetPinsInterruptFlags(PORT_Type *base)

Reads the whole port status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – PORT peripheral base pointer.

Returns

Current port interrupt status flags, for example, 0x00010001 means the pin 0 and 16 have the interrupt.

static inline void PORT_ClearPinsInterruptFlags(PORT_Type *base, uint32_t mask)

Clears the multiple pin interrupt status flag.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum _port_pull

Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable

Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown

Internal pull-down resistor is enabled.

enumerator kPORT_PullUp

Internal pull-up resistor is enabled.

enum _port_slew_rate

Slew rate selection.

Values:

enumerator kPORT_FastSlewRate

Fast slew rate is configured.

enumerator kPORT_SlowSlewRate

Slow slew rate is configured.

enum _port_open_drain_enable

Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable
Open drain output is disabled.

enumerator kPORT_OpenDrainEnable
Open drain output is enabled.

enum __port_passive_filter_enable
Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable
Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable
Passive input filter is enabled.

enum __port_drive_strength
Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength
Low-drive strength is configured.

enumerator kPORT_HighDriveStrength
High-drive strength is configured.

enum __port_lock_register
Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister
Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister
Pin Control Register fields [15:0] are locked.

enum __port_mux
Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog
Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio
Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0
Chip-specific

enumerator kPORT_MuxAlt1
Chip-specific

enumerator kPORT_MuxAlt2
Chip-specific

enumerator kPORT_MuxAlt3
Chip-specific

enumerator kPORT_MuxAlt4
Chip-specific

enumerator kPORT_MuxAlt5

Chip-specific

enumerator kPORT_MuxAlt6

Chip-specific

enumerator kPORT_MuxAlt7

Chip-specific

enumerator kPORT_MuxAlt8

Chip-specific

enumerator kPORT_MuxAlt9

Chip-specific

enumerator kPORT_MuxAlt10

Chip-specific

enumerator kPORT_MuxAlt11

Chip-specific

enumerator kPORT_MuxAlt12

Chip-specific

enumerator kPORT_MuxAlt13

Chip-specific

enumerator kPORT_MuxAlt14

Chip-specific

enumerator kPORT_MuxAlt15

Chip-specific

enum _port_interrupt

Configures the interrupt generation condition.

Values:

enumerator kPORT_InterruptOrDMADisabled

Interrupt/DMA request is disabled.

enumerator kPORT_DMARisingEdge

DMA request on rising edge.

enumerator kPORT_DMAFallingEdge

DMA request on falling edge.

enumerator kPORT_DMAEitherEdge

DMA request on either edge.

enumerator kPORT_FlagRisingEdge

Flag sets on rising edge.

enumerator kPORT_FlagFallingEdge

Flag sets on falling edge.

enumerator kPORT_FlagEitherEdge

Flag sets on either edge.

enumerator kPORT_InterruptLogicZero

Interrupt when logic zero.

enumerator kPORT_InterruptRisingEdge

Interrupt on rising edge.

enumerator kPORT_InterruptFallingEdge

Interrupt on falling edge.

enumerator kPORT_InterruptEitherEdge

Interrupt on either edge.

enumerator kPORT_InterruptLogicOne

Interrupt when logic one.

enumerator kPORT_ActiveHighTriggerOutputEnable

Enable active high-trigger output.

enumerator kPORT_ActiveLowTriggerOutputEnable

Enable active low-trigger output.

enum _port_digital_filter_clock_source

Digital filter clock source selection.

Values:

enumerator kPORT_BusClock

Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock

Digital filters are clocked by the 1 kHz LPO clock.

typedef enum _port_mux port_mux_t

Pin mux selection.

typedef enum _port_interrupt port_interrupt_t

Configures the interrupt generation condition.

typedef enum _port_digital_filter_clock_source port_digital_filter_clock_source_t

Digital filter clock source selection.

typedef struct _port_digital_filter_config port_digital_filter_config_t

PORT digital filter feature configuration definition.

typedef struct _port_pin_config port_pin_config_t

PORT pin configuration structure.

FSL_COMPONENT_ID

struct _port_digital_filter_config

#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t digitalFilterWidth

Set digital filter width

port_digital_filter_clock_source_t clockSource

Set digital filter clockSource

struct _port_pin_config

#include <fsl_port.h> PORT pin configuration structure.

Public Members

uint16_t pullSelect
No-pull/pull-down/pull-up select

uint16_t slewRate
Fast/slow slew rate Configure

uint16_t passiveFilterEnable
Passive filter enable/disable

uint16_t openDrainEnable
Open drain enable/disable

uint16_t driveStrength
Fast/slow drive strength configure

uint16_t lockRegister
Lock/unlock the PCR field[15:0]

2.40 RCM: Reset Control Module Driver

```
static inline void RCM_GetVersionId(RCM_Type *base, rcm_version_id_t *versionId)
```

Gets the RCM version ID.

This function gets the RCM version ID including the major version number, the minor version number, and the feature specification number.

Parameters

- base – RCM peripheral base address.
- versionId – Pointer to the version ID structure.

```
static inline uint32_t RCM_GetResetSourceImplementedStatus(RCM_Type *base)
```

Gets the reset source implemented status.

This function gets the RCM parameter that indicates whether the corresponding reset source is implemented. Use source masks defined in the `rcm_reset_source_t` to get the desired source status.

This is an example.

```
uint32_t status;

To test whether the MCU is reset using Watchdog.
status = RCM_GetResetSourceImplementedStatus(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source implemented status bit map.

```
static inline uint32_t RCM_GetPreviousResetSources(RCM_Type *base)
```

Gets the reset source status which caused a previous reset.

This function gets the current reset source status. Use source masks defined in the `rcm_reset_source_t` to get the desired source status.

This is an example.


```
uint32_t resetStatus;
```

To get **all** reset source statuses.

```
resetStatus = RCM_GetPreviousResetSources(RCM) & kRCM_SourceAll;
```

To test whether the MCU **is** reset using Watchdog.

```
resetStatus = RCM_GetPreviousResetSources(RCM) & kRCM_SourceWdog;
```

To test multiple reset sources.

```
resetStatus = RCM_GetPreviousResetSources(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source status bit map.

```
static inline uint32_t RCM_GetStickyResetSources(RCM_Type *base)
```

Gets the sticky reset source status.

This function gets the current reset source status that has not been cleared by software for a specific source.

This is an example.

```
uint32_t resetStatus;
```

To get **all** reset source statuses.

```
resetStatus = RCM_GetStickyResetSources(RCM) & kRCM_SourceAll;
```

To test whether the MCU **is** reset using Watchdog.

```
resetStatus = RCM_GetStickyResetSources(RCM) & kRCM_SourceWdog;
```

To test multiple reset sources.

```
resetStatus = RCM_GetStickyResetSources(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source status bit map.

```
static inline void RCM_ClearStickyResetSources(RCM_Type *base, uint32_t sourceMasks)
```

Clears the sticky reset source status.

This function clears the sticky system reset flags indicated by source masks.

This is an example.

```
Clears multiple reset sources.
```

```
RCM_ClearStickyResetSources(kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.
- sourceMasks – reset source status bit map

```
void RCM_ConfigureResetPinFilter(RCM_Type *base, const rcm_reset_pin_filter_config_t *config)
```

Configures the reset pin filter.

This function sets the reset pin filter including the filter source, filter width, and so on.

Parameters

- base – RCM peripheral base address.
- config – Pointer to the configuration structure.

static inline bool RCM_GetEasyPortModePinStatus(RCM_Type *base)

Gets the EZP_MS_B pin assert status.

This function gets the easy port mode status (EZP_MS_B) pin assert status.

Parameters

- base – RCM peripheral base address.

Returns

status true - asserted, false - reasserted

static inline *rcm_boot_rom_config_t* RCM_GetBootRomSource(RCM_Type *base)

Gets the ROM boot source.

This function gets the ROM boot source during the last chip reset.

Parameters

- base – RCM peripheral base address.

Returns

The ROM boot source.

static inline void RCM_ClearBootRomSource(RCM_Type *base)

Clears the ROM boot source flag.

This function clears the ROM boot source flag.

Parameters

- base – Register base address of RCM

void RCM_SetForceBootRomSource(RCM_Type *base, *rcm_boot_rom_config_t* config)

Forces the boot from ROM.

This function forces booting from ROM during all subsequent system resets.

Parameters

- base – RCM peripheral base address.
- config – Boot configuration.

static inline void RCM_SetSystemResetInterruptConfig(RCM_Type *base, uint32_t intMask,
rcm_reset_delay_t delay)

Sets the system reset interrupt configuration.

For a graceful shut down, the RCM supports delaying the assertion of the system reset for a period of time when the reset interrupt is generated. This function can be used to enable the interrupt and the delay period. The interrupts are passed in as bit mask. See *rcm_int_t* for details. For example, to delay a reset for 512 LPO cycles after the WDOG timeout or loss-of-clock occurs, configure as follows: `RCM_SetSystemResetInterruptConfig(kRCM_IntWatchDog | kRCM_IntLossOfClk, kRCM_ResetDelay512Lpo);`

Parameters

- base – RCM peripheral base address.
- intMask – Bit mask of the system reset interrupts to enable. See *rcm_interrupt_enable_t* for details.
- delay – Bit mask of the system reset interrupts to enable.

FSL_RCM_DRIVER_VERSION

RCM driver version 2.0.4.

enum _rcm_reset_source

System Reset Source Name definitions.

Values:

enumerator kRCM_SourceWakeup

Low-leakage wakeup reset

enumerator kRCM_SourceLvd

Low-voltage detect reset

enumerator kRCM_SourceLoc

Loss of clock reset

enumerator kRCM_SourceLol

Loss of lock reset

enumerator kRCM_SourceWdog

Watchdog reset

enumerator kRCM_SourcePin

External pin reset

enumerator kRCM_SourcePor

Power on reset

enumerator kRCM_SourceJtag

JTAG generated reset

enumerator kRCM_SourceLockup

Core lock up reset

enumerator kRCM_SourceSw

Software reset

enumerator kRCM_SourceMdmap

MDM-AP system reset

enumerator kRCM_SourceEzpt

EzPort reset

enumerator kRCM_SourceSackerr

Parameter could get all reset flags

enumerator kRCM_SourceAll

enum _rcm_run_wait_filter_mode

Reset pin filter select in Run and Wait modes.

Values:

enumerator kRCM_FilterDisable

All filtering disabled

enumerator kRCM_FilterBusClock

Bus clock filter enabled

enumerator kRCM_FilterLpoClock

LPO clock filter enabled

enum _rcm_boot_rom_config

Boot from ROM configuration.

Values:

enumerator kRCM_BootFlash

Boot from flash

enumerator kRCM_BootRomCfg0

Boot from boot ROM due to BOOTCFG0

enumerator kRCM_BootRomFopt

Boot from boot ROM due to FOPT[7]

enumerator kRCM_BootRomBoth

Boot from boot ROM due to both BOOTCFG0 and FOPT[7]

enum _rcm_reset_delay

Maximum delay time from interrupt asserts to system reset.

Values:

enumerator kRCM_ResetDelay8Lpo

Delay 8 LPO cycles.

enumerator kRCM_ResetDelay32Lpo

Delay 32 LPO cycles.

enumerator kRCM_ResetDelay128Lpo

Delay 128 LPO cycles.

enumerator kRCM_ResetDelay512Lpo

Delay 512 LPO cycles.

enum _rcm_interrupt_enable

System reset interrupt enable bit definitions.

Values:

enumerator kRCM_IntNone

No interrupt enabled.

enumerator kRCM_IntLossOfClk

Loss of clock interrupt.

enumerator kRCM_IntLossOfLock

Loss of lock interrupt.

enumerator kRCM_IntWatchDog

Watch dog interrupt.

enumerator kRCM_IntExternalPin

External pin interrupt.

enumerator kRCM_IntGlobal

Global interrupts.

enumerator kRCM_IntCoreLockup

Core lock up interrupt

enumerator kRCM_IntSoftware

software interrupt

enumerator kRCM_IntStopModeAckErr
Stop mode ACK error interrupt.

enumerator kRCM_IntCore1
Core 1 interrupt.

enumerator kRCM_IntAll
Enable all interrupts.

typedef enum *_rcm_reset_source* rcm_reset_source_t
System Reset Source Name definitions.

typedef enum *_rcm_run_wait_filter_mode* rcm_run_wait_filter_mode_t
Reset pin filter select in Run and Wait modes.

typedef enum *_rcm_boot_rom_config* rcm_boot_rom_config_t
Boot from ROM configuration.

typedef enum *_rcm_reset_delay* rcm_reset_delay_t
Maximum delay time from interrupt asserts to system reset.

typedef enum *_rcm_interrupt_enable* rcm_interrupt_enable_t
System reset interrupt enable bit definitions.

typedef struct *_rcm_version_id* rcm_version_id_t
IP version ID definition.

typedef struct *_rcm_reset_pin_filter_config* rcm_reset_pin_filter_config_t
Reset pin filter configuration.

struct *_rcm_version_id*
#include <fsl_rcm.h> IP version ID definition.

Public Members

uint16_t feature
Feature Specification Number.

uint8_t minor
Minor version number.

uint8_t major
Major version number.

struct *_rcm_reset_pin_filter_config*
#include <fsl_rcm.h> Reset pin filter configuration.

Public Members

bool enableFilterInStop
Reset pin filter select in stop mode.

rcm_run_wait_filter_mode_t filterInRunWait
Reset pin filter in run/wait mode.

uint8_t busClockFilterCount
Reset pin bus clock filter width.

2.41 RNGA: Random Number Generator Accelerator Driver

FSL_RNGA_DRIVER_VERSION

RNGA driver version 2.0.2.

enum _rnga_mode

RNGA working mode.

Values:

enumerator kRNGA_ModeNormal

Normal Mode. The ring-oscillator clocks are active; RNGA generates entropy (randomness) from the clocks and stores it in shift registers.

enumerator kRNGA_ModeSleep

Sleep Mode. The ring-oscillator clocks are inactive; RNGA does not generate entropy.

typedef enum _rnga_mode rnga_mode_t

RNGA working mode.

void RNGA_Init(RNG_Type *base)

Initializes the RNGA.

This function initializes the RNGA. When called, the RNGA entropy generation starts immediately.

Parameters

- base – RNGA base address

void RNGA_Deinit(RNG_Type *base)

Shuts down the RNGA.

This function shuts down the RNGA.

Parameters

- base – RNGA base address

status_t RNGA_GetRandomData(RNG_Type *base, void *data, size_t data_size)

Gets random data.

This function gets random data from the RNGA.

Parameters

- base – RNGA base address
- data – pointer to user buffer to be filled by random data
- data_size – size of data in bytes

Returns

RNGA status

void RNGA_Seed(RNG_Type *base, uint32_t seed)

Feeds the RNGA module.

This function inputs an entropy value that the RNGA uses to seed its pseudo-random algorithm.

Parameters

- base – RNGA base address
- seed – input seed value

```
void RNGA_SetMode(RNG_Type *base, rnga_mode_t mode)
```

Sets the RNGA in normal mode or sleep mode.

This function sets the RNGA in sleep mode or normal mode.

Parameters

- base – RNGA base address
- mode – normal mode or sleep mode

```
rnga_mode_t RNGA_GetMode(RNG_Type *base)
```

Gets the RNGA working mode.

This function gets the RNGA working mode.

Parameters

- base – RNGA base address

Returns

normal mode or sleep mode

2.42 RTC: Real Time Clock

```
void RTC_Init(RTC_Type *base, const rtc_config_t *config)
```

Ungates the RTC clock and configures the peripheral for basic operation.

This function issues a software reset if the timer invalid flag is set.

Note: This API should be called at the beginning of the application using the RTC driver.

Parameters

- base – RTC peripheral base address
- config – Pointer to the user's RTC configuration structure.

```
static inline void RTC_Deinit(RTC_Type *base)
```

Stops the timer and gate the RTC clock.

Parameters

- base – RTC peripheral base address

```
void RTC_GetDefaultConfig(rtc_config_t *config)
```

Fills in the RTC config struct with the default settings.

The default values are as follows.

```
config->wakeupSelect = false;
config->updateMode = false;
config->supervisorAccess = false;
config->compensationInterval = 0;
config->compensationTime = 0;
```

Parameters

- config – Pointer to the user's RTC configuration structure.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the RTC date and time according to the given time structure.

The RTC counter must be stopped prior to calling this function because writes to the RTC seconds register fail if the RTC counter is running.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

Returns

kStatus_Success: Success in setting the time and starting the RTC
kStatus_InvalidArgument: Error because the datetime format is incorrect

void RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Gets the RTC time and stores it in the given time structure.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

status_t RTC_SetAlarm(RTC_Type *base, const *rtc_datetime_t* *alarmTime)

Sets the RTC alarm time.

The function checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error.

Parameters

- base – RTC peripheral base address
- alarmTime – Pointer to the structure where the alarm time is stored.

Returns

kStatus_Success: success in setting the RTC alarm
kStatus_InvalidArgument: Error because the alarm datetime format is incorrect
kStatus_Fail: Error because the alarm time has already passed

void RTC_GetAlarm(RTC_Type *base, *rtc_datetime_t* *datetime)

Returns the RTC alarm time.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the alarm date and time details are stored.

void RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *rtc_interrupt_enable_t*

void RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address

- mask – The interrupts to enable. This is a logical OR of members of the enumeration `rtc_interrupt_enable_t`

`uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)`

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `rtc_interrupt_enable_t`

`uint32_t RTC_GetStatusFlags(RTC_Type *base)`

Gets the RTC status flags.

Parameters

- base – RTC peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `rtc_status_flags_t`

`void RTC_ClearStatusFlags(RTC_Type *base, uint32_t mask)`

Clears the RTC status flags.

Parameters

- base – RTC peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `rtc_status_flags_t`

`static inline void RTC_EnableOscillatorClock(RTC_Type *base, bool enable)`

Enable/Disable RTC 32kHz Oscillator clock.

Note: After setting this bit, wait the oscillator startup time before enabling the time counter to allow the 32.768 kHz clock time to stabilize.

Parameters

- base – RTC peripheral base address
- enable – Enable/Disable RTC 32.768 kHz clock

`static inline void RTC_SetClockSource(RTC_Type *base)`

Set RTC clock source.

Deprecated:

Do not use this function. It has been superceded by `RTC_EnableOscillatorClock`

Note: After setting this bit, wait the oscillator startup time before enabling the time counter to allow the 32.768 kHz clock time to stabilize.

Parameters

- base – RTC peripheral base address

static inline void RTC_EnableLPOClock(RTC_Type *base, bool enable)

Enable/Disable RTC 1kHz LPO clock.

Note: After setting this bit, RTC prescaler increments using the LPO 1kHz clock and not the RTC 32kHz crystal clock.

Parameters

- base – RTC peripheral base address
- enable – Enable/Disable RTC 1kHz LPO clock

static inline void RTC_StartTimer(RTC_Type *base)

Starts the RTC time counter.

After calling this function, the timer counter increments once a second provided SR[TOF] or SR[TIF] are not set.

Parameters

- base – RTC peripheral base address

static inline void RTC_StopTimer(RTC_Type *base)

Stops the RTC time counter.

RTC's seconds register can be written to only when the timer is stopped.

Parameters

- base – RTC peripheral base address

void RTC_GetMonotonicCounter(RTC_Type *base, uint64_t *counter)

Reads the values of the Monotonic Counter High and Monotonic Counter Low and returns them as a single value.

Parameters

- base – RTC peripheral base address
- counter – Pointer to variable where the value is stored.

void RTC_SetMonotonicCounter(RTC_Type *base, uint64_t counter)

Writes values Monotonic Counter High and Monotonic Counter Low by decomposing the given single value. The Monotonic Overflow Flag in RTC_SR is cleared due to the API.

Parameters

- base – RTC peripheral base address
- counter – Counter value

status_t RTC_IncrementMonotonicCounter(RTC_Type *base)

Increments the Monotonic Counter by one.

Increments the Monotonic Counter (registers RTC_MCLR and RTC_MCHR accordingly) by setting the monotonic counter enable (MER[MCE]) and then writing to the RTC_MCLR register. A write to the monotonic counter low that causes it to overflow also increments the monotonic counter high.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success: success
kStatus_Fail: error occurred, either time invalid or monotonic overflow flag was found

FSL_RTC_DRIVER_VERSION

Version 2.3.3

enum _rtc_interrupt_enable

List of RTC interrupts.

Values:

enumerator kRTC_TimeInvalidInterruptEnable

Time invalid interrupt.

enumerator kRTC_TimeOverflowInterruptEnable

Time overflow interrupt.

enumerator kRTC_AlarmInterruptEnable

Alarm interrupt.

enumerator kRTC_MonotonicOverflowInterruptEnable

Monotonic Overflow Interrupt Enable

enumerator kRTC_SecondsInterruptEnable

Seconds interrupt.

enumerator kRTC_TestModeInterruptEnable

enumerator kRTC_FlashSecurityInterruptEnable

enumerator kRTC_TamperPinInterruptEnable

enumerator kRTC_SecurityModuleInterruptEnable

enumerator kRTC_LossOfClockInterruptEnable

enum _rtc_status_flags

List of RTC flags.

Values:

enumerator kRTC_TimeInvalidFlag

Time invalid flag

enumerator kRTC_TimeOverflowFlag

Time overflow flag

enumerator kRTC_AlarmFlag

Alarm flag

enumerator kRTC_MonotonicOverflowFlag

Monotonic Overflow Flag

enumerator kRTC_TamperInterruptDetectFlag

Tamper interrupt detect flag

enumerator kRTC_TestModeFlag

enumerator kRTC_FlashSecurityFlag

enumerator kRTC_TamperPinFlag

enumerator kRTC_SecurityTamperFlag

enumerator kRTC_LossOfClockTamperFlag

enum *_rtc_osc_cap_load*

List of RTC Oscillator capacitor load settings.

Values:

enumerator *kRTC_Capacitor_2p*

2 pF capacitor load

enumerator *kRTC_Capacitor_4p*

4 pF capacitor load

enumerator *kRTC_Capacitor_8p*

8 pF capacitor load

enumerator *kRTC_Capacitor_16p*

16 pF capacitor load

typedef enum *_rtc_interrupt_enable* *rtc_interrupt_enable_t*

List of RTC interrupts.

typedef enum *_rtc_status_flags* *rtc_status_flags_t*

List of RTC flags.

typedef enum *_rtc_osc_cap_load* *rtc_osc_cap_load_t*

List of RTC Oscillator capacitor load settings.

typedef struct *_rtc_datetime* *rtc_datetime_t*

Structure is used to hold the date and time.

typedef struct *_rtc_pin_config* *rtc_pin_config_t*

RTC pin config structure.

typedef struct *_rtc_config* *rtc_config_t*

RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the `RTC_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

static inline uint32_t `RTC_GetTamperTimeSeconds(RTC_Type *base)`

Get the RTC tamper time seconds.

Parameters

- *base* – RTC peripheral base address

static inline void `RTC_SetOscCapLoad(RTC_Type *base, uint32_t capLoad)`

This function sets the specified capacitor configuration for the RTC oscillator.

Parameters

- *base* – RTC peripheral base address
- *capLoad* – Oscillator loads to enable. This is a logical OR of members of the enumeration `rtc_osc_cap_load_t`

static inline void `RTC_Reset(RTC_Type *base)`

Performs a software reset on the RTC module.

This resets all RTC registers except for the SWR bit and the `RTC_WAR` and `RTC_RAR` registers. The SWR bit is cleared by software explicitly clearing it.

Parameters

- *base* – RTC peripheral base address

```
static inline void RTC_EnableWakeUpPin(RTC_Type *base, bool enable)
```

Enables or disables the RTC Wakeup Pin Operation.

This function enable or disable RTC Wakeup Pin. The wakeup pin is optional and not available on all devices.

Parameters

- base – RTC_Type base pointer.
- enable – true to enable, false to disable.

```
struct __rtc_datetime
```

#include <fsl_rtc.h> Structure is used to hold the date and time.

Public Members

```
uint16_t year
```

Range from 1970 to 2099.

```
uint8_t month
```

Range from 1 to 12.

```
uint8_t day
```

Range from 1 to 31 (depending on month).

```
uint8_t hour
```

Range from 0 to 23.

```
uint8_t minute
```

Range from 0 to 59.

```
uint8_t second
```

Range from 0 to 59.

```
struct __rtc_pin_config
```

#include <fsl_rtc.h> RTC pin config structure.

Public Members

```
bool inputLogic
```

true: Tamper pin input data is logic one. false: Tamper pin input data is logic zero.

```
bool pinActiveLow
```

true: Tamper pin is active low. false: Tamper pin is active high.

```
bool filterEnable
```

true: Input filter is enabled on the tamper pin. false: Input filter is disabled on the tamper pin.

```
bool pullSelectNegate
```

true: Tamper pin pull resistor direction will negate the tamper pin. false: Tamper pin pull resistor direction will assert the tamper pin.

```
bool pullEnable
```

true: Pull resistor is enabled on tamper pin. false: Pull resistor is disabled on tamper pin.

struct _rtc_config

#include <fsl_rtc.h> RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool wakeupSelect

true: Wakeup pin outputs the 32 KHz clock; false: Wakeup pin used to wakeup the chip

bool updateMode

true: Registers can be written even when locked under certain conditions, false: No writes allowed when registers are locked

bool supervisorAccess

true: Non-supervisor accesses are allowed; false: Non-supervisor accesses are not supported

uint32_t compensationInterval

Compensation interval that is written to the CIR field in RTC TCR Register

uint32_t compensationTime

Compensation time that is written to the TCR field in RTC TCR Register

2.43 SAI: Serial Audio Interface

2.44 SAI Driver

void SAI_Init(I2S_Type *base)

Initializes the SAI peripheral.

This API gates the SAI clock. The SAI module can't operate unless SAI_Init is called to enable the clock.

Parameters

- base – SAI base pointer.

void SAI_Deinit(I2S_Type *base)

De-initializes the SAI peripheral.

This API gates the SAI clock. The SAI module can't operate unless SAI_TxInit or SAI_RxInit is called to enable the clock.

Parameters

- base – SAI base pointer.

void SAI_TxReset(I2S_Type *base)

Resets the SAI Tx.

This function enables the software reset and FIFO reset of SAI Tx. After reset, clear the reset bit.

Parameters

- base – SAI base pointer

void SAI_RxReset(I2S_Type *base)

Resets the SAI Rx.

This function enables the software reset and FIFO reset of SAI Rx. After reset, clear the reset bit.

Parameters

- base – SAI base pointer

void SAI_TxEnable(I2S_Type *base, bool enable)

Enables/disables the SAI Tx.

Parameters

- base – SAI base pointer.
- enable – True means enable SAI Tx, false means disable.

void SAI_RxEnable(I2S_Type *base, bool enable)

Enables/disables the SAI Rx.

Parameters

- base – SAI base pointer.
- enable – True means enable SAI Rx, false means disable.

static inline void SAI_TxSetBitClockDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Rx bit clock direction.

Select bit clock direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference *sai_master_slave_t*.

static inline void SAI_RxSetBitClockDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Rx bit clock direction.

Select bit clock direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference *sai_master_slave_t*.

static inline void SAI_RxSetFrameSyncDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Rx frame sync direction.

Select frame sync direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference *sai_master_slave_t*.

static inline void SAI_TxSetFrameSyncDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Tx frame sync direction.

Select frame sync direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference *sai_master_slave_t*.

```
void SAI_TxSetBitClockRate(I2S_Type *base, uint32_t sourceClockHz, uint32_t sampleRate,  
                           uint32_t bitWidth, uint32_t channelNumbers)
```

Transmitter bit clock rate configurations.

Parameters

- base – SAI base pointer.
- sourceClockHz – Bit clock source frequency.
- sampleRate – Audio data sample rate.
- bitWidth – Audio data bitWidth.
- channelNumbers – Audio channel numbers.

```
void SAI_RxSetBitClockRate(I2S_Type *base, uint32_t sourceClockHz, uint32_t sampleRate,  
                           uint32_t bitWidth, uint32_t channelNumbers)
```

Receiver bit clock rate configurations.

Parameters

- base – SAI base pointer.
- sourceClockHz – Bit clock source frequency.
- sampleRate – Audio data sample rate.
- bitWidth – Audio data bitWidth.
- channelNumbers – Audio channel numbers.

```
void SAI_TxSetBitclockConfig(I2S_Type *base, sai_master_slave_t masterSlave, sai_bit_clock_t  
                             *config)
```

Transmitter Bit clock configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – bit clock other configurations, can be NULL in slave mode.

```
void SAI_RxSetBitclockConfig(I2S_Type *base, sai_master_slave_t masterSlave, sai_bit_clock_t  
                             *config)
```

Receiver Bit clock configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – bit clock other configurations, can be NULL in slave mode.

```
void SAI_SetMasterClockConfig(I2S_Type *base, sai_master_clock_t *config)
```

Master clock configurations.

Parameters

- base – SAI base pointer.
- config – master clock configurations.

```
void SAI_TxSetFifoConfig(I2S_Type *base, sai_fifo_t *config)
```

SAI transmitter fifo configurations.

Parameters

- base – SAI base pointer.

- config – fifo configurations.

void SAI_RxSetFifoConfig(I2S_Type *base, *sai_fifo_t* *config)

SAI receiver fifo configurations.

Parameters

- base – SAI base pointer.
- config – fifo configurations.

void SAI_TxSetFrameSyncConfig(I2S_Type *base, *sai_master_slave_t* masterSlave, *sai_frame_sync_t* *config)

SAI transmitter Frame sync configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – frame sync configurations, can be NULL in slave mode.

void SAI_RxSetFrameSyncConfig(I2S_Type *base, *sai_master_slave_t* masterSlave, *sai_frame_sync_t* *config)

SAI receiver Frame sync configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – frame sync configurations, can be NULL in slave mode.

void SAI_TxSetSerialDataConfig(I2S_Type *base, *sai_serial_data_t* *config)

SAI transmitter Serial data configurations.

Parameters

- base – SAI base pointer.
- config – serial data configurations.

void SAI_RxSetSerialDataConfig(I2S_Type *base, *sai_serial_data_t* *config)

SAI receiver Serial data configurations.

Parameters

- base – SAI base pointer.
- config – serial data configurations.

void SAI_TxSetConfig(I2S_Type *base, *sai_transceiver_t* *config)

SAI transmitter configurations.

Parameters

- base – SAI base pointer.
- config – transmitter configurations.

void SAI_RxSetConfig(I2S_Type *base, *sai_transceiver_t* *config)

SAI receiver configurations.

Parameters

- base – SAI base pointer.
- config – receiver configurations.

```
void SAI_GetClassicI2SConfig(sai_transceiver_t *config, sai_word_width_t bitWidth,  
                             sai_mono_stereo_t mode, uint32_t saiChannelMask)
```

Get classic I2S mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetLeftJustifiedConfig(sai_transceiver_t *config, sai_word_width_t bitWidth,  
                                sai_mono_stereo_t mode, uint32_t saiChannelMask)
```

Get left justified mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetRightJustifiedConfig(sai_transceiver_t *config, sai_word_width_t bitWidth,  
                                  sai_mono_stereo_t mode, uint32_t saiChannelMask)
```

Get right justified mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetTDMConfig(sai_transceiver_t *config, sai_frame_sync_len_t frameSyncWidth,  
                      sai_word_width_t bitWidth, uint32_t dataWordNum, uint32_t  
                      saiChannelMask)
```

Get TDM mode configurations.

Parameters

- config – transceiver configurations.
- frameSyncWidth – length of frame sync.
- bitWidth – audio data word width.
- dataWordNum – word number in one frame.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetDSPConfig(sai_transceiver_t *config, sai_frame_sync_len_t frameSyncWidth,  
                      sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t  
                      saiChannelMask)
```

Get DSP mode configurations.

DSP/PCM MODE B configuration flow for TX. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth, kSAI_Stereo, channelMask)
SAI_TxSetConfig(base, config)
```

Note: DSP mode is also called PCM mode which support MODE A and MODE B, DSP/PCM MODE A configuration flow. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth, kSAI_Stereo, channelMask)
config->frameSync.frameSyncEarly = true;
SAI_TxSetConfig(base, config)
```

Parameters

- config – transceiver configurations.
- frameSyncWidth – length of frame sync.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to enable.

```
static inline uint32_t SAI_TxGetStatusFlag(I2S_Type *base)
```

Gets the SAI Tx status flag state.

Parameters

- base – SAI base pointer

Returns

SAI Tx status flag value. Use the Status Mask to get the status value needed.

```
static inline void SAI_TxClearStatusFlags(I2S_Type *base, uint32_t mask)
```

Clears the SAI Tx status flag state.

Parameters

- base – SAI base pointer
- mask – State mask. It can be a combination of the following source if defined:
 - kSAI_WordStartFlag
 - kSAI_SyncErrorFlag
 - kSAI_FIFOErrorFlag

```
static inline uint32_t SAI_RxGetStatusFlag(I2S_Type *base)
```

Gets the SAI Tx status flag state.

Parameters

- base – SAI base pointer

Returns

SAI Rx status flag value. Use the Status Mask to get the status value needed.

```
static inline void SAI_RxClearStatusFlags(I2S_Type *base, uint32_t mask)
```

Clears the SAI Rx status flag state.

Parameters

- base – SAI base pointer

- mask – State mask. It can be a combination of the following sources if defined.
 - kSAI_WordStartFlag
 - kSAI_SyncErrorFlag
 - kSAI_FIFOErrorFlag

void SAI_TxSoftwareReset(I2S_Type *base, *sai_reset_type_t* resetType)

Do software reset or FIFO reset .

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Tx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like TCR1~TCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

- base – SAI base pointer
- resetType – Reset type, FIFO reset or software reset

void SAI_RxSoftwareReset(I2S_Type *base, *sai_reset_type_t* resetType)

Do software reset or FIFO reset .

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Rx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like RCR1~RCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

- base – SAI base pointer
- resetType – Reset type, FIFO reset or software reset

void SAI_TxSetChannelFIFOMask(I2S_Type *base, uint8_t mask)

Set the Tx channel FIFO enable mask.

Parameters

- base – SAI base pointer
- mask – Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

void SAI_RxSetChannelFIFOMask(I2S_Type *base, uint8_t mask)

Set the Rx channel FIFO enable mask.

Parameters

- base – SAI base pointer
- mask – Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

void SAI_TxSetDataOrder(I2S_Type *base, *sai_data_order_t* order)

Set the Tx data order.

Parameters

- base – SAI base pointer
- order – Data order MSB or LSB

void SAI_RxSetDataOrder(I2S_Type *base, *sai_data_order_t* order)

Set the Rx data order.

Parameters

- base – SAI base pointer
- order – Data order MSB or LSB

void SAI_TxSetBitClockPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Tx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_RxSetBitClockPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Rx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_TxSetFrameSyncPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Tx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_RxSetFrameSyncPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Rx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_TxSetFIFOPacking(I2S_Type *base, *sai_fifo_packing_t* pack)

Set Tx FIFO packing feature.

Parameters

- base – SAI base pointer.
- pack – FIFO pack type. It is element of *sai_fifo_packing_t*.

void SAI_RxSetFIFOPacking(I2S_Type *base, *sai_fifo_packing_t* pack)

Set Rx FIFO packing feature.

Parameters

- base – SAI base pointer.
- pack – FIFO pack type. It is element of *sai_fifo_packing_t*.

static inline void SAI_TxSetFIFOErrorContinue(I2S_Type *base, bool isEnabled)

Set Tx FIFO error continue.

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in TCSR register.

Parameters

- base – SAI base pointer.
- isEnabled – Is FIFO error continue enabled, true means enable, false means disable.

```
static inline void SAI_RxSetFIFOErrorContinue(I2S_Type *base, bool isEnabled)
```

Set Rx FIFO error continue.

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in RCSR register.

Parameters

- base – SAI base pointer.
- isEnabled – Is FIFO error continue enabled, true means enable, false means disable.

```
static inline void SAI_TxEnableInterrupts(I2S_Type *base, uint32_t mask)
```

Enables the SAI Tx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

```
static inline void SAI_RxEnableInterrupts(I2S_Type *base, uint32_t mask)
```

Enables the SAI Rx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

```
static inline void SAI_TxDisableInterrupts(I2S_Type *base, uint32_t mask)
```

Disables the SAI Tx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

```
static inline void SAI_RxDisableInterrupts(I2S_Type *base, uint32_t mask)
```

Disables the SAI Rx interrupt requests.

Parameters

- `base` – SAI base pointer
- `mask` – interrupt source The parameter can be a combination of the following sources if defined.
 - `kSAI_WordStartInterruptEnable`
 - `kSAI_SyncErrorInterruptEnable`
 - `kSAI_FIFOWarningInterruptEnable`
 - `kSAI_FIFORequestInterruptEnable`
 - `kSAI_FIFOErrorInterruptEnable`

```
static inline void SAI_TxEnableDMA(I2S_Type *base, uint32_t mask, bool enable)
```

Enables/disables the SAI Tx DMA requests.

Parameters

- `base` – SAI base pointer
- `mask` – DMA source The parameter can be combination of the following sources if defined.
 - `kSAI_FIFOWarningDMAEnable`
 - `kSAI_FIFORequestDMAEnable`
- `enable` – True means enable DMA, false means disable DMA.

```
static inline void SAI_RxEnableDMA(I2S_Type *base, uint32_t mask, bool enable)
```

Enables/disables the SAI Rx DMA requests.

Parameters

- `base` – SAI base pointer
- `mask` – DMA source The parameter can be a combination of the following sources if defined.
 - `kSAI_FIFOWarningDMAEnable`
 - `kSAI_FIFORequestDMAEnable`
- `enable` – True means enable DMA, false means disable DMA.

```
static inline uintptr_t SAI_TxGetDataRegisterAddress(I2S_Type *base, uint32_t channel)
```

Gets the SAI Tx data register address.

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

- `base` – SAI base pointer.
- `channel` – Which data channel used.

Returns

data register address.

```
static inline uintptr_t SAI_RxGetDataRegisterAddress(I2S_Type *base, uint32_t channel)
```

Gets the SAI Rx data register address.

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

- base – SAI base pointer.
- channel – Which data channel used.

Returns

data register address.

```
void SAI_WriteBlocking(I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer,  
                      uint32_t size)
```

Sends data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be written.
- size – Bytes to be written.

```
void SAI_WriteMultiChannelBlocking(I2S_Type *base, uint32_t channel, uint32_t channelMask,  
                                  uint32_t bitWidth, uint8_t *buffer, uint32_t size)
```

Sends data to multi channel using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- channelMask – channel mask.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be written.
- size – Bytes to be written.

```
static inline void SAI_WriteData(I2S_Type *base, uint32_t channel, uint32_t data)
```

Writes data into SAI FIFO.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- data – Data needs to be written.

```
void SAI_ReadBlocking(I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer,  
                     uint32_t size)
```

Receives data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be read.
- size – Bytes to be read.

```
void SAI_ReadMultiChannelBlocking(I2S_Type *base, uint32_t channel, uint32_t channelMask,  
                                uint32_t bitWidth, uint8_t *buffer, uint32_t size)
```

Receives multi channel data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- channelMask – channel mask.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be read.
- size – Bytes to be read.

```
static inline uint32_t SAI_ReadData(I2S_Type *base, uint32_t channel)
```

Reads data from the SAI FIFO.

Parameters

- base – SAI base pointer.
- channel – Data channel used.

Returns

Data in SAI FIFO.

```
void SAI_TransferTxCreateHandle(I2S_Type *base, sai_handle_t *handle, sai_transfer_callback_t  
                              callback, void *userData)
```

Initializes the SAI Tx handle.

This function initializes the Tx handle for the SAI Tx transactional APIs. Call this function once to get the handle initialized.

Parameters

- base – SAI base pointer
- handle – SAI handle pointer.
- callback – Pointer to the user callback function.
- userData – User parameter passed to the callback function

```
void SAI_TransferRxCreateHandle(I2S_Type *base, sai_handle_t *handle, sai_transfer_callback_t  
                              callback, void *userData)
```

Initializes the SAI Rx handle.

This function initializes the Rx handle for the SAI Rx transactional APIs. Call this function once to get the handle initialized.

Parameters

- base – SAI base pointer.

- `handle` – SAI handle pointer.
- `callback` – Pointer to the user callback function.
- `userData` – User parameter passed to the callback function.

`void SAI_TransferTxSetConfig(I2S_Type *base, sai_handle_t *handle, sai_transceiver_t *config)`
SAI transmitter transfer configurations.

This function initializes the Tx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI handle pointer.
- `config` – transmitter configurations.

`void SAI_TransferRxSetConfig(I2S_Type *base, sai_handle_t *handle, sai_transceiver_t *config)`
SAI receiver transfer configurations.

This function initializes the Rx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI handle pointer.
- `config` – receiver configurations.

`status_t SAI_TransferSendNonBlocking(I2S_Type *base, sai_handle_t *handle, sai_transfer_t *xfer)`

Performs an interrupt non-blocking send transfer on SAI.

Note: This API returns immediately after the transfer initiates. Call the `SAI_TxGetTransferStatusIRQ` to poll the transfer status and check whether the transfer is finished. If the return status is not `kStatus_SAI_Busy`, the transfer is finished.

Parameters

- `base` – SAI base pointer.
- `handle` – Pointer to the `sai_handle_t` structure which stores the transfer state.
- `xfer` – Pointer to the `sai_transfer_t` structure.

Return values

- `kStatus_Success` – Successfully started the data receive.
- `kStatus_SAI_TxBusy` – Previous receive still not finished.
- `kStatus_InvalidArgument` – The input parameter is invalid.

`status_t SAI_TransferReceiveNonBlocking(I2S_Type *base, sai_handle_t *handle, sai_transfer_t *xfer)`

Performs an interrupt non-blocking receive transfer on SAI.

Note: This API returns immediately after the transfer initiates. Call the `SAI_RxGetTransferStatusIRQ` to poll the transfer status and check whether the transfer is finished. If the return status is not `kStatus_SAI_Busy`, the transfer is finished.

Parameters

- base – SAI base pointer
- handle – Pointer to the `sai_handle_t` structure which stores the transfer state.
- xfer – Pointer to the `sai_transfer_t` structure.

Return values

- `kStatus_Success` – Successfully started the data receive.
- `kStatus_SAI_RxBusy` – Previous receive still not finished.
- `kStatus_InvalidArgument` – The input parameter is invalid.

`status_t` SAI_TransferGetSendCount(I2S_Type *base, *sai_handle_t* *handle, `size_t` *count)

Gets a set byte count.

Parameters

- base – SAI base pointer.
- handle – Pointer to the `sai_handle_t` structure which stores the transfer state.
- count – Bytes count sent.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`status_t` SAI_TransferGetReceiveCount(I2S_Type *base, *sai_handle_t* *handle, `size_t` *count)

Gets a received byte count.

Parameters

- base – SAI base pointer.
- handle – Pointer to the `sai_handle_t` structure which stores the transfer state.
- count – Bytes count received.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void` SAI_TransferAbortSend(I2S_Type *base, *sai_handle_t* *handle)

Aborts the current send.

Note: This API can be called any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – SAI base pointer.
- handle – Pointer to the `sai_handle_t` structure which stores the transfer state.

void SAI_TransferAbortReceive(I2S_Type *base, sai_handle_t *handle)

Aborts the current IRQ receive.

Note: This API can be called when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – SAI base pointer
- handle – Pointer to the sai_handle_t structure which stores the transfer state.

void SAI_TransferTerminateSend(I2S_Type *base, sai_handle_t *handle)

Terminate all SAI send.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortSend.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTerminateReceive(I2S_Type *base, sai_handle_t *handle)

Terminate all SAI receive.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortReceive.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTxHandleIRQ(I2S_Type *base, sai_handle_t *handle)

Tx interrupt handler.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure.

void SAI_TransferRxHandleIRQ(I2S_Type *base, sai_handle_t *handle)

Tx interrupt handler.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure.

void SAI_DriverIRQHandler(uint32_t instance)

SAI driver IRQ handler common entry.

This function provides the common IRQ request entry for SAI.

Parameters

- instance – SAI instance.

FSL_SAI_DRIVER_VERSION

Version 2.4.8

`_sai_status_t`, SAI return status.

Values:

enumerator `kStatus_SAI_TxBusy`

SAI Tx is busy.

enumerator `kStatus_SAI_RxBusy`

SAI Rx is busy.

enumerator `kStatus_SAI_TxError`

SAI Tx FIFO error.

enumerator `kStatus_SAI_RxError`

SAI Rx FIFO error.

enumerator `kStatus_SAI_QueueFull`

SAI transfer queue is full.

enumerator `kStatus_SAI_TxIdle`

SAI Tx is idle

enumerator `kStatus_SAI_RxIdle`

SAI Rx is idle

`_sai_channel_mask`, sai channel mask value, actual channel numbers is depend soc specific

Values:

enumerator `kSAI_Channel0Mask`

channel 0 mask value

enumerator `kSAI_Channel1Mask`

channel 1 mask value

enumerator `kSAI_Channel2Mask`

channel 2 mask value

enumerator `kSAI_Channel3Mask`

channel 3 mask value

enumerator `kSAI_Channel4Mask`

channel 4 mask value

enumerator `kSAI_Channel5Mask`

channel 5 mask value

enumerator `kSAI_Channel6Mask`

channel 6 mask value

enumerator `kSAI_Channel7Mask`

channel 7 mask value

enum `_sai_protocol`

Define the SAI bus type.

Values:

enumerator `kSAI_BusLeftJustified`

Uses left justified format.

enumerator kSAI_BusRightJustified

Uses right justified format.

enumerator kSAI_BusI2S

Uses I2S format.

enumerator kSAI_BusPCMA

Uses I2S PCM A format.

enumerator kSAI_BusPCMB

Uses I2S PCM B format.

enum _sai_master_slave

Master or slave mode.

Values:

enumerator kSAI_Master

Master mode include bclk and frame sync

enumerator kSAI_Slave

Slave mode include bclk and frame sync

enumerator kSAI_Bclk_Master_FrameSync_Slave

bclk in master mode, frame sync in slave mode

enumerator kSAI_Bclk_Slave_FrameSync_Master

bclk in slave mode, frame sync in master mode

enum _sai_mono_stereo

Mono or stereo audio format.

Values:

enumerator kSAI_Stereo

Stereo sound.

enumerator kSAI_MonoRight

Only Right channel have sound.

enumerator kSAI_MonoLeft

Only left channel have sound.

enum _sai_data_order

SAI data order, MSB or LSB.

Values:

enumerator kSAI_DataLSB

LSB bit transferred first

enumerator kSAI_DataMSB

MSB bit transferred first

enum _sai_clock_polarity

SAI clock polarity, active high or low.

Values:

enumerator kSAI_PolarityActiveHigh

Drive outputs on rising edge

enumerator kSAI_PolarityActiveLow

Drive outputs on falling edge

enumerator kSAI_SampleOnFallingEdge

Sample inputs on falling edge

enumerator kSAI_SampleOnRisingEdge

Sample inputs on rising edge

enum _sai_sync_mode

Synchronous or asynchronous mode.

Values:

enumerator kSAI_ModeAsync

Asynchronous mode

enumerator kSAI_ModeSync

Synchronous mode (with receiver or transmit)

enum _sai_mclk_source

Master clock source.

Values:

enumerator kSAI_MclkSourceSysclk

Master clock from the system clock

enumerator kSAI_MclkSourceSelect1

Master clock from source 1

enumerator kSAI_MclkSourceSelect2

Master clock from source 2

enumerator kSAI_MclkSourceSelect3

Master clock from source 3

enum _sai_bclk_source

Bit clock source.

Values:

enumerator kSAI_BclkSourceBusclk

Bit clock using bus clock

enumerator kSAI_BclkSourceMclkOption1

Bit clock MCLK option 1

enumerator kSAI_BclkSourceMclkOption2

Bit clock MCLK option2

enumerator kSAI_BclkSourceMclkOption3

Bit clock MCLK option3

enumerator kSAI_BclkSourceMclkDiv

Bit clock using master clock divider

enumerator kSAI_BclkSourceOtherSai0

Bit clock from other SAI device

enumerator kSAI_BclkSourceOtherSai1

Bit clock from other SAI device

_sai_interrupt_enable_t, The SAI interrupt enable flag

Values:

enumerator kSAI_WordStartInterruptEnable

Word start flag, means the first word in a frame detected

enumerator kSAI_SyncErrorInterruptEnable

Sync error flag, means the sync error is detected

enumerator kSAI_FIFOWarningInterruptEnable

FIFO warning flag, means the FIFO is empty

enumerator kSAI_FIFOErrorInterruptEnable

FIFO error flag

enumerator kSAI_FIFORequestInterruptEnable

FIFO request, means reached watermark

_sai_dma_enable_t, The DMA request sources

Values:

enumerator kSAI_FIFOWarningDMAEnable

FIFO warning caused by the DMA request

enumerator kSAI_FIFORequestDMAEnable

FIFO request caused by the DMA request

_sai_flags, The SAI status flag

Values:

enumerator kSAI_WordStartFlag

Word start flag, means the first word in a frame detected

enumerator kSAI_SyncErrorFlag

Sync error flag, means the sync error is detected

enumerator kSAI_FIFOErrorFlag

FIFO error flag

enumerator kSAI_FIFORequestFlag

FIFO request flag.

enumerator kSAI_FIFOWarningFlag

FIFO warning flag

enum _sai_reset_type

The reset type.

Values:

enumerator kSAI_ResetTypeSoftware

Software reset, reset the logic state

enumerator kSAI_ResetTypeFIFO

FIFO reset, reset the FIFO read and write pointer

enumerator kSAI_ResetAll

All reset.

enum _sai_fifo_packing

The SAI packing mode The mode includes 8 bit and 16 bit packing.

Values:

enumerator kSAI_FifoPackingDisabled

Packing disabled

enumerator kSAI_FifoPacking8bit

8 bit packing enabled

enumerator kSAI_FifoPacking16bit

16bit packing enabled

enum _sai_sample_rate

Audio sample rate.

Values:

enumerator kSAI_SampleRate8KHz

Sample rate 8000 Hz

enumerator kSAI_SampleRate11025Hz

Sample rate 11025 Hz

enumerator kSAI_SampleRate12KHz

Sample rate 12000 Hz

enumerator kSAI_SampleRate16KHz

Sample rate 16000 Hz

enumerator kSAI_SampleRate22050Hz

Sample rate 22050 Hz

enumerator kSAI_SampleRate24KHz

Sample rate 24000 Hz

enumerator kSAI_SampleRate32KHz

Sample rate 32000 Hz

enumerator kSAI_SampleRate44100Hz

Sample rate 44100 Hz

enumerator kSAI_SampleRate48KHz

Sample rate 48000 Hz

enumerator kSAI_SampleRate96KHz

Sample rate 96000 Hz

enumerator kSAI_SampleRate192KHz

Sample rate 192000 Hz

enumerator kSAI_SampleRate384KHz

Sample rate 384000 Hz

enum _sai_word_width

Audio word width.

Values:

enumerator kSAI_WordWidth8bits

Audio data width 8 bits

enumerator kSAI_WordWidth16bits

Audio data width 16 bits

enumerator kSAI_WordWidth24bits

Audio data width 24 bits

enumerator kSAI_WordWidth32bits

Audio data width 32 bits

enum _sai_data_pin_state

sai data pin state definition

Values:

enumerator kSAI_DataPinStateTriState

transmit data pins are tri-stated when slots are masked or channels are disabled

enumerator kSAI_DataPinStateOutputZero

transmit data pins are never tri-stated and will output zero when slots are masked or channel disabled

enum _sai_fifo_combine

sai fifo combine mode definition

Values:

enumerator kSAI_FifoCombineDisabled

sai TX/RX fifo combine mode disabled

enumerator kSAI_FifoCombineModeEnabledOnRead

sai TX fifo combine mode enabled on FIFO reads

enumerator kSAI_FifoCombineModeEnabledOnWrite

sai TX fifo combine mode enabled on FIFO write

enumerator kSAI_RxFifoCombineModeEnabledOnWrite

sai RX fifo combine mode enabled on FIFO write

enumerator kSAI_RXFifoCombineModeEnabledOnRead

sai RX fifo combine mode enabled on FIFO reads

enumerator kSAI_FifoCombineModeEnabledOnReadWrite

sai TX/RX fifo combined mode enabled on FIFO read/writes

enum _sai_transceiver_type

sai transceiver type

Values:

enumerator kSAI_Transmitter

sai transmitter

enumerator kSAI_Receiver

sai receiver

enum _sai_frame_sync_len

sai frame sync len

Values:

enumerator kSAI_FrameSyncLenOneBitClk

1 bit clock frame sync len for DSP mode

enumerator kSAI_FrameSyncLenPerWordWidth

Frame sync length decided by word width

typedef enum _sai_protocol sai_protocol_t

Define the SAI bus type.

`typedef enum _sai_master_slave sai_master_slave_t`
Master or slave mode.

`typedef enum _sai_mono_stereo sai_mono_stereo_t`
Mono or stereo audio format.

`typedef enum _sai_data_order sai_data_order_t`
SAI data order, MSB or LSB.

`typedef enum _sai_clock_polarity sai_clock_polarity_t`
SAI clock polarity, active high or low.

`typedef enum _sai_sync_mode sai_sync_mode_t`
Synchronous or asynchronous mode.

`typedef enum _sai_mclk_source sai_mclk_source_t`
Master clock source.

`typedef enum _sai_bclk_source sai_bclk_source_t`
Bit clock source.

`typedef enum _sai_reset_type sai_reset_type_t`
The reset type.

`typedef enum _sai_fifo_packing sai_fifo_packing_t`
The SAI packing mode The mode includes 8 bit and 16 bit packing.

`typedef struct _sai_config sai_config_t`
SAI user configuration structure.

`typedef enum _sai_sample_rate sai_sample_rate_t`
Audio sample rate.

`typedef enum _sai_word_width sai_word_width_t`
Audio word width.

`typedef enum _sai_data_pin_state sai_data_pin_state_t`
sai data pin state definition

`typedef enum _sai_fifo_combine sai_fifo_combine_t`
sai fifo combine mode definition

`typedef enum _sai_transceiver_type sai_transceiver_type_t`
sai transceiver type

`typedef enum _sai_frame_sync_len sai_frame_sync_len_t`
sai frame sync len

`typedef struct _sai_transfer_format sai_transfer_format_t`
sai transfer format

`typedef struct _sai_master_clock sai_master_clock_t`
master clock configurations

`typedef struct _sai_fifo sai_fifo_t`
sai fifo configurations

`typedef struct _sai_bit_clock sai_bit_clock_t`
sai bit clock configurations

`typedef struct _sai_frame_sync sai_frame_sync_t`
sai frame sync configurations

```
typedef struct _sai_serial_data sai_serial_data_t
    sai serial data configurations

typedef struct _sai_transceiver sai_transceiver_t
    sai transceiver configurations

typedef struct _sai_transfer sai_transfer_t
    SAI transfer structure.

typedef struct _sai_handle sai_handle_t

typedef void (*sai_transfer_callback_t)(I2S_Type *base, sai_handle_t *handle, status_t status,
void *userData)
    SAI transfer callback prototype.

SAI_XFER_QUEUE_SIZE
    SAI transfer queue size, user can refine it according to use case.

FSL_SAI_HAS_FIFO_EXTEND_FEATURE
    sai fifo feature

struct _sai_config
    #include <fsl_sai.h> SAI user configuration structure.
```

Public Members

```
sai_protocol_t protocol
    Audio bus protocol in SAI

sai_sync_mode_t syncMode
    SAI sync mode, control Tx/Rx clock sync

bool mclkOutputEnable
    Master clock output enable, true means master clock divider enabled

sai_mclk_source_t mclkSource
    Master Clock source

sai_bclk_source_t bclkSource
    Bit Clock source

sai_master_slave_t masterSlave
    Master or slave

struct _sai_transfer_format
    #include <fsl_sai.h> sai transfer format
```

Public Members

```
uint32_t sampleRate_Hz
    Sample rate of audio data

uint32_t bitWidth
    Data length of audio data, usually 8/16/24/32 bits

sai_mono_stereo_t stereo
    Mono or stereo

uint32_t masterClockHz
    Master clock frequency in Hz
```

uint8_t watermark

Watermark value

uint8_t channel

Transfer start channel

uint8_t channelMask

enabled channel mask value, reference `_sai_channel_mask`

uint8_t endChannel

end channel number

uint8_t channelNums

Total enabled channel numbers

sai_protocol_t protocol

Which audio protocol used

bool isFrameSyncCompact

True means Frame sync length is configurable according to bitWidth, false means frame sync length is 64 times of bit clock.

struct `_sai_master_clock`

#include <fsl_sai.h> master clock configurations

Public Members

bool mclkOutputEnable

master clock output enable

sai_mclk_source_t mclkSource

Master Clock source

uint32_t mclkHz

target mclk frequency

uint32_t mclkSourceClkHz

mclk source frequency

struct `_sai_fifo`

#include <fsl_sai.h> sai fifo configurations

Public Members

bool fifoContinueOnError

fifo continues when error occur

sai_fifo_combine_t fifoCombine

fifo combine mode

sai_fifo_packing_t fifoPacking

fifo packing mode

uint8_t fifoWatermark

fifo watermark

struct `_sai_bit_clock`

#include <fsl_sai.h> sai bit clock configurations

Public Members

bool bclkInputDelay

bit clock actually used by the transmitter is delayed by the pad output delay, this has effect of decreasing the data input setup time, but increasing the data output valid time

.

sai_clock_polarity_t bclkPolarity

bit clock polarity

sai_bclk_source_t bclkSource

bit Clock source

struct *_sai_frame_sync*

#include <fsl_sai.h> sai frame sync configurations

Public Members

uint8_t frameSyncWidth

frame sync width in number of bit clocks

bool frameSyncEarly

TRUE is frame sync assert one bit before the first bit of frame FALSE is frame sync assert with the first bit of the frame

bool frameSyncGenerateOnDemand

internal frame sync is generated when FIFO waring flag is clear

sai_clock_polarity_t frameSyncPolarity

frame sync polarity

struct *_sai_serial_data*

#include <fsl_sai.h> sai serial data configurations

Public Members

sai_data_pin_state_t dataMode

sai data pin state when slots masked or channel disabled

sai_data_order_t dataOrder

configure whether the LSB or MSB is transmitted first

uint8_t dataWord0Length

configure the number of bits in the first word in each frame

uint8_t dataWordNLength

configure the number of bits in the each word in each frame, except the first word

uint8_t dataWordLength

used to record the data length for dma transfer

uint8_t dataFirstBitShifted

Configure the bit index for the first bit transmitted for each word in the frame

uint8_t dataWordNum

configure the number of words in each frame

uint32_t dataMaskedWord

configure whether the transmit word is masked

struct *_sai_transceiver*

#include <fsl_sai.h> sai transceiver configurations

Public Members

sai_serial_data_t serialData
serial data configurations

sai_frame_sync_t frameSync
ws configurations

sai_bit_clock_t bitClock
bit clock configurations

sai_fifo_t fifo
fifo configurations

sai_master_slave_t masterSlave
transceiver is master or slave

sai_sync_mode_t syncMode
transceiver sync mode

uint8_t startChannel
Transfer start channel

uint8_t channelMask
enabled channel mask value, reference `_sai_channel_mask`

uint8_t endChannel
end channel number

uint8_t channelNums
Total enabled channel numbers

struct `_sai_transfer`
#include <fsl_sai.h> SAI transfer structure.

Public Members

uint8_t *data
Data start address to transfer.

size_t dataSize
Transfer size.

struct `_sai_handle`
#include <fsl_sai.h> SAI handle structure.

Public Members

I2S_Type *base
base address

uint32_t state
Transfer status

sai_transfer_callback_t callback
Callback function called at transfer event

void *userData
Callback parameter passed to callback function

uint8_t bitWidth
Bit width for transfer, 8/16/24/32 bits

uint8_t channel
Transfer start channel

uint8_t channelMask
enabled channel mask value, refernece `_sai_channel_mask`

uint8_t endChannel
end channel number

uint8_t channelNums
Total enabled channel numbers

sai_transfer_t saiQueue[(4U)]
Transfer queue storing queued transfer

size_t transferSize[(4U)]
Data bytes need to transfer

volatile uint8_t queueUser
Index for user to queue transfer

volatile uint8_t queueDriver
Index for driver to get the transfer data and size

uint8_t watermark
Watermark value

2.45 SAI EDMA Driver

```
void SAI_TransferTxCreateHandleEDMA(I2S_Type *base, sai_edma_handle_t *handle,
                                   sai_edma_callback_t callback, void *userData,
                                   edma_handle_t *txDmaHandle)
```

Initializes the SAI eDMA handle.

This function initializes the SAI master DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.
- `callback` – Pointer to user callback function.
- `userData` – User parameter passed to the callback function.
- `txDmaHandle` – eDMA handle pointer; this handle shall be static allocated by users.

```
void SAI_TransferRxCreateHandleEDMA(I2S_Type *base, sai_edma_handle_t *handle,
                                   sai_edma_callback_t callback, void *userData,
                                   edma_handle_t *rxDmaHandle)
```

Initializes the SAI Rx eDMA handle.

This function initializes the SAI slave DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- callback – Pointer to user callback function.
- userData – User parameter passed to the callback function.
- rxDmaHandle – eDMA handle pointer, this handle shall be static allocated by users.

```
void SAI_TransferSetInterleaveType(sai_edma_handle_t *handle, sai_edma_interleave_t  
interleaveType)
```

Initializes the SAI interleave type.

This function initializes the SAI DMA handle member `interleaveType`, it shall be called only when application would like to use type `kSAI_EDMAInterleavePerChannelBlock`, since the default `interleaveType` is `kSAI_EDMAInterleavePerChannelSample` always

Parameters

- handle – SAI eDMA handle pointer.
- interleaveType – Multi channel interleave type.

```
void SAI_TransferTxSetConfigEDMA(I2S_Type *base, sai_edma_handle_t *handle,  
sai_transceiver_t *saiConfig)
```

Configures the SAI Tx.

Note: SAI eDMA supports data transfer in a multiple SAI channels if the FIFO Combine feature is supported. To activate the multi-channel transfer enable SAI channels by filling the `channelMask` of `sai_transceiver_t` with the corresponding values of `_sai_channel_mask` enum, enable the FIFO Combine mode by assigning `kSAI_FifoCombineModeEnabledOnWrite` to the `fifoCombine` member of `sai_fifo_combine_t` which is a member of `sai_transceiver_t`. This is an example of multi-channel data transfer configuration step.

```
sai_transceiver_t config;  
SAI_GetClassicI2SConfig(&config, kSAI_WordWidth16bits, kSAI_Stereo, kSAI_Channel0Mask|kSAI_  
↪Channel1Mask);  
config.fifo.fifoCombine = kSAI_FifoCombineModeEnabledOnWrite;  
SAI_TransferTxSetConfigEDMA(I2S0, &edmaHandle, &config);
```

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- saiConfig – sai configurations.

```
void SAI_TransferRxSetConfigEDMA(I2S_Type *base, sai_edma_handle_t *handle,  
sai_transceiver_t *saiConfig)
```

Configures the SAI Rx.

Note: SAI eDMA supports data transfer in a multiple SAI channels if the FIFO Combine feature is supported. To activate the multi-channel transfer enable SAI channels by filling the `channelMask` of `sai_transceiver_t` with the corresponding values of `_sai_channel_mask` enum, enable the FIFO Combine mode by assigning `kSAI_FifoCombineModeEnabledOnRead` to the `fifoCombine` member of `sai_fifo_combine_t`

which is a member of `sai_transceiver_t`. This is an example of multi-channel data transfer configuration step.

```
sai_transceiver_t config;
SAI_GetClassicI2SConfig(&config, kSAI_WordWidth16bits, kSAI_Stereo, kSAI_Channel0Mask|kSAI_
↪Channel1Mask);
config.fifo.fifoCombine = kSAI_FifoCombineModeEnabledOnRead;
SAI_TransferRxSetConfigEDMA(I2S0, &edmaHandle, &config);
```

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- saiConfig – sai configurations.

status_t SAI_TransferSendEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer)

Performs a non-blocking SAI transfer using DMA.

This function support multi channel transfer,

- for the sai IP support fifo combine mode, application should enable the fifo combine mode, no limitation on channel numbers
- for the sai IP not support fifo combine mode, sai edma provide another solution which using EDMA modulo feature, but support 2 or 4 channels only.

Note: This interface returns immediately after the transfer initiates. Call SAI_GetTransferStatus to poll the transfer status and check whether the SAI transfer is finished.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure.

Return values

- kStatus_Success – Start a SAI eDMA send successfully.
- kStatus_InvalidArgument – The input argument is invalid.
- kStatus_TxBusy – SAI is busy sending data.

status_t SAI_TransferReceiveEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer)

Performs a non-blocking SAI receive using eDMA.

This function support multi channel transfer,

- for the sai IP support fifo combine mode, application should enable the fifo combine mode, no limitation on channel numbers
- for the sai IP not support fifo combine mode, sai edma provide another solution which using EDMA modulo feature, but support 2 or 4 channels only.

Note: This interface returns immediately after the transfer initiates. Call the `SAI_GetReceiveRemainingBytes` to poll the transfer status and check whether the SAI transfer is finished.

Parameters

- `base` – SAI base pointer
- `handle` – SAI eDMA handle pointer.
- `xfer` – Pointer to DMA transfer structure.

Return values

- `kStatus_Success` – Start a SAI eDMA receive successfully.
- `kStatus_InvalidArgument` – The input argument is invalid.
- `kStatus_RxBusy` – SAI is busy receiving data.

`status_t` `SAI_TransferSendLoopEDMA(I2S_Type *base, sai_edma_handle_t *handle, sai_transfer_t *xfer, uint32_t loopTransferCount)`

Performs a non-blocking SAI loop transfer using eDMA.

Once the loop transfer start, application can use function `SAI_TransferAbortSendEDMA` to stop the loop transfer.

Note: This function support loop transfer only, such as A->B->...->A, application must be aware of that the more counts of the loop transfer, then more tcd memory required, as the function use the tcd pool in `sai_edma_handle_t`, so application could redefine the `SAI_XFER_QUEUE_SIZE` to determine the proper TCD pool size. This function support one sai channel only.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.
- `xfer` – Pointer to the DMA transfer structure, should be a array with elements counts ≥ 1 (`loopTransferCount`).
- `loopTransferCount` – the counts of `xfer` array.

Return values

- `kStatus_Success` – Start a SAI eDMA send successfully.
- `kStatus_InvalidArgument` – The input argument is invalid.

`status_t` `SAI_TransferReceiveLoopEDMA(I2S_Type *base, sai_edma_handle_t *handle, sai_transfer_t *xfer, uint32_t loopTransferCount)`

Performs a non-blocking SAI loop transfer using eDMA.

Once the loop transfer start, application can use function `SAI_TransferAbortReceiveEDMA` to stop the loop transfer.

Note: This function support loop transfer only, such as A->B->...->A, application must be aware of that the more counts of the loop transfer, then more tcd memory required,

as the function use the tcd pool in `sai_edma_handle_t`, so application could redefine the `SAI_XFER_QUEUE_SIZE` to determine the proper TCD pool size. This function support one sai channel only.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.
- `xfer` – Pointer to the DMA transfer structure, should be a array with elements counts ≥ 1 (`loopTransferCount`).
- `loopTransferCount` – the counts of `xfer` array.

Return values

- `kStatus_Success` – Start a SAI eDMA receive successfully.
- `kStatus_InvalidArgument` – The input argument is invalid.

`void SAI_TransferTerminateSendEDMA(I2S_Type *base, sai_edma_handle_t *handle)`

Terminate all SAI send.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call `SAI_TransferAbortSendEDMA`.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.

`void SAI_TransferTerminateReceiveEDMA(I2S_Type *base, sai_edma_handle_t *handle)`

Terminate all SAI receive.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call `SAI_TransferAbortReceiveEDMA`.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.

`void SAI_TransferAbortSendEDMA(I2S_Type *base, sai_edma_handle_t *handle)`

Aborts a SAI transfer using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call `SAI_TransferTerminateSendEDMA`.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.

`void SAI_TransferAbortReceiveEDMA(I2S_Type *base, sai_edma_handle_t *handle)`

Aborts a SAI receive using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call `SAI_TransferTerminateReceiveEDMA`.

Parameters

- `base` – SAI base pointer
- `handle` – SAI eDMA handle pointer.

```
status_t SAI_TransferGetSendCountEDMA(I2S_Type *base, sai_edma_handle_t *handle, size_t
                                     *count)
```

Gets byte count sent by SAI.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- count – Bytes count sent by SAI.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

```
status_t SAI_TransferGetReceiveCountEDMA(I2S_Type *base, sai_edma_handle_t *handle, size_t
                                         *count)
```

Gets byte count received by SAI.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.
- count – Bytes count received by SAI.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

```
uint32_t SAI_TransferGetValidTransferSlotsEDMA(I2S_Type *base, sai_edma_handle_t *handle)
```

Gets valid transfer slot.

This function can be used to query the valid transfer request slot that the application can submit. It should be called in the critical section, that means the application could call it in the corresponding callback function or disable IRQ before calling it in the application, otherwise, the returned value may not correct.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.

Return values

valid – slot count that application submit.

```
FSL_SAI_EDMA_DRIVER_VERSION
```

Version 2.7.3

```
enum _sai_edma_interleave
```

sai interleave type

Values:

```
enumerator kSAI_EDMAInterleavePerChannelSample
```

```
enumerator kSAI_EDMAInterleavePerChannelBlock
```

```
typedef struct sai_edma_handle sai_edma_handle_t
```

```
typedef void (*sai_edma_callback_t)(I2S_Type *base, sai_edma_handle_t *handle, status_t
status, void *userData)
```

SAI eDMA transfer callback function for finish and error.

```
typedef enum _sai_edma_interleave sai_edma_interleave_t
sai_interleave_type
```

```
MCUX_SDK_SAI_EDMA_RX_ENABLE_INTERNAL
```

the SAI enable position When calling SAI_TransferReceiveEDMA

```
MCUX_SDK_SAI_EDMA_TX_ENABLE_INTERNAL
```

the SAI enable position When calling SAI_TransferSendEDMA

```
struct sai_edma_handle
```

#include <fsl_sai_edma.h> SAI DMA transfer handle, users should not touch the content of the handle.

Public Members

```
edma_handle_t *dmaHandle
```

DMA handler for SAI send

```
uint8_t nbytes
```

eDMA minor byte transfer count initially configured.

```
uint8_t bytesPerFrame
```

Bytes in a frame

```
uint8_t channelMask
```

Enabled channel mask value, reference `_sai_channel_mask`

```
uint8_t channelNums
```

total enabled channel nums

```
uint8_t channel
```

Which data channel

```
uint8_t count
```

The transfer data count in a DMA request

```
uint32_t state
```

Internal state for SAI eDMA transfer

```
sai_edma_callback_t callback
```

Callback for users while transfer finish or error occurs

```
void *userData
```

User callback parameter

```
uint8_t tcd[((4U) + 1U) * sizeof(edma_tcd_t)]
```

TCD pool for eDMA transfer.

```
sai_transfer_t saiQueue[(4U)]
```

Transfer queue storing queued transfer.

```
size_t transferSize[(4U)]
```

Data bytes need to transfer

```
sai_edma_interleave_t interleaveType
```

Transfer interleave type

volatile uint8_t queueUser

Index for user to queue transfer.

volatile uint8_t queueDriver

Index for driver to get the transfer data and size

2.46 SIM: System Integration Module Driver

FSL_SIM_DRIVER_VERSION

Driver version.

enum _sim_usb_volt_reg_enable_mode

USB voltage regulator enable setting.

Values:

enumerator kSIM_UsbVoltRegEnable

Enable voltage regulator.

enumerator kSIM_UsbVoltRegEnableInLowPower

Enable voltage regulator in VLPR/VLPW modes.

enumerator kSIM_UsbVoltRegEnableInStop

Enable voltage regulator in STOP/VLPS/LLS/VLLS modes.

enumerator kSIM_UsbVoltRegEnableInAllModes

Enable voltage regulator in all power modes.

enum _sim_flash_mode

Flash enable mode.

Values:

enumerator kSIM_FlashDisableInWait

Disable flash in wait mode.

enumerator kSIM_FlashDisable

Disable flash in normal mode.

typedef struct _sim_uid sim_uid_t

Unique ID.

void SIM_SetUsbVoltRegulatorEnableMode(uint32_t mask)

Sets the USB voltage regulator setting.

This function configures whether the USB voltage regulator is enabled in normal RUN mode, STOP/VLPS/LLS/VLLS modes, and VLPR/VLPW modes. The configurations are passed in as mask value of _sim_usb_volt_reg_enable_mode. For example, to enable USB voltage regulator in RUN/VLPR/VLPW modes and disable in STOP/VLPS/LLS/VLLS mode, use:

```
SIM_SetUsbVoltRegulatorEnableMode(kSIM_UsbVoltRegEnable  
kSIM_UsbVoltRegEnableInLowPower);
```

Parameters

- mask – USB voltage regulator enable setting.

void SIM_GetUniqueId(sim_uid_t *uid)

Gets the unique identification register value.

Parameters

- uid – Pointer to the structure to save the UID value.

```
static inline void SIM_SetFlashMode(uint8_t mode)
```

Sets the flash enable mode.

Parameters

- mode – The mode to set; see `_sim_flash_mode` for mode details.

```
struct _sim_uid
```

#include <fsl_sim.h> Unique ID.

Public Members

```
uint32_t H
```

UIDH.

```
uint32_t M
```

SIM_UIDM.

```
uint32_t L
```

UIDL.

2.47 Smart Card

```
FSL_SMARTCARD_DRIVER_VERSION
```

Smart card driver version 2.3.0.

Smart card Error codes.

Values:

```
enumerator kStatus_SMARTCARD_Success
```

Transfer ends successfully

```
enumerator kStatus_SMARTCARD_TxBusy
```

Transmit in progress

```
enumerator kStatus_SMARTCARD_RxBusy
```

Receiving in progress

```
enumerator kStatus_SMARTCARD_NoTransferInProgress
```

No transfer in progress

```
enumerator kStatus_SMARTCARD_Timeout
```

Transfer ends with time-out

```
enumerator kStatus_SMARTCARD_Initialized
```

Smart card driver is already initialized

```
enumerator kStatus_SMARTCARD_PhyInitialized
```

Smart card PHY drive is already initialized

```
enumerator kStatus_SMARTCARD_CardNotActivated
```

Smart card is not activated

```
enumerator kStatus_SMARTCARD_InvalidInput
```

Function called with invalid input arguments

```
enumerator kStatus_SMARTCARD_OtherError
```

Some other error occur

enum `_smartcard_control`

Control codes for the Smart card protocol timers and misc.

Values:

enumerator `kSMARTCARD_EnableADT`
enumerator `kSMARTCARD_DisableADT`
enumerator `kSMARTCARD_EnableGTV`
enumerator `kSMARTCARD_DisableGTV`
enumerator `kSMARTCARD_ResetWWT`
enumerator `kSMARTCARD_EnableWWT`
enumerator `kSMARTCARD_DisableWWT`
enumerator `kSMARTCARD_ResetCWT`
enumerator `kSMARTCARD_EnableCWT`
enumerator `kSMARTCARD_DisableCWT`
enumerator `kSMARTCARD_ResetBWT`
enumerator `kSMARTCARD_EnableBWT`
enumerator `kSMARTCARD_DisableBWT`
enumerator `kSMARTCARD_EnableInitDetect`
enumerator `kSMARTCARD_EnableAnack`
enumerator `kSMARTCARD_DisableAnack`
enumerator `kSMARTCARD_ConfigureBaudrate`
enumerator `kSMARTCARD_SetupATRMode`
enumerator `kSMARTCARD_SetupT0Mode`
enumerator `kSMARTCARD_SetupT1Mode`
enumerator `kSMARTCARD_EnableReceiverMode`
enumerator `kSMARTCARD_DisableReceiverMode`
enumerator `kSMARTCARD_EnableTransmitterMode`
enumerator `kSMARTCARD_DisableTransmitterMode`
enumerator `kSMARTCARD_ResetWaitTimeMultiplier`

enum `_smartcard_card_voltage_class`

Defines Smart card interface voltage class values.

Values:

enumerator `kSMARTCARD_VoltageClassUnknown`
enumerator `kSMARTCARD_VoltageClassA5_0V`
enumerator `kSMARTCARD_VoltageClassB3_3V`

enumerator kSMARTCARD_VoltageClassC1_8V

enum __smartcard_transfer_state

Defines Smart card I/O transfer states.

Values:

enumerator kSMARTCARD_IdleState

enumerator kSMARTCARD_WaitingForTSSState

enumerator kSMARTCARD_InvalidTSDetectedState

enumerator kSMARTCARD_ReceivingState

enumerator kSMARTCARD_TransmittingState

enum __smartcard_reset_type

Defines Smart card reset types.

Values:

enumerator kSMARTCARD_ColdReset

enumerator kSMARTCARD_WarmReset

enumerator kSMARTCARD_NoColdReset

enumerator kSMARTCARD_NoWarmReset

enum __smartcard_transport_type

Defines Smart card transport protocol types.

Values:

enumerator kSMARTCARD_T0Transport

enumerator kSMARTCARD_T1Transport

enum __smartcard_parity_type

Defines Smart card data parity types.

Values:

enumerator kSMARTCARD_EvenParity

enumerator kSMARTCARD_OddParity

enum __smartcard_card_convention

Defines data Convention format.

Values:

enumerator kSMARTCARD_DirectConvention

enumerator kSMARTCARD_InverseConvention

enum __smartcard_interface_control

Defines Smart card interface IC control types.

Values:

enumerator kSMARTCARD_InterfaceSetVcc

enumerator kSMARTCARD_InterfaceSetClockToResetDelay

enumerator kSMARTCARD_InterfaceReadStatus

enum *_smartcard_direction*

Defines transfer direction.

Values:

enumerator kSMARTCARD_Receive

enumerator kSMARTCARD_Transmit

typedef enum *_smartcard_control* smartcard_control_t

Control codes for the Smart card protocol timers and misc.

typedef enum *_smartcard_card_voltage_class* smartcard_card_voltage_class_t

Defines Smart card interface voltage class values.

typedef enum *_smartcard_transfer_state* smartcard_transfer_state_t

Defines Smart card I/O transfer states.

typedef enum *_smartcard_reset_type* smartcard_reset_type_t

Defines Smart card reset types.

typedef enum *_smartcard_transport_type* smartcard_transport_type_t

Defines Smart card transport protocol types.

typedef enum *_smartcard_parity_type* smartcard_parity_type_t

Defines Smart card data parity types.

typedef enum *_smartcard_card_convention* smartcard_card_convention_t

Defines data Convention format.

typedef enum *_smartcard_interface_control* smartcard_interface_control_t

Defines Smart card interface IC control types.

typedef enum *_smartcard_direction* smartcard_direction_t

Defines transfer direction.

typedef void (*smartcard_interface_callback_t)(void *smartcardContext, void *param)

Smart card interface interrupt callback function type.

typedef void (*smartcard_transfer_callback_t)(void *smartcardContext, void *param)

Smart card transfer interrupt callback function type.

typedef void (*smartcard_time_delay_t)(uint32_t us)

Time Delay function used to passive waiting using RTOS [us].

typedef struct *_smartcard_card_params* smartcard_card_params_t

Defines card-specific parameters for Smart card driver.

typedef struct *_smartcard_timers_state* smartcard_timers_state_t

Smart card defines the state of the EMV timers in the Smart card driver.

typedef struct *_smartcard_interface_config* smartcard_interface_config_t

Defines user specified configuration of Smart card interface.

typedef struct *_smartcard_xfer* smartcard_xfer_t

Defines user transfer structure used to initialize transfer.

typedef struct *_smartcard_context* smartcard_context_t

Runtime state of the Smart card driver.

SMARTCARD_INIT_DELAY_CLOCK_CYCLES

Smart card global define which specify number of clock cycles until initial 'TS' character has to be received.

SMARTCARD_EMV_ATR_DURATION_ETU

Smart card global define which specify number of clock cycles during which ATR string has to be received.

SMARTCARD_TS_DIRECT_CONVENTION

Smart card specification initial TS character definition of direct convention.

SMARTCARD_TS_INVERSE_CONVENTION

Smart card specification initial TS character definition of inverse convention.

struct _smartcard_card_params

#include <fsl_smartcard.h> Defines card-specific parameters for Smart card driver.

Public Members

uint16_t Fi

4 bits Fi - clock rate conversion integer

uint8_t fMax

Maximum Smart card frequency in MHz

uint8_t WI

8 bits WI - work wait time integer

uint8_t Di

4 bits DI - baud rate divisor

uint8_t BWI

4 bits BWI - block wait time integer

uint8_t CWI

4 bits CWI - character wait time integer

uint8_t BGI

4 bits BGI - block guard time integer

uint8_t GTN

8 bits GTN - extended guard time integer

uint8_t IFSC

Indicates IFSC value of the card

uint8_t modeNegotiable

Indicates if the card acts in negotiable or a specific mode.

uint8_t currentD

4 bits DI - current baud rate divisor

uint8_t status

Indicates smart card status

bool t0Indicated

Indicates if T=0 indicated in TD1 byte

bool t1Indicated

Indicates if T=1 indicated in TD2 byte

bool atrComplete

Indicates whether the ATR received from the card was complete or not

bool atrValid

Indicates whether the ATR received from the card was valid or not

bool present

Indicates if a smart card is present

bool active

Indicates if the smart card is activated

bool faulty

Indicates whether smart card/interface is faulty

smartcard_card_convention_t convention

Card convention, kSMARTCARD_DirectConvention for direct convention, kSMARTCARD_InverseConvention for inverse convention

struct __smartcard_timers_state

#include <fsl_smartcard.h> Smart card defines the state of the EMV timers in the Smart card driver.

Public Members

volatile bool adtExpired

Indicates whether ADT timer expired

volatile bool wwtExpired

Indicates whether WWT timer expired

volatile bool cwtExpired

Indicates whether CWT timer expired

volatile bool bwtExpired

Indicates whether BWT timer expired

volatile bool initCharTimerExpired

Indicates whether reception timer for initialization character (TS) after the RST has expired

struct __smartcard_interface_config

#include <fsl_smartcard.h> Defines user specified configuration of Smart card interface.

Public Members

uint32_t smartCardClock

Smart card interface clock [Hz]

uint32_t clockToResetDelay

Indicates clock to RST apply delay [smart card clock cycles]

uint8_t clockModule

Smart card clock module number

uint8_t clockModuleChannel

Smart card clock module channel number

uint8_t clockModuleSourceClock

Smart card clock module source clock [e.g., BusClk]

smartcard_card_voltage_class_t vcc

Smart card voltage class

uint8_t controlPort

Smart card PHY control port instance

`uint8_t controlPin`
Smart card PHY control pin instance

`uint8_t irqPort`
Smart card PHY Interrupt port instance

`uint8_t irqPin`
Smart card PHY Interrupt pin instance

`uint8_t resetPort`
Smart card reset port instance

`uint8_t resetPin`
Smart card reset pin instance

`uint8_t vsel0Port`
Smart card PHY Vsel0 control port instance

`uint8_t vsel0Pin`
Smart card PHY Vsel0 control pin instance

`uint8_t vsel1Port`
Smart card PHY Vsel1 control port instance

`uint8_t vsel1Pin`
Smart card PHY Vsel1 control pin instance

`uint8_t dataPort`
Smart card PHY data port instance

`uint8_t dataPin`
Smart card PHY data pin instance

`uint8_t dataPinMux`
Smart card PHY data pin mux option

`uint8_t tsTimerId`
Numerical identifier of the External HW timer for Initial character detection

`struct _smartcard_xfer`
#include <fsl_smartcard.h> Defines user transfer structure used to initialize transfer.

Public Members

`smartcard_direction_t direction`
Direction of communication. (RX/TX)

`uint8_t *buff`
The buffer of data.

`size_t size`
The number of transferred units.

`struct _smartcard_context`
#include <fsl_smartcard.h> Runtime state of the Smart card driver.

Public Members

`void *base`
Smart card module base address

smartcard_direction_t direction

Direction of communication. (RX/TX)

uint8_t *xBuff

The buffer of data being transferred.

volatile size_t xSize

The number of bytes to be transferred.

volatile bool xIsBusy

True if there is an active transfer.

uint8_t txFifoEntryCount

Number of data word entries in transmit FIFO.

uint8_t rxFifoThreshold

The max value of the receiver FIFO threshold.

smartcard_interface_callback_t interfaceCallback

Callback to invoke after interface IC raised interrupt.

smartcard_transfer_callback_t transferCallback

Callback to invoke after transfer event occur.

void *interfaceCallbackParam

Interface callback parameter pointer.

void *transferCallbackParam

Transfer callback parameter pointer.

smartcard_time_delay_t timeDelay

Function which handles time delay defined by user or RTOS.

smartcard_reset_type_t resetType

Indicates whether a Cold reset or Warm reset was requested.

smartcard_transport_type_t tType

Indicates current transfer protocol (T0 or T1)

volatile *smartcard_transfer_state_t* transferState

Indicates the current transfer state

smartcard_timers_state_t timersState

Indicates the state of different protocol timers used in driver

smartcard_card_params_t cardParams

Smart card parameters(ATR and current) and interface slots states(ATR and current)

uint8_t IFSD

Indicates the terminal IFSD

smartcard_parity_type_t parity

Indicates current parity even/odd

volatile bool rxtCrossed

Indicates whether RXT thresholds has been crossed

volatile bool txtCrossed

Indicates whether TXT thresholds has been crossed

volatile bool wtxRequested

Indicates whether WTX has been requested or not

volatile bool parityError

Indicates whether a parity error has been detected

uint8_t statusBytes[2]

Used to store Status bytes SW1, SW2 of the last executed card command response

smartcard_interface_config_t interfaceConfig

Smart card interface configuration structure

bool abortTransfer

Used to abort transfer.

2.48 Smart Card PHY Driver

void SMARTCARD_PHY_GetDefaultConfig(*smartcard_interface_config_t* *config)

Fills in the configuration structure with default values.

Parameters

- config – The Smart card user configuration structure which contains configuration structure of type *smartcard_interface_config_t*. Function fill in members: clockToResetDelay = 42000, vcc = kSmartcardVoltageClassB3_3V, with default values.

status_t SMARTCARD_PHY_Init(void *base, *smartcard_interface_config_t* const *config, uint32_t srcClock_Hz)

Initializes a Smart card interface instance.

Parameters

- base – The Smart card peripheral base address.
- config – The user configuration structure of type *smartcard_interface_config_t*. Call the function SMARTCARD_PHY_GetDefaultConfig() to fill the configuration structure.
- srcClock_Hz – Smart card clock generation module source clock.

Return values

kStatus_SMARTCARD_Success – or kStatus_SMARTCARD_OtherError in case of error.

void SMARTCARD_PHY_Deinit(void *base, *smartcard_interface_config_t* const *config)

De-initializes a Smart card interface, stops the Smart card clock, and disables the VCC.

Parameters

- base – The Smart card peripheral module base address.
- config – The user configuration structure of type *smartcard_interface_config_t*.

status_t SMARTCARD_PHY_Activate(void *base, *smartcard_context_t* *context, *smartcard_reset_type_t* resetType)

Activates the Smart card IC.

Parameters

- base – The Smart card peripheral module base address.
- context – A pointer to a Smart card driver context structure.
- resetType – type of reset to be performed, possible values = kSmartcardColdReset, kSmartcardWarmReset

Return values

kStatus_SMARTCARD_Success – or kStatus_SMARTCARD_OtherError in case of error.

status_t SMARTCARD_PHY_Deactivate(void *base, *smartcard_context_t* *context)

De-activates the Smart card IC.

Parameters

- base – The Smart card peripheral module base address.
- context – A pointer to a Smart card driver context structure.

Return values

kStatus_SMARTCARD_Success – or kStatus_SMARTCARD_OtherError in case of error.

status_t SMARTCARD_PHY_Control(void *base, *smartcard_context_t* *context, *smartcard_interface_control_t* control, uint32_t param)

Controls the Smart card interface IC.

Parameters

- base – The Smart card peripheral module base address.
- context – A pointer to a Smart card driver context structure.
- control – A interface command type.
- param – Integer value specific to control type

Return values

kStatus_SMARTCARD_Success – or kStatus_SMARTCARD_OtherError in case of error.

SMARTCARD_ATR_DURATION_ADJUSTMENT

Smart card definition which specifies the adjustment number of clock cycles during which an ATR string has to be received.

SMARTCARD_INIT_DELAY_CLOCK_CYCLES_ADJUSTMENT

Smart card definition which specifies the adjustment number of clock cycles until an initial 'TS' character has to be received.

2.49 Smart Card PHY GPIO Driver

2.50 Smart Card PHY TDA8035 Driver

2.51 Smart Card UART Driver

void SMARTCARD_UART_GetDefaultConfig(*smartcard_card_params_t* *cardParams)

Fills in the *smartcard_card_params* structure with default values according to the EMV 4.3 specification.

Parameters

- cardParams – The configuration structure of type *smartcard_interface_config_t*. Function fill in members: Fi = 372; Di = 1; currentD = 1; WI = 0x0A; GTN = 0x00; with default values.

status_t SMARTCARD_UART_Init(UART_Type *base, *smartcard_context_t* *context, uint32_t srcClock_Hz)

Initializes a UART peripheral for the Smart card/ISO-7816 operation.

This function un-gates the UART clock, initializes the module to EMV default settings, configures the IRQ, enables the module-level interrupt to the core, and initializes the driver context.

Parameters

- base – The UART peripheral base address.
- context – A pointer to a smart card driver context structure.
- srcClock_Hz – Smart card clock generation module source clock.

Returns

An error code or kStatus_SMARTCARD_Success.

void SMARTCARD_UART_Deinit(UART_Type *base)

This function disables the UART interrupts, disables the transmitter and receiver, and flushes the FIFOs (for modules that support FIFOs) and gates UART clock in SIM.

Parameters

- base – The UART peripheral base address.

int32_t SMARTCARD_UART_GetTransferRemainingBytes(UART_Type *base,
smartcard_context_t *context)

Returns whether the previous UART transfer has finished.

When performing an async transfer, call this function to ascertain the context of the current transfer: in progress (or busy) or complete (success). If the transfer is still in progress, the user can obtain the number of words that have not been transferred by reading xSize of smart card context structure.

Parameters

- base – The UART peripheral base address.
- context – A pointer to a Smart card driver context structure.

Returns

The number of bytes not transferred.

status_t SMARTCARD_UART_AbortTransfer(UART_Type *base, *smartcard_context_t* *context)

Terminates an asynchronous UART transfer early.

During an async UART transfer, the user can terminate the transfer early if the transfer is still in progress.

Parameters

- base – The UART peripheral base address.
- context – A pointer to a Smart card driver context structure.

Return values

- kStatus_SMARTCARD_Success – The transfer abort was successful.
- kStatus_SMARTCARD_NoTransmitInProgress – No transmission is currently in progress.

status_t SMARTCARD_UART_TransferNonBlocking(UART_Type *base, *smartcard_context_t* *context, *smartcard_xfer_t* *xfer)

Transfers data using interrupts.

A non-blocking (also known as asynchronous) function means that the function returns immediately after initiating the transfer function. The application has to get the transfer status to see when the transfer is complete. In other words, after calling non-blocking (asynchronous) transfer function, the application must get the transfer status to check if transmit is completed or not.

Parameters

- `base` – The UART peripheral base address.
- `context` – A pointer to a Smart card driver context structure.
- `xfer` – A pointer to Smart card transfer structure where the linked buffers and sizes are stored.

Returns

An error code or `kStatus_SMARTCARD_Success`.

```
status_t SMARTCARD__UART__Control(UART_Type *base, smartcard_context_t *context,  
                                   smartcard_control_t control, uint32_t param)
```

Controls the UART module per different user requests.

return An `kStatus_SMARTCARD_OtherError` in case of error return `kStatus_SMARTCARD_Success` in success

Parameters

- `base` – The UART peripheral base address.
- `context` – A pointer to a smart card driver context structure.
- `control` – Smart card command type.
- `param` – Integer value specific to a control command.

```
void SMARTCARD__UART__IRQHandler(UART_Type *base, smartcard_context_t *context)
```

Interrupt handler for UART.

This handler uses the buffers stored in the `smartcard_context_t` structures to transfer data. The Smart card driver requires this function to call when the UART interrupt occurs.

Parameters

- `base` – The UART peripheral base address.
- `context` – A pointer to a Smart card driver context structure.

```
void SMARTCARD__UART__ErrIRQHandler(UART_Type *base, smartcard_context_t *context)
```

Error interrupt handler for UART.

This function handles error conditions during a transfer.

Parameters

- `base` – The UART peripheral base address.
- `context` – A pointer to a Smart card driver context structure.

```
void SMARTCARD__UART__TSExpiryCallback(UART_Type *base, smartcard_context_t *context)
```

Handles initial TS character timer time-out event.

Parameters

- `base` – The UART peripheral base address.
- `context` – A pointer to a Smart card driver context structure.

`void smartcard_uart_TimerStart(uint8_t channel, uint32_t time)`

Initializes timer specific channel with input period, enable channel interrupt and start counter.

Parameters

- channel – The timer channel.
- time – The time period.

`SMARTCARD_EMV_RX_NACK_THRESHOLD`

EMV RX NACK interrupt generation threshold.

`SMARTCARD_EMV_TX_NACK_THRESHOLD`

EMV TX NACK interrupt generation threshold.

`SMARTCARD_EMV_RX_TO_TX_GUARD_TIME_T0`

EMV TX & RX GUART TIME default value.

`SBR_CAL_ADJUST_D1_T0`

`BRFA_CAL_ADJUST_D1_T0`

`SBR_CAL_ADJUST_D2_T0`

`BRFA_CAL_ADJUST_D2_T0`

`SBR_CAL_ADJUST_D4_T0`

`BRFA_CAL_ADJUST_D4_T0`

`SBR_CAL_ADJUST_D1_T1`

`BRFA_CAL_ADJUST_D1_T1`

`SBR_CAL_ADJUST_D2_T1`

`BRFA_CAL_ADJUST_D2_T1`

`SBR_CAL_ADJUST_D4_T1`

`BRFA_CAL_ADJUST_D4_T1`

2.52 SMC: System Mode Controller Driver

`static inline void SMC_GetVersionId(SMC_Type *base, smc_version_id_t *versionId)`

Gets the SMC version ID.

This function gets the SMC version ID, including major version number, minor version number, and feature specification number.

Parameters

- base – SMC peripheral base address.
- versionId – Pointer to the version ID structure.

`void SMC_GetParam(SMC_Type *base, smc_param_t *param)`

Gets the SMC parameter.

This function gets the SMC parameter including the enabled power mdoes.

Parameters

- base – SMC peripheral base address.

- param – Pointer to the SMC param structure.

`static inline void SMC_SetPowerModeProtection(SMC_Type *base, uint8_t allowedModes)`

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes in the specified chip family. The available power modes are defined in the `smc_power_mode_protection_t`. This should be done at an early system level initialization stage. See the reference manual for details. This register can only write once after the power reset.

The allowed modes are passed as bit map. For example, to allow LLS and VLLS, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeVlls | kSMC_AllowPowerModeVlps)`. To allow all modes, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeAll)`.

Parameters

- base – SMC peripheral base address.
- allowedModes – Bitmap of the allowed power modes.

`static inline smc_power_state_t SMC_GetPowerModeState(SMC_Type *base)`

Gets the current power mode status.

This function returns the current power mode status. After the application switches the power mode, it should always check the status to check whether it runs into the specified mode or not. The application should check this mode before switching to a different mode. The system requires that only certain modes can switch to other specific modes. See the reference manual for details and the `smc_power_state_t` for information about the power status.

Parameters

- base – SMC peripheral base address.

Returns

Current power mode status.

`void SMC_PreEnterStopModes(void)`

Prepares to enter stop modes.

This function should be called before entering STOP/VLPS/LLS/VLLS modes.

`void SMC_PostExitStopModes(void)`

Recovers after wake up from stop modes.

This function should be called after wake up from STOP/VLPS/LLS/VLLS modes. It is used with `SMC_PreEnterStopModes`.

`void SMC_PreEnterWaitModes(void)`

Prepares to enter wait modes.

This function should be called before entering WAIT/VLPW modes.

`void SMC_PostExitWaitModes(void)`

Recovers after wake up from stop modes.

This function should be called after wake up from WAIT/VLPW modes. It is used with `SMC_PreEnterWaitModes`.

`status_t SMC_SetPowerModeRun(SMC_Type *base)`

Configures the system to RUN power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeHsrn(SMC_Type *base)

Configures the system to HSRUN power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeWait(SMC_Type *base)

Configures the system to WAIT power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeStop(SMC_Type *base, *smc_partial_stop_option_t* option)

Configures the system to Stop power mode.

Parameters

- base – SMC peripheral base address.
- option – Partial Stop mode option.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpr(SMC_Type *base, bool wakeupMode)

Configures the system to VLPR power mode.

Parameters

- base – SMC peripheral base address.
- wakeupMode – Enter Normal Run mode if true, else stay in VLPR mode.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpw(SMC_Type *base)

Configures the system to VLPW power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlps(SMC_Type *base)

Configures the system to VLPS power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeLls(SMC_Type *base, const *smc_power_mode_lls_config_t* *config)

Configures the system to LLS power mode.

Parameters

- base – SMC peripheral base address.
- config – The LLS power mode configuration structure

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlls(SMC_Type *base, const *smc_power_mode_vlls_config_t* *config)

Configures the system to VLLS power mode.

Parameters

- base – SMC peripheral base address.
- config – The VLLS power mode configuration structure.

Returns

SMC configuration error code.

FSL_SMC_DRIVER_VERSION

SMC driver version.

enum _smc_power_mode_protection

Power Modes Protection.

Values:

enumerator kSMC_AllowPowerModeVlls
Allow Very-low-leakage Stop Mode.

enumerator kSMC_AllowPowerModeLls
Allow Low-leakage Stop Mode.

enumerator kSMC_AllowPowerModeVlp
Allow Very-Low-power Mode.

enumerator kSMC_AllowPowerModeHsrn
Allow High-speed Run mode.

enumerator kSMC_AllowPowerModeAll
Allow all power mode.

enum _smc_power_state

Power Modes in PMSTAT.

Values:

enumerator kSMC_PowerStateRun
0000_0001 - Current power mode is RUN

enumerator kSMC_PowerStateStop
0000_0010 - Current power mode is STOP

enumerator kSMC_PowerStateVlpr
0000_0100 - Current power mode is VLPR

enumerator kSMC_PowerStateVlpw
0000_1000 - Current power mode is VLPW

enumerator kSMC_PowerStateVlps
0001_0000 - Current power mode is VLPS

enumerator kSMC_PowerStateLls
0010_0000 - Current power mode is LLS

enumerator kSMC_PowerStateVlls
0100_0000 - Current power mode is VLLS

enumerator kSMC_PowerStateHsrn
1000_0000 - Current power mode is HSRUN

enum _smc_run_mode
Run mode definition.

Values:

enumerator kSMC_RunNormal
Normal RUN mode.

enumerator kSMC_RunVlpr
Very-low-power RUN mode.

enumerator kSMC_Hsrn
High-speed Run mode (HSRUN).

enum _smc_stop_mode
Stop mode definition.

Values:

enumerator kSMC_StopNormal
Normal STOP mode.

enumerator kSMC_StopVlps
Very-low-power STOP mode.

enumerator kSMC_StopLls
Low-leakage Stop mode.

enumerator kSMC_StopVlls
Very-low-leakage Stop mode.

enum _smc_stop_submode
VLLS/LLS stop sub mode definition.

Values:

enumerator kSMC_StopSub0
Stop submode 0, for VLLS0/LLS0.

enumerator kSMC_StopSub1
Stop submode 1, for VLLS1/LLS1.

enumerator kSMC_StopSub2
Stop submode 2, for VLLS2/LLS2.

enumerator kSMC_StopSub3
Stop submode 3, for VLLS3/LLS3.

enum _smc_partial_stop_mode
Partial STOP option.

Values:

enumerator kSMC_PartialStop
STOP - Normal Stop mode

enumerator kSMC_PartialStop1

Partial Stop with both system and bus clocks disabled

enumerator kSMC_PartialStop2

Partial Stop with system clock disabled and bus clock enabled

_smc_status, SMC configuration status.

Values:

enumerator kStatus_SMC_StopAbort

Entering Stop mode is abort

typedef enum _smc_power_mode_protection smc_power_mode_protection_t

Power Modes Protection.

typedef enum _smc_power_state smc_power_state_t

Power Modes in PMSTAT.

typedef enum _smc_run_mode smc_run_mode_t

Run mode definition.

typedef enum _smc_stop_mode smc_stop_mode_t

Stop mode definition.

typedef enum _smc_stop_submode smc_stop_submode_t

VLLS/LLS stop sub mode definition.

typedef enum _smc_partial_stop_mode smc_partial_stop_option_t

Partial STOP option.

typedef struct _smc_version_id smc_version_id_t

IP version ID definition.

typedef struct _smc_param smc_param_t

IP parameter definition.

typedef struct _smc_power_mode_lls_config smc_power_mode_lls_config_t

SMC Low-Leakage Stop power mode configuration.

typedef struct _smc_power_mode_vlls_config smc_power_mode_vlls_config_t

SMC Very Low-Leakage Stop power mode configuration.

struct _smc_version_id

#include <fsl_smc.h> IP version ID definition.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor version number.

uint8_t major

Major version number.

struct _smc_param

#include <fsl_smc.h> IP parameter definition.

Public Members

bool hsruntimeEnable
HSRUN mode enable.

bool llsEnable
LLS mode enable.

bool lls2Enable
LLS2 mode enable.

bool vlls0Enable
VLLS0 mode enable.

struct _smc_power_mode_lls_config
#include <fsl_smc.h> SMC Low-Leakage Stop power mode configuration.

Public Members

smc_stop_submode_t subMode
Low-leakage Stop sub-mode

bool enableLpoClock
Enable LPO clock in LLS mode

struct _smc_power_mode_vlls_config
#include <fsl_smc.h> SMC Very Low-Leakage Stop power mode configuration.

Public Members

smc_stop_submode_t subMode
Very Low-leakage Stop sub-mode

bool enablePorDetectInVlls0
Enable Power on reset detect in VLLS mode

bool enableRam2InVlls2
Enable RAM2 power in VLLS2

bool enableLpoClock
Enable LPO clock in VLLS mode

2.53 UART: Universal Asynchronous Receiver/Transmitter Driver

2.54 UART Driver

status_t UART_Init(UART_Type *base, const uart_config_t *config, uint32_t srcClock_Hz)
Initializes a UART instance with a user configuration structure and peripheral clock.

This function configures the UART module with the user-defined settings. The user can configure the configuration structure and also get the default configuration by using the UART_GetDefaultConfig() function. The example below shows how to use this API to configure UART.

```
uart_config_t uartConfig;  
uartConfig.baudRate_Bps = 115200U;  
uartConfig.parityMode = kUART_ParityDisabled;  
uartConfig.stopBitCount = kUART_OneStopBit;  
uartConfig.txFifoWatermark = 0;  
uartConfig.rxFifoWatermark = 1;  
UART_Init(UART1, &uartConfig, 20000000U);
```

Parameters

- base – UART peripheral base address.
- config – Pointer to the user-defined configuration structure.
- srcClock_Hz – UART clock source frequency in HZ.

Return values

- kStatus_UART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – Status UART initialize succeed

`void UART_Deinit(UART_Type *base)`

Deinitializes a UART instance.

This function waits for TX complete, disables TX and RX, and disables the UART clock.

Parameters

- base – UART peripheral base address.

`void UART_GetDefaultConfig(uart_config_t *config)`

Gets the default configuration structure.

This function initializes the UART configuration structure to a default value. The default values are as follows. `uartConfig->baudRate_Bps = 115200U`; `uartConfig->bitCountPerChar = kUART_8BitsPerChar`; `uartConfig->parityMode = kUART_ParityDisabled`; `uartConfig->stopBitCount = kUART_OneStopBit`; `uartConfig->txFifoWatermark = 0`; `uartConfig->rxFifoWatermark = 1`; `uartConfig->idleType = kUART_IdleTypeStartBit`; `uartConfig->enableTx = false`; `uartConfig->enableRx = false`;

Parameters

- config – Pointer to configuration structure.

`status_t UART_SetBaudRate(UART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)`

Sets the UART instance baud rate.

This function configures the UART module baud rate. This function is used to update the UART module baud rate after the UART module is initialized by the `UART_Init`.

```
UART_SetBaudRate(UART1, 115200U, 20000000U);
```

Parameters

- base – UART peripheral base address.
- baudRate_Bps – UART baudrate to be set.
- srcClock_Hz – UART clock source frequency in Hz.

Return values

- kStatus_UART_BaudrateNotSupport – Baudrate is not support in the current clock source.
- kStatus_Success – Set baudrate succeeded.

```
void UART_Enable9bitMode(UART_Type *base, bool enable)
```

Enable 9-bit data mode for UART.

This function set the 9-bit mode for UART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – UART peripheral base address.
- enable – true to enable, false to disable.

```
static inline void UART_SetMatchAddress(UART_Type *base, uint8_t address1, uint8_t address2)
```

Set the UART slave address.

This function configures the address for UART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any UART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – UART peripheral base address.
- address1 – UART slave address 1.
- address2 – UART slave address 2.

```
static inline void UART_EnableMatchAddress(UART_Type *base, bool match1, bool match2)
```

Enable the UART match address feature.

Parameters

- base – UART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void UART_Set9thTransmitBit(UART_Type *base)
```

Set UART 9th transmit bit.

Parameters

- base – UART peripheral base address.

```
static inline void UART_Clear9thTransmitBit(UART_Type *base)
```

Clear UART 9th transmit bit.

Parameters

- base – UART peripheral base address.

```
uint32_t UART_GetStatusFlags(UART_Type *base)
```

Gets UART status flags.

This function gets all UART status flags. The flags are returned as the logical OR value of the enumerators `_uart_flags`. To check a specific status, compare the return value with enumerators in `_uart_flags`. For example, to check whether the TX is empty, do the following.

```
if (kUART_TxDataRegEmptyFlag & UART_GetStatusFlags(UART1))
{
    ...
}
```

Parameters

- base – UART peripheral base address.

Returns

UART status flags which are ORed by the enumerators in the `_uart_flags`.

`status_t` UART_ClearStatusFlags(UART_Type *base, uint32_t mask)

Clears status flags with the provided mask.

This function clears UART status flags with a provided mask. An automatically cleared flag can't be cleared by this function. These flags can only be cleared or set by hardware. `kUART_TxDataRegEmptyFlag`, `kUART_TransmissionCompleteFlag`, `kUART_RxDataRegFullFlag`, `kUART_RxActiveFlag`, `kUART_NoiseErrorInRxDataRegFlag`, `kUART_ParityErrorInRxDataRegFlag`, `kUART_TxFifoEmptyFlag`, `kUART_RxFifoEmptyFlag`

Note: that this API should be called when the Tx/Rx is idle. Otherwise it has no effect.

Parameters

- base – UART peripheral base address.
- mask – The status flags to be cleared; it is logical OR value of `_uart_flags`.

Return values

- `kStatus_UART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask is cleared.

`void` UART_EnableInterrupts(UART_Type *base, uint32_t mask)

Enables UART interrupts according to the provided mask.

This function enables the UART interrupts according to the provided mask. The mask is a logical OR of enumeration members. See `_uart_interrupt_enable`. For example, to enable TX empty interrupt and RX full interrupt, do the following.

```
UART_EnableInterrupts(UART1, kUART_TxDataRegEmptyInterruptEnable | kUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – UART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_uart_interrupt_enable`.

`void` UART_DisableInterrupts(UART_Type *base, uint32_t mask)

Disables the UART interrupts according to the provided mask.

This function disables the UART interrupts according to the provided mask. The mask is a logical OR of enumeration members. See `_uart_interrupt_enable`. For example, to disable TX empty interrupt and RX full interrupt do the following.

```
UART_DisableInterrupts(UART1, kUART_TxDataRegEmptyInterruptEnable | kUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – UART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_uart_interrupt_enable`.

`uint32_t UART_GetEnabledInterrupts(UART_Type *base)`

Gets the enabled UART interrupts.

This function gets the enabled UART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_uart_interrupt_enable`. To check a specific interrupts enable status, compare the return value with enumerators in `_uart_interrupt_enable`. For example, to check whether TX empty interrupt is enabled, do the following.

```
uint32_t enabledInterrupts = UART_GetEnabledInterrupts(UART1);

if (kUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – UART peripheral base address.

Returns

UART interrupt flags which are logical OR of the enumerators in `_uart_interrupt_enable`.

`static inline uint32_t UART_GetDataRegisterAddress(UART_Type *base)`

Gets the UART data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – UART peripheral base address.

Returns

UART data register addresses which are used both by the transmitter and the receiver.

`static inline void UART_EnableTxDMA(UART_Type *base, bool enable)`

Enables or disables the UART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `S1[TDRE]`, to generate the DMA requests.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

`static inline void UART_EnableRxDMA(UART_Type *base, bool enable)`

Enables or disables the UART receiver DMA.

This function enables or disables the receiver data register full flag, `S1[RDRF]`, to generate DMA requests.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

`static inline void UART_EnableTx(UART_Type *base, bool enable)`

Enables or disables the UART transmitter.

This function enables or disables the UART transmitter.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void UART__EnableRx(UART_Type *base, bool enable)
```

Enables or disables the UART receiver.

This function enables or disables the UART receiver.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void UART__WriteByte(UART_Type *base, uint8_t data)
```

Writes to the TX register.

This function writes data to the TX register directly. The upper layer must ensure that the TX register is empty or TX FIFO has empty room before calling this function.

Parameters

- base – UART peripheral base address.
- data – The byte to write.

```
static inline uint8_t UART__ReadByte(UART_Type *base)
```

Reads the RX register directly.

This function reads data from the RX register directly. The upper layer must ensure that the RX register is full or that the TX FIFO has data before calling this function.

Parameters

- base – UART peripheral base address.

Returns

The byte read from UART data register.

```
static inline uint8_t UART__GetRxFifoCount(UART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – UART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t UART__GetTxFifoCount(UART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – UART peripheral base address.

Returns

tx FIFO data count.

```
void UART__SendAddress(UART_Type *base, uint8_t address)
```

Transmit an address frame in 9-bit data mode.

Parameters

- base – UART peripheral base address.
- address – UART slave address.

status_t UART_WriteBlocking(UART_Type *base, const uint8_t *data, size_t length)

Writes to the TX register using a blocking method.

This function polls the TX register, waits for the TX register to be empty or for the TX FIFO to have room and writes data to the TX buffer.

Parameters

- base – UART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t UART_ReadBlocking(UART_Type *base, uint8_t *data, size_t length)

Read RX data register using a blocking method.

This function polls the RX register, waits for the RX register to be full or for RX FIFO to have data, and reads data from the TX register.

Parameters

- base – UART peripheral base address.
- data – Start address of the buffer to store the received data.
- length – Size of the buffer.

Return values

- kStatus_UART_RxHardwareOverrun – Receiver overrun occurred while receiving data.
- kStatus_UART_NoiseError – A noise error occurred while receiving data.
- kStatus_UART_FramingError – A framing error occurred while receiving data.
- kStatus_UART_ParityError – A parity error occurred while receiving data.
- kStatus_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

void UART_TransferCreateHandle(UART_Type *base, *uart_handle_t* *handle,
uart_transfer_callback_t callback, void *userData)

Initializes the UART handle.

This function initializes the UART handle which can be used for other UART transactional APIs. Usually, for a specified UART instance, call this API once to get the initialized handle.

Parameters

- base – UART peripheral base address.
- handle – UART handle pointer.
- callback – The callback function.
- userData – The parameter of the callback function.

void UART_TransferStartRingBuffer(UART_Type *base, *uart_handle_t* *handle, uint8_t
*ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received are stored into the ring buffer even when the user doesn't call the `UART_TransferReceiveNonBlocking()` API. If data is already received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if `ringBufferSize` is 32, only 31 bytes are used for saving data.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `ringBuffer` – Start address of the ring buffer for background receiving. Pass `NULL` to disable the ring buffer.
- `ringBufferSize` – Size of the ring buffer.

`void UART_TransferStopRingBuffer(UART_Type *base, uart_handle_t *handle)`

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.

`size_t UART_TransferGetRxRingBufferLength(uart_handle_t *handle)`

Get the length of received data in RX ring buffer.

Parameters

- `handle` – UART handle pointer.

Returns

Length of received data in RX ring buffer.

`status_t UART_TransferSendNonBlocking(UART_Type *base, uart_handle_t *handle, uart_transfer_t *xfer)`

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in the ISR, the UART driver calls the callback function and passes the `kStatus_UART_TxIdle` as status parameter.

Note: The `kStatus_UART_TxIdle` is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out. Before disabling the TX, check the `kUART_TransmissionCompleteFlag` to ensure that the TX is finished.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `xfer` – UART transfer structure. See `uart_transfer_t`.

Return values

- `kStatus_Success` – Successfully start the data transmission.
- `kStatus_UART_TxBusy` – Previous transmission still not finished; data not all written to TX register yet.
- `kStatus_InvalidArgument` – Invalid argument.

`void UART_TransferAbortSend(UART_Type *base, uart_handle_t *handle)`

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. The user can get the `remainBytes` to find out how many bytes are not sent out.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.

`status_t UART_TransferGetSendCount(UART_Type *base, uart_handle_t *handle, uint32_t *count)`

Gets the number of bytes sent out to bus.

This function gets the number of bytes sent out to bus by using the interrupt method.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – The parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t UART_TransferReceiveNonBlocking(UART_Type *base, uart_handle_t *handle, uart_transfer_t *xfer, size_t *receivedBytes)`

Receives a buffer of data using an interrupt method.

This function receives data using an interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough to read, the receive request is saved by the UART driver. When the new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer. The 5 bytes are copied to the `xfer->data` and this function returns with the parameter `receivedBytes` set to 5. For the left 5 bytes, newly arrived data is saved from the `xfer->data[5]`. When 5 bytes are received, the UART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to the `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `xfer` – UART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into transmit queue.
- `kStatus_UART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void UART_TransferAbortReceive(UART_Type *base, uart_handle_t *handle)`

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to know how many bytes are not received yet.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.

`status_t UART_TransferGetReceiveCount(UART_Type *base, uart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t UART_EnableTxFIFO(UART_Type *base, bool enable)`

Enables or disables the UART Tx FIFO.

This function enables or disables the UART Tx FIFO.

param `base` UART peripheral base address. param `enable` true to enable, false to disable. retval `kStatus_Success` Successfully turn on or turn off Tx FIFO. retval `kStatus_Fail` Fail to turn on or turn off Tx FIFO.

`status_t UART_EnableRxFIFO(UART_Type *base, bool enable)`

Enables or disables the UART Rx FIFO.

This function enables or disables the UART Rx FIFO.

param `base` UART peripheral base address. param `enable` true to enable, false to disable. retval `kStatus_Success` Successfully turn on or turn off Rx FIFO. retval `kStatus_Fail` Fail to turn on or turn off Rx FIFO.

`static inline void UART_SetRxFifoWatermark(UART_Type *base, uint8_t water)`

Sets the rx FIFO watermark.

Parameters

- `base` – UART peripheral base address.
- `water` – Rx FIFO watermark.

```
static inline void UART_SetTxFifoWatermark(UART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – UART peripheral base address.
- water – Tx FIFO watermark.

```
void UART_TransferHandleIRQ(UART_Type *base, void *irqHandle)
```

UART IRQ handle function.

This function handles the UART transmit and receive IRQ request.

Parameters

- base – UART peripheral base address.
- irqHandle – UART handle pointer.

```
void UART_TransferHandleErrorIRQ(UART_Type *base, void *irqHandle)
```

UART Error IRQ handle function.

This function handles the UART error IRQ request.

Parameters

- base – UART peripheral base address.
- irqHandle – UART handle pointer.

```
FSL_UART_DRIVER_VERSION
```

UART driver version.

Error codes for the UART driver.

Values:

```
enumerator kStatus_UART_TxBusy
```

Transmitter is busy.

```
enumerator kStatus_UART_RxBusy
```

Receiver is busy.

```
enumerator kStatus_UART_TxIdle
```

UART transmitter is idle.

```
enumerator kStatus_UART_RxIdle
```

UART receiver is idle.

```
enumerator kStatus_UART_TxWatermarkTooLarge
```

TX FIFO watermark too large

```
enumerator kStatus_UART_RxWatermarkTooLarge
```

RX FIFO watermark too large

```
enumerator kStatus_UART_FlagCannotClearManually
```

UART flag can't be manually cleared.

```
enumerator kStatus_UART_Error
```

Error happens on UART.

```
enumerator kStatus_UART_RxRingBufferOverrun
```

UART RX software ring buffer overrun.

enumerator kStatus_UART_RxHardwareOverrun
UART RX receiver overrun.

enumerator kStatus_UART_NoiseError
UART noise error.

enumerator kStatus_UART_FramingError
UART framing error.

enumerator kStatus_UART_ParityError
UART parity error.

enumerator kStatus_UART_BaudrateNotSupport
Baudrate is not support in current clock source

enumerator kStatus_UART_IdleLineDetected
UART IDLE line detected.

enumerator kStatus_UART_Timeout
UART times out.

enum _uart_parity_mode
UART parity mode.

Values:

enumerator kUART_ParityDisabled
Parity disabled

enumerator kUART_ParityEven
Parity enabled, type even, bit setting: PE|PT = 10

enumerator kUART_ParityOdd
Parity enabled, type odd, bit setting: PE|PT = 11

enum _uart_stop_bit_count
UART stop bit count.

Values:

enumerator kUART_OneStopBit
One stop bit

enumerator kUART_TwoStopBit
Two stop bits

enum _uart_idle_type_select
UART idle type select.

Values:

enumerator kUART_IdleTypeStartBit
Start counting after a valid start bit.

enumerator kUART_IdleTypeStopBit
Start counting after a stop bit.

enum _uart_interrupt_enable
UART interrupt configuration structure, default settings all disabled.
This structure contains the settings for all of the UART interrupt configurations.

Values:

enumerator kUART_LinBreakInterruptEnable
LIN break detect interrupt.

enumerator kUART_RxActiveEdgeInterruptEnable
RX active edge interrupt.

enumerator kUART_TxDataRegEmptyInterruptEnable
Transmit data register empty interrupt.

enumerator kUART_TransmissionCompleteInterruptEnable
Transmission complete interrupt.

enumerator kUART_RxDataRegFullInterruptEnable
Receiver data register full interrupt.

enumerator kUART_IdleLineInterruptEnable
Idle line interrupt.

enumerator kUART_RxOverrunInterruptEnable
Receiver overrun interrupt.

enumerator kUART_NoiseErrorInterruptEnable
Noise error flag interrupt.

enumerator kUART_FramingErrorInterruptEnable
Framing error flag interrupt.

enumerator kUART_ParityErrorInterruptEnable
Parity error flag interrupt.

enumerator kUART_RxFifoOverflowInterruptEnable
RX FIFO overflow interrupt.

enumerator kUART_TxFifoOverflowInterruptEnable
TX FIFO overflow interrupt.

enumerator kUART_RxFifoUnderflowInterruptEnable
RX FIFO underflow interrupt.

enumerator kUART_AllInterruptsEnable

UART status flags.

This provides constants for the UART status flags for use in the UART functions.

Values:

enumerator kUART_TxDataRegEmptyFlag
TX data register empty flag.

enumerator kUART_TransmissionCompleteFlag
Transmission complete flag.

enumerator kUART_RxDataRegFullFlag
RX data register full flag.

enumerator kUART_IdleLineFlag
Idle line detect flag.

enumerator kUART_RxOverrunFlag
RX overrun flag.

enumerator `kUART_NoiseErrorFlag`

RX takes 3 samples of each received bit. If any of these samples differ, noise flag sets

enumerator `kUART_FramingErrorFlag`

Frame error flag, sets if logic 0 was detected where stop bit expected

enumerator `kUART_ParityErrorFlag`

If parity enabled, sets upon parity error detection

enumerator `kUART_LinBreakFlag`

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled

enumerator `kUART_RxActiveEdgeFlag`

RX pin active edge interrupt flag, sets when active edge detected

enumerator `kUART_RxActiveFlag`

Receiver Active Flag (RAF), sets at beginning of valid start bit

enumerator `kUART_NoiseErrorInRxDataRegFlag`

Noisy bit, sets if noise detected.

enumerator `kUART_ParityErrorInRxDataRegFlag`

Parity bit, sets if parity error detected.

enumerator `kUART_TxFifoEmptyFlag`

TXEMPTY bit, sets if TX buffer is empty

enumerator `kUART_RxFifoEmptyFlag`

RXEMPTY bit, sets if RX buffer is empty

enumerator `kUART_TxFifoOverflowFlag`

TXOF bit, sets if TX buffer overflow occurred

enumerator `kUART_RxFifoOverflowFlag`

RXOF bit, sets if receive buffer overflow

enumerator `kUART_RxFifoUnderflowFlag`

RXUF bit, sets if receive buffer underflow

typedef enum `_uart_parity_mode` `uart_parity_mode_t`

UART parity mode.

typedef enum `_uart_stop_bit_count` `uart_stop_bit_count_t`

UART stop bit count.

typedef enum `_uart_idle_type_select` `uart_idle_type_select_t`

UART idle type select.

typedef struct `_uart_config` `uart_config_t`

UART configuration structure.

typedef struct `_uart_transfer` `uart_transfer_t`

UART transfer structure.

typedef struct `_uart_handle` `uart_handle_t`

typedef void (*`uart_transfer_callback_t`)(`UART_Type` *`base`, `uart_handle_t` *`handle`, `status_t` `status`, void *`userData`)

UART transfer callback function.

typedef void (*`uart_isr_t`)(`UART_Type` *`base`, void *`handle`)

```
void *s_uartHandle[]
```

Pointers to uart handles for each instance.

```
const IRQn_Type s_uartIRQ[]
```

```
uart_isr_t s_uartIsr
```

Pointer to uart IRQ handler for each instance.

```
uint32_t UART_GetInstance(UART_Type *base)
```

Get the UART instance from peripheral base address.

Parameters

- base – UART peripheral base address.

Returns

UART instance.

```
UART_RETRY_TIMES
```

Retry times for waiting flag.

```
struct __uart_config
```

#include <fsl_uart.h> UART configuration structure.

Public Members

```
uint32_t baudRate_Bps
```

UART baud rate

```
uart_parity_mode_t parityMode
```

Parity mode, disabled (default), even, odd

```
uart_stop_bit_count_t stopBitCount
```

Number of stop bits, 1 stop bit (default) or 2 stop bits

```
uint8_t txFifoWatermark
```

TX FIFO watermark

```
uint8_t rxFifoWatermark
```

RX FIFO watermark

```
bool enableRxRTS
```

RX RTS enable

```
bool enableTxCTS
```

TX CTS enable

```
uart_idle_type_select_t idleType
```

IDLE type select.

```
bool enableTx
```

Enable TX

```
bool enableRx
```

Enable RX

```
struct __uart_transfer
```

#include <fsl_uart.h> UART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct __uart_handle

#include <fsl_uart.h> UART handle structure.

Public Members

const uint8_t *volatile txData

Address of remaining data to send.

volatile size_t txDataSize

Size of the remaining data to send.

size_t txDataSizeAll

Size of the data to send out.

uint8_t *volatile rxData

Address of remaining data to receive.

volatile size_t rxDataSize

Size of the remaining data to receive.

size_t rxDataSizeAll

Size of the data to receive.

uint8_t *rxRingBuffer

Start address of the receiver ring buffer.

size_t rxRingBufferSize

Size of the ring buffer.

volatile uint16_t rxRingBufferHead

Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail

Index for the user to get data from the ring buffer.

uart_transfer_callback_t callback

Callback function.

void *userData

UART callback function parameter.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

union __unnamed39__

Public Members

uint8_t *data

The buffer of data to be transfer.

uint8_t *rxData

The buffer to receive data.

```
const uint8_t *txData
```

The buffer of data to be sent.

2.55 UART eDMA Driver

```
void UART_TransferCreateHandleEDMA(UART_Type *base, uart_edma_handle_t *handle,
                                   uart_edma_transfer_callback_t callback, void
                                   *userData, edma_handle_t *txEdmaHandle,
                                   edma_handle_t *rxEdmaHandle)
```

Initializes the UART handle which is used in transactional functions.

Parameters

- base – UART peripheral base address.
- handle – Pointer to the `uart_edma_handle_t` structure.
- callback – UART callback, NULL means no callback.
- userData – User callback function data.
- rxEdmaHandle – User-requested DMA handle for RX DMA transfer.
- txEdmaHandle – User-requested DMA handle for TX DMA transfer.

```
status_t UART_SendEDMA(UART_Type *base, uart_edma_handle_t *handle, uart_transfer_t
                      *xfer)
```

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – UART peripheral base address.
- handle – UART handle pointer.
- xfer – UART eDMA transfer structure. See `uart_transfer_t`.

Return values

- `kStatus_Success` – if succeeded; otherwise failed.
- `kStatus_UART_TxBusy` – Previous transfer ongoing.
- `kStatus_InvalidArgument` – Invalid argument.

```
status_t UART_ReceiveEDMA(UART_Type *base, uart_edma_handle_t *handle, uart_transfer_t
                          *xfer)
```

Receives data using eDMA.

This function receives data using eDMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – UART peripheral base address.
- handle – Pointer to the `uart_edma_handle_t` structure.
- xfer – UART eDMA transfer structure. See `uart_transfer_t`.

Return values

- `kStatus_Success` – if succeeded; otherwise failed.
- `kStatus_UART_RxBusy` – Previous transfer ongoing.

- `kStatus_InvalidArgument` – Invalid argument.

`void UART_TransferAbortSendEDMA(UART_Type *base, uart_edma_handle_t *handle)`

Aborts the sent data using eDMA.

This function aborts sent data using eDMA.

Parameters

- `base` – UART peripheral base address.
- `handle` – Pointer to the `uart_edma_handle_t` structure.

`void UART_TransferAbortReceiveEDMA(UART_Type *base, uart_edma_handle_t *handle)`

Aborts the receive data using eDMA.

This function aborts receive data using eDMA.

Parameters

- `base` – UART peripheral base address.
- `handle` – Pointer to the `uart_edma_handle_t` structure.

`status_t UART_TransferGetSendCountEDMA(UART_Type *base, uart_edma_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been written to UART TX register.

This function gets the number of bytes that have been written to UART TX register by DMA.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t UART_TransferGetReceiveCountEDMA(UART_Type *base, uart_edma_handle_t *handle, uint32_t *count)`

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`void UART_TransferEdmaHandleIRQ(UART_Type *base, void *uartEdmaHandle)`

UART eDMA IRQ handle function.

This function handles the UART transmit complete IRQ request and invoke user callback.

Parameters

- base – UART peripheral base address.
- uartEdmaHandle – UART handle pointer.

FSL_UART_EDMA_DRIVER_VERSION

UART EDMA driver version.

```
typedef struct _uart_edma_handle uart_edma_handle_t
```

```
typedef void (*uart_edma_transfer_callback_t)(UART_Type *base, uart_edma_handle_t *handle,
status_t status, void *userData)
```

UART transfer callback function.

```
struct _uart_edma_handle
```

```
#include <fsl_uart_edma.h> UART eDMA handle.
```

Public Members

uart_edma_transfer_callback_t callback

Callback function.

void *userData

UART callback function parameter.

size_t rxDataSizeAll

Size of the data to receive.

size_t txDataSizeAll

Size of the data to send out.

edma_handle_t *txEdmaHandle

The eDMA TX channel used.

edma_handle_t *rxEdmaHandle

The eDMA RX channel used.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

2.56 VREF: Voltage Reference Driver

```
status_t VREF_Init(VREF_Type *base, const vref_config_t *config)
```

Enables the clock gate and configures the VREF module according to the configuration structure.

This function must be called before calling all other VREF driver functions, read/write registers, and configurations with user-defined settings. The example below shows how to set up *vref_config_t* parameters and how to call the *VREF_Init* function by passing in these parameters. This is an example.

```
vref_config_t vrefConfig;  
vrefConfig.bufferMode = kVREF_ModeHighPowerBuffer;  
vrefConfig.enableExternalVoltRef = false;  
vrefConfig.enableLowRef = false;  
VREF_Init(VREF, &vrefConfig);
```

Parameters

- base – VREF peripheral address.
- config – Pointer to the configuration structure.

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

`void VREF_Deinit(VREF_Type *base)`

Stops and disables the clock for the VREF module.

This function should be called to shut down the module. This is an example.

```
vref_config_t vrefUserConfig;  
VREF_Init(VREF);  
VREF_GetDefaultConfig(&vrefUserConfig);  
...  
VREF_Deinit(VREF);
```

Parameters

- base – VREF peripheral address.

`void VREF_GetDefaultConfig(vref_config_t *config)`

Initializes the VREF configuration structure.

This function initializes the VREF configuration structure to default values. This is an example.

```
vrefConfig->bufferMode = kVREF_ModeHighPowerBuffer;  
vrefConfig->enableExternalVoltRef = false;  
vrefConfig->enableLowRef = false;
```

Parameters

- config – Pointer to the initialization structure.

`status_t VREF_SetTrimVal(VREF_Type *base, uint8_t trimValue)`

Sets a TRIM value for the reference voltage.

This function sets a TRIM value for the reference voltage. Note that the TRIM value maximum is 0x3F.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

`static inline uint8_t VREF_GetTrimVal(VREF_Type *base)`

Reads the value of the TRIM meaning output voltage.

This function gets the TRIM value from the TRM register.

Parameters

- `base` – VREF peripheral address.

Returns

Six-bit value of trim setting.

`status_t VREF_SetTrim2V1Val(VREF_Type *base, uint8_t trimValue)`

Sets a TRIM value for the reference voltage (2V1).

This function sets a TRIM value for the reference voltage (2V1). Note that the TRIM value maximum is 0x3F.

Parameters

- `base` – VREF peripheral address.
- `trimValue` – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

Return values

- `kStatus_Success` – run success.
- `kStatus_Timeout` – timeout occurs.

`static inline uint8_t VREF_GetTrim2V1Val(VREF_Type *base)`

Reads the value of the TRIM meaning output voltage (2V1).

This function gets the TRIM value from the VREF_TRM4 register.

Parameters

- `base` – VREF peripheral address.

Returns

Six-bit value of trim setting.

`status_t VREF_SetLowReferenceTrimVal(VREF_Type *base, uint8_t trimValue)`

Sets the TRIM value for the low voltage reference.

This function sets the TRIM value for low reference voltage. Note the following.

- The TRIM value maximum is 0x05U
- The values 111b and 110b are not valid/allowed.

Parameters

- `base` – VREF peripheral address.
- `trimValue` – Value of the trim register to set output low reference voltage (maximum 0x05U (3-bit)).

Return values

- `kStatus_Success` – run success.
- `kStatus_Timeout` – timeout occurs.

`static inline uint8_t VREF_GetLowReferenceTrimVal(VREF_Type *base)`

Reads the value of the TRIM meaning output voltage.

This function gets the TRIM value from the VREFL_TRM register.

Parameters

- base – VREF peripheral address.

Returns

Three-bit value of the trim setting.

FSL_VREF_DRIVER_VERSION

Version 2.1.3.

VREF_INTERNAL_VOLTAGE_STABLE_TIMEOUT

Max loops to wait for VREF internal voltage stable.

This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

enum _vref_buffer_mode

VREF modes.

Values:

enumerator kVREF_ModeBandgapOnly

Bandgap on only, for stabilization and startup

enumerator kVREF_ModeHighPowerBuffer

High-power buffer mode enabled

enumerator kVREF_ModeLowPowerBuffer

Low-power buffer mode enabled

typedef enum _vref_buffer_mode vref_buffer_mode_t

VREF modes.

typedef struct _vref_config vref_config_t

The description structure for the VREF module.

VREF_SC_MODE_LV

VREF_SC_REGEN

VREF_SC_VREFEN

VREF_SC_ICOMPEN

VREF_SC_REGEN_MASK

VREF_SC_VREFST_MASK

VREF_SC_VREFEN_MASK

VREF_SC_MODE_LV_MASK

VREF_SC_ICOMPEN_MASK

TRM

VREF_TRM_TRIM

VREF_TRM_CHOPEN_MASK

VREF_TRM_TRIM_MASK

VREF_TRM_CHOPEN_SHIFT

VREF_TRM_TRIM_SHIFT

VREF_SC_MODE_LV_SHIFT

VREF_SC_REGEN_SHIFT

VREF_SC_VREFST_SHIFT

VREF_SC_ICOMPEN_SHIFT

struct __vref_config

#include <fsl_vref.h> The description structure for the VREF module.

Public Members

vref_buffer_mode_t bufferMode

Buffer mode selection

bool enableLowRef

Set VREFL (0.4 V) reference buffer enable or disable

bool enableExternalVoltRef

Select external voltage reference or not (internal)

bool enable2V1VoltRef

Enable Internal Voltage Reference (2.1V)

2.57 WDOG: Watchdog Timer Driver

void WDOG_GetDefaultConfig(*wdog_config_t* *config)

Initializes the WDOG configuration structure.

This function initializes the WDOG configuration structure to default values. The default values are as follows.

```
wdogConfig->enableWdog = true;
wdogConfig->clockSource = kWDOG_LpoClockSource;
wdogConfig->prescaler = kWDOG_ClockPrescalerDivide1;
wdogConfig->workMode.enableWait = true;
wdogConfig->workMode.enableStop = false;
wdogConfig->workMode.enableDebug = false;
wdogConfig->enableUpdate = true;
wdogConfig->enableInterrupt = false;
wdogConfig->enableWindowMode = false;
wdogConfig->windowValue = 0;
wdogConfig->timeoutValue = 0xFFFFU;
```

See also:

wdog_config_t

Parameters

- config – Pointer to the WDOG configuration structure.

void WDOG_Init(WDOG_Type *base, const *wdog_config_t* *config)

Initializes the WDOG.

This function initializes the WDOG. When called, the WDOG runs according to the configuration. To reconfigure WDOG without forcing a reset first, enableUpdate must be set to true in the configuration.

This is an example.


```
wdog_config_t config;  
WDOG_GetDefaultConfig(&config);  
config.timeoutValue = 0x7ffU;  
config.enableUpdate = true;  
WDOG_Init(wdog_base,&config);
```

Parameters

- base – WDOG peripheral base address
- config – The configuration of WDOG

void WDOG_Deinit(WDOG_Type *base)

Shuts down the WDOG.

This function shuts down the WDOG. Ensure that the WDOG_STCTRLH.ALLOWUPDATE is 1 which indicates that the register update is enabled.

void WDOG_SetTestModeConfig(WDOG_Type *base, *wdog_test_config_t* *config)

Configures the WDOG functional test.

This function is used to configure the WDOG functional test. When called, the WDOG goes into test mode and runs according to the configuration. Ensure that the WDOG_STCTRLH.ALLOWUPDATE is 1 which means that the register update is enabled.

This is an example.

```
wdog_test_config_t test_config;  
test_config.testMode = kWDOG_QuickTest;  
test_config.timeoutValue = 0xfffffu;  
WDOG_SetTestModeConfig(wdog_base, &test_config);
```

Parameters

- base – WDOG peripheral base address
- config – The functional test configuration of WDOG

static inline void WDOG_Enable(WDOG_Type *base)

Enables the WDOG module.

This function write value into WDOG_STCTRLH register to enable the WDOG, it is a write-once register, make sure that the WCT window is still open and this register has not been written in this WCT while this function is called.

Parameters

- base – WDOG peripheral base address

static inline void WDOG_Disable(WDOG_Type *base)

Disables the WDOG module.

This function writes a value into the WDOG_STCTRLH register to disable the WDOG. It is a write-once register. Ensure that the WCT window is still open and that register has not been written to in this WCT while the function is called.

Parameters

- base – WDOG peripheral base address

static inline void WDOG_EnableInterrupts(WDOG_Type *base, uint32_t mask)

Enables the WDOG interrupt.

This function writes a value into the WDOG_STCTRLH register to enable the WDOG interrupt. It is a write-once register. Ensure that the WCT window is still open and the register has not been written to in this WCT while the function is called.

Parameters

- base – WDOG peripheral base address
- mask – The interrupts to enable The parameter can be combination of the following source if defined.
 - kWDOG_InterruptEnable

static inline void WDOG_DisableInterrupts(WDOG_Type *base, uint32_t mask)

Disables the WDOG interrupt.

This function writes a value into the WDOG_STCTRLH register to disable the WDOG interrupt. It is a write-once register. Ensure that the WCT window is still open and the register has not been written to in this WCT while the function is called.

Parameters

- base – WDOG peripheral base address
- mask – The interrupts to disable The parameter can be combination of the following source if defined.
 - kWDOG_InterruptEnable

uint32_t WDOG_GetStatusFlags(WDOG_Type *base)

Gets the WDOG all status flags.

This function gets all status flags.

This is an example for getting the Running Flag.

```
uint32_t status;
status = WDOG_GetStatusFlags (wdog_base) & kWDOG_RunningFlag;
```

See also:

_wdog_status_flags_t

- true: a related status flag has been set.
- false: a related status flag is not set.

Parameters

- base – WDOG peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

void WDOG_ClearStatusFlags(WDOG_Type *base, uint32_t mask)

Clears the WDOG flag.

This function clears the WDOG status flag.

This is an example for clearing the timeout (interrupt) flag.

```
WDOG_ClearStatusFlags(wdog_base,kWDOG_TimeoutFlag);
```

Parameters

- base – WDOG peripheral base address
- mask – The status flags to clear. The parameter could be any combination of the following values. kWDOG_TimeoutFlag

```
static inline void WDOG_SetTimeoutValue(WDOG_Type *base, uint32_t timeoutCount)
```

Sets the WDOG timeout value.

This function sets the timeout value. It should be ensured that the time-out value for the WDOG is always greater than $2 \times \text{WCT time} + 20$ bus clock cycles. This function writes a value into WDOG_TOVALH and WDOG_TOVALL registers which are write-once. Ensure the WCT window is still open and the two registers have not been written to in this WCT while the function is called.

Parameters

- base – WDOG peripheral base address
- timeoutCount – WDOG timeout value; count of WDOG clock tick.

```
static inline void WDOG_SetWindowValue(WDOG_Type *base, uint32_t windowValue)
```

Sets the WDOG window value.

This function sets the WDOG window value. This function writes a value into WDOG_WINH and WDOG_WINL registers which are write-once. Ensure the WCT window is still open and the two registers have not been written to in this WCT while the function is called.

Parameters

- base – WDOG peripheral base address
- windowValue – WDOG window value.

```
static inline void WDOG_Unlock(WDOG_Type *base)
```

Unlocks the WDOG register written.

This function unlocks the WDOG register written. Before starting the unlock sequence and following configuration, disable the global interrupts. Otherwise, an interrupt may invalidate the unlocking sequence and the WCT may expire. After the configuration finishes, re-enable the global interrupts.

Parameters

- base – WDOG peripheral base address

```
void WDOG_Refresh(WDOG_Type *base)
```

Refreshes the WDOG timer.

This function feeds the WDOG. This function should be called before the WDOG timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WDOG peripheral base address

```
static inline uint16_t WDOG_GetResetCount(WDOG_Type *base)
```

Gets the WDOG reset count.

This function gets the WDOG reset count value.

Parameters

- base – WDOG peripheral base address

Returns

WDOG reset count value.

```
static inline void WDOG_ClearResetCount(WDOG_Type *base)
```

Clears the WDOG reset count.

This function clears the WDOG reset count value.

Parameters

- base – WDOG peripheral base address

FSL_WDOG_DRIVER_VERSION

Defines WDOG driver version 2.0.2.

WDOG_FIRST_WORD_OF_UNLOCK

First word of unlock sequence

WDOG_SECOND_WORD_OF_UNLOCK

Second word of unlock sequence

WDOG_FIRST_WORD_OF_REFRESH

First word of refresh sequence

WDOG_SECOND_WORD_OF_REFRESH

Second word of refresh sequence

enum __wdog_clock_source

Describes WDOG clock source.

Values:

enumerator kWD OG_LpoClockSource

WD OG clock sourced from LPO

enumerator kWD OG_AlternateClockSource

WD OG clock sourced from alternate clock source

enum __wdog_clock_prescaler

Describes the selection of the clock prescaler.

Values:

enumerator kWD OG_ClockPrescalerDivide1

Divided by 1

enumerator kWD OG_ClockPrescalerDivide2

Divided by 2

enumerator kWD OG_ClockPrescalerDivide3

Divided by 3

enumerator kWD OG_ClockPrescalerDivide4

Divided by 4

enumerator kWD OG_ClockPrescalerDivide5

Divided by 5

enumerator kWD OG_ClockPrescalerDivide6

Divided by 6

enumerator kWD OG_ClockPrescalerDivide7

Divided by 7

enumerator kWD OG_ClockPrescalerDivide8

Divided by 8

enum __wdog_test_mode

Describes WDOG test mode.

Values:

enumerator kWD OG_QuickTest

Selects quick test

enumerator kWDOG_ByteTest

Selects byte test

enum __wdog_tested_byte

Describes WDOG tested byte selection in byte test mode.

Values:

enumerator kWDOG_TestByte0

Byte 0 selected in byte test mode

enumerator kWDOG_TestByte1

Byte 1 selected in byte test mode

enumerator kWDOG_TestByte2

Byte 2 selected in byte test mode

enumerator kWDOG_TestByte3

Byte 3 selected in byte test mode

enum __wdog_interrupt_enable_t

WDOG interrupt configuration structure, default settings all disabled.

This structure contains the settings for all of the WDOG interrupt configurations.

Values:

enumerator kWDOG_InterruptEnable

WDOG timeout generates an interrupt before reset

enum __wdog_status_flags_t

WDOG status flags.

This structure contains the WDOG status flags for use in the WDOG functions.

Values:

enumerator kWDOG_RunningFlag

Running flag, set when WDOG is enabled

enumerator kWDOG_TimeoutFlag

Interrupt flag, set when an exception occurs

typedef enum __wdog_clock_source wdog_clock_source_t

Describes WDOG clock source.

typedef struct __wdog_work_mode wdog_work_mode_t

Defines WDOG work mode.

typedef enum __wdog_clock_prescaler wdog_clock_prescaler_t

Describes the selection of the clock prescaler.

typedef struct __wdog_config wdog_config_t

Describes WDOG configuration structure.

typedef enum __wdog_test_mode wdog_test_mode_t

Describes WDOG test mode.

typedef enum __wdog_tested_byte wdog_tested_byte_t

Describes WDOG tested byte selection in byte test mode.

typedef struct __wdog_test_config wdog_test_config_t

Describes WDOG test mode configuration structure.

WDOG_WCT_INSTRUCITON_COUNT

< Watchdog configuration time window

struct __wdog_work_mode

#include <fsl_wdog.h> Defines WDOG work mode.

Public Members

bool enableWait

Enables or disables WDOG in wait mode

bool enableStop

Enables or disables WDOG in stop mode

bool enableDebug

Enables or disables WDOG in debug mode

struct __wdog_config

#include <fsl_wdog.h> Describes WDOG configuration structure.

Public Members

bool enableWdog

Enables or disables WDOG

wdog_clock_source_t clockSource

Clock source select

wdog_clock_prescaler_t prescaler

Clock prescaler value

wdog_work_mode_t workMode

Configures WDOG work mode in debug stop and wait mode

bool enableUpdate

Update write-once register enable

bool enableInterrupt

Enables or disables WDOG interrupt

bool enableWindowMode

Enables or disables WDOG window mode

uint32_t windowValue

Window value

uint32_t timeoutValue

Timeout value

struct __wdog_test_config

#include <fsl_wdog.h> Describes WDOG test mode configuration structure.

Public Members

wdog_test_mode_t testMode

Selects test mode

wdog_tested_byte_t testedByte

Selects tested byte in byte test mode

uint32_t timeoutValue

Timeout value

Chapter 3

Middleware

3.1 File System

3.1.1 FatFs

MCUXpresso SDK : mcuxsdk-middleware-fatfs

Overview This repository is for FatFs middleware delivery and it contains the components officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository (mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [FatFs - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution Contributions are not currently accepted. Guidelines to contribute will be posted in the future.

Repo Specific Content This is MCUXpresso SDK fork of FatFs (FAT file system created by ChaN). Official documentation is available at <http://elm-chan.org/fsw/ff/>

MCUXpresso version is extending original content by following hardware specific porting layers:

- mmc_disk
- nand_disk
- ram_disk
- sd_disk
- sdspi_disk
- usb_disk

Changelog FatFs

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#)

[R0.15_rev0]

- Upgraded to version 0.15
- Applied patches from <http://elm-chan.org/fsw/ff/patches.html>

[R0.14b_rev1]

- Applied patches from <http://elm-chan.org/fsw/ff/patches.html>

[R0.14b_rev0]

- Upgraded to version 0.14b

[R0.14a_rev0]

- Upgraded to version 0.14a
- Applied patch ff14a_p1.diff and ff14a_p2.diff

[R0.14_rev0]

- Upgraded to version 0.14
- Applied patch ff14_p1.diff and ff14_p2.diff

[R0.13c_rev0]

- Upgraded to version 0.13c
- Applied patches ff_13c_p1.diff, ff_13c_p2.diff, ff_13c_p3.diff and ff_13c_p4.diff.

[R0.13b_rev0]

- Upgraded to version 0.13b

[R0.13a_rev0]

- Upgraded to version 0.13a. Added patch ff_13a_p1.diff.

[R0.12c_rev1]

- Add NAND disk support.

[R0.12c_rev0]

- Upgraded to version 0.12c and applied patches ff_12c_p1.diff and ff_12c_p2.diff.

[R0.12b_rev0]

- Upgraded to version 0.12b.

[R0.11a]

- Added glue functions for low-level drivers (SDHC, SDSPI, RAM, MMC). Modified diskio.c.
- Added RTOS wrappers to make FatFs thread safe. Modified syscall.c.
- Renamed ffconf.h to ffconf_template.h. Each application should contain its own ffconf.h.
- Included ffconf.h into diskio.c to enable the selection of physical disk from ffconf.h by macro definition.
- Conditional compilation of physical disk interfaces in diskio.c.

3.2 Motor Control

3.2.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called `FMSTR_TRANSPORT` with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The `mcuxsdk` folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)
- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer’s physical or virtual COM port. The typical transmission speed is 115200 bps.

- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER “middleware” driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.

- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.

- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory

block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
 - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
 - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
 - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
 - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- **src/drivers/[sdk]/serial** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- **src/drivers/[sdk]/can** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- **src/drivers/[sdk]/network** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
 - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR    [0|1]
#define FMSTR_SHORT_INTR   [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- FMSTR_SERIAL - serial communication protocol
- FMSTR_CAN - using CAN communication
- FMSTR_PDBDM - using packet-driven BDM communication
- FMSTR_NET - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as **FMSTR_SERIAL_DRV**. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_RQUEUE_SIZE

```
#define FMSTR_COMM_RQUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode. The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetCanBaseAddress()` to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options**FMSTR_DISABLE**

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+@W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options**FMSTR_USE_SCOPE**

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options**FMSTR_USE_RECORDER**

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.
Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature. Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options**FMSTR_USE_TSA**

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial "character time" which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the `src/common/platforms/[your_platform]` folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the `freemaster_cfg.h` file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the `freemaster.h` file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the `freemaster_cfg.h` file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: `freemaster.h`
- Implementation: `freemaster_protocol.c`

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the *FMSTR_Poll* function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- *N* is equal to the length of the receive FIFO queue (configured by the *FMSTR_COMM_RQUEUE_SIZE* macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see *Driver interrupt modes*), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(<i>m,n</i>)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(<i>m,n</i>)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(<i>name</i>)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()
```

```
FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmrstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)
```

```
/* Directory entry applies to all subsequent MEMFILE entries */
```

```
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()

```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```

FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);

```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
 - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
 - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the *FMSTR_USE_TSA_DYNAMIC* configuration option and when the *FMSTR_SetUpTsaBuff* function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the *FMSTR_APPCMDRESULT_NOCMD* constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the *FMSTR_AppCmdAck* call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The *FMSTR_GetAppCmd* function does not report the commands for which a callback handler function exists. If the *FMSTR_GetAppCmd* function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns *FMSTR_APPCMDRESULT_NOCMD*.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↪PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_XXX and FMSTR_PIPE_SIZE_XXX constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.


```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the *nGranularity* value equal to the *nLength* value, all data are considered as one chunk which is either written successfully as a whole or not at all. The *nGranularity* value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The readGranularity argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables. By default, this is defined as <i>FM-STR_SIZE</i> .
<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors. By default, this is defined as <i>FM-STR_SIZE</i> .

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object. Generally, this is a pointer to a void type.
<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data. Generally, this is an unsigned 8-bit or 16-bit type.
<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data. This is used to store the data buffer sizes.
<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function. See FM-STR_PipeOpen for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FMSTR_U16</i>	Unsigned 16-bit integer.
<i>FMSTR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FMSTR_S16</i>	Signed 16-bit integer.
<i>FMSTR_S32</i>	Signed 32-bit integer.
<i>FMSTR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FMSTR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FMSTR_SIZE8</i>	Data type holding a general size value, at least 8 bits wide.
<i>FMSTR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FMSTR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FMSTR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

3.3 MultiCore

3.3.1 Multicore SDK

Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

Multicore SDK (MCSDK) Release Notes

Overview These are the release notes for the NXP Multicore Software Development Kit (MCSDK) version 25.06.00.

This software package contains components for efficient work with multicore devices as well as for the multiprocessor communication.

What is new

- eRPC [CHANGELOG](#)
- RPMsg-Lite [CHANGELOG](#)
- MCMgr [CHANGELOG](#)
- Supported evaluation boards (multicore examples):
 - LPCXpresso55S69
 - FRDM-K32L3A6
 - MIMXRT1170-EVKB
 - MIMXRT1160-EVK
 - MIMXRT1180-EVK
 - MCX-N5XX-EVK
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - KW47-EVK
 - KW47-LOC
 - FRDM-MCXW72
 - MCX-W72-EVK
- Supported evaluation boards (multiprocessor examples):
 - LPCXpresso55S36
 - FRDM-K22F
 - FRDM-K32L2B
 - MIMXRT685-EVK
 - MIMXRT1170-EVKB
 - MIMXRT1180
 - FRDM-MCXN236
 - FRDM-MCXC242
 - FRDM-MCXC444
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK

Development tools The Multicore SDK (MCSDK) was compiled and tested with development tools referred in: [Development tools](#)

Release contents This table describes the release contents. Not all MCUXpresso SDK packages contain the whole set of these components.

Deliverable	Location
Multicore SDK location	<MCUXpressoSDK_install_dir>/middleware/multicore/
Documentation	<MCSDK_dir>/mcuxsdk-doc/
Embedded Remote Procedure Call component	<MCSDK_dir>/erpc/
Multicore Manager component	<MCSDK_dir>/mcmgr/
RPMMsg-Lite	<MCSDK_dir>/rpmsg_lite/
Multicore demo applications	<MCUXpressoSDK_install_dir>/examples/multicore_examples/
Multiprocessor demo applications	<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/

Multicore SDK release overview Together, the Multicore SDK (MCSDK) and the MCUXpresso SDK (SDK) form a framework for the development of software for NXP multicore devices. The MCSDK release consists of the following elementary software components for multicore:

- Embedded Remote Procedure Call (eRPC)
- Multicore Manager (MCMGR) - included just in SDK for multicore devices
- Remote Processor Messaging - Lite (RPMMsg-Lite) - included just in SDK for multicore devices

The MCSDK is also accompanied with documentation and several multicore and multiprocessor demo applications.

Demo applications The multicore demo applications demonstrate the usage of the MCSDK software components on supported multicore development boards.

The following multicore demo applications are located together with other MCUXpresso SDK examples in

the <MCUXpressoSDK_install_dir>/examples/multicore_examples subdirectories.

- erpc_matrix_multiply_mu
- erpc_matrix_multiply_mu_rtos
- erpc_matrix_multiply_rpmsg
- erpc_matrix_multiply_rpmsg_rtos
- erpc_two_way_rpc_rpmsg_rtos
- freertos_message_buffers
- hello_world
- multicore_manager
- rpmsg_lite_pingpong
- rpmsg_lite_pingpong_rtos
- rpmsg_lite_pingpong_tzm

The eRPC multicore component can be leveraged for inter-processor communication and remote procedure calls between SoCs / development boards.

The following multiprocessor demo applications are located together with other MCUXpresso SDK examples in


the <MCUXpressoSDK_install_dir>/examples/multiprocessor_examples subdirectories.

- erpc_client_matrix_multiply_spi
- erpc_server_matrix_multiply_spi
- erpc_client_matrix_multiply_uart
- erpc_server_matrix_multiply_uart
- erpc_server_dac_adc
- erpc_remote_control

Getting Started with Multicore SDK (MCSDK)

Overview Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

The following figure highlights the layers and main software components of the MCSDK.

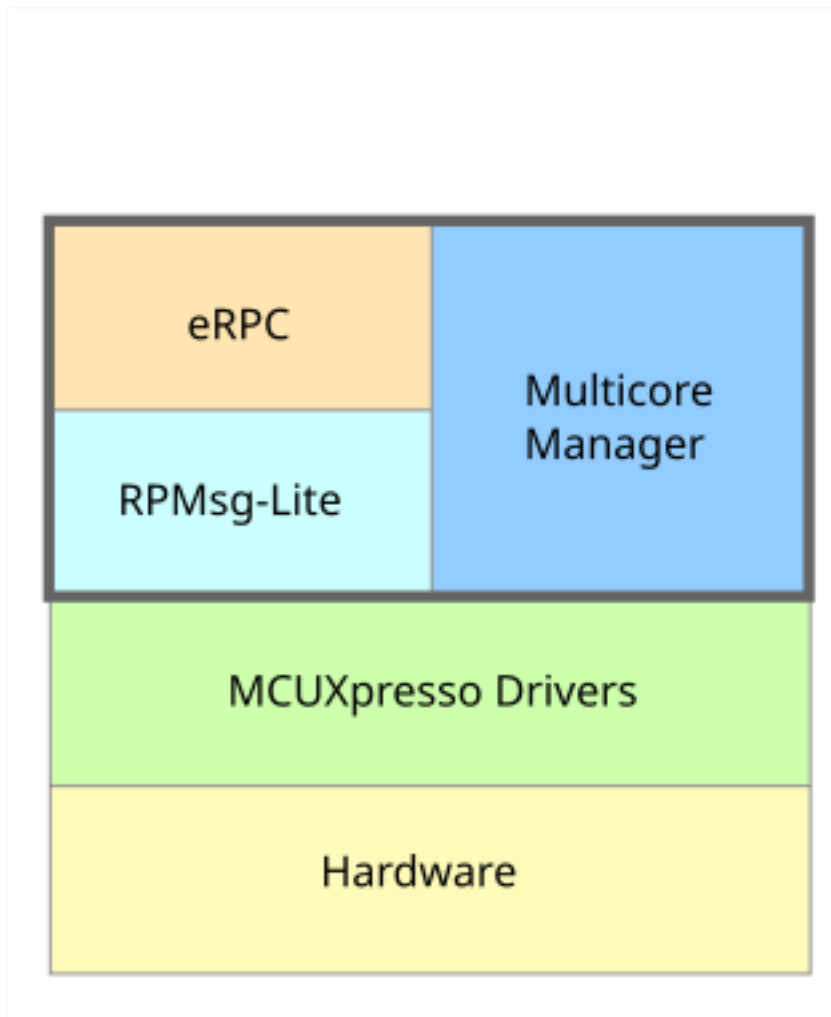


All the MCSDK-related files are located in `<MCUXpressoSDK_install_dir>/middleware/multicore` folder.

For supported toolchain versions, see the *Multicore SDK v25.06.00 Release Notes* (document MCS-DKRN). For the latest version of this and other MCSDK documents, visit www.nxp.com.


Multicore SDK (MCSDK) components The MCSDK consists of the following software components:

- **Embedded Remote Procedure Call (eRPC):** This component is a combination of a library and code generator tool that implements a transparent function call interface to remote services (running on a different core).
- **Multicore Manager (MCMGR):** This library maintains information about all cores and starts up secondary/auxiliary cores.
- **Remote Processor Messaging - Lite (RPMsg-Lite):** Inter-Processor Communication library.

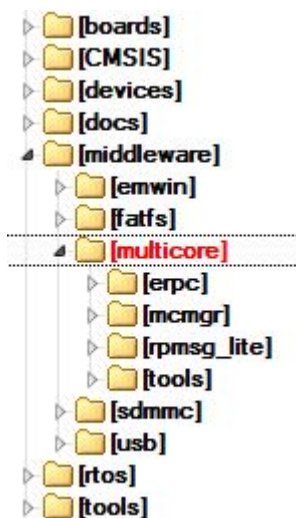

Embedded Remote Procedure Call (eRPC) The Embedded Remote Procedure Call (eRPC) is the RPC system created by NXP. The RPC is a mechanism used to invoke a software routine on a remote system via a simple local function call.

When a remote function is called by the client, the function's parameters and an identifier for the called routine are marshaled (or serialized) into a stream of bytes. This byte stream is transported to the server through a communications channel (IPC, TPC/IP, UART, and so on). The server unmarshals the parameters, determines which function was invoked, and calls it. If the function returns a value, it is marshaled and sent back to the client.

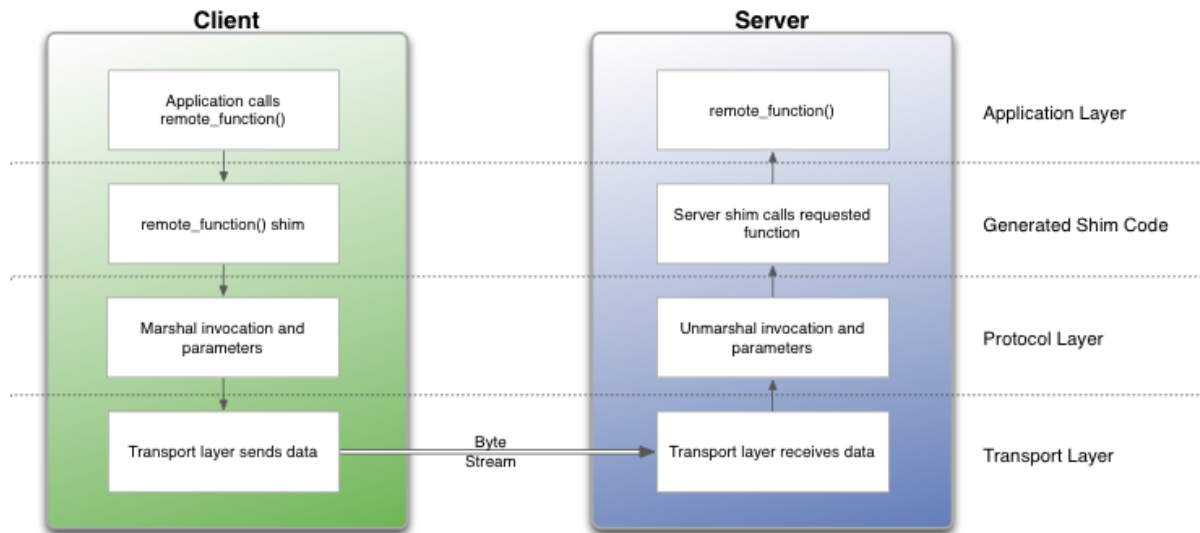

RPC implementations typically use a combination of a tool (erpcgen) and IDL (interface definition language) file to generate source code to handle the details of marshaling a function's parameters and building the data stream.

Main eRPC features:

- Scalable from BareMetal to Linux OS - configurable memory and threading policies.
- Focus on embedded systems - intrinsic support for C, modular, and lightweight implementation.
- Abstracted transport interface - RPMsg is the primary transport for multicore, UART, or SPI-based solutions can be used for multichip.

The eRPC library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc` folder. For detailed information about the eRPC, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems.

The main MCMGR features:

- Maintains information about all cores in system.
- Secondary/auxiliary cores startup and shutdown.
- Remote core monitoring and event handling.

The MCMGR library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr` folder. For detailed information about the MCMGR library, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/doc` folder.

Remote Processor Messaging Lite (RPMsg-Lite) RPMsg-Lite is a lightweight implementation of the RPMsg protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system. Compared to the legacy OpenAMP implementation, RPMsg-Lite offers a code size reduction, API simplification, and improved modularity.

The main RPMsg protocol features:

- Shared memory interprocessor communication.
- Virtio-based messaging bus.
- Application-defined messages sent between endpoints.

- Portable to different environments/platforms.
- Available in upstream Linux OS.

The RPMsg-Lite library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite` folder. For detailed information about the RPMsg-Lite, see the RPMsg-Lite User's Guide located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/doc` folder.

MCSDK demo applications Multicore and multiprocessor example applications are stored together with other MCUXpresso SDK examples, in the dedicated multicore subfolder.

Location		Folder
Multicore projects	example	<code><MCUXpressoSDK_install_dir>/examples/multicore_examples/<application_name>/</code>
Multiprocessor projects	example	<code><MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/<application_name>/</code>

See the *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) and *Getting Started with MCUXpresso SDK for XXX Derivatives* documents for more information about the MCUXpresso SDK example folder structure and the location of individual files that form the example application projects. These documents also contain information about building, running, and debugging multicore demo applications in individual supported IDEs. Each example application also contains a readme file that describes the operation of the example and required setup steps.

Inter-Processor Communication (IPC) levels The MCSDK provides several mechanisms for Inter-Processor Communication (IPC). Particular ways and levels of IPC are described in this chapter.

IPC using low-level drivers

The NXP multicore SoCs are equipped with peripheral modules dedicated for data exchange between individual cores. They deal with the Mailbox peripheral for LPC parts and the Messaging Unit (MU) peripheral for Kinetis and i.MX parts. The common attribute of both modules is the ability to provide a means of IPC, allowing multiple CPUs to share resources and communicate with each other in a simple manner.

The most lightweight method of IPC uses the MCUXpresso SDK low-level drivers for these peripherals. Using the Mailbox/MU driver API functions, it is possible to pass a value from core to core via the dedicated registers (could be a scalar or a pointer to shared memory) and also to trigger inter-core interrupts for notifications.

For details about individual driver API functions, see the MCUXpresso SDK API Reference Manual of the specific multicore device. The MCUXpresso SDK is accompanied with the RPMsg-Lite documentation that shows how to use this API in multicore applications.

Messaging mechanism

On top of Mailbox/MU drivers, a messaging system can be implemented, allowing messages to send between multiple endpoints created on each of the CPUs. The RPMsg-Lite library of the MCSDK provides this ability and serves as the preferred MCUXpresso SDK messaging library. It implements ring buffers in shared memory for messages exchange without the need of a locking mechanism.

The RPMsg-Lite provides the abstraction layer and can be easily ported to different multicore platforms and environments (Operating Systems). The advantages of such a messaging system are ease of use (there is no need to study behavior of the used underlying hardware) and smooth application code portability between platforms due to unified messaging API.

However, this costs several kB of code and data memory. The MCUXpresso SDK is accompanied by the RPMsg-Lite documentation and several multicore examples. You can also obtain the latest RPMsg-Lite code from the GitHub account github.com/nxp-mcuxpresso/rpmsg-lite.

Remote procedure calls

To facilitate the IPC even more and to allow the remote functions invocation, the remote procedure call mechanism can be implemented. The eRPC of the MCSDK serves for these purposes and allows the ability to invoke a software routine on a remote system via a simple local function call. Utilizing different transport layers, it is possible to communicate between individual cores of multicore SoCs (via RPMsg-Lite) or between separate processors (via SPI, UART, or TCP/IP). The eRPC is mostly applicable to the MPU parts with enough of memory resources like i.MX parts.

The eRPC library allows you to export existing C functions without having to change their prototypes (in most cases). It is accompanied by the code generator tool that generates the shim code for serialization and invocation based on the IDL file with definitions of data types and remote interfaces (API).

If the communicating peer is running as a Linux OS user-space application, the generated code can be either in C/C++ or Python.

Using the eRPC simplifies the access to services implemented on individual cores. This way, the following types of applications running on dedicated cores can be easily interfaced:

- Communication stacks (USB, Thread, Bluetooth Low Energy, Zigbee)
- Sensor aggregation/fusion applications
- Encryption algorithms
- Virtual peripherals

The eRPC is publicly available from the following GitHub account: github.com/EmbeddedRPC/erpc. Also, the MCUXpresso SDK is accompanied by the eRPC code and several multicore and multiprocessor eRPC examples.

The mentioned IPC levels demonstrate the scalability of the Multicore SDK library. Based on application needs, different IPC techniques can be used. It depends on the complexity, required speed, memory resources, system design, and so on. The MCSDK brings users the possibility for quick and easy development of multicore and multiprocessor applications.

Changelog Multicore SDK

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[25.06.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.0
 - RPMsg-Lite v5.2.0

[25.03.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0

- eRPC generator (erpcgen) v1.13.0
- Multicore Manager (MCMgr) v4.1.7
- RPPMsg-Lite v5.1.4

[24.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.6
 - RPPMsg-Lite v5.1.3

[2.16.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPPMsg-Lite v5.1.2

[2.15.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.12.0
 - eRPC generator (erpcgen) v1.12.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPPMsg-Lite v5.1.1

[2.14.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.11.0
 - eRPC generator (erpcgen) v1.11.0
 - Multicore Manager (MCMgr) v4.1.4
 - RPPMsg-Lite v5.1.0

[2.13.0_imxrt1180a0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPPMsg-Lite v5.0.0

[2.13.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.12.0_imx93]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.1

[2.12.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.0

[2.11.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.1

[2.11.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.0

[2.10.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.1
 - eRPC generator (erpcgen) v1.8.1
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.2

[2.9.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.0
 - eRPC generator (erpcgen) v1.8.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.1

[2.8.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.4
 - eRPC generator (erpcgen) v1.7.4
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.1.0

[2.7.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.3
 - eRPC generator (erpcgen) v1.7.3
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.0.0

[2.6.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.2
 - eRPC generator (erpcgen) v1.7.2
 - Multicore Manager (MCMgr) v4.0.3
 - RPSMsg-Lite v2.2.0

[2.5.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.1
 - eRPC generator (erpcgen) v1.7.1
 - Multicore Manager (MCMgr) v4.0.2
 - RPSMsg-Lite v2.0.2

[2.4.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.0
 - eRPC generator (erpcgen) v1.7.0
 - Multicore Manager (MCMgr) v4.0.1
 - RPSMsg-Lite v2.0.1

[2.3.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.6.0
 - eRPC generator (erpcgen) v1.6.0
 - Multicore Manager (MCMgr) v4.0.0
 - RPSMsg-Lite v1.2.0

[2.3.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.5.0
 - eRPC generator (erpcgen) v1.5.0
 - Multicore Manager (MCMgr) v3.0.0
 - RPSMsg-Lite v1.2.0

[2.2.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.4.0
 - eRPC generator (erpcgen) v1.4.0
 - Multicore Manager (MCMgr) v2.0.1
 - RPSMsg-Lite v1.1.0

[2.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.3.0
 - eRPC generator (erpcgen) v1.3.0

[2.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.2.0
 - eRPC generator (erpcgen) v1.2.0
 - Multicore Manager (MCMgr) v2.0.0
 - RPMsg-Lite v1.0.0

[1.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.1.0
 - Multicore Manager (MCMgr) v1.1.0
 - Open-AMP / RPMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev01

[1.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.0.0
 - Multicore Manager (MCMgr) v1.0.0
 - Open-AMP / RPMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev00

Multicore SDK Components

RPMSG-Lite

MCUXpresso SDK : mcuxsdk-middleware-rpmsg-lite

Overview This repository is for MCUXpresso SDK RPMSG-Lite middleware delivery and it contains RPMSG-Lite component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run RPMSG-Lite examples that are based on mcux-sdk-middleware-rpmsg-lite component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [RPMSG-Lite - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the rpmsg-lite project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

RPMSG-Lite This documentation describes the RPMsg-Lite component, which is a lightweight implementation of the Remote Processor Messaging (RPMsg) protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system.

Compared to the RPMsg implementation of the Open Asymmetric Multi Processing (OpenAMP) framework (<https://github.com/OpenAMP/open-amp>), the RPMsg-Lite offers a code size reduction, API simplification, and improved modularity. On smaller Cortex-M0+ based systems, it is recommended to use RPMsg-Lite.

The RPMsg-Lite is an open-source component developed by NXP Semiconductors and released under the BSD-compatible license.

For Further documentation, please look at doxygen documentation at: <https://nxp-mcuxpresso.github.io/rpmsg-lite/>

For overview please read RPMSG-Lite VirtIO Overview.

For RPMSG-Lite Design Considerations please read RPMSG-Lite Design Considerations.

Motivation to create RPMsg-Lite There are multiple reasons why RPMsg-Lite was developed. One reason is the need for the small footprint of the RPMsg protocol-compatible communication component, another reason is the simplification of extensive API of OpenAMP RPMsg implementation.

RPMsg protocol was not documented, and its only definition was given by the Linux Kernel and legacy OpenAMP implementations. This has changed with [1] which is a standardization protocol allowing multiple different implementations to coexist and still be mutually compatible.


Small MCU-based systems often do not implement dynamic memory allocation. The creation of static API in RPMsg-Lite enables another reduction of resource usage. Not only does the dynamic allocation adds another 5 KB of code size, but also communication is slower and less deterministic, which is a property introduced by dynamic memory. The following table shows some rough comparison data between the OpenAMP RPMsg implementation and new RPMsg-Lite implementation:

Component / Configuration	Flash [B]	RAM [B]
OpenAMP RPMsg / Release (reference)	5547	456 + dynamic
RPMsg-Lite / Dynamic API, Release	3462	56 + dynamic
Relative Difference [%]	~62.4%	~12.3%
RPMsg-Lite / Static API (no malloc), Release	2926	352
Relative Difference [%]	~52.7%	~77.2%


Implementation The implementation of RPMsg-Lite can be divided into three sub-components, from which two are optional. The core component is situated in `rpmsg_lite.c`. Two optional components are used to implement a blocking receive API (in `rpmsg_queue.c`) and dynamic “named” endpoint creation and deletion announcement service (in `rpmsg_ns.c`).

The actual “media access” layer is implemented in `virtqueue.c`, which is one of the few files shared with the OpenAMP implementation. This layer mainly defines the shared memory model, and internally defines used components such as `vring` or `virtqueue`.

The porting layer is split into two sub-layers: the environment layer and the platform layer. The first sublayer is to be implemented separately for each environment. (The bare metal environment already exists and is implemented in `rpmsg_env_bm.c`, and the FreeRTOS environment is implemented in `rpmsg_env_freertos.c` etc.) Only the source file, which matches the used environment, is included in the target application project. The second sublayer is implemented in `rpmsg_platform.c` and defines low-level functions for interrupt enabling, disabling, and triggering mainly. The situation is described in the following figure:

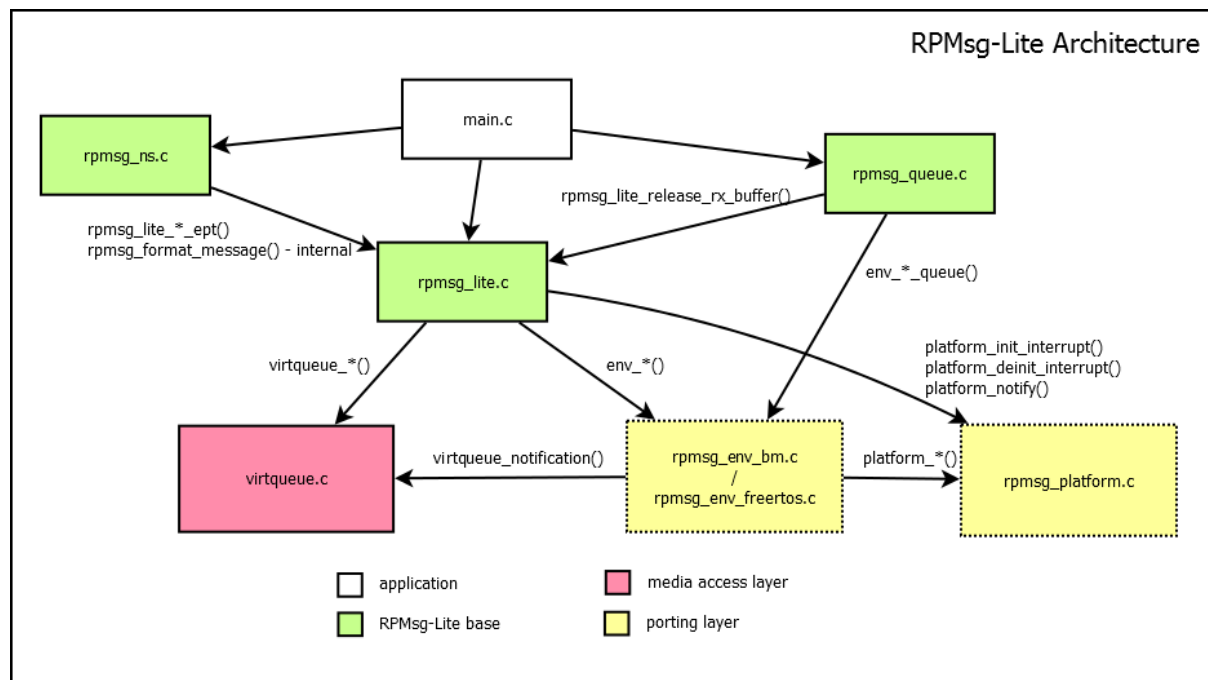

RPMsg-Lite core sub-component This subcomponent implements a blocking send API and callback-based receive API. The RPMsg protocol is part of the transport layer. This is realized by using so-called endpoints. Each endpoint can be assigned a different receive callback function. However, it is important to notice that the callback is executed in an interrupt environment in current design. Therefore, certain actions like memory allocation are discouraged to execute in the callback. The following figure shows the role of RPMsg in an ISO/OSI-like layered model:

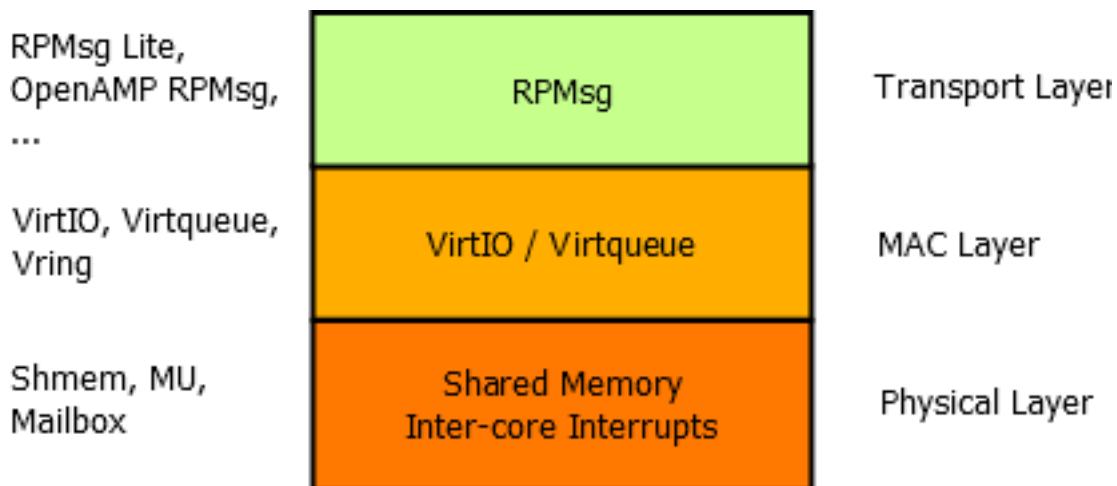

Queue sub-component (optional) This subcomponent is optional and requires implementation of the `env_*_queue()` functions in the environment porting layer. It uses a blocking receive API, which is common in RTOS-environments. It supports both copy and nocopy blocking receive functions.

Name Service sub-component (optional) This subcomponent is a minimum implementation of the name service which is present in the Linux Kernel implementation of RPMsg. It allows the communicating node both to send announcements about “named” endpoint (in other words, channel) creation or deletion and to receive these announcement taking any user-defined action

in an application callback. The endpoint address used to receive name service announcements is arbitrarily fixed to be 53 (0x35).

Usage The application should put the `/rpmmsg_lite/lib/include` directory to the include path and in the application, include either the `rpmmsg_lite.h` header file, or optionally also include the `rpmmsg_queue.h` and/or `rpmmsg_ns.h` files. Both porting sublayers should be provided for you by NXP, but if you plan to use your own RTOS, all you need to do is to implement your own environment layer (in other words, `rpmmsg_env_myrtos.c`) and to include it in the project build.

The initialization of the stack is done by calling the `rpmmsg_lite_master_init()` on the master side and the `rpmmsg_lite_remote_init()` on the remote side. This initialization function must be called prior to any RPMMsg-Lite API call. After the init, it is wise to create a communication endpoint, otherwise communication is not possible. This can be done by calling the `rpmmsg_lite_create_ept()` function. It optionally accepts a last argument, where an internal context of the endpoint is created, just in case the `RL_USE_STATIC_API` option is set to 1. If not, the stack internally calls `env_alloc()` to allocate dynamic memory for it. In case a callback-based receiving is to be used, an ISR-callback is registered to each new endpoint with user-defined callback data pointer. If a blocking receive is desired (in case of RTOS environment), the `rpmmsg_queue_create()` function must be called before calling `rpmmsg_lite_create_ept()`. The queue handle is passed to the endpoint creation function as a callback data argument and the callback function is set to `rpmmsg_queue_rx_cb()`. Then, it is possible to use `rpmmsg_queue_receive()` function to listen on a queue object for incoming messages. The `rpmmsg_lite_send()` function is used to send messages to the other side.

The RPMMsg-Lite also implements no-copy mechanisms for both sending and receiving operations. These methods require specifics that have to be considered when used in an application.


no-copy-send mechanism: This mechanism allows sending messages without the cost for copying data from the application buffer to the RPMMsg/virtio buffer in the shared memory. The sequence of no-copy sending steps to be performed is as follows:

- Call the `rpmmsg_lite_alloc_tx_buffer()` function to get the virtio buffer and provide the buffer pointer to the application.
- Fill the data to be sent into the pre-allocated virtio buffer. Ensure that the filled data does not exceed the buffer size (provided as the `rpmmsg_lite_alloc_tx_buffer()` size output parameter).
- Call the `rpmmsg_lite_send_nocopy()` function to send the message to the destination endpoint. Consider the cache functionality and the virtio buffer alignment. See the `rpmmsg_lite_send_nocopy()` function description below.

no-copy-receive mechanism: This mechanism allows reading messages without the cost for copying data from the virtio buffer in the shared memory to the application buffer. The sequence of no-copy receiving steps to be performed is as follows:

- Call the `rpmmsg_queue_rcv_nocopy()` function to get the virtio buffer pointer to the received data.
- Read received data directly from the shared memory.
- Call the `rpmmsg_queue_nocopy_free()` function to release the virtio buffer and to make it available for the next data transfer.

The user is responsible for destroying any RPMMsg-Lite objects he has created in case of deinitialization. In order to do this, the function `rpmmsg_queue_destroy()` is used to destroy a queue, `rpmmsg_lite_destroy_ept()` is used to destroy an endpoint and finally, `rpmmsg_lite_deinit()` is used to deinitialize the RPMMsg-Lite intercore communication stack. Deinitialize all endpoints using a queue before deinitializing the queue. Otherwise, you are actively invalidating the used queue handle, which is not allowed. RPMMsg-Lite does not check this internally, since its main aim is to be lightweight.

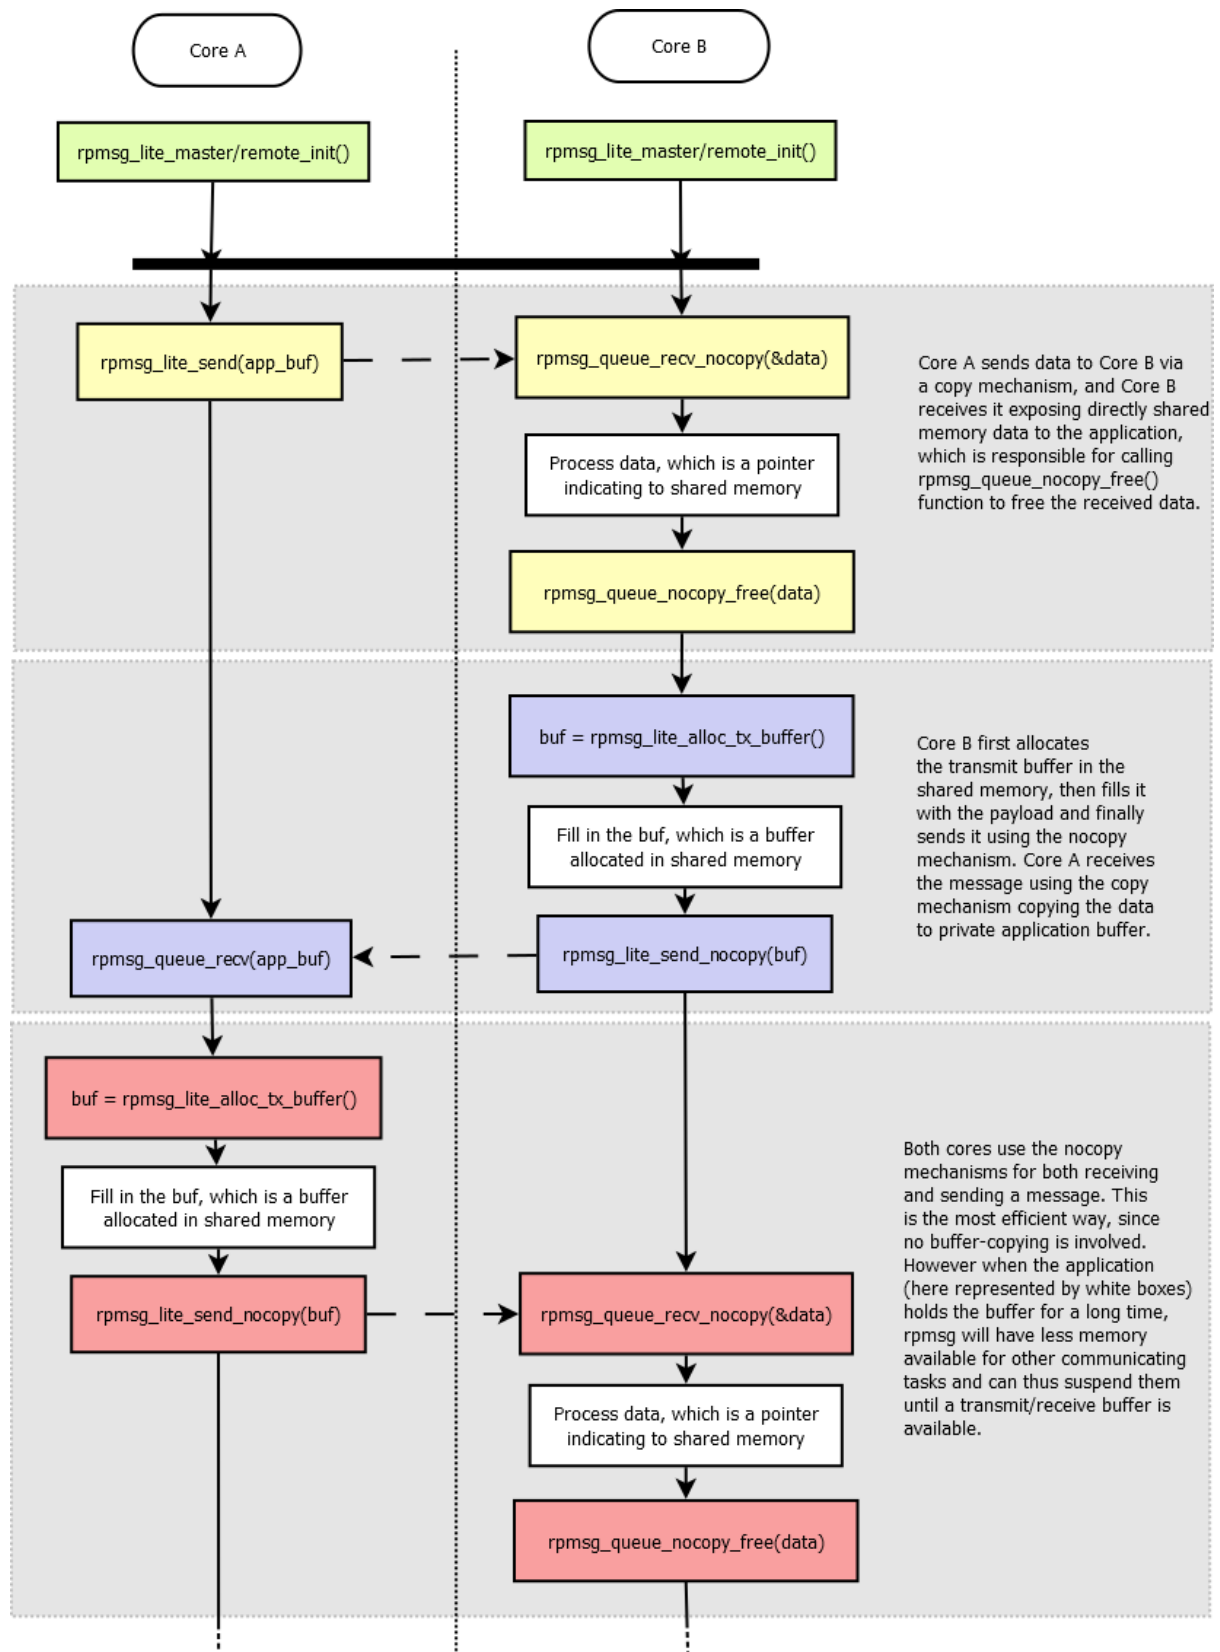

Examples RPMsg_Lite multicore examples are part of NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages. To get the board list with multicore support (RPMsg_Lite included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded,

see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for RPMMsg_Lite multicore examples with 'rpmmsg_lite_' name prefix.

Another way of getting NXP MCUXpressoSDK RPMMsg_Lite multicore examples is using the [mcuxsdk-manifests](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk-manifests repo in [readme section](#). Once done the armgcc rpmmsg_lite examples can be found in

mcuxsdk/examples/_<board_name>/multicore_examples

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the RPMMsg_Lite examples use the 'rpmmsg_lite_' name prefix.

Notes

Environment layers implementation Several environment layers are provided in lib/rpmmsg_lite/porting/environment folder. Not all of them are fully tested however. Here is the list of environment layers that passed testing:

- rpmmsg_env_bm.c
- rpmmsg_env_freertos.c
- rpmmsg_env_xos.c
- rpmmsg_env_threadx.c

The rest of environment layers has been created and used in some experimental projects, it has been running well at the time of creation but due to the lack of unit testing there is no guarantee it is still fully functional.

Shared memory configuration It is important to correctly initialize/configure the shared memory for data exchange in the application. The shared memory must be accessible from both the master and the remote core and it needs to be configured as Non-Cacheable memory. Dedicated shared memory section in linker file is also a good practise, it is recommended to use linker files from MCUXpressoSDK packages for NXP devices based applications. It needs to be ensured no other application part/component is unintentionally accessing this part of memory.

Configuration options The RPMMsg-Lite can be configured at the compile time. The default configuration is defined in the rpmmsg_default_config.h header file. This configuration can be customized by the user by including rpmmsg_config.h file with custom settings. The following table summarizes all possible RPMMsg-Lite configuration options.

Config- uration option	De- fault value	Usage
RL_MS_PE (1)		Delay in milliseconds used in non-blocking API functions for polling.
RL_BUFFE (496)		Size of the buffer payload, it must be equal to (240, 496, 1008, ...) $[2^n - 16]$
RL_BUFFE (2)		Number of the buffers, it must be power of two (2, 4, ...)
RL_API_H (1)		Zero-copy API functions enabled/disabled.
RL_USE_S' (0)		Static API functions (no dynamic allocation) enabled/disabled.
RL_USE_D (0)		Memory cache management of shared memory. Use in case of data cache is enabled for shared memory.
RL_CLEAF (0)		Clearing used buffers before returning back to the pool of free buffers enabled/disabled.
RL_USE_M (0)		When enabled IPC interrupts are managed by the Multicore Manager (IPC interrupts router), when disabled RPMsg-Lite manages IPC interrupts by itself.
RL_USE_E (0)		When enabled the environment layer uses its own context. Required for some environments (QNX). The default value is 0 (no context, saves some RAM).
RL_DEBU (0)		When enabled buffer pointers passed to <code>rpmsg_lite_send_nocopy()</code> and <code>rpmsg_lite_release_rx_buffer()</code> functions (enabled by <code>RL_API_HAS_ZEROCOPY</code> config) are checked to avoid passing invalid buffer pointer. The default value is 0 (disabled). Do not use in RPMsg-Lite to Linux configuration.
RL_ALLO (0)		When enabled the opposite side is notified each time received buffers are consumed and put into the queue of available buffers. Enable this option in RPMsg-Lite to Linux configuration to allow unblocking of the Linux blocking send. The default value is 0 (RPMsg-Lite to RPMsg-Lite communication).
RL_ALLO (0)		It allows to define custom shared memory configuration and replacing the shared memory related global settings from <code>rpmsg_config.h</code> . This is useful when multiple instances are running in parallel but different shared memory arrangement (vring size & alignment, buffers size & count) is required. The default value is 0 (all RPMsg-Lite instances use the same shared memory arrangement as defined by common config macros).
RL_ASSERT	see <code>rpmsg</code>	Assert implementation.

How to format rpmsg-lite code To format code, use the application developed by Google, named *clang-format*. This tool is part of the [llvm](#) project. Currently, the clang-format 10.0.0 version is used for rpmsg-lite. The set of style settings used for clang-format is defined in the `.clang-format` file, placed in a root of the rpmsg-lite directory where Python script `run_clang_format.py` can be executed. This script executes the application named *clang-format.exe*. You need to have the path of this application in the OS's environment path, or you need to change the script.

References

[1] M. Novak, M. Cingel, **Lockless Shared Memory Based Multicore Communication Protocol**
Copyright © 2016 Freescale Semiconductor, Inc. Copyright © 2016-2025 NXP

Changelog RPMSG-Lite All notable changes to this project will be documented in this file. The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Fixed

- Fixed CERT-C INT31-C violation in platform_notify function in rpmsg_platform.c for imxrt700_m33, imxrt700_hifi4, imxrt700_hifi1 platforms

v5.2.0

Added

- Add MCXL20 porting layer and unit testing
- New utility macro RL_CALCULATE_BUFFER_COUNT_DOWN_SAFE to safely determine maximum buffer count within shared memory while preventing integer underflow.
- RT700 platform add support for MCMGR in DSPs

Changed

- Change rpmsg_platform.c to support new MCMGR API
- Improved input validation in initialization functions to properly handle insufficient memory size conditions.
- Refactored repeated buffer count calculation pattern for better code maintainability.
- To make sure that remote has already registered IRQ there is required App level IPC mechanism to notify master about it

Fixed

- Fixed env_wait_for_link_up function to handle timeout in link state checks for baremetal and qnx environment, RL_BLOCK mode can be used to wait indefinitely.
- Fixed CERT-C INT31-C violation by adding compile-time check to ensure RL_PLATFORM_HIGHEST_LINK_ID remains within safe range for 16-bit casting in virtqueue ID creation.
- Fixed CERT-C INT30-C violations by adding protection against unsigned integer underflow in shared memory calculations, specifically in shmem_length - (uint32_t)RL_VRING_OVERHEAD and shmem_length - 2U * shmem_config.vring_size expressions.
- Fixed CERT INT31-C violation in platform_interrupt_disable() and similar functions by replacing unsafe cast from uint32_t to int32_t with a return of 0 constant.
- Fixed unsigned integer underflow in rpmsg_lite_alloc_tx_buffer() where subtracting header size from buffer size could wrap around if buffer was too small, potentially leading to incorrect buffer sizing.
- Fixed CERT-C INT31-C violation in rpmsg_lite.c where size parameter was cast from uint32_t to uint16_t without proper validation.
 - Applied consistent masking approach to both size and flags parameters: (uint16_t)(value & 0xFFFFU).
 - This fix prevents potential data loss when size values exceed 65535.

- Fixed CERT INT31-C violation in `env_memset` functions by explicitly converting `int32_t` values to unsigned char using bit masking. This prevents potential data loss or misinterpretation when passing values outside the unsigned char range (0-255) to the standard `memset()` function.
- Fixed CERT-C INT31-C violations in RPMsg-Lite environment porting: Added validation checks for signed-to-unsigned integer conversions to prevent data loss and misinterpretation.
 - `rpmsg_env_freertos.c`: Added validation before converting `int32_t` to `UBaseType_t`.
 - `rpmsg_env_qnx.c`: Fixed format string and added validation before assigning to `mqstat` fields.
 - `rpmsg_env_threadx.c`: Added validation to prevent integer overflow and negative values.
 - `rpmsg_env_xos.c`: Added range checking before casting to `uint16_t`.
 - `rpmsg_env_zephyr.c`: Added validation before passing values to `k_msgq_init`.
- Fixed a CERT INT31-C compliance issue in `env_get_current_queue_size()` function where an unsigned queue count was cast to a signed `int32_t` without proper validation, which could lead to lost or misinterpreted data if queue size exceeded `INT32_MAX`.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where `memcmp()` return value (signed int) was compared with unsigned constant without proper type handling.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where casting from `uint32_t` to `uint16_t` could potentially result in data loss. Changed length variable type from `uint16_t` to `uint32_t` to properly handle memory address differences without truncation.
- Fixed potential integer overflow in `env_sleep_msec()` function in ThreadX environment implementation by rearranging calculation order in the sleep duration formula.
- Fixed CERT-C INT31-C violation in RPMsg-Lite where bitwise NOT operations on integer constants were performed in signed integer context before being cast to unsigned. This could potentially lead to misinterpreted data on `imx943` platform.
- Added `RL_MAX_BUFFER_COUNT` (32768U) and `RL_MAX_VRING_ALIGN` (65536U) limit to ensure alignment values cannot contribute to integer overflow
- Fixed CERT INT31-C violation in `vring_need_event()`, added cast to `uint16_t` for each operand.

v5.1.4 - 27-Mar-2025

Added

- Add KW43B43 porting layer

Changed

- Doxygen bump to version 1.9.6

v5.1.3 - 13-Jan-2025

Added

- Memory cache management of shared memory. Enable with `#define RL_USE_DCACHE (1)` in `rpmsg_config.h` in case of data cache is used.
- Cmake/Kconfig support added.
- Porting layers for imx95, imxrt700, mcmxw71x, mcmxw72x, kw47b42 added.

v5.1.2 - 08-Jul-2024**Changed**

- Zephyr-related changes.
- Minor Misra corrections.

v5.1.1 - 19-Jan-2024**Added**

- Test suite provided.
- Zephyr support added.

Changed

- Minor changes in platform and env. layers, minor test code updates.

v5.1.0 - 02-Aug-2023**Added**

- RPMsg-Lite: Added aarch64 support.

Changed

- RPMsg-Lite: Increased the queue size to $(2 * RL\_BUFFER\_COUNT)$ to cover zero copy cases.
- Code formatting using LLVM16.

Fixed

- Resolved issues in ThreadX env. layer implementation.

v5.0.0 - 19-Jan-2023**Added**

- Timeout parameter added to `rpmsg_lite_wait_for_link_up` API function.

Changed

- Improved debug check buffers implementation - instead of checking the pointer fits into shared memory check the presence in the VirtIO ring descriptors list.
- VRING_SIZE is set based on number of used buffers now (as calculated in vring_init) - updated for all platforms that are not communicating to Linux rpmsg counterpart.

Fixed

- Fixed wrong RL_VRING_OVERHEAD macro comment in platform.h files
- Misra corrections.

v4.0.0 - 20-Jun-2022

Added

- Added support for custom shared memory arrangement per the RPMsg_Lite instance.
- Introduced new rpmsg_lite_wait_for_link_up() API function - this allows to avoid using busy loops in rtos environments, GitHub PR [#21](#).

Changed

- Adjusted rpmsg_lite_is_link_up() to return RL_TRUE/RL_FALSE.

v3.2.0 - 17-Jan-2022

Added

- Added support for i.MX8 MP multicore platform.

Changed

- Improved static allocations - allow OS-specific objects being allocated statically, GitHub PR [#14](#).
- Aligned rpmsg_env_xos.c and some platform layers to latest static allocation support.

Fixed

- Minor Misra and typo corrections, GitHub PR [#19](#), [#20](#).

v3.1.2 - 16-Jul-2021

Added

- Addressed MISRA 21.6 rule violation in rpmsg_env.h (use SDK's PRINTF in MCUXpressoSDK examples, otherwise stdio printf is used).
- Added environment layers for XOS.
- Added support for i.MX RT500, i.MX RT1160 and i.MX RT1170 multicore platforms.

Fixed

- Fixed incorrect description of the `rpmsg_lite_get_endpoint_from_addr` function.

Changed

- Updated `RL_BUFFER_COUNT` documentation (issue [#10](#)).
- Updated `imxrt600_hifi4` platform layer.

v3.1.1 - 15-Jan-2021**Added**

- Introduced `RL_ALLOW_CONSUMED_BUFFERS_NOTIFICATION` config option to allow opposite side notification sending each time received buffers are consumed and put into the queue of available buffers.
- Added environment layers for Threadx.
- Added support for i.MX8QM multicore platform.

Changed

- Several MISRA C-2012 violations addressed.

v3.1.0 - 22-Jul-2020**Added**

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed (7.4).
- Fixed missing lock in `rpmsg_lite_rx_callback()` for QNX env.
- Correction of `rpmsg_lite_instance` structure members description.
- Address -Waddress-of-packed-member warnings in GCC9.

Changed

- Clang update to v10.0.0, code re-formatted.

v3.0.0 - 20-Dec-2019**Added**

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed, incl. data types consolidation.
- Code formatted.

v2.2.0 - 20-Mar-2019

Added

- Added configuration macro `RL_DEBUG_CHECK_BUFFERS`.
- Several MISRA violations fixed.
- Added environment layers for QNX and Zephyr.
- Allow environment context required for some environment (controlled by the `RL_USE_ENVIRONMENT_CONTEXT` configuration macro).
- Data types consolidation.

v1.1.0 - 28-Apr-2017

Added

- Supporting i.MX6SX and i.MX7D MPU platforms.
- Supporting LPC5411x MCU platform.
- Baremetal and FreeRTOS support.
- Support of copy and zero-copy transfer.
- Support of static API (without dynamic allocations).

Multicore Manager

MCUXpresso SDK : `mcuxsdk-middleware-mcmgr` (Multicore Manager)

Overview This repository is for MCUXpresso SDK Multicore Manager middleware delivery and it contains Multicore Manager component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run Multicore Manager examples that are based on `mcux-sdk-middleware-mcmgr` component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)


Visit [Multicore Manager - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the mcmgr project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems. This library is distributed as a part of the Multicore SDK (MCSDK). Together, the MCSDK and the MCUXpresso SDK (SDK) form a framework for development of software for NXP multicore devices.

The MCMGR component is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr directory.

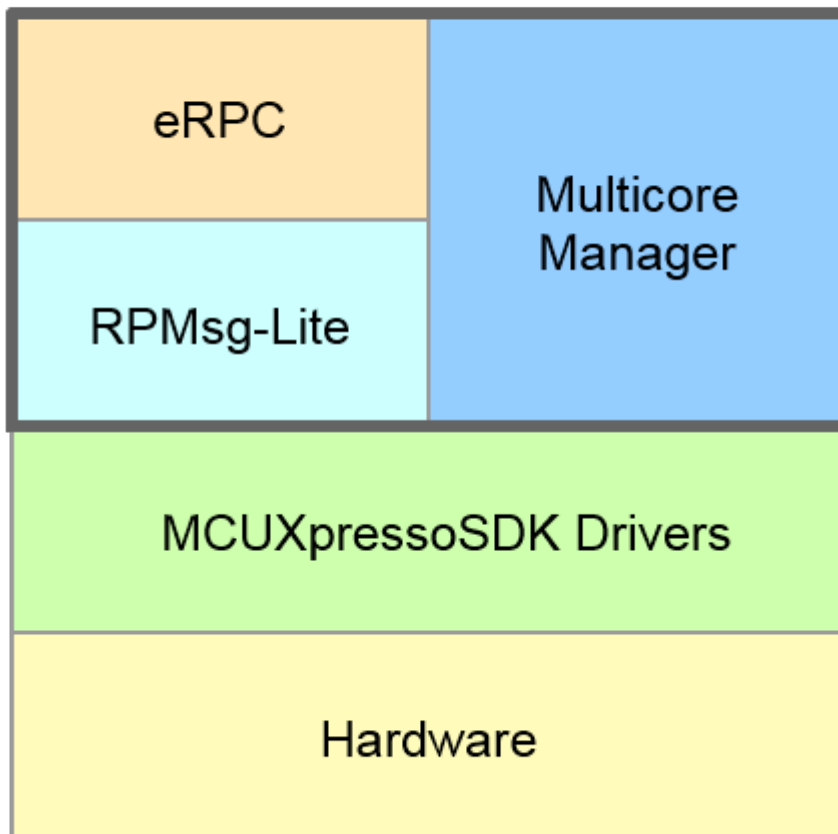

The Multicore Manager provides the following major functions:

- Maintains information about all cores in system.
- Secondary/auxiliary core(s) startup and shutdown.
- Remote core monitoring and event handling.

For Further API documentation, please look at doxygen documentation at: <https://nxp-mcuxpresso.github.io/mcux-mcmgr/>

Usage of the MCMGR software component The main use case of MCMGR is the secondary/auxiliary core start. This functionality is performed by the public API function.

Example of MCMGR usage to start secondary core:

```
#include "mcmgr.h"

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass "1" as startup data,
    ↪starting synchronously. */
    MCMGR_StartCore(kMCMGR_Core1, CORE1_BOOT_ADDRESS, 1, kMCMGR_Start_Synchronous);
    .
    .
    .
    /* Stop secondary core execution. */
    MCMGR_StopCore(kMCMGR_Core1);
}
```

Some platforms allow stopping and re-starting the secondary core application again, using the MCMGR_StopCore / MCMGR_StartCore API calls. It is necessary to ensure the initially loaded image is not corrupted before re-starting, especially if it deals with the RAM target. Cache coherence has to be considered/ensured as well.

Another important MCMGR feature is the ability for remote core monitoring and handling of events such as reset, exception, and application events. Application-specific callback functions for events are registered by the MCMGR_RegisterEvent() API. Triggering these events is done using the MCMGR_TriggerEvent() API. mcmgr_event_type_t enums all possible event types.

An example of MCMGR usage for remote core monitoring and event handling. Code for the primary side:

```
#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)
#define APP_NUMBER_OF_CORES (2)
#define APP_SECONDARY_CORE kMCMGR_Core1

/* Callback function registered via the MCMGR_RegisterEvent() and triggered by MCMGR_TriggerEvent()
↪called on the secondary core side */
void RPSGRemoteReadyEventHandler(mcmgr_core_t coreNum, uint16_t eventData, void *context)
{
    uint16_t *data = &((uint16_t *)context)[coreNum];

    *data = eventData;
}

void main()
{
    uint16_t RPSGRemoteReadyEventData[NUMBER_OF_CORES] = {0};

    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();
```

(continues on next page)

(continued from previous page)

```

/* Initialize MCMGR, install generic event handlers */
MCMGR_Init();

/* Register the application event before starting the secondary core */
MCMGR_RegisterEvent(kMCMGR_RemoteApplicationEvent, RPSMsgRemoteReadyEventHandler, (void_)
↳)RPSMsgRemoteReadyEventData);

/* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass rpsmsg_lite_base address_
↳as startup data, starting synchronously. */
MCMGR_StartCore(APP_SECONDARY_CORE, CORE1_BOOT_ADDRESS, (uint32_t)rpsmsg_lite_
↳base, kMCMGR_Start_Synchronous);

/* Wait until the secondary core application signals the rpsmsg remote has been initialized and is ready to_
↳communicate. */
while(APP_RPSMSG_READY_EVENT_DATA != RPSMsgRemoteReadyEventData[APP_SECONDARY_
↳CORE]) {};
.
.
.
}

```

Code for the secondary side:

```

#include "mcmgr.h"

#define APP_RPSMSG_READY_EVENT_DATA (1)


void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
    .
    .
    .

    /* Signal the to other core that we are ready by triggering the event and passing the APP_RPSMSG_
    ↳READY_EVENT_DATA */
    MCMGR_TriggerEvent(kMCMGR_Core0, kMCMGR_RemoteApplicationEvent, APP_RPSMSG_
    ↳READY_EVENT_DATA);
    .
    .
    .
}

```

MCMGR Data Exchange Diagram The following picture shows how the handshakes are supposed to work between the two cores in the MCMGR software.

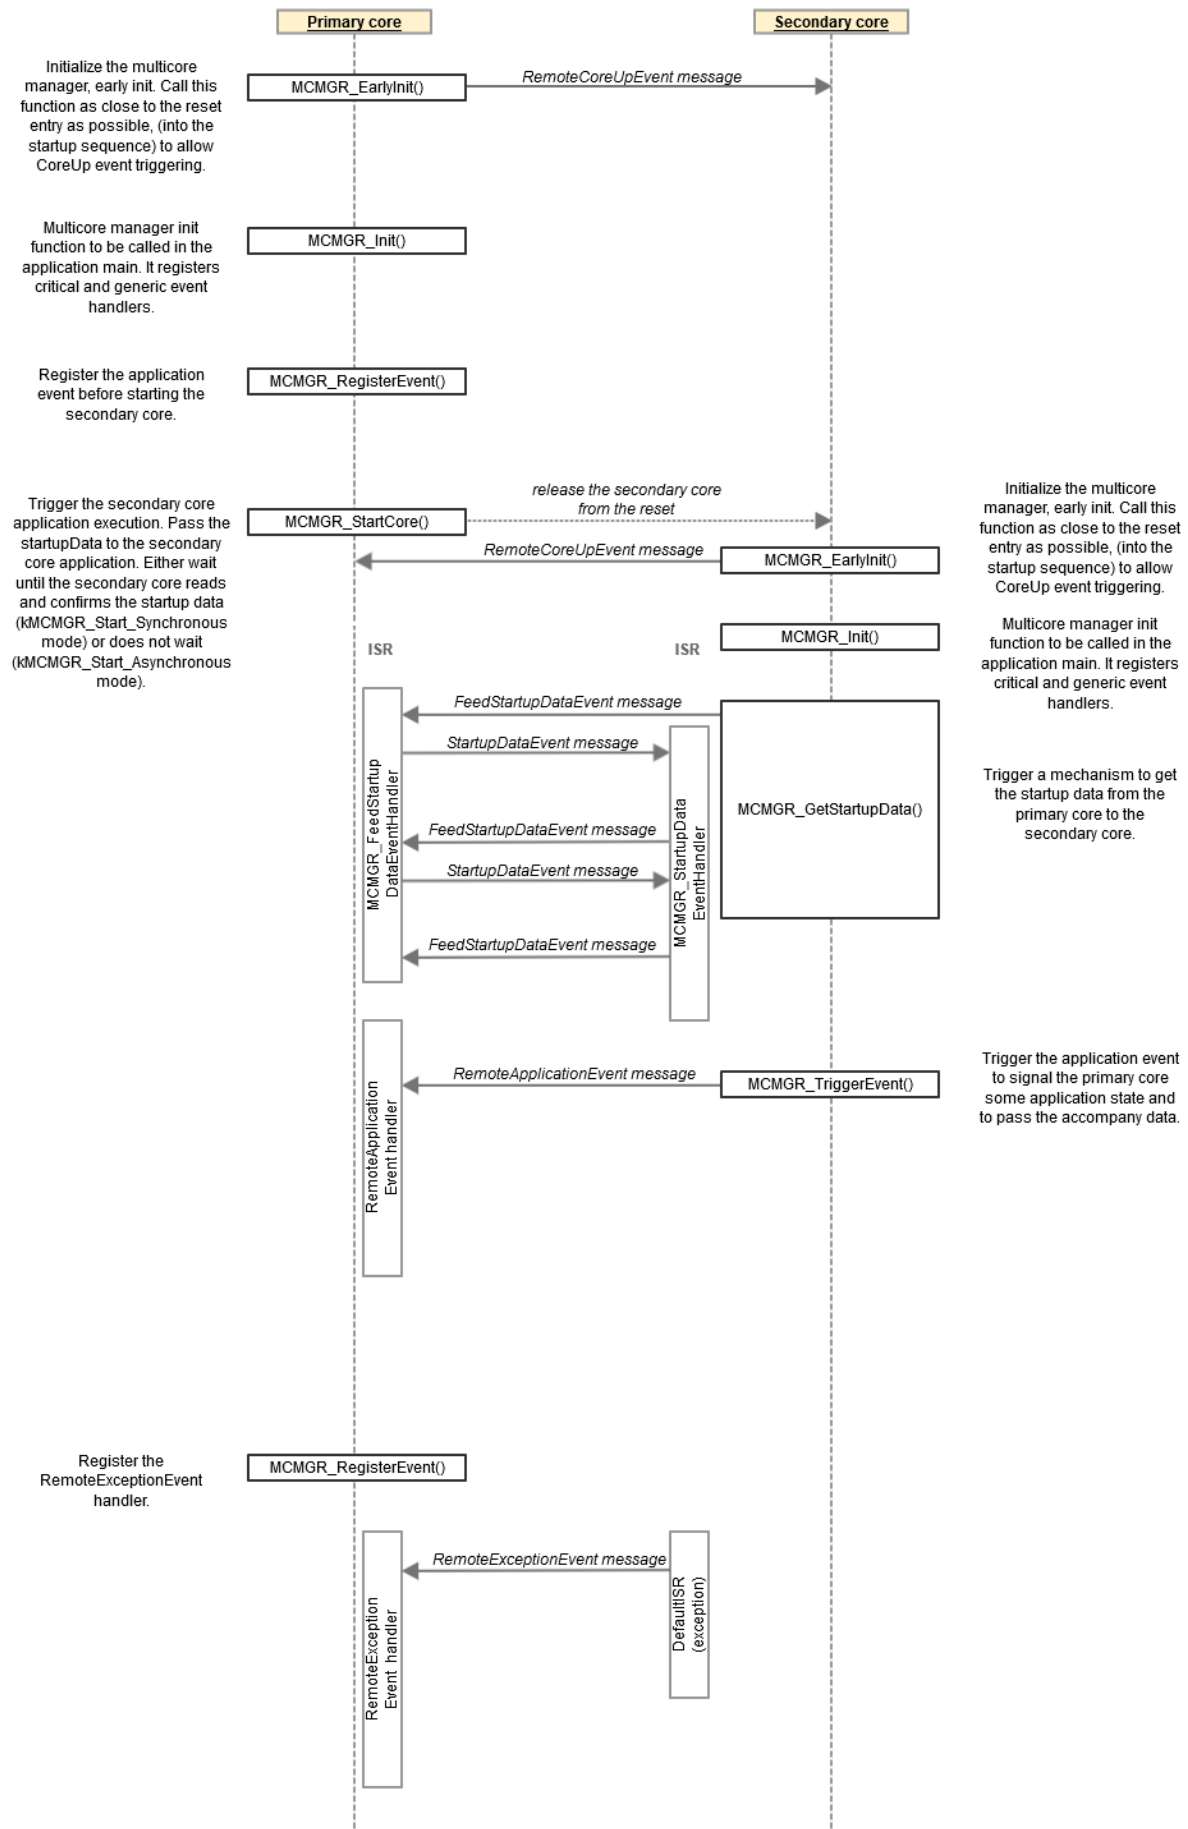

Changelog Multicore Manager All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Added

Fixed

- Added CX flag into CMakeLists.txt to allow c++ build compatibility.

v5.0.0

Added

- Added MCMGR_BUSY_POLL_COUNT macro to prevent infinite polling loops in MCMGR operations.
- Implemented timeout mechanism for all polling loops in MCMGR code.
- Added support to handle more than two cores. Breaking API change by adding parameter `coreNum` specifying core number in functions bellow.
 - MCMGR_GetStartupData(uint32_t *startupData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEvent(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEventForce(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - typedef void (*mcmgr_event_callback_t)(uint16_t data, void *context, mcmgr_core_t coreNum);

When registering the event with function `MCMGR_RegisterEvent()` user now needs to provide `callbackData` pointer to array of elements per every core in system (see README.md for example). In case of systems with only two cores the `coreNum` in callback can be ignored as events can arrive only from one core. Please see Porting guide for more details: [Porting-GuideTo_v5.md](#)

- Updated all porting files to support new MCMGR API.
- Added new platform specific include file `mcmgr_platform.h`. It will contain common platform specific macros that can be then used in `mcmgr` and application. e.g. platform core count `MCMGR_CORECOUNT` 4.
- Move all header files to new `inc` directory.
- Added new platform-specific include files `inc/platform/<platform_name>/mcmgr_platform.h`.

Added

- Add MCXL20 porting layer and unit testing

v4.1.7

Fixed

- `mcmgr_stop_core_internal()` function now returns `kStatus_MCMGR_NotImplemented` status code instead of `kStatus_MCMGR_Success` when device does not support stop of secondary core. Ports affected: kw32w1, kw45b41, kw45b42, mcxw716, mcxw727.

[v4.1.6]

Added

- Multicore Manager moved to standalone repository.
- Add porting layers for imxrt700, mcmxw727, kw47b42.
- New `MCMGR_ProcessDeferredRxIsr()` API added.

[v4.1.5]

Added

- Add notification into `MCMGR_EarlyInit` and `mcmgr_early_init_internal` functions to avoid using uninitialized data in their implementations.

[v4.1.4]

Fixed

- Avoid calling tx isr callbacks when respective Messaging Unit Transmit Interrupt Enable flag is not set in the CR/TCR register.
- Messaging Unit RX and status registers are cleared after the initialization.

[v4.1.3]

Added

- Add porting layers for imxrt1180.

Fixed

- `mu_isr()` updated to avoid calling tx isr callbacks when respective Transmit Interrupt Enable flag is not set in the CR/TCR register.
- `mcmgr_mu_internal.c` code adaptation to new supported SoCs.

[v4.1.2]

Fixed

- Update `mcmgr_stop_core_internal()` implementations to set core state to `kMCMGR_ResetCoreState`.

[v4.1.0]

Fixed

- Code adjustments to address MISRA C-2012 Rules

[v4.0.3]

Fixed

- Documentation updated to describe handshaking in a graphic form.
- Minor code adjustments based on static analysis tool findings

[v4.0.2]

Fixed

- Align porting layers to the updated MCUXpressoSDK feature files.

[v4.0.1]

Fixed

- Code formatting, removed unused code

[v4.0.0]

Added

- Add new MCMGR_TriggerEventForce() API.

[v3.0.0]

Removed

- Removed MCMGR_LoadApp(), MCMGR_MapAddress() and MCMGR_SignalReady()

Modified

- Modified MCMGR_GetStartupData()

Added

- Added MCMGR_EarlyInit(), MCMGR_RegisterEvent() and MCMGR_TriggerEvent()
- Added the ability for remote core monitoring and event handling

[v2.0.1]

Fixed

- Updated to be Misra compliant.

[v2.0.0]

Added

- Support for lpcxpresso54114 board.

[v1.1.0]

Fixed

- Ported to KSDK 2.0.0.

[v1.0.0]

Added

- Initial release.

eRPC

MCUXpresso SDK : mcuxsdk-middleware-erpc

Overview This repository is for MCUXpresso SDK eRPC middleware delivery and it contains eRPC component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run eRPC examples that are based on mcux-sdk-middleware-erpc component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [eRPC - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the eRPC project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

eRPC

- *MCUXpresso SDK : mcuxsdk-middleware-erpc*

- *Overview*
- *Documentation*
- *Setup*
- *Contribution*

- *eRPC*

- *About*
- *Releases*
 - * *Edge releases*
- *Documentation*
- *Examples*
- *References*
- *Directories*
- *Building and installing*
 - * *Requirements*
 - *Windows*
 - *Mac OS X*
 - * *Building*
 - *CMake and KConfig*
 - *Make*
 - * *Installing for Python*
- *Known issues and limitations*
- *Code providing*

About

eRPC (Embedded RPC) is an open source Remote Procedure Call (RPC) system for multichip embedded systems and heterogeneous multicore SoCs.

Unlike other modern RPC systems, such as the excellent [Apache Thrift](#), eRPC distinguishes itself by being designed for tightly coupled systems, using plain C for remote functions, and having a small code size (<5kB). It is not intended for high performance distributed systems over a network.

eRPC does not force upon you any particular API style. It allows you to export existing C functions, without having to change their prototypes. (There are limits, of course.) And although the

internal infrastructure is written in C++, most users will be able to use only the simple C setup APIs shown in the examples below.

A code generator tool called `erpcgen` is included. It accepts input IDL files, having an `.erpc` extension, that have definitions of your data types and remote interfaces, and generates the shim code that handles serialization and invocation. `erpcgen` can generate either C/C++ or Python code.

Example `.erpc` file:

```
// Define a data type.
enum LEDName { kRed, kGreen, kBlue }

// An interface is a logical grouping of functions.
interface IO {
    // Simple function declaration with an empty reply.
    set_led(LEDName whichLed, bool onOrOff) -> void
}
```

Client side usage:

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* init eRPC client IO service */
    initIO_client(client_manager);

    // Now we can call the remote function to turn on the green LED.
    set_led(kGreen, true);

    /* deinit objects */
    deinitIO_client();
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* scope for client service */
    {
        /* init eRPC client IO service */
        IO_client client(client_manager);

        // Now we can call the remote function to turn on the green LED.
        client.set_led(kGreen, true);
    }

    /* deinit objects */
```

(continues on next page)

(continued from previous page)

```

    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

Server side usage:

```

// Implement the remote function.
void set_led(LEDName whichLed, bool onOrOff) {
    // implementation goes here
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    erpc_service_t service = create_IO_service();

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, service);

    // Run the server.
    erpc_server_run();

    /* deinit objects */
    destroy_IO_service(service);
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

```

// Implement the remote function.
class IO : public IO_interface
{
    /* eRPC call definition */
    void set_led(LEDName whichLed, bool onOrOff) override {
        // implementation goes here
    }
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    IO IOImpl;
    IO_service io(&IOImpl);

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, &io);

    /* poll for requests */
}

```

(continues on next page)

(continued from previous page)

```
erpc_status_t err = server.run();

/* deinit objects */
erpc_server_deinit(server);
erpc_mbf_dynamic_deinit(message_buffer_factory);
erpc_transport_tcp_deinit(transport);
}
```

A number of transports are supported, and new transport classes are easy to write.

Supported transports can be found in *erpc/erpc_c/transport* folder. E.g:

- CMSIS UART
- NXP Kinetis SPI and DSPI
- POSIX and Windows serial port
- TCP/IP (mostly for testing)
- [NXP RPMsg-Lite / RPMsg TTY](#)
- SPIdev Linux
- USB CDC
- NXP Messaging Unit

eRPC is available with an unrestrictive BSD 3-clause license. See the [LICENSE file](#) for the full license text.

Releases [eRPC releases](#)

Edge releases Edge releases can be found on [eRPC CircleCI](#) webpage. Choose build of interest, then platform target and choose ARTIFACTS tab. Here you can find binary application from chosen build.

Documentation [Documentation](#) is in the wiki section.

[eRPC Infrastructure documentation](#)

Examples *Example IDL* is available in the *examples/* folder.

Plenty of eRPC multicore and multiprocessor examples can be also found in NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages.

To get the board list with multicore support (eRPC included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded, see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for eRPC multicore examples (RPMsg_Lite or Messaging Unit transports used) or

<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples for eRPC multiprocessor examples (UART or SPI transports used).

eRPC examples use the 'erpc_' name prefix.

Another way of getting NXP MCUXpressoSDK eRPC multicore and multiprocessor examples is using the [mcux-sdk](#) Github repo. Follow the description how to use the West tool to clone and

update the mcuxsdk repo in [readme Overview section](#). Once done the armgcc eRPC examples can be found in

mcuxsdk/examples/<board_name>/multicore_examples or in

mcuxsdk/examples/<board_name>/multiprocessor_examples folders.

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the eRPC examples use the 'erpc_' name prefix.

References This section provides links to interesting erpc-based projects, articles, blogs or guides:

- [erpc \(EmbeddedRPC\) getting started notes](#)
- [ERPC Linux Local Environment Construction and Use](#)
- [The New Wio Terminal eRPC Firmware](#)

Directories *doc* - Documentation.

doxygen - Configuration and support files for running Doxygen over the eRPC C++ infrastructure and erpcgen code.

erpc_c - Holds C/C++ infrastructure for eRPC. This is the code you will include in your application.

erpc_python - Holds Python version of the eRPC infrastructure.

erpcgen - Holds source code for erpcgen and makefiles or project files to build erpcgen on Windows, Linux, and OS X.

erpcsniffer - Holds source code for erpcsniffer application.

examples - Several example IDL files.

mk - Contains common makefiles for building eRPC components.

test - Client/server tests. These tests verify the entire communications path from client to server and back.

utilities - Holds utilities which bring additional benefit to eRPC apps developers.

Building and installing These build instructions apply to host PCs and embedded Linux. For bare metal or RTOS embedded environments, you should copy the *erpc_c* directory into your application sources.

CMake and KConfig build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests and examples.

CMake is compatible with gcc and clang. On Windows local MingGW downloaded by *script* can be used.

Make build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests.

The makefiles are compatible with gcc or clang on Linux, OS X, and Cygwin. A Windows build of *erpcgen* using Visual Studio is also available in the *erpcgen/VisualStudio_v14* directory. There is also an Xcode project file in the *erpcgen* directory, which can be used to build *erpcgen* for OS X.

Requirements erPC now support building **erpcgen**, **erpc_lib**, **tests** and **C examples** using CMake.

Requirements when using CMake:

- **CMake** (minimal version 3.20.0)
- Generator - **Make, Ninja, ...**
- **C/C++ compiler** - **GCC, CLANG, ...**
- **Bison** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Requirements when using Make:

- **Make**
- **C/C++ compiler - GCC, CLANG, ...**
- **Binson** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Windows Related steps to build **erpcgen** using **Visual Studio** are described in `erpcgen/VisualStudio_v14/readme_erpcgen.txt`.

To install MinGW, Bison, Flex locally on Windows:

```
./install_dependencies.ps1
* \ \ \

#### Linux

\ \ \ bash
./install_dependencies.sh
```

Mandatory for case, when build for different architecture is needed

- gcc-multilib, g++-multilib

Mac OS X

```
./install_dependencies.sh
```

Building

CMake and KConfig eRPC use CMake and KConfig to configurate and build eRPC related targets. KConfig can be edited by *prj.conf* or *menuconfig* when building.

Generate project, config and build. In *erpc/* execute:

```
cmake -B ./build # in erpc/build generate cmake project
cmake --build ./build --target menuconfig # Build menuconfig and configure erpcgen, erpc_lib, tests and
↳ examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

****CMake will use the system's default compilers and generator**

If you want to use Windows and locally installed MinGW, use *CMake preset* :

```
cmake --preset mingw64 # Generate project in ./build using mingw64's make and compilers
cmake --build ./build --target menuconfig # Build menuconfig and configure erpcgen, erpc_lib, tests and ↵
↵examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

Make To build the library and erpcgen, run from the repo root directory:

```
make
```

To install the library, erpcgen, and include files, run:

```
make install
```

You may need to sudo the make install.

By default this will install into /usr/local. If you want to install elsewhere, set the PREFIX environment variable. Example for installing into /opt:

```
make install PREFIX=/opt
```

List of top level Makefile targets:

- erpc: build the liberpc.a static library
- erpcgen: build the erpcgen tool
- erpcsniffer: build the sniffer tool
- test: build the unit tests under the *test* directory
- all: build all of the above
- install: install liberpc.a, erpcgen, and include files

eRPC code is validated with respect to the C++ 11 standard.

Installing for Python To install the Python infrastructure for eRPC see instructions in the *erpc python readme*.

Known issues and limitations

- Static allocations controlled by the ERPC_ALLOCATION_POLICY config macro are not fully supported yet, i.e. not all erpc objects can be allocated statically now. It deals with the ongoing process and the full static allocations support will be added in the future.

Code providing Repository on Github contains two main branches: **main** and **develop**. Code is developed on **develop** branch. Release version is created via merging **develop** branch into **main** branch.

Copyright 2014-2016 Freescale Semiconductor, Inc.

Copyright 2016-2025 NXP

eRPC Getting Started

Overview This *Getting Started User Guide* shows software developers how to use Remote Procedure Calls (RPC) in embedded multicore microcontrollers (eRPC).

The eRPC documentation is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
 1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
 2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
 3. Add infrastructure files.
 4. Add user code for client and server applications.
 5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmmsg/cm4/iar/`

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

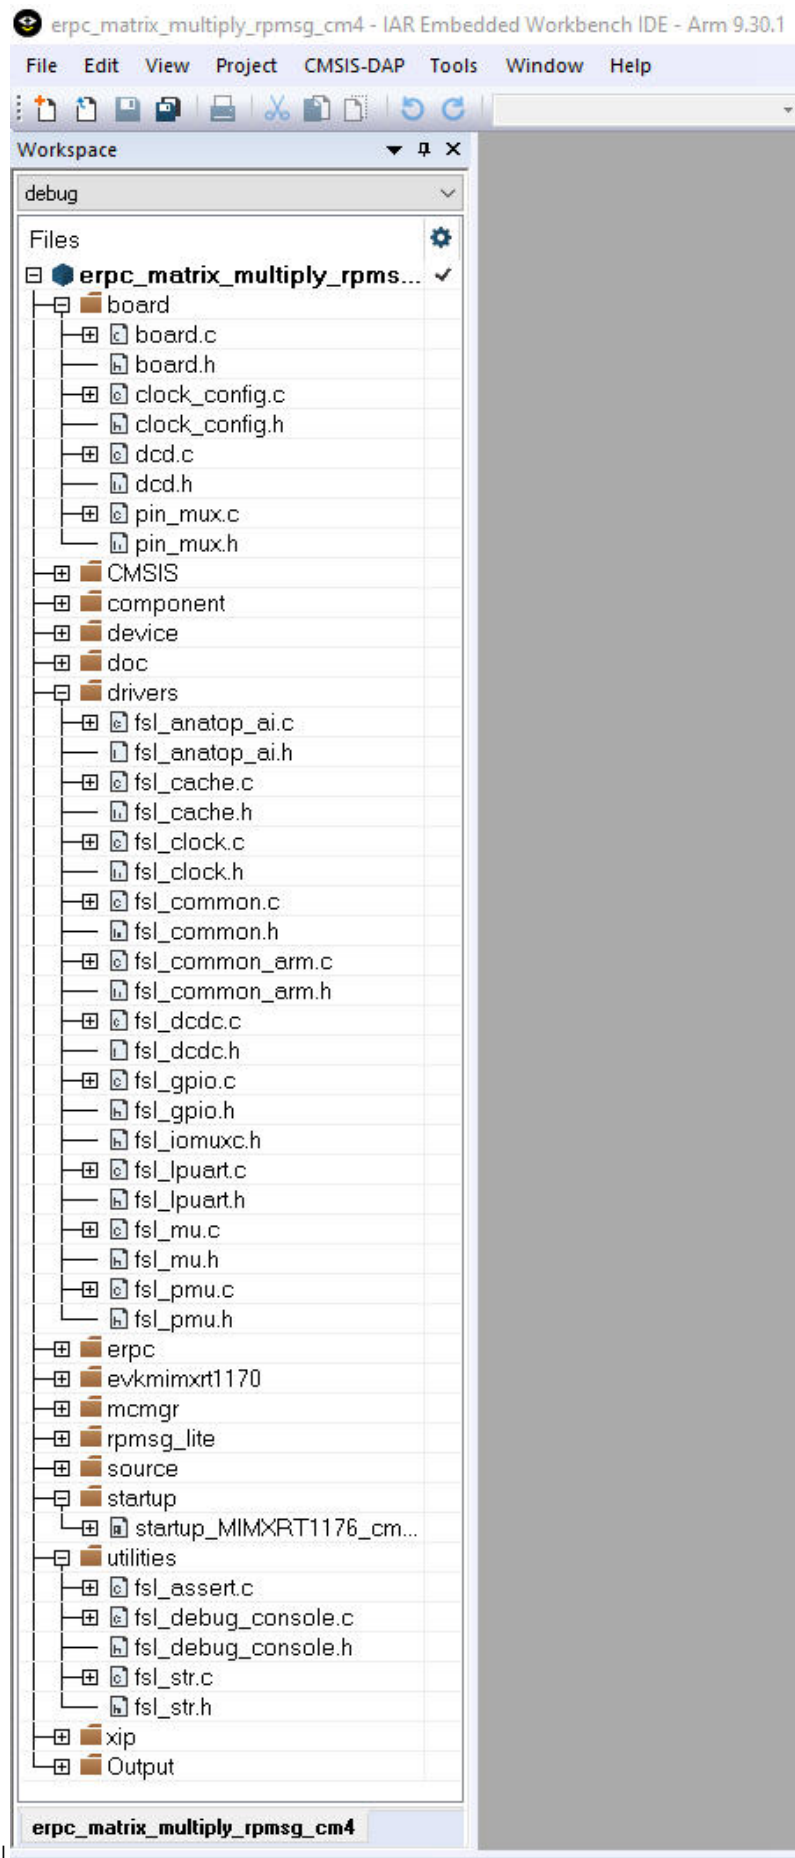

|


Parent topic:Multicore server application

Server related generated files The server-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__server.h
- erpc__matrix__multiply__server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/

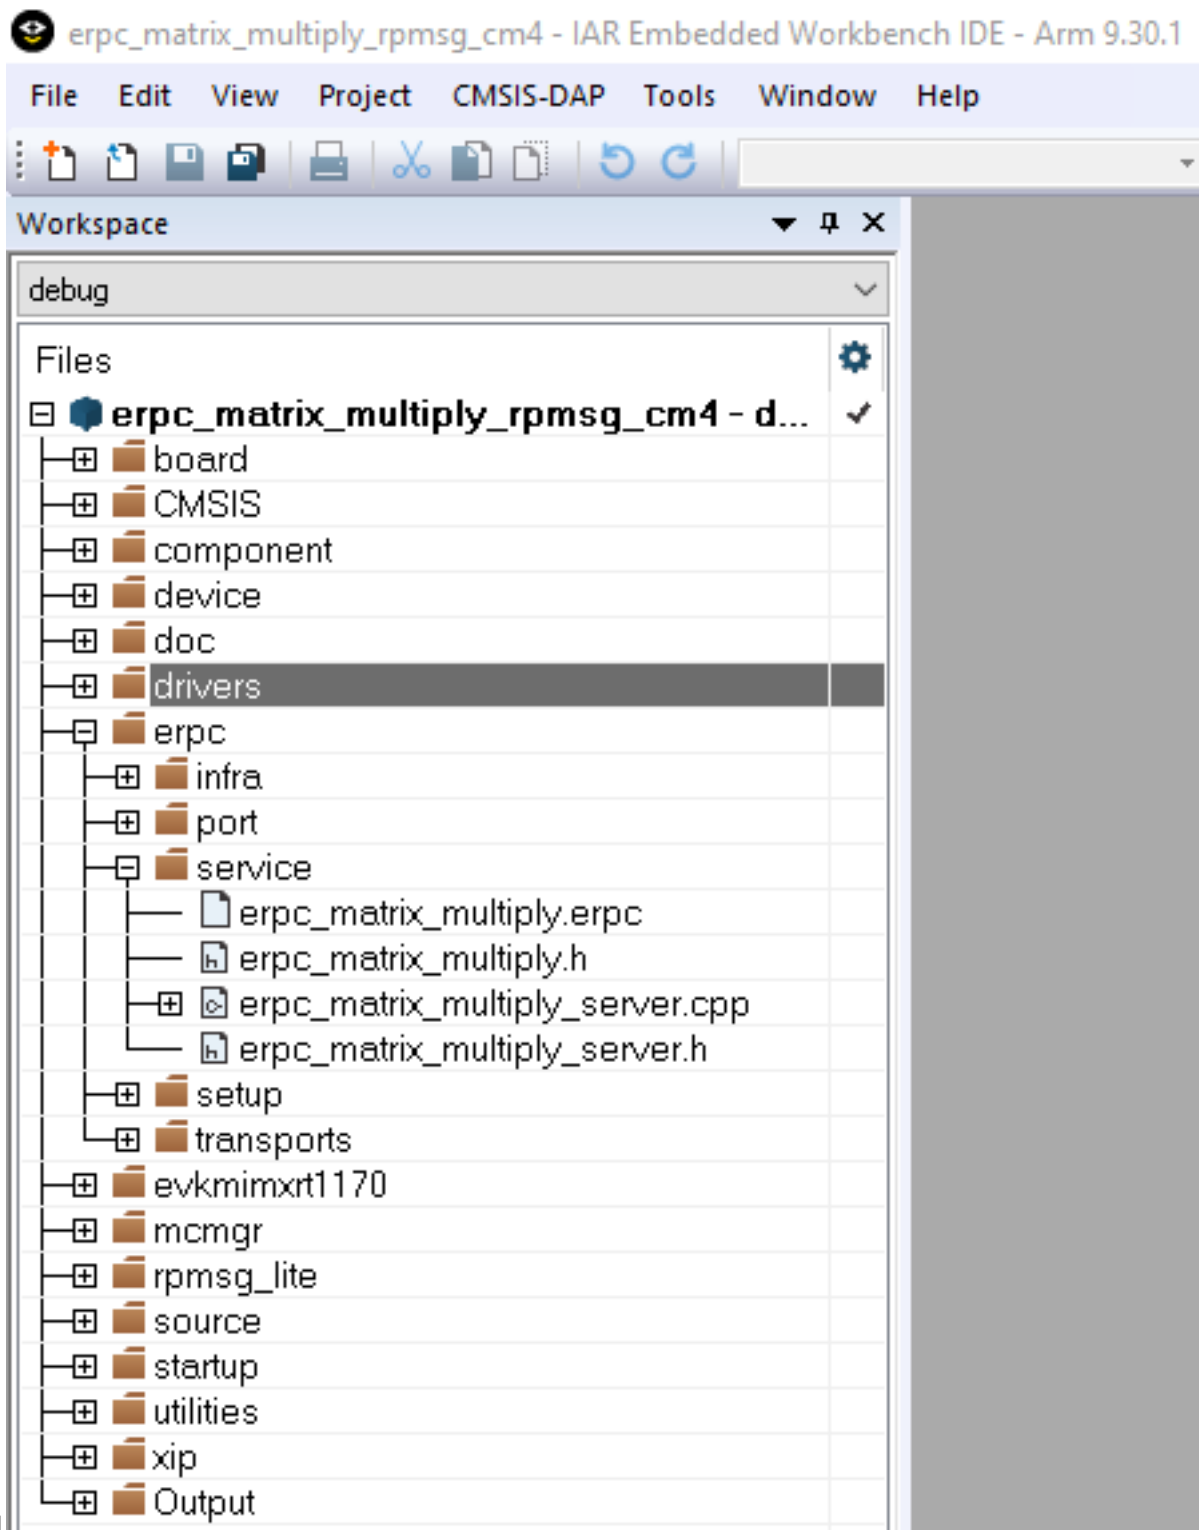


Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
 - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
 - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
 - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
 - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
 - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
 - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
 - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
 - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
 - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
 - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
 - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
 - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
 - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

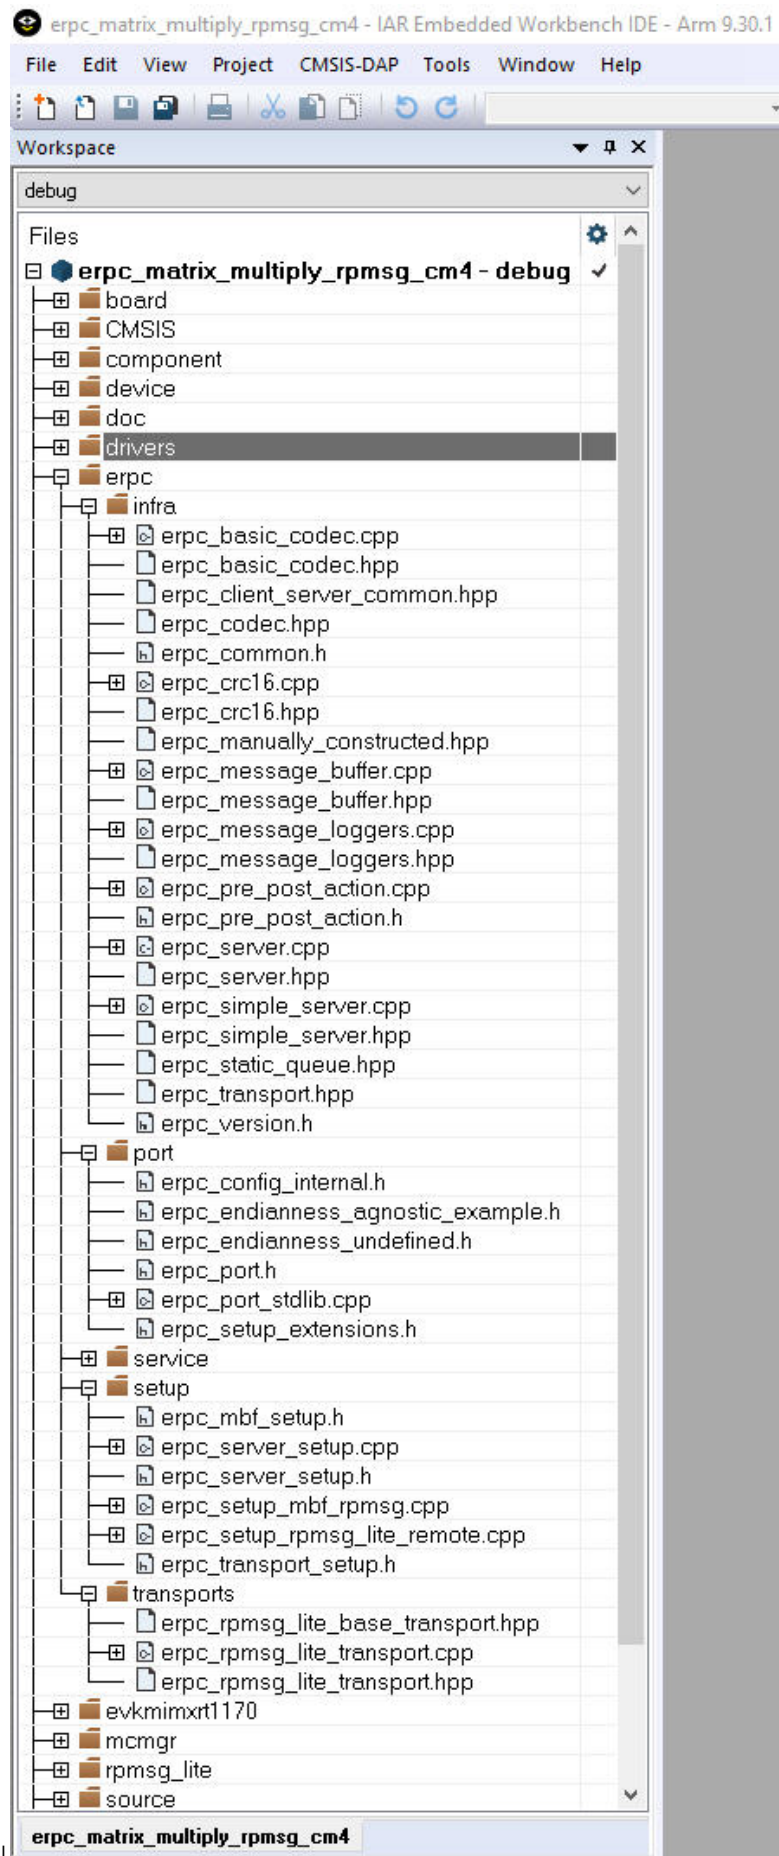

|


Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

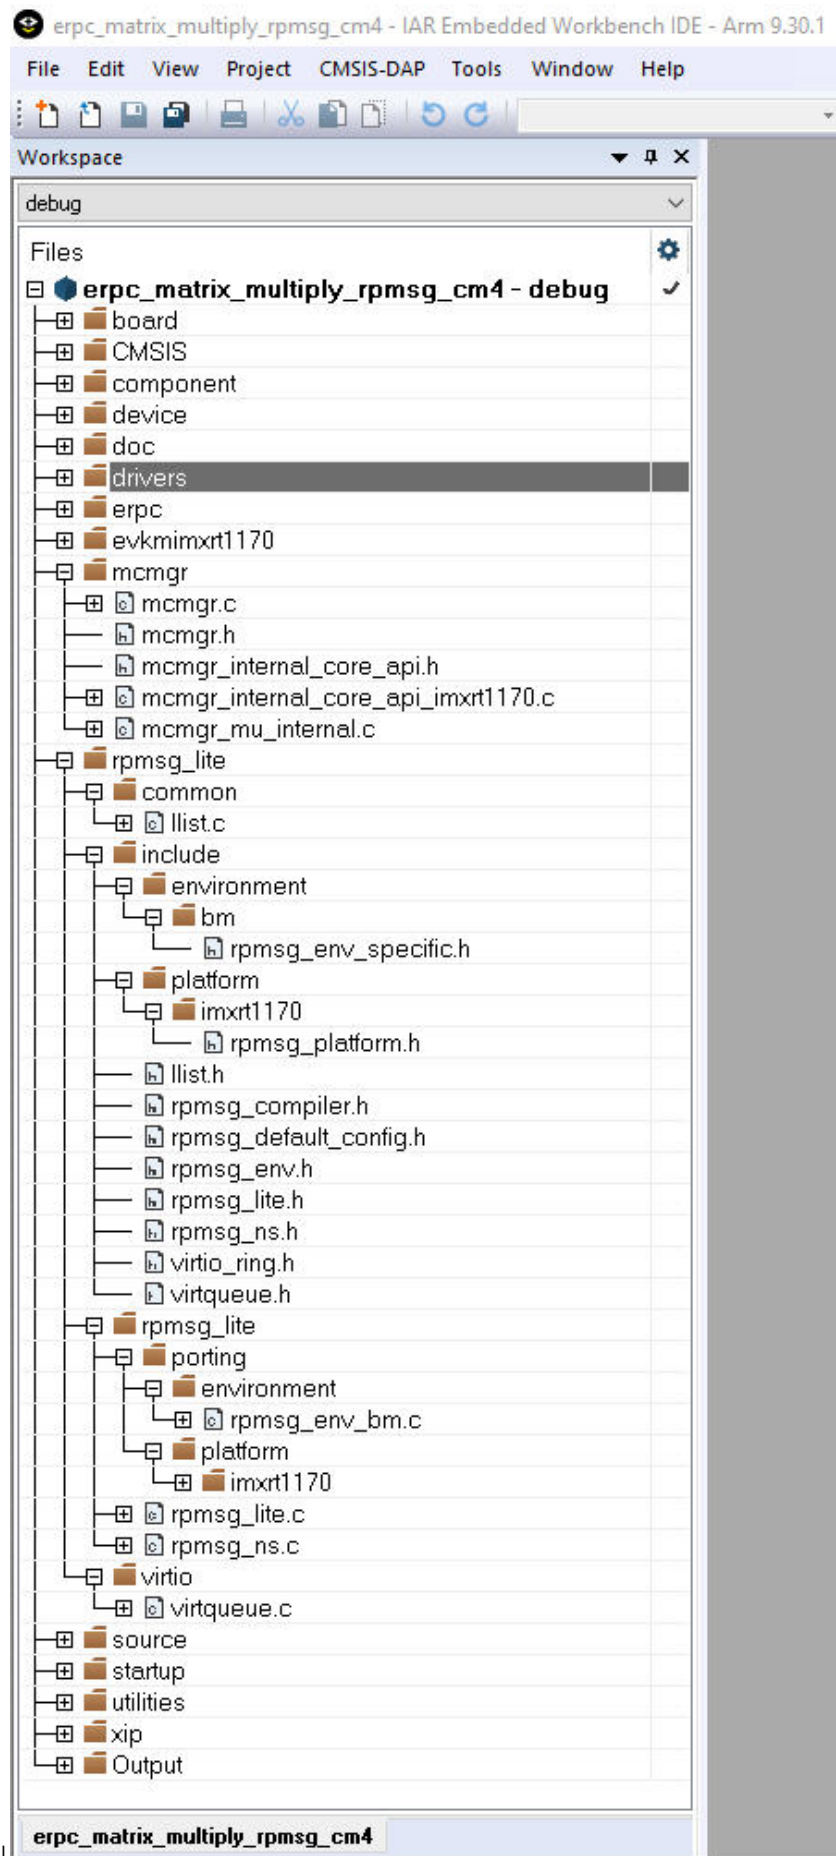

|

Parent topic: Multicore server application

Server user code The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
    ...
}
int main()
{
    ...
    /* RPSMsg-Lite transport layer initialization */
    erpc_transport_t transport;
    transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
    ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_rpmsg_init(transport);
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server);
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

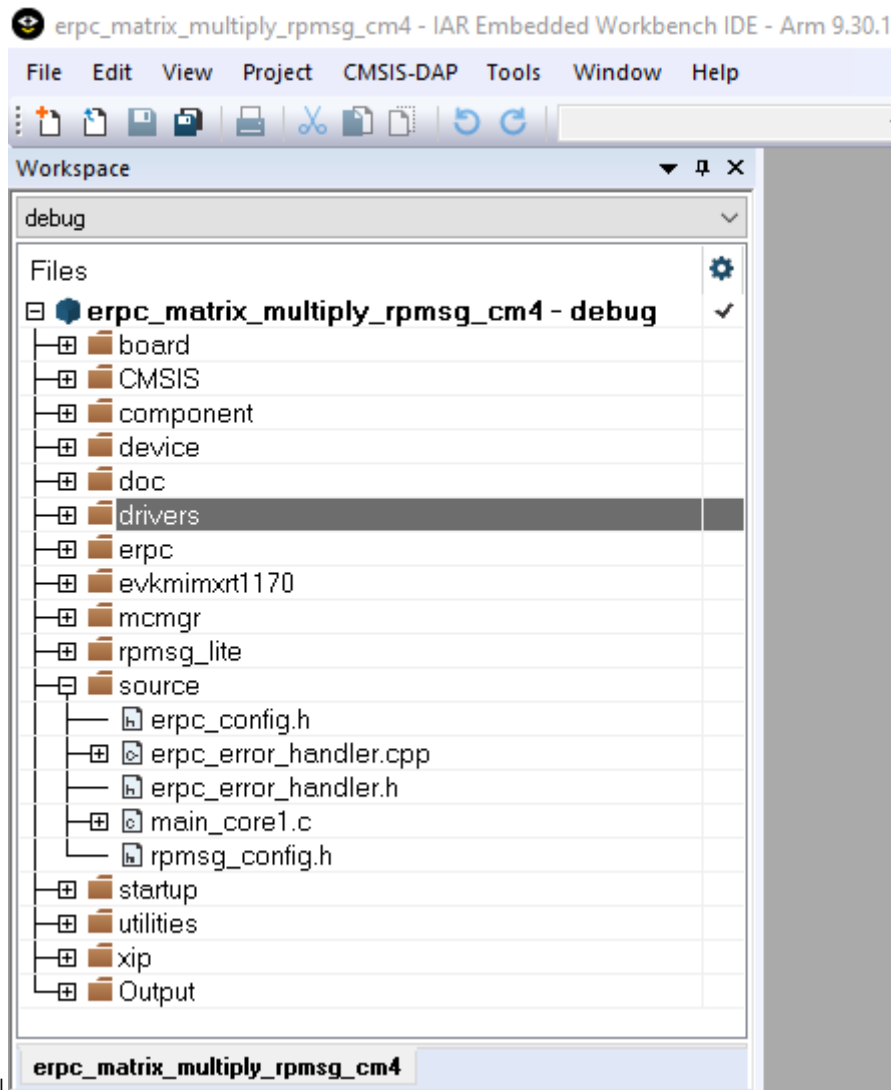

Parent topic: Multicore server application

Parent topic: [Create an eRPC application](#)


Multicore client application The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

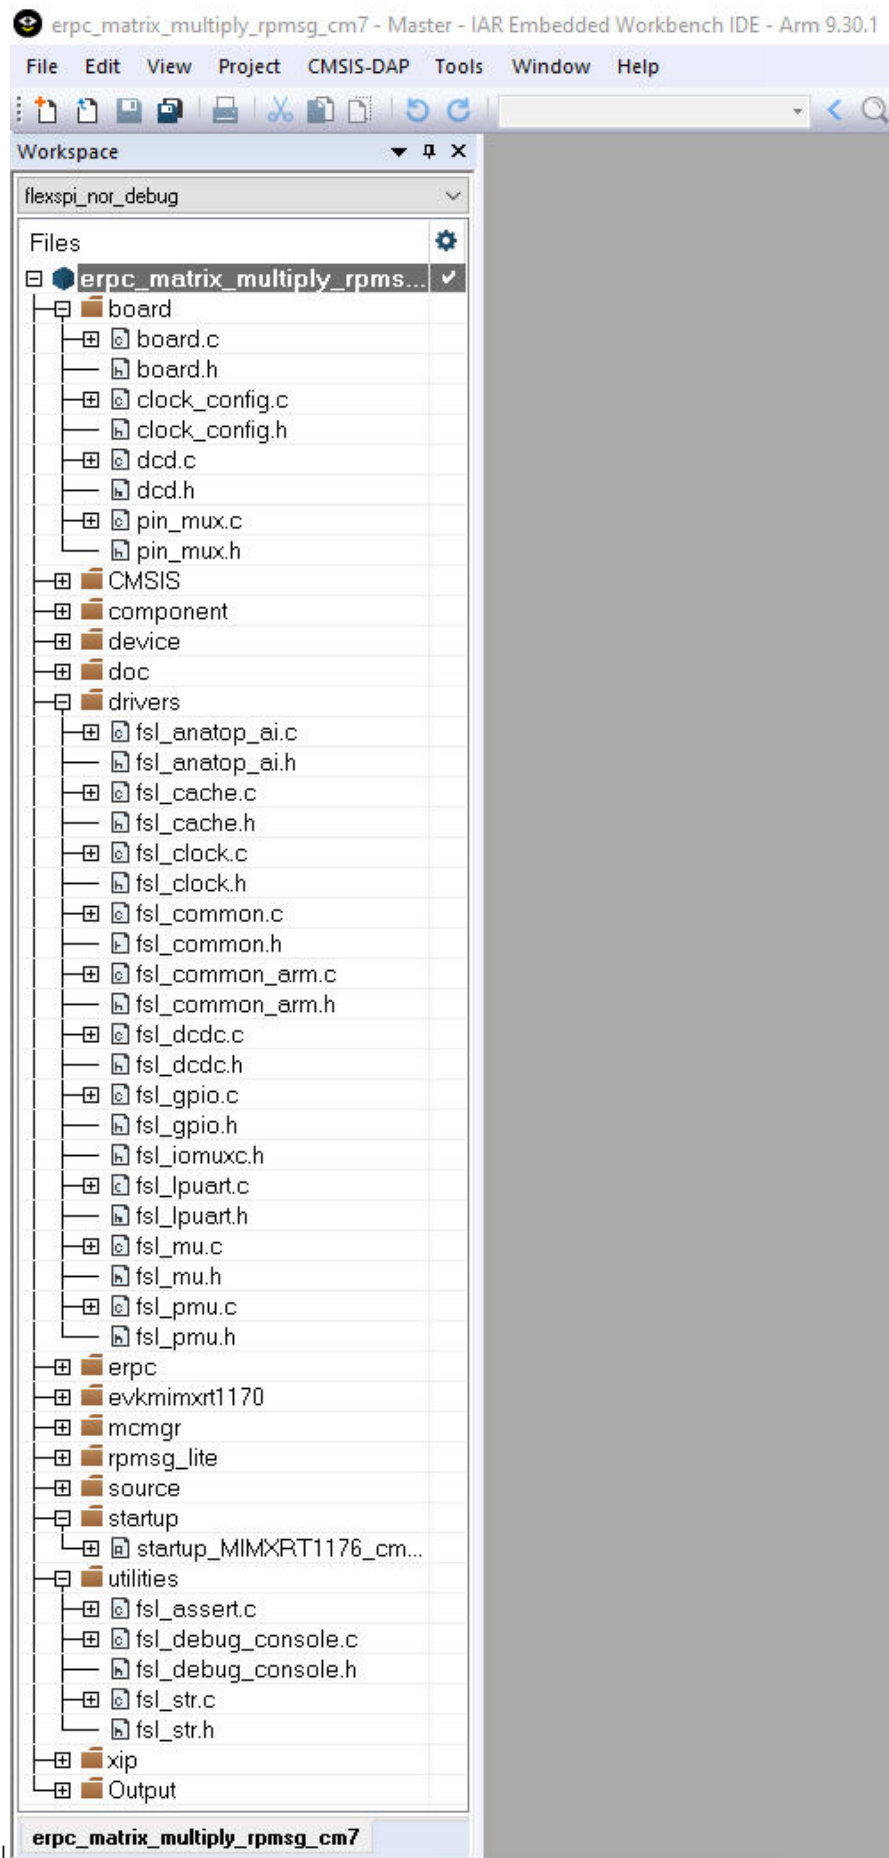


|

Parent topic:Multicore client application

Client-related generated files The client-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

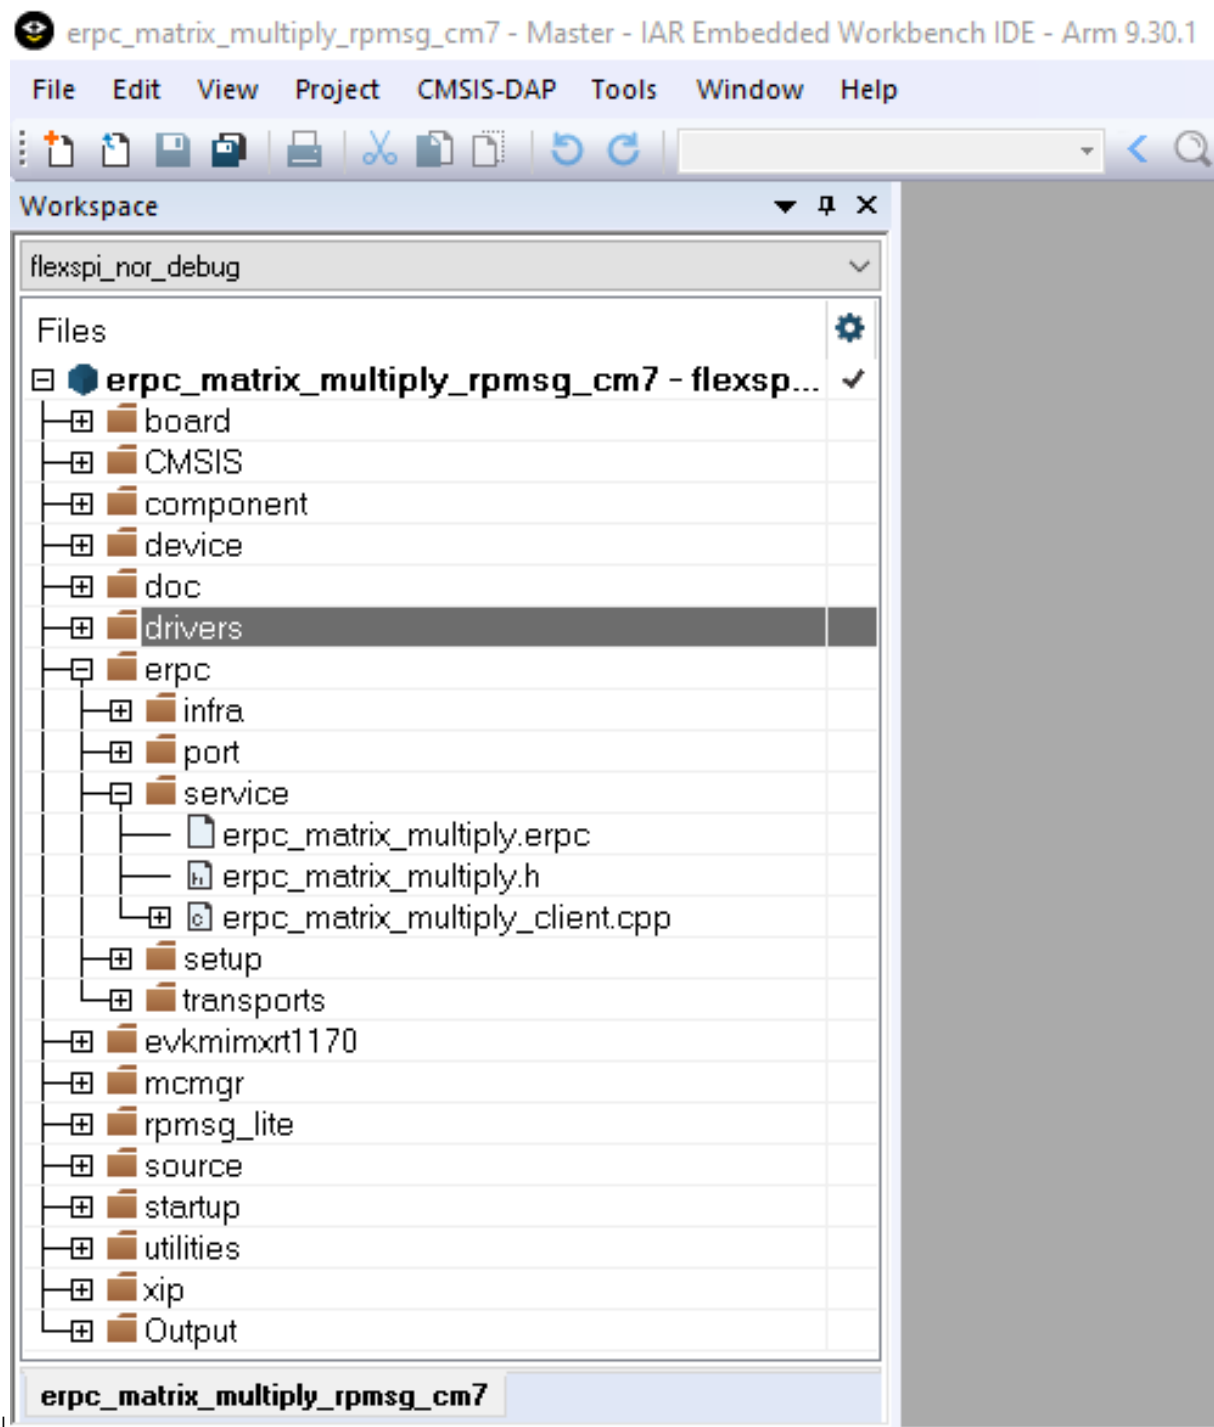

Parent topic: Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

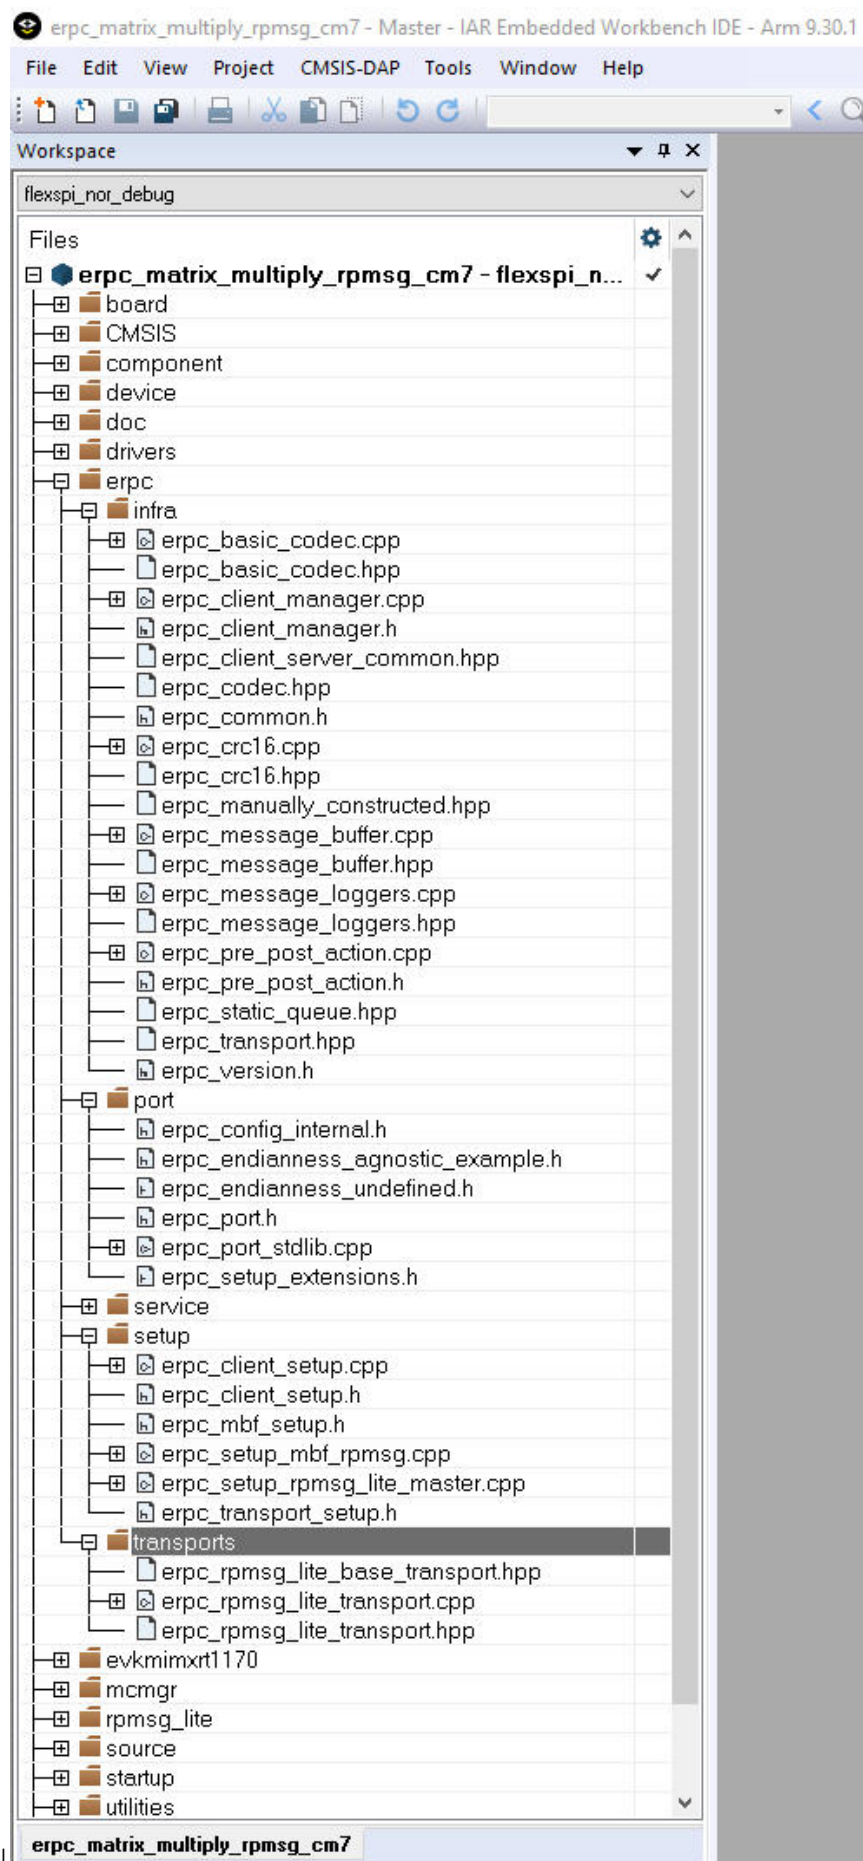

|


Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/

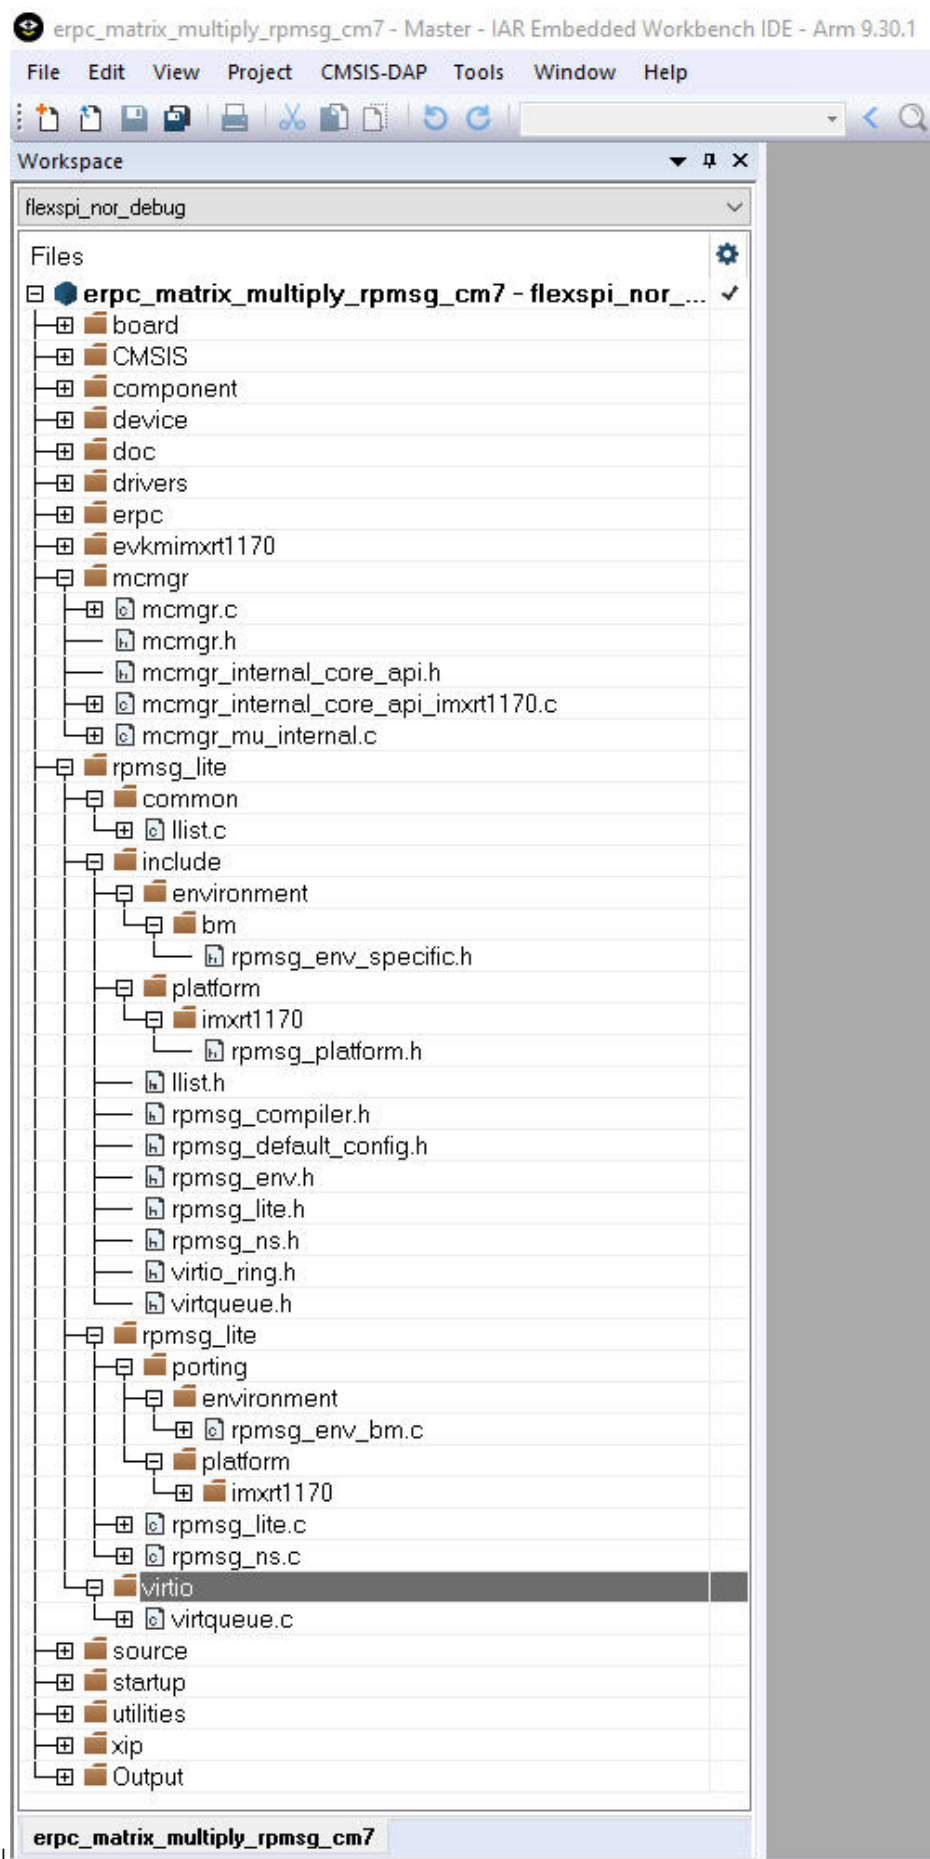

Parent topic:Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPSMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Except for the application main file, there are configuration files for the RPSMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

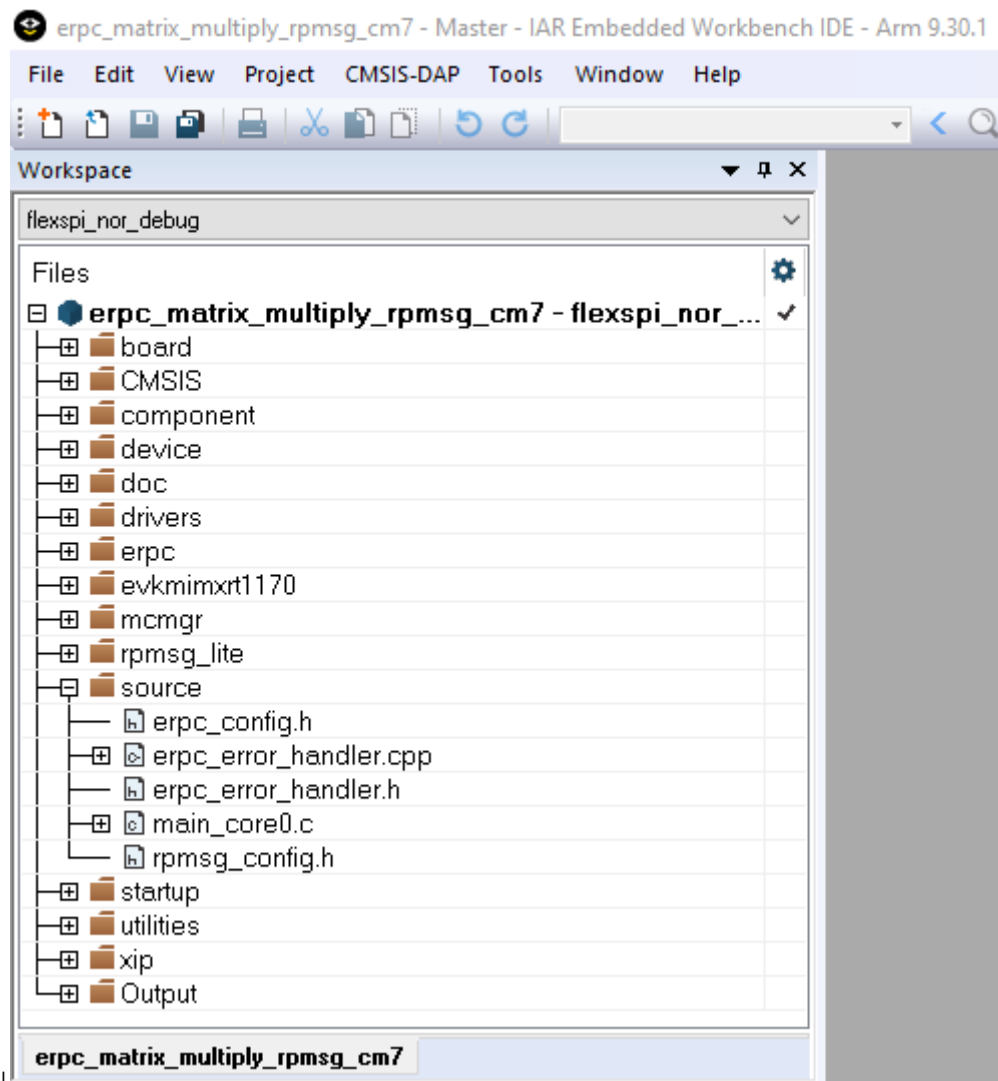

Parent topic:Multicore client application

Parent topic:[Create an eRPC application](#)

Multiprocessor server application The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
    ...
}
int main()
{
    ...
    /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
    ↪operations */
    erpc_transport_t transport;
    transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_dynamic_init();
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server)
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Parent topic:Multiprocessor server application

Multiprocessor client application The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RMPMsg-Lite). The RMPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
<eRPC base directory>/erpc_c/transports/	erpc_(d)spi_master_transport.hpp
<eRPC base directory>/erpc_c/transports/	erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
<eRPC base directory>/erpc_c/transports/	erpc_uart_cmsis_transport.hpp
<eRPC base directory>/erpc_c/transports/	erpc_uart_cmsis_transport.cpp

Client user code The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Parent topic:Multiprocessor client application

Parent topic:Multiprocessor server application

Parent topic:[Create an eRPC application](#)

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK_install_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

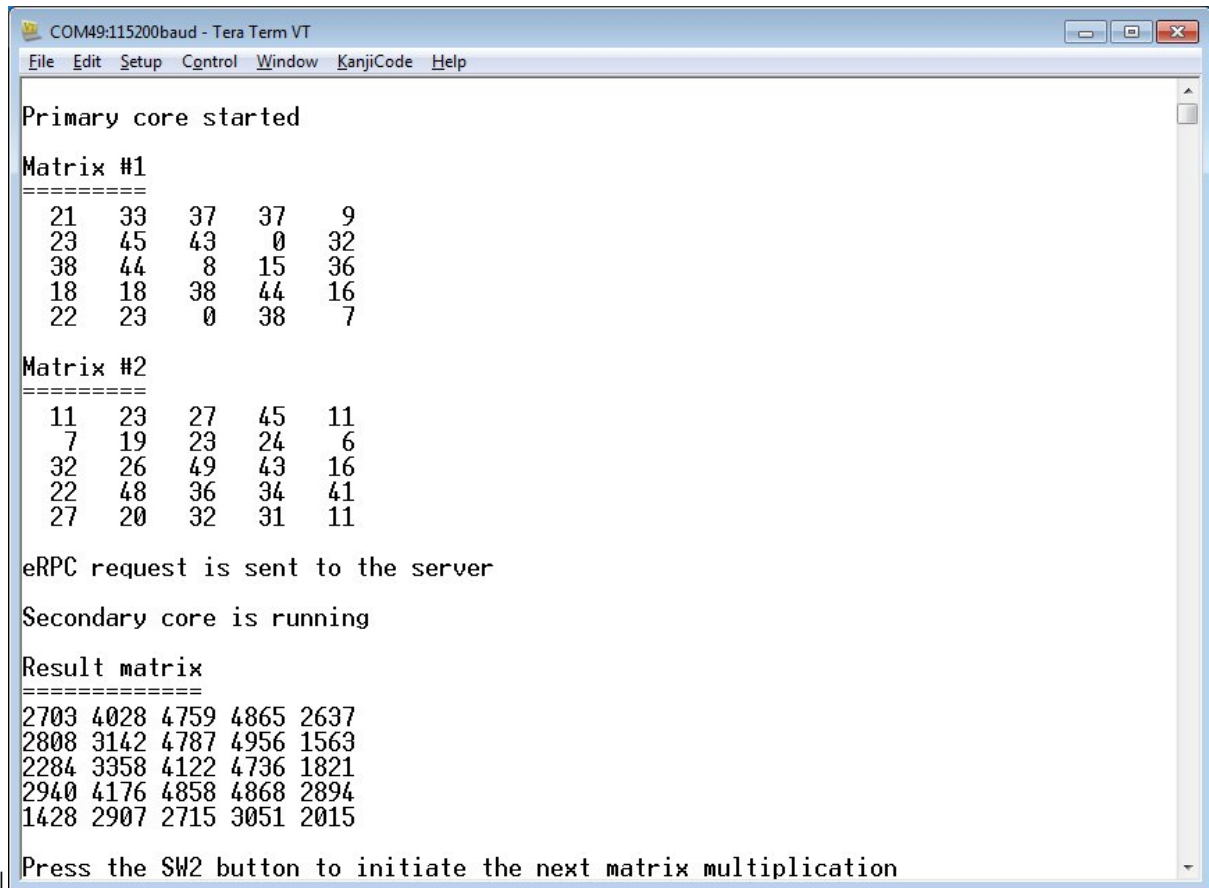

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21  33  37  37   9
 23  45  43   0  32
 38  44   8  15  36
 18  18  38  44  16
 22  23   0  38   7

Matrix #2
=====
 11  23  27  45  11
  7  19  23  24   6
 32  26  49  43  16
 22  48  36  34  41
 27  20  32  31  11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

eRPC example This section shows how to create an example eRPC application called “Matrix multiply”, which implements one eRPC function (matrix multiply) with two function parameters (two matrices). The client-side application calls this eRPC function, and the server side performs the multiplication of received matrices. The server side then returns the result.

For example, use the NXP MIMXRT1170-EVK board as the target dual-core platform, and the IAR Embedded Workbench for ARM (EWARM) as the target IDE for developing the eRPC example.

- The primary core (CM7) runs the eRPC client.
- The secondary core (CM4) runs the eRPC server.
- RPMsg-Lite (Remote Processor Messaging Lite) is used as the eRPC transport layer.

The “Matrix multiply” application can be also run in the multi-processor setup. In other words, the eRPC client running on one SoC communicates with the eRPC server that runs on another SoC, utilizing different transport channels. It is possible to run the board-to-PC example (PC as the eRPC server and a board as the eRPC client, and vice versa) and also the board-to-board example. These multiprocessor examples are prepared for selected boards only.

| Multicore application source and project files | `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore/`
| Multiprocessor application source and project files | `<MCUXpressoSDK_install_dir>/boards/<board_name>/multi`
`<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<tr`
| | eRPC source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/` | | RPLite
source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/rplite/`

Designing the eRPC application The matrix multiply application is based on calling single eRPC function that takes 2 two-dimensional arrays as input and returns matrix multiplication results as another 2 two-dimensional array. The IDL file syntax supports arrays with the dimension length set by the number only (in the current eRPC implementation). Because of this, a variable is declared in the IDL dedicated to store information about matrix dimension length, and to allow easy maintenance of the user and server code.

For a simple use of the two-dimensional array, the alias name (new type definition) for this data type has been declared in the IDL. Declaring this alias name ensures that the same data type can be used across the client and server applications.

Parent topic: [eRPC example](#)

Creating the IDL file The created IDL file is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/`

The created IDL file contains the following code:

```
program erpc_matrix_multiply
/*! This const defines the matrix size. The value has to be the same as the
Matrix array dimension. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
const int32 matrix_size = 5;
/*! This is the matrix array type. The dimension has to be the same as the
matrix size const. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
type Matrix = int32[matrix_size][matrix_size];
interface MatrixMultiplyService {
erpcMatrixMultiply(in Matrix matrix1, in Matrix matrix2, out Matrix result_matrix) ->
void
}
```

Details:

- The IDL file starts with the program name (*erpc_matrix_multiply*), and this program name is used in the naming of all generated outputs.
- The declaration and definition of the constant variable named *matrix_size* follows next. The *matrix_size* variable is used for passing information about the length of matrix dimensions to the client/server user code.
- The alias name for the two-dimensional array type (*Matrix*) is declared.
- The interface group *MatrixMultiplyService* is located at the end of the IDL file. This interface group contains only one function declaration *erpcMatrixMultiply*.
- As shown above, the function’s declaration contains three parameters of *Matrix* type: *matrix1* and *matrix2* are input parameters, while *result_matrix* is the output parameter. Additionally, the returned data type is declared as *void*.

When writing the IDL file, the following order of items is recommended:

1. Program name at the top of the IDL file.
2. New data types and constants declarations.
3. Declarations of interfaces and functions at the end of the IDL file.

Parent topic: [eRPC example](#)

Using the eRPC generator tool | Windows OS | <MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x64
 | Linux OS | <MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86
 <MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86
 | | Mac OS | <MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Mac |

The files for the “Matrix multiply” example are pre-generated and already a part of the application projects. The following section describes how they have been created.

- The easiest way to create the shim code is to copy the erpcgen application to the same folder where the IDL file (*.erpc) is located; then run the following command:

```
erpcgen <IDL_file>.erpc
```

- In the “Matrix multiply” example, the command should look like:

```
erpcgen erpc_matrix_multiply.erpc
```

Additionally, another method to create the shim code is to execute the eRPC application using input commands:

- “-?”/”—help” – Shows supported commands.
- “-o <filePath>”/”—output<filePath>” – Sets the output directory.

For example,

```
<path_to_erpcgen>/erpcgen -o <path_to_output>  
<path_to_IDL>/<IDL_file_name>.erpc
```

For the “Matrix multiply” example, when the command is executed from the default erpcgen location, it looks like:

```
erpcgen -o  
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service  
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/erpc_matrix_mu
```

In both cases, the following four files are generated into the <MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service folder:

- erpc_matrix_multiply.h
- erpc_matrix_multiply_client.cpp
- erpc_matrix_multiply_server.h
- erpc_matrix_multiply_server.cpp

For multiprocessor examples, the eRPC file and pre-generated files can be found in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_common/erpc_matrix_multiply/service folder.

For Linux OS users:

- Do not forget to set the permissions for the eRPC generator application.
- Run the application as ./erpcgen... instead of as erpcgen

Parent topic: [eRPC example](#)

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
 1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
 2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
 3. Add infrastructure files.
 4. Add user code for client and server applications.
 5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmmsg/cm4/iar/`

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

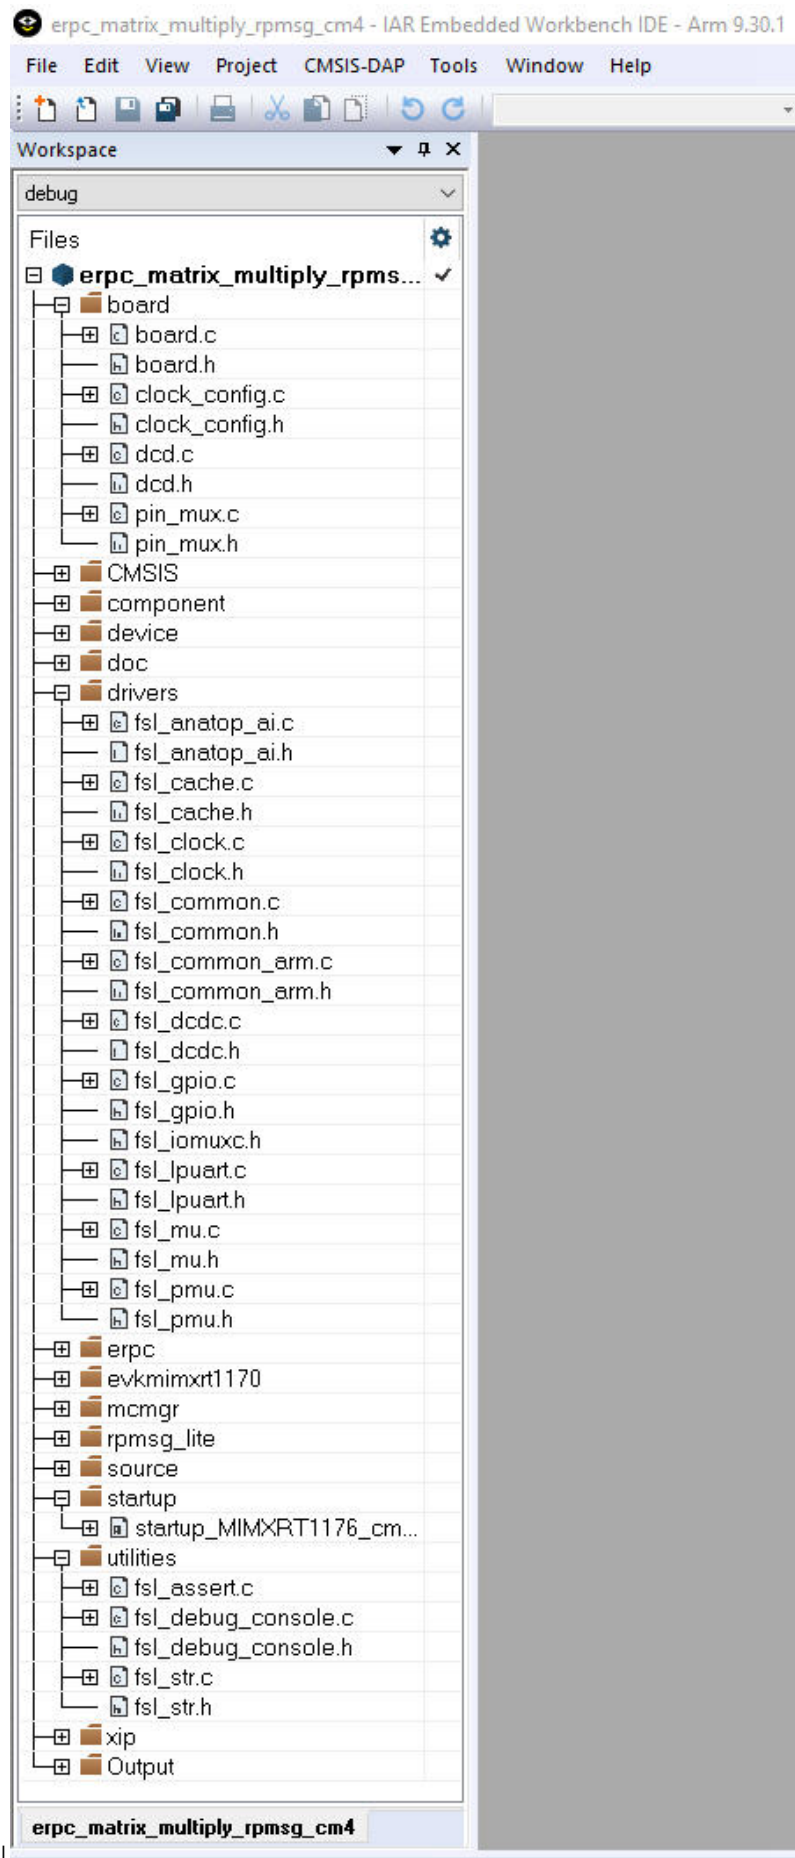

|


Parent topic:Multicore server application

Server related generated files The server-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__server.h
- erpc__matrix__multiply__server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/

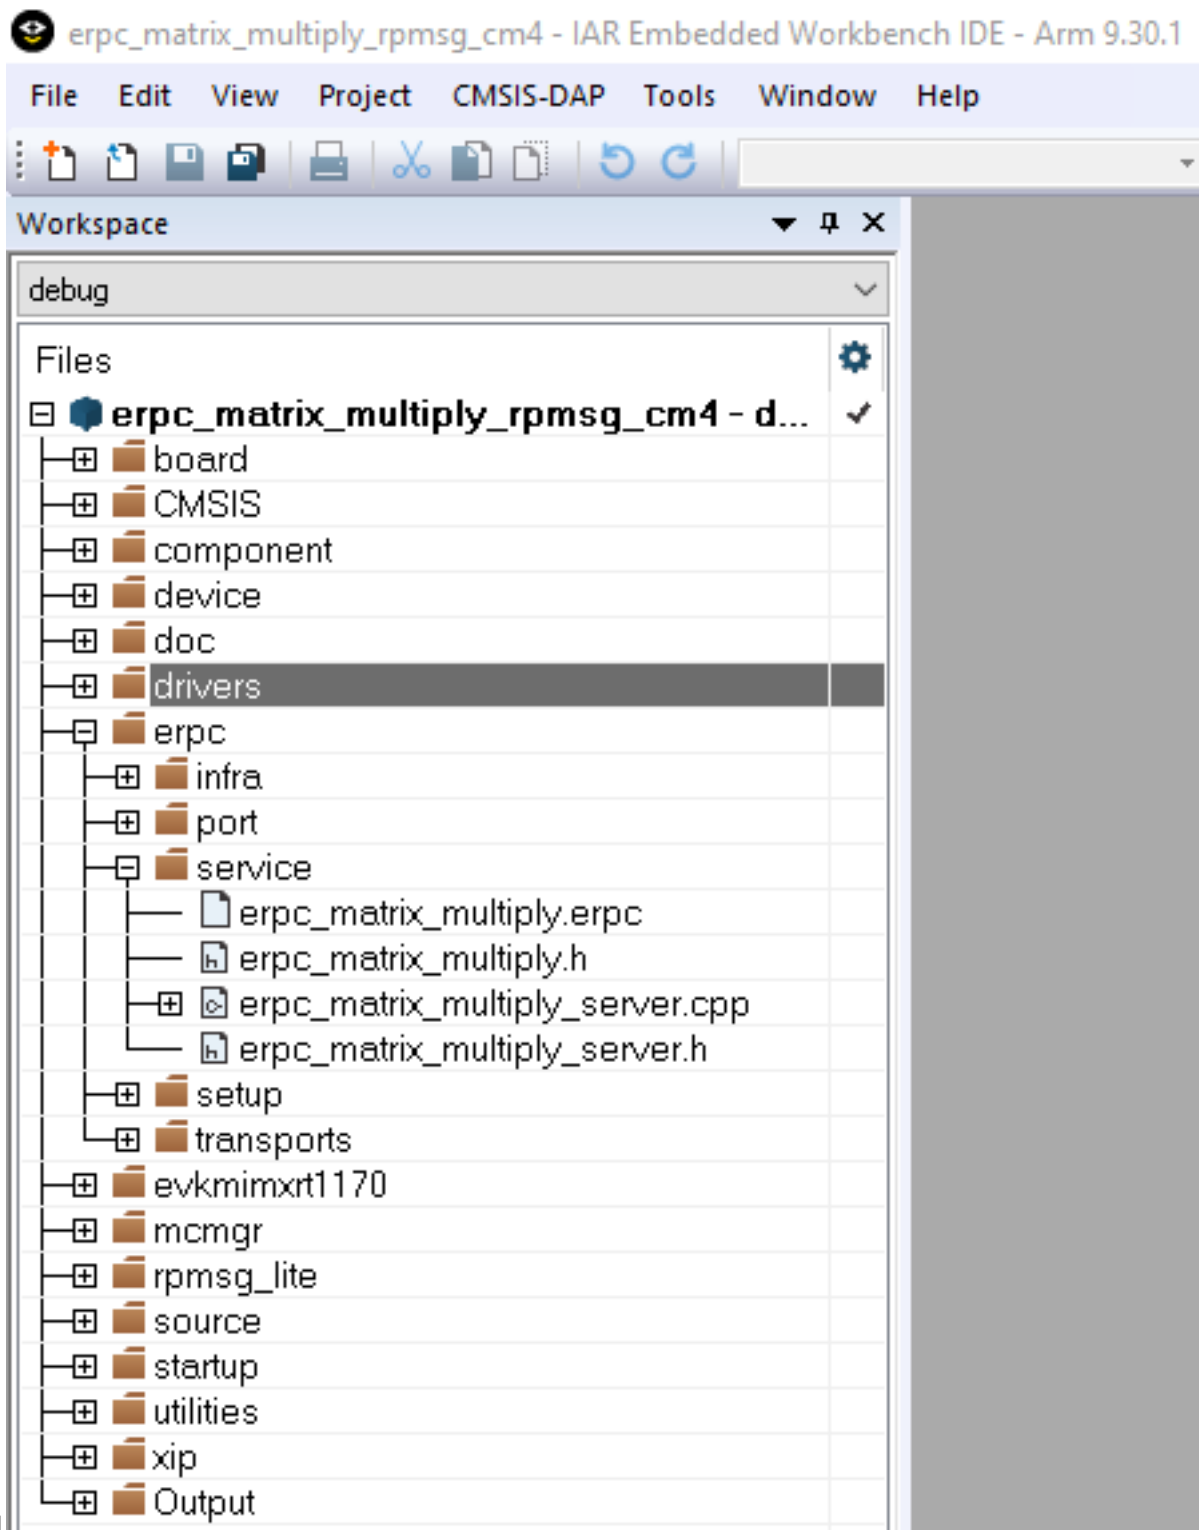


Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
 - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
 - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
 - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
 - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
 - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
 - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
 - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
 - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
 - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
 - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
 - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
 - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
 - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

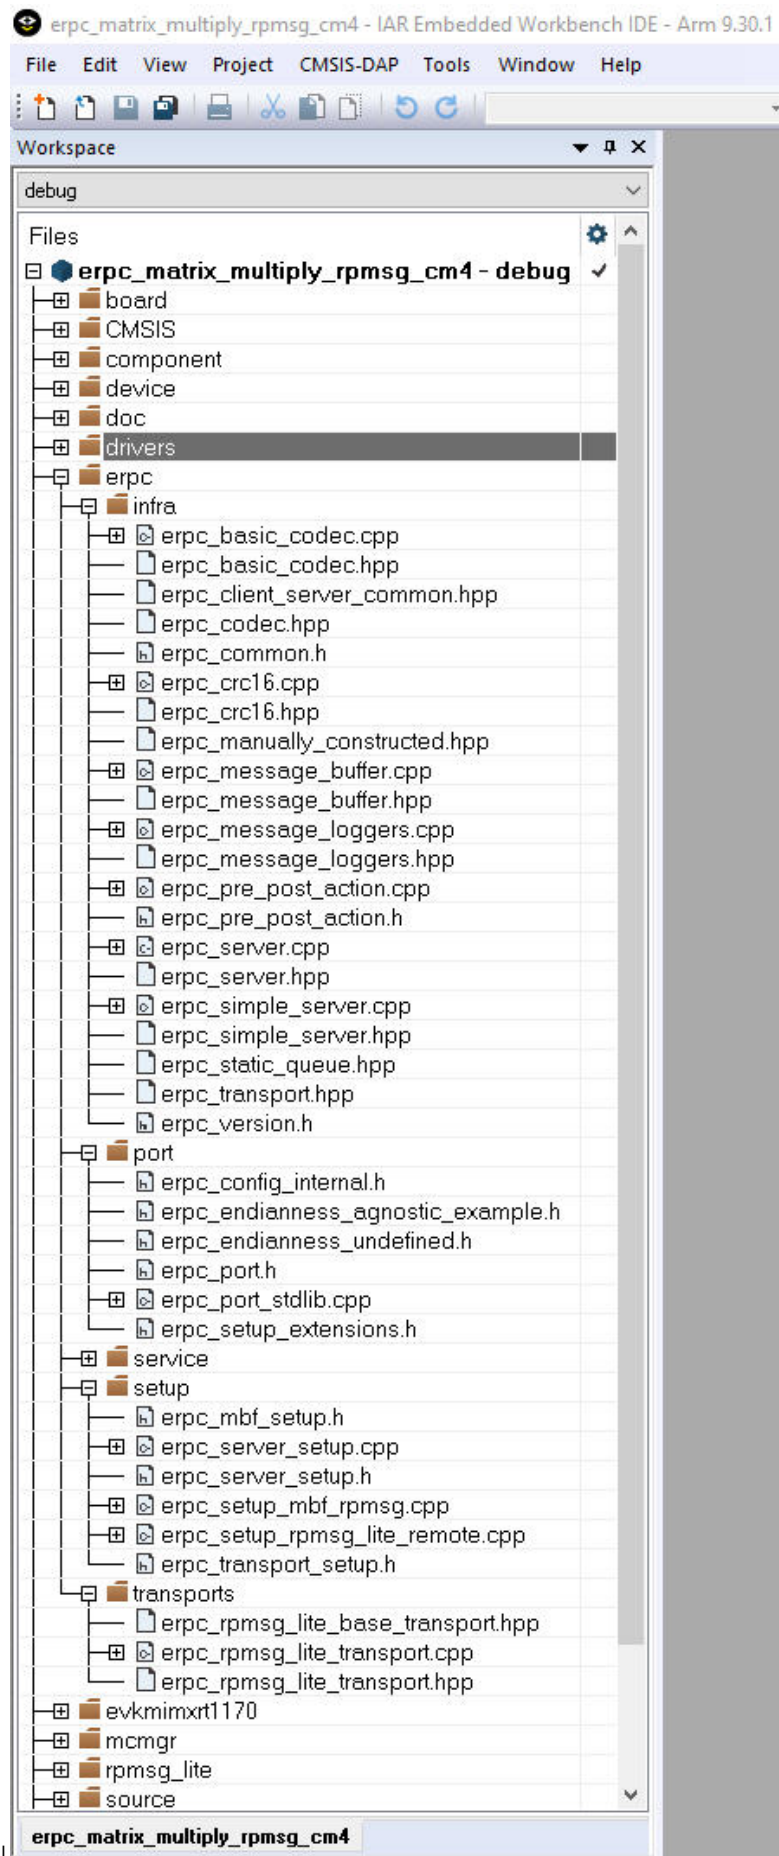

|


Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPSMsg-Lite (transport layer), it is also necessary to include RPSMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpsmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

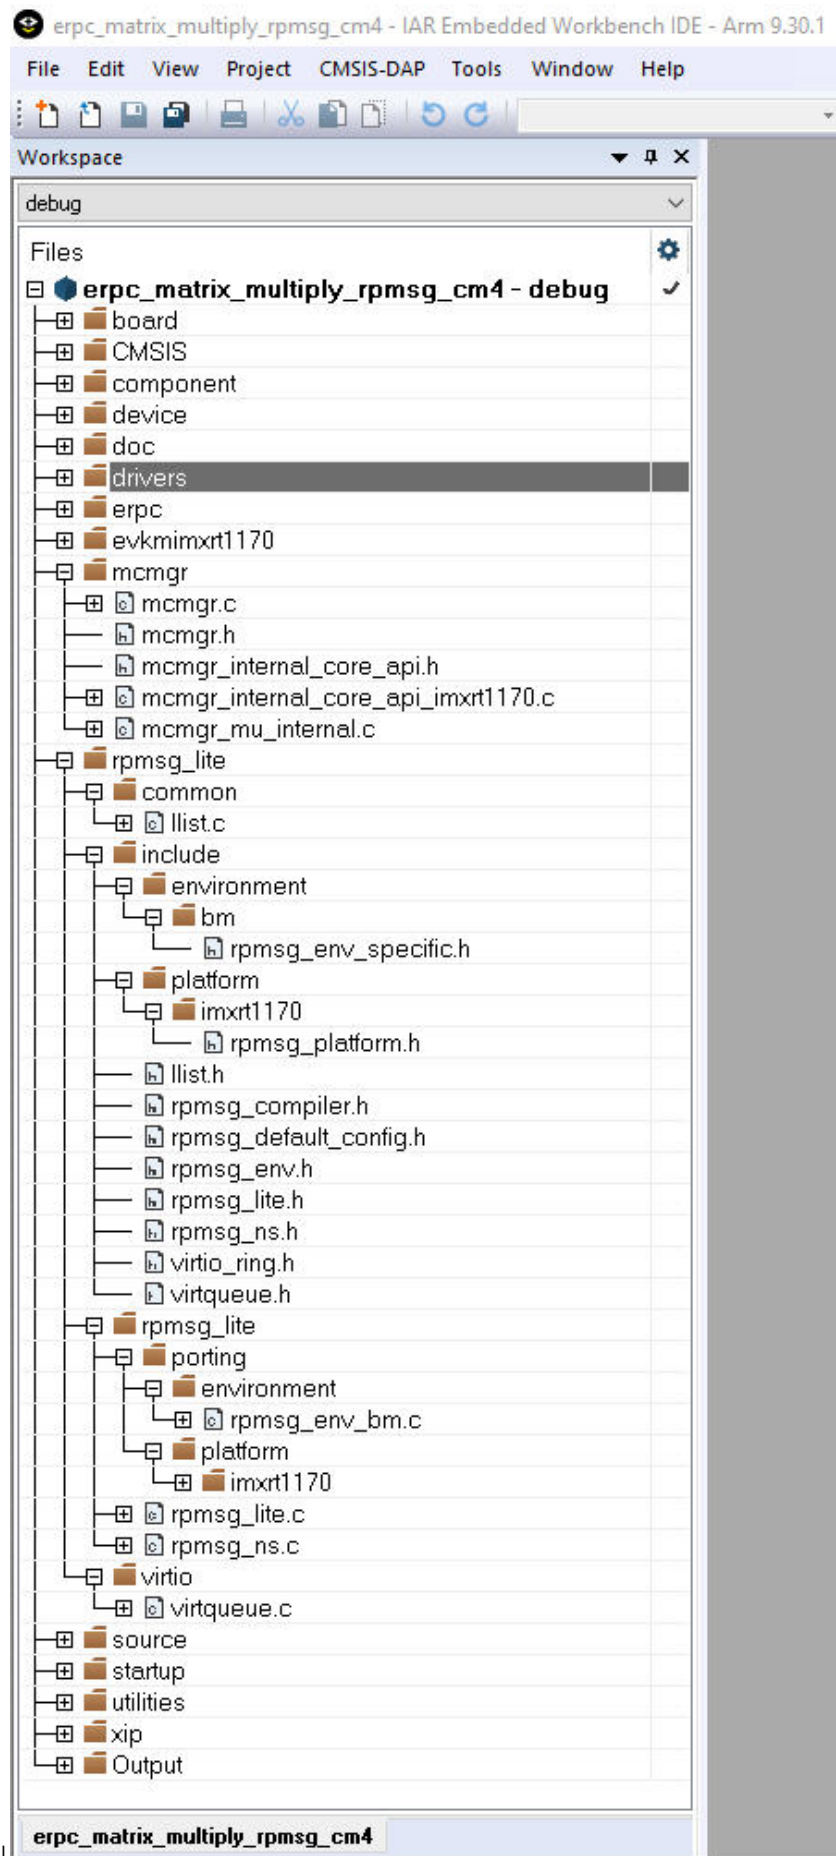

|

Parent topic: Multicore server application

Server user code The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
    ...
}
int main()
{
    ...
    /* RPSMsg-Lite transport layer initialization */
    erpc_transport_t transport;
    transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
    ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_rpmsg_init(transport);
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server);
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

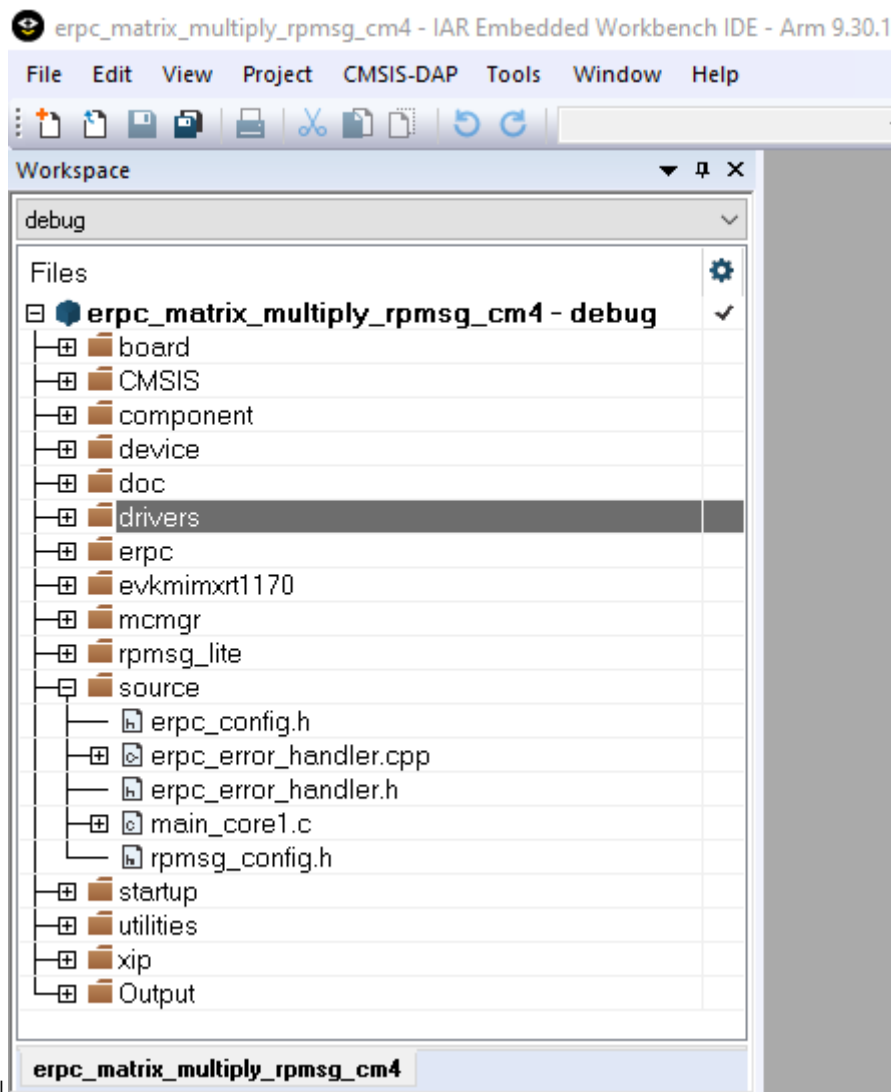

Parent topic:Multicore server application

Parent topic:[Create an eRPC application](#)


Multicore client application The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

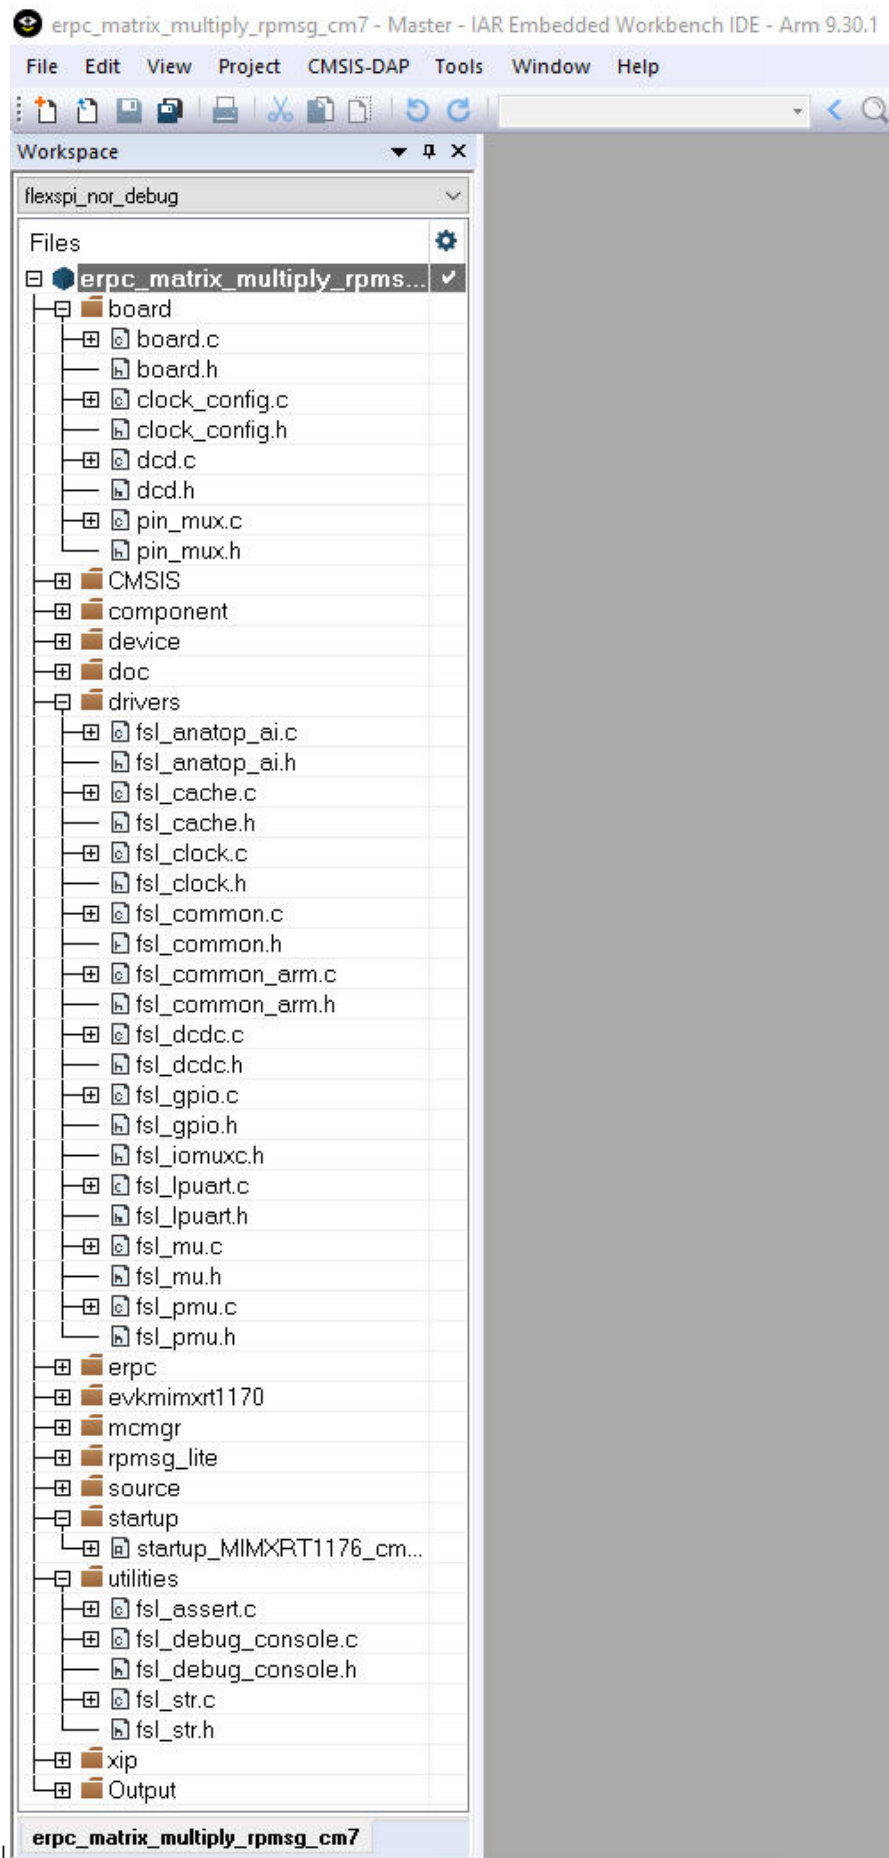


|

Parent topic: Multicore client application

Client-related generated files The client-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

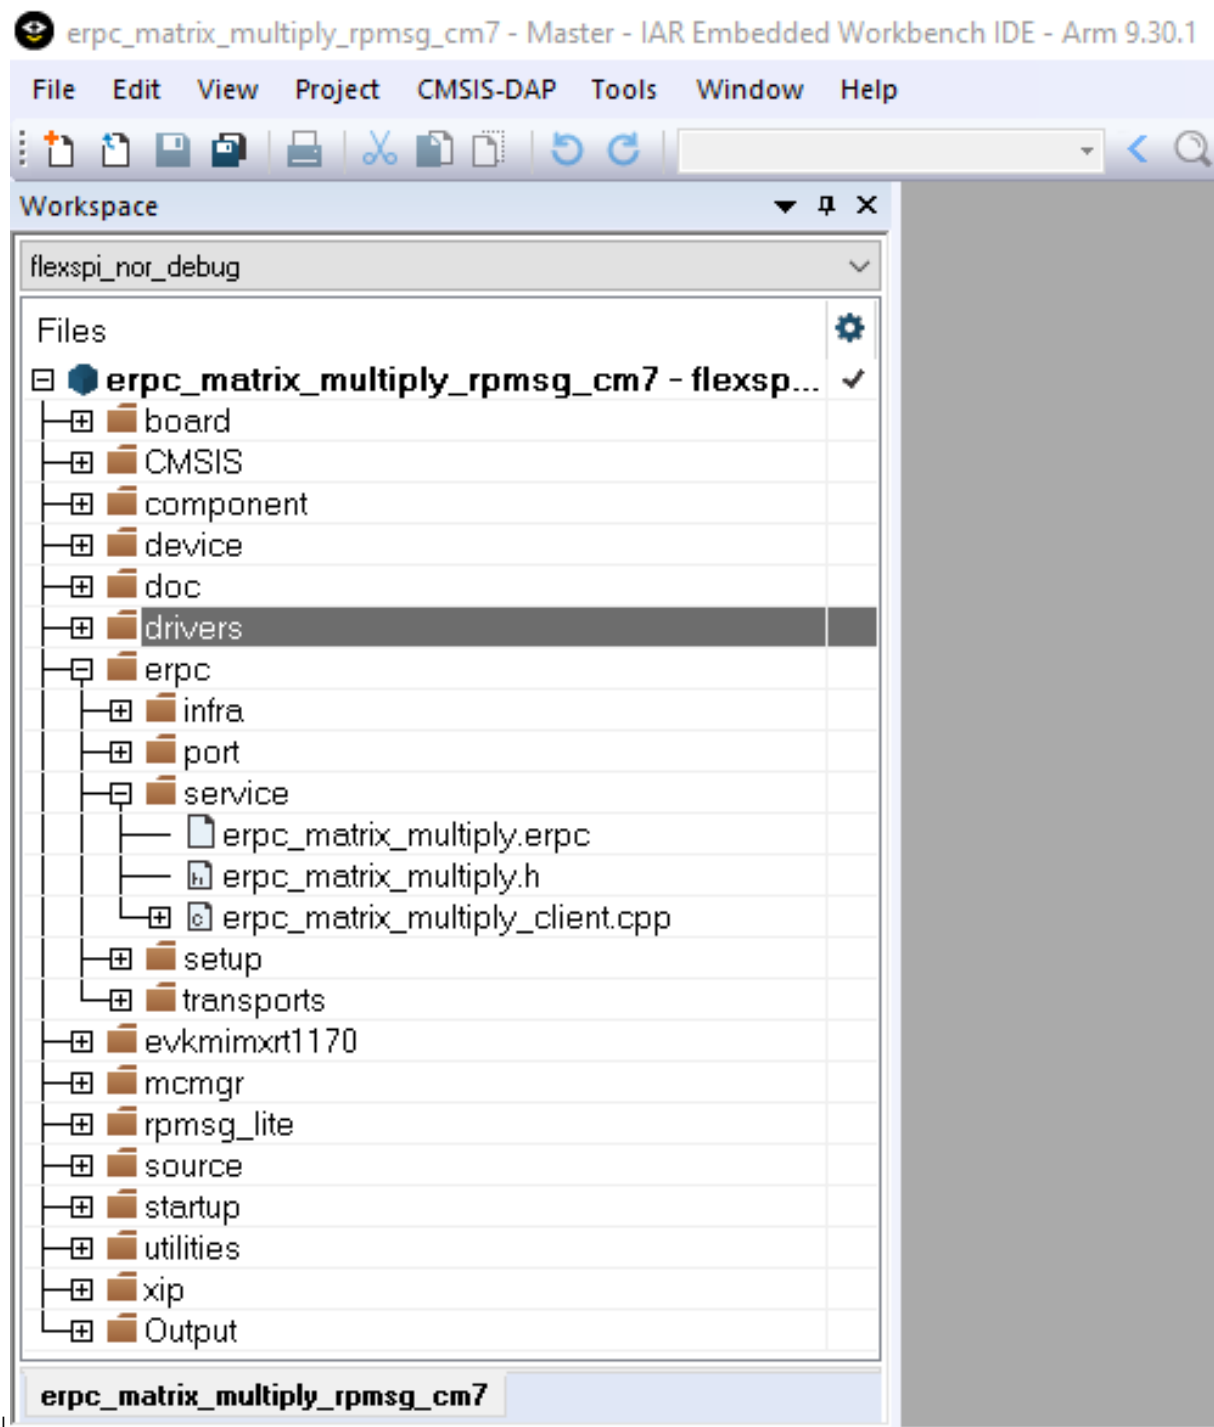

Parent topic: Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

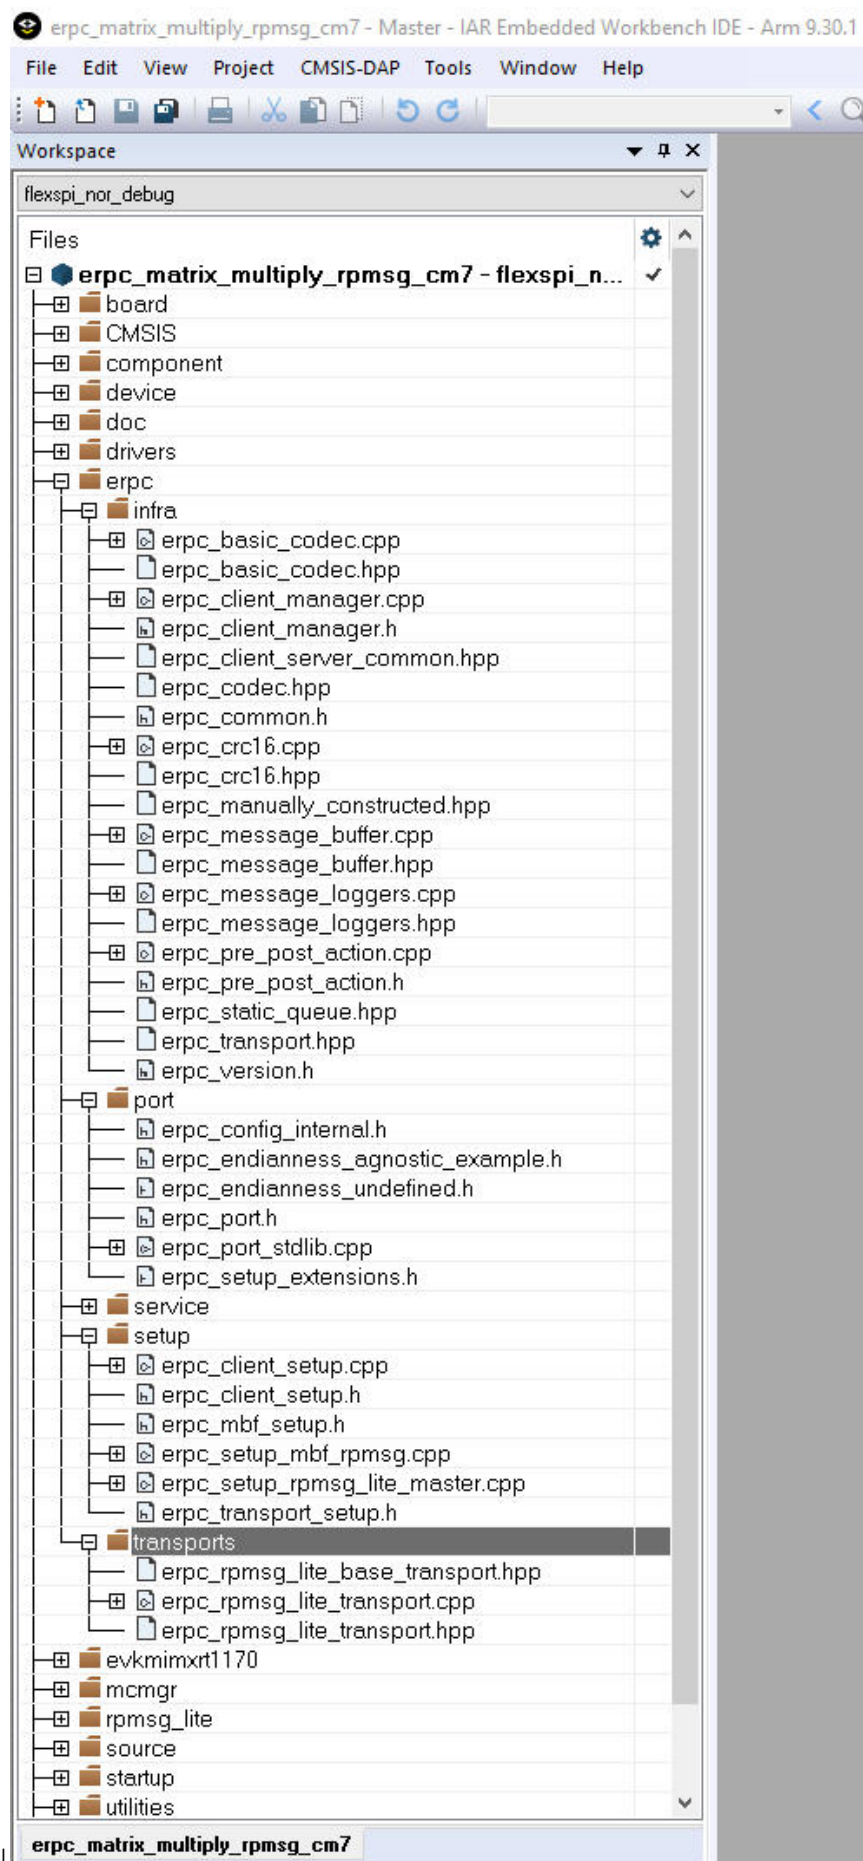

|


Parent topic:Multicore client application

Client multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/

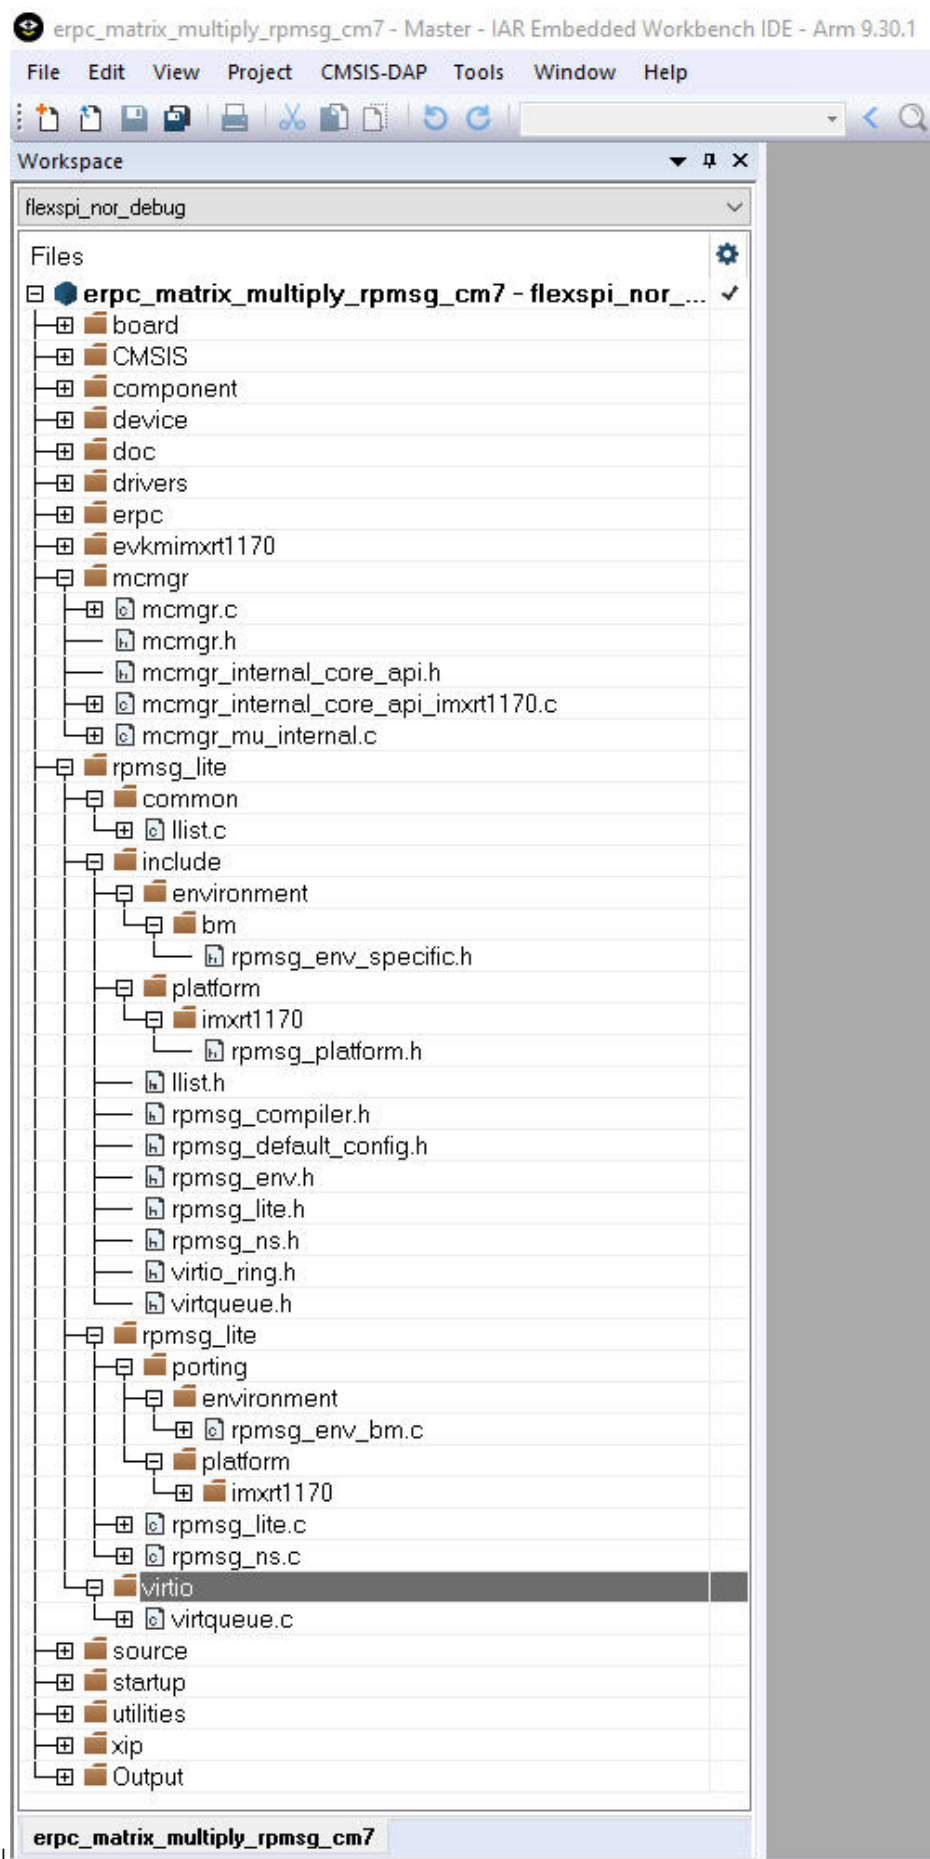

Parent topic: Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

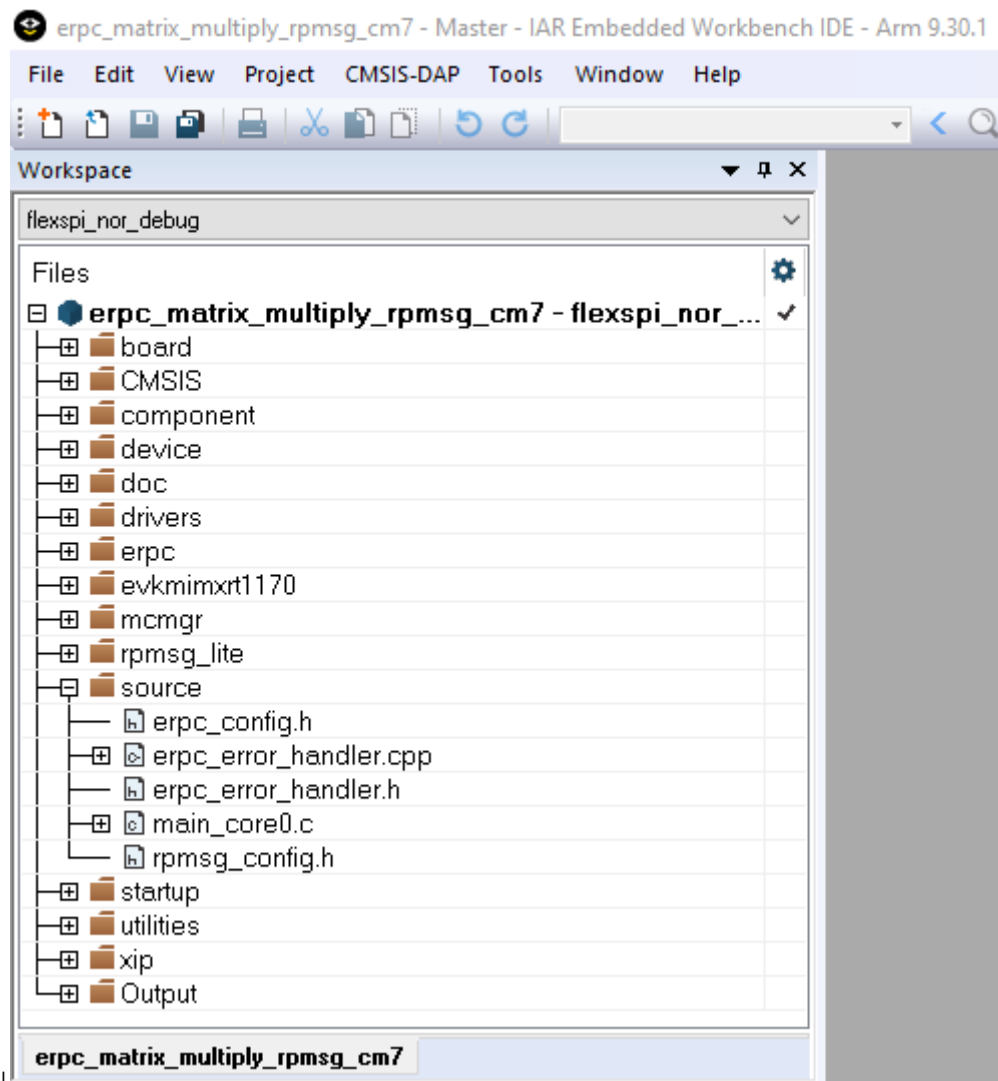

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

Multiprocessor server application The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMMsg-Lite). The RPMMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
    ...
}
int main()
{
    ...
    /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
    ↪operations */
    erpc_transport_t transport;
    transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_dynamic_init();
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server)
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Parent topic:Multiprocessor server application

Multiprocessor client application The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
<eRPC base directory>/erpc_c/transports/	erpc_(d)spi_master_transport.hpp
<eRPC base directory>/erpc_c/transports/	erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
<eRPC base directory>/erpc_c/transports/	erpc_uart_cmsis_transport.hpp
<eRPC base directory>/erpc_c/transports/	erpc_uart_cmsis_transport.cpp

Client user code The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Parent topic:Multiprocessor client application

Parent topic:Multiprocessor server application

Parent topic:[Create an eRPC application](#)

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK_install_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

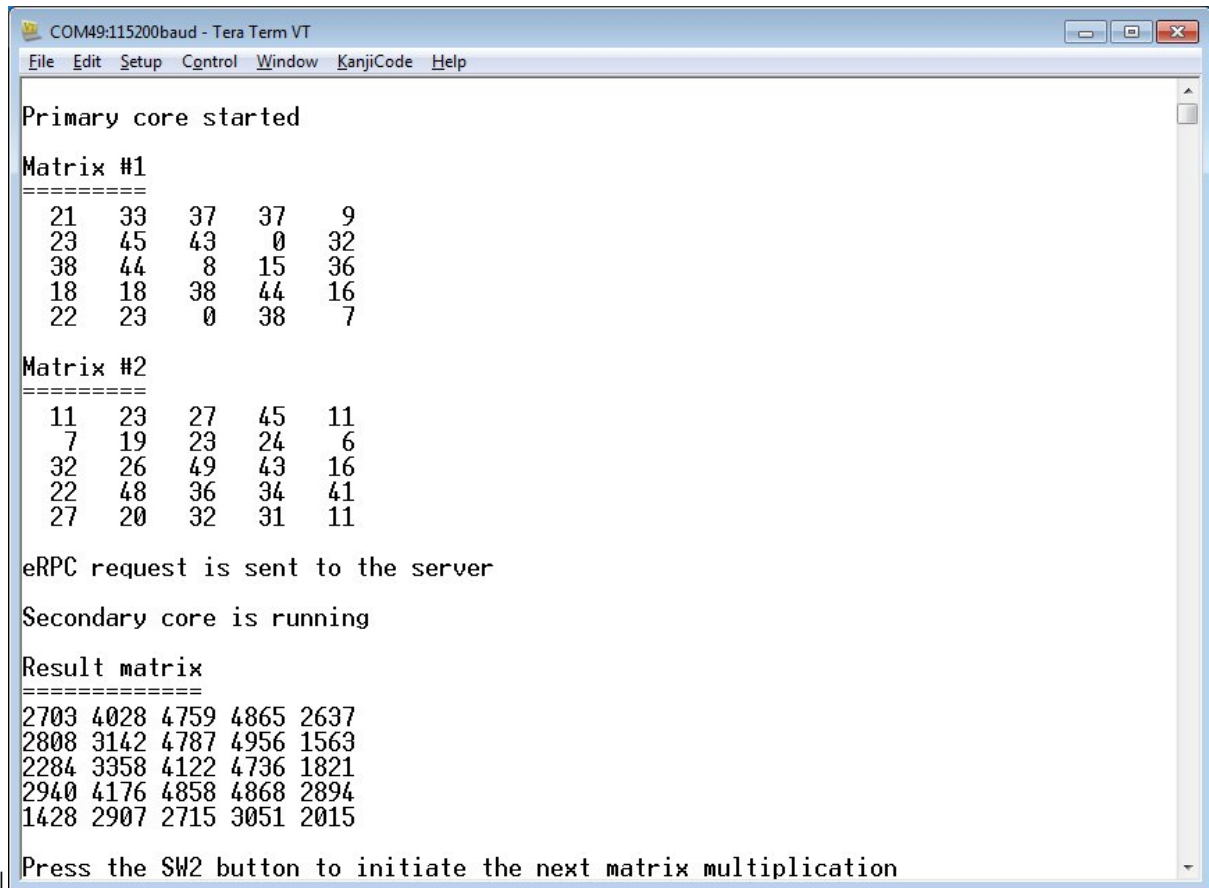

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21  33  37  37   9
 23  45  43   0  32
 38  44   8  15  36
 18  18  38  44  16
 22  23   0  38   7

Matrix #2
=====
 11  23  27  45  11
  7  19  23  24   6
 32  26  49  43  16
 22  48  36  34  41
 27  20  32  31  11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

Other uses for an eRPC implementation The eRPC implementation is generic, and its use is not limited to just embedded applications. When creating an eRPC application outside the embedded world, the same principles apply. For example, this manual can be used to create an eRPC application for a PC running the Linux operating system. Based on the used type of transport medium, existing transport layers can be used, or new transport layers can be implemented.

For more information and erpc updates see the github.com/EmbeddedRPC.

Note about the source code in the document Example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2024 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Changelog eRPC All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Added

Fixed

- Python code of the eRPC infrastructure was updated to match the proper python code style, add type annotations and improve readability.

1.14.0

Added

- Added Cmake/Kconfig support.
- Made java code jdk11 compliant, GitHub PR #432.
- Added imxrt1186 support into mu transport layer.
- erpcgen: Added assert for listType before usage, GitHub PR #406.

Fixed

- eRPC: Sources reformatted.
- erpc: Fixed typo in semaphore get (mutex -> semaphore), and write it can fail in case of timeout, GitHub PR #446.
- erpc: Free the arbitrated client token from client manager, GitHub PR #444.

- erpc: Fixed Makefile, install the erpc_simple_server header, GitHub PR #447.
- erpc_python: Fixed possible AttributeError and OSError on calling TCPTransport.close(), GitHub PR #438.
- Examples and tests consolidated.

1.13.0

Added

- erpc: Add BSD-3 license to endianness agnostic files, GitHub PR #417.
- eRPC: Add new Zephyr-related transports (zephyr_uart, zephyr_mbox).
- eRPC: Add new Zephyr-related examples.

Fixed

- eRPC,erpcgen: Fixing/improving markdown files, GitHub PR #395.
- eRPC: Fix Python client TCPTransports not being able to close, GitHub PR #390.
- eRPC,erpcgen: Align switch brackets, GitHub PR #396.
- erpc: Fix zephyr uart transport, GitHub PR #410.
- erpc: UART ZEPHYR Transport stop to work after a few transactions when using USB-CDC resolved, GitHub PR #420.

Removed

- eRPC,erpcgen: Remove cstbool library, GitHub PR #403.

1.12.0

Added

- eRPC: Add dynamic/static option for transport init, GitHub PR #361.
- eRPC,erpcgen: Winsock2 support, GitHub PR #365.
- eRPC,erpcgen: Feature/support multiple clients, GitHub PR #271.
- eRPC,erpcgen: Feature/buffer head - Framed transport header data stored in Message-Buffer, GitHub PR #378.
- eRPC,erpcgen: Add experimental Java support.

Fixed

- eRPC: Fix receive error value for spidev, GitHub PR #363.
- eRPC: UartTransport::init adaptation to changed driver.
- eRPC: Fix typo in assert, GitHub PR #371.
- eRPC,erpcgen: Move enums to enum classes, GitHub PR #379.
- eRPC: Fixed rpmsg tty transport to work with serial transport, GitHub PR #373.

1.11.0

Fixed

- eRPC: Makefiles update, GitHub PR #301.
- eRPC: Resolving warnings in Python, GitHub PR #325.
- eRPC: Python3.8 is not ready for usage of typing.Any type, GitHub PR #325.
- eRPC: Improved codec function to use reference instead of address, GitHub PR #324.
- eRPC: Fix NULL check for pending client creation, GitHub PR #341.
- eRPC: Replace sprintf with snprintf, GitHub PR #343.
- eRPC: Use MU_SendMsg blocking call in MU transport.
- eRPC: New LPSPI and LPI2C transport layers.
- eRPC: Freeing static objects, GitHub PR #353.
- eRPC: Fixed casting in deinit functions, GitHub PR #354.
- eRPC: Align LIBUSB_SIO.GetNumPorts API use with libusb_sio python module v. 2.1.11.
- erpcgen: Renamed temp variable to more generic one, GitHub PR #321.
- erpcgen: Add check that string read is not more than max length, GitHub PR #328.
- erpcgen: Move to g++ in pytest, GitHub PR #335.
- erpcgen: Use build=release for make, GitHub PR #334.
- erpcgen: Removed boost dependency, GitHub PR #346.
- erpcgen: Mingw support, GitHub PR #344.
- erpcgen: VS build update, GitHub PR #347.
- erpcgen: Modified name for common types macro scope, GitHub PR #337.
- erpcgen: Fixed memcpy for template, GitHub PR #352.
- eRPC,erpcgen: Change default build target to release + adding artefacts, GitHub PR #334.
- eRPC,erpcgen: Remove redundant includes, GitHub PR #338.
- eRPC,erpcgen: Many minor code improvements, GitHub PR #323.

1.10.0

Fixed

- eRPC: MU transport layer switched to blocking MU_SendMsg() API use.

1.10.0

Added

- eRPC: Add TCP_NODELAY option to python, GitHub PR #298.

Fixed

- eRPC: MUPort adaptation to new supported SoCs.
- eRPC: Simplifying CI with installing dependencies using shell script, GitHub PR #267.
- eRPC: Using event for waiting for sock connection in TCP python server, formatting python code, C specific includes, GitHub PR #269.
- eRPC: Endianness agnostic update, GitHub PR #276.
- eRPC: Assertion added for functions which are returning status on freeing memory, GitHub PR #277.
- eRPC: Fixed closing arbitrator server in unit tests, GitHub PR #293.
- eRPC: Makefile updated to reflect the correct header names, GitHub PR #295.
- eRPC: Compare value length to used length() in reading data from message buffer, GitHub PR #297.
- eRPC: Replace EXPECT_TRUE with EXPECT_EQ in unit tests, GitHub PR #318.
- eRPC: Adapt rpmsg_lite based transports to changed rpmsg_lite_wait_for_link_up() API parameters.
- eRPC, erpcgen: Better distinguish which file can and cannot be linked by C linker, GitHub PR #266.
- eRPC, erpcgen: Stop checking if pointer is NULL before sending it to the erpc_free function, GitHub PR #275.
- eRPC, erpcgen: Changed api to count with more interfaces, GitHub PR #304.
- erpcgen: Check before reading from heap the buffer boundaries, GitHub PR #287.
- erpcgen: Several fixes for tests and CI, GitHub PR #289.
- erpcgen: Refactoring erpcgen code, GitHub PR #302.
- erpcgen: Fixed assigning const value to enum, GitHub PR #309.
- erpcgen: Enable runTesttest_enumErrorCode_allDirection, serialize enums as int32 instead of uint32.

1.9.1

Fixed

- eRPC: Construct the USB CDC transport, rather than a client, GitHub PR #220.
- eRPC: Fix premature import of package, causing failure when attempting installation of Python library in a clean environment, GitHub PR #38, #226.
- eRPC: Improve python detection in make, GitHub PR #225.
- eRPC: Fix several warnings with deprecated call in pytest, GitHub PR #227.
- eRPC: Fix freeing union members when only default need be freed, GitHub PR #228.
- eRPC: Fix making test under Linux, GitHub PR #229.
- eRPC: Assert costumizing, GitHub PR #148.
- eRPC: Fix corrupt clientList bug in TransportArbitrator, GitHub PR #199.
- eRPC: Fix build issue when invoking g++ with -Wno-error=free-nonheap-object, GitHub PR #233.
- eRPC: Fix inout cases, GitHub PR #237.

- eRPC: Remove ERPC_PRE_POST_ACTION dependency on return type, GitHub PR #238.
- eRPC: Adding NULL to ptr when codec function failed, fixing memcpy when fail is present during deserialization, GitHub PR #253.
- eRPC: MessageBuffer usage improvement, GitHub PR #258.
- eRPC: Get rid of serial and enum34 dependency (enum34 is in python3 since 3.4 (from 2014)), GitHub PR #247.
- eRPC: Several MISRA violations addressed.
- eRPC: Fix timeout for Freertos semaphore, GitHub PR #251.
- eRPC: Use of rpmsg_lite_wait_for_link_up() in rpmsg_lite based transports, GitHub PR #223.
- eRPC: Fix codec nullptr dereferencing, GitHub PR #264.
- erpcgen: Fix two syntax errors in erpcgen Python output related to non-encapsulated unions, improved test for union, GitHub PR #206, #224.
- erpcgen: Fix serialization of list/binary types, GitHub PR #240.
- erpcgen: Fix empty list parsing, GitHub PR #72.
- erpcgen: Fix templates for malloc errors, GitHub PR #110.
- erpcgen: Get rid of encapsulated union declarations in global scale, improve enum usage in unions, GitHub PR #249, #250.
- erpcgen: Fix compile error:UniqueIdChecker.cpp:156:104:'sort' was not declared, GitHub PR #265.

1.9.0

Added

- eRPC: Allow used LIBUSBSIO device index being specified from the Python command line argument.

Fixed

- eRPC: Improving template usage, GitHub PR #153.
- eRPC: run_clang_format.py cleanup, GitHub PR #177.
- eRPC: Build TCP transport setup code into liberpc, GitHub PR #179.
- eRPC: Fix multiple definitions of g_client error, GitHub PR #180.
- eRPC: Fix memset past end of buffer in erpc_setup_mbf_static.cpp, GitHub PR #184.
- eRPC: Fix deprecated error with newer pytest version, GitHub PR #203.
- eRPC, erpcgen: Static allocation support and usage of rpmsg static FreeRTOSs related API, GitHub PR #168, #169.
- erpcgen: Remove redundant module imports in erpcgen, GitHub PR #196.

1.8.1

Added

- eRPC: New i2c_slave_transport transport introduced.

Fixed

- eRPC: Fix misra erpc c, GitHub PR #158.
- eRPC: Allow conditional compilation of message_loggers and pre_post_action.
- eRPC: (D)SPI slave transports updated to avoid busy loops in rtos environments.
- erpcgen: Re-implement EnumMember::hasValue(), GitHub PR #159.
- erpcgen: Fixing several misra issues in shim code, erpcgen and unit tests updated, GitHub PR #156.
- erpcgen: Fix bison file, GitHub PR #156.

1.8.0

Added

- eRPC: Support win32 thread, GitHub PR #108.
- eRPC: Add mbed support for malloc() and free(), GitHub PR #92.
- eRPC: Introduced pre and post callbacks for eRPC call, GitHub PR #131.
- eRPC: Introduced new USB CDC transport.
- eRPC: Introduced new Linux spidev-based transport.
- eRPC: Added formatting extension for VSC, GitHub PR #134.
- erpcgen: Introduce ustring type for unsigned char and force cast to char*, GitHub PR #125.

Fixed

- eRPC: Update makefile.
- eRPC: Fixed warnings and error with using MessageLoggers, GitHub PR #127.
- eRPC: Extend error msg for python server service handle function, GitHub PR #132.
- eRPC: Update CMSIS UART transport layer to avoid busy loops in rtos environments, introduce semaphores.
- eRPC: SPI transport update to allow usage without handshaking GPIO.
- eRPC: Native _WIN32 erpc serial transport and threading.
- eRPC: Arbitrator deadlock fix, TCP transport updated, TCP setup functions introduced, GitHub PR #121.
- eRPC: Update of matrix_multiply.py example: Add -serial and -baud argument, GitHub PR #137.
- eRPC: Update of .clang-format, GitHub PR #140.
- eRPC: Update of erpc_framed_transport.cpp: return error if received message has zero length, GitHub PR #141.
- eRPC, erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136, #139.
- eRPC, erpcgen: Core re-formatted using Clang version 10.
- erpcgen: Enable deallocation in server shim code when callback/function pointer used as out parameter in IDL.
- erpcgen: Removed '\$' character from generated symbol name in '_\$union' suffix, GitHub PR #103.

- erpcgen: Resolved mismatch between C++ and Python for callback index type, GitHub PR #111.
- erpcgen: Python generator improvements, GitHub PR #100, #118.
- erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136.

1.7.4

Added

- eRPC: Support MU transport unit testing.
- eRPC: Adding mbed os support.

Fixed

- eRPC: Unit test code updated to handle service add and remove operations.
- eRPC: Several MISRA issues in rpmsg-based transports addressed.
- eRPC: Fixed Linux/TCP acceptance tests in release target.
- eRPC: Minor documentation updates, code formatting.
- erpcgen: Whitespace removed from C common header template.

1.7.3

Fixed

- eRPC: Improved the test_callbacks logic to be more understandable and to allow requested callback execution on the server side.
- eRPC: TransportArbitrator::prepareClientReceive modified to avoid incorrect return value type.
- eRPC: The ClientManager and the ArbitratedClientManager updated to avoid performing client requests when the previous serialization phase fails.
- erpcgen: Generate the shim code for destroy of statically allocated services.

1.7.2

Added

- eRPC: Add missing doxygen comments for transports.

Fixed

- eRPC: Improved support of const types.
- eRPC: Fixed Mac build.
- eRPC: Fixed serializing python list.
- eRPC: Documentation update.

1.7.1

Fixed

- eRPC: Fixed semaphore in static message buffer factory.
- erpcgen: Fixed MU received error flag.
- erpcgen: Fixed tcp transport.

1.7.0

Added

- eRPC: List names are based on their types. Names are more deterministic.
- eRPC: Service objects are as a default created as global static objects.
- eRPC: Added missing doxygen comments.
- eRPC: Added support for 64bit numbers.
- eRPC: Added support of program language specific annotations.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Generating crc value is optional.
- eRPC: Fixed CMSIS Uart driver. Removed dependency on KSDK.
- eRPC: Forbid users use reserved words.
- eRPC: Removed outByref for function parameters.
- eRPC: Optimized code style of callback functions.

1.6.0

Added

- eRPC: Added @nullable support for scalar types.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Improved eRPC nested calls.
- eRPC: Improved eRPC list length variable serialization.

1.5.0

Added

- eRPC: Added support for unions type non-wrapped by structure.
- eRPC: Added callbacks support.
- eRPC: Added support @external annotation for functions.
- eRPC: Added support @name annotation.
- eRPC: Added Messaging Unit transport layer.
- eRPC: Added RPMSG Lite RTOS TTY transport layer.
- eRPC: Added version verification and IDL version verification between eRPC code and eRPC generated shim code.
- eRPC: Added support of shared memory pointer.
- eRPC: Added annotation to forbid generating const keyword for function parameters.
- eRPC: Added python matrix multiply example.
- eRPC: Added nested call support.
- eRPC: Added struct member “byref” option support.
- eRPC: Added support of forward declarations of structures
- eRPC: Added Python RPMsg Multiendpoint kernel module support
- eRPC: Added eRPC sniffer tool

1.4.0

Added

- eRPC: New RPMsg-Lite Zero Copy (RPMsgZC) transport layer.

Fixed

- eRPC: win_flex_bison.zip for windows updated.
- eRPC: Use one codec (instead of inCodec outCodec).

[1.3.0]

Added

- eRPC: New annotation types introduced (@length, @max_length, ...).
- eRPC: Support for running both erpc client and erpc server on one side.
- eRPC: New transport layers for (LP)UART, (D)SPI.
- eRPC: Error handling support.

[1.2.0]

Added

- eRPC source directory organization changed.
- Many eRPC improvements.

[1.1.0]

Added

- Multicore SDK 1.1.0 ported to KSDK 2.0.0.

[1.0.0]

Added

- Initial Release

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK

Overview The purpose of this document is to describes the [FreeRTOS kernel repo](#) integration into the [NXP MCUXpresso Software Development Kit: mcuxsdk](#). MCUXpresso SDK provides a comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on MCUs from NXP. This project involves the FreeRTOS kernel repo fork with:

- cmake and Kconfig support to allow the configuration and build in MCUXpresso SDK ecosystem
- FreeRTOS OS additions, such as [FreeRTOS driver wrappers](#), RTOS ready FatFs file system, and the implementation of FreeRTOS tickless mode

The history of changes in FreeRTOS kernel repo for MCUXpresso SDK are summarized in [CHANGELOG_mcuxsdk.md](#) file.


The MCUXpresso SDK framework also contains a set of FreeRTOS examples which show basic FreeRTOS OS features. This makes it easy to start a new FreeRTOS project or begin experimenting with FreeRTOS OS. Selected drivers and middleware are RTOS ready with related FreeRTOS adaptation layer.

FreeRTOS example applications The FreeRTOS examples are written to demonstrate basic FreeRTOS features and the interaction between peripheral drivers and the RTOS.

List of examples The list of freertos_examples, their description and availability for individual supported MCUXpresso SDK development boards can be obtained here: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/examples/freertos_examples/index.html

Location of examples The FreeRTOS examples are located in [mcuxsdk-examples](#) repository, see the `freertos_examples` folder.

Once using MCUXpresso SDK zip packages created via the [MCUXpresso SDK Builder](#) the FreeRTOS kernel library and associated `freertos_examples` are added into final zip package once FreeRTOS components is selected on the Developer Environment Settings page:

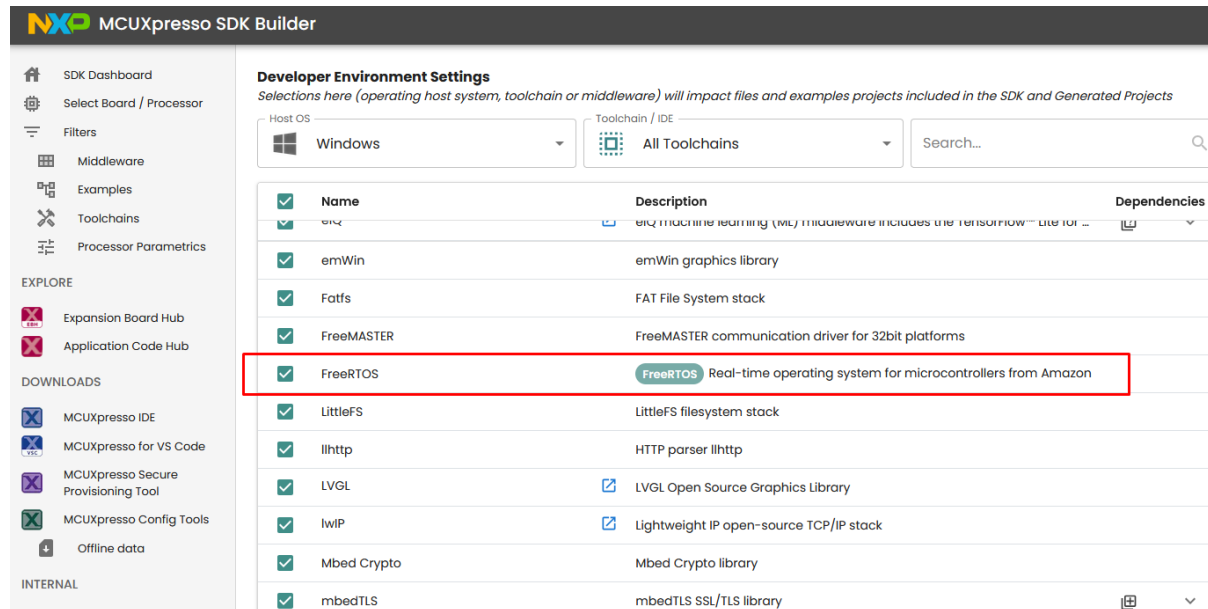

The FreeRTOS examples in MCUXpresso SDK zip packages are located in `<MCUXpressoSDK_install_dir>/boards/<board_name>/freertos_examples/` subfolders.

Building a FreeRTOS example application For information how to use the cmake and Kconfig based build and configuration system and how to build `freertos_examples` visit: [MCUXpresso SDK documentation for Build And Configuration MCUXpresso SDK Getting Start Guide](#)

Tip: To list all FreeRTOS example projects and targets that can be built via the west build command, use this `west list_project` command in `mcuxsdk` workspace:

```
west list_project -p examples/freertos_examples
```

FreeRTOS aware debugger plugin NXP provides FreeRTOS task aware debugger for GDB. The plugin is compatible with Eclipse-based (MCUXpressoIDE) and is available after the installation.

The screenshot shows the 'Task List (FreeRTOS)' window. It displays a table with the following data:

TCB#	Task Name	Task Handle	Task State	Priority	Stack Usage	Event Object	Runtime
1	task_one	0x1fffecc8	Blocked	1 (1)	0 B / 880 B	MyCountingSemaphore (Rx)	0x0 (0.0%)
2	task_two	0x1ffff130	Blocked	2 (2)	0 B / 888 B	MyCountingSemaphore (Rx)	0x1 (0.1%)
3	IDLE	0x1ffff330	Running	0 (0)	0 B / 296 B		0x3e5 (99.6%)
4	Tmr Svc	0x1ffff6b8	Blocked	17 (17)	28 B / 672 B	TmrQ (Rx)	0x3 (0.3%)

FreeRTOS kernel for MCUXpresso SDK ChangeLog

Changelog FreeRTOS kernel for MCUXpresso SDK All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[Unreleased]

Added

- Kconfig added `CONFIG_FREERTOS_USE_CUSTOM_CONFIG_FRAGMENT` config to optionally include custom FreeRTOSConfig fragment include file `FreeRTOSConfig_frag.h`. File must be provided by application.
- Added missing Kconfig option for `configUSE_PICOLIBC_TLS`.
- Add correct header files to build when `configUSE_NEWLIB_REENTRANT` and `configUSE_PICOLIBC_TLS` is selected in config.

[11.1.0_rev0]

- update amazon freertos version

[11.0.1_rev0]

- update amazon freertos version

[10.5.1_rev0]

- update amazon freertos version

[10.4.3_rev1]

- Apply CM33 security fix from 10.4.3-LTS-Patch-2. See `rtos/freertos/freertos_kernel/History.txt`
- Apply CM33 security fix from 10.4.3-LTS-Patch-1. See `rtos/freertos/freertos_kernel/History.txt`

[10.4.3_rev0]

- update amazon freertos version.

[10.4.3_rev0]

- update amazon freertos version.

[9.0.0_rev3]

- New features:
 - Tickless idle mode support for Cortex-A7. Add `fsl_tickless_epit.c` and `fsl_tickless_generic.h` in `portable/IAR/ARM_CA9` folder.
 - Enabled float context saving in IAR for Cortex-A7. Added `configUSE_TASK_FPU_SUPPORT` macros. Modified `port.c` and `portmacro.h` in `portable/IAR/ARM_CA9` folder.
- Other changes:
 - Transformed ARM_CM core specific tickless low power support into generic form under `freertos/Source/portable/low_power_tickless/`.

[9.0.0_rev2]

- New features:
 - Enabled MCUXpresso thread aware debugging. Add `freertos_tasks_c_additions.h` and `configINCLUDE_FREERTOS_TASK_C_ADDITIONS_H` and `configFREERTOS_MEMORY_SCHEME` macros.

[9.0.0_rev1]

- New features:
 - Enabled `-flto` optimization in GCC by adding `attribute((used))` for `vTaskSwitchContext`.
 - Enabled KDS Task Aware Debugger. Apply FreeRTOS patch to enable `configRECORD_STACK_HIGH_ADDRESS` macro. Modified files are `task.c` and `FreeRTOS.h`.

[9.0.0_rev0]

- New features:
 - Example `freertos_sem_static`.
 - Static allocation support RTOS driver wrappers.
- Other changes:
 - Tickless idle rework. Support for different timers is in separated files (`fsl_tickless_systick.c`, `fsl_tickless_lptmr.c`).
 - Removed configuration option `configSYSTICK_USE_LOW_POWER_TIMER`. Low power timer is now selected by linking of appropriate file `fsl_tickless_lptmr.c`.
 - Removed `configOVERRIDE_DEFAULT_TICK_CONFIGURATION` in RVDS port. Use of `attribute((weak))` is the preferred solution. Not same as `_weak`!

[8.2.3]

- New features:
 - Tickless idle mode support.
 - Added template application for Kinetis Expert (KEx) tool (`template_application`).
- Other changes:
 - Folder structure reduction. Keep only Kinetis related parts.

FreeRTOS kernel Readme

MCUXpresso SDK: FreeRTOS kernel This repository is a fork of FreeRTOS kernel (<https://github.com/FreeRTOS/FreeRTOS-Kernel>)(11.1.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable FreeRTOS kernel repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

For more information about the FreeRTOS kernel repo adoption see [README_mcuxsdk.md: FreeRTOS kernel for MCUXpresso SDK](#) document.



Getting started This repository contains FreeRTOS kernel source/header files and kernel ports only. This repository is referenced as a submodule in [FreeRTOS/FreeRTOS](#) repository, which contains pre-configured demo application projects under [FreeRTOS/Demo](#) directory.

The easiest way to use FreeRTOS is to start with one of the pre-configured demo application projects. That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS kernel feature information refer to the [Developer Documentation](#), and [API Reference](#).

Also for contributing and creating a Pull Request please refer to *the instructions here*.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#).

To consume FreeRTOS-Kernel

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_kernel
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Kernel.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
)
```

In case you prefer to add it as a git submodule, do:

```
git submodule add https://github.com/FreeRTOS/FreeRTOS-Kernel.git <path of the submodule>
git submodule update --init
```

- Add a freertos_config library (typically an INTERFACE library) The following assumes the directory structure:

– include/FreeRTOSConfig.h

```
add_library(freertos_config INTERFACE)

target_include_directories(freertos_config SYSTEM
INTERFACE
  include
)

target_compile_definitions(freertos_config
INTERFACE
  projCOVERAGE_TEST=0
)
```

In case you installed FreeRTOS-Kernel as a submodule, you will have to add it as a subdirectory:

```
add_subdirectory(${FREERTOS_PATH})
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
set( FREERTOS_HEAP "4" CACHE STRING "" FORCE)
# Select the native compile PORT
set( FREERTOS_PORT "GCC_POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  set(FREERTOS_PORT "GCC_ARM_CA9" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_kernel)
```

- In case of cross compilation, you should also add the following to `freertos_config`:

```
target_compile_definitions(freertos_config INTERFACE ${definitions})
target_compile_options(freertos_config INTERFACE ${options})
```

Consuming stand-alone - Cloning this repository

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Kernel.git
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Kernel.git
```

Repository structure

- The root of this repository contains the three files that are common to every port - `list.c`, `queue.c` and `tasks.c`. The kernel is contained within these three files. `croutine.c` implements the optional co-routine functionality - which is normally only used on very memory limited systems.
- The `./portable` directory contains the files that are specific to a particular microcontroller and/or compiler. See the readme file in the `./portable` directory for more information.
- The `./include` directory contains the real time kernel header files.
- The `./template_configuration` directory contains a sample `FreeRTOSConfig.h` to help jumpstart a new project. See the *FreeRTOSConfig.h* file for instructions.

Code Formatting FreeRTOS files are formatted using the “`uncrustify`” tool. The configuration file used by `uncrustify` can be found in the [FreeRTOS/CI-CD-GitHub-Actions's uncrustify.cfg](#) file.

Line Endings File checked into the FreeRTOS-Kernel repository use unix-style LF line endings for the best compatibility with git.

For optimal compatibility with Microsoft Windows tools, it is best to enable the git `autocrlf` feature. You can enable this setting for the current repository using the following command:

```
git config core.autocrlf true
```

Git History Optimizations Some commits in this repository perform large refactors which touch many lines and lead to unwanted behavior when using the `git blame` command. You can configure git to ignore the list of large refactor commits in this repository with the following command:

```
git config blame.ignoreRevsFile .git-blame-ignore-revs
```

Spelling and Formatting We recommend using [Visual Studio Code](#), commonly referred to as VSCode, when working on the FreeRTOS-Kernel. The FreeRTOS-Kernel also uses [cSpell](#) as part of its spelling check. The config file for which can be found at [cspell.config.yaml](#). There is additionally a [cSpell plugin for VSCode](#) that can be used as well. `.cSpellWords.txt` contains words that are not traditionally found in an English dictionary. It is used by the spellchecker to verify the various jargon, variable names, and other odd words used in the FreeRTOS code base are correct. If your pull request fails to pass the spelling and you believe this is a mistake, then add the word to `.cSpellWords.txt`. When adding a word please then sort the list, which can be done by running the bash command: `sort -u .cSpellWords.txt -o .cSpellWords.txt`. Note that only the FreeRTOS-Kernel Source Files, *include*, *portable/MemMang*, and *portable/Common* files are checked for proper spelling, and formatting at this time.

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

MCUXpresso SDK: backoffAlgorithm Library This repository is a fork of backoffAlgorithm library (<https://github.com/FreeRTOS/backoffalgorithm>)(1.3.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable backoffAlgorithm repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

backoffAlgorithm Library This repository contains the backoffAlgorithm library, a utility library to calculate backoff period using an exponential backoff with jitter algorithm for retrying network operations (like failed network connection with server). This library uses the “Full Jitter” strategy for the exponential backoff with jitter algorithm. More information about the algorithm can be seen in the [Exponential Backoff and Jitter](#) AWS blog.

The backoffAlgorithm library is distributed under the *MIT Open Source License*.

Exponential backoff with jitter is typically used when retrying a failed network connection or operation request with the server. An exponential backoff with jitter helps to mitigate failed network operations with servers, that are caused due to network congestion or high request load on the server, by spreading out retry requests across multiple devices attempting network operations. Besides, in an environment with poor connectivity, a client can get disconnected at any time. A backoff strategy helps the client to conserve battery by not repeatedly attempting reconnections when they are unlikely to succeed.

See memory requirements for this library [here](#).

backoffAlgorithm v1.3.0 source code is part of the FreeRTOS 202210.00 LTS release.

backoffAlgorithm v1.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example The example below shows how to use the backoffAlgorithm library on a POSIX platform to retry a DNS resolution query for amazon.com.

```
#include "backoff_algorithm.h"
#include <stdlib.h>
#include <string.h>
#include <netdb.h>
#include <unistd.h>
#include <time.h>

/* The maximum number of retries for the example code. */
#define RETRY_MAX_ATTEMPTS      ( 5U )

/* The maximum back-off delay (in milliseconds) for between retries in the example. */
#define RETRY_MAX_BACKOFF_DELAY_MS ( 5000U )

/* The base back-off delay (in milliseconds) for retry configuration in the example. */
#define RETRY_BACKOFF_BASE_MS   ( 500U )

int main()
{
    /* Variables used in this example. */
    BackoffAlgorithmStatus_t retryStatus = BackoffAlgorithmSuccess;
    BackoffAlgorithmContext_t retryParams;
    char serverAddress[] = "amazon.com";
    uint16_t nextRetryBackoff = 0;

    int32_t dnsStatus = -1;
    struct addrinfo hints;
    struct addrinfo ** pListHead = NULL;
    struct timespec tp;

    /* Add hints to retrieve only TCP sockets in getaddrinfo. */
    ( void ) memset( &hints, 0, sizeof( hints ) );

    /* Address family of either IPv4 or IPv6. */
    hints.ai_family = AF_UNSPEC;
    /* TCP Socket. */
    hints.ai_socktype = ( int32_t ) SOCK_STREAM;
    hints.ai_protocol = IPPROTO_TCP;

    /* Initialize reconnect attempts and interval. */
    BackoffAlgorithm_InitializeParams( &retryParams,
                                      RETRY_BACKOFF_BASE_MS,
                                      RETRY_MAX_BACKOFF_DELAY_MS,
                                      RETRY_MAX_ATTEMPTS );

    /* Seed the pseudo random number generator used in this example (with call to
     * rand() function provided by ISO C standard library) for use in backoff period
     * calculation when retrying failed DNS resolution. */

    /* Get current time to seed pseudo random number generator. */
    ( void ) clock_gettime( CLOCK_REALTIME, &tp );
    /* Seed pseudo random number generator with seconds. */
    srand( tp.tv_sec );

    do
    {
        /* Perform a DNS lookup on the given host name. */
        dnsStatus = getaddrinfo( serverAddress, NULL, &hints, pListHead );
    }
```

(continues on next page)

(continued from previous page)

```

/* Retry if DNS resolution query failed. */
if( dnsStatus != 0 )
{
    /* Generate a random number and get back-off value (in milliseconds) for the next retry.
    * Note: It is recommended to use a random number generator that is seeded with
    * device-specific entropy source so that backoff calculation across devices is different
    * and possibility of network collision between devices attempting retries can be avoided.
    *
    * For the simplicity of this code example, the pseudo random number generator, rand()
    * function is used. */
    retryStatus = BackoffAlgorithm_GetNextBackoff( &retryParams, rand(), &nextRetryBackoff );

    /* Wait for the calculated backoff period before the next retry attempt of querying DNS.
    * As usleep() takes nanoseconds as the parameter, we multiply the backoff period by 1000. */
    ( void ) usleep( nextRetryBackoff * 1000U );
}
} while( ( dnsStatus != 0 ) && ( retryStatus != BackoffAlgorithmRetriesExhausted ) );

return dnsStatus;
}

```

Building the library A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses a header file introduced in ISO C99, *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdint.readme*, which can be renamed to *stdint.h* to build the backoffAlgorithm library.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/backoff_algorithm.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/backoff_algorithm.c
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C89 or later compiler like *gcc*
 - CMake 3.13.0 or later
- For running the coverage target, *gcov* is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

MCUXpresso SDK: coreHTTP Client Library

This repository is a fork of coreHTTP Client library (<https://github.com/FreeRTOS/corehttp>)(3.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreHTTP Client repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreHTTP Client Library

This repository contains a C language HTTP client library designed for embedded platforms. It has no dependencies on any additional libraries other than the standard C library, [llhttp](#), and a customer-implemented transport interface. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety and data structure invariance through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreHTTP v3.0.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreHTTP v2.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

coreHTTP Config File The HTTP client library exposes configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_http_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_http_config.h* can be provided by the user application to the library.

By default, a *core_http_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `HTTP_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

The HTTP client library can be built by either:

- Defining a `core_http_config.h` file in the application, and adding it to the include directories for the library build. **OR**
- Defining the `HTTP_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Building the Library The `httpFilePaths.cmake` file contains the information of all source files and header include paths required to build the HTTP client library.

As mentioned in the *previous section*, either a custom config file (i.e. `core_http_config.h`) OR `HTTP_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the HTTP client library.

For a CMake example of building the HTTP library with the `httpFilePaths.cmake` file, refer to the `coverity_analysis` library target in `test/CMakeLists.txt` file.

Building Unit Tests

Platform Prerequisites

- For running unit tests, the following are required:
 - **C90 compiler** like `gcc`
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is required for this repository's [CMock test framework](#).
- For running the coverage target, the following are required:
 - `gcov`
 - `lcov`

Steps to build Unit Tests

1. Go to the root directory of this repository.
2. Run the `cmake` command: `cmake -S test -B build -DBUILD_CLONE_SUBMODULES=ON`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The AWS IoT Device SDK for Embedded C repository contains demos of using the HTTP client library [here](#) on a POSIX platform. These can be used as reference examples for the library API.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreHTTP may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.5 corejson

JSON parser.

Readme

MCUXpresso SDK: coreJSON Library This repository is a fork of coreJSON library (<https://github.com/FreeRTOS/corejson>)(3.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreJSON repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreJSON Library This repository contains the coreJSON library, a parser that strictly enforces the ECMA-404 JSON standard and is suitable for low memory footprint embedded devices. The coreJSON library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreJSON v3.2.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreJSON v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example

```

#include <stdio.h>
#include "core_json.h"

int main()
{
    // Variables used in this example.
    JSONStatus_t result;
    char buffer[] = "{\"foo\":\"abc\", \"bar\":{\"foo\":\"xyz\"}}";
    size_t bufferLength = sizeof( buffer ) - 1;
    char queryKey[] = "bar.foo";
    size_t queryKeyLength = sizeof( queryKey ) - 1;
    char * value;
    size_t valueLength;

    // Calling JSON_Validate() is not necessary if the document is guaranteed to be valid.
    result = JSON_Validate( buffer, bufferLength );

    if( result == JSONSuccess )
    {
        result = JSON_Search( buffer, bufferLength, queryKey, queryKeyLength,
                             &value, &valueLength );
    }

    if( result == JSONSuccess )
    {
        // The pointer "value" will point to a location in the "buffer".
        char save = value[ valueLength ];
        // After saving the character, set it to a null byte for printing.
        value[ valueLength ] = '\0';
        // "Found: bar.foo -> xyz" will be printed.
        printf( "Found: %s -> %s\n", queryKey, value );
        // Restore the original character.
        value[ valueLength ] = save;
    }

    return 0;
}

```

A search may descend through nested objects when the queryKey contains matching key strings joined by a separator, .. In the example above, bar has the value { "foo": "xyz" }. Therefore, a search for query key bar.foo would output xyz.

Building coreJSON A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses 2 header files introduced in ISO C99, *stdbool.h* and *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h* respectively.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/core_json.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/core_json.c
```

Documentation

Existing documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of the coreJSON library may differ across repositories.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in `.gitmodules`, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C90 compiler like gcc
 - CMake 3.13.0 or later
 - Ruby 2.0.0 or later is additionally required for the Unity test framework (that we use).
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

MCUXpresso SDK: coreMQTT Library

This repository is a fork of coreMQTT library (<https://github.com/FreeRTOS/coremqtt>)(2.1.1). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Client Library

This repository contains the coreMQTT library that has been optimized for a low memory footprint. The coreMQTT library is compliant with the [MQTT 3.1.1](#) standard. It has no dependencies on any additional libraries other than the standard C library, a customer-implemented network transport interface, and *optionally* a user-implemented platform time function. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreMQTT v2.1.1 source code is part of the FreeRTOS 20210.01 LTS release.

MQTT Config File The MQTT client library exposes build configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_mqtt_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_mqtt_config.h* can be provided by the application to the library.

By default, a *core_mqtt_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `MQTT_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

Thus, the MQTT library can be built by either:

- Defining a *core_mqtt_config.h* file in the application, and adding it to the include directories list of the library
- OR**
- Defining the `MQTT_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Sending metrics to AWS IoT When establishing a connection with AWS IoT, users can optionally report the Operating System, Hardware Platform and MQTT client version information of their device to AWS. This information can help AWS IoT provide faster issue resolution and technical support. If users want to report this information, they can send a specially formatted string (see below) in the username field of the MQTT CONNECT packet.

Format

The format of the username string with metrics is:

```
<Actual_Username>?SDK=<OS_Name>&Version=<OS_Version>&Platform=<Hardware_Platform>&MQTTLib=<MQTT_Library_name>@<MQTT_Library_version>
```

Where

- <Actual_Username> is the actual username used for authentication, if username and password are used for authentication. When username and password based authentication is not used, this is an empty value.
- <OS_Name> is the Operating System the application is running on (e.g. FreeRTOS)
- <OS_Version> is the version number of the Operating System (e.g. V10.4.3)
- <Hardware_Platform> is the Hardware Platform the application is running on (e.g. WinSim)
- <MQTT_Library_name> is the MQTT Client library being used (e.g. coreMQTT)
- <MQTT_Library_version> is the version of the MQTT Client library being used (e.g. 1.0.2)

Example

- Actual_Username = "iotuser", OS_Name = FreeRTOS, OS_Version = V10.4.3, Hardware_Platform_Name = WinSim, MQTT_Library_Name = coremqtt, MQTT_Library_version = 2.1.1. If username is not used, then "iotuser" can be removed.

```
/* Username string:
 * iotuser?SDK=FreeRTOS&Version=v10.4.3&Platform=WinSim&MQTTLib=coremqtt@2.1.1
 */

#define OS_NAME           "FreeRTOS"
#define OS_VERSION        "V10.4.3"
#define HARDWARE_PLATFORM_NAME  "WinSim"
#define MQTT_LIB          "coremqtt@2.1.1"

#define USERNAME_STRING    "iotuser?SDK=" OS_NAME "&Version=" OS_VERSION "&Platform=" HARDWARE_PLATFORM_NAME "&MQTTLib=" MQTT_LIB
#define USERNAME_STRING_LENGTH  ( ( uint16_t ) ( sizeof( USERNAME_STRING ) - 1 ) )

MQTTConnectInfo_t connectInfo;
connectInfo.userName = USERNAME_STRING;
connectInfo.userNameLength = USERNAME_STRING_LENGTH;
mqttStatus = MQTT_Connect( pMqttContext, &connectInfo, NULL, CONNACK_RECV_TIMEOUT_MS,
↳ pSessionPresent );
```

Upgrading to v2.0.0 and above With coreMQTT versions >=v2.0.0, there are breaking changes. Please refer to the *coreMQTT version >=v2.0.0 Migration Guide*.

Building the Library The *mqttFilePaths.cmake* file contains the information of all source files and the header include path required to build the MQTT library.

Additionally, the MQTT library requires two header files that are not part of the ISO C90 standard library, *stdbool.h* and *stdint.h*. For compilers that do not provide these header files, the

source/include directory contains the files *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h*, respectively, to provide the type definitions required by MQTT.

As mentioned in the previous section, either a custom config file (i.e. *core_mqtt_config.h*) OR *MQTT_DO_NOT_USE_CUSTOM_CONFIG* macro needs to be provided to build the MQTT library.

For a CMake example of building the MQTT library with the *mqttFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule By default, the submodules in this repository are configured with *update=none* in *.gitmodules* to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Platform Prerequisites

- Docker

or the following:

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. If using docker, launch the container:
 1. `docker build -t coremqtt .`
 2. `docker run -it -v "$PWD":/workspaces/coreMQTT -w /workspaces/coreMQTT coremqtt`
2. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
3. Run the *cmake* command: `cmake -S test -B build`
4. Run this command to build the library and unit tests: `make -C build all`
5. The generated test executables will be present in *build/bin/tests* folder.
6. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The *test/cbmc/proofs* directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT client library in the following locations for reference examples on POSIX and FreeRTOS platforms:

Platform	Location	Transport Interface Implementation
POSIX	AWS IoT Device SDK for Embedded C	POSIX sockets for TCP/IP and OpenSSL for TLS stack
FreeRTOS	FreeRTOS/FreeRTOS	FreeRTOS+TCP for TCP/IP and mbedTLS for TLS stack
FreeRTOS	FreeRTOS AWS Reference Integrations	Based on Secure Sockets Abstraction

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C
FreeRTOS.org

Note that the latest included version of coreMQTT may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.7 coremqtt-agent

The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library.

Readme

MCUXpresso SDK: coreMQTT Agent Library This repository is a fork of coreMQTT Agent library (<https://github.com/FreeRTOS/coremqtt-agent>)(1.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT Agent repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Agent Library The coreMQTT Agent library is a high level API that adds thread safety to the [coreMQTT](#) library. The library provides thread safe equivalents to the coreMQTT's APIs, greatly simplifying its use in multi-threaded environments. The coreMQTT Agent library manages the MQTT connection by serializing the access to the coreMQTT library and reducing implementation overhead (e.g., removing the need for the application to repeatedly call to MQTT_ProcessLoop). This allows your multi-threaded applications to share the same MQTT connection, and enables you to design an embedded application without having to worry about coreMQTT thread safety.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

Cloning this repository This repo uses [Git Submodules](#) to bring in dependent components.

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

Using SSH:

```
git clone git@github.com:FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

If you have downloaded the repo without using the `--recurse-submodules` argument, you need to run:

```
git submodule update --init --recursive
```

coreMQTT Agent Library Configurations The MQTT Agent library uses the same `core_mqtt_config.h` configuration file as coreMQTT, with the addition of configuration constants listed at the top of `core_mqtt_agent.h` and `core_mqtt_agent_command_functions.h`. Documentation for these configurations can be found [here](#).

To provide values for these configuration values, they must be either:

- Defined in `core_mqtt_config.h` used by coreMQTT **OR**
- Passed as compile time preprocessor macros

Porting the coreMQTT Agent Library In order to use the MQTT Agent library on a platform, you need to supply thread safe functions for the agent's *messaging interface*.

Messaging Interface Each of the following functions must be thread safe.

Function Pointer	Description
MQTTAgentMessageSend_t	A function that sends commands (as MQTTAgentCommand_t * pointers) to be received by MQTTAgent_CommandLoop. This can be implemented by pushing to a thread safe queue.
MQTTAgentMessageRecv_t	A function used by MQTTAgent_CommandLoop to receive MQTTAgentCommand_t * pointers that were sent by API functions. This can be implemented by receiving from a thread safe queue.
MQTTAgentCommandGet_t	A function that returns a pointer to an allocated MQTTAgentCommand_t structure, which is used to hold information and arguments for a command to be executed in MQTTAgent_CommandLoop(). If using dynamic memory, this can be implemented using malloc().
MQTTAgentCommandRelease_t	A function called to indicate that a command structure that had been allocated with the MQTTAgentCommandGet_t function pointer will no longer be used by the agent, so it may be freed or marked as not in use. If using dynamic memory, this can be implemented with free().

Reference implementations for the interface functions can be found in the [reference examples](#) below.

Additional Considerations

Static Memory If only static allocation is used, then the MQTTAgentCommandGet_t and MQTTAgentCommandRelease_t could instead be implemented with a pool of MQTTAgentCommand_t structures, with a queue or semaphore used to control access and provide thread safety. The below [reference examples](#) use static memory with a command pool.

Subscription Management The MQTT Agent does not track subscriptions for MQTT topics. The receipt of any incoming PUBLISH packet will result in the invocation of a single MQTTAgentIncomingPublishCallback_t callback, which is passed to MQTTAgent_Init() for initialization. If it is desired for different handlers to be invoked for different incoming topics, then the publish callback will have to manage subscriptions and fan out messages. A platform independent subscription manager example is implemented in the [reference examples](#) below.

Building the Library You can build the MQTT Agent source files that are in the *source* directory, and add *source/include* to your compiler's include path. Additionally, the MQTT Agent library requires the coreMQTT library, whose files follow the same *source/* and *source/include* pattern as the agent library; its build instructions can be found [here](#).

If using CMake, the *mqttAgentFilePaths.cmake* file contains the above information of the source files and the header include path from this repository. The same information is found for coreMQTT from *mqttFilePaths.cmake* in the *coreMQTT submodule*.

For a CMake example of building the MQTT Agent library with the *mqttAgentFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Unit Test Platform Prerequisites

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
2. Run the *cmake* command: `cmake -S test -B build`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT Agent library in the following locations for reference examples on FreeRTOS platforms:

Location
coreMQTT Agent Demos
FreeRTOS/FreeRTOS

Documentation The MQTT Agent API documentation can be found [here](#).

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages yourself, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Getting help You can use your Github login to get support from both the FreeRTOS community and directly from the primary FreeRTOS developers on our [active support forum](#). You can find a list of [frequently asked questions](#) [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

License This library is licensed under the MIT License. See the *LICENSE* file.

4.1.8 corepkcs11

PKCS #11 key management library.

Readme

MCUXpresso SDK: corePKCS11 Library This repository is a fork of PKCS #11 key management library (<https://github.com/FreeRTOS/corePKCS11/tree/v3.5.0>)(v3.5.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable corepkcs11 repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

corePKCS11 Library PKCS #11 is a standardized and widely used API for manipulating common cryptographic objects. It is important because the functions it specifies allow application software to use, create, modify, and delete cryptographic objects, without ever exposing those objects to the application's memory. For example, FreeRTOS AWS reference integrations use a small subset of the PKCS #11 API to, among other things, access the secret (private) key necessary to create a network connection that is authenticated and secured by the [Transport Layer Security \(TLS\)](#) protocol – without the application ever ‘seeing’ the key.

The Cryptoki or PKCS #11 standard defines a platform-independent API to manage and use cryptographic tokens. The name, “PKCS #11”, is used interchangeably to refer to the API itself and the standard which defines it.

This repository contains a software based mock implementation of the PKCS #11 interface (API) that uses the cryptographic functionality provided by Mbed TLS. Using a software mock enables rapid development and flexibility, but it is expected that the mock be replaced by an implementation specific to your chosen secure key storage in production devices.

Only a subset of the PKCS #11 standard is implemented, with a focus on operations involving asymmetric keys, random number generation, and hashing.

The targeted use cases include certificate and key management for TLS authentication and code-sign signature verification, on small embedded devices.

corePKCS11 is implemented on PKCS #11 v2.4.0, the full PKCS #11 standard can be found on the [oasis website](#).

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#) and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

corePKCS11 v3.5.0 source code is part of the FreeRTOS 202210.00 LTS release.

corePKCS11 v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Purpose Generally vendors for secure cryptoprocessors such as Trusted Platform Module (TPM), Hardware Security Module (HSM), Secure Element, or any other type of secure hardware enclave, distribute a PKCS #11 implementation with the hardware. The purpose of the corePKCS11 software only mock library is therefore to provide a non hardware specific PKCS #11 implementation that allows for rapid prototyping and development before switching to a cryptoprocessor specific PKCS #11 implementation in production devices.

Since the PKCS #11 interface is defined as part of the PKCS #11 [specification](#) replacing this library with another implementation should require little porting effort, as the interface will not change. The system tests distributed in this repository can be leveraged to verify the behavior of a different implementation is similar to corePKCS11.

corePKCS11 Configuration The corePKCS11 library exposes preprocessor macros which must be defined prior to building the library. A list of all the configurations and their default values are defined in the doxygen documentation for this library.

Build Prerequisites

Library Usage For building the library the following are required:

- **A C99 compiler**
- **mbedcrypto** library from [mbedtls](#) version 2.x or 3.x.
- **pkcs11 API header(s)** available from [OASIS](#) or [OpenSC](#)

Optionally, variables from the `pkcsFilePaths.cmake` file may be referenced if your project uses `cmake`.

Integration and Unit Tests In order to run the integration and unit test suites the following are dependencies are necessary:

- **C Compiler**
- **CMake 3.13.0 or later**
- **Ruby 2.0.0 or later** required by CMock.
- **Python 3** required for configuring mbedtls.
- **git** required for fetching dependencies.
- **GNU Make** or **Ninja**

The *mbedtls*, *CMock*, and *Unity* libraries are downloaded and built automatically using the `cmake` `FetchContent` feature.

Coverage Measurement and Instrumentation The following software is required to run the coverage target:

- Linux, MacOS, or another POSIX-like environment.
- A recent version of **GCC** or **Clang** with support for gcov-like coverage instrumentation.
- **gcov** binary corresponding to your chosen compiler
- **lcov** from the [Linux Test Project](#)
- **perl** needed to run the `lcov` utility.

Coverage builds are validated on recent versions of Ubuntu Linux.

Running the Integration and Unit Tests

1. Navigate to the root directory of this repository in your shell.
2. Run **cmake** to construct a build tree: `cmake -S test -B build`
 - You may specify your preferred build tool by appending `-G'Unix Makefiles'` or `-GNinja` to the command above.
 - You may append `-DUNIT_TESTS=0` or `-DSYSTEM_TESTS=0` to disable Unit Tests or Integration Tests respectively.
3. Build the test binaries: `cmake --build ./build --target all`
4. Run `ctest --test-dir ./build` or `cmake --build ./build --target test` to run the tests without capturing coverage.
5. Run `cmake --build ./build --target coverage` to run the tests and capture coverage data.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The FreeRTOS-Labs repository contains demos using the PKCS #11 library [here](#) using FreeRTOS on the Windows simulator platform. These can be used as reference examples for the library API.

Porting Guide Documentation for porting corePKCS11 to a new platform can be found on the AWS [docs](#) web page.

corePKCS11 is not meant to be ported to projects that have a TPM, HSM, or other hardware for offloading crypto-processing. This library is specifically meant to be used for development and prototyping.

Related Example Implementations These projects implement the PKCS #11 interface on real hardware and have similar behavior to corePKCS11. It is preferred to use these, over corePKCS11, as they allow for offloading Cryptography to separate hardware.

- ARM's [Platform Security Architecture](#).
- Microchip's [cryptoauthlib](#).
- Infineon's [Optiga Trust X](#).

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of corePKCS11 may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Security See *CONTRIBUTING* for more information.

License This library is licensed under the MIT-0 License. See the LICENSE file.

4.1.9 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme

MCUXpresso SDK: FreeRTOS-Plus-TCP Library This repository is a fork of FreeRTOS-Plus-TCP library (<https://github.com/FreeRTOS/freertos-plus-tcp>)(4.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS-Plus-TCP repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

Introduction This branch contains unified IPv4 and IPv6 functionalities. Refer to the Getting started Guide (found [here](#)) for more details.

FreeRTOS-Plus-TCP Library FreeRTOS-Plus-TCP is a lightweight TCP/IP stack for FreeRTOS. It provides a familiar Berkeley sockets interface, making it as simple to use and learn as possible. FreeRTOS-Plus-TCP's features and RAM footprint are fully scalable, making FreeRTOS-Plus-TCP equally applicable to smaller lower throughput microcontrollers as well as larger higher throughput microprocessors.

This library has undergone static code analysis and checks for compliance with the [MISRA coding standard](#). Any deviations from the MISRA C:2012 guidelines are documented under [MISRA Deviations](#). The library is validated for memory safety and data structure invariance through the [CBMC automated reasoning tool](#) for the functions that parse data originating from the network. The library is also protocol tested using Maxwell protocol tester for both IPv4 and IPv6.

Getting started The easiest way to use the 4.0.0 version of FreeRTOS-Plus-TCP is to refer the Getting started Guide (found [here](#)) Another way is to start with the pre-configured demo application project (found in [this directory](#)). That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS-Plus-TCP source code organization refer to the [Documentation](#), and [API Reference](#).

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#). Please also refer to [FAQ](#) for frequently asked questions.

Also see the [Submitting a bugs/feature request](#) section of CONTRIBUTING.md for more details.

Note: All the remaining sections are generic and applies to all the versions from V3.0.0 onwards.

Upgrading to V3.0.0 and V3.1.0 In version 3.0.0 or 3.1.0, the folder structure of FreeRTOS-Plus-TCP has changed and the files have been broken down into smaller logically separated modules. This change makes the code more modular and conducive to unit-tests. FreeRTOS-Plus-TCP V3.0.0 improves the robustness, security, and modularity of the library. Version 3.0.0 adds comprehensive unit test coverage for all lines and branches of code and has undergone protocol testing, and penetration testing by AWS Security to reduce the exposure to security vulnerabilities. Additionally, the source files have been moved to a `source` directory. This change requires modification of any existing project(s) to include the modified source files and directories. There are examples on how to use the new files and directory structure. For an example based on the Xilinx Zynq-7000, use the code in this [branch](#) and follow these [instructions](#) to build and run the demo.

FreeRTOS-Plus-TCP V3.1.0 source code(.c .h) is part of the FreeRTOS 202210.00 LTS release.

Generating pre V3.0.0 folder structure for backward compatibility: If you wish to continue using a version earlier than V3.0.0 i.e. continue to use your existing source code organization, a script is provided to generate the folder structure similar to [this](#).

Note: After running the script, while the `.c` files will have same names as the pre V3.0.0 source, the files in the `include` directory will have different names and the number of files will differ as well. This should, however, not pose any problems to most projects as projects generally include all files in a given directory.

Running the script to generate pre V3.0.0 folder structure: For running the script, you will need Python version > 3.7. You can download/install it from [here](#).

Once python is downloaded and installed, you can verify the version from your terminal/command window by typing `python --version`.

To run the script, you should switch to the FreeRTOS-Plus-TCP directory that was created using the *Cloning this repository* step above. And then run `python <Path/to/the/script>/GenerateOriginalFiles.py`.

To consume FreeRTOS+TCP

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_plus_tcp
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git
  GIT_TAG        master #Note: Best practice to use specific git-hash or tagged version
  GIT_SUBMODULES "" # Don't grab any submodules since not latest
)
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```

set( FREERTOS_PLUS_FAT_DEV_SUPPORT OFF CACHE BOOL "" FORCE)
# Select the native compile PORT
set( FREERTOS_PLUS_FAT_PORT "POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  # Eg. Zynq 2019_3 version of port
  set(FREERTOS_PLUS_FAT_PORT "ZYNQ_2019_3" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_plus_tcp)

```

Consuming stand-alone This repository uses [Git Submodules](#) to bring in dependent components.

Note: If you download the ZIP file provided by GitHub UI, you will not get the contents of the submodules. (The ZIP file is also not a valid Git repository)

To clone using HTTPS:

```

git clone https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel

```

Using SSH:

```

git clone git@github.com:FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel

```

Porting The porting guide is available on [this page](#).

Repository structure This repository contains the FreeRTOS-Plus-TCP repository and a number of supplementary libraries for testing/PR Checks. Below is the breakdown of what each directory contains:

- tools
 - This directory contains the tools and related files (CMock/uncrustify) required to run tests/checks on the TCP source code.
- tests
 - This directory contains all the tests (unit tests and CBMC) and the dependencies ([FreeRTOS-Kernel/Litani-port](#)) the tests require.
- source/portable
 - This directory contains the portable files required to compile the FreeRTOS-Plus-TCP source code for different hardware/compilers.
- source/include
 - The include directory has all the ‘core’ header files of FreeRTOS-Plus-TCP source.
- source
 - This directory contains all the [.c] source files.

Note At this time it is recommended to use `BufferAllocation_2.c` in which case it is essential to use the `heap_4.c` memory allocation scheme. See [memory management](#).

Kernel sources The FreeRTOS Kernel Source is in [FreeRTOS/FreeRTOS-Kernel repository](#), and it is consumed by testing/PR checks as a submodule in this repository.

The version of the FreeRTOS Kernel Source in use could be accessed at `./test/FreeRTOS-Kernel` directory.

CBMC The `test/cbmc/proofs` directory contains CBMC proofs.

To learn more about CBMC and proofs specifically, review the training material [here](#).

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).