MCUXpresso SDK Documentation

Release 25.09.00

NXP
Sep 19, 2025

Table of contents

1 MCX-W72-EVK **3**
- 1.1 Overview . . . 3
- 1.2 Getting Started with MCUXpresso SDK Package . . . 3
  - 1.2.1 Getting Started with Package . . . 3
- 1.3 Getting Started with MCUXpresso SDK GitHub . . . 19
  - 1.3.1 Getting Started with MCUXpresso SDK Repository . . . 19
- 1.4 Release Notes . . . 32
  - 1.4.1 MCUXpresso SDK Release Notes . . . 32
- 1.5 ChangeLog . . . 45
  - 1.5.1 MCUXpresso SDK Changelog . . . 45
- 1.6 Driver API Reference Manual . . . 134
- 1.7 Middleware Documentation . . . 134
  - 1.7.1 Wireless Bluetooth LE host stack and applications . . . 134
  - 1.7.2 Wireless zigbee stack . . . 134
  - 1.7.3 IEEE 802.15.4 MACPHY Software . . . 134
  - 1.7.4 Wireless Connectivity Framework . . . 134
  - 1.7.5 Multicore . . . 134
  - 1.7.6 FreeMASTER . . . 134
  - 1.7.7 FreeRTOS . . . 135

2 MCXW727C **137**
- 2.1 CACHE: LPCAC CACHE Memory Controller . . . 137
- 2.2 CCM32K: 32kHz Clock Control Module . . . 138
- 2.3 CE Basic Functions . . . 148
- 2.4 CE Command Functions . . . 148
- 2.5 CE CMSIS Functions . . . 150
- 2.6 CE Initialization Functions . . . 150
- 2.7 CE Matrix Functions . . . 151
- 2.8 CE Transform Functions . . . 155
- 2.9 Clock Driver . . . 157
- 2.10 CMC: Core Mode Controller Driver . . . 176
- 2.11 CRC: Cyclic Redundancy Check Driver . . . 189
- 2.12 EDMA: Enhanced Direct Memory Access (eDMA) Controller Driver . . . 191
- 2.13 ELEMU: Edgelock Messaging unit driver . . . 210
- 2.14 EWM: External Watchdog Monitor Driver . . . 210
- 2.15 FGPIO Driver . . . 213
- 2.16 C40ESP3 Flash Driver . . . 213
- 2.17 FlexCAN: Flex Controller Area Network Driver . . . 217
- 2.18 FlexCAN Driver . . . 217
- 2.19 FlexCAN eDMA Driver . . . 264
- 2.20 FlexIO: FlexIO Driver . . . 267
- 2.21 FlexIO Driver . . . 267
- 2.22 FlexIO eDMA SPI Driver . . . 284
- 2.23 FlexIO eDMA UART Driver . . . 288
- 2.24 FlexIO I2C Master Driver . . . 290
- 2.25 FlexIO I2S Driver . . . 299

2.26 FlexIO SPI Driver . . . 309
2.27 FlexIO UART Driver . . . 322
2.28 GPIO: General-Purpose Input/Output Driver . . . 333
2.29 GPIO Driver . . . 336
2.30 I3C: I3C Driver . . . 341
2.31 I3C Common Driver . . . 343
2.32 I3C Master Driver . . . 346
2.33 I3C Slave Driver . . . 372
2.34 IMU: Inter CPU Messaging Unit . . . 385
2.35 Common Driver . . . 391
2.36 LPADC: 12-bit SAR Analog-to-Digital Converter Driver . . . 403
2.37 LPCMP: Low Power Analog Comparator Driver . . . 422
2.38 LPI2C: Low Power Inter-Integrated Circuit Driver . . . 428
2.39 LPI2C Master Driver . . . 429
2.40 LPI2C Master DMA Driver . . . 443
2.41 LPI2C Slave Driver . . . 446
2.42 LPIT: Low-Power Interrupt Timer . . . 456
2.43 LPSPI: Low Power Serial Peripheral Interface . . . 463
2.44 LPSPI Peripheral driver . . . 463
2.45 LPSPI eDMA Driver . . . 484
2.46 LPTMR: Low-Power Timer . . . 491
2.47 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver . . . 497
2.48 LPUART Driver . . . 497
2.49 LPUART eDMA Driver . . . 516
2.50 LTC: LP Trusted Cryptography . . . 519
2.51 LTC AES driver . . . 520
2.52 LTC DES driver . . . 525
2.53 LTC HASH driver . . . 533
2.54 LTC PKHA driver . . . 535
2.55 LTC Blocking APIs . . . 544
2.56 MCM: Miscellaneous Control Module . . . 544
2.57 MSCM: Miscellaneous System Control . . . 549
2.58 MU: Messaging Unit . . . 550
2.59 PORT: Port Control and Interrupts . . . 562
2.60 RTC: Real Time Clock . . . 570
2.61 SEMA42: Hardware Semaphores Driver . . . 576
2.62 SFA: Signal Frequency Analyser . . . 580
2.63 SMSCM: Secure Miscellaneous System Control Module . . . 589
2.64 SPC: System Power Control driver . . . 593
2.65 SYSPM: System Performance Monitor . . . 628
2.66 TPM: Timer PWM Module . . . 631
2.67 TRDC: Trusted Resource Domain Controller . . . 647
2.68 TRGMUX: Trigger Mux Driver . . . 668
2.69 TSTMR: Timestamp Timer Driver . . . 669
2.70 VBAT: Smart Power Switch . . . 670
2.71 VREF: Voltage Reference Driver . . . 677
2.72 WDOG32: 32-bit Watchdog Timer . . . 680
2.73 WUU: Wakeup Unit driver . . . 686

3 Middleware **691**
3.1 Motor Control . . . 691
3.1.1 FreeMASTER . . . 691
3.2 Wireless . . . 728
3.2.1 NXP Wireless Framework and Stacks . . . 728

4 RTOS **793**
4.1 FreeRTOS . . . 793
4.1.1 FreeRTOS kernel . . . 793

4.1.2 FreeRTOS drivers . . . 799
4.1.3 backoffalgorithm . . . 799
4.1.4 corehttp . . . 802
4.1.5 corejson . . . 804
4.1.6 coremqtt . . . 807
4.1.7 coremqtt-agent . . . 810
4.1.8 corepkcs11 . . . 814
4.1.9 freertos-plus-tcp . . . 817

This documentation contains information specific to the mcxw72evk board.

Chapter 1

MCX-W72-EVK

1.1 Overview

The MCXW72 EVK is an IIOT evaluation kit development board for advanced development of the MCXW72 wireless MCU. It offers exhaustive evaluation of the MCX W72's multiprotocol wireless support for Bluetooth LE, Zigbee, Thread and Matter and CAN connectivity. The MCXW72 highly sensitive, optimized 2.4 GHz radio features a PCB meandered-antenna which can be bypassed to test via µ-RF connection. The MCXW72 EVK is a modular platform composed of the connectivity mother board KW-MCXW-EVK-MB and an M.2 meandered antenna module MCXW72-M10. The board includes an advanced MCU-Link debug probe, Power and low power option, CAN transceiver, buttons, switches, LEDs and integrated sensors, Arduino shield connectors, a MikroE Click connector and other headers.

MCU device and part on board is shown below:

- Device: MCXW727C
- PartNumber: MCXW727CMFTA

1.2 Getting Started with MCUXpresso SDK Package

1.2.1 Getting Started with Package

Overview

The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of

embedded applications, which can be used standalone or collaboratively with the A cores running another Operating System (such as Linux OS Kernel). Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to demo applications. The MCUXpresso SDK also contains optional RTOS integrations such as FreeRTOS and Azure RTOS, device stack, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes for MCX-W72-EVK* (Document MCUXSDKMCXW72RN).

For the latest version of this and other MCUXpresso SDK documents, see MCUXpresso Software Development Kit (SDK).

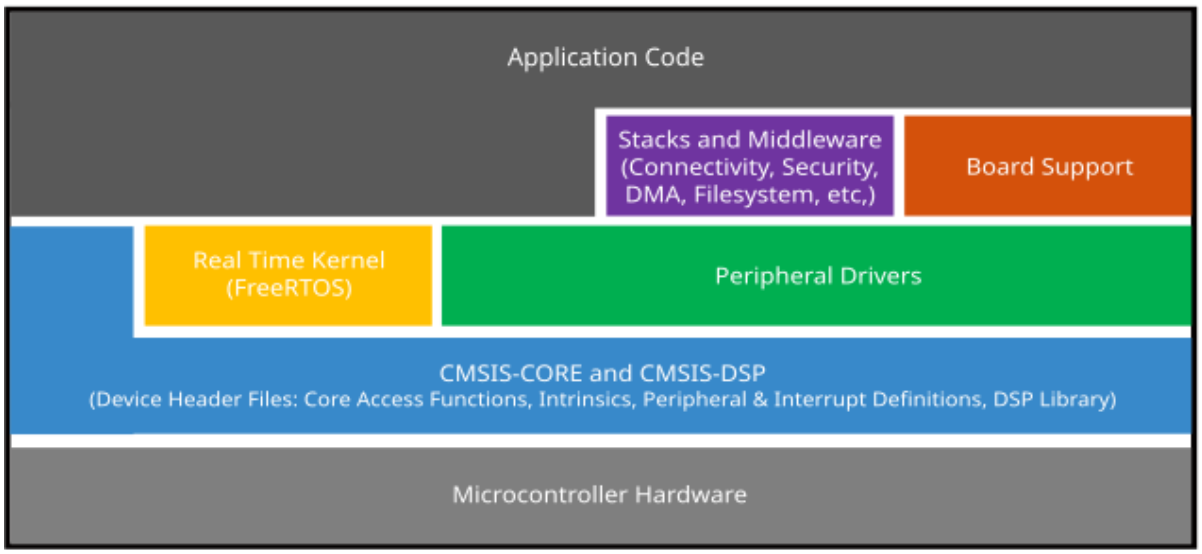

MCUXpresso SDK board support package folders

MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each <*board_name*> folder, there are various sub-folders to classify the type of examples it contains. These include (but are not limited to):

- demo_apps: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may use stacks and middleware.
- driver_examples: Simple applications that show how to use the peripheral drivers of the MCUXpresso SDK for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- rtos_examples: Basic FreeRTOSTM OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the RTOS drivers fo the MCUXpresso SDK.
- wireless_examples: Applications that use the Wireless stacks.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive

understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual* (document MCUXSDKAPIRM).

Each <board_name> folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the hello_world example (part of the demo_apps folder), the same general rules apply to any type of example in the <board_name> folder.

In the hello_world application folder, you see the following contents:

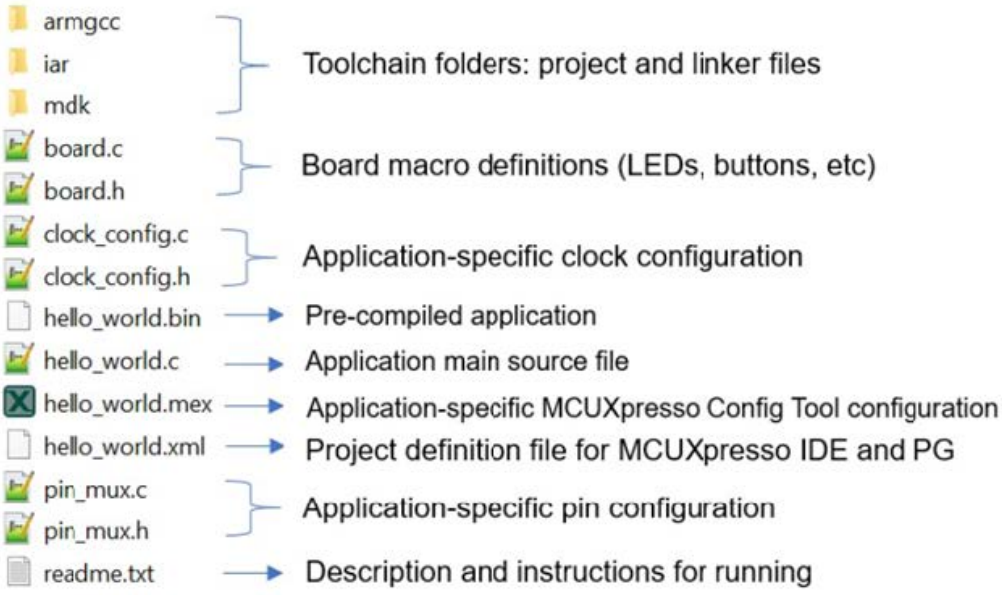

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Note: To prevent compilation errors, do not use special characters in the path of the SDK such as {!,@,#,$,&,%,^} and space.

Parent topic:*MCUXpresso SDK board support package folders*

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- *devices/<device_name>*: CMSIS header file of the device, MCUXpresso SDK feature file, and a few other files
- *devices/<device_name>/drivers*: All the peripheral drivers for your specific MCU
- *devices/<device_name>/<tool_name>*: Toolchain-specific startup code, including vector table definitions
- *devices/<device_name>/utilities*: Items such as the debug console that are used by many of the example applications
- *devices/<device_name>/project_template*: Project template used by MCUXpresso IDE to create projects

For examples containing an RTOS, there are references to the appropriate source code. RTOSes are in the rtos folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.

Parent topic:*MCUXpresso SDK board support package folders*

Running a demo application using IAR

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK. The hello_world demo application targeted for the **mcxw72evk** hardware platform is used as an example, although these steps can be applied to any example application in the MCUXpresso SDK.

Build an example application Do the following steps to build the hello_world example application..

1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

   ```
   <install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
   ```

   Using the mcxw72evk hardware platform as an example, the hello_world workspace is located in:

   ```
   <install_dir>/boards/mcxw72evk/demo_apps/hello_world/iar/hello_world.eww
   ```

   Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

   For this example, select **hello_world** – **debug**.

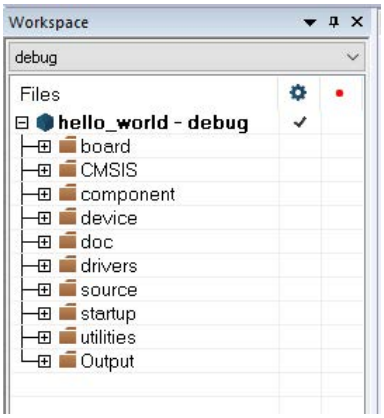

3. To build the demo application, click **Make**, highlighted in red in *Figure 2*.

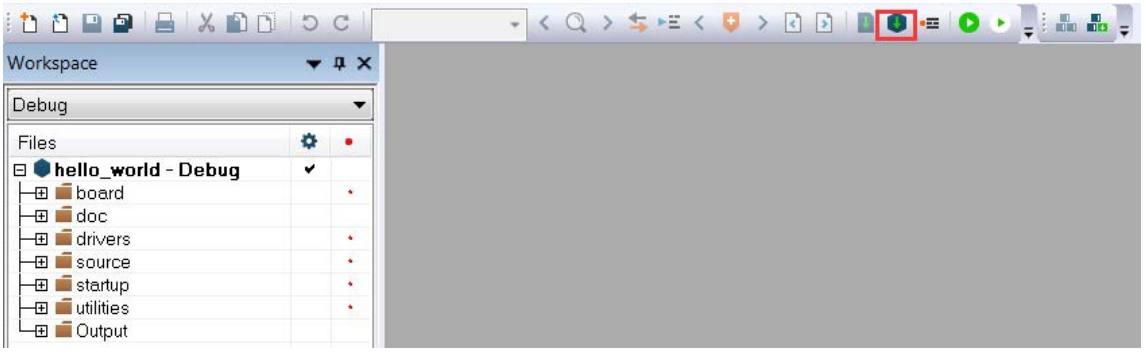

4. The build completes without errors.

Parent topic:*Running a demo application using IAR*

Run an example application To download and run the application, perform these steps:

1. Connect the development platform to your PC via USB cable between the USB connector (J14) and the PC USB connector.
2. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port. To determine the COM port number, see *How to determine COM Port*. Configure the terminal with these settings:
    1. 115200 baud rate, depending on your settings (reference the BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
    2. No parity
    3. 8 data bits
    4. 1 stop bit

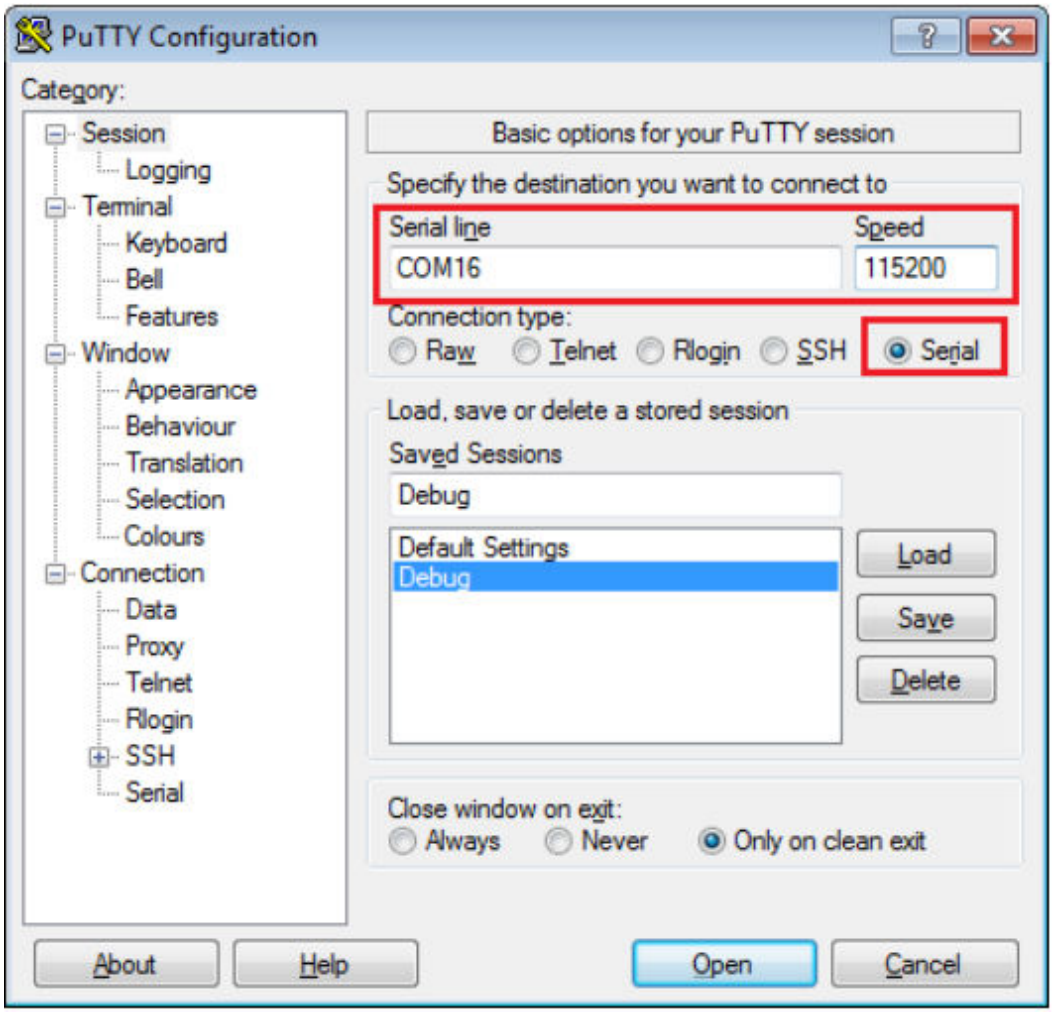

3. In IAR, click the **Download and Debug** button to download the application to the target.

4. The application is then downloaded to the target and automatically runs to the main() function.

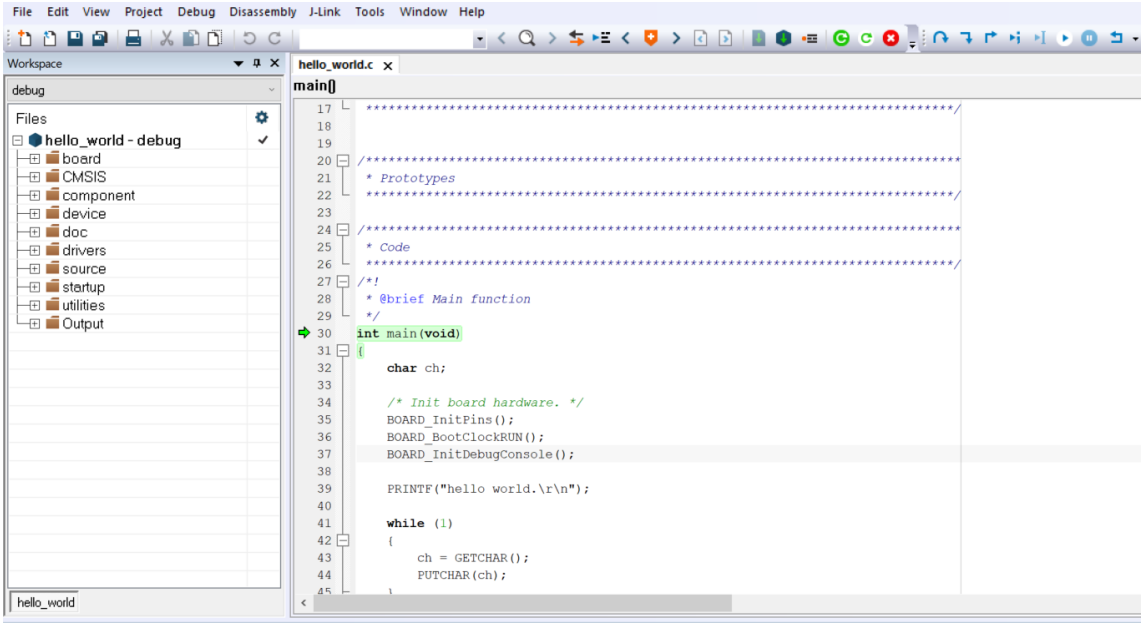

5. Run the code by clicking the **Go** button.

6. The hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

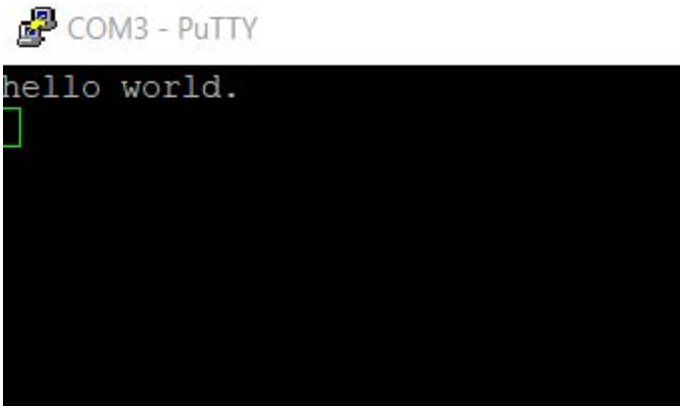

Parent topic:*Running a demo application using IAR*

Run a demo using MCUXpresso IDE

This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The hello_world demo application targeted for the MCX-W72-EVK hardware platform is used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.

Selecting the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside of the MCUXpresso SDK tree.

Parent topic:*Run a demo using MCUXpresso IDE*

Building an example application To build an example application, follow these steps.

1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

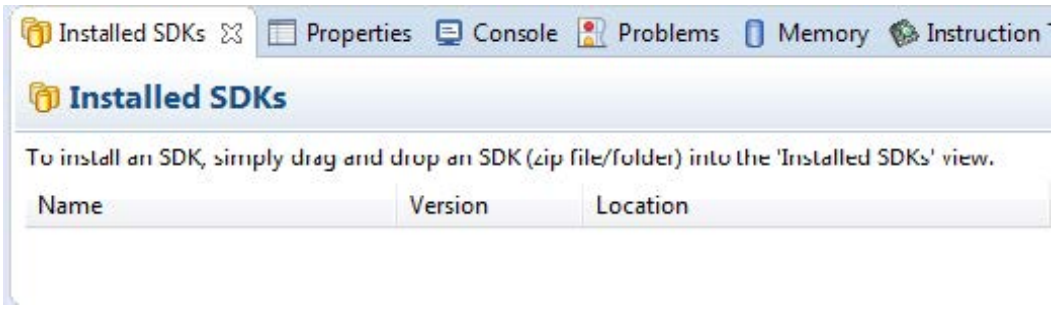

2. On the **Quickstart Panel**, click **Import SDK example(s)...**.

3. In the window that appears, expand the **mcx** folder and select **MCXW72**. Then, select **mcxw72evk** and click **Next**.

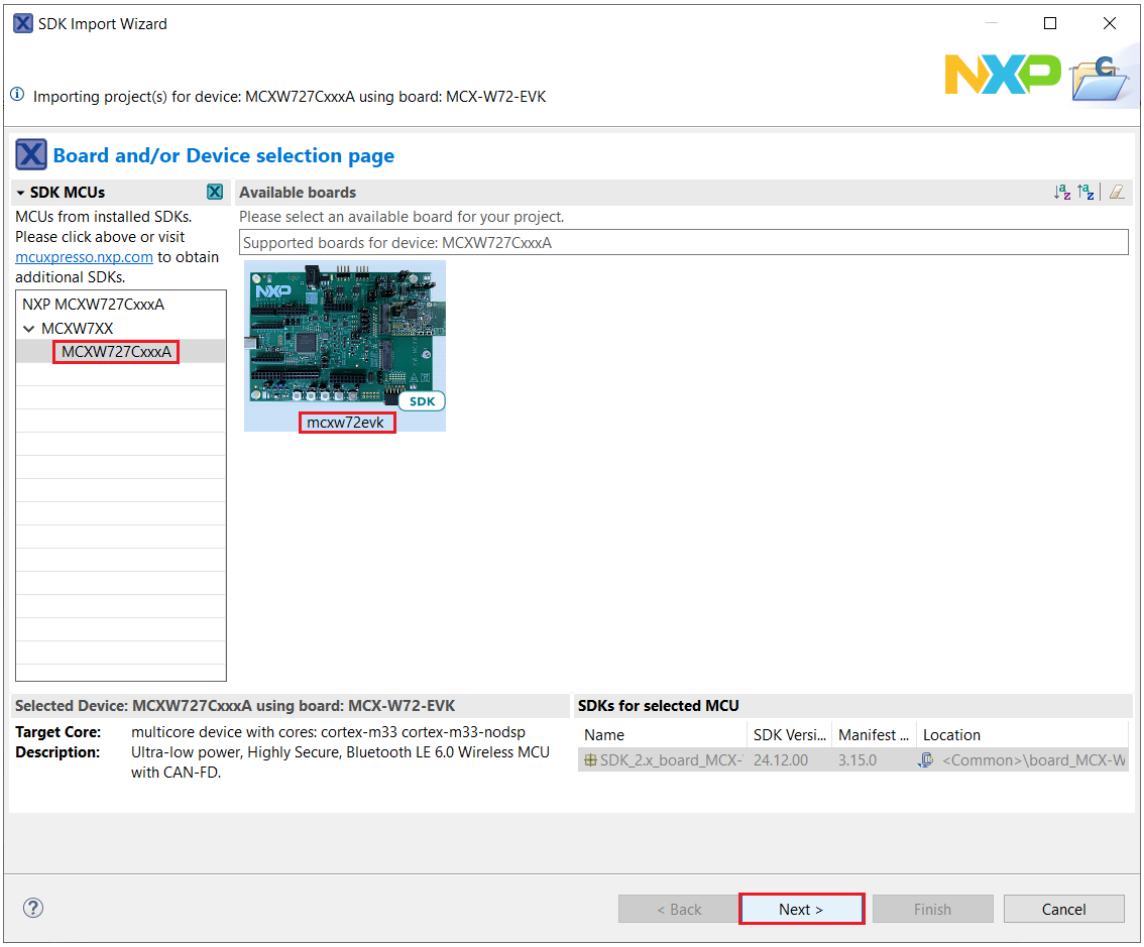

4. Expand the demo_apps folder and select hello_world. Then, click **Next**.

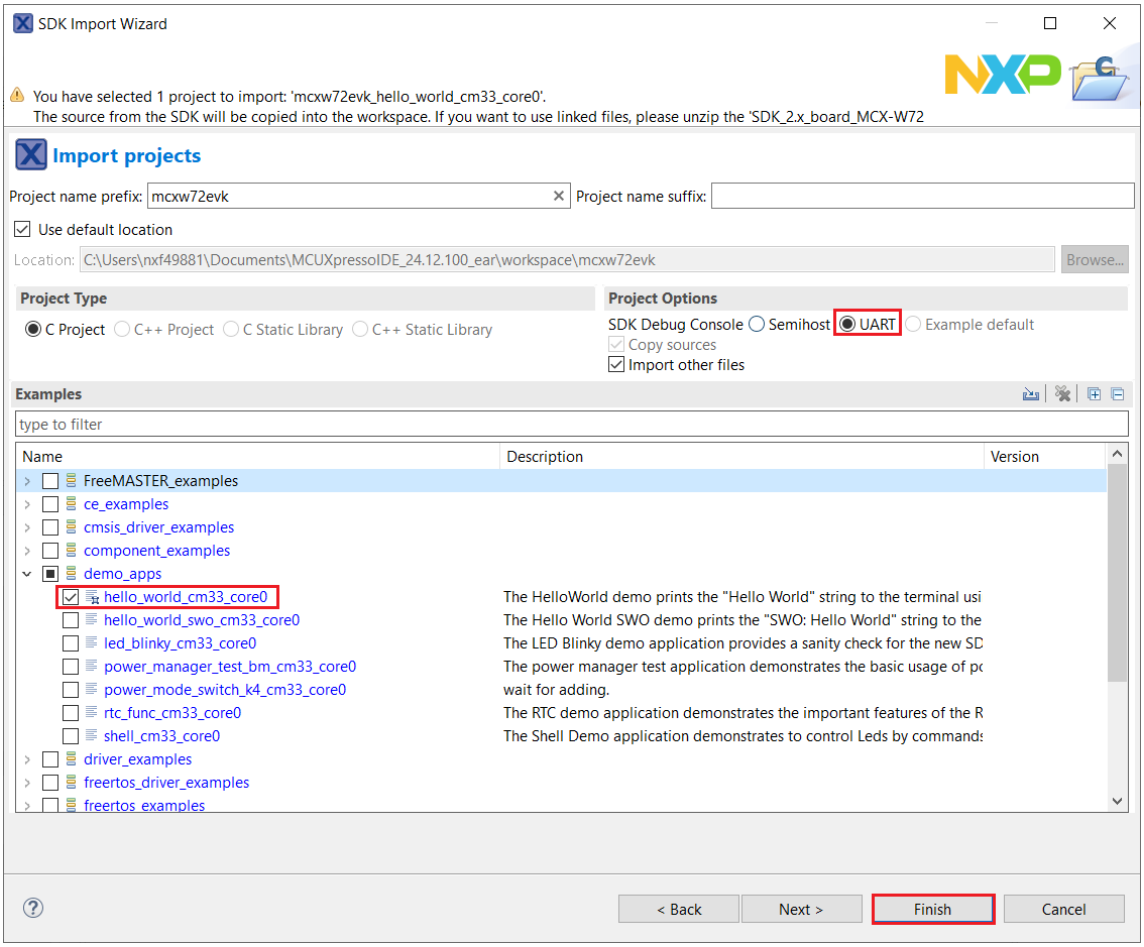

5. Ensure **Redlib: Use floating point version of printf** is selected if the example prints floating point numbers on the terminal for demo applications such as adc_basic, adc_burst, adc_dma, and adc_interrupt. Otherwise, it is not necessary to select this option. Then, click **Finish**.

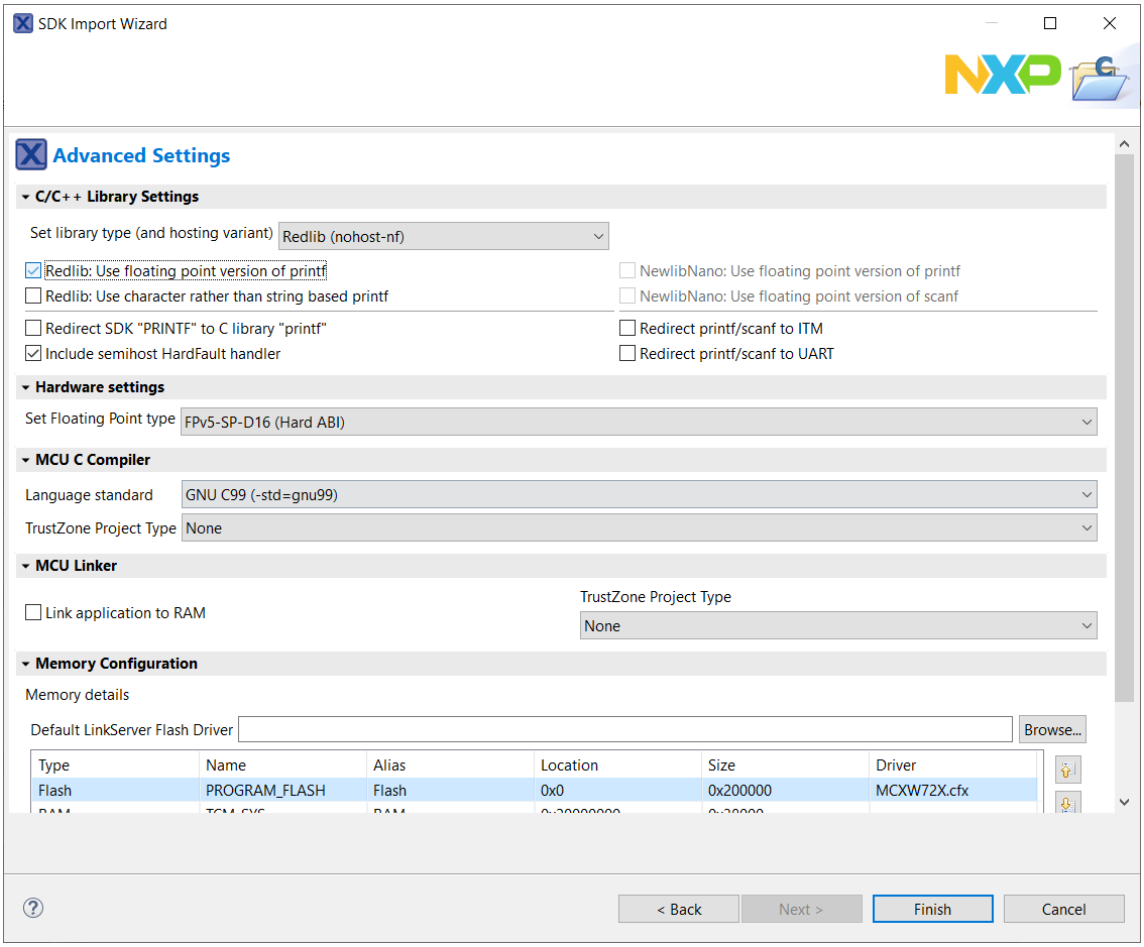

Parent topic:*Run a demo using MCUXpresso IDE*

Running an example application To download and run the application, perform the following steps:

1. Connect the development platform to your PC via USB cable between the USB connector (J14) and the PC USB connector.
2. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see *How to determine COM Port*). Configure the terminal with these settings:
    1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)
    2. No parity
    3. 8 data bits

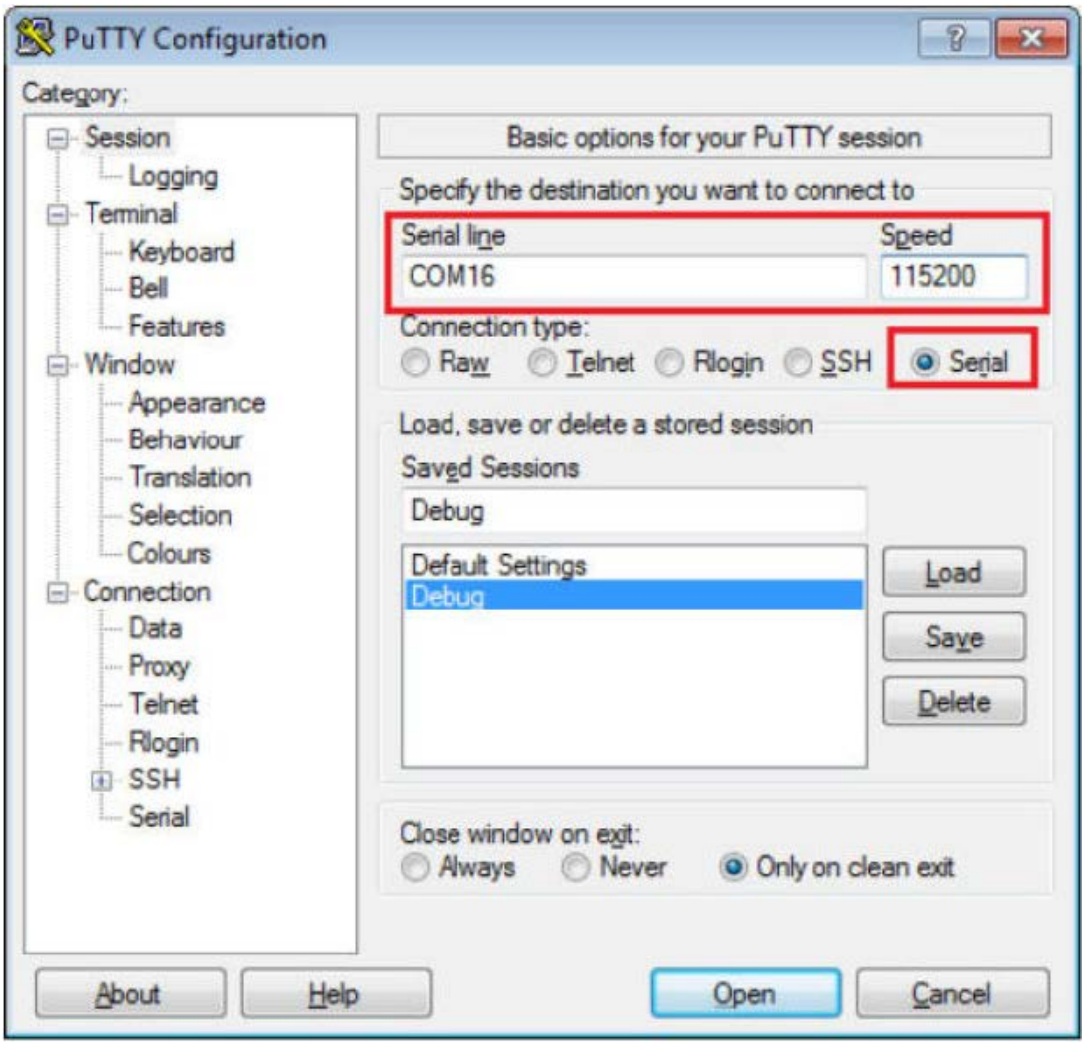

4. 1 stop bit

3. On the **Quickstart Panel**, click on **Debug**.

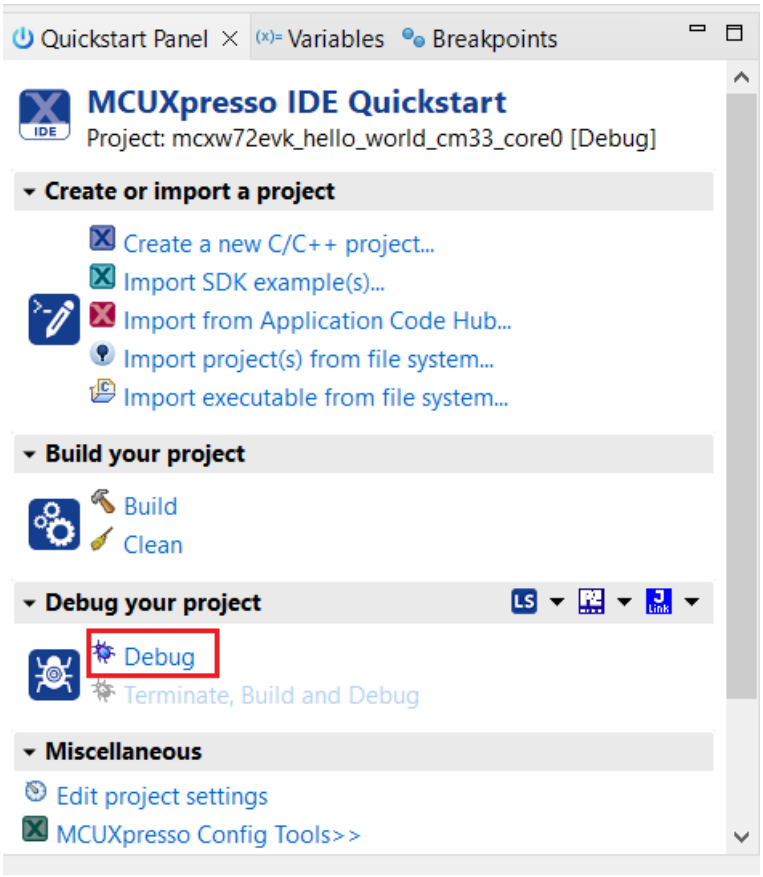

4. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

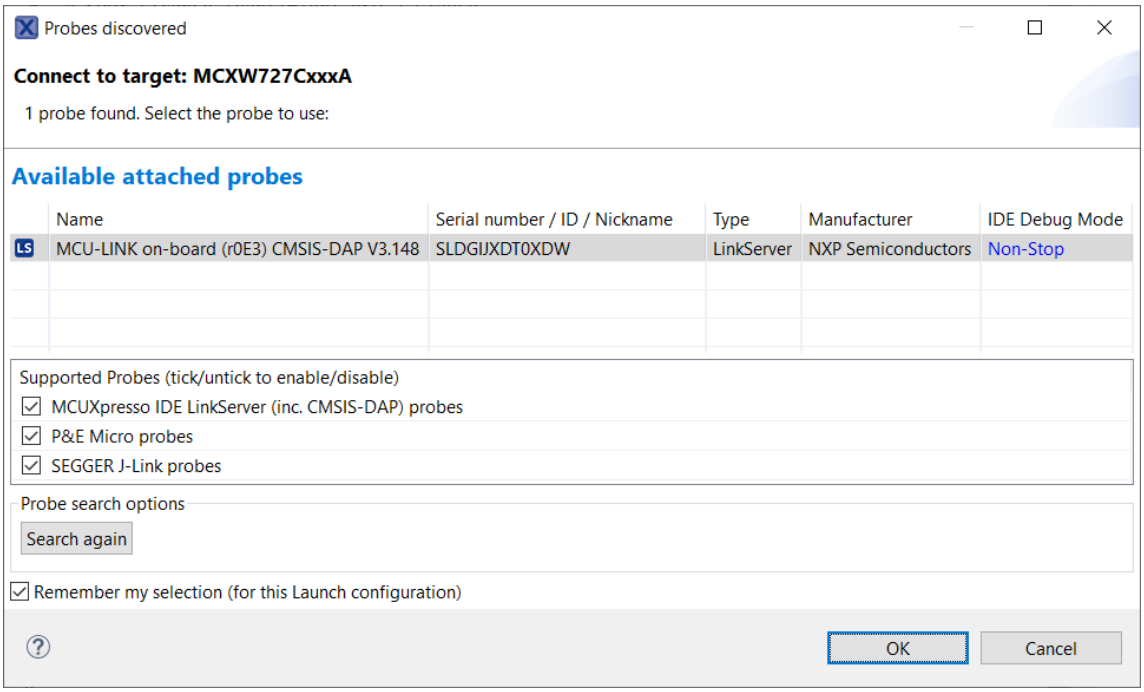

5. The application is downloaded to the target and automatically runs to main().

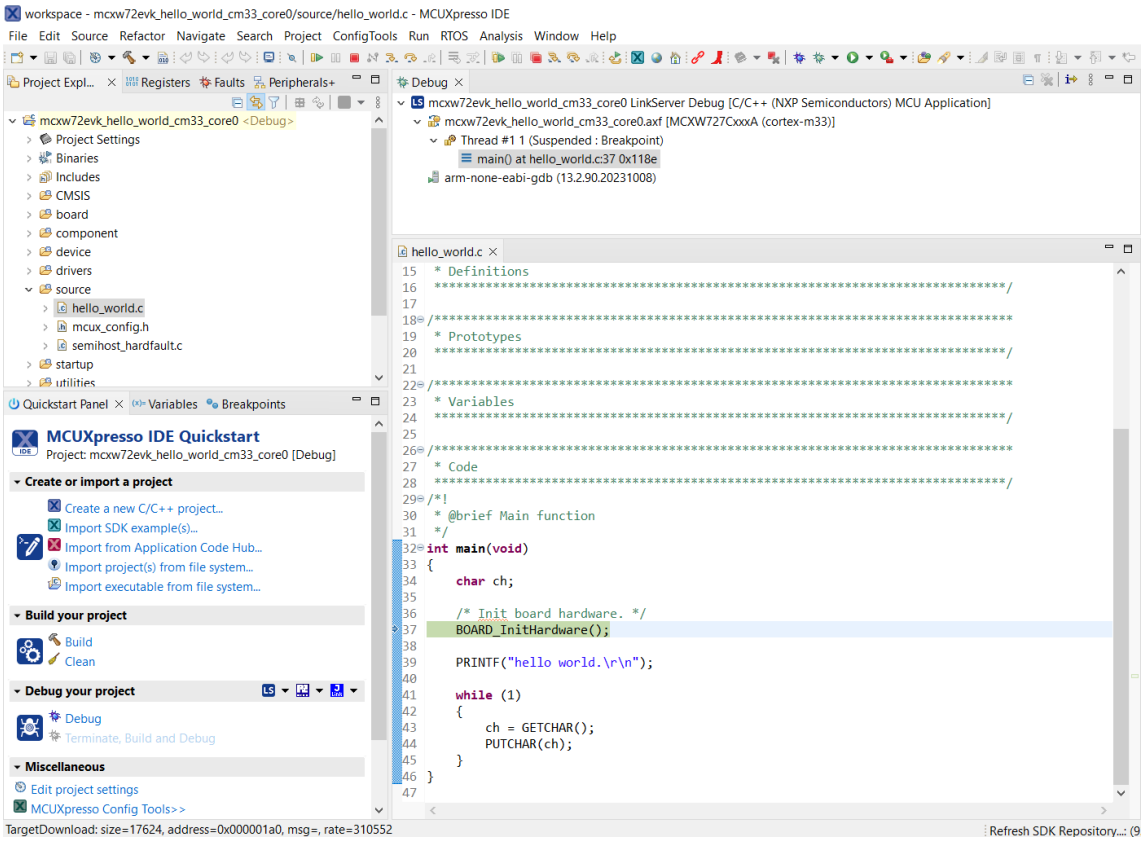

6. Start the application by clicking **Resume**.

The hello_world application is now running and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

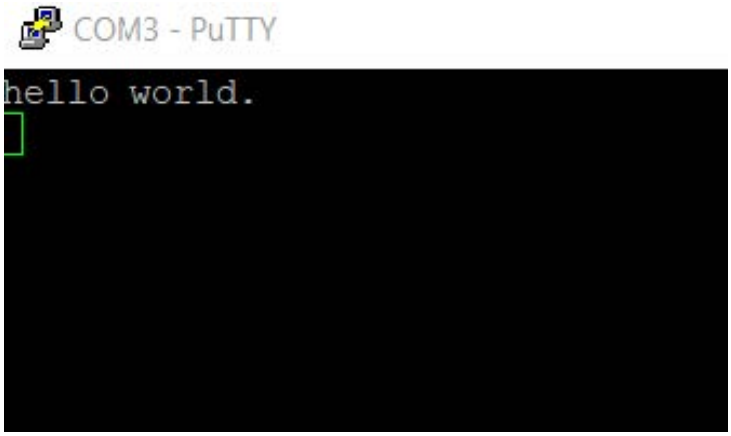

Parent topic:*Run a demo using MCUXpresso IDE*

How to determine COM Port

This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, on-board debug interface MCU-LINK.

1. To determine the COM port, open the Windows operating system **Device Manager**. This can be achieved by going to the Windows operating system **Start** menu and typing **Device Manager** in the search bar, as shown in *Figure 1*.

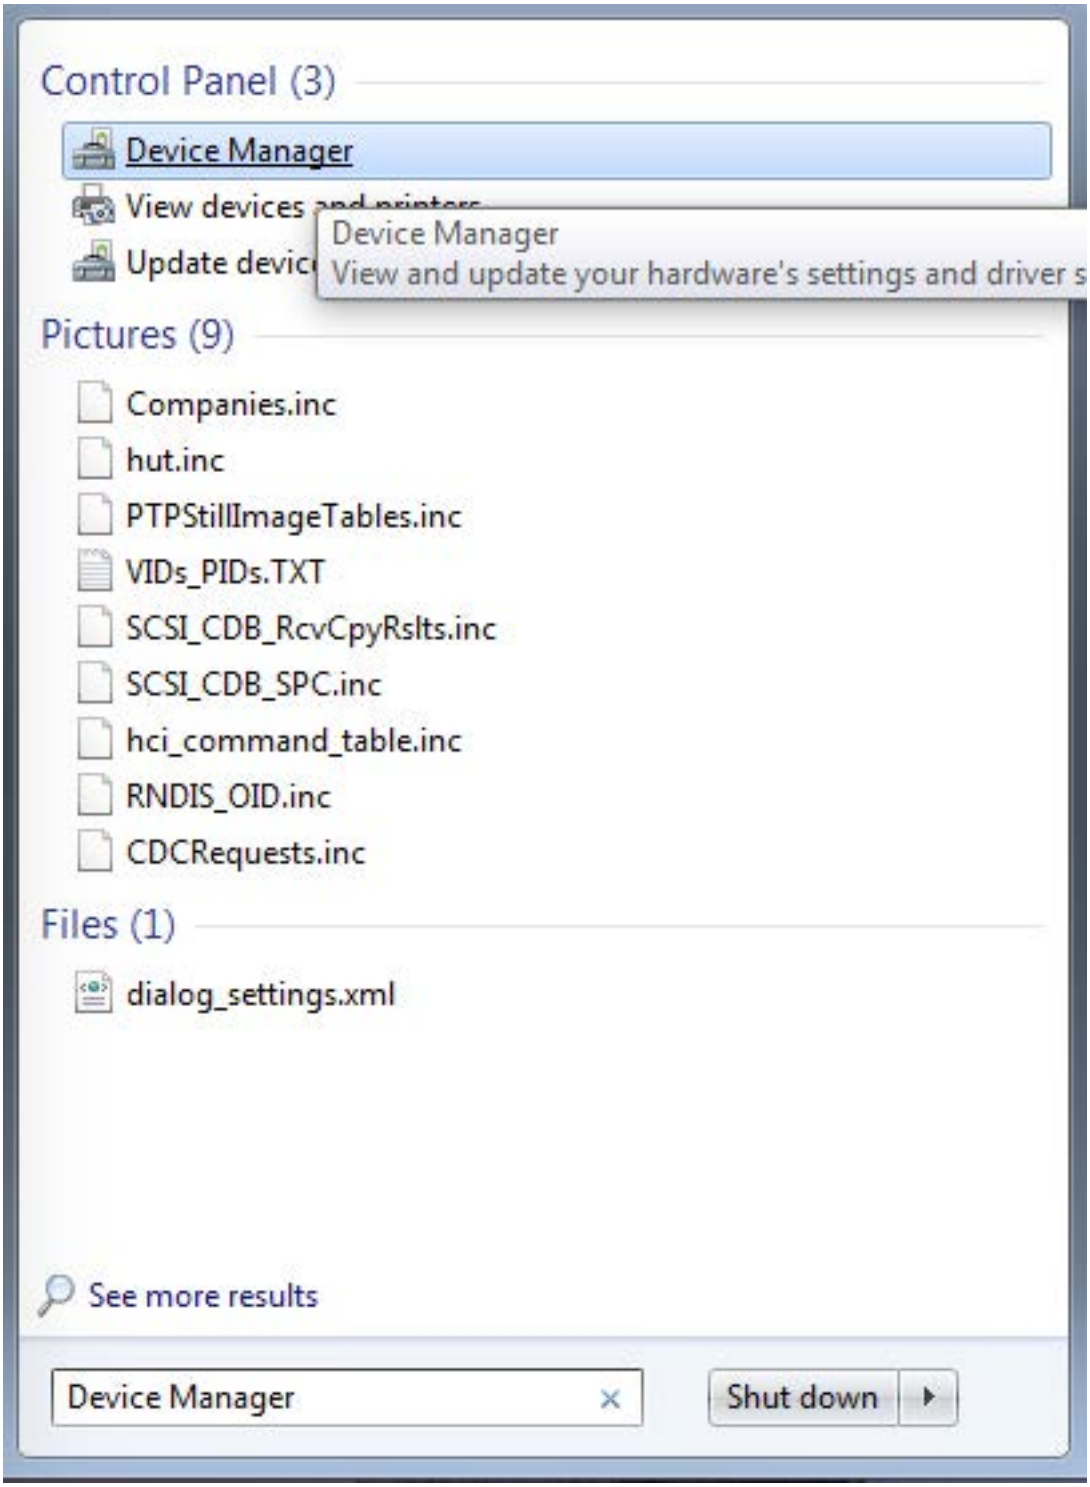

2. In the **Device Manager**, expand the **Ports (COM & LPT)** section to view the available ports.

How to set the board to the Bootloader ISP mode

On the MCX-W72-EVK board:

1. Press and hold the BOOT CONFIG switch, **SW4**.

2. Connect the MCX-W72-EVK board via the micro-USB connector to the PC.
3. Release the switch **SW4**.
4. Check the associated USB port number on the PC (such as **COM10**).
5. While the MCXW72 is in bootloader ISP mode, navigate to the folder where *blhost.exe* is located.
6. Type the command `.\blhost.exe -p COM10 -- get-property 1` to make sure that the MCXW72 is in Bootloader ISP mode, you should see:
   - Ping responded in 1 attempt(s)
   - Inject command 'get-property'
   - Response status = 0 (0x0) Success.
   - Response word 1 = 1258488064 (0x4b030100)
   - Current Version = K3.1.0

On a custom board:

1. Short the `BOOT_CFG` pin to VDD while reset.

Updating debugger firmware

The MCX-W72-EVK board comes with a CMSIS-DAP-compatible debug interface (known as MCU-Link). This firmware in this debug interface may be updated using the host computer scripts. This firmware is typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to re-program the debug probe firmware.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link. The utility can be downloaded from MCU-Link Debug Probe.

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in MCU-Link user guide, MCU-Link Debug Probe.

1. Install the MCU-Link utility.
2. Unplug the USB cable of the board.
3. Install the jumper on JP20.
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory, <*MCU-Link install dir*>.
   1. To program CMSIS-DAP debug firmware: <*MCU-Link install dir*>*/scripts/program_CMSIS*.
   2. To program J-Link debug firmware: <*MCU-Link install dir*>*/scripts/program_JLINK*.
6. Remove the jumper on JP20.
7. Re-power the board by removing the USB cable and plugging it in again.

Updating NBU for Wireless Examples

The Narrow Band Unit (NBU) firmware is included in the SDK folder as a signed and encrypted FW.

middleware\wireless\ble_controller\bin\mcxw72_nbu_ble_hosted.bin

To program the NBU software for the MCX-W72, perform the following steps:

1. While holding pressed the **SW4** on the MCX-W72-EVK board, attach the USB connector J14 to your computer. Then, release the **SW4** after you plugged the USB cable on your computer.

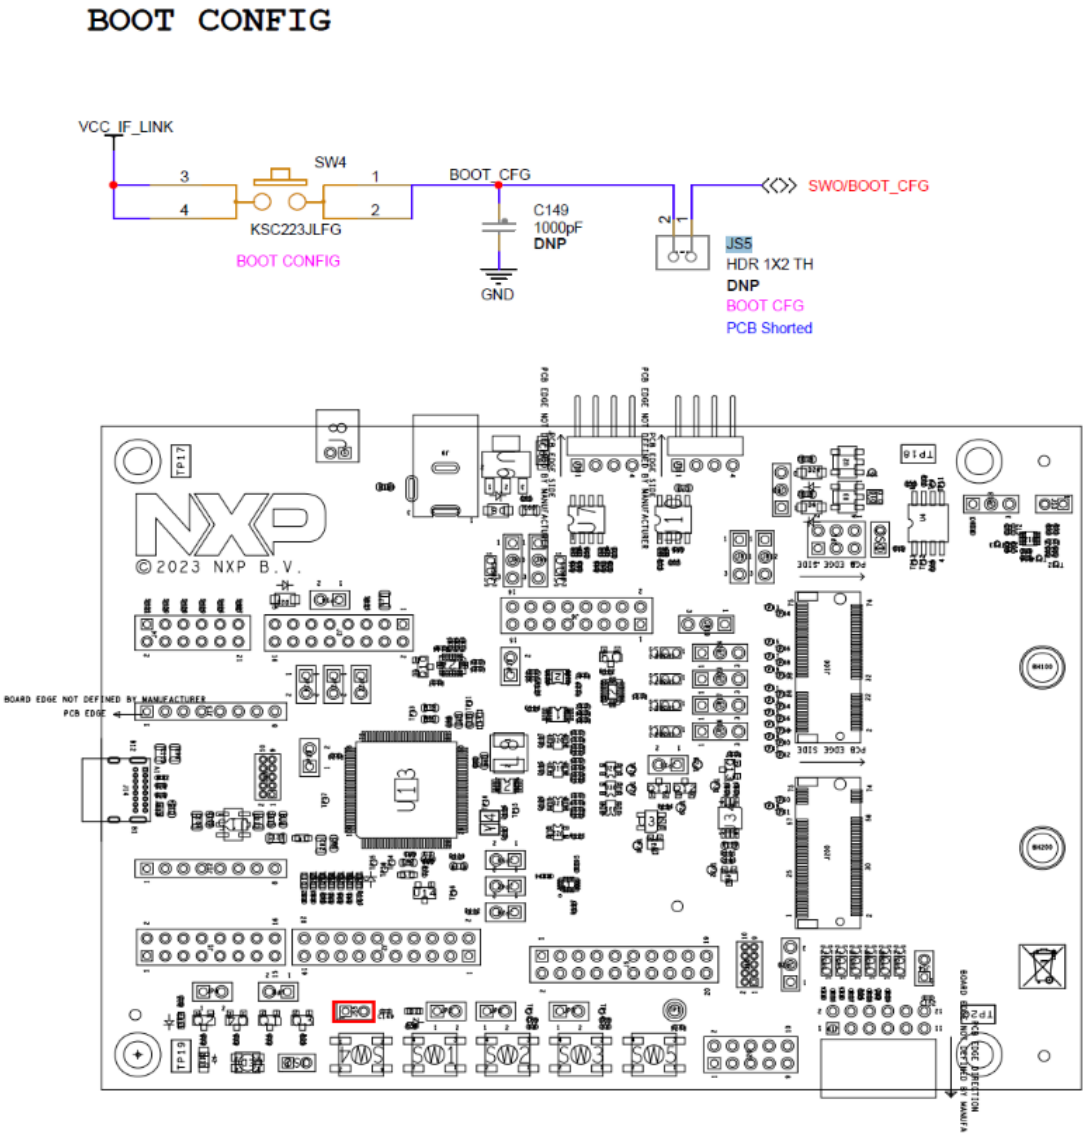

2. Verify which COM port is assigned to your board. To check the assigned COM port, in the Windows **Device Manager** program, search for Ports **(COM & LPT)** and save the COM port number. In this example, the assigned COM port is **COM3**.

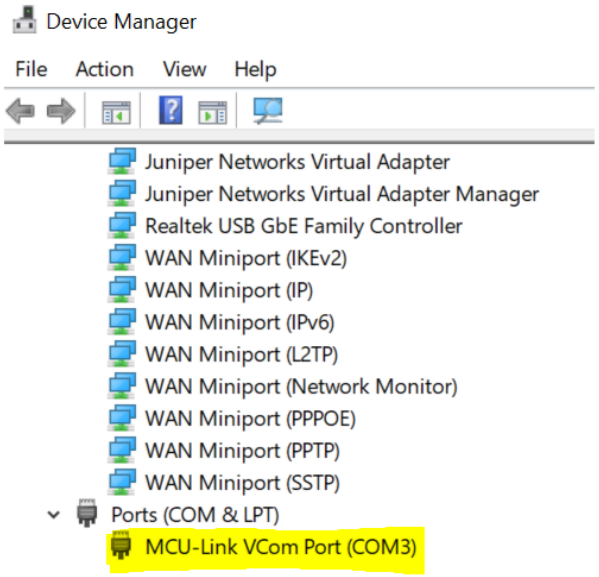

3. Open the *04. Tools* folder that comes together with this document and go to the *script* folder. Locate the *KW47-EVK_NBUProgram.cmd* and open it using any text editor. Replace all the references to **COMX** with the COM Port assigned to your board. Save the changes applied to the script.

   Note: To run the script, place the *blhost.exe* and the *KW47-EVK_NBUProgram.cmd* script in the same folder. Both scripts can be found in the *04. Tools* folder

4. Double click on the *KW47-EVK_NBUProgram.cmd* script to program the NBU and load the FAT software. This script first executes a command to make sure the **MCXW72** has entered ISP mode properly. If the device did not enter in ISP mode, it cannot be programmed. The following examples show when the device did not enter in ISP (left) and when the device was programmed properly (right).

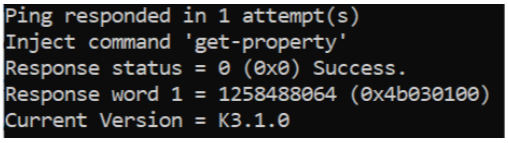

1.3 Getting Started with MCUXpresso SDK GitHub

1.3.1 Getting Started with MCUXpresso SDK Repository

Installation

NOTE

If the installation instruction asks/selects whether to have the tool installation path added to the PATH variable, agree/select the choice. This option ensures that the tool can be used in any terminal in any path. *Verify the installation* after each tool installation.

Install Prerequisites with MCUXpresso Installer The MCUXpresso Installer offers a quick and easy way to install the basic tools needed. The MCUXpresso Installer can be obtained from https://github.com/nxp-mcuxpresso/vscode-for-mcux/wiki/Dependency-Installation. The MCUXpresso Installer is an automated installation process, simply select MCUXpresso SDK Developer from the menu and click install. If you prefer to install the basic tools manually, refer to the next section.

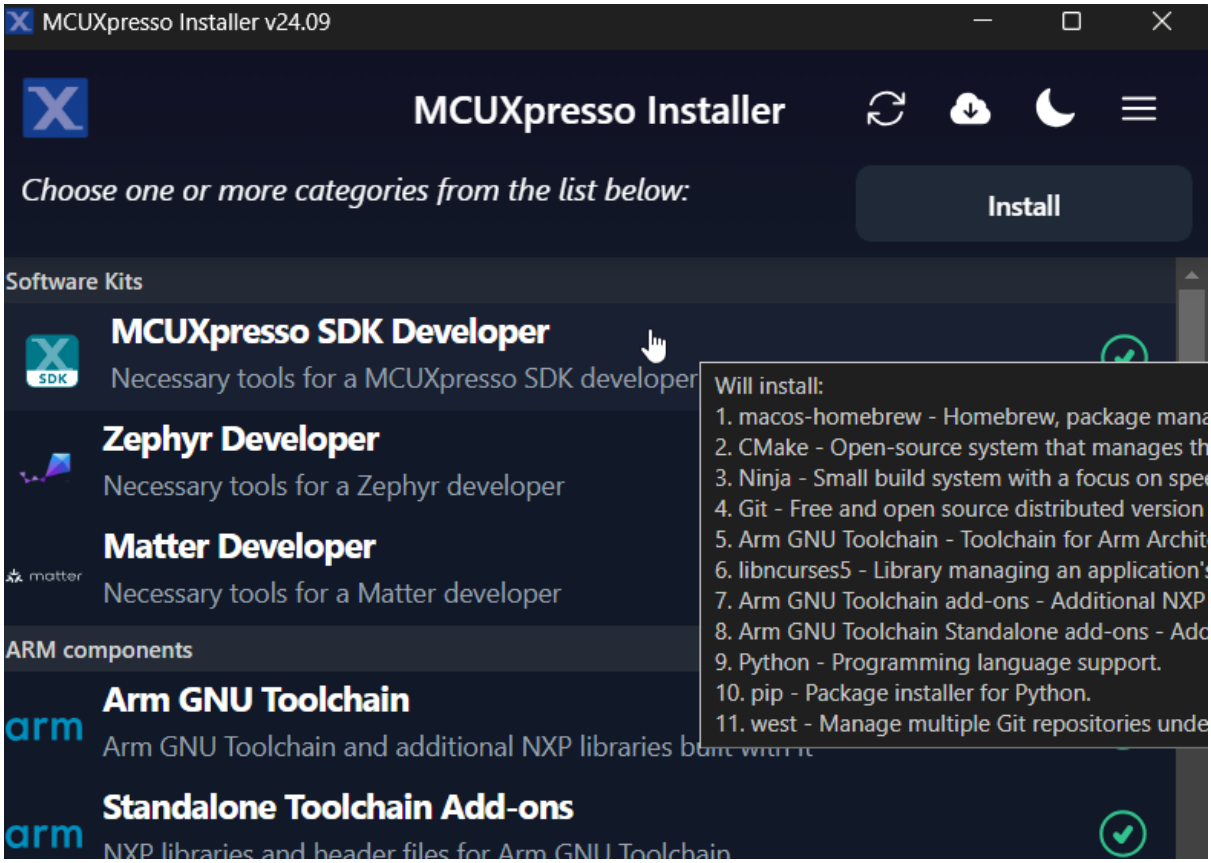

Alternative: Manual Installation

Basic tools

Git Git is a free and open source distributed version control system. Git is designed to handle everything from small to large projects with speed and efficiency. To install Git, visit the official Git website. Download the appropriate version(you may use the latest one) for your operating system (Windows, macOS, Linux). Then run the installer and follow the installation instructions.

User `git --version` to check the version if you have a version installed.

Then configure your username and email using the commands:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python Install python 3.10 or latest. Follow the Python Download guide.

Use python --version to check the version if you have a version installed.

West Please use the west version equal or greater than 1.2.0

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a different␣
↪source using option '-i'.
# for example, in China you could try: pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple
pip install -U west
```

Build And Configuration System

CMake It is strongly recommended to use CMake version equal or later than 3.30.0. You can get latest CMake distributions from the official CMake download page.

For Windows, you can directly use the .msi installer like cmake-3.31.4-windows-x86_64.msi to install.

For Linux, CMake can be installed using the system package manager or by getting binaries from the official CMake download page.

After installation, you can use cmake --version to check the version.

Ninja Please use the ninja version equal or later than 1.12.1.

By default, Windows comes with the Ninja program. If the default Ninja version is too old, you can directly download the ninja binary and register the ninja executor location path into your system path variable to work.

For Linux, you can use your system package manager or you can directly download the ninja binary to work.

After installation, you can use ninja --version to check the version.

Kconfig MCUXpresso SDK uses Kconfig python implementation. We customize it based on our needs and integrate it into our build and configuration system. The Kconfiglib sources are placed under mcuxsdk/scripts/kconfig folder.

Please make sure *python* environment is setup ready then you can use the Kconfig.

Ruby Our build system supports IDE project generation for iar, mdk, codewarrior and xtensa to provide OOBE from build to debug. This feature is implemented with ruby. You can follow the guide ruby environment setup to setup the ruby environment. Since we provide a built-in portable ruby, it is just a simple one cmd installation.

If you only work with CLI, you can skip this step.

Toolchain MCUXpresso SDK supports all mainstream toolchains for embedded development. You can install your used or interested toolchains following the guides.

Toolchain	Download and Installation Guide	Note
Armgcc	Arm GNU Toolchain Install Guide	ARMGCC is default toolchain
IAR	IAR Installation and Licensing quick reference guide	
MDK	MDK Installation	
Armclang	Installing Arm Compiler for Embedded	
Zephyr	Zephyr SDK	
Codewarrior	NXP CodeWarrior	
Xtensa	Tensilica Tools	
NXP S32Compiler RISC-V Zen-V	NXP Website	

After you have installed the toolchains, register them in the system environment variables. This will allow the west build to recognize them:

Toolchain	Environment Variable	Example	Cmd Line Argument
Armgcc	ARMGCC_DIR	C:\armgcc for windows/usr for Linux. Typically arm-none-eabi-* is installed under /usr/bin	–toolchain armgcc
IAR	IAR_DIR	C:\iar\ewarm-9.60.3 for Windows/opt/iarsystems/bxarm-9.60.3 for Linux	–toolchain iar
MDK	MDK_DIR	C:\Keil_v5 for Windows.MDK IDE is not officially supported with Linux.	–toolchain mdk
Armclang	ARMCLANG_DIR	C:\ArmCompilerforEmbedded6.22 for Windows/opt/ArmCompilerforEmbedded6.21 for Linux	–toolchain mdk
Zephyr	ZEPHYR_SDK	c:\NXP\zephyr-sdk-<version> for windows/opt/zephyr-sdk-<version> for Linux	–toolchain zephyr
CodeWarrior	CW_DIR	C:\Freescale\CW MCU v11.2 for windowsCodeWarrior is not supported with Linux	–toolchain codewarrior
Xtensa	XCC_DIR	C:\xtensa\XtDevTools\install\tools\RI-2023.11-win32\XtensaTools for windows/opt/xtensa/XtDevTools/install/tools/RI-2023.11-Linux/XtensaTools for Linux	–toolchain xtensa
NXP S32Compiler RISC-V Zen-V	RISCVLLVM_DIR	C:\riscv-llvm-win32_b298_b298_2024.08.12 for Windows/opt/riscv-llvm-Linux-x64_b298_b298_2024.08.12 for Linux	–toolchain riscvllvm

- The <toolchain>_DIR is the root installation folder, not the binary location folder. For IAR, it is directory containing following installation folders:

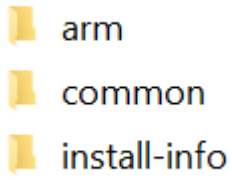

- MDK IDE using armclang toolchain only officially supports Windows. In Linux, please directly use armclang toolchain by setting ARMCLANG_DIR. In Windows, since most Keil users will install MDK IDE instead of standalone armclang toolchain, the MDK_DIR has higher priority than ARMCLANG_DIR.
- For Xtensa toolchain, please set the XTENSA_CORE environment variable. Here's an example list:

Device Core	XTENSA_CORE
RT500 fusion1	nxp_rt500_RI23_11_newlib
RT600 hifi4	nxp_rt600_RI23_11_newlib
RT700 hifi1	rt700_hifi1_RI23_11_nlib
RT700 hifi4	t700_hifi4_RI23_11_nlib
i.MX8ULP fusion1	fusion_nxp02_dsp_prod

- In Windows, the short path is used in environment variables. If any toolchain is using the long path, you can open a command window from the toolchain folder and use below command to get the short path: for %i in (.) do echo %~fsi

Tool installation check Once installed, open a terminal or command prompt and type the associated command to verify the installation.

If you see the version number, you have successfully installed the tool. Else, check whether the tool's installation path is added into the PATH variable. You can add the installation path to the PATH with the commands below:

- Windows: Open command prompt or powershell, run below command to show the user PATH variable.

```
reg query HKEY_CURRENT_USER\Environment /v PATH
```

The tool installation path should be C:\Users\xxx\AppData\Local\Programs\Git\cmd. If the path is not seen in the output from above, append the path value to the PATH variable with the command below:

```
reg add HKEY_CURRENT_USER\Environment /v PATH /d "%PATH%;C:\Users\xxx\AppData\
↪Local\Programs\Git\cmd"
```

Then close the command prompt or powershell and verify the tool command again.

- Linux:
  1. Open the $HOME/.bashrc file using a text editor, such as vim.
  2. Go to the end of the file.
  3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, export PATH="/Directory1:$PATH".
  4. Save and exit.
  5. Execute the script with source .bashrc or reboot the system to make the changes live. To verify the changes, run echo $PATH.

- macOS:
  1. Open the $HOME/.bash_profile file using a text editor, such as nano.
  2. Go to the end of the file.
  3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, export PATH="/Directory1:$PATH".
  4. Save and exit.
  5. Execute the script with source .bash_profile or reboot the system to make the changes live. To verify the changes, run echo $PATH.

Get MCUXpresso SDK Repo

Establish SDK Workspace To get the MCUXpresso SDK repository, use the west tool to clone the manifest repository and checkout all the west projects.

```
# Initialize west with the manifest repository
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests/ mcuxpresso-sdk

# Update the west projects
cd mcuxpresso-sdk
west update

# Allow the usage of west extensions provided by MCUXpresso SDK
west config commands.allow_extensions true
```

Install Python Dependency(If do tool installation manually) To create a Python virtual environment in the west workspace core repo directory mcuxsdk, follow these steps:

1. Navigate to the core directory:

   ```
   cd mcuxsdk
   ```

2. [Optional] Create and activate the virtual environment: If you don't want to use the python virtual environment, skip this step. **We strongly suggest you use venv to avoid conflicts with other projects using python.**

   ```
   python -m venv .venv

   # For Linux/MacOS
   source .venv/bin/activate

   # For Windows
   .\.venv\Scripts\activate
   # If you are using powershell and see the issue that the activate script cannot be run.
   # You may fix the issue by opening the powershell as administrator and run below command:
   powershell Set-ExecutionPolicy RemoteSigned
   # then run above activate command again.
   ```

   Once activated, your shell will be prefixed with (.venv). The virtual environment can be deactivated at any time by running deactivate command.

   Remember to activate the virtual environment every time you start working in this directory. If you are using some modern shell like zsh, there are some powerful plugins to help you auto switch venv among workspaces. For example, zsh-autoswitch-virtualenv.

3. Install the required Python packages:

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a␣
↪different source using option '-i'.
# for example, in China you could try: pip3 install -r mcuxsdk/scripts/requirements.txt -i https://pypi.
↪tuna.tsinghua.edu.cn/simple
pip install -r scripts/requirements.txt
```

Explore Contents

This section helps you build basic understanding of current fundamental project content and guides you how to build and run the provided example project in whole SDK delivery.

Folder View The whole MCUXpresso SDK project, after you have done the `west init` and `west update` operations follow the guideline at *Getting Started Guide*, have below folder structure:

Folder	Description
manifests	Manifest repo, contains the manifest file to initialize and update the west workspace.
mcuxsdk	The MCUXpresso SDK source code, examples, middleware integration and script files.

All the projects record in the Manifest repo are checked out to the folder `mcuxsdk/`, the layout of mcuxsdk folder is shown as below:

Folder	Description
arch	Arch related files such as ARM CMSIS core files, RISC-V files and the build files related to the architecture.
cmake	The cmake modules, files which organize the build system.
components	Software components.
devices	Device support package which categorized by device series. For each device, header file, feature file, startup file and linker files are provided, also device specific drivers are included.
docs	Documentation source and build configuration for this sphinx built online documentation.
drivers	Peripheral drivers.
examples	Various demos and examples, support files on different supported boards. For each board support, there are board configuration files.
middleware	Middleware components integrated into SDK.
rtos	Rtos components integrated into SDK.
scripts	Script files for the west extension command and build system support.
svd	Svd files for devices, this is optional because of large size. Customers run `west manifest config group.filter +optional` and `west update mcux-soc-svd` to get this folder.

Examples Project The examples project is part of the whole SDK delivery, and locates in the folder `mcuxsdk/examples` of west workspace.

Examples files are placed in folder of `<example_category>`, these examples include (but are not limited to)

- demo_apps: Basic demo set to start using SDK, including hello_world and led_blinky.
- driver_examples: Simple applications that show how to use the peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI transfer using DMA).

Board porting layers are placed in folder of _boards/<board_name> which aims at providing the board specific parts for examples code mentioned above.

Run a demo using MCUXpresso for VS Code

This section explains how to configure MCUXpresso for VS Code to build, run, and debug example applications. This guide uses the hello_world demo application as an example. However, these steps can be applied to any example application in the MCUXpresso SDK.

Build an example application This section assumes that the user has already obtained the SDK as outlined in *Get MCUXpresso SDK Repo*.

To build an example application:

1. Import the SDK into your workspace. Click **Import Repository** from the **QUICKSTART PANEL**.

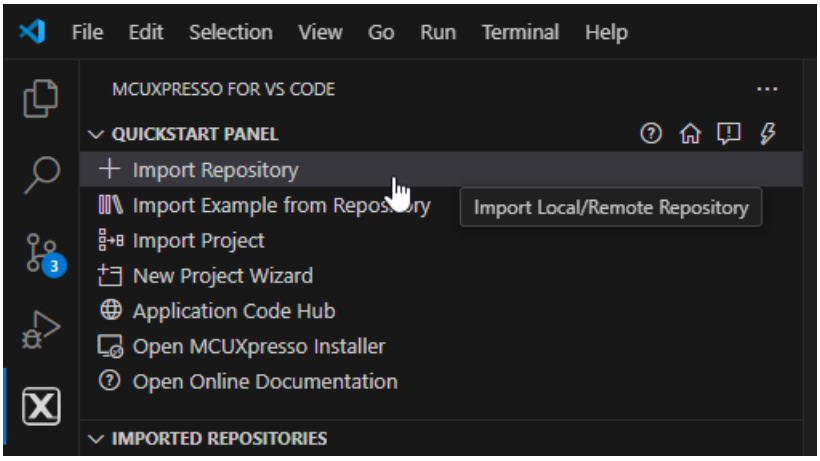

Note: You can import the SDK in several ways. Refer to MCUXpresso for VS Code Wiki for details.

Select **Local** if you've already obtained the SDK as seen in *Get MCUXpresso SDK Repo*. Select your location and click **Import**.

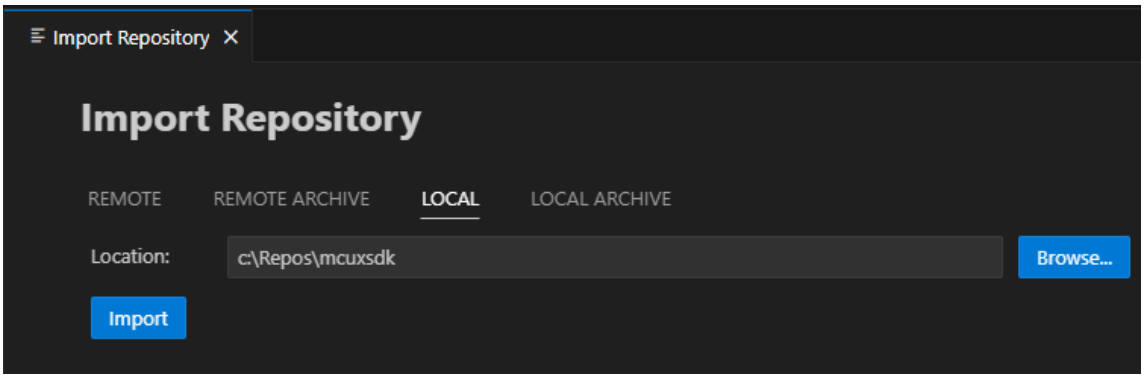

2. Click **Import Example from Repository** from the **QUICKSTART PANEL**.

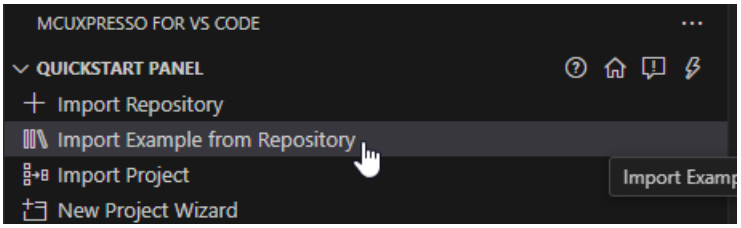

In the dropdown menu, select the MCUXpresso SDK, the Arm GNU Toolchain, your board, template, and application type. Click **Import**.

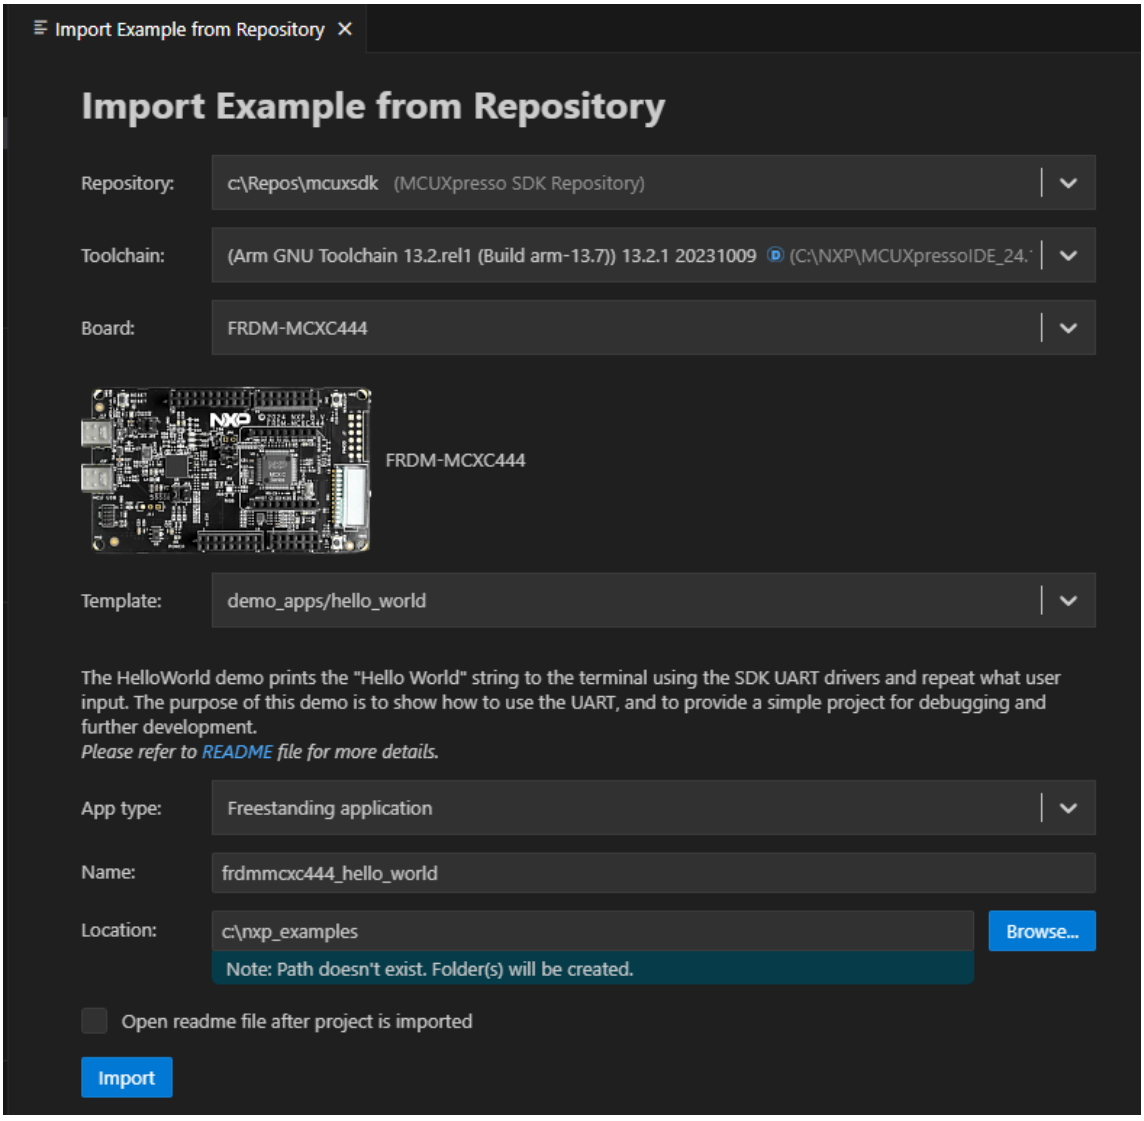

Note: The MCUXpresso SDK projects can be imported as **Repository applications** or **Freestanding applications**. The difference between the two is the import location. Projects imported as Repository examples will be located inside the MCUXpresso SDK, whereas Freestanding examples can be imported to a user-defined location. Select between these by designating your selection in the **App type** dropdown menu.

3. VS Code will prompt you to confirm if the imported files are trusted. Click **Yes**.
4. Navigate to the **PROJECTS** view. Find your project and click the **Build Project** icon.

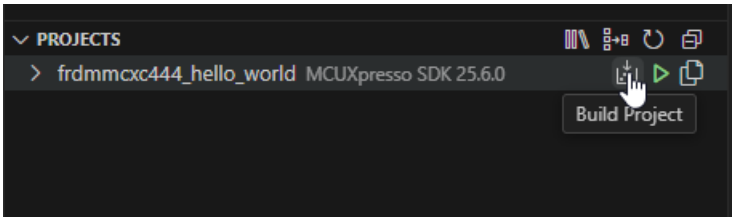

The integrated terminal will open at the bottom and will display the build output.

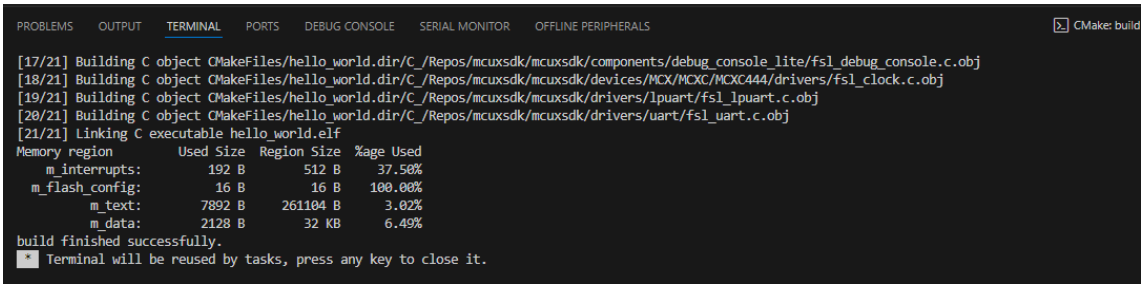

Run an example application **Note:** for full details on MCUXpresso for VS Code debug probe support, see MCUXpresso for VS Code Wiki.

1. Open the **Serial Monitor** from the VS Code's integrated terminal. Select the VCom Port for your device and set the baud rate to 115200.

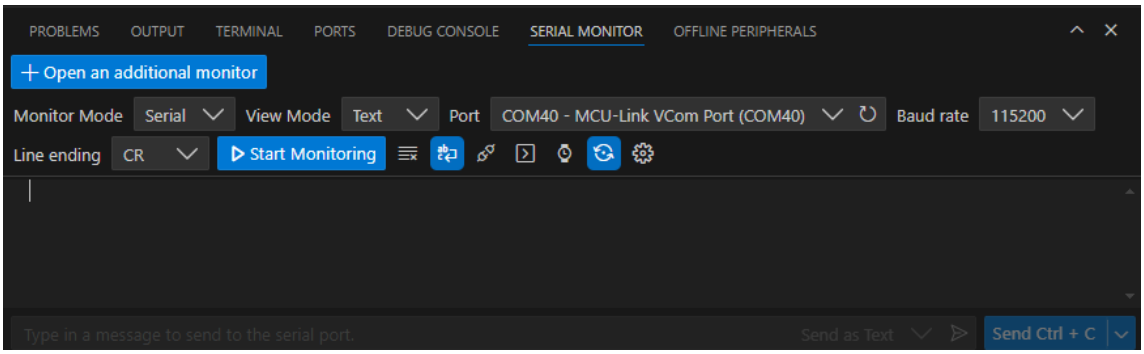

2. Navigate to the **PROJECTS** view and click the play button to initiate a debug session.

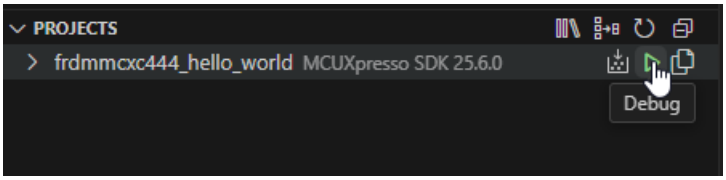

The debug session will begin. The debug controls are initially at the top.

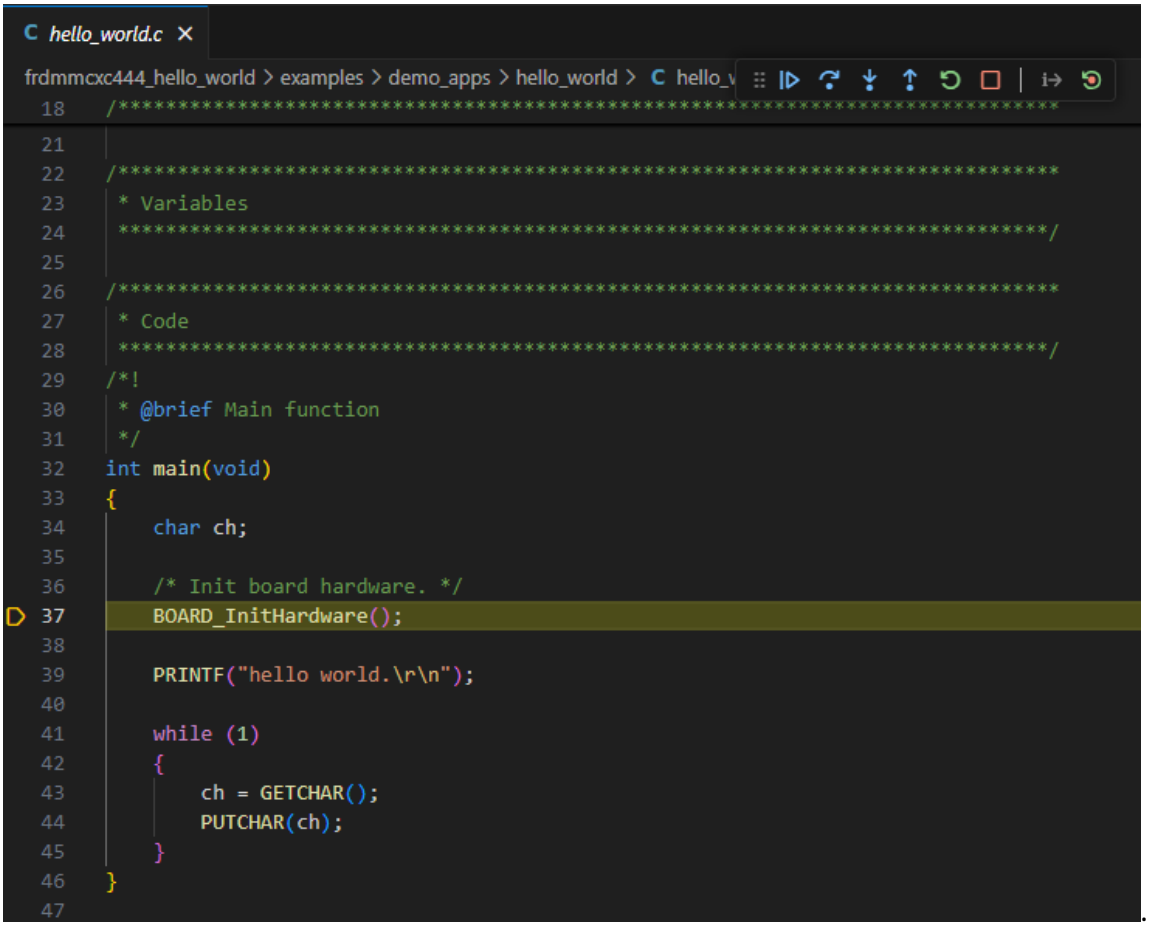

3. Click **Continue** on the debug controls to resume execution of the code. Observe the output on the **Serial Monitor**.

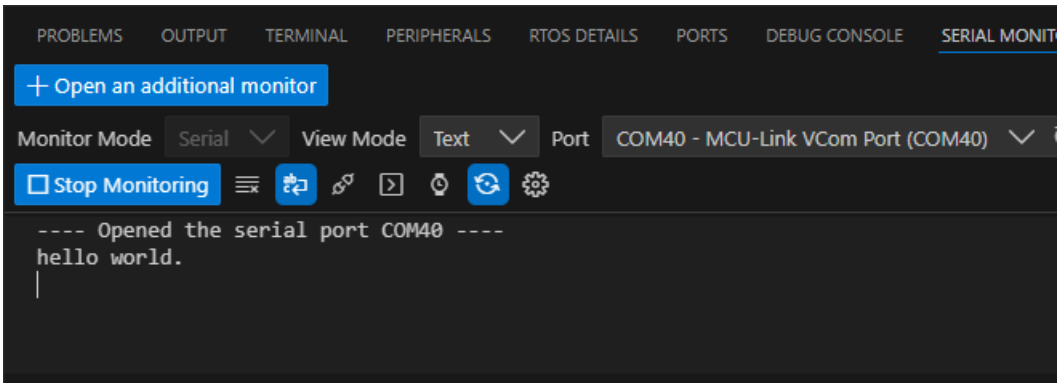

Running a demo using ARMGCC CLI/IAR/MDK

Supported Boards Use the west extension `west list_project` to understand the board support scope for a specified example. All supported build command will be listed in output:

```
west list_project -p examples/demo_apps/hello_world [-t armgcc]

INFO: [  1][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
↪evk9mimx8ulp -Dcore_id=cm33]
INFO: [  2][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
↪evkbimxrt1050]
INFO: [  3][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
```

(continues on next page)

(continued from previous page)

```
↪evkbmimxrt1060]
INFO: [  4][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
↪evkbmimxrt1170 -Dcore_id=cm4]
INFO: [  5][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
↪evkbmimxrt1170 -Dcore_id=cm7]
INFO: [  6][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
↪evkcmimxrt1060]
INFO: [  7][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b␣
↪evkmcimx7ulp]
...
```

The supported toolchains and build targets for an example are decided by the example-self example.yml and board example.yml, please refer Example Toolchains and Targets for more details.

Build the project Use west build -h to see help information for west build command. Compared to zephyr's west build, MCUXpresso SDK's west build command provides following additional options for mcux examples:

- --toolchain: specify the toolchain for this build, default armgcc.
- --config: value for CMAKE_BUILD_TYPE. If not provided, build system will get all the example supported build targets and use the first debug target as the default one. Please refer Example Toolchains and Targets for more details about example supported build targets.

Here are some typical usages for generating a SDK example:

```
# Generate example with default settings, default used device is the mainset MK22F51212
west build -b frdmk22f examples/demo_apps/hello_world

# Just print cmake commands, do not execute it
west build -b frdmk22f examples/demo_apps/hello_world --dry-run

# Generate example with other toolchain like iar, default armgcc
west build -b frdmk22f examples/demo_apps/hello_world --toolchain iar

# Generate example with other config type
west build -b frdmk22f examples/demo_apps/hello_world --config release

# Generate example with other devices with --device
west build -b frdmk22f examples/demo_apps/hello_world --device MK22F12810 --config release
```

For multicore devices, you shall specify the corresponding core id by passing the command line argument -Dcore_id. For example

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config␣
↪flexspi_nor_debug
```

For shield, please use the --shield to specify the shield to run, like

```
west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪Dcore_id=cm33_core0
```

Sysbuild(System build) To support multicore project building, we ported Sysbuild from Zephyr. It supports combine multiple projects for compilation. You can build all projects by adding --sysbuild for main application. For example:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪id=cm7  --config flexspi_nor_debug --toolchain=armgcc -p always
```

For more details, please refer to System build.

Config a Project Example in MCUXpresso SDK is configured and tested with pre-defined configuration. You can follow steps blow to change the configuration.

1. Run cmake configuration

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Please note the project will be built without `--cmake-only` parameter.

2. Run guiconfig target

```
west build -t guiconfig
```

Then you will get the Kconfig GUI launched, like

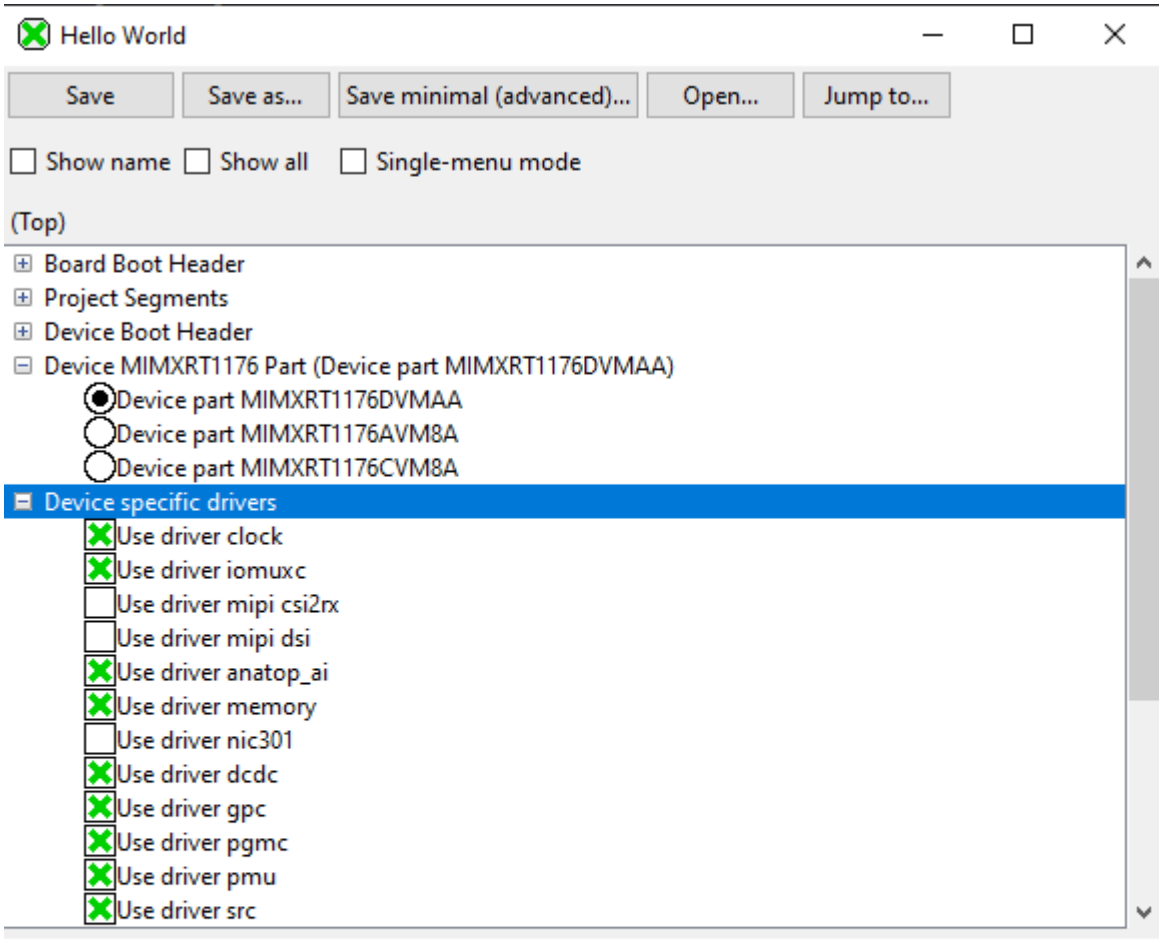


```
Kconfig definition, with parent deps. propagated to 'depends on'
===============================================================

At D:/sdk_next/mcuxsdk\devices\../devices/RT/RT1170/MIMXRT1176\drivers/Kconfig:5
Included via D:/sdk_next/mcuxsdk/examples/demo_apps/hello_world/Kconfig:6 ->
D:/sdk_next/mcuxsdk/Kconfig.mcuxpresso:9 -> D:/sdk_next/mcuxsdk\devices/Kconfig:1
-> D:/sdk_next/mcuxsdk\devices\../devices/RT/RT1170/MIMXRT1176/Kconfig:8
Menu path: (Top)

menu "Device specific drivers"
```

You can reconfigure the project by selecting/deselecting Kconfig options.

After saving and closing the Kconfig GUI, you can directly run `west build` to build with the new configuration.

Flash ***Note***: Please refer Flash and Debug The Example to enable west flash/debug support.

Flash the hello_world example:

```
west flash -r linkserver
```

Debug Start a gdb interface by following command:

```
west debug -r linkserver
```

Work with IDE Project The above build functionalities are all with CLI. If you want to use the toolchain IDE to work to enjoy the better user experience especially for debugging or you are already used to develop with IDEs like IAR, MDK, Xtensa and CodeWarrior in the embedded world, you can play with our IDE project generation functionality.

This is the cmd to generate the evkbmimxrt1170 hello_world IAR IDE project files.

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config␣
↪flexspi_nor_debug -p always -t guiproject
```

By default, the IDE project files are generated in mcuxsdk/build/<toolchain> folder, you can open the project file with the IDE tool to work:

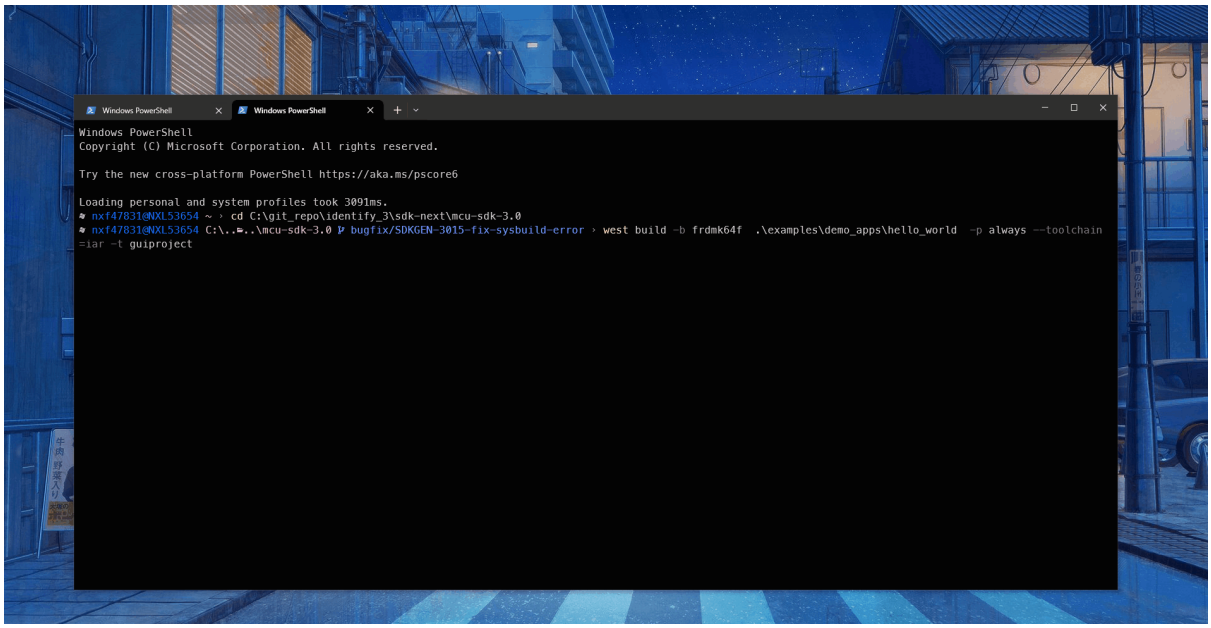

Note, please follow the *Installation* to setup the environment especially make sure that *ruby* has been installed.

1.4 Release Notes

This is an early adopter release provided as preview for development with pre-production devices.

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see MCUXpresso-SDK: Software Development Kit for MCUXpresso.

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC,PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- IAR Embedded Workbench for Arm, version is 9.60.4
- MCUXpresso IDE, Rev. 25.06.xx
- MCUXpresso for VS Code v25.09
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices
MCX-W72-EVK	MCXW727AMFTA, **MCXW727CMFTA**, MCXW727DMFTA

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

IEEE 802.15.4 MACPHY Software The IEEE 802.15.4 software includes:

- The IEEE 802.15.4 PHY supporting Thread 1.3.x and Thread 1.4.0 with OpenThread, and Matter over Thread
- IEEE 802.15.4 MAC supporting Zigbee
- Simple MAC (SMAC)
- Low-level IEEE 802.15.4 radio mode test software
- Multiprotocol support (Bluetooth LE and IEEE 802.15.4)
- Experimental support for dual PAN mode (two IEEE 802.15.4 networks on a single channel or two channels)

The IEEE 802.15.4 PHY and MAC software implementation is based on IEEE Standard 802.15.4-2015.

Wireless zigbee stack This release of the NXP Zigbee stack supports the following generic Zigbee protocol features:

- Zigbee Pro R22
- Zigbee 3.0

- Zigbee Green Power – Proxy and Combo
- Base Device Behavior (BDB) 3.1
- Zigbee Cluster Library (ZCL) 8

The SDK includes the following sample Zigbee 3.0 applications that allow the end user to get quickly up to speed with the development of Zigbee applications on NXP platforms:

- Zigbee Coordinator
- Zigbee Router
- Zigbee End Device

GenFSK link layer The Generic FSK protocol enables radio operation using a custom GFSK/GMSK or MSK modulation format.

Main Features supported:

- Highly configurable packet structure
- Optimized Sequence Command Set
- High-precision timebase to maintain network timing
- Two timer-compare mechanisms for Interrupt Generation and Sequence Launching
- Hardware automation for packet transmit and receive, CRC and Whitening
- Up to four network addresses to synchronize to, can be 8-bit, 16-bit or 32-bit
- Packet Lengths up to 2047 Bytes
- Support complex auto-sequence, like CCA before TX, Auto-ACK, TR.
- Many operating modes can support the sending and receiving of multiple protocol packets, such as Bluetooth LE.

Wireless XCVR The XCVR component provides a base Transceiver Driver for the 2.4 GHz narrowband radio.

Bluetooth LE Controller

- Main features supported:
  - Peripheral Role
  - Central Role
  - Multiple PHYs (1 Mbps, 2 Mbps, Coded PHY)
  - Asymmetric Connections
  - Public/Random/Static Addresses
  - Network/Device Privacy Modes
  - Extended Advertising
  - Extended Scanning
  - Passive/Active Scanning
  - LE Encryption
  - LE Ping Procedure
  - HCI Test Interface

  - UART Test Interface
  - Randomized Advertising Channel Indexing
  - Sleep Clock Accuracy Update - Mechanism
  - ADI Field in Scan Response Data
  - HCI Support for Debug Keys in LE - Secure Connections
- Main capabilities supported:
  - Simultaneous scanning 1 Mbps and Long Range
  - Scanning and advertising in parallel
  - 24 connections as a central role
  - 24 connections as a peripheral role
  - Any combination of central and peripheral roles (24 connections maximum)
  - 8 connections with a 7.5 ms connection interval
  - Two advertising sets in parallel (\Four adv set as Early Access Release).
  - 26 Accept List entries
  - 36 Resolvable Private Address (RPA) entries
  - Up to two Chain Packets per Extended Advertising set
  - Enhanced Notification on end of - Scanning/Advertising/Connection events
  - Connection event counters associated to Bluetooth LE packet reception
  - Timestamp associated to Bluetooth LE packet reception
  - RF channel info associated to Bluetooth LE packet reception
  - NXP proprietary Bluetooth LE Handover feature
  - Decision Based Advertising Filtering (DBAF)
  - Advertising Coding Selection (ACS)
  - Periodic Advertising with Responses (PAwR) Additional features supported for KW47 and MCX W72 devices:
  - Channel Sounding

    Note: Project configuration enabling Experimental features on KW45 and MCX W71 requires the Radio Subsystem (NBU) Firmware to be reprogrammed with the firmware provided in the SDK under |*middleware*|*wireless*|*ble_controller*|*bin*|*experimental*|. For NBU programming steps, see the *EVK Quick Start Guide* and Secure Provisioning SDK (SPSDK) documentation.

    Project configurations that require usage of the Bluetooth LE controller including all Bluetooth LE examples require the Radio Subsystem (NBU) Firmware to be re-programmed with the firmware provided in the SDK under middleware\wireless\ble_controller\bin.

Wireless Bluetooth LE host stack and applications The Bluetooth LE Host Stack component provides an implementation for a Bluetooth LE mandatory and some optional, proprietary, and experimental features. The Bluetooth LE Host Stack component provides application examples, services, and profiles.

Main features supported:

- Automotive Compliance
- MISRA Compliance

- HIS CCM <= 20
- Advanced Secure Mode
- Enhanced ATT
- GATT Caching
- Bluetooth LE Host GCC Libraries
- Bluetooth LE Host IAR Libraries
- Bluetooth LE Host Peripheral Libraries
- Bluetooth LE Central Libraries
- Bluetooth LE Host Full Host Features Libraries
- Bluetooth LE Host Optional Features Libraries
- Bluetooth LE Host Mandatory Features Libraries
- Bare-metal and FreeRTOS Support
- Bluetooth LE Privacy Support
- CCC Sample Applications
- Enhanced Notifications
- Dynamic Database
- OTA Support - Sample Applications
- Decision based Advertising Filtering (DBAF) - Experimental feature
- Advertising Coding Selection (ACS) - Experimental feature
- Channel Sounding - Experimental feature with controlled access (contact your NXP representative for access)
- Bluetooth LE Controller main and experimental features and capabilities described below are supported by the Bluetooth LE Host.

  Note: For evaluating DBAF and ACS experimental features, replace the Bluetooth LE Host default example projects libraries with the libraries from the *SDK* folder *..\middleware\wireless\bluetooth\host\lib_exp* and enable the features in the application. The Radio Subsystem (NBU) Firmware with experimental features is required.

Wireless Localization Localization

Wireless Connectivity Framework The Connectivity Framework is a software component that provides hardware abstraction modules to the upper layer connectivity stacks and components. It also provides a list of services and APIs, such as, Low power, Over the Air (OTA) Firmware update, File System, Security, Sensors, Serial Connectivity Interface (FSCI), and others. The Connectivity Framework modules are located in the *middleware\wireless\framework SDK* folder.

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

TF-M Trusted Firmware - M Library

PSA Test Suite Arm Platform Security Architecture Test Suite

NXP PSA CRYPTO DRIVER PSA crypto driver for crypto library integration via driver wrappers

secure_storage secure_storage

EdgeLock SE050 Plug and Trust Middleware Secure subsystem library - SSS APIs

Multicore Multicore Software Development Kit

mbedTLS mbedtls SSL/TLS library v3.x

mbedTLS mbedtls SSL/TLS library v2.x

LittleFS LittleFS filesystem stack

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_nam
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_templat
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

What is new

The following changes have been implemented compared to the previous SDK release version (25.09.00-pvw2).

- **Bluetooth LE Host Stack and Applications**

Added

- **RAS/RAP PTS** 8.7.4 test support added in Localization Sample applications.
- Support for CS start procedure while the previous procedure is not completed; old procedure replaced with the new one.
- Support for arm gcc for ncp_loc_reader.

Improved

- Localization Sample Applications Ram partition.
- **RAS/RAP** profile and service.
- Various sample applications have been updated.

Fixed

- Privacy setting issue on ncp_loc_reader.
- Extended NBU FSCI message handling issue.
- Ble_shell updated to set the Random Static Address properly.
- Always set the Advertising Legacy Set handle if the legacy API was used.
- fsci_bridge and w_uart_host memory leak.
- PAWR parameters in PeriodicSyncTransferReceived are now parsed correctly.
- Ensure an RPA/NRPA is properly set from the application to enable a central using Controller Privacy to connect to unbonded peripherals.
- CS algorithm buffer overwrite issue during Connection Handover application.
- Various sample applications bug fixes applied.
- Pass correct Codded PHY (S2) to Channel Sounding Set Procedure Parameters.

Changed

- Merged Gap_SetExtAdvertisingParameters and Gap_SetExtAdvertisingParametersV2 into **Gap_SetExtAdvertisingParameters**.
- ce_status_buffer type changed to int32_t.
- BLE_Shell prints Random Static address as identity address instead of the Public Device Address.
- Details can be found in github repository **nxp-mcuxpresso/mcuxsdk-middleware-bluetooth-host/CHANGELOG.md**.

- **Bluetooth LE controller**
  - Channel sounding updates:
    - Handle Procedure collision between LLCP CS Procedure and non-CS Procedure and between two LLCP CS procedures.
    - Start Feature Exchange autonomously if needed prior initiating the CS Capability Exchange Procedure.
    - Fix CS Procedure aborted with CS_SYNC=2Mbps and T_PM=40.
    - Fix phase accuracy bias when CFO is high [-50ppm, +50ppm].

    - Fix RTT bias due to chip sample RC Calibration imprecision. Chip IFR now contains appropriate calibration value used by software to compensate associated delay.
    - Fix wrong PRBS payload coding in HADM test mode.
    - Fix testmode generating more than one subevent with subevt_int=0 and more than 160 steps.
    - Fix CS handover regression due to MISRA fix.
    - Use precompiled libraries for CS support.
  - PAwR/PAST updates:
    - Window widening for PAwR responses supports the worst clock accuracy (500ppm) to avoid interoperability issues.
    - Autonomous Feature Exchange is done prior PAST Procedure.
  - Fix Connection Update state machine on peripheral side after Connection Update rejection.
  - Fix to handle correctly concurrent Connection Update procedures initiated by peer and local devices on different connections.
  - Support 4 Advertising set with optimized Advertising placement when Advertising intervals are multiple of each other.
- **Transceiver drivers (XCVR)**
  - Added support for Bluetooth LE Channel Sounding.
  - Added API to control PA ramp type and duration.
- **Connectivity framework**
  - **Major Changes**
    - [wireless_mcu][wireless_nbu] Introduced PLATFORM_Get32KTimeStamp() API, available on platforms that support it.
    - [RNG] Switched to using a workqueue for scheduling seed generation tasks.
    - [Sensors] Integrated workqueue to trigger temperature readings on periodic timer expirations.
    - [wireless_nbu] Removed outdated configuration files from wireless_nbu/configs.
    - [SecLib_RNG][PSA] Added a PSA-compliant implementation for SecLib_RNG. This is an experimental feature and should be used with caution.
    - [wireless_mcu][wireless_nbu] Implemented PLATFORM_SendNBUXtal32MTrim() API to transmit XTAL32M trimming values to the NBU.
  - **Minor Changes (no impact on application)**
    - [MWS] Migrated the Mobile Wireless Standard (MWS) service to the public repository. This service manages coexistence between connectivity protocols such as BLE, 802.15.4, and GenFSK.
    - [HWParameter][NVM][SecLib_RNG][Sensors] Addressed various MISRA compliance issues across multiple modules.
    - [Sensors] Applied a filtering mechanism to temperature data measured by the application core before forwarding it to the NBU, improving data reliability.
    - [Common] Relocated the GetPowerOfTwoShift() function to a shared module for broader accessibility across components.
    - [RNG] Resolved inconsistencies in RNG behavior when using the fsl_adapter_rng HAL by aligning it with other API implementations.

    * [SecLib] Updated the AES CMAC block counter in AES_128_CMAC() and AES_128_CMAC_LsbFirstInput() to support data segments larger than 4KB.
    * [SecLib] Utilized sss_sscp_key_object_free() with kSSS_keyObjFree_KeysStoreDefragment to avoid key allocation failures.
    * [WorkQ] Increased workqueue stack size to accommodate RNG usage with mbedtls.
    * [wireless_mcu][ot] Suppressed chip revision transmission when operating with nbu_15_4.
    * [platform][mflash] Ensured proper address alignment for external flash reads in PLATFORM_ReadExternalFlash() when required by platform constraints.
    * [RNG] Corrected reseed flag behavior in RNG_GetPseudoRandomData() after reaching gRngMaxRequests_d threshold.
    * [platform][mflash] Fixed uninitialized variable issue in PLATFORM_ReadExternalFlash().
    * [platform][wireless_nbu] Fixed an issue on KW47 where PLATFORM_InitFro192M incorrectly reads IFR1 from a hardcoded flash address (0x48000), leading to unstable FRO192M trimming. The function is now conditionally compiled for KW45 only.

Details can be found in *CHANGELOG.md*

- **IEEE 802.15.4**
  - API cleanup: remove unmaintained slotted support
  - support for MAC split architecture
    * fix condition to enter low power
  - minor fixes and stability improvements for connectivity_test example application
  - experimental support for mcxw72 NBU core
- **Zigbee**
  - NCP Host Updates and fixes
  - R23 fixes
    * Device can't establish a new TCLK through ZDO Start Key Update procedure
    * Security Start Key Update Request is not relayed to joining ZED in multi hop key negotiation
  - propagate APS ACK to end-user application
  - documentation updates

Known issues

The following are the known issues in this release.

New project wizard compile failure

The following components request the user to manually select other components that they depend upon in order to compile. These components depend on several other components and the New Project Wizard (NPW) is not able to decide which one is needed by the user.

Note: xxx means core variants, such as, cm0plus, cm33, cm4, cm33_nodsp.

Also for low-level adapter components, currently the different types of the same adapter cannot be selected at the same time. For example, if there are two types of timer adapters, gpt_adapter and pit_adapter, only one can be selected as timer adapter in one project at a time. Duplicate implementation of the function results in an error.

Only FreeRTOS is tested for RTOS support

This release only supports the FreeRTOS kernel and a bare-metal non-preemptive task scheduler.

Disabled pairing and bonding for most sensor applications

Most sensor applications have pairing and bonding disabled to allow a faster interaction with mobile applications. These two security features can be enabled in the app_preinclude.h header file.

Bluetooth LE

Most sensor applications have pairing and bonding disabled to allow a faster interaction with mobile applications. These two security features can be enabled in the app_preinclude.h header file.

Bluetooth LE controller:

- The maximum Advertising data length is limited to 800 bytes.
- Missing chained packet TX when coded phy is used on multiple Advertising sets and Advertising interval is small.
- Issue with packet time restrictions after phy update (packet payload too long).
- Missing chained packets during scanning.
- Need to add a dummy nbu request to wake-up NBU core during asynchronous wakeup to avoid low power race condition issue (ie: for NBU ramlog dump from shared memory).
- Need to stop/restart scan before RPA timeout when controller privacy is enabled, else address resolution may not work properly.

Periodic Advertising with Responses (PAwR):

- Periodic Advertising with Response (PAwR) is not supported with the configuration “Subevent Interval = Number of Response Slots * Response Slot Spacing”.
- Unoptimized Periodic Advertising placement with Connection events.
- PAwR Advertiser is not able to report multiple periodic Advertising responses in a same subevent.

KW45/MCXW71: No specific issues.

KW47/MCXW72: Channel Sounding (CS): Limitations:

- RTT with Sounding Sequence is not supported.
- TX SNR is not supported.
- LE 2M 2BT PHY is not supported.
- Maximum 6 Channel Sounding procedures are supported in parallel.
- Scheduling of activities may be non optimal when multiple Channel Sounding procedures are running in parallel.

- Phase measurement bias is within certification range (<1.7x2πns) with KW47 EVK board. However, if different PCB or antenna matching is used, some bias may appear due to increased delay.
- Channel Sounding is not supported with internal FRO32. Known issues:
- When CS_SYNC=2Mbps, sensitivity drops at –85dBm (vs –95dBm for 1Mbps).
- NADM may report false positive attacks when using localization board at 2Mbps.
- When CS Subevents are configured very close from each other (<700us), some Subevents may be aborted with reason 0x3.
- When CS offset is configured too close from ACL anchor point, the anchor point may not be served (TX on central or RX on peripheral will not happen). Ideally, CS Offset should be configured greater than 1ms.
- Wireless_ranging stability issue in test mode 2Mbps with RTT random sequence payload 128 bits.
- RF-PHY receiver testcases failing: RF-PHY/RCV-LE/CA/BV-7-C, RF-PHY/RCV-LE/CA/BV-13-C, RF-PHY/RCV-LE/CA/BV-30-C, RF-PHY/RCV-LE/CA/BV-31-C.
- RTT bias compensation:
  - For parts not properly configured at production (IFR blank), RTT bias may not be compensated properly. Consequently, an inaccuracy of +/-2m may be observed.
  - Temperature variation: RTT variation of +/-2m is observed based on temperature.

Other limitations

- The following Connectivity Framework configurations are Experimental and not recommended for mass production:
  - Power down on application power domain.
- A hardfault can be encountered when using fsl_component_mem_manager_light.c memory allocator and shutting down some unused RAM banks in low power. It is due to a wrong reinitialization of ECC RAM banks. To be sure not to reproduce the issue, gPlatformShutdownEccRamInLowPower should be set to 0.
- GenFSK Connectivity_test application is not operational with Low Power enabled.
- Serial manager is only supported on UART (not I2C nor SPI).
- The --no-warn-rwx-segments cannot been recognized on legacy MCUXpresso IDE versions.

  The --no-warn-rwx-segments option in MCUXpresso projects should be manually removed from the project settings if someone needs to use legacy (< 11.8.0) MCUXpresso IDE versions
- If the FRO32K is configured as the clock source of the CM33 Core then the debug session will block in both IAR, MCUX CMSIS-DAP while debugging. Use a lower debug wire speed, for example 1 MHz instead of the default one.

  In IAR, the option is in **Runtime Checking** -> **Debugger** -> **CMSIS DAP** -> **Interface** -> **Interface speed**.

  In MCUXpresso IDE, the option is in **LinkServer Debugger** -> **Advanced Settings** -> **Wire-speed (Hz)**.
- Low power reference design applications are not supported for the armgcc toolchain from zip archives. Please use MCUXpresso IDE or IAR toolchains for development using these applications.

Latest MCUX IDE 24.9.25 cannot support KW47 multicore compiling

The latest MCUX IDE 24.9.25 cannot support KW47 multicore compiling, users need to upgrade to the Linkserver_24.10.22 or higher version, and change the LinkServer path configuration in the MCUX IDE. Two ways to change the LinkerSever path in the MCUX IDE.

Option 1 (recommended): Using the custom Path

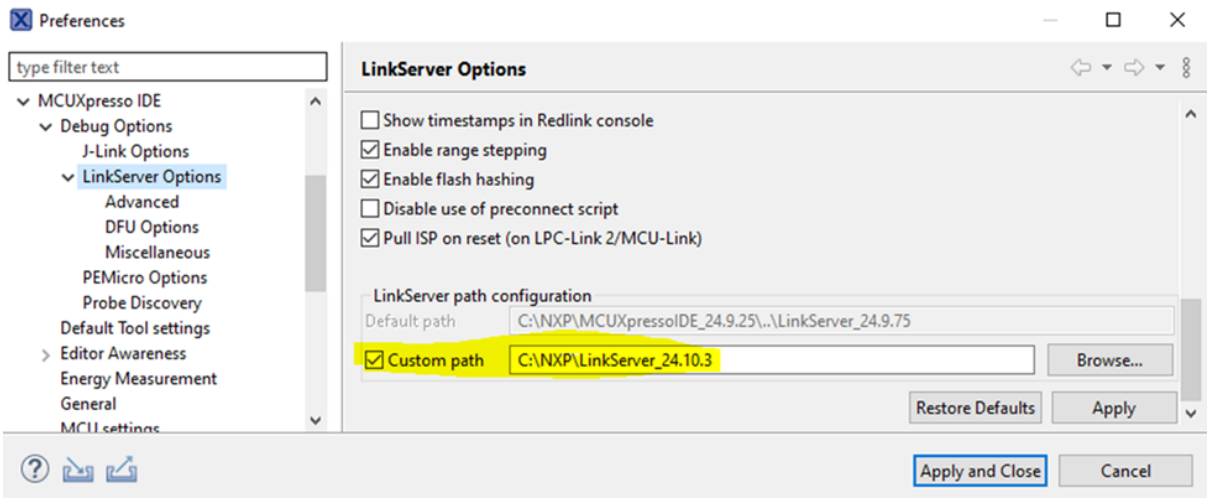

Option 2: Using the command-line to change the settings

1. Close the MCUXpresso IDE if it is open.
2. Execute the following command:

```
<path_to_MCUXpressoIDE_installation_folder>\ide\mcuxpressoide -application com.nxp.mcuxpresso.
↪headless.application -nosplash -run set.config.preference com.nxp.mcuxpresso.core.debug.support.
↪linkserver:linkserver.path.default_path=<path_to_LinkServer_installation_folder>
```

   where:

   - <path_to_MCUXpressoIDE_installation_folder> is the folder where the MCUXpresso IDE is installed.
   - <path_to_LinkServer_installation_folder> is the folder where the new/custom LinkServer is installed.

Example:

```
C:\NXP\MCUXpressoIDE_24.9.25\ide\mcuxpressoide -application com.nxp.mcuxpresso.headless.application -
↪nosplash -run set.config.preference com.nxp.mcuxpresso.core.debug.support.linkserver:linkserver.path.
↪default_path=c:\NXP\LinkServer_24.10.15
```

Examples hello_world_ns, secure_faults_ns, and secure_faults_trdc_ns have incorrect library path in GUI projects

When the affected examples are generated as GUI projects, the library linking the secure and non-secure worlds has an incorrect path set. This causes linking errors during project compilation.

Examples: hello_world_ns, hello_world_s, secure_faults_ns, secure_faults_s, secure_faults_trdc_ns, secure_faults_trdc_s

Affected toolchains: mdk, iar

Workaround: In the IDE project settings for the non-secure (_ns) project, find the linked library (named hello_world_s_CMSE_lib.o, or similar, depending on the example project) and replace

the path to the library with <build_directory>/<secure_world_project_folder>/<IDE>/, replacing the subdirectory names with the build directory, the secure world project name, and IDE name.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version

CACHE LPCAC

[2.1.1]

- Bug Fixes
  - MISRA C-2012 issue fixed: rule 10.1.

[2.1.0]

- Bug Fixes
  - Deleted L1CACHE_EnableCodeCacheWriteBuffer function because of no enable bit in register CPCR2.

[2.0.0]

- Initial version.

CCM32K

[2.2.0]

- Improvements
  - Removed wait loops in CCM32K's APIs.

[2.1.1]

- Improvements
  - Updated the judgment conditions in the CCM32K_Enable32kFro() API to avoid code stuck in the while loop.

[2.1.0]

- New Features
  - Added clock monitor control function group and clock gate control function group to support some devices that support clock monitor and clock gate control.

[2.0.0]

- Initial version.

CLOCK

[2.2.5]

- Improvements:
  - Added comments for ERR052742: FRO6M clock is not stable.

[2.2.4]

- Improvements:
  - Fixed the MSG issue that overrunning array fro192mFreq of 5 4-byte elements at element index 7.

[2.2.3]

- New Features:
  - Provide the new API CLOCK_IsFIRCAutoTrimLocked to check whether FIRC auto trim locked to target frequency range.

[2.2.2]

- Bug fix:
  - Updated the SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY for Core1.

[2.2.1]

- Bug fix:
  - Fixed the GPIO_PinInit function may cause the hardfault in clock driver when pass the GPIOD as the fist parameter.

[2.2.0]

- Improvements
  - Added the support for TPM2.

[2.1.0]

- Improvements
  - Provide the FSL_SDK_FORCE_CLK_DRIVER_NS_ACCESS macro to force use the none secure address even the trustzone secure mode is enabled.

[2.0.0]

- Fixed the MISRA issues.

[1.1.0]

- Some minor fixes.

[1.0.0]

- Initial version.

CMC

[2.4.3]

- Improvements
  - Add timeout for while loop code.

[2.4.2]

- Improvements
  - Add support for specific KW4x device variants
    - Let kCMC_SecurityViolationReset depend on whether CMC_SRS_SECVIO_MASK definition exists or not.
    - CMC_LockWriteOperationToBootRomStatusReg and CMC_CheckBootRomStatusRegWriteLocked exist only if FSL_FEATURE_CMC_HAS_NO_BOOTROM_LOCK_REGISTER is not defined

[2.4.1]

- Improvements
  - Clear SCB SCR[SLEEPDEEP] bitfield after wakeup.

[2.4.0]

- New Features
  - Added new interface to support CMC[DIER] register.
- Improvements
  - Updated _cmc_system_sram_arrays enumeration to support some devices that provide more sram bank.

[2.3.1]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.7;

[2.3.0]

- Improvements
  - Added new functions to support controls of BLR register.
  - Updated CMC_GetBootRomStatus() to support some devices that equipped multiple BootROM status registers.
  - Added CMC_WriteBootRomStatusReg() to write BootRom Status register.

[2.2.1]

- Improvements
  - For some devices, SRS_JTAG bit is reserved. Added a feature macro to adapt to different devices.

[2.2.0]

- Improvements
  - Updated _cmc_system_sram_arrays enumeration, make it more universal.
  - Updated SRAM related APIs(CMC_PowerOffSRAMAllMode(), CMC_PowerOffSRAMLowPowerOnly(), CMC_PowerOnSRAMAllMode(), CMC_PowerOnSRAMLowPowerOnly()), due to updates of registers' names.
  - Renamed CMC_GetBootConfigPinLogic() to CMC_GetISPMODEPinLogic().
  - Renamed CMC_ClearBootConfig() to CMC_ClearISPModePinLogic().
  - Updated enumeration _cmc_power_mode_protection due to some macros are deleted in header file.

[2.1.0]

- Improvements
  - Added some macros to separate the scenes that some registers are reserved in some devices.

[2.0.0]

- Initial version.

COMMON

[2.6.0]

- Bug Fixes
  - Fix CERT-C violations.

[2.5.0]

- New Features
  - Added new APIs InitCriticalSectionMeasurementContext, DisableGlobalIRQEx and EnableGlobalIRQEx so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
  - Enable irqs that mount under irqsteer interrupt extender.

[2.4.2]

- Improvements
  - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
  - Improve for the macro redefinition error when integrated with zephyr.

[2.4.0]

- New Features
  - Added EnableIRQWithPriority, IRQ_SetPriority, and IRQ_ClearPendingIRQ for ARM.
  - Added MSDK_EnableCpuCycleCounter, MSDK_GetCpuCycleCount for ARM.

[2.3.3]

- New Features
  - Added NETC into status group.

[2.3.2]

- Improvements
  - Make driver aarch64 compatible

[2.3.1]

- Bug Fixes
  - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
  - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
  - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
  - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
  - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
  - Included stddef.h header file for MDK tool chain.
- New Features:
  - Added atomic modification macros.

[2.2.7]

- Other Change
  - Added MECC status group definition.

[2.2.6]

- Other Change
  - Added more status group definition.
- Bug Fixes
  - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
  - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
  - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
  - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
  - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
  - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
  - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
  - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
  - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
  - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
  - Deleted and optimized repeated macro.

[2.1.0]

- New Features
  - Added IRQ operation for XCC toolchain.
  - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
  - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
  - Added new feature macro switch "FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION" for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
  - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.

CRC

[2.0.4]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
  - Fix MISRA issues.

[2.0.2]

- Bug fix:
  - Fix MISRA issues.

[2.0.1]

- Bug fix:
  - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.

EDMA (DMA3)

[2.5.1]

- Bug Fixes
  - enables the auto stop request feature in API EDMA_ResetChannel

[2.5.0]

- Improvements
  - Add API EDMA_GetTransferSize for EDMA_PrepareTransferConfig to reduce HIS CCM value.

[2.4.0]

- Improvements
  - Added peripheral to peripheral support in DMA3 driver.
- Bug Fixes
  - Fixed the ERQ bit reading error issue.

[2.3.2]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.1]

- Bug Fixes
  - Added clear TCD_CITER_ELINKNO and TCD_BITER_ELINKNO registers in EDMA_AbortTransfer to make sure the TCD registers in a correct state for next calling of EDMA_SubmitTransfer.

[2.3.0]

- Improvements
  - Added feature FSL_FEATURE_EDMA_HAS_NO_SBR_ATTR_BIT to separate DMA without ATTR bitfield.

[2.2.7]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.8, 5.6.

[2.2.6]

- Bug Fixes
  - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.

[2.2.5]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.4.

[2.2.4]

- Bug Fixes
  - Fix the issue that EDMA_AbortTransfer not reset edma handle(tcdUsed, tail, header) and fix EDMA_InstallTCDMemory(handle->header = 1)

[2.2.3]

- Improvements
  - Added feature FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SUPPORT_PARAMETER to support driver IRQ handler with parameters.
  - Added feature FSL_FEATURE_EDMA_HAS_COMMON_CLOCK_GATE to improve clock gate control in dma driver.

[2.2.2]

- Bug Fixes
  - Fixed the issue of EDMA_SubmitTransfer return busy when calling EDMA_EnableChannelInterrupts before submit transfer.
  - Fixed violations of MISRA C-2012 rule 10.4, 10.1, 9.2, 10.4, 10.6, 14.4, 10.7, 14.3, 11.6.

[2.2.1]

- Improvements
  - Removed channel MUX reset from EDMA_ResetChannel, since channel mux should be constant while channel is alive.

[2.2.0]

- Improvements
  - Added new API EDMA_SetChannelMux to support channel mux feature.
  - Added new API EDMA_PrepareTransferConfig to expose paramters source offset and destination offset.
  - Exposed EDMA_InstallTCD function to application.
  - Added source/destination address alignment check.

[2.1.1]

- Improvements
  - Added 8bytes transfer width feature support in driver.

[2.1.0]

- Bug Fixes
  - Added const type for parameter configuration in EDMA_SubmitTransfer and EDMA_HandleTransferConfig API.
  - Added configurations for srcAddr and destAddr in EDMA_PrepareTransfer API.

[2.0.2]

- Improvements
  - Updated eDMA driver to support MP_CR bit GMRC.
  - Updated eDMA instance name for i.MX 8QM.
  - Used instance number as factor to calculate channel number for different instance instead of hard code.

[2.0.1]

- New Features
  - Added control macro to enable/disable the CLOCK code in current driver.
  - Added s_EDMAEnabledChannel to record enabled channel to merge all the channel IRQ handler into driver IRQ handler.
  - Added feature macro for bits EMI and EBW in MP_CSR.
- Improvements
  - Removed all the separated channel IRQ handler in DMA driver.

[2.0.0]

- Initial version.

ELEMU

- 2.1.2 Fix macro BIT redefined issue when compiling with Zephyr.
- 2.1.1 Fix MISRA issues.
- 2.1.0 Cleanup of unused legacy FW. Updated ELEMU_loadFw function.
- 2.0.0 Renamed MU to ELEMU to avoid confusion with other Messaging units.
- 0.0.4 Updated register name according to latest device header file.
- 0.0.3 Fix MISRA issues.
- 0.0.2 The name of SNT has changed to ELEMU.
- 0.0.1 Initial version of SNT driver.

EWM

[2.0.4]

- Bug Fixes
  - Fixed CERT INT31-C violations.

[2.0.3]

- Bug Fixes
  - Fixed violation of MISRA C-2012 rules: 10.1, 10.3.

[2.0.2]

- Bug Fixes
  - Fixed violation of MISRA C-2012 rules: 10.3, 10.4.

[2.0.1]

- Bug Fixes
  - Fixed the hard fault in EWM_Deinit.

[2.0.0]

- Initial version.

FLASH

[2.3.3]

- Improvements
  - Added timeout for while loop in flash_command_pre_sequence, flash_command_sequence, flash_erase_sequence, flash_pgm_sequence and flash_command_pre_sequence API.

[2.3.2]

- Improvement
- Enabled the kFLASH_PropertyPflash1SectorSize properity support in FLASH_GetProperty API.

[2.3.1]

- Improvement
- Clear flash cache before every erase to prevent the possibility of returning stale data.

[2.3.0]

- New features
- Add support for MCX N series

[2.2.1]

- Improvement
  - To fix the potential unsigned integer overflow in the operation, added a check to ensure that the addition does not exceed the maximum value.

[2.2.0]

- New Features
  - Add the support for MW30.

[2.1.2]

- Improvement
  - Add the support for KW47/MCXW72 phantoms.

[2.1.1]

- Improvement
  - Add the conditional compiling flag '#if defined(RF_FMU)' to make the driver be compatible with the non-radio phantoms.

[2.1.0]

- Bug Fixes
  - Fix flash driver run error in flash memory

[2.0.0]

- Initial version.

FLEXCAN

[2.14.4]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 10.1, 10.4, 18.1.

[2.14.3]

- Improvements
  - Add unhandled interrupt events check for following API:
    - FLEXCAN_MbHandleIRQ
    - FLEXCAN_EhancedRxFifoHandleIRQ
- Bug Fixes
  - Remove FLEXCAN_MemoryErrorHandleIRQ on some platform without memory error interrupt.
  - Add conditional compile for CTRL2[ISOCANFDEN] because some platform do not have this bit.

[2.14.2]

- Improvements
  - Add Coverage Justification for uncovered code.
  - Adjust API FLEXCAN_TransferAbortReceive order.
  - Update FLEXCAN_Enable to enter Freeze Mode first when enter Disable mode on some platform.
  - Added while loop timeout for following API:
    * FLEXCAN_EnterFreezeMode
    * FLEXCAN_ExitFreezeMode
    * FLEXCAN_Enable
    * FLEXCAN_Reset
    * FLEXCAN_TransferSendBlocking
    * FLEXCAN_TransferReceiveBlocking
    * FLEXCAN_TransferFDSendBlocking
    * FLEXCAN_TransferFDReceiveBlocking
    * FLEXCAN_TransferReceiveFifoBlocking
    * FLEXCAN_TransferReceiveEnhancedFifoBlocking
- Bug Fixes
  - Remove remote frame feature in CANFD mode because there is no remote frame in the CANFD format.
  - Remove legacy Rx FIFO disabled branch in FLEXCAN_SubHandlerForLegacyRxFIFO and FLEXCAN_SubHandlerForDataTransfered.

[2.14.1]

- Bug Fixes
  - Fixed register IMASK2-4 IFLAG2-4 HR_TIME_STAMPn access issue on FlexCAN instances with different number of MBs.
  - Fixed bit field MBDSR1-3 access issue on FlexCAN instances with different number of MBs.
- Improvements
  - Unified following API as same parameter and return value type:
    * FLEXCAN_GetMbStatusFlags
    * FLEXCAN_ClearMbStatusFlags
    * FLEXCAN_EnableMbInterrupts
    * FLEXCAN_DisableMbInterrupts
  - Add workaround for ERR050443 and ERR052403.
  - Update message buffer read process in API FLEXCAN_ReadRxMb and FLEXCAN_ReadFDRxMb to make critical section as short as possible.
  - Simplify API FLEXCAN_DriverDataIRQHandler implementation by remove parameter type.

[2.14.0]

- Improvements
  - Support external time tick feature.
  - Support high resolution timestamp feature.
  - Enter Freeze Mode first when enter Disable Mode on some platform.
  - Add feature macro for Pretended Networking because some FlexCAN instance do not have this feature.
  - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
  - Add new FlexCAN IRQ Handler FLEXCAN_DriverDataIRQHandler and FLEXCAN_DriverEventIRQHandler. Thses IRQ Handlers are used on soc which FlexCAN interrupts are grouped by specific function and assigned to different vector.
  - Update macro FLEXCAN_WAKE_UP_FLAG and FLEXCAN_PNWAKE_UP_FLAG to simplify code.
  - Replace macro FSL_FEATURE_FLEXCAN_HAS_NO_WAKMSK_SUPPORT with FSL_FEATURE_FLEXCAN_HAS_NO_SLFWAK_SUPPORT.
  - Replace macro FSL_FEATURE_FLEXCAN_HAS_NO_WAKSRC_SUPPORT with FSL_FEATURE_FLEXCAN_HAS_GLITCH_FILTER.
- Bug Fixes
  - Fixed wrong interrupt and status flag helper macro in enumeration _flexcan_flags and API FLEXCAN_DisableInterrupts.
  - Fixed interrupt flag helper macro typo issue.
  - Remove flags which will are unassociated with interrupt in macro FLEXCAN_MEMORY_ERROR_INT_FLAG.
  - Remove flags which will are unassociated with interrupt in macro FLEXCAN_ERROR_AND_STATUS_INT_FLAG.
  - Fixed array out-of-bounds access when read enhanced Rx FIFO.

[2.13.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- Improvements
  - Support payload endianness selection feature.

[2.12.0]

- Improvements
  - Support automatic Remote Response feature.
  - Add API FLEXCAN_SetRemoteResponseMbConfig() to configure automatic Remote Response mailbox.

[2.11.8]

- Improvements
  - Synchronize flexcan driver update on s32z platform.

[2.11.7]

- Bug Fixes
  - Fixed FLEXCAN_TransferReceiveEnhancedFifoEDMA() compatibility with edma5.

[2.11.6]

- Bug Fixes
  - Fixed ERRATA_9595 FLEXCAN_EnterFreezeMode() may result to bus fault on some platform.

[2.11.5]

- Bug Fixes
  - Fixed flexcan_memset() crash under high optimization compilation.

[2.11.4]

- Improvements
  - Update CANFD max bitrate to 10Mbps on MCXNx3x and MCXNx4x.
  - Release peripheral from reset if necessary in init function.

[2.11.3]

- Bug Fixes
  - Fixed FLEXCAN_TransferReceiveEnhancedFifoEDMA() compile error with DMA3.

[2.11.2]

- Bug Fixes
  - Fixed bug that timestamp in flexcan_handle_t not updated when RX overflow happens.

[2.11.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.1.

[2.11.0]

- Bug Fixes
  - Fixed wrong base address argument in FLEXCAN2 IRQ Handler.
- Improvements
  - Add API to determine if the instance supports CAN FD mode at run time.

[2.10.1]

- Bug Fixes
  - Fixed HIS CCM issue.
  - Fixed RTOS issue by adding protection to read-modify-write operations on interrupt enable/disable API.

[2.10.0]

- Improvements
  - Update driver to make it able to support devices which has more than 64 8bytes MBs.
  - Update CAN FD transfer APIs to make them set/get edl bit according to frame content, which can make them compatible with classic CAN.

[2.9.2]

- Bug Fixes
  - Fixed the issue that FLEXCAN_CheckUnhandleInterruptEvents() can't detecting the exist enhanced RX FIFO interrupt status.
  - Fixed the issue that FLEXCAN_ReadPNWakeUpMB() does not return fail even no existing valid wake-up frame.
  - Fixed the issue that FLEXCAN_ReadEnhancedRxFifo() may clear bits other than the data available bit.
  - Fixed violations of the MISRA C-2012 rules 10.4, 10.8.
- Improvements
  - Return kStatus_FLEXCAN_RxFifoDisabled instead of kStatus_Fail when read FIFO fail during IRQ handler.
  - Remove unreachable code from timing calculates APIs.
  - Update Enhanced Rx FIFO handler to make it deal with underflow/overflow status first.

[2.9.1]

- Bug Fixes
  - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoBlocking() API clearing Fifo data available flag more than once.
  - Fixed the issue that entering FLEXCAN_SubHandlerForEhancedRxFifo() even if Enhanced Rx fifo interrupts are not enabled.
  - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoEDMA() update handle even if previous Rx FIFO receive not finished.
  - Fixed the issue that FLEXCAN_SetEnhancedRxFifoConfig() not configure the ERFCR[NFE] bits to the correct value.
  - Fixed the issue that FLEXCAN_ReceiveFifoEDMACallback() can't differentiate between Rx fifo and enhanced rx fifo.
  - Fixed the issue that FLEXCAN_TransferHandleIRQ() can't report Legacy Rx FIFO warning status.

[2.9.0]

- Improvements
- Add public set bit rate API to make driver easier to use.
- Update Legacy Rx FIFO transfer APIs to make it support received multiple frames during one API call.
- Optimized FLEXCAN_SubHandlerForDataTransfered() API in interrupt handling to reduce the probability of packet loss.

[2.8.7]

- Improvements
- Initialized the EDMA configuration structure in the FLEXCAN EDMA driver.

[2.8.6]

- Bug Fixes
- Fix Coverity overrun issues in fsl_flexcan_edma driver.

[2.8.5]

- Improvements
  - Make driver aarch64 compatible.

[2.8.4]

- Bug Fixes
  - Fixed FlexCan_Errata_6032 to disable all interrupts.

[2.8.3]

- Bug Fixes
  - Fixed an issue with the FLEXCAN_EnableInterrupts and FLEXCAN_DisableInterrupts interrupt enable bits in the CTRL1 register.

[2.8.2]

- Bug Fixes
  - Fixed errors in timing calculations and simplify the calculation process.
  - Fixed issue of CBT and FDCBT register may write failure.

[2.8.1]

- Bug Fixes
  - Fixed the issue of CAN FD three sampling points.
  - Added macro to support the devices that no MCR[SUPV] bit.
  - Remove unnecessary clear WMB operations.

[2.8.0]

- Improvements
  - Update config configuration.
    - Added enableSupervisorMode member to support enable/disable Supervisor mode.
  - Simplified the algorithm in CAN FD improved timing APIs.

[2.7.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.3, 10.7.

[2.7.0]

- Improvements
  - Update config configuration.
    - Added enablePretendedeNetworking member to support enable/disable Pretended Networking feature.
    - Added enableTransceiverDelayMeasure member to support enable/disable Transceiver Delay MeasurementPretended feature.
    - Added bitRate/bitRateFD member to work as baudRate/baudRateFD member union.
  - Rename all “baud” in code or comments to “bit” to align with the CAN spec.
  - Added Pretended Networking mode related APIs.
    - FLEXCAN_SetPNConfig
    - FLEXCAN_GetPNMatchCount
    - FLEXCAN_ReadPNWakeUpMB
  - Added support for Enhanced Rx FIFO.
  - Removed independent memory error interrupt/status APIs and put all interrupt/status control operation into FLEXCAN_EnableInterrupts/FLEXCAN_DisableInterrupts and FLEXCAN_GetStatusFlags/FLEXCAN_ClearStatusFlags APIs.
  - Update improved timing APIs to make it calculate improved timing according to CiA doc recommended.
    - FLEXCAN_CalculateImprovedTimingValues.
    - FLEXCAN_FDCalculateImprovedTimingValues.
  - Update FLEXCAN_SetBitRate/FLEXCAN_SetFDBitRate to added the use of enhanced timing registers.

[2.6.2]

- Improvements
  - Add CANFD frame data length enumeration.

[2.6.1]

- Bug Fixes
  - Fixed the issue of not fully initializing memory in FLEXCAN_Reset() API.

[2.6.0]

- Improvements
  - Enable CANFD ISO mode in FLEXCAN_FDInit API.
  - Enable the transceiver delay compensation feature when enable FD operation and set bitrate switch.
  - Implementation memory error control in FLEXCAN_Init API.
  - Improve FLEXCAN_FDCalculateImprovedTimingValues API to get same value for FPRESDIV and PRESDIV.
  - Added memory error configuration for user.
    - enableMemoryErrorControl
    - enableNonCorrectableErrorEnterFreeze
  - Added memory error related APIs.
    - FLEXCAN_GetMemoryErrorReportStatus
    - FLEXCAN_GetMemoryErrorStatusFlags
    - FLEXCAN_ClearMemoryErrorStatusFlags
    - FLEXCAN_EnableMemoryErrorInterrupts
    - FLEXCAN_DisableMemoryErrorInterrupts
- Bug Fixes
  - Fixed the issue of sent duff CAN frame after call FLEXCAN_FDInit() API.

[2.5.2]

- Bug Fixes
  - Fixed the code error issue and simplified the algorithm in improved timing APIs.
    - The bit field in CTRL1 register couldn't calculate higher ideal SP, we set it as the lowest one(75%)
      - FLEXCAN_CalculateImprovedTimingValues
      - FLEXCAN_FDCalculateImprovedTimingValues
  - Fixed MISRA-C 2012 Rule 17.7 and 14.4.
- Improvements
  - Pass EsrStatus to callback function when kStatus_FLEXCAN_ErrorStatus is comming.

[2.5.1]

- Bug Fixes
  - Fixed the non-divisible case in improved timing APIs.
    - FLEXCAN_CalculateImprovedTimingValues
    - FLEXCAN_FDCalculateImprovedTimingValues

[2.5.0]

- Bug Fixes
  - MISRA C-2012 issue check.
    - Fixed rules, containing: rule-10.1, rule-10.3, rule-10.4, rule-10.7, rule-10.8, rule-11.8, rule-12.2, rule-13.4, rule-14.4, rule-15.5, rule-15.6, rule-15.7, rule-16.4, rule-17.3, rule-5.8, rule-8.3, rule-8.5.
  - Fixed the issue that API FLEXCAN_SetFDRxMbConfig lacks inactive message buff.
  - Fixed the issue of Pa082 warning.
  - Fixed the issue of dead lock in the function of interruption handler.
  - Fixed the issue of Legacy Rx Fifo EDMA transfer data fail in evkmimxrt1060 and evkmimxrt1064.
  - Fixed the issue of setting CANFD Bit Rate Switch.
  - Fixed the issue of operating unknown pointer risk.
    - when used the pointer "handle->mbFrameBuf[mbIdx]" to update the timestamp in a short-live TX frame, the frame pointer became as unknown, the action of operating it would result in program stack destroyed.
  - Added assert to check current CAN clock source affected by other clock gates in current device.
    - In some chips, CAN clock sources could be selected by CCM. But for some clock sources affected by other clock gates, if user insisted on using that clock source, they had to open these gates at the same time. However, they should take into consideration the power consumption issue at system level. In RT10xx chips, CAN clock source 2 was affected by the clock gate of lpuart1. ERRATA ID: (ERR050235 in CCM).
- Improvements
  - Implementation for new FLEXCAN with ECC feature able to exit Freeze mode.
  - Optimized the function of interruption handler.
  - Added two APIs for FLEXCAN EDMA driver.
    - FLEXCAN_PrepareTransfConfiguration
    - FLEXCAN_StartTransferDatafromRxFIFO
  - Added new API for FLEXCAN driver.
    - FLEXCAN_GetTimeStamp
      - For TX non-blocking API, we wrote the frame into mailbox only, so no need to register TX frame address to the pointer, and the timestamp could be updated into the new global variable handle->timestamp[mbIdx], the FLEXCAN driver provided a new API for user to get it by handle and index number after TX DONE Success.
    - FLEXCAN_EnterFreezeMode
    - FLEXCAN_ExitFreezeMode
  - Added new configuration for user.
    - disableSelfReception
    - enableListenOnlyMode
  - Renamed the two clock source enum macros based on CLKSRC bit field value directly.

        * The CLKSRC bit value had no property about Oscillator or Peripheral type in lots of devices, it acted as two different clock input source only, but the legacy enum macros name contained such property, that misled user to select incorrect CAN clock source.
    - Created two new enum macros for the FLEXCAN driver.
        * kFLEXCAN_ClkSrc0
        * kFLEXCAN_ClkSrc1
    - Deprecated two legacy enum macros for the FLEXCAN driver.
        * kFLEXCAN_ClkSrcOsc
        * kFLEXCAN_ClkSrcPeri
    - Changed the process flow for Remote request frame response..
        * Created a new enum macro for the FLEXCAN driver.
            · kStatus_FLEXCAN_RxRemote
    - Changed the process flow for kFLEXCAN_StateRxRemote state in the interrupt handler.
        * Should the TX frame not register to the pointer of frame handle, interrupt handler would not be able to read the remote response frame from the mail box to ram, so user should read the frame by manual from mail box after a complete remote frame transfer.

[2.4.0]

- Bug Fixes
    - MISRA C-2012 issue check.
        * Fixed rules, containing: rule-12.1, rule-17.7, rule-16.4, rule-11.9, rule-8.4, rule-14.4, rule-10.8, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-8.3, rule-12.2 and rule-16.1.
    - Fixed the issue that CANFD transfer data fail when bus baudrate is 30Khz.
    - Fixed the issue that ERR009595 does not folllow the ERRATA document.
    - Fixed code error for ERR006032 work around solution.
    - Fixed the Coverity issue of BAD_SHIFT in FLEXCAN.
    - Fixed the Repo build warning issue for variable without initial.
- Improvements
    - Fixed the run fail issue of FlexCAN RemoteRequest UT Case.
    - Implementation all TX and RX transfering Timestamp used in FlexCAN demos.
    - Fixed the issue of UT Test Fail for CANFD payload size changed from 64BperMB to 8PerMB.
    - Implementation for improved timing API by baud rate.

[2.3.2]

- Improvements
    - Implementation for ERR005959.
    - Implementation for ERR005829.
    - Implementation for ERR006032.

[2.3.1]

- Bug Fixes
  - Added correct handle when kStatus_FLEXCAN_TxSwitchToRx is comming.

[2.3.0]

- Improvements
  - Added self-wakeup support for STOP mode in the interrupt handling.

[2.2.3]

- Bug Fixes
  - Fixed the issue of CANFD data phase's bit rate not set as expected.

[2.2.2]

- Improvements
  - Added a time stamp feature and enable it in the interrupt_transfer example.

[2.2.1]

- Improvements
  - Separated CANFD initialization API.
  - In the interrupt handling, fix the issue that the user cannot use the normal CAN API when with an FD.

[2.2.0]

- Improvements
  - Added FSL_FEATURE_FLEXCAN_HAS_SUPPORT_ENGINE_CLK_SEL_REMOVE feature to support SoCs without CAN Engine Clock selection in FlexCAN module.
  - Added FlexCAN Serial Clock Operation to support i.MX SoCs.

[2.1.0]

- Bug Fixes
  - Corrected the spelling error in the function name FLEXCAN_XXX().
  - Moved Freeze Enable/Disable setting from FLEXCAN_Enter/ExitFreezeMode() to FLEXCAN_Init().
  - Corrected wrong helper macro values.
- Improvements
  - Hid FLEXCAN_Reset() from user.
  - Used NDEBUG macro to wrap FLEXCAN_IsMbOccupied() function instead of DEBUG macro.

[2.0.0]

- Initial version.

FLEXCAN_EDMA

[2.12.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 18.1.

[2.12.0]

- Improvements
  - Support high resolution timestamp feature in enhanced Rx FIFO EDMA.
  - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
- Bug Fixes
  - Fixed array out-of-bounds access when read enhanced Rx FIFO in EDMA.

[2.11.7]

- Refer FLEXCAN driver change log 2.7.0 to 2.11.7

FLEXIO

[2.3.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.
  - Added more pin control functions.

[2.2.3]

- Improvements
  - Adapter the FLEXIO driver to platforms which don't have system level interrupt controller, such as NVIC.

[2.2.2]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.2.1]

- Improvements
  - Added doxygen index parameter comment in FLEXIO_SetClockMode.

[2.2.0]

- New Features
  - Added new APIs to support FlexIO pin register.

[2.1.0]

- Improvements
  - Added API FLEXIO_SetClockMode to set flexio channel counter and source clock.

[2.0.4]

- Bug Fixes
  - Fixed MISRA 8.4 issues.

[2.0.3]

- Bug Fixes
  - Fixed MISRA 10.4 issues.

[2.0.2]

- Improvements
  - Split FLEXIO component which combines all flexio/flexio_uart/flexio_i2c/flexio_i2s drivers into several components: FlexIO component, flexio_uart component, flexio_i2c_master component, and flexio_i2s component.
- Bug Fixes
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.0.1]

- Bug Fixes
  - Fixed the dozen mode configuration error in FLEXIO_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.

FLEXIO_I2C

[2.6.2]

- Improvements
  - Added timeout for while loop in FLEXIO_I2C_MasterTransferBlocking().
- Bug Fixes
  - Fixed build issues related to I2C_RETRY_TIMES.

[2.6.1]

- Bug Fixes
  - Fixed coverity issues

[2.6.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_flexio_i2c_master.c.

[2.4.0]

- Improvements
  - Added delay of 1 clock cycle in FLEXIO_I2C_MasterTransferRunStateMachine to ensure that bus would be idle before next transfer if master is nacked.
  - Fixed issue that the restart setup time is less than the time in I2C spec by adding delay of 1 clock cycle before restart signal.

[2.3.0]

- Improvements
  - Used 3 timers instead of 2 to support transfer which is more than 14 bytes in single transfer.
  - Improved FLEXIO_I2C_MasterTransferGetCount so that the API can check whether the transfer is still in progress.
- Bug Fixes
  - Fixed MISRA 10.4 issues.

[2.2.0]

- New Features
  - Added timeout mechanism when waiting certain state in transfer API.
  - Added an API for checking bus pin status.
- Bug Fixes
  - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

  - Added codes in FLEXIO_I2C_MasterTransferCreateHandle to clear pending NVIC IRQ, disable internal IRQs before enabling NVIC IRQ.
  - Modified code so that during master's nonblocking transfer the start and slave address are sent after interrupts being enabled, in order to avoid potential issue of sending the start and slave address twice.

[2.1.7]

- Bug Fixes
  - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking did not wait for STOP bit sent.
  - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
  - Fixed the issue that I2C master did not check whether bus was busy before transfer.

[2.1.6]

- Bug Fixes
  - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed the subaddress.

[2.1.5]

- Improvements
  - Unified component full name to FLEXIO I2C Driver.

[2.1.4]

- Bug Fixes
  - The following modifications support FlexIO using multiple instances:
    * Removed FLEXIO_Reset API in module Init APIs.
    * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
    * Updated module Enable APIs to only support enable operation.

[2.1.3]

- Improvements
  - Changed the prototype of FLEXIO_I2C_MasterInit to return kStatus_Success if initialized successfully or to return kStatus_InvalidArgument if "(srcClock_Hz / masterConfig->baudRate_Bps) / 2 - 1" exceeds 0xFFU.

[2.1.2]

- Bug Fixes
  - Fixed the FLEXIO I2C issue where the master could not receive data from I2C slave in high baudrate.
  - Fixed the FLEXIO I2C issue where the master could not receive NAK when master sent non-existent addr.

  - Fixed the FLEXIO I2C issue where the master could not get transfer count successfully.
  - Fixed the FLEXIO I2C issue where the master could not receive data successfully when sending data first.
  - Fixed the Dozen mode configuration error in FLEXIO_I2C_MasterInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
  - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking API called FLEXIO_I2C_MasterTransferCreateHandle, which lead to the s_flexioHandle/s_flexioIsr/s_flexioType variable being written. Then, if calling FLEXIO_I2C_MasterTransferBlocking API multiple times, the s_flexioHandle/s_flexioIsr/s_flexioType variable would not be written any more due to it being out of range. This lead to the following situation: NonBlocking transfer APIs could not work due to the fail of register IRQ.

[2.1.1]

- Bug Fixes
  - Implemented the FLEXIO_I2C_MasterTransferBlocking API which is defined in header file but has no implementation in the C file.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added transferSize in handle structure to record the transfer size.

FLEXIO_I2S

[2.2.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 12.4.

[2.2.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.2.0]

- New Features
  - Added timeout mechanism when waiting certain state in transfer API.
- Bug Fixes
  - Fixed IAR Pa082 warnings.
  - Fixed violations of the MISRA C-2012 rules 10.4, 14.4, 11.8, 11.9, 10.1, 17.7, 11.6, 10.3, 10.7.

[2.1.6]

- Bug Fixes
  - Added reset flexio before flexio i2s init to make sure flexio status is normal.

[2.1.5]

- Bug Fixes
  - Fixed the issue that I2S driver used hard code for bitwidth setting.

[2.1.4]

- Improvements
  - Unified component's full name to FLEXIO I2S (DMA/EDMA) driver.

[2.1.3]

- Bug Fixes
  - The following modifications support FLEXIO using multiple instances:
    * Removed FLEXIO_Reset API in module Init APIs.
    * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
    * Updated module Enable APIs to only support enable operation.

[2.1.2]

- New Features
  - Added configure items for all pin polarity and data valid polarity.
  - Added default configure for pin polarity and data valid polarity.

[2.1.1]

- Bug Fixes
  - Fixed FlexIO I2S RX data read error and eDMA address error.
  - Fixed FlexIO I2S slave timer compare setting error.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added transferSize in handle structure to record the transfer size.

FLEXIO_SPI

[2.4.3]

- Improvements
  - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.4.2]

- Bug Fixes
  - Fixed FLEXIO_SPI_MasterTransferBlocking and FLEXIO_SPI_MasterTransferNonBlocking issue in CS continuous mode, the CS might not be continuous.

[2.4.1]

- Bug Fixes
  - Fixed coverity issues

[2.4.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.

[2.3.5]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.4]

- Bug Fixes
  - Fixed the txData from void * to const void * in transmit API

[2.3.3]

- Bugfixes
  - Fixed cs-continuous mode.

[2.3.2]

- Improvements
  - Changed FLEXIO_SPI_DUMMYDATA to 0x00.

[2.3.1]

- Bugfixes
  - Fixed IRQ SHIFTBUF overrun issue when one FLEXIO instance used as multiple SPIs.

[2.3.0]

- New Features
  - Supported FLEXIO_SPI slave transfer with continuous master CS signal and CPHA=0.
  - Supported FLEXIO_SPI master transfer with continuous CS signal.
  - Support 32 bit transfer width.
- Bug Fixes

  - Fixed wrong timer compare configuration for dma/edma transfer.
  - Fixed wrong byte order of rx data if transfer width is 16 bit, since the we use shifter buffer bit swapped/byte swapped register to read in received data, so the high byte should be read from the high bits of the register when MSB.

[2.2.1]

- Bug Fixes
  - Fixed bug in FLEXIO_SPI_MasterTransferAbortEDMA that when aborting EDMA transfer EDMA_AbortTransfer should be used rather than EDMA_StopTransfer.

[2.2.0]

- Improvements
  - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
  - Fixed MISRA 10.4 issues.
  - Added codes in FLEXIO_SPI_MasterTransferCreateHandle and FLEXIO_SPI_SlaveTransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.1.3]

- Improvements
  - Unified component full name to FLEXIO SPI(DMA/EDMA) Driver.
- Bug Fixes
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.2]

- Bug Fixes
  - The following modification support FlexIO using multiple instances:
    - Removed FLEXIO_Reset API in module Init APIs.
    - Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
    - Updated module Enable APIs to only support enable operation.

[2.1.1]

- Bug Fixes
  - Fixed bug where FLEXIO SPI transfer data is in 16 bit per frame mode with eDMA.
  - Fixed bug when FLEXIO SPI works in eDMA and interrupt mode with 16-bit per frame and Lsbfirst.
  - Fixed the Dozen mode configuration error in FLEXIO_SPI_MasterInit/FLEXIO_SPI_SlaveInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.

- Improvements
  - Added #ifndef/#endif to allow users to change the default TX value at compile time.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added transferSize in handle structure to record the transfer size.
- Bug Fixes
  - Fixed the error register address return for 16-bit data write in FLEXIO_SPI_GetTxDataRegisterAddress.
  - Provided independent IRQHandler/transfer APIs for Master and slave to fix the baudrate limit issue.

FLEXIO_UART

[2.6.4]

- Improvements
  - Make UART_RETRY_TIMES configurable by CONFIG_UART_RETRY_TIMES.

[2.6.3]

- Bug Fixes
  - Fixed coverity issues

[2.6.2]

- Bug Fixes
  - Fixed coverity issues

[2.6.1]

- Improvements
  - Improve baudrate calculation method, to support higher frequency FlexIO clock source.

[2.6.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
  - Added API FLEXIO_UART_FlushShifters to flush UART fifo.

[2.4.0]

- Improvements
  - Use separate data for TX and RX in flexio_uart_transfer_t.
- Bug Fixes
  - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling FLEXIO_UART_TransferReceiveNonBlocking, the received data count returned by FLEXIO_UART_TransferGetReceiveCount is wrong.

[2.3.0]

- Improvements
  - Added check for baud rate's accuracy that returns kStatus_FLEXIO_UART_BaudrateNotSupport when the best achieved baud rate is not within 3% error of configured baud rate.
- Bug Fixes
  - Added codes in FLEXIO_UART_TransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.2.0]

- Improvements
  - Added timeout mechanism when waiting for certain states in transfer driver.
- Bug Fixes
  - Fixed MISRA 10.4 issues.

[2.1.6]

- Bug Fixes
  - Fixed IAR Pa082 warnings.
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.5]

- Improvements
  - Triggered user callback after all the data in ringbuffer were received in FLEXIO_UART_TransferReceiveNonBlocking.

[2.1.4]

- Improvements
  - Unified component full name to FLEXIO UART(DMA/EDMA) Driver.

[2.1.3]

- Bug Fixes
  - The following modifications support FLEXIO using multiple instances:
    * Removed FLEXIO_Reset API in module Init APIs.
    * Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
    * Updated module Enable APIs to only support enable operation.

[2.1.2]

- Bug Fixes
  - Fixed the transfer count calculation issue in FLEXIO_UART_TransferGetReceiveCount, FLEXIO_UART_TransferGetSendCount, FLEXIO_UART_TransferGetReceiveCountDMA, FLEXIO_UART_TransferGetSendCountDMA, FLEXIO_UART_TransferGetReceiveCountEDMA and FLEXIO_UART_TransferGetSendCountEDMA.
  - Fixed the Dozen mode configuration error in FLEXIO_UART_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
  - Added code to report errors if the user sets a too-low-baudrate which FLEXIO cannot reach.
  - Disabled FLEXIO_UART receive interrupt instead of all NVICs when reading data from ring buffer. If ring buffer is used, receive nonblocking will disable all NVIC interrupts to protect the ring buffer. This had negative effects on other IPs using interrupt.

[2.1.1]

- Bug Fixes
  - Changed the API name FLEXIO_UART_StopRingBuffer to FLEXIO_UART_TransferStopRingBuffer to align with the definition in C file.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added txSize/rxSize in handle structure to record the transfer size.
- Bug Fixes
  - Added an error handle to handle the situation that data count is zero or data buffer is NULL.

FLEXIO_UART_EDMA

[2.3.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules.

[2.3.0]

- Refer FLEXIO_UART driver change log to 2.3.0

GPIO

[2.8.2]

- Bug Fixes
  - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
  - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
  - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
  - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
  - Remove support for API GPIO_GetPinsDMARequestFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
  - Support devices without PORT module.

[2.7.1]

- Bug Fixes
  - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
  - Added API to support Interrupt select (IRQS) bitfield.

[2.6.0]

- New Features
  - Added API to get GPIO version information.
  - Added API to control a pin for general purpose input.
  - Added some APIs to control pin in secure and previliege status.

[2.5.3]

- Bug Fixes
  - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
  - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
  - Fixed wrong macro definition.
  - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
  - Defined the new macro to separate the scene when the width of registers is different.
  - Removed some redundant macros.
- New Features
  - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
  - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
  - API interface added:
    * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
  - Fixed the issue for MISRA-2012 check.
    - Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
  - Removed deprecated APIs.

[2.3.0]

- New Features
  - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
  - API interface changes:
    - Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of _PinXXX() and _PortXXX.

[2.1.1]

- Improvements
  - API interface changes:
    - Added an API for the check attribute bytes.

[2.1.0]

- Improvements
  - API interface changes:
    - Added “pins” or “pin” to some APIs’ names.
    - Renamed “_PinConfigure” to “GPIO_PinInit”.

I3C

[2.14.2]

- Improvements
  - Added timeout for ENTDAA process API.
  - Added build system macro to control the timeout setting.

[2.14.1]

- Improvements
  - Split the function I3C_MasterTransferBlocking to meet the HIS-CCM requirement.

[2.14.0]

- Improvements
  - Added the choice to set fast start header with push-pull speed when all targets addresses have MSB 0 instead of forcing to set it.
  - Deleted duplicated busy check in I3C_MasterStart function.

[2.13.1]

- Bug Fixes
  - Disabled Rx auto-termination in repeated start interrupt event while transfer API doesn't enable it.
  - Waited the completion event after loading all Tx data in Tx FIFO.
- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- New features
  - Added the hot-join support for I3C bus initialization API.
- Bug Fixes
  - Set read termination with START at the same time in case unknown issue.
  - Set MCTRL[TYPE] as 0 for DDR force exit.
- Improvements
  - Added the API to reset device count assigned by ENTDAA.
  - Provided the method to set global macro I3C_MAX_DEVCNT to determine how many device addresses ENTDAA can allocate at one time.
  - Initialized target management static array based on instance number for the case that multiple instances are used at the same time.

[2.12.0]

- Improvements
  - Added the slow clock parameter for Controller initialization function to calculate accurate timeout.
- Bug Fixes
  - Fixed the issue that BAMATCH field can't be 0. BAMATCH should be 1 for 1MHz slow clock.

[2.11.1]

- Bug Fixes
  - Fixed the issue that interrupt API transmits extra byte when subaddress and data size are null.
  - Fixed the slow clock calculation issue.

[2.11.0]

- New features
  - Added the START/ReSTART SCL delay setting for the Soc which supports this feature.
- Bug Fixes
  - Fixed the issue that ENTDAA process waits Rx pending flag which causes problem when Rx watermark isn't 0. Just check the Rx FIFO count.

[2.10.8]

- Improvements
  - Support more instances.

[2.10.7]

- Improvements
  - Fixed the potential compile warning.

[2.10.6]

- New features
  - Added the I3C private read/write with 0x7E address as start.

[2.10.5]

- New features
  - Added I3C HDR-DDR transfer support.

[2.10.4]

- Improvements
  - Added one more option for master to not set RDTERM when doing I3C Common Command Code transfer.

[2.10.3]

- Improvements
  - Masked the slave IBI/MR/HJ request functions with feature macro.

[2.10.2]

- Bug Fixes
  - Added workaround for errata ERR051617: I3C working with I2C mode creates the unintended Repeated START before actual STOP on some platforms.

[2.10.1]

- Bug Fixes
  - Fixed the issue that DAA function doesn't wait until all Rx data is read out from FIFO after master control done flag is set.
  - Fixed the issue that DAA function could return directly although the disabled interrupts are not enabled back.

[2.10.0]

- New features
  - Added I3C extended IBI data support.

[2.9.0]

- Improvements
  - Added adaptive termination for master blocking transfer. Set termination with start signal when receiving bytes less than 256.

[2.8.2]

- Improvements
  - Fixed the build warning due to armgcc strict check.

[2.8.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 17.7.

[2.8.0]

- Improvements
  - Added API I3C_MasterProcessDAASpecifiedBaudrate for temporary baud rate adjustment when I3C master assigns dynamic address.

[2.7.1]

- Bug Fixes
  - Fixed the issue that I3C slave handle STOP event before finishing data transmission.

[2.7.0]

- Fixed the CCM problem in file fsl_i3c.c.
- Fixed the FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND usage issue in I3C_GetDefaultConfig and I3C_Init.

[2.6.0]

- Fixed the FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND usage issue in fsl_i3c.h.
- Changed some static functions in fsl_i3c.c as non-static and define the functions in fsl_i3c.h to make I3C DMA driver reuse:
  - I3C_GetIBIType
  - I3C_GetIBIAddress
  - I3C_SlaveCheckAndClearError
- Changed the handle pointer parameter in IRQ related funtions to void * type to make it reuse in I3C DMA driver.
- Added new API I3C_SlaveRequestIBIWithSingleData for slave to request single data byte, this API could be used regardless slave is working in non-blocking interrupt or non-blocking dma.
- Added new API I3C_MasterGetDeviceListAfterDAA for master application to get the device information list built up in DAA process.

[2.5.4]

- Improved I3C driver to avoid setting state twice in the SendCommandState of I3C_RunTransferStateMachine.
- Fixed MISRA violation of rule 20.9.
- Fixed the issue that I3C_MasterEmitRequest did not use Type I3C SDR.

[2.5.3]

- Updated driver for new feature FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH and FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND.

[2.5.2]

- Updated driver for new feature FSL_FEATURE_I3C_HAS_NO_MERRWARN_TERM.
- Fixed the issue that call to I3C_MasterTransferBlocking API did not generate STOP signal when NAK status was returned.

[2.5.1]

- Improved the receive terminate size setting for interrupt transfer read, now it's set at beginning of transfer if the receive size is less than 256 bytes.

[2.5.0]

- Added new API I3C_MasterRepeatedStartWithRxSize to send repeated start signal with receive terminate size specified.
- Fixed the status used in I3C_RunTransferStateMachine, changed to use pending interrupts as status to be handled in the state machine.
- Fixed MISRA 2012 violation of rule 10.3, 10.7.

[2.4.0]

- Bug Fixes
  - Fixed kI3C_SlaveMatchedFlag interrupt is not properly handled in I3C_SlaveTransferHandleIRQ when it comes together with interrupt kI3C_SlaveBusStartFlag.
  - Fixed the inaccurate I2C baudrate calculation in I3C_MasterSetBaudRate.
  - Added new API I3C_MasterGetIBIRules to get registered IBI rules.
  - Added new variable isReadTerm in struct _i3c_master_handle for transfer state routine to check if MCTRL.RDTERM is configured for read transfer.
  - Changed to emit Auto IBI in transfer state routine for slave start flag assertion.
  - Fixed the slave maxWriteLength and maxReadLength does not be configured into SMAXLIMITS register issue.
  - Fixed incorrect state for IBI in I3C master interrupt transfer IRQ handle routine.
  - Added isHotJoin in i3c_slave_config_t to request hot-join event during slave init.

[2.3.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 17.7.
  - Fixed incorrect HotJoin event index in I3C_GetIBIType.

[2.3.1]

- Bug Fixes
  - Fixed the issue that call of I3C_MasterTransferBlocking/I3C_MasterTransferNonBlocking fails for the case which receive length 1 byte of data.
  - Fixed the issue that STOP signal is not sent when NAK status is detected during execution of I3C_MasterTransferBlocking function.

[2.3.0]

- Improvements
  - Added I3C common driver APIs to initialize I3C with both master and slave configuration.
  - Updated I3C master transfer callback to function set structure to include callback invoke for IBI event and slave2master event.
  - Updated I3C master non-blocking transfer model and always enable the interrupts to be able to re-act to the slave start event and handle slave IBI.

[2.2.0]

- Bug Fixes
  - Fixed the issue that I3C transfer size limit to 255 bytes.

[2.1.2]

- Bug Fixes
  - Reset default hkeep value to kI3C_MasterHighKeeperNone in I3C_MasterGetDefaultConfig

[2.1.1]

- Bug Fixes
  - Fixed incorrect FIFO reset operation in I3C Master Transfer APIs.
  - Fixed i3c slave IRQ handler issue, slave transmit could be underrun because tx FIFO is not filled in time right after start flag detected.

[2.1.0]

- Added definitions and APIs for I3C slave functionality, updated previous I3C APIs to support I3C functionality.

[2.0.0]

- Initial version.

IMU

[2.2.0]

- New Features
  - Added IMU_BUSY_POLL_COUNT parameter to prevent infinite polling loops in IMU operations.
  - Added timeout mechanism to all polling loops in IMU driver code.
- Improvements
  - Enhanced error handling in blocking functions to return timeout status.
  - Updated documentation to clarify timeout behavior and return values.
  - Added IMU_ERR_TIMEOUT error code for timeout conditions.

[2.1.1]

- Bug Fixes
  - Fix MISRA C-2012 violations.
  - Fixed IMU_GetStatusFlags bug that returns wrong RX FIFO status.

[2.1.0]

- Improvements:
  - Updated API prototype, remove CIU2_Type from parameters.

[2.0.0]

- Initial version.

LPADC

[2.9.3]

- Improvements
  - Add timeout for while loop code.

[2.9.2]

- Improvements
  - Fixed CERT-C issues.

[2.9.1]

- Bug Fixes
  - Fixed incorrect channel B FIFO selection logic.

[2.9.0]

- Bug Fixes
  - Add code to handle the case where GCC[GAIN_CAL] is a signed number.
  - Split LPADC_FinishAutoCalibration function into two functions.
  - Improved LPADC driver.

[2.8.4]

- Bug Fixes
  - Remove function 'LPADC_SetOffsetValue' assert statement, this statement may cause runtime errors in existing code.

[2.8.3]

- Bug Fixes
  - Fixed SDK lpadc driver examples compile issue, move condition 'commandId < ADC_CV_COUNT' to a more appropriate location.

[2.8.2]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rule 18.1, 10.3, 10.1 and 10.4.

[2.8.1]

- Bug Fixes
  - Fixed LPADC sample mode enum name mistake.

[2.8.0]

- Improvements
  - Release peripheral from reset if necessary in init function.
- Bug Fixes
  - Fixed function LPADC_GetConvResult() issue.
  - Fixed function LPADC_SetConvCommandConfig() bugs.

[2.7.2]

- Improvements
  - Use feature macros instead of header file macros.
- Bug Fixes
  - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.1]

- Improvements
  - Corrected descriptions of several functions.
  - Improved function LPADC_GetOffsetValue and LPADC_SetOffsetValue.
  - Revert changes of feature macros for lpadc.
  - Use feature macros instead of header file macros.
- Bug Fixes
  - Fixed the violations of MISRA C-2012 rule 10.8.
  - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.0]

- Improvements
  - Added supports of CFG2 register.
  - Removed some useless macros.

[2.6.2]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules.
  - Fixed LPADC driver code compile error issue.

[2.6.1]

- Improvements
  - Updated the use of macros in the driver code.

[2.6.0]

- Improvements
  - Added the API LPADC_SetOffset12BitValue() to configure 12bit ADC conversion offset trim value manually.
  - Added the API LPADC_SetOffset16BitValue() to configure 16bit ADC conversion offset trim value manually.
  - Added API to set offset calibration mode.
  - Added configuration of alternate channel.
  - Updated auto calibration API and added calibration value conversion API.
- New feature
  - Added API LPADC_EnableHardwareTriggerCommandSelection() to enable trigger commands controlled by ADC_ETC.
  - Updated LPADC_DoAutoCalibration() to allow doing something else before the ADC initialization to be totally complete. Enhance initialization duration time of the ADC.
  - Added two new APIs to get/set calibration value.

[2.5.2]

- Improvements
  - Added while loop, LPADC_GetConvResult() will return only when the FIFO will not be empty.

[2.5.1]

- Bug Fixes
  - Fixed some typos in Lpadc driver comments.

[2.5.0]

- Improvements
  - Added missing items to enable trigger interrupts.

[2.4.0]

- New features
  - Added APIs to get/clear trigger status flags.

[2.3.0]

- Improvements
  - Removed LPADC_MeasureTemperature() function for the LPADC supports different temperature sensor calculation equations.

[2.2.1]

- Improvements
  - Optimized LPADC_MeasureTemperature() function to support the specific series with flash solidified calibration value.
  - Clean doxygen warnings.
- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.3, rule 10.8 and rule 17.7.

[2.2.0]

- New Feature
  - Added API LPADC_MeasureTemperature() to get correct temperature from the internal sensor.
- Improvements
  - Separated lpadc_conversion_resolution_mode_t with related feature macro.
- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules:
    - Rule 10.3, 10.4, 10.6, 10.7 and 17.7.

[2.1.1]

- Improvements
  - Updated the gain calibration formula.
  - Used feature to segregate the new item kLPADC_TriggerPriorityPreemptSubsequently.

[2.1.0]

- New Features
  - Added the API LPADC_SetOffsetValue() to support configure offset trim value manually.
  - Added the API LPADC_DoOffsetCalibration() to do offset calibration independently.
- Improvements
  - Improved the usage of macros and removed invalid macros.

[2.0.2]

- Improvements
  - Added support for platforms with 2 FIFOs and different calibration measures.

[2.0.1]

- Bug Fixes
  - Ensured the API LPADC_SetConvCommandConfig configure related registers correctly.

[2.0.0]

- Initial version.

LPCMP

[2.3.2]

- Improvements
  - Fixed LPCMP CERT-C issues.

[2.3.1]

- Improvements
  - Update LPCMP driver to be compatible with platforms that do not support LPCMP nano power mode selection.

[2.3.0]

- New Feature
  - Added some new features for platforms which support
    - Plus input source selection.
    - Minus input source selection.
    - CMP to DAC link.
- Improvements
  - Removed some new features for platforms which doesn't support
    - Functional clock source selection.
    - DAC high power mode selection.
    - Round Robin clock source selection.
    - Round Robin trigger source selection.
    - Round Robin channel sample numbers setting.
    - Round Robin channel sample time threshold setting.
    - Round Robin internal trigger configuration.

[2.2.0]

- Improvements
  - Change FSL_FEATURE_LPCMP_HAS_NO_CCR0_CMP_STOP_EN to FSL_FEATURE_LPCMP_HAS_CCR0_CMP_STOP_EN.

[2.1.3]

- New Feature
  - Added new macro to handle the case where some instances do not have the CCR0 CMP_STOP_EN bit field.

[2.1.2]

- New Feature
  - Add macros to be compatible with some platforms that do not have the CCR0 CMP_STOP_EN bitfield.

[2.1.1]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.1.0]

- New Features:
  - Supported round robin mode and window mode feature.

[2.0.3]

- Bug Fixes:
  - Fixed the violation of MISRA-2012 rule 17.7.

[2.0.2]

- Bug Fixes:
  - The current API LPCMP_ClearStatusFlags has to check w1c bits.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.

LPI2C

[2.6.2]

- Improvements
  - Added timeout for while loop in LPI2C_TransferStateMachineSendCommand().

[2.6.1]

- Bug Fixes
  - Fixed coverity issues.

[2.6.0]

- New Feature
  - Added common IRQ handler entry LPI2C_DriverIRQHandler.

[2.5.7]

- Improvements
  - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
  - Fixed LPI2C_SlaveInit() - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
  - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
  - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
  - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
  - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
  - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
  - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
  - Before master transfer with transactional APIs, enable master function while disable slave function and vise versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_lpi2c.c.
- Bug Fixes
  - Fixed bug in LPI2C_MasterInit that the MCFGR2's value set in LPI2C_MasterSetBaudRate may be overwritten by mistake.

[2.3.2]

- Improvements
  - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
  - Updated LPI2C_GetCyclesForWidth to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
  - Fixed bug in LPI2C_SlaveTransferHandleIRQ that when restart detect event happens the transfer structure should not be cleared.
  - Fixed bug in LPI2C_RunTransferStateMachine, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.
  - Fixed bug in slave filter doze enable, that when FILTDZ is set it means disable rather than enable.
  - Fixed bug in the usage of LPI2C_GetCyclesForWidth. First its return value cannot be used directly to configure the slave FILTSDA, FILTSCL, DATAVD or CLKHOLD, because the real cycle width for them should be FILTSDA+3, FILTSCL+3, FILTSCL+DATAVD+3 and CLKHOLD+3. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
  - Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
  - Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features
  - Supported reading more than 256 bytes of data in one transfer as master.
  - Added API LPI2C_GetInstance.
- Bug Fixes

  - Fixed bug in LPI2C_MasterTransferAbortEDMA, LPI2C_MasterTransferAbort and LPI2C_MasterTransferHandleIRQ that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.
  - Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
  - Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be 2^prescaler rather than prescaler.
  - Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
  - Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes
  - Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
  - MISRA C-2012 issue fixed.
    * Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes
  - Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes
  - Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the kLPI2C_MasterNackDetectFlag is expected, so master should not check and clear kLPI2C_MasterNackDetectFlag when remainingBytes is zero, in case FIFO is emptied when stop command has not been sent yet.
  - Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    * Fixed rule 10.3, 14.4, 15.5.
  - Fixed unaligned access issue in LPI2C_RunTransferStateMachine.
  - Fixed uninitialized variable issue in LPI2C_MasterTransferHandleIRQ.

  - Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
  - Fixed MISRA issues.
    * Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
  - Fixed the waitTimes variable not re-assignment issue for each byte read.
- New Features
  - Added the IRQHandler for LPI2C5 and LPI2C6 instances.
- Improvements
  - Updated the LPI2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.

[2.1.9]

- Bug Fixes
  - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
  - Fixed Coverity issue of operands did not affect the result in LPI2C_SlaveReceive and LPI2C_SlaveSend.
  - Removed STOP signal wait when NAK detected.
  - Cleared slave repeat start flag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
  - Fixed the transfer issue with LPI2C_MasterTransferNonBlocking, kLPI2C_TransferNoStopFlag, with the wait transfer done through callback in a way of not doing a blocking transfer.
  - Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
  - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
  - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
  - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.

  - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
  - Extended the Driver IRQ handler to support LPI2C4.
  - Changed to use ARRAY_SIZE(kLpi2cBases) instead of FEATURE COUNT to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
  - Fixed the LPI2C_MasterTransferEDMA receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.
  - Fixed the issue by enabling IntMajor interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in LPI2C_MasterEDMACallback API.

[2.1.3]

- Improvements
  - Added LPI2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
  - Added LPI2C_MasterTransferBlocking API.

[2.1.2]

- Bug Fixes
  - In LPI2C_SlaveTransferHandleIRQ, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes
  - Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccesful sending of the start flag, so the transfer could not start.
  - Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
  - API name changed:
    * LPI2C_MasterTransferCreateHandle -> LPI2C_MasterCreateHandle.
    * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
    * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
    * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
    * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
    * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
    * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
    * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.

LPI2C_EDMA

[2.4.4]

- Improvements
  - Added support for 2KB data transfer

[2.4.3]

- Improvements
  - Added support for separated IRQ handlers.

[2.4.2]

- Improvements
  - Add EDMA ext API to accommodate more types of EDMA.

[2.4.1]

- Refer LPI2C driver change log 2.0.0 to 2.4.1

LPIT

[2.1.2]

- Bug Fixes
  - Fix CERT INT31-C issues.

[2.1.1]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.1.0]

- Improvements
  - Add new function LPIT_SetTimerValue to set timeout period.

[2.0.2]

- Improvements
  - Improved LPIT_SetTimerPeriod implementation, configure timeout value with LPIT ticks minus 1 generate more correct interval.
  - Added timeout value configuration check for LPIT_SetTimerPeriod, at least input 3 ticks for calling LPIT_SetTimerPeriod.
- Bug Fixes
  - Fixed MISRA C-2012 rule 17.7 violations.

[2.0.1]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.

[2.0.0]

- Initial version.

LPSPI

[2.7.3]

- Improvements
  - Added timeout for while loop in LPSPI_MasterTransferWriteAllTxData().
  - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.7.2]

- Bug Fixes
  - Fixed coverity issues.

[2.7.1]

- Bug Fixes
  - Workaround for errata ERR050607
  - Workaround for errata ERR010655

[2.7.0]

- New Feature
  - Added common IRQ handler entry LPSPI_DriverIRQHandler.

[2.6.10]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
  - Fixed reading of TCR register
  - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
  - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
  - Fixed the txData from void * to const void * in transmit API _lpspi_master_handle and _lpspi_slave_handle.

[2.6.6]

- Bug Fixes
  - Added LPSPI register init in LPSPI_MasterInit incase of LPSPI register exist.

[2.6.5]

- Improvements
  - Introduced FSL_FEATURE_LPSPI_HAS_NO_PCSCFG and FSL_FEATURE_LPSPI_HAS_NO_MULTI_WIDTH for conditional compile.
  - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
  - Added LPSPI6_DriverIRQHandler for LPSPI6 instance.

[2.6.3]

- Hot Fixes
  - Added macro switch in function LPSPI_Enable about ERRATA051472.

[2.6.2]

- Bug Fixes
  - Disabled lpspi before LPSPI_MasterSetBaudRate incase of LPSPI opened.

[2.6.1]

- Bug Fixes
  - Fixed return value while calling LPSPI_WaitTxFifoEmpty in function LPSPI_MasterTransferNonBlocking.

[2.6.0]

- Feature
  - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
  - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
  - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
  - Workaround for errata ERR050456 by resetting the entire module using LPSPIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
  - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
  - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
  - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
  - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
  - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
  - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
  - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
  - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
  - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
  - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
  - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
  - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
  - Fixed bug in LPSPI_SetPCSContinous when disabling PCS continous mode.

[2.2.0]

- Bug Fixes
  - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continous mode is not working.

[2.1.0]

- Improvements
  - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
  - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinous to support changing PCS selection and PCS continous mode.
- Bug Fixes
  - Fixed bug in non-blocking and EDMA transfer APIs that kStatus_InvalidArgument is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to kLPSPI_Busy by mistake causing following transfer can not start.
  - Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
  - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
  - Fixed the bug that LPSPI can not transfer large data using EDMA.
  - Fixed MISRA 17.7 issues.
  - Fixed variable overflow issue introduced by MISRA fix.
  - Fixed issue that rxFifoMaxBytes should be calculated according to transfer width rather than FIFO width.
  - Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
  - Fixed in LPSPI_MasterTransferBlocking that master rxfifo may overflow in stall condition.
  - Eliminated IAR Pa082 warnings.
  - Fixed MISRA issues.
    - Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
  - Removed LPSPI_Reset from LPSPI_MasterInit and LPSPI_SlaveInit, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
  - Added dummy data set up API to allow users to configure the dummy data to be transferred.
  - Enabled the 3-wire mode, SIN and SOUT pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
  - Fixed the bug that the clock source should be divided by the PRESCALE setting in LPSPI_MasterSetDelayTimes function.
  - Fixed the bug that LPSPI_MasterTransferBlocking function would hang in some corner cases.
- Optimization
  - Added #ifndef/#endif to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.

LPSPI_EDMA

[2.4.9]

- Improvements
  - Removed unused code from LPSPI_SeparateEdmaReadData().

[2.4.8]

- Improvements
  - Added timeout for while loop in EDMA_LpspiMasterCallback() and EDMA_LpspiSlaveCallback().

[2.4.7]

- Bug Fixes
  - Add macro LPSPI_ALIGN_TCD_SIZE_MASK to align an address to edma_tcd_t size.

[2.4.6]

- Improvements
  - Increased transmit FIFO watermark to ensure whole transmit FIFO will be used during data transfer.

[2.4.5]

- Bug Fixes
  - Fixed reading of TCR register
  - Workaround for errata ERR050606

[2.4.4]

- Improvements
  - Add EDMA ext API to accommodate more types of EDMA.

[2.4.3]

- Improvements
  - Supported 32K bytes transmit in DMA, improve the max datasize in LPSPI_MasterTransferEDMALite.

[2.4.2]

- Improvements
  - Added callback status in EDMA_LpspiMasterCallback and EDMA_LpspiSlaveCallback to check transferDone.

[2.4.1]

- Improvements
  - Add the TXMSK wait after TCR setting.

[2.4.0]

- Improvements
  - Separated LPSPI_MasterTransferEDMA functions to LPSPI_MasterTransferPrepareEDMA and LPSPI_MasterTransferEDMALite to optimize the process of transfer.

LPTMR

[2.2.1]

- Bug Fixes
  - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
  - Updated lptmr_prescaler_clock_select_t, only define the valid options.

[2.1.1]

- Improvements
  - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
  - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
  - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
  - Fixed MISRA-2012 issues.
    - Rule 10.1.

[2.0.1]

- Improvements
  - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.

LPUART

[2.10.0]

- New Feature
  - Added support to configure RTS watermark.

[2.9.4]

- Improvements
  - Merged duplicate code.

[2.9.3]

- Improvements
  - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
  - Fixed coverity issues.

[2.9.1]

- Bug Fixes
  - Fixed coverity issues.

[2.9.0]

- New Feature
  - Added support for swap TXD and RXD pins.
  - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
  - Fixed the bug that LPUART_TransferEnable16Bit controled by wrong feature macro.

[2.8.1]

- Bug Fixes
  - Fixed issue for MISRA-2012 check.
    - Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
  - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
  - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
  - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
  - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
  - Fixed the bug that the OSR calculation error when lupart init and lpuart set baud rate.

[2.7.1]

- Improvements
  - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
  - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
  - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
  - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
  - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
  - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes
  - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
  - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
  - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.
  - Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.
  - Deleted unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag, since firstly their function are the same as kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag, secondly to obtain them one data word must be read out thus interfering with the receiving process.
  - Fixed bug in LPUART_GetStatusFlags that the STAT[LBKDIF], STAT[MA1F] and STAT[MA2F] should be soc specific.
  - Fixed bug in LPUART_ClearStatusFlags that tx/rx FIFO is reset by mistake when clearing flags.
  - Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
  - Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
  - Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
  - Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
  - Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
  - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
  - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
  - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
  - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
  - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
  - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
  - Fixed issue for MISRA-2012 check.
    - Fixed rule-10.3, rule-14.4, rule-15.5.
  - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
  - Fixed MISRA issues.
    - Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
  - Added check for kLPUART_TransmissionCompleteFlag in LPUART_WriteBlocking, LPUART_TransferHandleIRQ, LPUART_TransferSendDMACallback and LPUART_SendEDMACallback to ensure all the data would be sent out to bus.
  - Rounded up the calculated sbr value in LPUART_SetBaudRate and LPUART_Init to achieve more acurate baudrate setting. Changed osr from uint32_t to uint8_t since osr's bigest value is 31.
  - Modified LPUART_ReadBlocking so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
  - Fixed issue for MISRA-2012 check.
    - Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
  - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
  - Do not set or clear the TIE/RIE bits when using LPUART_EnableTxDMA and LPUART_EnableRxDMA.

[2.2.4]

- Improvements
  - Added hardware flow control function support.
  - Added idle-line-detecting feature in LPUART_TransferNonBlocking function. If an idle line is detected, a callback is triggered with status kStatus_LPUART_IdleLineDetected returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.
  - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
  - Changed parameter type in LPUART_RTOS_Init struct from rtos_lpuart_config to lpuart_rtos_config_t.
- Bug Fixes
  - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may has a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
  - Added software reset feature support.
  - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
  - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
  - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
  - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
  - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
  - Update transactional APIs.

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0

LTC

[2.0.17]

- Bug fix:
  - Fix CMAC for payloads over one block, and if BRIC is present on the device, remove XCBC and “decrypt key” functionality

[2.0.16]

- Bug fix:
  - Fix unitialized GCC warning in LTC_AES_GenerateDecryptKey().

[2.0.15]

- Bug fix:
  - Fix MISRA-2012 issues.

[2.0.14]

- Improvements:
  - Add feature macro FSL_FEATURE_LTC_HAS_NO_CLOCK_CONTROL_BIT into LTC_Deinit function.

[2.0.13]

- Improvements:
  - Add feature macro FSL_FEATURE_LTC_HAS_NO_CLOCK_CONTROL_BIT into LTC_init function.

[2.0.12]

- Bug fix:
  - Fix AES Decrypt in CBC modes fail when used kLTC_DecryptKey.

[2.0.11]

- Bug fix:
  - Fix MISRA-2012 issues.

[2.0.10]

- Bug fix:
  - Fix MISRA-2012 issues.

[2.0.9]

- Bug fix:
  - Fix sign-compare warning in ltc_set_context and in ltc_get_context.

[2.0.8]

- Bug fix:
  - Fixed coverity issues introduced in 2.0.7

[2.0.7]

- Bug fix:
  - Fixed MISRA-2012 issues
    - Fixed rule 15.7. 10.1. 8.6. 10.7. 10.3, 11.6, 11.3, 10.8, 16.1.

[2.0.6]

- Bug fix:
  - Fixed [KPSDK-23603][LTC] AES Decrypt in ECB and CBC modes fail when ciphertext size > 0xff0 bytes.

[2.0.5]

- Improvements:
  - Fixed MISRA issues
    - Fixed rule 15.7, rule 14.4, rule 10.4, rule 18.4, rule 17.7, 5.7, 12.2.

[2.0.4]

- Improvements:
  - Constant LTC_PKHA_CompareBigNum() processing time.

[2.0.3]

- Bug fix:
  - Fixed LTC_PKHA_CompareBigNum() in case an integer argument is an array of all zeros.

[2.0.2]

- Bug fix:
  - Fixed [KPSDK-10932][LTC][SHA] LTC_HASH() blocks indefinitely when message size exceeds 4080 Bytes.

[2.0.1]

- Bug fix:
  - Fixed c++ build warning in block_to_ififo() functions.

[2.0.0]

- Initial version.

MCM

[2.2.0]

- Improvements
  - Support platforms with less features.

[2.1.0]

- Others
  - Remove byteID from mcm_lmem_fault_attribute_t for document update.

[2.0.0]

- Initial version.

MSCM

[2.0.0]

- Initial version.

MU

[2.8.0]

- New Features
  - Added MU1_BUSY_POLL_COUNT parameter to prevent infinite polling loops in MU operations.
  - Added timeout mechanism to all polling loops in MU driver code.
- Improvements
  - Updated function signatures to return status codes for better error handling:
    - Changed MU_ResetBothSides to return status_t instead of void
    - Updated MU_SendMsg to return status_t for timeout indication
    - Added new function MU_ReceiveMsgTimeout() to include timeout mechanism.
  - Enhanced documentation across all functions to clarify timeout behavior and return values.

[2.7.0]

- New Features
  - Added API MU_GetRxStatusFlags.

[2.6.0]

- New Features
  - Added API MU_GetInterruptsPending.

[2.5.1]

- Bug Fixes
  - Fixed the bug that MU_TriggerGeneralPurposeInterrupts and MU_TriggerInterrupts may trigger previous triggered general purpose interrupts again by mistake.

[2.5.0]

- New Features
  - Supported more than 4 general purpose interrupts.
  - Added seperate APIs for general purpose interrupts.

[2.4.0]

- Improvements
  - Supported the case that some features only avaiable with specific instances. These features include Hardware Reset, Boot Peer Core, Hold Reset. When using the features with instances which don't support them, driver will report error.

[2.3.3]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.3.2]

- Improvements
  - Supported platforms which don't have CCR0[RSTH], CCR0[CLKE], CCR0[HR], CCR0[HRM].

[2.3.1]

- Bug Fixes
  - Fixed build error for platforms which have CCR0[RSTH], but no CCR0[NMI].

[2.3.0]

- New features
  - Added support for i.MX RT7xx.

[2.2.1]

- Bug Fixes
  - Fixed issue that MU_GetInstance() is defined but never used.

[2.2.0]

- New features
  - Added support for i.MX RT118x.
- Bug Fixes
  - Fixed general purpose interrupt bug.
- Other Changes
  - Change _mu_interrupt_trigger item value.

[2.1.2]

- Bug Fixes
  - Fixed bug that general purpose interrupt can't be configured.

[2.1.1]

- Bug Fixes
  - Fixed MISRA C-2012 issues.

[2.1.0]

- Improvements
  - Added new enum mu_msg_reg_index_t.

[2.0.0]

- Initial version.

PORT

[2.5.1]

- Bug Fixes
  - Fix CERT INT31-C issues.

[2.5.0]

- Bug Fixes
  - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
  - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
  - Added new APIs for Electrical Fast Transient(EFT) detect.
  - Added new API to configure port voltage range.

[2.2.0]

- New Features
  - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4□11.3□11.8, 14.4.

[2.1.0]

- New Features
  - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
  - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
  - Added “const” in function parameter.
  - Updated some enumeration variables’ names.

RTC

[2.4.0]

- New features
  - Add support for RTC clock output.
  - Add support for RTC time seconds interrupt configuration.

[2.3.3]

- Bug Fixes
  - Fix RTC_GetDatetime function validating datetime issue.

[2.3.2]

- Improvements
  - Handle errata 010716: Disable the counter before setting alarm register and then reenable the counter.

[2.3.1]

- Bug Fixes
  - Fixed CERT INT31-C violations.

[2.3.0]

- Improvements
  - Added API RTC_EnableLPOClock to set 1kHz LPO clock.
  - Added API RTC_EnableCrystalClock to replace API RTC_SetClockSource.

[2.2.2]

- Improvements
  - Refine _rtc_interrupt_enable order.

[2.2.1]

- Bug Fixes
  - Fixed the issue of Pa082 warning.
  - Fixed the issue of bit field mask checking.
  - Fixed the issue of hard code in RTC_Init.

[2.2.0]

- Bug Fixes
  - Fixed MISRA C-2012 issue.
    - Fixed rule contain: rule-17.7, rule-14.4, rule-10.4, rule-10.7, rule-10.1, rule-10.3.
  - Fixed central repository code formatting issue.
- Improvements
  - Added an API for enabling wakeup pin.

[2.1.0]

- Improvements
  - Added feature macro check for many features.

[2.0.0]

- Initial version.

SEMA42

[2.1.1]

- Improvements
  - Updated SEMA42_TryLock function to avoid unsigned integer operations wrap issue.

[2.1.0]

- New Features
  - Added SEMA42_BUSY_POLL_COUNT parameter to prevent infinite polling loops in SEMA42 operations.
  - Added timeout mechanism to all polling loops in SEMA42 driver code.
- Improvements
  - Updated SEMA42_Lock function to return status_t instead of void for better error handling.
  - Enhanced documentation to clarify timeout behavior and return values.

[2.0.4]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.0.3]

- Improvements
  - Changed to implement SEMA42_Lock base on SEMA42_TryLock.

[2.0.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 17.7.

[2.0.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.3, 10.4, 14.4, 18.1.

[2.0.0]

- Initial version.

SFA

[2.1.3]

- Improvements
  - Add timeout for APIs with dfmea issues.

[2.1.2]

- Improvements
  - Updated SFA_ClearStatusFlag() function to support clearing all status flags.

[2.1.1]

- Improvements
  - Updated SFA driver code to reduce code redundancy.
  - Updated the use of macros in the driver code to enable the CUT pin function.

[2.1.0]

- Improvements
  - Updated how the clock frequency under test is calculated.
  - Supported configuration reference clock source.
  - Added clock count limit APIs.
  - Added macros to support fields that are configurable in different instances.

[2.0.1]

- Bug Fixes
  - Fixed the issue in SFA_Mode0Calculate function.
- Improvements
  - For the devices that support RF SFA, cast the peripheral structure to SFA_Type.

[2.0.0]

- Initial version.

SMSCM

[2.0.0]

- Initial version.

SPC

[2.7.0]

- Improvements
  - Added new APIs to control VDD Core Glitch Detector.

[2.6.1]

- Improvements
  - Add timeout for while loop code.

[2.6.0]

- New Features
  - Added new feature FSL_FEATURE_SPC_HAS_SC_SPC_LP_REQ_BIT for compatibility with new platforms that do not support the SPC SC[SPC_LP_REQ] bitfield.

[2.5.0]

- New Features
  - Added new function group to support high power feature.

[2.4.1]

- Improvements
  - Added the new feature FSL_FEATURE_SPC_HAS_SC_REG_BUSY to support the device which has the SC[REG_BUSY] bitfield.

[2.4.0]

- Improvements
  - Set functions of VD_SYS_CFG[LVSEL] configuration as deprecated, since this bit filed is reserved for all devices.

[2.3.0]

- Improvements
  - Added SPC_SetSRAMOperateVoltage() to set SRAM operate voltage.
- Bug Fixes
  - Fixed the issue in SPC_SetDCDCBurstConfig() function.
  - Fixed a bug that is SPC has VDD_DS the voltage is not configured correctly.

[2.2.0]

- Bug Fixes
  - The default value of ACTIVE_CFG[CORELDO_VDD_DS] bit is 1, removed code of set that bit.
  - Fixed an issue of SPC_SetDCDCBurstConfig() to avoid program stuck in a while loop.
  - Removed some duplicate code that never reached.
- Improvements
  - Added two APIs to control Vdd core glitch detect feature in Active/lowpower modes.

[2.1.0]

- Improvements
  - Improved the spc_dcdc_voltage_level_t enumeration.
  - Added some low power request check APIs.
  - Added SPC_SoftwareGatePowerSwitch() and SPC_PowerModeControlPowerSwitch() function.

  - If APIs' parameters is in type of structure pointer, set it to const structure pointer.
- Bug Fixes
  - Fixed the issue in SPC_SetDCDCRefreshCount() function.
  - Fixed some issues in voltage detect enable APIs.
  - Fixed some issues in Bandgap control APIs.
  - Fixed some issues in regulator active/lowpower mode configuration APIs.

[2.0.2]

- Bug Fixes
  - Fixed the doxygen issue by adding missed comments.

[2.0.1]

- Bug Fixes
  - The enumerator spc_core_ldo_voltage_level_t may different for different devices, added the macro to separate different scenes.

[2.0.0]

- Initial version.

SYSPM

[2.3.1]

- Improvements
  - Add timeout for while loop.

[2.3.0]

- New Features
  - Supported instruction counter.

[2.2.0]

- New Features
  - Supported platforms which only have one monitor.
  - Supported platforms whose instrction counter can't be cleared.
  - Supported platforms whose counter can't be disabled.

[2.1.0]

- New Features
  - Added new APIs SYSPM_Init and SYSPM_Deinit.

[2.0.0]

- Initial version.

TPM

[2.4.1]

- Improvements
  - Add Coverage Justification for uncovered code.

[2.4.0]

- New Feature
  - Added while loop timeout for MOD CnV CnSC and SC register write sequence.
  - Change the return type from void to status_t for following API:
    - TPM_DisableChannel
    - TPM_EnableChannel
    - TPM_SetupOutputCompare
    - TPM_SetTimerPeriod
    - TPM_StopTimer

[2.3.6]

- Bug Fixes
  - Fixed CERT INT30-C INT31-C issue for TPM_SetupDualEdgeCapture.

[2.3.5]

- New Feature
  - Added IRQ handler entry for TPM2.

[2.3.4]

- New Feature
  - Added common IRQ handler entry TPM_DriverIRQHandler.

[2.3.3]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.2]

- Bug Fixes
  - Fixed ERR008085 TPM writing the TPMx_MOD or TPMx_CnV registers more than once may fail when the timer is disabled.

[2.3.1]

- Bug Fixes
  - Fixed compilation error when macro FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL is 1.

[2.3.0]

- Improvements
  - Create callback feature for TPM match and timer overflow interrupts.

[2.2.4]

- Improvements
  - Add feature macros(FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_EN, FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_SYNC).

[2.2.3]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.2.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.4.

[2.2.1]

- Bug Fixes
  - Fixed CCM issue by splitting function from TPM_SetupPwm() function to reduce function complexity.
  - Fixed violations of MISRA C-2012 rule 17.7.

[2.2.0]

- Improvements
  - Added TPM_SetChannelPolarity to support select channel input/output polarity.
  - Added TPM_EnableChannelExtTrigger to support enable external trigger input to be used by channel.
  - Added TPM_CalculateCounterClkDiv to help calculates the counter clock prescaler.
  - Added TPM_GetChannelValue to support get TPM channel value.
  - Added new TPM configuration.
    - syncGlobalTimeBase
    - extTriggerPolarity
    - chnlPolarity
  - Added new PWM signal configuration.

        * secPauseLevel
- Bug Fixes
  - Fixed TPM_SetupPwm can't configure 0% combined PWM issues.

[2.1.1]

- Improvements
  - Add feature macro for PWM pause level select feature.

[2.1.0]

- Improvements
  - Added TPM_EnableChannel and TPM_DisableChannel APIs.
  - Added new PWM signal configuration.
    * pauseLevel - Support select output level when counter first enabled or paused.
    * enableComplementary - Support enable/disable generate complementary PWM signal.
    * deadTimeValue - Support deadtime insertion for each pair of channels in combined PWM mode.
- Bug Fixes
  - Fixed issues about channel MSnB:MSnA and ELSnB:ELSnA bit fields and CnV register change request acknowledgement. Writes to these bits are ignored when the interval between successive writes is less than the TPM clock period.

[2.0.8]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.4 ,10.7 and 14.4.

[2.0.7]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.4 and 17.7.

[2.0.6]

- Bug Fixes
  - Fixed Out-of-bounds issue.

[2.0.5]

- Bug Fixes
  - Fixed MISRA-2012 rules.
    * Rule 10.6, 10.7

[2.0.4]

- Bug Fixes
  - Fixed ERR050050 in functions TPM_SetupPwm/TPM_UpdatePwmDutycycle. When TPM was configured in EPWM mode as PS = 0, the compare event was missed on the first reload/overflow after writing 1 to the CnV register.

[2.0.3]

- Bug Fixes
  - MISRA-2012 issue fixed.
    - Fixed rules: rule-12.1, rule-17.7, rule-16.3, rule-14.4, rule-1.3, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-10.6, and rule-18.1.

[2.0.2]

- Bug Fixes
  - Fixed issues in functions TPM_SetupPwm/TPM_UpdateChnlEdgeLevelSelect /TPM_SetupInputCapture/TPM_SetupOutputCompare/TPM_SetupDualEdgeCapture, wait acknowledgement when the channel is disabled.

[2.0.1]

- Bug Fixes
  - Fixed TPM_UpdateChnIEdgeLevelSelect ACK wait issue.
  - Fixed the issue that TPM_SetupdualEdgeCapture could not set FILTER register.
  - Fixed TPM_UpdateChnEdgeLevelSelect ACK wait issue.

[2.0.0]

- Initial version.

TRDC

[2.3.0]

- New Features
  - Added API TRDC_EnableProcessorDomainAssignment to disable/enable DAC.
- Bug Fixes
  - Fixed MISRA violation of missing function declaration.
  - Fixed wrong operation of domain mask in TRDC_MbcNseClearAll and TRDC_MrcDomainNseClear.

[2.2.1]

- Bug Fixes
  - Fixed MISRA violations of rule 10.3.

[2.2.0]

- New Features
  - Added new APIs to support SoC with more than one processor core.

[2.1.1]

- Bug Fixes
  - Fixed MISRA violations of rule 10.3, 10.6, 10.7 and 18.1.

[2.1.0]

- Improvements
  - Modified some of the addressing method according to the device header file's update.
  - Modified flash address configuration structure and default setting.
- New Features
  - Added API to set flash logic window array address.
- Bug Fixes
  - Fixed wrong return value of TRDC_GetFlashLogicalWindowPbase.
  - Fixed bug in TRDC_GetAndClearFirstSpecificDomainError that the error status is cleared by mistake before obtained by software.
  - Fixed MISRA violations of rule 10.3, 10.4, 10.6 and 10.8.

[2.0.0]

- Initial version.

TRGMUX

[2.0.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.1, 10.3, 10.8.

[2.0.0]

- Initial version.

TSTMR

[2.1.0]

- New Features
  - Support configured clock frequency.
  - Add TSTMR_Init and TSTMR_init APIs.
- Improvements

  - Change TSTMR_DelayUs from static inline function to normal function.

[2.0.4]

- Bugfix
  - Fix MISRA C-2012 Rule 10.4 and 14.4 issues.

[2.0.3]

- Bugfix
  - Fix CERT INT30-C that Unsigned integer operation TSTMR_ReadTimeStamp(base) - startTime may wrap.

[2.0.2]

- Improvements
  - Support 24MHz clock source.
- Bugfix
  - Fix MISRA C-2012 Rule 10.4 issue.
  - Read of TSTMR HIGH must follow TSTMR LOW atomically: require masking interrupt around 2 LSB / MSB accesses.

[2.0.1]

- Bugfix
  - Restrict to read with 32-bit accesses only.
  - Restrict that TSTMR LOW read occurs first, followed by the TSTMR HIGH read.

[2.0.0]

- Initial version.

VBAT

[2.1.1]

- Improvements
  - Added timeout for while loop.

[2.1.0]

- Improvements
  - Both FROCFGA and LDOCFGA registers are set as internal register, removed corresponding interfaces.

[2.0.0]

- Initial version.

VREF

[2.4.0]

- Improvements
  - Support TEST_UNLOCK and TRIM0 registers read and write.

[2.3.0]

- Improvements
  - Add feature macros for compatibility with some platforms that don't have CSR[LPBG_BUF_EN] and UTRIM[TRIM2V1].

[2.2.2]

- Bug Fixes
  - Fixed typo in vref_buffer_mode_t enumerator.

[2.2.1]

- Improvements
  - Updated VREF driver code to reduce code redundancy.

[2.2.0]

- Improvements
  - Remove API VREF_SetTrimVal and VREF_GetTrimVal
  - Add new API VREF_SetVrefTrimVal,VREF_SetTrim21Val,VREF_GetVrefTrimVal and VREF_GetTrim21Val
  - Updated VREF driver code to conform to VREF IP architecture.

[2.1.0]

- Improvements
  - Remove API VREF_SetTrimVal and VREF_GetTrimVal
  - Add new API VREF_SetVrefTrimVal,VREF_SetTrim21Val,VREF_GetVrefTrimVal and VREF_GetTrim21Val
  - Updated VREF driver code to conform to VREF IP architecture.
- Bug Fixes
  - Fix issue which progeam stuck in VREF_Init

[2.0.0]

- Initial version.

WDOG32

[2.2.1]

- Bug Fixes
  - Fix CERT INT31-C that the bool value shall be converted to unsigned int 0 or 1 then passed to registers.
  - Fix MISRA 2012 20.3 vilation.

[2.2.0]

- Improvements
  - Added while loop timeout config value for WDOG32 reconfiguration and unlock sequence.
  - Change the return type of WDOG32_Init, WDOG32_Deinit and WDOG32_Unlock from void to status_t.

[2.1.0]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.0.4]

- Improvements
  - To ensure that the reconfiguration is inside 128 bus clocks unlock window, put all reconfiguration APIs in quick access code section.

[2.0.3]

- Bug Fixes
  - Fixed the noncompliance issue of the reference document.
    - Waited until for new configuration to take effect by checking the RCS bit field.
    - Waited until for registers to be unlocked by checking the ULK bit field.
- Improvements
  - Added 128 bus clocks delay ensures a smooth transition before restarting the counter with the new configuration when there is no RCS status bit.

[2.0.2]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.
  - Fixed the issue of the inseparable process interrupted by other interrupt source.
    - WDOG32_Refresh

[2.0.1]

- Bug Fixes
  - WDOG must be configured within its configuration time period.
    - Added WDOG32_Init API to quick access section.
    - Defined register variable in WDOG32_Init API.

[2.0.0]

- Initial version.

WUU

[2.4.0]

- New Features
  - Added WUU_ClearExternalWakeupPinsConfig() to clear settings of PDC and PE register.

[2.3.0]

- New Features
  - Added WUU_ClearInternalWakeUpModulesConfig() to clear settings of DM and ME register.

[2.2.1]

- Bug Fixes
  - Fixed WUU_SetPinFilterConfig() unable to set edge detection of pin filter config.
  - Fixed wrong macro used in WUU_GetPinFilterFlag() function.

[2.2.0]

- New Features
  - Added the WUU_GetExternalWakeupPinFlag() and WUU_ClearExternalWakeupPinFlag() function .

[2.1.0]

- New Features
  - Added the WUU_GetModuleInterruptFlag() function to support the devices that equipped MF register.

[2.0.0]

- Initial version.

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

MCXW727C

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 Wireless Bluetooth LE host stack and applications

examples__wireless_examples__bluetooth_docs

1.7.2 Wireless zigbee stack

zigbee

1.7.3 IEEE 802.15.4 MACPHY Software

middleware_wireless_ieee_802_15_4

1.7.4 Wireless Connectivity Framework

framework

1.7.5 Multicore

multicore

1.7.6 FreeMASTER

freemaster

1.7.7 FreeRTOS

FreeRTOS

Chapter 2

MCXW727C

2.1 CACHE: LPCAC CACHE Memory Controller

static inline void L1CACHE_EnableCodeCache(void)
Enables the processor code bus cache.

static inline void L1CACHE_DisableCodeCache(void)
Disables the processor code bus cache.

static inline void L1CACHE_InvalidateCodeCache(void)
Invalidates the processor code bus cache.

void L1CACHE_InvalidateICacheByRange(uint32_t address, uint32_t size_byte)
Invalidates L1 instrument cache by range.

Parameters

- address – The start address of the memory to be invalidated.
- size_byte – The memory size.

static inline void L1CACHE_InvalidateDCacheByRange(uint32_t address, uint32_t size_byte)
Invalidates L1 data cache by range.

Parameters

- address – The start address of the memory to be invalidated.
- size_byte – The memory size.

static inline void L1CACHE_CleanDCacheByRange(uint32_t address, uint32_t size_byte)
Cleans L1 data cache by range.

The cache is write through mode, so there is nothing to do with the cache flush/clean operation.

Parameters

- address – The start address of the memory to be cleaned.
- size_byte – The memory size.

static inline void L1CACHE_CleanInvalidateDCacheByRange(uint32_t address, uint32_t size_byte)
Cleans and Invalidates L1 data cache by range.

Parameters

- address – The start address of the memory to be clean and invalidated.

- size_byte – The memory size.

static inline void ICACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)

Invalidates instruction cache by range.

Parameters

- address – The physical address.
- size_byte – size of the memory to be invalidated.

static inline void DCACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)

Invalidates data cache by range.

Parameters

- address – The physical address.
- size_byte – size of the memory to be invalidated.

static inline void DCACHE_CleanByRange(uint32_t address, uint32_t size_byte)

Clean data cache by range.

Parameters

- address – The physical address.
- size_byte – size of the memory to be cleaned.

static inline void DCACHE_CleanInvalidateByRange(uint32_t address, uint32_t size_byte)

Cleans and Invalidates data cache by range.

Parameters

- address – The physical address.
- size_byte – size of the memory to be Cleaned and Invalidated.

FSL_CACHE_DRIVER_VERSION

cache driver version 2.1.1.

2.2 CCM32K: 32kHz Clock Control Module

void CCM32K_Enable32kFro(CCM32K_Type *base, bool enable)

Enable/Disable 32kHz free-running oscillator.

Note: There is a start up time before clocks are output from the FRO.

Note: To enable FRO32k and set it as 32kHz clock source please follow steps:

```
CCM32K_Enable32kFro(base, true);        //Enable FRO analog oscillator.
CCM32K_DisableCLKOutToPeripherals(base, mask); //Disable clock out.
CCM32K_SelectClockSource(base, kCCM32K_ClockSourceSelectFro32k); //Select FRO32k as clock␣
↪source.
while(CCM32K_GetStatus(base) != kCCM32K_32kFroActiveStatusFlag); //Check FOR32k is active␣
↪and in used.
CCM32K_EnableCLKOutToPeripherals(base, mask); //Enable clock out if needed.
```

Parameters

- base – CCM32K peripheral base address.

- enable – Boolean value to enable or disable the 32kHz free-running oscillator. true — Enable 32kHz free-running oscillator. false — Disable 32kHz free-running oscillator.

static inline void CCM32K_Lock32kFroWriteAccess(CCM32K_Type *base)

Lock all further write accesses to the FRO32K_CTRL register until a POR occurs.

Parameters

- base – CCM32K peripheral base address.

static inline uint16_t CCM32K_Get32kFroTrimValue(CCM32K_Type *base)

Get frequency trim value of 32kHz free-running oscillator.

Parameters

- base – CCM32K peripheral base address.

Returns

The current trim value.

void CCM32K_Set32kFroTrimValue(CCM32K_Type *base, uint16_t trimValue)

Set the frequency trim value of 32kHz free-running oscillator by software.

Note: The frequency is decreased monotonically when the trimValue is changed progressively from 0x0U to 0x7FFU.

Note: If the FRO32 is enabled before invoking this function, then in this function the FRO32 will be disabled, after updating trim value the FRO32 will be re-enabled.

Parameters

- base – CCM32K peripheral base address.
- trimValue – The frequency trim value.

static inline void CCM32K_Disable32kFroIFRLoad(CCM32K_Type *base, bool disable)

Disable/Enable the function of setting 32kHz free-running oscillator trim value when IFR value gets loaded in the SOC.

Parameters

- base – CCM32K peripheral base address.
- disable – Boolean value to disable or enable IFR loading function. true — Disable IFR loading function. false — Enable IFR loading function.

static inline void CCM32K_Lock32kFroTrimWriteAccess(CCM32K_Type *base)

Lock all further write accesses to the FRO32K_TRIM register until a POR occurs.

Parameters

- base – CCM32K peripheral base address.

void CCM32K_Set32kOscConfig(CCM32K_Type *base, *ccm32k_osc_mode_t* mode, const *ccm32k_osc_config_t* *config)

Config 32k Crystal Oscillator.

Note: When the mode selected as kCCM32K_Disable32kHzCrystalOsc or kCCM32K_Bypass32kHzCrystalOsc the parameter config is useless, so it can be set as

"NULL".

Note: To enable OSC32K and select it as clock source of 32kHz please follow steps:

```
CCM32K_Set32kOscConfig(base, kCCM32K_Enable32kHzCrystalOsc, config); //Enable OSC32k and␣
↪set config.
while((CCM32K_GetStatus(base) & kCCM32K_32kOscReadyStatusFlag) == 0UL); //Check if␣
↪OSC32K is stable.
CCM32K_DisableCLKOutToPeripherals(base, mask); //Disable clock out.
CCM32K_SelectClockSource(base, kCCM32K_ClockSourceSelectOsc32k); //Select OSC32k as clock␣
↪source.
while((CCM32K_GetStatus(base) & kCCM32K_32kOscActiveStatusFlag) == 0UL); //Check if␣
↪OSC32K is used as clock source.
CCM32K_EnableCLKOutToPeripherals(base, mask); //Enable clock out.
```

Parameters

- base – CCM32K peripheral base address.
- mode – The mode of 32k crystal oscillator.
- config – The pointer to the structure ccm32k_osc_config_t.

static inline void CCM32K_Lock32kOscWriteAccess(CCM32K_Type *base)

Lock all further write accesses to the OSC32K_CTRL register until a POR occurs.

Parameters

- base – CCM32K peripheral base address.

void CCM32K_EnableClockMonitor(CCM32K_Type *base, bool enable)

Enable/disable clock monitor.

Parameters

- base – CCM32K peripheral base address.
- enable – Used to enable/disable clock monitor.
  - **turn** Enable clock monitor.
  - **false** Disable clock monitor.

static inline void CCM32K_SetClockMonitorFreqTrimValue(CCM32K_Type *base, *ccm32k_clock_monitor_freq_trim_value_t* trimValue)

Set clock monitor frequency trim value.

Parameters

- base – CCM32K peripheral base address.
- trimValue – Clock minitor frequency trim value, please refer to ccm32k_clock_monitor_freq_trim_value_t.

static inline void CCM32K_SetClockMonitorDivideTrimValue(CCM32K_Type *base, *ccm32k_clock_monitor_divide_trim_value_t* trimValue)

Set clock monitor divide trim value.

Parameters

- base – CCM32K peripheral base address.

- trimValue – Clock minitor divide trim value, please refer to ccm32k_clock_monitor_divide_trim_value_t.

void CCM32K_SetClockMonitorConfig(CCM32K_Type *base, const *ccm32k_clock_monitor_config_t* *config)

Config clock monitor one time, including frequency trim value, divide trim value.

Parameters

- base – CCM32K peripheral base address.
- config – Pointer to ccm32k_clock_monitor_config_t structure.

static inline void CCM32K_LockClockMonitorWriteAccess(CCM32K_Type *base)

Lock all further write accesses to the CLKMON_CTRL register until a POR occurs.

Parameters

- base – CCM32K peripheral base address.

static inline void CCM32K_EnableCLKOutToPeripherals(CCM32K_Type *base, uint8_t peripheralMask)

Enable 32kHz clock output to selected peripherals.

Parameters

- base – CCM32K peripheral base address.
- peripheralMask – The mask of peripherals to enable 32kHz clock output, should be the OR'ed value of ccm32k_clock_output_peripheral_t.

static inline void CCM32K_DisableCLKOutToPeripherals(CCM32K_Type *base, uint8_t peripheralMask)

Disable 32kHz clock output to selected peripherals.

Parameters

- base – CCM32K peripheral base address.
- peripheralMask – The mask of peripherals to disable 32kHz clock output, should be the OR'ed value of ccm32k_clock_output_peripheral_t.

static inline void CCM32K_SelectClockSource(CCM32K_Type *base, *ccm32k_clock_source_select_t* clockSource)

Select CCM32K module's clock source which will be provide to the device.

Parameters

- base – CCM32K peripheral base address.
- clockSource – Used to select clock source, please refer to ccm32k_clock_source_select_t for details.

static inline void CCM32K_LockClockGateWriteAccess(CCM32K_Type *base)

Lock all further write access to the CGC32K register until a POR occurs.

Parameters

- base – CCM32K peripheral base address.

static inline uint32_t CCM32K_GetStatusFlag(CCM32K_Type *base)

Get the status flag.

Parameters

- base – CCM32K peripheral base address.

Returns
The status flag of the current node. The enumerator of status flags have been provided, please see the Enumerations title for details.

ccm32k_state_t CCM32K_GetCurrentState(CCM32K_Type *base)

Get current state.

Parameters

- base – CCM32K peripheral base address.

Returns
The CCM32K's current state, please refer to ccm32k_state_t for details.

ccm32k_clock_source_t CCM32K_GetClockSource(CCM32K_Type *base)

Return current clock source.

Parameters

- base – CCM32K peripheral base address.

Return values

- kCCM32K_ClockSourceNone – The none clock source is selected.
- kCCM32K_ClockSource32kFro – 32kHz free-running oscillator is selected as clock source.
- kCCM32K_ClockSource32kOsc – 32kHz crystal oscillator is selected as clock source..

FSL_CCM32K_DRIVER_VERSION

CCM32K driver version 2.2.0.

enum _ccm32k_osc_xtal_cap

The enumerator of internal capacitance of OSC's XTAL pin.

Values:

enumerator kCCM32K_OscXtal0pFCap
The internal capacitance for XTAL pin is 0pF.

enumerator kCCM32K_OscXtal2pFCap
The internal capacitance for XTAL pin is 2pF.

enumerator kCCM32K_OscXtal4pFCap
The internal capacitance for XTAL pin is 4pF.

enumerator kCCM32K_OscXtal6pFCap
The internal capacitance for XTAL pin is 6pF.

enumerator kCCM32K_OscXtal8pFCap
The internal capacitance for XTAL pin is 8pF.

enumerator kCCM32K_OscXtal10pFCap
The internal capacitance for XTAL pin is 10pF.

enumerator kCCM32K_OscXtal12pFCap
The internal capacitance for XTAL pin is 12pF.

enumerator kCCM32K_OscXtal14pFCap
The internal capacitance for XTAL pin is 14pF.

enumerator kCCM32K_OscXtal16pFCap
The internal capacitance for XTAL pin is 16pF.

enumerator kCCM32K_OscXtal18pFCap
The internal capacitance for XTAL pin is 18pF.

enumerator kCCM32K_OscXtal20pFCap
The internal capacitance for XTAL pin is 20pF.

enumerator kCCM32K_OscXtal22pFCap
The internal capacitance for XTAL pin is 22pF.

enumerator kCCM32K_OscXtal24pFCap
The internal capacitance for XTAL pin is 24pF.

enumerator kCCM32K_OscXtal26pFCap
The internal capacitance for XTAL pin is 26pF.

enumerator kCCM32K_OscXtal28pFCap
The internal capacitance for XTAL pin is 28pF.

enumerator kCCM32K_OscXtal30pFCap
The internal capacitance for XTAL pin is 30pF.

enum _ccm32k_osc_extal_cap
The enumerator of internal capacitance of OSC's EXTAL pin.

Values:

enumerator kCCM32K_OscExtal0pFCap
The internal capacitance for EXTAL pin is 0pF.

enumerator kCCM32K_OscExtal2pFCap
The internal capacitance for EXTAL pin is 2pF.

enumerator kCCM32K_OscExtal4pFCap
The internal capacitance for EXTAL pin is 4pF.

enumerator kCCM32K_OscExtal6pFCap
The internal capacitance for EXTAL pin is 6pF.

enumerator kCCM32K_OscExtal8pFCap
The internal capacitance for EXTAL pin is 8pF.

enumerator kCCM32K_OscExtal10pFCap
The internal capacitance for EXTAL pin is 10pF.

enumerator kCCM32K_OscExtal12pFCap
The internal capacitance for EXTAL pin is 12pF.

enumerator kCCM32K_OscExtal14pFCap
The internal capacitance for EXTAL pin is 14pF.

enumerator kCCM32K_OscExtal16pFCap
The internal capacitance for EXTAL pin is 16pF.

enumerator kCCM32K_OscExtal18pFCap
The internal capacitance for EXTAL pin is 18pF.

enumerator kCCM32K_OscExtal20pFCap
The internal capacitance for EXTAL pin is 20pF.

enumerator kCCM32K_OscExtal22pFCap
The internal capacitance for EXTAL pin is 22pF.

enumerator kCCM32K_OscExtal24pFCap
The internal capacitance for EXTAL pin is 24pF.

enumerator kCCM32K_OscExtal26pFCap
The internal capacitance for EXTAL pin is 26pF.

enumerator kCCM32K_OscExtal28pFCap
The internal capacitance for EXTAL pin is 28pF.

enumerator kCCM32K_OscExtal30pFCap
The internal capacitance for EXTAL pin is 30pF.

enum _ccm32k_osc_fine_adjustment_value
The enumerator of osc amplifier gain fine adjustment. Changes the oscillator amplitude by modifying the automatic gain control (AGC).

Values:

enumerator kCCM32K_OscFineAdjustmentRange0

enum _ccm32k_osc_coarse_adjustment_value
The enumerator of osc amplifier coarse fine adjustment. Tunes the internal transconductance (gm) by increasing the current.

Values:

enumerator kCCM32K_OscCoarseAdjustmentRange0

enumerator kCCM32K_OscCoarseAdjustmentRange1

enumerator kCCM32K_OscCoarseAdjustmentRange2

enumerator kCCM32K_OscCoarseAdjustmentRange3

enum _ccm32k_osc_mode
The enumerator of 32kHz oscillator.

Values:

enumerator kCCM32K_Disable32kHzCrystalOsc
Disable 32kHz Crystal Oscillator.

enumerator kCCM32K_Enable32kHzCrystalOsc
Enable 32kHz Crystal Oscillator.

enumerator kCCM32K_Bypass32kHzCrystalOsc
Bypass 32kHz Crystal Oscillator, use the 32kHz Oscillator or external 32kHz clock.

The enumerator of CCM32K status flag.

Values:

enumerator kCCM32K_32kOscReadyStatusFlag
Indicates the 32kHz crystal oscillator is stable.

enumerator kCCM32K_32kOscActiveStatusFlag
Indicates the 32kHz crystal oscillator is active and in use.

enumerator kCCM32K_32kFroActiveStatusFlag
Indicates the 32kHz free running oscillator is active and in use.

enumerator kCCM32K_ClockDetectStatusFlag
Indicates the clock monitor has detected an error.

enum _ccm32k_state

The enumerator of module state.

Values:

enumerator kCCM32K_Both32kFro32kOscDisabled

Indicates both 32kHz free running oscillator and 32kHz crystal oscillator are disabled.

enumerator kCCM32K_Only32kFroEnabled

Indicates only 32kHz free running oscillator is enabled.

enumerator kCCM32K_Only32kOscEnabled

Indicates only 32kHz crystal oscillator is enabled.

enumerator kCCM32K_Both32kFro32kOscEnabled

Indicates both 32kHz free running oscillator and 32kHz crystal oscillator are enabled.

enum _ccm32k_clock_source

The enumerator of clock source.

Values:

enumerator kCCM32K_ClockSourceNone

None clock source.

enumerator kCCM32K_ClockSource32kFro

32kHz free running oscillator is the clock source.

enumerator kCCM32K_ClockSource32kOsc

32kHz crystal oscillator is the clock source.

enum _ccm32k_clock_monitor_freq_trim_value

Clock monitor frequency trim values.

Values:

enumerator kCCM32K_ClockMonitor2CycleAssert

Clock monitor asserts 2 cycle after expected edge (assert after 10 cycles with no edge).

enumerator kCCM32K_ClockMonitor4CycleAssert

Clock monitor asserts 4 cycle after expected edge (assert after 12 cycles with no edge).

enumerator kCCM32K_ClockMonitor6CycleAssert

Clock monitor asserts 6 cycle after expected edge (assert after 14 cycles with no edge).

enumerator kCCM32K_ClockMonitor8CycleAssert

Clock monitor asserts 8 cycle after expected edge (assert after 16 cycles with no edge).

enum _ccm32k_clock_monitor_divide_trim_value

Clock monitor divide trim values.

Values:

enumerator kCCM32K_ClockMonitor_1kHzFro32k_1kHzOsc32k

Clock monitor operates at 1 kHz for both FRO32K and OSC32K.

enumerator kCCM32K_ClockMonitor_64HzFro32k_1kHzOsc32k

Clock monitor operates at 64 Hz for FRO32K and clock monitor operates at 1 kHz for OSC32K.

enumerator kCCM32K_ClockMonitor_1KHzFro32k_64HzOsc32k

Clock monitor operates at 1K Hz for FRO32K and clock monitor operates at 64 Hz for OSC32K.

enumerator kCCM32K_ClockMonitor_64HzFro32k_64HzOsc32k

Clock monitor operates at 64 Hz for FRO32K and clock monitor operates at 64 Hz for OSC32K.

enum _ccm32k_clock_source_select

CCM32K clock source enumeration.

Values:

enumerator kCCM32K_ClockSourceSelectFro32k

FRO32K clock output is selected as clock source.

enumerator kCCM32K_ClockSourceSelectOsc32k

OSC32K clock output is selected as clock source.

enum _ccm32k_clock_output_peripheral

32kHz clock output peripheral bit map.

Values:

enumerator kCCM32K_ClockOutToRtc

32kHz clock output to RTC.

enumerator kCCM32K_ClockOutToRfmc

32kHz clock output to Rfmc.

enumerator kCCM32K_ClockOutToNbu

32kHz clock output to NBU.

enumerator kCCM32K_ClockOutToWuuRmcPortD

32kHz clock output to WUU/RMC/PORTD.

enumerator kCCM32K_ClockOutToOtherModules

32kHz clock output to Other modules.

typedef enum *_ccm32k_osc_xtal_cap* ccm32k_osc_xtal_cap_t

The enumerator of internal capacitance of OSC's XTAL pin.

typedef enum *_ccm32k_osc_extal_cap* ccm32k_osc_extal_cap_t

The enumerator of internal capacitance of OSC's EXTAL pin.

typedef enum *_ccm32k_osc_fine_adjustment_value* ccm32k_osc_fine_adjustment_value_t

The enumerator of osc amplifier gain fine adjustment. Changes the oscillator amplitude by modifying the automatic gain control (AGC).

typedef enum *_ccm32k_osc_coarse_adjustment_value* ccm32k_osc_coarse_adjustment_value_t

The enumerator of osc amplifier coarse fine adjustment. Tunes the internal transconductance (gm) by increasing the current.

typedef enum *_ccm32k_osc_mode* ccm32k_osc_mode_t

The enumerator of 32kHz oscillator.

typedef enum *_ccm32k_state* ccm32k_state_t

The enumerator of module state.

typedef enum *_ccm32k_clock_source* ccm32k_clock_source_t

The enumerator of clock source.

typedef enum *_ccm32k_clock_monitor_freq_trim_value*
ccm32k_clock_monitor_freq_trim_value_t

Clock monitor frequency trim values.

typedef enum *_ccm32k_clock_monitor_divide_trim_value*
ccm32k_clock_monitor_divide_trim_value_t

Clock monitor divide trim values.

typedef struct *_ccm32k_clock_monitor_config* ccm32k_clock_monitor_config_t

Clock monitor configuration structure.

typedef enum *_ccm32k_clock_source_select* ccm32k_clock_source_select_t

CCM32K clock source enumeration.

typedef enum *_ccm32k_clock_output_peripheral* ccm32k_clock_output_peripheral_t

32kHz clock output peripheral bit map.

typedef struct *_ccm32k_osc_config* ccm32k_osc_config_t

The structure of oscillator configuration.

CCM32K_OSC32K_CTRL_OSC_MODE_MASK

CCM32K_OSC32K_CTRL_OSC_MODE_SHIFT

CCM32K_OSC32K_CTRL_OSC_MODE(**x**)

struct _ccm32k_clock_monitor_config

#include <fsl_ccm32k.h> Clock monitor configuration structure.

Public Members

bool enableClockMonitor

Used to enable/disable clock monitor.

ccm32k_clock_monitor_freq_trim_value_t freqTrimValue

Clock minitor frequency trim value.

ccm32k_clock_monitor_divide_trim_value_t divideTrimValue

Clock minitor divide trim value.

struct _ccm32k_osc_config

#include <fsl_ccm32k.h> The structure of oscillator configuration.

Public Members

bool enableInternalCapBank

enable/disable the internal capacitance bank.

ccm32k_osc_xtal_cap_t xtalCap

The internal capacitance for the OSC XTAL pin from the capacitor bank, only useful when the internal capacitance bank is enabled.

ccm32k_osc_extal_cap_t extalCap

The internal capacitance for the OSC EXTAL pin from the capacitor bank, only useful when the internal capacitance bank is enabled.

ccm32k_osc_fine_adjustment_value_t fineAdjustment

32kHz crystal oscillator amplifier fine adjustment value.

ccm32k_osc_coarse_adjustment_value_t coarseAdjustment

32kHz crystal oscillator amplifier coarse adjustment value.

2.3 CE Basic Functions

int32_t CE_ExecCmd(void)

Executes commands in the command queue.

Returns
Command execution status.

int32_t CE_NullCmd(void)

Sends a basic command to verify that ZV2117 is operational and that the command interface is functioning properly.

This function passes through the command processing interface and returns a success status.

Returns
Command execution status.

int32_t CE_Copy(int32_t *pDst, int32_t *pSrc, const int32_t N)

Copies data between buffers in the ZV2117 memory section.

Copies a specified number of 32-bit words from the source to the destination buffer. Both buffers must reside in the ZV2117 data memory section.

Parameters

- pDst – **[out]** Pointer to destination buffer
- pSrc – **[in]** Pointer to source buffer
- N – **[in]** Number of 32-bit words to copy

Returns
Command execution status.

2.4 CE Command Functions

int32_t CE_CmdInitBuffer(ce_cmdbuffer_t *psCmdBuffer, volatile uint32_t cmdbuffer[], volatile int32_t statusbuffer[], ce_cmd_mode_t cmdmode)

Initializes the CM33-ZV2117 command buffer.

This function must to be called once after power-up or reset, or when the command queue mode needs to be changed. Once configured, the command mode remains unchanged till reset or re-initialization.

Parameters

- psCmdBuffer – **[out]** Pointer to the command buffer structure. Must be allocated in ARM memory (not ZV2117).
- cmdbuffer – **[in]** Command buffer. Must be 256 words in ZV2117 data memory.
- statusbuffer – **[in]** Status buffer. Must be 134 words in ZV2117 data memory.
- cmdmode – **[in]** Command mode. One of:
  - kCE_CmdModeOneNonBlocking
  - kCE_CmdModeMultipleNonBlocking
  - kCE_CmdModeOneBlocking
  - kCE_CmdModeMultipleBlocking

Return values
0 – Initialization is successful.

int32_t CE_CmdReset(void)

Resets the CM33-ZV2117 command queue.

Any pending commands in the queue will be flushed.

Return values
0 – Reset is successful.

int32_t CE_CmdAdd(ce_cmd_t cmd, ce_cmdstruct_t *cmdargs)

Adds a command to the command queue.

Parameters

- cmd – **[in]** Command name. Choose from the enum description in fsl_ce_if.h. Not all of the cmd are implemented in the current release.
- cmdargs – **[in]** Arguments structure detailing the arguments for the function/command.

Return values

- 0 – Command added successfully.
- -1 – Command not added (queue is full).

int32_t CE_CmdLaunch(int32_t force_launch)

Launches the ZV2117 with the current command queue.

Parameters

- force_launch – **[in]**
  - 1: Launches the queue regardless of the command mode.
  - 0: Launches only if in single-command mode. Otherwise, does nothing.

Return values
0 – Launch is successful.

int32_t CE_CmdLaunchBlocking(void)

Launches the current command queue and waits for completion.

Return values
0 – Launch is successful.

int32_t CE_CmdLaunchNonBlocking(void)

Launches the current command queue and returns immediately.

ZV2117 will send an interrupt via MUA->GCR to ARM upon task completion. Alternatively, the user can poll for completion.

If using interrupt, the user must call CE_CmdReset() in the IRQ handler. IRQ::DSP_IRQn must be enabled.

The user can optionally also poll to figure out the command queue execution status.

Return values
0 – Launch is successful.

int32_t CE_CmdCheckStatus(void)

Checks the execution status of the current command queue. Only applicable in non-blocking mode.

Returns

- CE_STATUS_BUSY ZV2117 is still executing.

- CE_STATUS_IDLE Execution completed; ZV2117 is ready for new commands.

CE_COMPUTE_TIMEOUT

Maximum loop wait time for CE computation.

When CE is computing, driver will wait for the computation to complete. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

2.5 CE CMSIS Functions

void ce_arm_cfft_f32(const *arm_cfft_instance_f32* *S, float *p1, uint8_t ifftFlag, uint8_t bitReverseFlag, float *pOut, float *pScratch)

CMSIS-compatible FFT implementation using ZV2117 backend.

This API is designed to be compatible with the ARM CM33 FFT interface. It delegates the FFT computation to the ZV2117 CE module. Please refer to CM33 documentation for details.

Note: This API only support float32 FFTs.

Returns
Command execution status.

struct arm_cfft_instance_f32

#include <fsl_ce_cmsis.h> FFT/IFFT float32.

Public Members

uint16_t fftLen

Length of the FFT.

const float *pTwiddle

Points to the twiddle factor table.

const uint16_t *pBitRevTable

Points to the bit reversal table.

uint16_t bitRevLength

Length of the bit reversal table.

2.6 CE Initialization Functions

FSL_CE_DRIVER_VERSION

CE driver version.

typedef struct *_ce_copy_image* ce_copy_image_t

Structure for CE copy image to destination address.

Defines source and destination address for copying image with given size.

void CE_Init(*ce_copy_image_t* *ceCopyImage)

Initializes the CE.

Parameters

- ceCopyImage – **[in]** The information about the CE image to copy.

void CE_InstallFirmware(*ce_copy_image_t* *ceCopyImage)

Installs CE firmware by given image info.

Parameters

- ceCopyImage – **[in]** The information about the CE image to copy.

void CE_InitWithoutFirmware(void)

Initializes the CE.

This function is similar to CE_Init, but it does not install the firmware, the firmware can be installed using CE_InstallFirmware.

struct __ce_copy_image

#include <fsl_ce.h> Structure for CE copy image to destination address.

Defines source and destination address for copying image with given size.

2.7 CE Matrix Functions

int32_t CE_MatrixAdd_Q15(int16_t *pDst, int16_t *pA, int16_t *pB, int32_t M, int32_t N)

Calculates the sum of two real 16-bit integer (Q15) matrices.

Computes C = A + B, where A, B, and C are an M × N real int16_t matrices. All matrices are assumed to have the same format and dimensions.

Parameters

- pDst – **[out]** Pointer to the output matrix C (size M × N).
- pA – **[in]** Pointer to the input matrix A (size M × N).
- pB – **[in]** Pointer to the input matrix B (size M × N).
- M – **[in]** Number of rows of matrices A, B, and C.
- N – **[in]** Number of columns of matrices A, B, and C.

Returns

Command execution status.

int32_t CE_MatrixAdd_Q31(int32_t *pDst, int32_t *pA, int32_t *pB, int32_t M, int32_t N)

Calculates the sum of two real 32-bit integer (Q31) matrices.

Computes C = A + B, where A, B, and C are an M × N real int32_t matrices. All matrices are assumed to have the same format and dimensions.

Parameters

- pDst – **[out]** Pointer to the output matrix C (size M × N).
- pA – **[in]** Pointer to the input matrix A (size M × N).
- pB – **[in]** Pointer to the input matrix B (size M × N).
- M – **[in]** Number of rows of matrices A, B, and C.
- N – **[in]** Number of columns of matrices A, B, and C.

Returns

Command execution status.

int32_t CE_MatrixAdd_F32(float *pDst, float *pA, float *pB, int32_t M, int32_t N)

Calculates the sum of two real 32-bit floating-point matrices.

Computes C = A + B, where A, B, and C are an M × N real float32 matrices. All matrices are assumed to have the same format and dimensions.

Parameters

- pDst – **[out]** Pointer to the output matrix C (size M × N).
- pA – **[in]** Pointer to the input matrix A (size M × N).
- pB – **[in]** Pointer to the input matrix B (size M × N).
- M – **[in]** Number of rows of matrices A, B, and C.
- N – **[in]** Number of columns of matrices A, B, and C.

Returns

Command execution status.

int32_t CE_MatrixElemMul_F32(float *pDst, float *pA, float *pB, int32_t M, int32_t N)

Calculates the element-wise product of two real 32-bit floating-point matrices.

Computes C = A .× B, where A, B, and C are an M × N real float32 matrices. All matrices are assumed to have the same format and dimensions.

Parameters

- pDst – **[out]** Pointer to the output matrix C (size M × N).
- pA – **[in]** Pointer to the input matrix A (size M × N).
- pB – **[in]** Pointer to the input matrix B (size M × N).
- M – **[in]** Number of rows of matrices A, B, and C.
- N – **[in]** Number of columns of matrices A, B, and C.

Returns

Command execution status.

int32_t CE_MatrixMul_F32(float *pDst, float *pA, float *pB, int32_t M, int32_t N, int32_t P)

Calculates the matrix product of two real 32-bit floating-point matrices.

Computes C = A × B, where:

- A is an M × N real float32 matrix,
- B is an N × P real float32 matrix,
- C is the resulting M × P real float32 matrix.

All matrices are assumed to be in row-major format.

Note: Data precision and format is as defined by the argument type. Limits on max value of N:

- For F32: N < 128;
- For CF32: N < 64.

Parameters

- pDst – **[out]** Pointer to the output matrix C (size M × P)
- pA – **[in]** Pointer to the input matrix A (size M × N).
- pB – **[in]** Pointer to the input matrix B (size N × P).

- M – **[in]** Number of rows of matrix A.
- N – **[in]** Number of columns in matrix A (and rows in matrix B).
- P – **[in]** Number of columns of matrix B.

Returns
Command execution status.

int32_t CE_MatrixMul_CF32(float *pDst, float *pA, float *pB, int32_t M, int32_t N, int32_t P)

Calculates the matrix product of two complex 32-bit floating point matrices.

Computes C = A × B, where:

- A is an M × N complex float32 matrix,
- B is an N × P complex float32 matrix,
- C is the resulting M × P complex float32 matrix.

All matrices are assumed to be in row-major format.

Parameters

- pDst – **[out]** Pointer to the output matrix C (size M × P).
- pA – **[in]** Pointer to the input matrix A (size M × N).
- pB – **[in]** Pointer to the input matrix B (size N × P).
- M – **[in]** Number of rows of matrix A.
- N – **[in]** Number of columns in matrix A (and rows in matrix B).
- P – **[in]** Number of columns of matrix B.

Returns
Command execution status.

int32_t CE_MatrixInvHerm_CF32(float *pAinv, float *pA, float *pScratch, int32_t M, uint8_t flag_packedInput, uint8_t flag_cholInv)

Calculates the inverse or Cholesky inverse of a complex Hermitian matrix (in float32 precision).

Computes one of the following:

- Ainv = inv(A)
- Ainv = inv(chol(A))

where chol(A) is the lower triangular Cholesky decomposition of matrix A.

The input matrix must be in row-major format and can be either:

- A full M × M matrix, or
- A packed upper triangular matrix (containing only the upper triangle).

The output matrix is written in row-major format, and only the lower triangle is stored. The total number of output elements is:

- Mc = (M + 1) × M / 2

Note: The input, output and scratch buffers must be separately allocated and non-overlapping.

Parameters

- pAinv – **[out]** Pointer to the output matrix inverse. Mc elements are written (complex float32).

- pA – **[in]** Pointer to the input matrix A (complex float32, size M × M).
- pScratch – **[in]** Pointer to scratch buffer (minimum size Mc × 3 × 8 bytes).
- M – **[in]** Number of rows/columns in matrix A.
- flag_packedInput – **[in]** Format of input matrix:
  - 0: full matrix
  - 1: packed upper triangular matrix
- flag_cholInv – **[in]** Type of inverse to compute:
  - 0: inv(A)
  - 1: inv(chol(A))

Returns

Command execution status.

int32_t CE_MatrixEvdHerm_CF32(float *pLambdaOut, float *pUout, float *pUin, float *pScratch, int32_t M, float tol, int32_t max_iter, uint8_t flag_packedInput)

Calculates the Eigenvalue Decomposition (EVD) of a complex Hermitian matrix (float32 precision).

Performs EVD on an M×M complex Hermitian matrix A:

- [U, T] = eig(A)

The input matrix must be in column-major format and can be either:

- A full M × M matrix, or
- A packed upper triangular matrix.

The decomposition uses an iterative QR algorithm to compute:

- U: matrix of eigenvectors (M × M, column-major)
- T: vector of eigenvalues (M × 1)

Maximum supported matrix size: M □ 40.

Note: If input and output buffers overlap, the output U matrix will overwrite the input matrix A.

Parameters

- pLambdaOut – **[out]** Pointer to the output vector of eigenvalues (size M × 1, complex float32).
- pUout – **[out]** Pointer to the output matrix of eigenvectors (size M × M, column-major, complex float32).
- pUin – **[in]** Pointer to the input matrix A (size M × M, column-major, complex float32).
- pScratch – **[in]** Pointer to scratch buffer (minimum size: (M × M × 4 + 360) × 4 bytes).
- M – **[in]** Number of rows/columns in matrix A.
- tol – **[in]** Tolerance value for QR convergence. Smaller values yield better accuracy but require more iterations.
- max_iter – **[in]** Maximum number of QR iterations. If exceeded, the function terminates regardless of convergence.

- flag_packedInput – **[in]** Format of input matrix:
  - 0: full matrix
  - 1: packed upper triangular part only

Returns
Command execution status. The number of QR iterations is returned in status[3] register.

int32_t CE_MatrixChol_CF32(float *pL, float *pA, float *pScratch, int32_t M, uint8_t flag_packedInput)

Calculates the Cholesky Decomposition of a complex Hermitian matrix (float32 precision).

Calculates L = chol(A), where A is a complex Hermitian M × M matrix and L is a lower triangular matrix such that A = L × L ^ H.

The input matrix must be in row-major format and can be either:

- A full M × M matrix, or
- A packed format containing only the upper triangular elements.

The output matrix is also in row-major format, and only the lower triangular part is written. The total number of output elements is Mc, where:

- Mc = (M + 1) × M / 2

Note: The input, output and scratch buffers must be separately allocated and non-overlapping.

Parameters

- pL – **[out]** Pointer to the output lower triangular matrix L. Only Mc elements are written (complex-valued float32 data in row-major format).
- pA – **[in]** Pointer to the input matrix A (full or packed format). Must be complex-valued float32 data in row-major format.
- pScratch – **[in]** Pointer to a scratch buffer (at least Mc × 8 bytes).
- M – **[in]** Number of rows/columns of matrix A.
- flag_packedInput – **[in]** Format flag for input matrix:
  - 0: full matrix
  - 1: packed upper triangular matrix

Returns
Command execution status.

2.8 CE Transform Functions

int32_t CE_TransformCFFT_F16(float *pY, float *pX, float *pScratch, int32_t log2N)

Computes the FFT of complex-valued 16-bit floating point data.

Performs an N-point Fast Fourier Transform (FFT) on a complex-valued float16 input stream. The FFT size N must be a power of 2, with valid range: 16 □ N □ 16384.

Note:

- Data precision and format follow the argument types.

- float* is used to represent float16 pointers.
- The input, output and scratch buffers must be separately allocated and non-overlapping.

Parameters

- pY – **[out]** Pointer to the FFT output buffer (complex-valued float16 data).
- pX – **[in]** Pointer to the FFT input buffer (complex-valued float16 data).
- pScratch – **[in]** Pointer to a scratch buffer (at least N × 4 bytes).
- log2N – **[in]** Base-2 logarithm of the FFT size N.

Returns
Command execution status.

int32_t CE_TransformCFFT_F32(float *pY, float *pX, float *pScratch, int32_t log2N)

Computes the FFT of complex-valued 32-bit floating point data.

Performs an N-point Fast Fourier Transform (FFT) on a complex-valued float32 input stream. The FFT size N must be a power of 2, with valid range: 32 □ N □ 16384.

Note: The input, output and scratch buffers must be separately allocated and non-overlapping.

Parameters

- pY – **[out]** Pointer to the FFT output buffer (complex-valued float32).
- pX – **[in]** Pointer to the FFT input buffer (complex-valued float32).
- pScratch – **[in]** Pointer to a scratch buffer (at least N × 8 bytes).
- log2N – **[in]** Base-2 logarithm of the FFT size N.

Returns
Command execution status.

int32_t CE_TransformIFFT_F16(float *pY, float *pX, float *pScratch, int32_t log2N)

Computes the IFFT of complex-valued 16-bit floating point data.

Performs an N-point Inverse Fast Fourier Transform (IFFT) on a complex-valued float16 input stream. The IFFT size N must be a power of 2, with valid range: 16 □ N □ 16384.

Note:

- Data precision and format follow the argument types.
- float* is used to represent float16 pointers.
- The input, output and scratch buffers must be separately allocated and non-overlapping.

Parameters

- pY – **[out]** Pointer to the IFFT output buffer (complex-valued float16).
- pX – **[in]** Pointer to the IFFT input buffer (complex-valued float16).
- pScratch – **[in]** Pointer to a scratch buffer (at least N × 4 bytes).
- log2N – **[in]** Base-2 logarithm of the IFFT size N.

Returns
Command execution status.

int32_t CE_TransformIFFT_F32(float *pY, float *pX, float *pScratch, int32_t log2N)

Computes the IFFT of complex-valued 32-bit floating point data.

Performs an N-point Inverse Fast Fourier Transform (IFFT) on a complex-valued float32 input stream. The IFFT size N must be a power of 2, with valid range: 32 □ N □ 16384.

Note: The input, output and scratch buffers must be separately allocated and non-overlapping.

Parameters

- pY – **[out]** Pointer to the IFFT output buffer (complex-valued float32).
- pX – **[in]** Pointer to the IFFT input buffer (complex-valued float32).
- pScratch – **[in]** Pointer to a scratch buffer (at least N × 8 bytes).
- log2N – **[in]** Base-2 logarithm of the IFFT size N.

Returns
Command execution status.

2.9 Clock Driver

enum _clock_name

Clock name used to get clock frequency.

These clocks source would be generated from SCG module.

Values:

enumerator kCLOCK_CoreSysClk
Cortex M33 clock.

enumerator kCLOCK_SlowClk
SLOW_CLK with DIVSLOW.

enumerator kCLOCK_PlatClk
PLAT_CLK.

enumerator kCLOCK_SysClk
SYS_CLK.

enumerator kCLOCK_BusClk
BUS_CLK with DIVBUS.

enumerator kCLOCK_ScgSysOscClk
SCG system OSC clock.

enumerator kCLOCK_ScgSircClk
SCG SIRC clock.

enumerator kCLOCK_ScgFircClk
SCG FIRC clock.

enumerator kCLOCK_RtcOscClk
RTC OSC clock.

enum _clock_ip_control

Clock source for peripherals that support various clock selections.

These options are for MRCC->XX[CC]

Values:

enumerator kCLOCK_IpClkControl_fun0

Peripheral clocks are disabled, module does not stall low power mode entry.

enumerator kCLOCK_IpClkControl_fun1

Peripheral clocks are enabled, module does not stall low power mode entry.

enumerator kCLOCK_IpClkControl_fun2

Peripherals clocks are enabled unless peripheral is idle, low power mode entry will stall until peripheral is idle.

enumerator kCLOCK_IpClkControl_fun3

Peripheral clocks are enabled unless in SLEEP mode (or lower), low power mode entry will stall until peripheral is idle Peripheral functional clocks that remain enabled in SLEEP mode are enabled and do not stall low power mode entry unless entering DEEPSLEEP mode (or lower)

enum _clock_ip_src

Clock source for peripherals that support various clock selections.

These options are for MRCC->XX[MUX].

Values:

enumerator kCLOCK_IpSrcFro6M

FRO 6M clock.

enumerator kCLOCK_IpSrcFro192M

FRO 192M clock.

enumerator kCLOCK_IpSrcSoscClk

OSC RF clock.

enumerator kCLOCK_IpSrc32kClk

32k Clk clock.

enum _tpm2_ip_src

Clock source for TPM2.

These options are for RF_CMC1->TPM2_CFG[CLK_MUX_SEL].

Values:

enumerator kCLOCK_Tpm2SrcCoreClk

Core Clock.

enumerator kCLOCK_Tpm2SrcSoscClk

Radio Oscillator.

enum _clock_ip_name

Clock IP name.

Values:

enumerator kCLOCK_NOGATE

No clock gate for the IP in MRCC

enumerator kCLOCK_Ewm0

Clock ewm0

enumerator kCLOCK_Syspm0
Clock syspm0

enumerator kCLOCK_Wdog0
Clock wdog0

enumerator kCLOCK_Wdog1
Clock wdog1

enumerator kCLOCK_Sfa0
Clock sfa0

enumerator kCLOCK_Crc0
Clock crc0

enumerator kCLOCK_Secsubsys
Clock secsubsys

enumerator kCLOCK_Lpit0
Clock lpit0

enumerator kCLOCK_Tstmr0
Clock tstmr0

enumerator kCLOCK_Tpm0
Clock tpm0

enumerator kCLOCK_Tpm1
Clock tpm1

enumerator kCLOCK_Lpi2c0
Clock lpi2c0

enumerator kCLOCK_Lpi2c1
Clock lpi2c1

enumerator kCLOCK_I3c0
Clock i3c

enumerator kCLOCK_Lpspi0
Clock lpspi0

enumerator kCLOCK_Lpspi1
Clock lpspi1

enumerator kCLOCK_Lpuart0
Clock lpuart0

enumerator kCLOCK_Lpuart1
Clock lpuart1

enumerator kCLOCK_Flexio0
Clock Flexio0

enumerator kCLOCK_Can0
Clock Can0

enumerator kCLOCK_Sema0
Clock Sema0

enumerator kCLOCK_Data_stream_2p4
Clock data_stream_2p4

enumerator kCLOCK_PortA
Clock portA

enumerator kCLOCK_PortB
Clock portB

enumerator kCLOCK_PortC
Clock portC

enumerator kCLOCK_Lpadc0
Clock lpadc0

enumerator kCLOCK_Lpcmp0
Clock lpcmp0

enumerator kCLOCK_Lpcmp1
Clock lpcmp1

enumerator kCLOCK_Vref0
Clock verf0

enumerator kCLOCK_Mtr_master
Clock mtr_master

enumerator kCLOCK_Can1
Clock Can1

enumerator kCLOCK_GpioA
Clock gpioA

enumerator kCLOCK_GpioB
Clock gpioB

enumerator kCLOCK_GpioC
Clock gpioC

enumerator kCLOCK_Dma0
Clock dma0

enumerator kCLOCK_Pflexnvm
Clock pflexnvm

enumerator kCLOCK_Sram0
Clock Sram0

enumerator kCLOCK_Sram1
Clock Sram1

enumerator kCLOCK_Sram2
Clock Sram2

enumerator kCLOCK_Sram3
Clock Sram3

enumerator kCLOCK_Sram0_NOECC
Clock Sram0 NOECC

enumerator kCLOCK_DSP0
Clock DSPV

enumerator kCLOCK_DSP0_MUA
Clock DSPV MUA

enumerator kCLOCK_Sram1_NOECC
Clock Sram1 NOECC

enumerator kCLOCK_Rf_2p4ghz_bist
Clock rf_2p4ghz_bist

enumerator kCLOCK_Lptmr0_wake2vsys
Clock LPTMR0 IPG clk erclk wake2vsys

enumerator kCLOCK_Lptmr1_wake2vsys
Clock LPTMR1 IPG clk erclk wake2vsys

enumerator kCLOCK_Lptmr2_wake2vsys
Clock LPTMR2 IPG clk erclk wake2vsys

enumerator kCLOCK_Sirc_vsys_gating
Clock SIRC vsys gating

enum _scg_status
SCG status return codes.

Values:

enumerator kStatus_SCG_Busy
Clock is busy.

enumerator kStatus_SCG_InvalidSrc
Invalid source.

enum _scg_sys_clk
SCG system clock type.

Values:

enumerator kSCG_SysClkSlow
System slow clock.

enumerator kSCG_SysClkBus
Bus clock.

enumerator kSCG_SysClkPlatform
Platform clock.

enumerator kSCG_SysClkCore
Core clock.

enum _scg_sys_clk_src
SCG system clock source.

ERR052742: FRO6M clock(kSCG_SysClkSrcSirc) is not stable. The FRO6M clock is not stable on some parts. FRO6M outputs lower frequency signal instead of 6MHz when device is reset or wakes up from low power. It can impact peripherals using it as a clock source. Please use clock source other than the FRO6M. For example, use FRO192M instead of FRO6M as clock source for peripherals.

Values:

enumerator kSCG_SysClkSrcSysOsc
System OSC.

enumerator kSCG_SysClkSrcSirc
Slow IRC.

enumerator kSCG_SysClkSrcFirc
Fast IRC.

enumerator kSCG_SysClkSrcRosc
RTC OSC.

enum _scg_sys_clk_div
SCG system clock divider value.

Values:

enumerator kSCG_SysClkDivBy1
Divided by 1.

enumerator kSCG_SysClkDivBy2
Divided by 2.

enumerator kSCG_SysClkDivBy3
Divided by 3.

enumerator kSCG_SysClkDivBy4
Divided by 4.

enumerator kSCG_SysClkDivBy5
Divided by 5.

enumerator kSCG_SysClkDivBy6
Divided by 6.

enumerator kSCG_SysClkDivBy7
Divided by 7.

enumerator kSCG_SysClkDivBy8
Divided by 8.

enumerator kSCG_SysClkDivBy9
Divided by 9.

enumerator kSCG_SysClkDivBy10
Divided by 10.

enumerator kSCG_SysClkDivBy11
Divided by 11.

enumerator kSCG_SysClkDivBy12
Divided by 12.

enumerator kSCG_SysClkDivBy13
Divided by 13.

enumerator kSCG_SysClkDivBy14
Divided by 14.

enumerator kSCG_SysClkDivBy15
Divided by 15.

enumerator kSCG_SysClkDivBy16
Divided by 16.

enum _clock_clkout_src
SCG clock out configuration (CLKOUTSEL).

Values:

enumerator kClockClkoutSelScgSlow
SCG Slow clock.

enumerator kClockClkoutSelSosc
System OSC.

enumerator kClockClkoutSelSirc
Slow IRC.

enumerator kClockClkoutSelFirc
Fast IRC.

enumerator kClockClkoutSelScgRtcOsc
SCG RTC OSC clock.

enum _scg_sosc_monitor_mode
SCG system OSC monitor mode.

Values:

enumerator kSCG_SysOscMonitorDisable
Monitor disabled.

enumerator kSCG_SysOscMonitorInt
Interrupt when the SOSC error is detected.

enumerator kSCG_SysOscMonitorReset
Reset when the SOSC error is detected.

SOSC enable mode.

Values:

enumerator kSCG_SoscDisable
Disable SOSC clock.

enumerator kSCG_SoscEnable
Enable SOSC clock.

enumerator kSCG_SoscEnableInSleep
Enable SOSC in sleep mode.

enum _scg_rosc_monitor_mode
SCG ROSC monitor mode.

Values:

enumerator kSCG_RoscMonitorDisable
Monitor disabled.

enumerator kSCG_RoscMonitorInt
Interrupt when the RTC OSC error is detected.

enumerator kSCG_RoscMonitorReset
Reset when the RTC OSC error is detected.

enum _scg_sirc_enable_mode
SIRC enable mode.

Values:

enumerator kSCG_SircDisableInSleep
Disable SIRC clock.

enumerator kSCG_SircEnableInSleep
Enable SIRC in sleep mode.

enum _scg_firc_trim_mode
SCG fast IRC trim mode.

Values:

enumerator kSCG_FircTrimNonUpdate
FIRC trim enable but not enable trim value update. In this mode, the trim value is fixed to the initialized value which is defined by trimCoar and trimFine in configure structure scg_firc_trim_config_t.

enumerator kSCG_FircTrimUpdate
FIRC trim enable and trim value update enable. In this mode, the trim value is auto update.

enum _scg_firc_trim_src
SCG fast IRC trim source.

Values:

enumerator kSCG_FircTrimSrcSysOsc
System OSC.

enumerator kSCG_FircTrimSrcRtcOsc
RTC OSC (32.768 kHz).

FIRC enable mode.

Values:

enumerator kSCG_FircDisable
Disable FIRC clock.

enumerator kSCG_FircEnable
Enable FIRC clock.

enumerator kSCG_FircEnableInSleep
Enable FIRC in sleep mode.

enum _scg_firc_range
SCG fast IRC clock frequency range.

Values:

enumerator kSCG_FircRange48M
Fast IRC is trimmed to 48 MHz.

enumerator kSCG_FircRange64M
Fast IRC is trimmed to 64 MHz.

enumerator kSCG_FircRange96M
Fast IRC is trimmed to 96 MHz.

enumerator kSCG_FircRange192M
Fast IRC is trimmed to 192 MHz.

enum _fro192m_rf_range
FRO192M RF clock frequency range.

Values:

enumerator kFro192M_Range16M
FRO192M output frequenc 16 MHz.

enumerator kFro192M_Range24M
FRO192M output frequenc 24 MHz.

enumerator kFro192M_Range32M
FRO192M output frequenc 32 MHz.

enumerator kFro192M_Range48M
FRO192M output frequenc 48 MHz.

enumerator kFro192M_Range64M
FRO192M output frequenc 64 MHz.

enum _fro192m_rf_clk_div
RF Flash APB and RF_CMC clock divide.

Values:

enumerator kFro192M_ClkDivBy1
Divided by 1.

enumerator kFro192M_ClkDivBy2
Divided by 2.

enumerator kFro192M_ClkDivBy4
Divided by 4.

enumerator kFro192M_ClkDivBy8
Divided by 8.

typedef enum *_clock_name* clock_name_t
Clock name used to get clock frequency.

These clocks source would be generated from SCG module.

typedef enum *_clock_ip_control* clock_ip_control_t
Clock source for peripherals that support various clock selections.

These options are for MRCC->XX[CC]

typedef enum *_clock_ip_src* clock_ip_src_t
Clock source for peripherals that support various clock selections.

These options are for MRCC->XX[MUX].

typedef enum *_tpm2_ip_src* tpm2_src_t
Clock source for TPM2.

These options are for RF_CMC1->TPM2_CFG[CLK_MUX_SEL].

typedef enum *_clock_ip_name* clock_ip_name_t
Clock IP name.

typedef enum *_scg_sys_clk* scg_sys_clk_t
SCG system clock type.

typedef enum *_scg_sys_clk_src* scg_sys_clk_src_t
SCG system clock source.

ERR052742: FRO6M clock(kSCG_SysClkSrcSirc) is not stable. The FRO6M clock is not stable on some parts. FRO6M outputs lower frequency signal instead of 6MHz when device is reset or wakes up from low power. It can impact peripherals using it as a clock source. Please use clock source other than the FRO6M. For example, use FRO192M instead of FRO6M as clock source for peripherals.

typedef enum *_scg_sys_clk_div* scg_sys_clk_div_t
SCG system clock divider value.

typedef struct *_scg_sys_clk_config* scg_sys_clk_config_t
SCG system clock configuration.

typedef enum *_clock_clkout_src* clock_clkout_src_t
SCG clock out configuration (CLKOUTSEL).

typedef enum *_scg_sosc_monitor_mode* scg_sosc_monitor_mode_t
SCG system OSC monitor mode.

typedef struct *_scg_sosc_config* scg_sosc_config_t
SCG system OSC configuration.

typedef enum *_scg_rosc_monitor_mode* scg_rosc_monitor_mode_t
SCG ROSC monitor mode.

typedef struct *_scg_rosc_config* scg_rosc_config_t
SCG ROSC configuration.

typedef enum *_scg_sirc_enable_mode* scg_sirc_enable_mode_t
SIRC enable mode.

typedef struct *_scg_sirc_config* scg_sirc_config_t
SCG slow IRC clock configuration.

typedef enum *_scg_firc_trim_mode* scg_firc_trim_mode_t
SCG fast IRC trim mode.

typedef enum *_scg_firc_trim_src* scg_firc_trim_src_t
SCG fast IRC trim source.

typedef struct *_scg_firc_trim_config* scg_firc_trim_config_t
SCG fast IRC clock trim configuration.

typedef enum *_scg_firc_range* scg_firc_range_t
SCG fast IRC clock frequency range.

typedef struct *_scg_firc_config_t* scg_firc_config_t
SCG fast IRC clock configuration.

typedef enum *_fro192m_rf_range* fro192m_rf_range_t
FRO192M RF clock frequency range.

typedef enum *_fro192m_rf_clk_div* fro192m_rf_clk_div_t
RF Flash APB and RF_CMC clock divide.

typedef struct *_fro192m_rf_clk_config* fro192m_rf_clk_config_t
FRO192M RF clock configuration.

volatile uint32_t g_xtal0Freq
External XTAL0 (OSC0/SYSOSC) clock frequency.

The XTAL0/EXTAL0 (OSC0/SYSOSC) clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtal0Freq to set the value in the clock driver. For example, if XTAL0 is 8 MHz:

```
CLOCK_InitSysOsc(...);
CLOCK_SetXtal0Freq(80000000);
```

This is important for the multicore platforms where only one core needs to set up the OSC0/SYSOSC using CLOCK_InitSysOsc. All other cores need to call the CLOCK_SetXtal0Freq to get a valid clock frequency.

volatile uint32_t g_xtal32Freq

External XTAL32/EXTAL32 clock frequency.

The XTAL32/EXTAL32 clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtal32Freq to set the value in the clock driver.

This is important for the multicore platforms where only one core needs to set up the clock. All other cores need to call the CLOCK_SetXtal32Freq to get a valid clock frequency.

static inline void CLOCK_EnableClock(*clock_ip_name_t* name)

Enable the clock for specific IP.

Parameters

- name – Which clock to enable, see clock_ip_name_t.

static inline void CLOCK_EnableTPM2(void)

Enable the TPM2 clock.

static inline void CLOCK_EnableClockLPMode(*clock_ip_name_t* name, *clock_ip_control_t* control)

Enable the clock for specific IP in low power mode.

Parameters

- name – Which clock to enable, see clock_ip_name_t.
- control – Clock Config, see clock_ip_control_t.

static inline void CLOCK_DisableClock(*clock_ip_name_t* name)

Disable the clock for specific IP.

Parameters

- name – Which clock to disable, see clock_ip_name_t.

static inline void CLOCK_DisableTPM2(void)

Disable the TPM2 clock.

static inline void CLOCK_SetIpSrc(*clock_ip_name_t* name, *clock_ip_src_t* src)

Set the clock source for specific IP module.

Set the clock source for specific IP, not all modules need to set the clock source, should only use this function for the modules need source setting. ERR052742: FRO6M clock is not stable. The FRO6M clock is not stable on some parts. FRO6M outputs lower frequency signal instead of 6MHz when device is reset or wakes up from low power. It can impact peripherals using it as a clock source. Please use clock source other than the FRO6M. For example, use FRO192M instead of FRO6M as clock source for peripherals.

Parameters

- name – Which peripheral to check, see clock_ip_name_t.
- src – Clock source to set.

static inline void CLOCK_SetTpm2Src(*tpm2_src_t* src)

Set the clock source for TPM2.

Parameters

- src – Clock source to set.

static inline void CLOCK_SetIpSrcDiv(*clock_ip_name_t* name, uint8_t divValue)

Set the clock source and divider for specific IP module.

Set the clock source and divider for specific IP, not all modules need to set the clock source and divider, should only use this function for the modules need source and divider setting.

Divider output clock = Divider input clock / (divValue+1)]).

Parameters

- name – Which peripheral to check, see clock_ip_name_t.
- divValue – The divider value.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Gets the clock frequency for a specific clock name.

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in clock_name_t.

Parameters

- clockName – Clock names defined in clock_name_t

Returns

Clock frequency value in hertz

uint32_t CLOCK_GetCoreSysClkFreq(void)

Get the core clock or system clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetPlatClkFreq(void)

Get the platform clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetBusClkFreq(void)

Get the bus clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFlashClkFreq(void)

Get the flash clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetIpFreq(*clock_ip_name_t* name)

Gets the functional clock frequency for a specific IP module.

This function gets the IP module's functional clock frequency based on MRCC registers. It is only used for the IP modules which could select clock source by MRCC[PCS].

Parameters

- name – Which peripheral to get, see clock_ip_name_t.

Returns

Clock frequency value in Hz

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.2.5.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

EDMA_CLOCKS

Clock ip name array for EDMA.

SYSPM_CLOCKS

Clock ip name array for SYSPM.

SFA_CLOCKS
: Clock ip name array for SFA.

CRC_CLOCKS
: Clock ip name array for CRC.

TPM_CLOCKS
: Clock ip name array for TPM.

LPI2C_CLOCKS
: Clock ip name array for LPI2C.

I3C_CLOCKS
: Clock ip name array for I3C.

LPSPI_CLOCKS
: Clock ip name array for LPSPI.

LPUART_CLOCKS
: Clock ip name array for LPUART.

PORT_CLOCKS
: Clock ip name array for PORT.

LPADC_CLOCKS
: Clock ip name array for LPADC.

LPCMP_CLOCKS
: Clock ip name array for LPCMP.

VREF_CLOCKS
: Clock ip name array for VREF.

GPIO_CLOCKS
: Clock ip name array for GPIO.

LPIT_CLOCKS
: Clock ip name array for LPIT.

RF_CLOCKS
: Clock ip name array for RF.

WDOG_CLOCKS
: Clock ip name array for WDOG.

FLEXCAN_CLOCKS
: Clock ip name array for FLEXCAN.

FLEXIO_CLOCKS
: Clock ip name array for FLEXIO.

TSTMR_CLOCKS
: Clock ip name array for TSTMR.

EWM_CLOCKS
: Clock ip name array for EWM.

SEMA42_CLOCKS
: Clock ip name array for SEMA42.

MU_CLOCKS
: Clock ip name array for MU.

MAKE_MRCC_REGADDR(base, offset)

"IP Connector name difinition used for clock gate, clock source and clock divider setting. It is defined as the corresponding register address.

CLOCK_REG(name)

uint32_t CLOCK_GetSysClkFreq(*scg_sys_clk_t* type)

Gets the SCG system clock frequency.

This function gets the SCG system clock frequency. These clocks are used for core, platform, external, and bus clock domains.

Parameters

- type – Which type of clock to get, core clock or slow clock.

Returns

Clock frequency.

static inline void CLOCK_SetRunModeSysClkConfig(const *scg_sys_clk_config_t* *config)

Sets the system clock configuration for RUN mode.

This function sets the system clock configuration for RUN mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_GetCurSysClkConfig(*scg_sys_clk_config_t* *config)

Gets the system clock configuration in the current power mode.

This function gets the system configuration in the current power mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_SetClkOutSel(*clock_clkout_src_t* setting)

Sets the clock out selection.

This function sets the clock out selection (CLKOUTSEL).

Parameters

- setting – The selection to set.

status_t CLOCK_InitSysOsc(const *scg_sosc_config_t* *config)

Initializes the SCG system OSC.

This function enables the SCG system OSC clock according to the configuration.

Note: This function can't detect whether the system OSC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – System OSC is initialized.
- kStatus_SCG_Busy – System OSC has been enabled and is used by the system clock.
- kStatus_ReadOnly – System OSC control register is locked.

status_t CLOCK_DeinitSysOsc(void)

De-initializes the SCG system OSC.

This function disables the SCG system OSC clock.

Note: This function can't detect whether the system OSC is used by an IP.

Return values

- kStatus_Success – System OSC is deinitialized.
- kStatus_SCG_Busy – System OSC is used by the system clock.
- kStatus_ReadOnly – System OSC control register is locked.

uint32_t CLOCK_GetSysOscFreq(void)

Gets the SCG system OSC clock frequency (SYSOSC).

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsSysOscErr(void)

Checks whether the system OSC clock error occurs.

Returns

True if the error occurs, false if not.

static inline void CLOCK_ClearSysOscErr(void)

Clears the system OSC clock error.

static inline void CLOCK_SetSysOscMonitorMode(*scg_sosc_monitor_mode_t* mode)

Sets the system OSC monitor mode.

This function sets the system OSC monitor mode. The mode can be disabled, it can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

static inline bool CLOCK_IsSysOscValid(void)

Checks whether the system OSC clock is valid.

Returns

True if clock is valid, false if not.

static inline void CLOCK_UnlockSysOscControlStatusReg(void)

Unlock the SOSCCSR control status register.

static inline void CLOCK_LockSysOscControlStatusReg(void)

Lock the SOSCCSR control status register.

status_t CLOCK_InitSirc(const *scg_sirc_config_t* *config)

Initializes the SCG slow IRC clock.

This function enables the SCG slow IRC clock according to the configuration.

Note: This function can't detect whether the system OSC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – SIRC is initialized.
- kStatus_SCG_Busy – SIRC has been enabled and is used by system clock.
- kStatus_ReadOnly – SIRC control register is locked.

status_t CLOCK_DeinitSirc(void)

De-initializes the SCG slow IRC.

This function disables the SCG slow IRC.

Note: This function can't detect whether the SIRC is used by an IP.

Return values

- kStatus_Success – SIRC is deinitialized.
- kStatus_SCG_Busy – SIRC is used by system clock.
- kStatus_ReadOnly – SIRC control register is locked.

uint32_t CLOCK_GetSircFreq(void)

Gets the SCG SIRC clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsSircValid(void)

Checks whether the SIRC clock is valid.

Returns
True if clock is valid, false if not.

static inline void CLOCK_UnlockSircControlStatusReg(void)

Unlock the SIRCCSR control status register.

static inline void CLOCK_LockSircControlStatusReg(void)

Lock the SIRCCSR control status register.

status_t CLOCK_InitFirc(const *scg_firc_config_t* *config)

Initializes the SCG fast IRC clock.

This function enables the SCG fast IRC clock according to the configuration.

Note: This function can't detect whether the FIRC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – FIRC is initialized.
- kStatus_SCG_Busy – FIRC has been enabled and is used by the system clock.
- kStatus_ReadOnly – FIRC control register is locked.

status_t CLOCK_DeinitFirc(void)

De-initializes the SCG fast IRC.

This function disables the SCG fast IRC.

Note: This function can't detect whether the FIRC is used by an IP.

Return values

- kStatus_Success – FIRC is deinitialized.
- kStatus_SCG_Busy – FIRC is used by the system clock.
- kStatus_ReadOnly – FIRC control register is locked.

uint32_t CLOCK_GetFircFreq(void)

Gets the SCG FIRC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsFircErr(void)

Checks whether the FIRC clock error occurs.

Returns

True if the error occurs, false if not.

static inline void CLOCK_ClearFircErr(void)

Clears the FIRC clock error.

static inline bool CLOCK_IsFircValid(void)

Checks whether the FIRC clock is valid.

Returns

True if clock is valid, false if not.

static inline void CLOCK_UnlockFircControlStatusReg(void)

Unlock the FIRCCSR control status register.

static inline void CLOCK_LockFircControlStatusReg(void)

Lock the FIRCCSR control status register.

static inline bool CLOCK_IsFIRCAutoTrimLocked(void)

Check whether FIRC auto trim locked to target frequency range.

When FIRCTREN and FIRCTRUP are enabled, TRIM_LOCK will indicate when auto trimming is complete and output FIRC frequency has locked to target FIRC range. TRIM_LOCK will automatically get cleared if FIRCTREN and FIRCTRUP are not set.

Returns

True if FIRC trim locked to target frequency range, false if not.

status_t CLOCK_InitRosc(const *scg_rosc_config_t* *config)

brief Initializes the SCG ROSC.

This function enables the SCG ROSC clock according to the configuration.

param config Pointer to the configuration structure. retval kStatus_Success ROSC is initialized. retval kStatus_SCG_Busy ROSC has been enabled and is used by the system clock. retval kStatus_ReadOnly ROSC control register is locked.

note This function can't detect whether the system OSC has been enabled and used by an IP.

status_t CLOCK_DeinitRosc(void)

brief De-initializes the SCG ROSC.

This function disables the SCG ROSC clock.

retval kStatus_Success System OSC is deinitialized. retval kStatus_SCG_Busy System OSC is used by the system clock. retval kStatus_ReadOnly System OSC control register is locked.

note This function can't detect whether the ROSC is used by an IP.

uint32_t CLOCK_GetRtcOscFreq(void)

Gets the SCG RTC OSC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

status_t CLOCK_InitRfFro192M(const *fro192m_rf_clk_config_t* *config)

Initializes the FRO192M clock for the Radio Mode Controller.

This function configure the RF FRO192M clock according to the configuration.

Parameters

- config – Pointer to the configuration structure.

Return values

kStatus_Success – RF FRO192M is configured.

uint32_t CLOCK_GetRfFro192MFreq(void)

Gets the FRO192M clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsRoscErr(void)

Checks whether the ROSC clock error occurs.

Returns

True if the error occurs, false if not.

static inline void CLOCK_ClearRoscErr(void)

Clears the ROSC clock error.

static inline void CLOCK_SetRoscMonitorMode(*scg_rosc_monitor_mode_t* mode)

Sets the ROSC monitor mode.

This function sets the ROSC monitor mode. The mode can be disabled, it can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

static inline bool CLOCK_IsRoscValid(void)

Checks whether the ROSC clock is valid.

Returns

True if clock is valid, false if not.

static inline void CLOCK_UnlockRoscControlStatusReg(void)

Unlock the ROSCCSR control status register.

static inline void CLOCK_LockRoscControlStatusReg(void)

Lock the ROSCCSR control status register.

static inline void CLOCK_SetXtal0Freq(uint32_t freq)

Sets the XTAL0 frequency based on board settings.

Parameters

- freq – The XTAL0/EXTAL0 input clock frequency in Hz.

static inline void CLOCK_SetXtal32Freq(uint32_t freq)

Sets the XTAL32 frequency based on board settings.

Parameters

- freq – The XTAL32/EXTAL32 input clock frequency in Hz.

uint32_t divSlow

Slow clock divider, see scg_sys_clk_div_t.

uint32_t divBus

Bus clock divider, see scg_sys_clk_div_t.

uint32_t ___pad0___

Reserved.

uint32_t divCore

Core clock divider, see scg_sys_clk_div_t.

uint32_t ___pad1___

Reserved.

uint32_t src

System clock source, see scg_sys_clk_src_t.

uint32_t ___pad2___

reserved.

uint32_t freq

System OSC frequency.

uint32_t enableMode

Enable mode, OR'ed value of _scg_sosc_enable_mode.

scg_sosc_monitor_mode_t monitorMode

Clock monitor mode selected.

scg_rosc_monitor_mode_t monitorMode

Clock monitor mode selected.

scg_sirc_enable_mode_t enableMode

Enable mode, OR'ed value of _scg_sirc_enable_mode.

scg_firc_trim_mode_t trimMode

FIRC trim mode.

scg_firc_trim_src_t trimSrc

Trim source.

uint16_t trimDiv

Divider of SOSC for FIRC.

uint8_t trimCoar

Trim coarse value; Irrelevant if trimMode is kSCG_FircTrimUpdate.

uint8_t trimFine

Trim fine value; Irrelevant if trimMode is kSCG_FircTrimUpdate.

uint32_t enableMode
: Enable mode.

scg_firc_range_t range
: Fast IRC frequency range.

const *scg_firc_trim_config_t* *trimConfig
: Pointer to the FIRC trim configuration; set NULL to disable trim.

fro192m_rf_range_t range
: FRO192M RF clock frequency range.

fro192m_rf_clk_div_t apb_rfcmc_div
: RF Flash APB and RF_CMC clock divide.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL
: Configure whether driver controls clock.

  When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

  Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

  ---

struct _scg_sys_clk_config
: *#include <fsl_clock.h>* SCG system clock configuration.

struct _scg_sosc_config
: *#include <fsl_clock.h>* SCG system OSC configuration.

struct _scg_rosc_config
: *#include <fsl_clock.h>* SCG ROSC configuration.

struct _scg_sirc_config
: *#include <fsl_clock.h>* SCG slow IRC clock configuration.

struct _scg_firc_trim_config
: *#include <fsl_clock.h>* SCG fast IRC clock trim configuration.

struct _scg_firc_config_t
: *#include <fsl_clock.h>* SCG fast IRC clock configuration.

struct _fro192m_rf_clk_config
: *#include <fsl_clock.h>* FRO192M RF clock configuration.

2.10 CMC: Core Mode Controller Driver

void CMC_SetClockMode(CMC_Type *base, *cmc_clock_mode_t* mode)
: Sets clock mode.

  This function configs the amount of clock gating when the core asserts Sleeping due to WFI, WFE or SLEEPONEXIT.

  Parameters

  - base – CMC peripheral base address.
  - mode – System clock mode.

static inline void CMC_LockClockModeSetting(CMC_Type *base)

Locks the clock mode setting.

After invoking this function, any clock mode setting will be blocked.

Parameters

- base – CMC peripheral base address.

static inline *cmc_core_clock_gate_status_t* CMC_GetCoreClockGatedStatus(CMC_Type *base)

Gets the core clock gated status.

This function get the status to indicate whether the core clock is gated. The core clock gated status can be cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

The status to indicate whether the core clock is gated.

static inline void CMC_ClearCoreClockGatedStatus(CMC_Type *base)

Clears the core clock gated status.

This function clear clock status flag by software.

Parameters

- base – CMC peripheral base address.

static inline uint8_t CMC_GetWakeupSource(CMC_Type *base)

Gets the Wakeup Source.

This function gets the Wakeup sources from the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Wakeup sources from the previous low power mode entry. See _cmc_wakeup_sources for details.

static inline *cmc_clock_mode_t* CMC_GetClockMode(CMC_Type *base)

Gets the Clock mode.

This function gets the clock mode of the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Low Power status.

static inline uint32_t CMC_GetSystemResetStatus(CMC_Type *base)

Gets the System reset status.

This function returns the system reset status. Those status updates on every MAIN Warm Reset to indicate the type/source of the most recent reset.

Parameters

- base – CMC peripheral base address.

Returns

The most recent system reset status. See _cmc_system_reset_sources for details.

static inline uint32_t CMC_GetStickySystemResetStatus(CMC_Type *base)

Gets the sticky system reset status since the last WAKE Cold Reset.

This function gets all source of system reset that have generated a system reset since the last WAKE Cold Reset, and that have not been cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

System reset status that have not been cleared by software. See _cmc_system_reset_sources for details.

static inline void CMC_ClearStickySystemResetStatus(CMC_Type *base, uint32_t mask)

Clears the sticky system reset status flags.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the sticky system reset status to be cleared.

static inline uint8_t CMC_GetResetCount(CMC_Type *base)

Gets the number of reset sequences completed since the last WAKE Cold Reset.

Parameters

- base – CMC peripheral base address.

Returns

The number of reset sequences.

static inline uint32_t CMC_GetResetInitStatusFlags(CMC_Type *base)

Gets status flags to indicate if any errors occurred during the reset initialization sequence.

Parameters

- base – CMC peripheral base address.

Returns

Status flags that indicate errors occurred during the reset initialization sequence.

void CMC_SetPowerModeProtection(CMC_Type *base, uint32_t allowedModes)

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes. This should be done before set the lowPower mode for each power doamin.

The allowed lowpower modes are passed as bit map. For example, to allow Sleep and DeepSleep, use CMC_SetPowerModeProtection(CMC_base, kCMC_AllowSleepMode|kCMC_AllowDeepSleepMode). To allow all low power modes, use CMC_SetPowerModeProtection(CMC_base, kCMC_AllowAllLowPowerModes).

Parameters

- base – CMC peripheral base address.
- allowedModes – Bitmaps of the allowed power modes. See _cmc_power_mode_protection for details.

static inline void CMC_LockPowerModeProtectionSetting(CMC_Type *base)

Locks the power mode protection.

This function locks the power mode protection. After invoking this function, any power mode protection setting will be ignored.

Parameters

- base – CMC peripheral base address.

static inline void CMC_SetGlobalPowerMode(CMC_Type *base, *cmc_low_power_mode_t* lowPowerMode)

Config the same lowPower mode for all power domain.

This function configures the same low power mode for MAIN power domian and WAKE power domain.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See cmc_low_power_mode_t for details.

static inline void CMC_SetMAINPowerMode(CMC_Type *base, *cmc_low_power_mode_t* lowPowerMode)

Configures entry into low power mode for the MAIN Power domain.

This function configures the low power mode for the MAIN power domian, when the core executes WFI/WFE instruction. The available lowPower modes are defined in the cmc_low_power_mode_t.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See cmc_low_power_mode_t for details.

static inline *cmc_low_power_mode_t* CMC_GetMAINPowerMode(CMC_Type *base)

Gets the power mode of the MAIN Power domain.

Parameters

- base – CMC peripheral base address.

Returns

The power mode of MAIN Power domain. See cmc_low_power_mode_t for details.

static inline void CMC_SetWAKEPowerMode(CMC_Type *base, *cmc_low_power_mode_t* lowPowerMode)

Configure entry into low power mode for the WAKE Power domain.

This function configures the low power mode for the WAKE power domian, when the core executes WFI/WFE instruction. The available lowPower mode are defined in the cmc_low_power_mode_t.

Note: The lowPower Mode for the WAKE domain must not be configured to a lower power mode than any other power domain.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See cmc_low_power_mode_t for details.

static inline *cmc_low_power_mode_t* CMC_GetWAKEPowerMode(CMC_Type *base)

Gets the power mode of the WAKE Power domain.

Parameters

- base – CMC peripheral base address.

Returns
The power mode of WAKE Power domain. See cmc_low_power_mode_t for details.

void CMC_ConfigResetPin(CMC_Type *base, const *cmc_reset_pin_config_t* *config)

Configure reset pin.

This function configures reset pin. When enabled, the low power filter is enabled in both Active and Low power modes, the reset filter is only enabled in Active mode. When both filers are enabled, they operate in series.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the reset pin config structure.

static inline void CMC_EnableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Enable system reset interrupts.

This function enables the system reset interrupts. The assertion of non-fatal warm reset can be delayed for 258 cycles of the 32K_CLK clock while an enabled interrupt is generated. Then Software can perform a graceful shutdown or abort the non-fatal warm reset provided the pending reset source is cleared by resetting the reset source and then clearing the pending flag.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See _cmc_system_reset_interrupt_enable for details.

static inline void CMC_DisableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Disable system reset interrupts.

This function disables the system reset interrupts.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See _cmc_system_reset_interrupt_enable for details.

static inline uint32_t CMC_GetSystemResetInterruptFlags(CMC_Type *base)

Gets System Reset interrupt flags.

This function returns the System reset interrupt flags.

Parameters

- base – CMC peripheral base address.

Returns
System reset interrupt flags. See _cmc_system_reset_interrupt_flag for details.

static inline void CMC_ClearSystemResetInterruptFlags(CMC_Type *base, uint32_t mask)

Clears System Reset interrupt flags.

This function clears system reset interrupt flags. The pending reset source can be cleared by resetting the source of the reset and then clearing the pending flags.

Parameters

- base – CMC peripheral base address.
- mask – System Reset interrupt flags. See _cmc_system_reset_interrupt_flag for details.

static inline void CMC_EnableNonMaskablePinInterrupt(CMC_Type *base, bool enable)

Enable/Disable Non maskable Pin interrupt.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Non maskable pin interrupt. true - enable Non-maskable pin interrupt. false - disable Non-maskable pin interupt.

static inline uint8_t CMC_GetISPMODEPinLogic(CMC_Type *base)

Gets the logic state of the ISPMODE_n pin.

This function returns the logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

Parameters

- base – CMC peripheral base address.

Returns

The logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

static inline void CMC_ClearISPMODEPinLogic(CMC_Type *base)

Clears ISPMODE_n pin state.

Parameters

- base – CMC peripheral base address.

static inline void CMC_ForceBootConfiguration(CMC_Type *base, bool assert)

Set the logic state of the BOOT_CONFIGn pin.

This function force the logic state of the Boot_Confign pin to assert on next system reset.

Parameters

- base – CMC peripheral base address.
- assert – Assert the corresponding pin or not. true - Assert corresponding pin on next system reset. false - No effect.

static inline void CMC_LockWriteOperationToBootRomStatusReg(CMC_Type *base, uint8_t index)

Lock write operation to BootROM status register and BootROM Lock register.

Note: If locked, BootROM status register cannot be written.

Note: Once locked, only cold reset can reset related register.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

static inline bool CMC_CheckBootRomStatusRegWriteLocked(CMC_Type *base, uint8_t index)

Check if BootROM status register can be written.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

Return values

- true – The selected BootRom status register is locked and cannot be written.
- false – The selected BootRom Status register is unlocked and cannot be written.

static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base, uint8_t index)

Gets the information written by the BootROM.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

Returns

The status information written by the BootROM.

static inline void CMC_WriteBootRomStatusReg(CMC_Type *base, uint8_t index, uint32_t value)

Writes value to BootROM status register, in this way, BootROM status registers are used as general purpose register.

Note: Value in BootROM status registers are reset in cold reset.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.
- value – Value to write.

void CMC_PowerOffSRAMAllMode(CMC_Type *base, uint32_t mask)

Power off the selected system SRAM always.

This function power off the selected system SRAM always. The SRAM arrays should not be accessed while they are shut down. SRAM array contents are not retained if they are powered off.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered off all modes. See _cmc_system_sram_arrays for details. Check Reference Manual for the SRAM region and mask bit relationship.

static inline void CMC_PowerOnSRAMAllMode(CMC_Type *base, uint32_t mask)

Power on SRAM during all mode.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered on all modes. See _cmc_system_sram_arrays for details. Check Reference Manual for the SRAM region and mask bit relationship.

void CMC_PowerOffSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)

Power off the selected system SRAM during low power mode only.

This function power off the selected system SRAM only during low power mode. SRAM array contents are not retained if they are power off.

Parameters

- base – CMC peripheral base address.

- mask – Bitmap of the SRAM arrays to be power off during low power mode only. See _cmc_system_sram_arrays for details. Check Reference Manual for the SRAM region and mask bit relationship.

static inline void CMC_PowerOnSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)

Power on the selected system SRAM during low power mode only.

This function power on the selected system SRAM. The SRAM arrray contents are retained in low power modes.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be power on during low power mode only. See _cmc_system_sram_arrays for details. Check Reference Manual for the SRAM region and mask bit relationship.

void CMC_ConfigFlashMode(CMC_Type *base, bool wake, bool doze, bool disable)

Configs the low power mode of the on-chip flash memory.

This function configs the low power mode of the on-chip flash memory.

Parameters

- base – CMC peripheral base address.
- wake – true: Flash will exit low power state during the flash memory accesses. false: No effect.
- doze – true: Flash is disabled while core is sleeping false: No effect.
- disable – true: Flash memory is placed in low power state. false: No effect.

static inline void CMC_EnableDebugOperation(CMC_Type *base, bool enable)

Enables/Disables debug Operation when the core sleep.

This function configs what happens to debug when core sleeps.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Debug when Core is sleeping. true - Debug remains enabled when the core is sleeping. false - Debug is disabled when the core is sleeping.

void CMC_PreEnterLowPowerMode(void)

Prepares to enter low power modes.

This function should be called before entering low power modes.

void CMC_PostExitLowPowerMode(void)

Recovers after wake up from low power modes.

This function should be called after wake up from low power modes. This function should be used with CMC_PreEnterLowPowerMode()

void CMC_GlobalEnterLowPowerMode(CMC_Type *base, *cmc_low_power_mode_t* lowPowerMode)

Configs the entry into the same low power mode for each power domains.

This function provides the feature to entry into the same low power mode for each power domains. Before invoking this function, please ensure the selected power mode have been allowed.

Parameters

- base – CMC peripheral base address.

- lowPowerMode – The low power mode to be entered. See cmc_low_power_mode_t for the details.

void CMC_EnterLowPowerMode(CMC_Type *base, const *cmc_power_domain_config_t* *config)

Configs the entry into different low power modes for each power domains.

This function provides the feature to entry into different low power modes for each power domains. Before invoking this function please ensure the selected modes are allowed.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the cmc_power_domain_config_t structure.

FSL_CMC_DRIVER_VERSION

CMC driver version 2.4.3.

CMC_SRAM_BUSY_TIMEOUT

Max loops to wait for CMC SRAM operation complete.

When configuring the SRAM, driver will wait for the completion of new settings. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

enum _cmc_power_mode_protection

CMC power mode Protection enumeration.

Values:

enumerator kCMC_AllowSleepMode

Allow Sleep mode.

enumerator kCMC_AllowDeepSleepMode

Allow Deep Sleep mode.

enumerator kCMC_AllowPowerDownMode

Allow Power Down mode.

enumerator kCMC_AllowDeepPowerDownMode

Allow Deep Power Down mode.

enumerator kCMC_AllowAllLowPowerModes

Allow all low power modes.

enum _cmc_wakeup_sources

Wake up sources from the previous low power mode entry.

Values:

enumerator kCMC_WakeupFromResetInterruptOrPowerDown

Wakeup source is reset interrupt, or wake up from [Deep] Power Down.

enumerator kCMC_WakeupFromDebugRequest

Wakeup source is debug request.

enumerator kCMC_WakeupFromInterrupt

Wakeup source is interrupt.

enumerator kCMC_WakeupFromDMAWakeup

Wakeup source is DMA Wakeup.

enumerator kCMC_WakeupFromWUURequest

Wakeup source is WUU request.

enumerator kCMC_WakeupFromBusMaster
Wakeup source is Bus master.

enum _cmc_system_reset_interrupt_enable
System Reset Interrupt enable enumeration.

Values:

enumerator kCMC_PinResetInterruptEnable
Pin Reset interrupt enable.

enumerator kCMC_DAPResetInterruptEnable
DAP Reset interrupt enable.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetInterruptEnable
Low Power Acknowledge Timeout Reset interrupt enable.

enumerator kCMC_SystemClockGenerationResetInterruptEnable
System Clock Generation Reset interrupt enable.

enumerator kCMC_Watchdog0ResetInterruptEnable
Watchdog 0 Reset interrupt enable.

enumerator kCMC_SoftwareResetInterruptEnable
Software Reset interrupt enable.

enumerator kCMC_LockupResetInterruptEnable
Lockup Reset interrupt enable.

enumerator kCMC_Watchdog1ResetInterruptEnable
Watchdog 1 Reset interrupt enable

enum _cmc_system_reset_interrupt_flag
CMC System Reset Interrupt Status flag.

Values:

enumerator kCMC_PinResetInterruptFlag
Pin Reset interrupt flag.

enumerator kCMC_DAPResetInterruptFlag
DAP Reset interrupt flag.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetFlag
Low Power Acknowledge Timeout Reset interrupt flag.

enumerator kCMC_Watchdog0ResetInterruptFlag
Watchdog 0 Reset interrupt flag.

enumerator kCMC_SoftwareResetInterruptFlag
Software Reset interrupt flag.

enumerator kCMC_LockupResetInterruptFlag
Lock up Reset interrupt flag.

enumerator kCMC_Watchdog1ResetInterruptFlag
Watchdog 1 Reset interrupt flag.

enum _cmc_system_sram_arrays
CMC System SRAM arrays low power mode enable enumeration.

Values:

enumerator kCMC_SRAMBank0
Power off SRAM Bank0, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank1
Power off SRAM Bank1, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank2
Power off SRAM Bank2, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank3
Power off SRAM Bank3, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank4
Power off SRAM Bank4, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank5
Power off SRAM Bank5, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank6
Power off SRAM Bank6, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank7
Power off SRAM Bank7, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank8
Power off SRAM Bank8, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank9
Power off SRAM Bank9, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_SRAMBank10
Power off SRAM Bank10, please refer to chip's RM for the corresponding SRAM array.

enumerator kCMC_AllSramArrays
Mask of all system SRAM arrays.

enum _cmc_system_reset_sources
System reset sources enumeration.

Values:

enumerator kCMC_WakeUpReset
The reset caused by a wakeup from Power Down or Deep Power Down mode.

enumerator kCMC_PORReset
The reset caused by power on reset detection logic.

enumerator kCMC_LVDReset
The reset caused by a Low Voltage Detect.

enumerator kCMC_HVDReset
The reset caused by a High voltage Detect.

enumerator kCMC_WarmReset
The last reset source is a warm reset source.

enumerator kCMC_FatalReset
The last reset source is a fatal reset source.

enumerator kCMC_PinReset
The reset caused by the RESET_b pin.

enumerator kCMC_DAPReset
The reset caused by a reset request from the Debug Access port.

enumerator kCMC_ResetTimeout
The reset caused by a timeout or other error condition in the system reset generation.

enumerator kCMC_LowPowerAcknowledgeTimeoutReset
The reset caused by a timeout in low power mode entry logic.

enumerator kCMC_SCGReset
The reset caused by a loss of clock or loss of lock event in the SCG.

enumerator kCMC_Watchdog0Reset
The reset caused by a WatchDog 0 timeout.

enumerator kCMC_SoftwareReset
The reset caused by a software reset request.

enumerator kCMC_LockUpReset
The reset caused by the ARM core indication of a LOCKUP event.

enumerator kCMC_Watchdog1Reset
The reset caused by a WatchDog 1 timeout.

enum _cmc_core_clock_gate_status
Indicate the core clock was gated.

Values:

enumerator kCMC_CoreClockNotGated
Core clock not gated.

enumerator kCMC_CoreClockGated
Core clock was gated due to low power mode entry.

enum _cmc_clock_mode
CMC clock mode enumeration.

Values:

enumerator kCMC_GateNoneClock
No clock gating.

enumerator kCMC_GateCoreClock
Gate Core clock.

enumerator kCMC_GateCorePlatformClock
Gate Core clock and platform clock.

enumerator kCMC_GateAllSystemClocks
Gate all System clocks, without getting core entering into low power mode.

enumerator kCMC_GateAllSystemClocksEnterLowPowerMode
Gate all System clocks, with core entering into low power mode.

enum _cmc_low_power_mode
CMC power mode enumeration.

Values:

enumerator kCMC_ActiveMode
Select Active mode.

enumerator kCMC_SleepMode
Select Sleep mode when a core executes WFI or WFE instruction.

enumerator kCMC_DeepSleepMode
Select Deep Sleep mode when a core executes WFI or WFE instruction.

enumerator kCMC_PowerDownMode
Select Power Down mode when a core executes WFI or WFE instruction.

enumerator kCMC_DeepPowerDown
Select Deep Power Down mode when a core executes WFI or WFE instruction.

typedef enum *_cmc_core_clock_gate_status* cmc_core_clock_gate_status_t
Indicate the core clock was gated.

typedef enum *_cmc_clock_mode* cmc_clock_mode_t
CMC clock mode enumeration.

typedef enum *_cmc_low_power_mode* cmc_low_power_mode_t
CMC power mode enumeration.

typedef struct *_cmc_reset_pin_config* cmc_reset_pin_config_t
CMC reset pin configuration.

typedef struct *_cmc_power_domain_config* cmc_power_domain_config_t
power mode configuration for each power domain.

CMC_BLR_LOCK_FIELD_WIDTH

CMC_BLR_LOCK_IDX_MASK(index)

CMC_BLR_LOCK_IDX_SHIFT(index)

CMC_BLR_LOCK_IDX(index, value)

struct _cmc_reset_pin_config
#include <fsl_cmc.h> CMC reset pin configuration.

Public Members

bool lowpowerFilterEnable
Low Power Filter enable.

bool resetFilterEnable
Reset Filter enable.

uint8_t resetFilterWidth
Width of the Reset Filter.

struct _cmc_power_domain_config
#include <fsl_cmc.h> power mode configuration for each power domain.

Public Members

cmc_clock_mode_t clock_mode
Clock mode for each power domain.

cmc_low_power_mode_t main_domain
The low power mode of the MAIN power domain.

cmc_low_power_mode_t wake_domain
The low power mode of the WAKE power domain.

2.11 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.4.

Current version: 2.0.4

Change log:

- Version 2.0.4
  - Release peripheral from reset if necessary in init function.
- Version 2.0.3
  - Fix MISRA issues
- Version 2.0.2
  - Fix MISRA issues
- Version 2.0.1
  - move DATA and DATALL macro definition from header file to source file

enum _crc_bits

CRC bit width.

Values:

enumerator kCrcBits16

Generate 16-bit CRC code

enumerator kCrcBits32

Generate 32-bit CRC code

enum _crc_result

CRC result type.

Values:

enumerator kCrcFinalChecksum

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator kCrcIntermediateChecksum

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for CRC_Init() to continue adding data to this checksum.

typedef enum *_crc_bits* crc_bits_t

CRC bit width.

typedef enum *_crc_result* crc_result_t

CRC result type.

typedef struct *_crc_config* crc_config_t

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void CRC_Init(CRC_Type *base, const *crc_config_t* *config)

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- base – CRC peripheral address.
- config – CRC module configuration structure.

static inline void CRC_Deinit(CRC_Type *base)

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- base – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as defeault.

struct _crc_config

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: 0x1021 = 1_0000_0010_0001 = x^12+x^5+1

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.12 EDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

void EDMA_Init(DMA_Type *base, const *edma_config_t* *config)

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “edma_config_t”.

void EDMA_Deinit(DMA_Type *base)

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_InstallTCD(DMA_Type *base, uint32_t channel, *edma_tcd_t* *tcd)

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_GetDefaultConfig(*edma_config_t* *config)

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values:

```
config.enableMasterIdReplication = true;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
config.enableBufferedWrites = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

static inline void EDMA_EnableAllChannelLink(DMA_Type *base, bool enable)

Enables/disables all channel linking.

This function enables/disables all channel linking in the management page. For specific channel linking enablement & configuration, please refer to EDMA_SetChannelLink and EDMA_TcdSetChannelLink APIs.

For example, to disable all channel linking in the DMA0 management page:

```
EDMA_EnableAllChannelLink(DMA0, false);
```

Parameters

- base – eDMA peripheral base address.
- enable – Switcher of the channel linking feature for all channels. “true” means to enable. “false” means not.

void EDMA_ResetChannel(DMA_Type *base, uint32_t channel)

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_SetTransferConfig(DMA_Type *base, uint32_t channel, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_config_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the eDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_SetMinorOffsetConfig(DMA_Type *base, uint32_t channel, const *edma_minor_offset_config_t* *config)

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

static inline void EDMA_SetChannelArbitrationGroup(DMA_Type *base, uint32_t channel, uint32_t group)

Configures the eDMA channel arbitration group.

This function configures the channel arbitration group. The arbitration group priorities are evaluated by numeric value from highest group number to lowest.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- group – Fixed-priority arbitration group number for the channel.

static inline void EDMA_SetChannelPreemptionConfig(DMA_Type *base, uint32_t channel, const *edma_channel_Preemption_config_t* *config)

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

static inline uint32_t EDMA_GetChannelSystemBusInformation(DMA_Type *base, uint32_t channel)

Gets the eDMA channel identification and attribute information on the system bus interface.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the _edma_channel_sys_bus_info type to decode the return variables.

void EDMA_SetChannelLink(DMA_Type *base, uint32_t channel, *edma_channel_link_type_t* type, uint32_t linkedChannel)

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
  - kEDMA_LinkNone
  - kEDMA_MinorLink
  - kEDMA_MajorLink
- linkedChannel – The linked channel number.

void EDMA_SetBandWidth(DMA_Type *base, uint32_t channel, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
  - kEDMABandwidthStallNone
  - kEDMABandwidthStall4Cycle
  - kEDMABandwidthStall8Cycle

void EDMA_SetModulo(DMA_Type *base, uint32_t channel, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_EnableAsyncRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

static inline void EDMA_EnableAutoStopRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

void EDMA_EnableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

void EDMA_DisableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined edma_interrupt_enable_t type.

static inline void EDMA_SetChannelMux(DMA_Type *base, uint32_t channel, uint32_t mux)

Set channel mux source.

Note:When the peripheral is no longer needed, the mux configuration for that channel should be written to 0, thus releasing the resource.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mux – the mux source value is SOC specific, please reference the SOC for detail.

void EDMA_TcdReset(*edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.

void EDMA_TcdSetTransferConfig(*edma_tcd_t* *tcd, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The STCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_config_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_TcdSetMinorOffsetConfig(*edma_tcd_t* *tcd, const *edma_minor_offset_config_t* *config)

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

void EDMA_TcdSetChannelLink(*edma_tcd_t* *tcd, *edma_channel_link_type_t* type, uint32_t linkedChannel)

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
  - kEDMA_LinkNone
  - kEDMA_MinorLink
  - kEDMA_MajorLink
- linkedChannel – The linked channel number.

static inline void EDMA_TcdSetBandWidth(*edma_tcd_t* *tcd, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
  - kEDMABandwidthStallNone
  - kEDMABandwidthStall4Cycle
  - kEDMABandwidthStall8Cycle

void EDMA_TcdSetModulo(*edma_tcd_t* *tcd, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_TcdEnableAutoStopRequest(*edma_tcd_t* *tcd, bool enable)

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

void EDMA_TcdEnableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Enables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

void EDMA_TcdDisableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Disables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

static inline void EDMA_EnableChannelRequest(DMA_Type *base, uint32_t channel)

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA_DisableChannelRequest(DMA_Type *base, uint32_t channel)

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA_TriggerChannelStart(DMA_Type *base, uint32_t channel)

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

uint32_t EDMA_GetRemainingMajorLoopCount(DMA_Type *base, uint32_t channel)

Gets the Remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

static inline uint32_t EDMA_GetErrorStatusFlags(DMA_Type *base)

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the _edma_error_status_flags type to decode the return variables.

uint32_t EDMA_GetChannelStatusFlags(DMA_Type *base, uint32_t channel)

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the _edma_channel_status_flags type to decode the return variables.

void EDMA_ClearChannelStatusFlags(DMA_Type *base, uint32_t channel, uint32_t mask)

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined _edma_channel_status_flags type.

void EDMA_CreateHandle(*edma_handle_t* *handle, DMA_Type *base, uint32_t channel)

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_InstallTCDMemory(*edma_handle_t* *handle, *edma_tcd_t* *tcdPool, uint32_t tcdSize)

Installs the TCDs memory pool into the eDMA handle.

This function is called after the EDMA_CreateHandle to use scatter/gather feature.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

void EDMA_SetCallback(*edma_handle_t* *handle, *edma_callback* callback, void *userData)

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

void EDMA_PrepareTransferConfig(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t destWidth, int16_t destOffset, uint32_t bytesEachRequest, uint32_t transferBytes)

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type edma_transfer_config_t.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – eDMA transfer source address offset
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – eDMA transfer destination address offset
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

void EDMA_PrepareTransfer(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferBytes, *edma_transfer_type_t* transferType)

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type edma_transfer_config_t.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- transferType – eDMA transfer type.

status_t EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. If submitting the transfer request repeatedly, this function packs an unprocessed request as a TCD and enables scatter/gather feature to process it in the next time.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

void EDMA_StartTransfer(*edma_handle_t* *handle)

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

void EDMA_StopTransfer(*edma_handle_t* *handle)

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call EDMA_StartTransfer() again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

void EDMA_AbortTransfer(*edma_handle_t* *handle)

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

static inline uint32_t EDMA_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

static inline *edma_transfer_size_t* EDMA_GetTransferSize(uint32_t width)

Get the transfer size.

This function gets the transfer size.

Parameters

- width – transfer width(bytes).

Returns

The transfer size.

void EDMA_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Parameters

- handle – eDMA handle pointer.

FSL_EDMA_DRIVER_VERSION

eDMA driver version

Version 2.5.1.

enum _edma_transfer_size

eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes

Source/Destination data transfer size is 64 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable

Disable modulo

enumerator kEDMA_Modulo2bytes

Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes

Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes

Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes

Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes

Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes
Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes
Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes
Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes
Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes
Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes
Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes
Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes
Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes
Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes
Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes
Circular buffer size is 2 G bytes.

enum _edma_bandwidth
Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone
No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle
eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle
eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type
Channel link type.

Values:

enumerator kEDMA_LinkNone
No channel link

enumerator kEDMA_MinorLink
Channel link after each minor loop

enumerator kEDMA_MajorLink
Channel link while major loop count exhausted

eDMA channel status flags, _edma_channel_status_flags

Values:

enumerator kEDMA_DoneFlag
DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag
eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag
eDMA interrupt flag, set while an interrupt occurred of this channel

eDMA channel error status flags, _edma_error_status_flags

Values:

enumerator kEDMA_DestinationBusErrorFlag
Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag
Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag
Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag
NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag
Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag
Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag
Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag
Source address not aligned with source size

enumerator kEDMA_TransferCanceledFlag
Transfer cancelled

enumerator kEDMA_ErrorChannelFlag
Error channel number of the cancelled channel number

enumerator kEDMA_ValidFlag
No error occurred, this bit is 0. Otherwise, it is 1.

eDMA channel system bus information, _edma_channel_sys_bus_info

Values:

enumerator kEDMA_AttributeOutput
DMA's AHB system bus attribute output value.

enumerator kEDMA_PrivilegedAccessLevel
Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator kEDMA_MasterId
DMA's master ID when channel is active and master ID replication is enabled.

enum _edma_interrupt_enable
eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable
Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable
Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable
Enable interrupt while major count to half value.

enum _edma_transfer_type
eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory
Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory
Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral
Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral
Transfer from Peripheral to peripheral

eDMA transfer status, _edma_transfer_status

Values:

enumerator kStatus_EDMA_QueueFull
TCD queue is full.

enumerator kStatus_EDMA_Busy
Channel is busy and can't handle the transfer request.

typedef enum *_edma_transfer_size* edma_transfer_size_t
eDMA transfer configuration

typedef enum *_edma_modulo* edma_modulo_t
eDMA modulo configuration

typedef enum *_edma_bandwidth* edma_bandwidth_t
Bandwidth control.

typedef enum *_edma_channel_link_type* edma_channel_link_type_t
Channel link type.

typedef enum *_edma_interrupt_enable* edma_interrupt_enable_t
eDMA interrupt source

typedef enum *_edma_transfer_type* edma_transfer_type_t
eDMA transfer type

typedef struct *_edma_config* edma_config_t
eDMA global configuration structure.

typedef struct *_edma_transfer_config* edma_transfer_config_t
eDMA transfer configuration

This structure configures the source/destination transfer attribute.

typedef struct *_edma_channel_Preemption_config* edma_channel_Preemption_config_t
eDMA channel priority configuration

typedef struct *_edma_minor_offset_config* edma_minor_offset_config_t
eDMA minor offset configuration

typedef struct *_edma_tcd* edma_tcd_t
eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

typedef void (*edma_callback)(struct *_edma_handle* *handle, void *userData, bool transferDone, uint32_t tcds)
Define callback function for eDMA.

typedef uint32_t (*edma_memorymap_callback)(uint32_t addr)

Memroy map function callback for DMA.

typedef struct *_edma_handle* edma_handle_t

eDMA transfer handle structure

struct _edma_config

#include <fsl_edma.h> eDMA global configuration structure.

Public Members

bool enableMasterIdReplication

Enable (true) master ID replication. If Master ID replication is disabled, the privileged protection level (supervisor mode) for DMA transfers is used.

bool enableHaltOnError

Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

bool enableRoundRobinArbitration

Enable (true) round robin channel arbitration method or fixed priority arbitration is used for channel selection

bool enableDebugMode

Enable(true) eDMA debug mode. When in debug mode, the eDMA stalls the start of a new channel. Executing channels are allowed to complete.

struct _edma_transfer_config

#include <fsl_edma.h> eDMA transfer configuration

This structure configures the source/destination transfer attribute.

Public Members

uint32_t srcAddr

Source data address.

uint32_t destAddr

Destination data address.

edma_transfer_size_t srcTransferSize

Source data transfer size.

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset applied to the current source address to form the next-state value as each source read is completed.

int16_t destOffset

Sign-extended offset applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

Bytes to transfer in a minor loop

uint32_t majorLoopCounts

Major loop iteration count.

struct _edma_channel_Preemption_config

#include <fsl_edma.h> eDMA channel priority configuration

Public Members

bool enableChannelPreemption
: If true: a channel can be suspended by other channel with higher priority

bool enablePreemptAbility
: If true: a channel can suspend other channel with low priority

uint8_t channelPriority
: Channel priority

struct _edma_minor_offset_config
: *#include <fsl_edma.h>* eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset
: Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset
: Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset
: Offset for a minor loop mapping.

struct _edma_tcd
: *#include <fsl_edma.h>* eDMA TCD.

  This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

Public Members

___IO uint32_t SADDR
: SADDR register, used to save source address

___IO uint16_t SOFF
: SOFF register, save offset bytes every transfer

___IO uint16_t ATTR
: ATTR register, source/destination transfer size and modulo

___IO uint32_t NBYTES
: Nbytes register, minor loop length in bytes

___IO uint32_t SLAST
: SLAST register

___IO uint32_t DADDR
: DADDR register, used for destination address

___IO uint16_t DOFF
: DOFF register, used for destination offset

___IO uint16_t CITER
: CITER register, current minor loop numbers, for unfinished minor loop.

___IO uint32_t DLAST_SGA
: DLASTSGA register, next stcd address used in scatter-gather mode

___IO uint16_t CSR
CSR register, for TCD control status

___IO uint16_t BITER
BITER register, begin minor loop count.

struct _edma_handle
#include <fsl_edma.h> eDMA transfer handle structure

Public Members

edma_callback callback
Callback function for major count exhausted.

void *userData
Callback function parameter.

DMA_Type *base
eDMA peripheral base address.

edma_tcd_t *tcdPool
Pointer to memory stored TCDs.

uint8_t channel
eDMA channel number.

volatile int8_t header
The first TCD index.

volatile int8_t tail
The last TCD index.

volatile int8_t tcdUsed
The number of used TCD slots.

volatile int8_t tcdSize
The total number of TCD slots in the queue.

uint8_t flags
The status of the current channel.

2.13 ELEMU: Edgelock Messaging unit driver

2.14 EWM: External Watchdog Monitor Driver

void EWM_Init(EWM_Type *base, const *ewm_config_t* *config)
Initializes the EWM peripheral.

This function is used to initialize the EWM. After calling, the EWM runs immediately according to the configuration. Note that, except for the interrupt enable control bit, other control bits and registers are write once after a CPU reset. Modifying them more than once generates a bus transfer error.

This is an example.

```
ewm_config_t config;
EWM_GetDefaultConfig(&config);
config.compareHighValue = 0xAAU;
EWM_Init(ewm_base,&config);
```

Parameters

- base – EWM peripheral base address
- config – The configuration of the EWM

void EWM_Deinit(EWM_Type *base)

Deinitializes the EWM peripheral.

This function is used to shut down the EWM.

Parameters

- base – EWM peripheral base address

void EWM_GetDefaultConfig(*ewm_config_t* *config)

Initializes the EWM configuration structure.

This function initializes the EWM configuration structure to default values. The default values are as follows.

```
ewmConfig->enableEwm = true;
ewmConfig->enableEwmInput = false;
ewmConfig->setInputAssertLogic = false;
ewmConfig->enableInterrupt = false;
ewmConfig->ewm_lpo_clock_source_t = kEWM_LpoClockSource0;
ewmConfig->prescaler = 0;
ewmConfig->compareLowValue = 0;
ewmConfig->compareHighValue = 0xFEU;
```

See also:

ewm_config_t

Parameters

- config – Pointer to the EWM configuration structure.

static inline void EWM_EnableInterrupts(EWM_Type *base, uint32_t mask)

Enables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to enable The parameter can be combination of the following source if defined
  - kEWM_InterruptEnable

static inline void EWM_DisableInterrupts(EWM_Type *base, uint32_t mask)

Disables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address

- mask – The interrupts to disable The parameter can be combination of the following source if defined
  - kEWM_InterruptEnable

static inline uint32_t EWM_GetStatusFlags(EWM_Type *base)

Gets all status flags.

This function gets all status flags.

This is an example for getting the running flag.

```
uint32_t status;
status = EWM_GetStatusFlags(ewm_base) & kEWM_RunningFlag;
```

See also:

_ewm_status_flags_t

- True: a related status flag has been set.
- False: a related status flag is not set.

Parameters

- base – EWM peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

void EWM_Refresh(EWM_Type *base)

Services the EWM.

This function resets the EWM counter to zero.

Parameters

- base – EWM peripheral base address

FSL_EWM_DRIVER_VERSION

EWM driver version 2.0.4.

enum _ewm_lpo_clock_source

Describes EWM clock source.

Values:

enumerator kEWM_LpoClockSource0

EWM clock sourced from lpo_clk[0]

enumerator kEWM_LpoClockSource1

EWM clock sourced from lpo_clk[1]

enumerator kEWM_LpoClockSource2

EWM clock sourced from lpo_clk[2]

enumerator kEWM_LpoClockSource3

EWM clock sourced from lpo_clk[3]

enum _ewm_interrupt_enable_t

EWM interrupt configuration structure with default settings all disabled.

This structure contains the settings for all of EWM interrupt configurations.

Values:

enumerator kEWM_InterruptEnable

Enable the EWM to generate an interrupt

enum _ewm_status_flags_t

EWM status flags.

This structure contains the constants for the EWM status flags for use in the EWM functions.

Values:

enumerator kEWM_RunningFlag

Running flag, set when EWM is enabled

typedef enum *_ewm_lpo_clock_source* ewm_lpo_clock_source_t

Describes EWM clock source.

typedef struct *_ewm_config* ewm_config_t

Data structure for EWM configuration.

This structure is used to configure the EWM.

struct _ewm_config

#include <fsl_ewm.h> Data structure for EWM configuration.

This structure is used to configure the EWM.

Public Members

bool enableEwm

Enable EWM module

bool enableEwmInput

Enable EWM_in input

bool setInputAssertLogic

EWM_in signal assertion state

bool enableInterrupt

Enable EWM interrupt

ewm_lpo_clock_source_t clockSource

Clock source select

uint8_t prescaler

Clock prescaler value

uint8_t compareLowValue

Compare low-register value

uint8_t compareHighValue

Compare high-register value

2.15 FGPIO Driver

2.16 C40ESP3 Flash Driver

enum _flash_driver_version_constants

Flash driver version for ROM.

Values:

enumerator kFLASH_DriverVersionName
Flash driver version name.

enumerator kFLASH_DriverVersionMajor
Major flash driver version.

enumerator kFLASH_DriverVersionMinor
Minor flash driver version.

enumerator kFLASH_DriverVersionBugfix
Bugfix for flash driver version.

enum _flash_property_tag
Enumeration for various flash properties.

Values:

enumerator kFLASH_PropertyPflash0SectorSize
Pflash sector size property.

enumerator kFLASH_PropertyPflash0TotalSize
Pflash total size property.

enumerator kFLASH_PropertyPflash0BlockSize
Pflash block size property.

enumerator kFLASH_PropertyPflash0BlockCount
Pflash block count property.

enumerator kFLASH_PropertyPflash0BlockBaseAddr
Pflash block base address property.

enumerator kFLASH_PropertyPflash0FacSupport
Pflash fac support property.

enumerator kFLASH_PropertyPflash0AccessSegmentSize
Pflash access segment size property.

enumerator kFLASH_PropertyPflash0AccessSegmentCount
Pflash access segment count property.

enumerator kFLASH_PropertyPflash1SectorSize
Pflash sector size property.

enumerator kFLASH_PropertyPflash1TotalSize
Pflash total size property.

enumerator kFLASH_PropertyPflash1BlockSize
Pflash block size property.

enumerator kFLASH_PropertyPflash1BlockCount
Pflash block count property.

enumerator kFLASH_PropertyPflash1BlockBaseAddr
Pflash block base address property.

enumerator kFLASH_PropertyPflash1FacSupport
Pflash fac support property.

enumerator kFLASH_PropertyPflash1AccessSegmentSize
Pflash access segment size property.

enumerator kFLASH_PropertyPflash1AccessSegmentCount
Pflash access segment count property.

enumerator kFLASH_PropertyFlexRamBlockBaseAddr
FlexRam block base address property.

enumerator kFLASH_PropertyFlexRamTotalSize
FlexRam total size property.

typedef enum *_flash_property_tag* flash_property_tag_t
Enumeration for various flash properties.

FSL_FLASH_DRIVER_VERSION
Flash driver version for SDK.

Version 2.3.3.

FLASH_ADDR_MASK

enum _flash_driver_api_keys
Enumeration for Flash driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFLASH_ApiEraseKey
Key value used to validate all flash erase APIs.

status_t FLASH_Init(*flash_config_t* *config)
Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FLASH_Success – API was executed successfully.
- kStatus_FLASH_InvalidArgument – An invalid argument is provided.
- kStatus_FLASH_CommandFailure – Run-time error during the command execution.
- kStatus_FLASH_CommandNotSupported – Flash API is not supported.

status_t FLASH_Erase(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes, uint32_t key)
Erases the flash sectors encompassed by parameters passed into function.

status_t FLASH_EraseAll(FMU_Type *base, uint32_t key)
Erases entire flash and ifr.

status_t FLASH_Program(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint8_t *src, uint32_t lengthInBytes)
Programs flash phrases with data at locations passed in through parameters.

status_t FLASH_ProgramPage(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash pages with data at locations passed in through parameters.

status_t FLASH_VerifyErasePhrase(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes)

Verify that the flash phrases are erased.

status_t FLASH_VerifyErasePage(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes)

Verify that the flash pages are erased.

status_t FLASH_VerifyEraseSector(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes)

Verify that the flash sectors are erased.

status_t FLASH_VerifyEraseAll(FMU_Type *base)

Verify that all flash and IFR space is erased.

status_t FLASH_VerifyEraseBlock(*flash_config_t* *config, FMU_Type *base, uint32_t blockaddr)

Verify that a flash block is erased.

status_t FLASH_VerifyEraseIFRPhrase(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes)

Verify that the ifr phrases are erased.

status_t FLASH_VerifyEraseIFRPage(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes)

Verify that the ifr pages are erased.

status_t FLASH_VerifyEraseIFRSector(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t lengthInBytes)

Verify that the ifr sectors are erased.

status_t FLASH_GetProperty(*flash_config_t* *config, *flash_property_tag_t* whichProperty, uint32_t *value)

Returns the desired flash property.

status_t Read_Into_MISR(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t ending, uint32_t *seed, uint32_t *signature)

Read into MISR.

The Read into MISR operation generates a signature based on the contents of the selected flash memory using an embedded MISR.

status_t Read_IFR_Into_MISR(*flash_config_t* *config, FMU_Type *base, uint32_t start, uint32_t ending, uint32_t *seed, uint32_t *signature)

Read IFR into MISR.

The Read IFR into MISR operation generates a signature based on the contents of the selected IFR space using an embedded MISR.

typedef struct *_flash_mem_descriptor* flash_mem_desc_t

Flash memory descriptor.

typedef struct *_flash_ifr_desc* flash_ifr_desc_t

typedef struct *_msf1_config* msf1_config_t

typedef struct *_flash_config* flash_config_t

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

struct _flash_mem_descriptor

#include <fsl_k4_flash.h> Flash memory descriptor.

Public Members

uint32_t blockBase

Base address of the flash block

uint32_t totalSize

The size of the flash block.

uint32_t blockCount

A number of flash blocks.

struct _flash_ifr_desc

#include <fsl_k4_flash.h>

struct _msf1_config

#include <fsl_k4_flash.h>

struct _flash_config

#include <fsl_k4_flash.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

2.17 FlexCAN: Flex Controller Area Network Driver

2.18 FlexCAN Driver

bool FLEXCAN_IsInstanceHasFDMode(CAN_Type *base)

Determine whether the FlexCAN instance support CAN FD mode at run time.

Note: Use this API only if different soc parts share the SOC part name macro define. Otherwise, a different SOC part name can be used to determine at compile time whether the FlexCAN instance supports CAN FD mode or not. If need use this API to determine if CAN FD mode is supported, the FLEXCAN_Init function needs to be executed first, and then call this API and use the return to value determines whether to supports CAN FD mode, if return true, continue calling FLEXCAN_FDInit to enable CAN FD mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

return TRUE if instance support CAN FD mode, FALSE if instance only support classic CAN (2.0) mode.

status_t FLEXCAN_EnterFreezeMode(CAN_Type *base)

Enter FlexCAN Freeze Mode.

This function makes the FlexCAN work under Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

status_t FLEXCAN_ExitFreezeMode(CAN_Type *base)

Exit FlexCAN Freeze Mode.

This function makes the FlexCAN leave Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

uint32_t FLEXCAN_GetInstance(CAN_Type *base)

Get the FlexCAN instance from peripheral base address.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN instance.

bool FLEXCAN_CalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t sourceClock_Hz, *flexcan_timing_config_t* *pTimingConfig)

Calculates the improved timing values by specific bit Rates for classical CAN.

This function use to calculates the Classical CAN timing values according to the given bit rate. The Calculated timing values will be set in CTRL1/CBT/ENCBT register. The calculation is based on the recommendation of the CiA 301 v4.2.0 and previous version document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The classical CAN speed in bps defined by user, should be less than or equal to 1Mbps.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration.

void FLEXCAN_Init(CAN_Type *base, const *flexcan_config_t* *pConfig, uint32_t sourceClock_Hz)

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the flexcan_config_t parameters and how to call the FLEXCAN_Init function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc                 = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate                = 1000000U;
flexcanConfig.maxMbNum               = 16;
flexcanConfig.enableLoopBack         = false;
flexcanConfig.enableSelfWakeup       = false;
flexcanConfig.enableIndividMask      = false;
flexcanConfig.enableDoze             = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
flexcanConfig.timingConfig           = timingConfig;
FLEXCAN_Init(CAN0, &flexcanConfig, 40000000UL);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.

bool FLEXCAN_FDCalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t bitRateFD, uint32_t sourceClock_Hz, *flexcan_timing_config_t* *pTimingConfig)

Calculates the improved timing values by specific bit rates for CANFD.

This function use to calculates the CANFD timing values according to the given nominal phase bit rate and data phase bit rate. The Calculated timing values will be set in CBT/ENCBT and FDCBT/EDCBT registers. The calculation is based on the recommendation of the CiA 1301 v1.0.0 document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The CANFD bus control speed in bps defined by user.
- bitRateFD – The CAN FD data phase speed in bps defined by user. Equal to bitRate means disable bit rate switching.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration

void FLEXCAN_FDInit(CAN_Type *base, const *flexcan_config_t* *pConfig, uint32_t sourceClock_Hz, *flexcan_mb_size_t* dataSize, bool brs)

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the flexcan_config_t parameters and how to call the FLEXCAN_FDInit function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc                 = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate                = 1000000U;
flexcanConfig.bitRateFD              = 2000000U;
flexcanConfig.maxMbNum               = 16;
flexcanConfig.enableLoopBack         = false;
flexcanConfig.enableSelfWakeup       = false;
flexcanConfig.enableIndividMask      = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
```

(continues on next page)

(continued from previous page)

```
flexcanConfig.enableDoze          = false;
flexcanConfig.timingConfig        = timingConfig;
FLEXCAN_FDInit(CAN0, &flexcanConfig, 80000000UL, kFLEXCAN_16BperMB, true);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.
- dataSize – FlexCAN Message Buffer payload size. The actual transmitted or received CAN FD frame data size needs to be less than or equal to this value.
- brs – True if bit rate switch is enabled in FD mode.

void FLEXCAN_Deinit(CAN_Type *base)

De-initializes a FlexCAN instance.

This function disables the FlexCAN module clock and sets all register values to the reset value.

Parameters

- base – FlexCAN peripheral base address.

void FLEXCAN_GetDefaultConfig(*flexcan_config_t* *pConfig)

Gets the default configuration structure.

This function initializes the FlexCAN configuration structure to default values. The default values are as follows. flexcanConfig->clkSrc = kFLEXCAN_ClkSrc0; flexcanConfig->bitRate = 1000000U; flexcanConfig->bitRateFD = 2000000U; flexcanConfig->maxMbNum = 16; flexcanConfig->enableLoopBack = false; flexcanConfig->enableSelfWakeup = false; flexcanConfig->enableIndividMask = false; flexcanConfig->disableSelfReception = false; flexcanConfig->enableListenOnlyMode = false; flexcanConfig->enableDoze = false; flexcanConfig->enablePretendedeNetworking = false; flexcanConfig->enableMemoryErrorControl = true; flexcanConfig->enableNonCorrectableErrorEnterFreeze = true; flexcanConfig->enableTransceiverDelayMeasure = true; flexcanConfig->enableRemoteRequestFrameStored = true; flexcanConfig->payloadEndianness = kFLEXCAN_bigEndian; flexcanConfig.timingConfig = timingConfig;

Parameters

- pConfig – Pointer to the FlexCAN configuration structure.

void FLEXCAN_SetTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN classical CAN protocol timing characteristic.

This function gives user settings to classical CAN or CAN FD nominal phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetBitRate() instead.

Note: Calling FLEXCAN_SetTimingConfig() overrides the bit rate set in FLEXCAN_Init() or FLEXCAN_SetBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRate_Bps)

Set bit rate of FlexCAN classical CAN frame or CAN FD frame nominal phase.

This function set the bit rate of classical CAN frame or CAN FD frame nominal phase base on FLEXCAN_CalculateImprovedTimingValues() API calculated timing values.

Note: Calling FLEXCAN_SetBitRate() overrides the bit rate set in FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRate_Bps – Bit rate in Bps.

Returns

kStatus_Success - Set CAN baud rate (only Nominal phase) successfully.

void FLEXCAN_SetFDTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN CANFD data phase timing characteristic.

This function gives user settings to CANFD data phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetFDBitRate() to set both Nominal/Data bit Rate instead.

Note: Calling FLEXCAN_SetFDTimingConfig() overrides the data phase bit rate set in FLEXCAN_FDInit()/FLEXCAN_SetFDBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetFDBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRateN_Bps, uint32_t bitRateD_Bps)

Set bit rate of FlexCAN FD frame.

This function set the baud rate of FLEXCAN FD base on FLEXCAN_FDCalculateImprovedTimingValues() API calculated timing values.

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRateN_Bps – Nominal bit Rate in Bps.
- bitRateD_Bps – Data bit Rate in Bps.

Returns

kStatus_Success - Set CAN FD bit rate (include Nominal and Data phase) successfully.

void FLEXCAN_SetRxMbGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive message buffer global mask.

This function sets the global mask for the FlexCAN message buffer in a matching process. The configuration is only effective when the Rx individual mask is disabled in the FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Message Buffer Global Mask value.

void FLEXCAN_SetRxFifoGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive FIFO global mask.

This function sets the global mask for FlexCAN FIFO in a matching process.

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Fifo Global Mask value.

void FLEXCAN_SetRxIndividualMask(CAN_Type *base, uint8_t maskIdx, uint32_t mask)

Sets the FlexCAN receive individual mask.

This function sets the individual mask for the FlexCAN matching process. The configuration is only effective when the Rx individual mask is enabled in the FLEXCAN_Init(). If the Rx FIFO is disabled, the individual mask is applied to the corresponding Message Buffer. If the Rx FIFO is enabled, the individual mask for Rx FIFO occupied Message Buffer is applied to the Rx Filter with the same index. Note that only the first 32 individual masks can be used as the Rx FIFO filter mask.

Parameters

- base – FlexCAN peripheral base address.
- maskIdx – The Index of individual Mask.
- mask – Rx Individual Mask value.

void FLEXCAN_SetTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
  - true: Enable Tx Message Buffer.
  - false: Disable Tx Message Buffer.

void FLEXCAN_SetRxMbConfig(CAN_Type *base, uint8_t mbIdx, const *flexcan_rx_mb_config_t* *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer. User should invoke this API when CTRL2[RRS]=1. When CTRL2[RRS]=1, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbEmpty, kFLEXCAN_RxMbFull or kFLEXCAN_RxMbOverrun. Message buffer will store the remote frame in the same fashion of a data frame. No automatic remote response frame will be generated. User need to setup another message buffer to respond remote request.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.

- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
  - true: Enable Rx Message Buffer.
  - false: Disable Rx Message Buffer.

void FLEXCAN_SetFDTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
  - true: Enable Tx Message Buffer.
  - false: Disable Tx Message Buffer.

void FLEXCAN_SetFDRxMbConfig(CAN_Type *base, uint8_t mbIdx, const *flexcan_rx_mb_config_t* *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
  - true: Enable Rx Message Buffer.
  - false: Disable Rx Message Buffer.

void FLEXCAN_SetRemoteResponseMbConfig(CAN_Type *base, uint8_t mbIdx, const *flexcan_frame_t* *pFrame)

Configures a FlexCAN Remote Response Message Buffer.

User should invoke this API when CTRL2[RRS]=0. When CTRL2[RRS]=0, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbRanswer. If there is a matching ID, then this mailbox content will be transmitted as response. The received remote request frame is not stored in receive buffer. It is only used to trigger a transmission of a frame in response.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pFrame – Pointer to CAN message frame structure for response.

void FLEXCAN_SetRxFifoConfig(CAN_Type *base, const *flexcan_rx_fifo_config_t* *pRxFifoConfig, bool enable)

Configures the FlexCAN Legacy Rx FIFO.

This function configures the FlexCAN Rx FIFO with given configuration.

Note: Legacy Rx FIFO only can receive classic CAN message.

Parameters

- base – FlexCAN peripheral base address.
- pRxFifoConfig – Pointer to the FlexCAN Legacy Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Legacy Rx FIFO.
  - true: Enable Legacy Rx FIFO.
  - false: Disable Legacy Rx FIFO.

void FLEXCAN_SetEnhancedRxFifoConfig(CAN_Type *base, const *flexcan_enhanced_rx_fifo_config_t* *pConfig, bool enable)

Configures the FlexCAN Enhanced Rx FIFO.

This function configures the Enhanced Rx FIFO with given configuration.

Note: Enhanced Rx FIFO support receive classic CAN or CAN FD messages, Legacy Rx FIFO and Enhanced Rx FIFO cannot be enabled at the same time.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Enhanced Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Enhanced Rx FIFO.
  - true: Enable Enhanced Rx FIFO.
  - false: Disable Enhanced Rx FIFO.

void FLEXCAN_SetPNConfig(CAN_Type *base, const *flexcan_pn_config_t* *pConfig)

Configures the FlexCAN Pretended Networking mode.

This function configures the FlexCAN Pretended Networking mode with given configuration.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Rx FIFO configuration structure.

static inline uint64_t FLEXCAN_GetStatusFlags(CAN_Type *base)

Gets the FlexCAN module interrupt flags.

This function gets all FlexCAN status flags. The flags are returned as the logical OR value of the enumerators _flexcan_flags. To check the specific status, compare the return value with enumerators in _flexcan_flags.

Parameters

- base – FlexCAN peripheral base address.

Returns
FlexCAN status flags which are ORed by the enumerators in the _flexcan_flags.

static inline void FLEXCAN_ClearStatusFlags(CAN_Type *base, uint64_t mask)

Clears status flags with the provided mask.

This function clears the FlexCAN status flags with a provided mask. An automatically cleared flag can't be cleared by this function.

Parameters

- base – FlexCAN peripheral base address.
- mask – The status flags to be cleared, it is logical OR value of _flexcan_flags.

static inline void FLEXCAN_GetBusErrCount(CAN_Type *base, uint8_t *txErrBuf, uint8_t *rxErrBuf)

Gets the FlexCAN Bus Error Counter value.

This function gets the FlexCAN Bus Error Counter value for both Tx and Rx direction. These values may be needed in the upper layer error handling.

Parameters

- base – FlexCAN peripheral base address.
- txErrBuf – Buffer to store Tx Error Counter value.
- rxErrBuf – Buffer to store Rx Error Counter value.

static inline uint64_t FLEXCAN_GetMbStatusFlags(CAN_Type *base, uint64_t mask)

Gets the FlexCAN low 64 Message Buffer interrupt flags.

This function gets the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns
The status of given Message Buffers.

static inline uint64_t FLEXCAN_GetHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)

Gets the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns
The status of given Message Buffers.

static inline void FLEXCAN_ClearMbStatusFlags(CAN_Type *base, uint64_t mask)

Clears the FlexCAN low 64 Message Buffer interrupt flags.

This function clears the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_ClearHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)

Clears the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

void FLEXCAN_GetMemoryErrorReportStatus(CAN_Type *base, *flexcan_memory_error_report_status_t* *errorStatus)

Gets the FlexCAN Memory Error Report registers status.

This function gets the FlexCAN Memory Error Report registers status.

Parameters

- base – FlexCAN peripheral base address.
- errorStatus – Pointer to FlexCAN Memory Error Report registers status structure.

static inline uint8_t FLEXCAN_GetPNMatchCount(CAN_Type *base)

Gets the FlexCAN Number of Matches when in Pretended Networking.

This function gets the number of times a given message has matched the predefined filtering criteria for ID and/or PL before a wakeup event.

Parameters

- base – FlexCAN peripheral base address.

Returns

The number of received wake up msessages.

static inline uint32_t FLEXCAN_GetEnhancedFifoDataCount(CAN_Type *base)

Gets the number of FlexCAN Enhanced Rx FIFO available frames.

This function gets the number of CAN messages stored in the Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.

Returns

The number of available CAN messages stored in the Enhanced Rx FIFO.

static inline void FLEXCAN_EnableInterrupts(CAN_Type *base, uint64_t mask)

Enables FlexCAN interrupts according to the provided mask.

This function enables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see _flexcan_interrupt_enable.

Parameters

- base – FlexCAN peripheral base address.
- mask – The interrupts to enable. Logical OR of _flexcan_interrupt_enable.

static inline void FLEXCAN_DisableInterrupts(CAN_Type *base, uint64_t mask)

Disables FlexCAN interrupts according to the provided mask.

This function disables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see _flexcan_interrupt_enable.

Parameters

- base – FlexCAN peripheral base address.

- mask – The interrupts to disable. Logical OR of _flexcan_interrupt_enable.

static inline void FLEXCAN_EnableMbInterrupts(CAN_Type *base, uint64_t mask)

Enables FlexCAN low 64 Message Buffer interrupts.

This function enables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_EnableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)

Enables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_DisableMbInterrupts(CAN_Type *base, uint64_t mask)

Disables FlexCAN low 64 Message Buffer interrupts.

This function disables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_DisableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)

Disables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

void FLEXCAN_EnableRxFifoDMA(CAN_Type *base, bool enable)

Enables or disables the FlexCAN Rx FIFO DMA request.

This function enables or disables the DMA feature of FlexCAN build-in Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- enable – true to enable, false to disable.

static inline uintptr_t FLEXCAN_GetRxFifoHeadAddr(CAN_Type *base)

Gets the Rx FIFO Head address.

This function returns the FlexCAN Rx FIFO Head address, which is mainly used for the DMA/eDMA use case.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN Rx FIFO Head address.

static inline *status_t* FLEXCAN_Enable(CAN_Type *base, bool enable)

Enables or disables the FlexCAN module operation.

This function enables or disables the FlexCAN module.

Parameters

- base – FlexCAN base pointer.
- enable – true to enable, false to disable.

Returns

kStatus_Success Enable FlexCAN module successful kStatus_Timeout Timeout when wait for Low-Power Mode Acknowledge

status_t FLEXCAN_WriteTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_frame_t* *pTxFrame)

Writes a FlexCAN Message to the Transmit Message Buffer.

This function writes a CAN Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.

status_t FLEXCAN_ReadRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Receive Message Buffer.

This function reads a CAN message from a specified Receive Message Buffer. The function fills a receive CAN message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.

status_t FLEXCAN_WriteFDTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_fd_frame_t* *pTxFrame)

Writes a FlexCAN FD Message to the Transmit Message Buffer.

This function writes a CAN FD Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN FD Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN FD Message Buffer index.
- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.

status_t FLEXCAN_ReadFDRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN FD Message from Receive Message Buffer.

This function reads a CAN FD message from a specified Receive Message Buffer. The function fills a receive CAN FD message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.

status_t FLEXCAN_ReadRxFifo(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Legacy Rx FIFO.

This function reads a CAN message from the FlexCAN Legacy Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.

status_t FLEXCAN_ReadEnhancedRxFifo(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN Message from Enhanced Rx FIFO.

This function reads a CAN or CAN FD message from the FlexCAN Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.

status_t FLEXCAN_ReadPNWakeUpMB(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Wake Up MB.

This function reads a CAN message from the FlexCAN Wake up Message Buffers. There are four Wake up Message Buffers (WMBs) used to store incoming messages in Pretended Networking mode. The WMB index indicates the arrival order. The last message is stored in WMB3.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.
- mbIdx – The FlexCAN Wake up Message Buffer index. Range in 0x0 ~ 0x3.

Return values

- kStatus_Success – - Read Message from Wake up Message Buffer successfully.
- kStatus_Fail – - Wake up Message Buffer has no valid content.

status_t FLEXCAN_TransferFDSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.
- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_Timeout – - Failed to send frames within specific time.

status_t FLEXCAN_TransferFDReceiveBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.

- kStatus_Fail – - Rx Message Buffer is empty.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferFDSendNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferFDReceiveNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – - Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy – - Rx Message Buffer is in use.

void FLEXCAN_TransferFDAbortSend(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

void FLEXCAN_TransferFDAbortReceive(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

status_t FLEXCAN_TransferSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_Timeout – - Failed to send frames within specific time.

status_t FLEXCAN_TransferReceiveBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveFifoBlocking(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Performs a polling receive transaction from Legacy Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveEnhancedFifoBlocking(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction from Enhanced Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.
- kStatus_Timeout – - Failed to receive frames within specific time.

void FLEXCAN_TransferCreateHandle(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_transfer_callback_t* callback, void *userData)

Initializes the FlexCAN handle.

This function initializes the FlexCAN handle, which can be used for other FlexCAN transactional APIs. Usually, for a specified FlexCAN instance, call this API once to get the initialized handle.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- callback – The callback function.
- userData – The parameter of the callback function.

status_t FLEXCAN_TransferSendNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferReceiveNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – - Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy – - Rx Message Buffer is in use.

status_t FLEXCAN_TransferReceiveFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the flexcan_fifo_transfer_t.

Return values

- kStatus_Success – - Start Rx FIFO receiving process successfully.
- kStatus_FLEXCAN_RxFifoBusy – - Rx FIFO is currently in use.

status_t FLEXCAN_TransferGetReceiveFifoCount(CAN_Type *base, *flexcan_handle_t* *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

status_t FLEXCAN_TransferReceiveEnhancedFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Enhanced Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the ref flexcan_fifo_transfer_t.@

Return values

- kStatus_Success – - Start Rx FIFO receiving process successfully.
- kStatus_FLEXCAN_RxFifoBusy – - Rx FIFO is currently in use.

static inline *status_t* FLEXCAN_TransferGetReceiveEnhancedFifoCount(CAN_Type *base, *flexcan_handle_t* *handle, size_t *count)

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

uint32_t FLEXCAN_GetTimeStamp(*flexcan_handle_t* *handle, uint8_t mbIdx)

Gets the detail index of Mailbox's Timestamp by handle.

Then function can only be used when calling non-blocking Data transfer (TX/RX) API, After TX/RX data transfer done (User can get the status by handler's callback function), we can get the detail index of Mailbox's timestamp by handle, Detail non-blocking data transfer API (TX/RX) contain. -FLEXCAN_TransferSendNonBlocking -FLEXCAN_TransferFDSendNonBlocking -FLEXCAN_TransferReceiveNonBlocking -FLEXCAN_TransferFDReceiveNonBlocking -FLEXCAN_TransferReceiveFifoNonBlocking

Parameters

- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

Return values

the – index of mailbox 's timestamp stored in the handle.

void FLEXCAN_TransferAbortSend(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

void FLEXCAN_TransferAbortReceive(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

void FLEXCAN_TransferAbortReceiveFifo(CAN_Type *base, *flexcan_handle_t* *handle)

Aborts the interrupt driven message receive from Rx FIFO process.

This function aborts the interrupt driven message receive from Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_TransferAbortReceiveEnhancedFifo(CAN_Type *base, *flexcan_handle_t* *handle)

Aborts the interrupt driven message receive from Enhanced Rx FIFO process.

This function aborts the interrupt driven message receive from Enhanced Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_TransferHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN IRQ handle function.

This function handles the FlexCAN Error, the Message Buffer, and the Rx FIFO IRQ request.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_MbHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle, uint32_t startMbIdx, uint32_t endMbIdx)

FlexCAN Message Buffer IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- startMbIdx – First Message Buffer to handle.
- endMbIdx – Last Message Buffer to handle.

void FLEXCAN_EhancedRxFifoHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Ehanced Rx FIFO IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_BusoffErrorHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Bus Off, Error and Warning IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_PNWakeUpHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Pretended Networking Wake-up IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_MemoryErrorHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Memory Error IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

FSL_FLEXCAN_DRIVER_VERSION

FlexCAN driver version.

FlexCAN transfer status.

Values:

enumerator kStatus_FLEXCAN_TxBusy

Tx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_TxIdle

Tx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_TxSwitchToRx

Remote Message is send out and Message buffer changed to Receive one.

enumerator kStatus_FLEXCAN_RxBusy

Rx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_RxIdle

Rx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_RxOverflow

Rx Message Buffer is Overflowed.

enumerator kStatus_FLEXCAN_RxFifoBusy

Rx Message FIFO is Busy.

enumerator kStatus_FLEXCAN_RxFifoIdle

Rx Message FIFO is Idle.

enumerator kStatus_FLEXCAN_RxFifoOverflow

Rx Message FIFO is overflowed.

enumerator kStatus_FLEXCAN_RxFifoWarning

Rx Message FIFO is almost overflowed.

enumerator kStatus_FLEXCAN_RxFifoDisabled
Rx Message FIFO is disabled during reading.

enumerator kStatus_FLEXCAN_ErrorStatus
FlexCAN Module Error and Status.

enumerator kStatus_FLEXCAN_WakeUp
FlexCAN is waken up from STOP mode.

enumerator kStatus_FLEXCAN_UnHandled
UnHadled Interrupt asserted.

enumerator kStatus_FLEXCAN_RxRemote
Rx Remote Message Received in Mail box.

enumerator kStatus_FLEXCAN_RxFifoUnderflow
Enhanced Rx Message FIFO is underflow.

enumerator kStatus_FLEXCAN_MemoryError
FlexCAN Memory Error.

enum _flexcan_frame_format
FlexCAN frame format.

Values:

enumerator kFLEXCAN_FrameFormatStandard
Standard frame format attribute.

enumerator kFLEXCAN_FrameFormatExtend
Extend frame format attribute.

enum _flexcan_frame_type
FlexCAN frame type.

Values:

enumerator kFLEXCAN_FrameTypeData
Data frame type attribute.

enumerator kFLEXCAN_FrameTypeRemote
Remote frame type attribute.

enum _flexcan_clock_source
FlexCAN clock source.

Deprecated:
Do not use the kFLEXCAN_ClkSrcOs. It has been superceded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superceded kFLEXCAN_ClkSrc1

Values:

enumerator kFLEXCAN_ClkSrcOsc
FlexCAN Protocol Engine clock from Oscillator.

enumerator kFLEXCAN_ClkSrcPeri
FlexCAN Protocol Engine clock from Peripheral Clock.

enumerator kFLEXCAN_ClkSrc0
FlexCAN Protocol Engine clock selected by user as SRC == 0.

enumerator kFLEXCAN_ClkSrc1
FlexCAN Protocol Engine clock selected by user as SRC == 1.

enum _flexcan_wake_up_source
FlexCAN wake up source.

Values:

enumerator kFLEXCAN_WakeupSrcUnfiltered
FlexCAN uses unfiltered Rx input to detect edge.

enumerator kFLEXCAN_WakeupSrcFiltered
FlexCAN uses filtered Rx input to detect edge.

enum _flexcan_endianness
FlexCAN payload endianness.

Values:

enumerator kFLEXCAN_bigEndian
Transmit frame with MSB first, receive frame with big-endian format.

enumerator kFLEXCAN_littleEndian
Transmit frame with LSB first, receive frame with little-endian format.

enum _flexcan_rx_fifo_filter_type
FlexCAN Rx Fifo Filter type.

Values:

enumerator kFLEXCAN_RxFifoFilterTypeA
One full ID (standard and extended) per ID Filter element.

enumerator kFLEXCAN_RxFifoFilterTypeB
Two full standard IDs or two partial 14-bit ID slices per ID Filter Table element.

enumerator kFLEXCAN_RxFifoFilterTypeC
Four partial 8-bit Standard or extended ID slices per ID Filter Table element.

enumerator kFLEXCAN_RxFifoFilterTypeD
All frames rejected.

enum _flexcan_mb_size
FlexCAN Message Buffer Payload size.

Values:

enumerator kFLEXCAN_8BperMB
Selects 8 bytes per Message Buffer.

enumerator kFLEXCAN_16BperMB
Selects 16 bytes per Message Buffer.

enumerator kFLEXCAN_32BperMB
Selects 32 bytes per Message Buffer.

enumerator kFLEXCAN_64BperMB
Selects 64 bytes per Message Buffer.

enum _flexcan_fd_frame_length
FlexCAN CAN FD frame supporting data length (available DLC values).

For Tx, when the Data size corresponding to DLC value stored in the MB selected for transmission is larger than the MB Payload size, FlexCAN adds the necessary number of bytes

with constant 0xCC pattern to complete the expected DLC. For Rx, when the Data size corresponding to DLC value received from the CAN bus is larger than the MB Payload size, the high order bytes that do not fit the Payload size will lose.

Values:

enumerator kFLEXCAN_0BperFrame
Frame contains 0 valid data bytes.

enumerator kFLEXCAN_1BperFrame
Frame contains 1 valid data bytes.

enumerator kFLEXCAN_2BperFrame
Frame contains 2 valid data bytes.

enumerator kFLEXCAN_3BperFrame
Frame contains 3 valid data bytes.

enumerator kFLEXCAN_4BperFrame
Frame contains 4 valid data bytes.

enumerator kFLEXCAN_5BperFrame
Frame contains 5 valid data bytes.

enumerator kFLEXCAN_6BperFrame
Frame contains 6 valid data bytes.

enumerator kFLEXCAN_7BperFrame
Frame contains 7 valid data bytes.

enumerator kFLEXCAN_8BperFrame
Frame contains 8 valid data bytes.

enumerator kFLEXCAN_12BperFrame
Frame contains 12 valid data bytes.

enumerator kFLEXCAN_16BperFrame
Frame contains 16 valid data bytes.

enumerator kFLEXCAN_20BperFrame
Frame contains 20 valid data bytes.

enumerator kFLEXCAN_24BperFrame
Frame contains 24 valid data bytes.

enumerator kFLEXCAN_32BperFrame
Frame contains 32 valid data bytes.

enumerator kFLEXCAN_48BperFrame
Frame contains 48 valid data bytes.

enumerator kFLEXCAN_64BperFrame
Frame contains 64 valid data bytes.

enum _flexcan_efifo_dma_per_read_length
FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

Values:

enumerator kFLEXCAN_1WordPerRead
Transfer 1 32-bit words (CS).

enumerator kFLEXCAN_2WordPerRead
Transfer 2 32-bit words (CS + ID).

enumerator kFLEXCAN_3WordPerRead
Transfer 3 32-bit words (CS + ID + 1~4 bytes data).

enumerator kFLEXCAN_4WordPerRead
Transfer 4 32-bit words (CS + ID + 5~8 bytes data).

enumerator kFLEXCAN_5WordPerRead
Transfer 5 32-bit words (CS + ID + 9~12 bytes data).

enumerator kFLEXCAN_6WordPerRead
Transfer 6 32-bit words (CS + ID + 13~16 bytes data).

enumerator kFLEXCAN_7WordPerRead
Transfer 7 32-bit words (CS + ID + 17~20 bytes data).

enumerator kFLEXCAN_8WordPerRead
Transfer 8 32-bit words (CS + ID + 21~24 bytes data).

enumerator kFLEXCAN_9WordPerRead
Transfer 9 32-bit words (CS + ID + 25~28 bytes data).

enumerator kFLEXCAN_10WordPerRead
Transfer 10 32-bit words (CS + ID + 29~32 bytes data).

enumerator kFLEXCAN_11WordPerRead
Transfer 11 32-bit words (CS + ID + 33~36 bytes data).

enumerator kFLEXCAN_12WordPerRead
Transfer 12 32-bit words (CS + ID + 37~40 bytes data).

enumerator kFLEXCAN_13WordPerRead
Transfer 13 32-bit words (CS + ID + 41~44 bytes data).

enumerator kFLEXCAN_14WordPerRead
Transfer 14 32-bit words (CS + ID + 45~48 bytes data).

enumerator kFLEXCAN_15WordPerRead
Transfer 15 32-bit words (CS + ID + 49~52 bytes data).

enumerator kFLEXCAN_16WordPerRead
Transfer 16 32-bit words (CS + ID + 53~56 bytes data).

enumerator kFLEXCAN_17WordPerRead
Transfer 17 32-bit words (CS + ID + 57~60 bytes data).

enumerator kFLEXCAN_18WordPerRead
Transfer 18 32-bit words (CS + ID + 61~64 bytes data).

enumerator kFLEXCAN_19WordPerRead
Transfer 19 32-bit words (CS + ID + 64 bytes data + ID HIT).

enum _flexcan_rx_fifo_priority
FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

Values:

enumerator kFLEXCAN_RxFifoPrioLow
Matching process start from Rx Message Buffer first.

enumerator kFLEXCAN_RxFifoPrioHigh

Matching process start from Enhanced/Legacy Rx FIFO first.

enum _flexcan_interrupt_enable

FlexCAN interrupt enable enumerations.

This provides constants for the FlexCAN interrupt enable enumerations for use in the FlexCAN functions.

Note: FlexCAN Message Buffers and Legacy Rx FIFO interrupts not included in.

Values:

enumerator kFLEXCAN_BusOffInterruptEnable

Bus Off interrupt, use bit 15.

enumerator kFLEXCAN_ErrorInterruptEnable

CAN Error interrupt, use bit 14.

enumerator kFLEXCAN_TxWarningInterruptEnable

Tx Warning interrupt, use bit 11.

enumerator kFLEXCAN_RxWarningInterruptEnable

Rx Warning interrupt, use bit 10.

enumerator kFLEXCAN_WakeUpInterruptEnable

Self Wake Up interrupt, use bit 26.

enumerator kFLEXCAN_FDErrorInterruptEnable

CAN FD Error interrupt, use bit 31.

enumerator kFLEXCAN_PNMatchWakeUpInterruptEnable

PN Match Wake Up interrupt, use high word bit 17.

enumerator kFLEXCAN_PNTimeoutWakeUpInterruptEnable

PN Timeout Wake Up interrupt, use high word bit 16. Enhanced Rx FIFO Underflow interrupt, use high word bit 31.

enumerator kFLEXCAN_ERxFifoUnderflowInterruptEnable

Enhanced Rx FIFO Overflow interrupt, use high word bit 30.

enumerator kFLEXCAN_ERxFifoOverflowInterruptEnable

Enhanced Rx FIFO Watermark interrupt, use high word bit 29.

enumerator kFLEXCAN_ERxFifoWatermarkInterruptEnable

Enhanced Rx FIFO Data Avilable interrupt, use high word bit 28.

enumerator kFLEXCAN_ERxFifoDataAvlInterruptEnable

enumerator kFLEXCAN_HostAccessNCErrorInterruptEnable

Host Access With Non-Correctable Errors interrupt, use high word bit 0.

enumerator kFLEXCAN_FlexCanAccessNCErrorInterruptEnable

FlexCAN Access With Non-Correctable Errors interrupt, use high word bit 2.

enumerator kFLEXCAN_HostOrFlexCanCErrorInterruptEnable

Host or FlexCAN Access With Correctable Errors interrupt, use high word bit 3.

enum _flexcan_flags

FlexCAN status flags.

This provides constants for the FlexCAN status flags for use in the FlexCAN functions.

Note: The CPU read action clears the bits corresponding to the FlEXCAN_ErrorFlag macro, therefore user need to read status flags and distinguish which error is occur using _flexcan_error_flags enumerations.

Values:

enumerator kFLEXCAN_ErrorOverrunFlag
Error Overrun Status.

enumerator kFLEXCAN_FDErrorIntFlag
CAN FD Error Interrupt Flag.

enumerator kFLEXCAN_BusoffDoneIntFlag
Bus Off process completed Interrupt Flag.

enumerator kFLEXCAN_SynchFlag
CAN Synchronization Status.

enumerator kFLEXCAN_TxWarningIntFlag
Tx Warning Interrupt Flag.

enumerator kFLEXCAN_RxWarningIntFlag
Rx Warning Interrupt Flag.

enumerator kFLEXCAN_IdleFlag
FlexCAN In IDLE Status.

enumerator kFLEXCAN_FaultConfinementFlag
FlexCAN Fault Confinement State.

enumerator kFLEXCAN_TransmittingFlag
FlexCAN In Transmission Status.

enumerator kFLEXCAN_ReceivingFlag
FlexCAN In Reception Status.

enumerator kFLEXCAN_BusOffIntFlag
Bus Off Interrupt Flag.

enumerator kFLEXCAN_ErrorIntFlag
CAN Error Interrupt Flag.

enumerator kFLEXCAN_WakeUpIntFlag
Self Wake-Up Interrupt Flag.

enumerator kFLEXCAN_ErrorFlag

enumerator kFLEXCAN_PNMatchIntFlag
PN Matching Event Interrupt Flag.

enumerator kFLEXCAN_PNTimeoutIntFlag
PN Timeout Event Interrupt Flag.

enumerator kFLEXCAN_ERxFifoUnderflowIntFlag
Enhanced Rx FIFO underflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoOverflowIntFlag
Enhanced Rx FIFO overflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoWatermarkIntFlag
Enhanced Rx FIFO watermark Interrupt Flag.

enumerator kFLEXCAN_ERxFifoDataAvlIntFlag
Enhanced Rx FIFO data available Interrupt Flag.

enumerator kFLEXCAN_ERxFifoEmptyFlag
Enhanced Rx FIFO empty status.

enumerator kFLEXCAN_ERxFifoFullFlag
Enhanced Rx FIFO full status.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorIntFlag
Host Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorIntFlag
FlexCAN Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_CorrectableErrorIntFlag
Correctable Error Interrupt Flag.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorOverrunFlag
Host Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorOverrunFlag
FlexCAN Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_CorrectableErrorOverrunFlag
Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_AllMemoryErrorIntFlag
All Memory Error Interrupt Flags.

enumerator kFLEXCAN_AllMemoryErrorFlag
All Memory Error Flags.

enum _flexcan_error_flags
FlexCAN error status flags.

The FlexCAN Error Status enumerations is used to report current error of the FlexCAN bus. This enumerations should be used with KFLEXCAN_ErrorFlag in _flexcan_flags enumerations to ditermine which error is generated.

Values:

enumerator kFLEXCAN_FDStuffingError
Stuffing Error.

enumerator kFLEXCAN_FDFormError
Form Error.

enumerator kFLEXCAN_FDCrcError
Cyclic Redundancy Check Error.

enumerator kFLEXCAN_FDBit0Error
Unable to send dominant bit.

enumerator kFLEXCAN_FDBit1Error
Unable to send recessive bit.

enumerator kFLEXCAN_TxErrorWarningFlag
Tx Error Warning Status.

enumerator kFLEXCAN_RxErrorWarningFlag
Rx Error Warning Status.

enumerator kFLEXCAN_StuffingError
Stuffing Error.

enumerator kFLEXCAN_FormError
Form Error.

enumerator kFLEXCAN_CrcError
Cyclic Redundancy Check Error.

enumerator kFLEXCAN_AckError
Received no ACK on transmission.

enumerator kFLEXCAN_Bit0Error
Unable to send dominant bit.

enumerator kFLEXCAN_Bit1Error
Unable to send recessive bit.

FlexCAN Legacy Rx FIFO status flags.

The FlexCAN Legacy Rx FIFO Status enumerations are used to determine the status of the Rx FIFO. Because Rx FIFO occupy the MB0 ~ MB7 (Rx Fifo filter also occupies more Message Buffer space), Rx FIFO status flags are mapped to the corresponding Message Buffer status flags.

Values:

enumerator kFLEXCAN_RxFifoOverflowFlag
Rx FIFO overflow flag.

enumerator kFLEXCAN_RxFifoWarningFlag
Rx FIFO almost full flag.

enumerator kFLEXCAN_RxFifoFrameAvlFlag
Frames available in Rx FIFO flag.

enum _flexcan_memory_error_type
FlexCAN Memory Error Type.

Values:

enumerator kFLEXCAN_CorrectableError
The memory error is correctable which means on bit error.

enumerator kFLEXCAN_NonCorrectableError
The memory error is non-correctable which means two bit errors.

enum _flexcan_memory_access_type
FlexCAN Memory Access Type.

Values:

enumerator kFLEXCAN_MoveOutFlexCanAccess
The memory error was detected during move-out FlexCAN access.

enumerator kFLEXCAN_MoveInAccess
The memory error was detected during move-in FlexCAN access.

enumerator kFLEXCAN_TxArbitrationAccess
The memory error was detected during Tx Arbitration FlexCAN access.

enumerator kFLEXCAN_RxMatchingAccess
The memory error was detected during Rx Matching FlexCAN access.

enumerator kFLEXCAN_MoveOutHostAccess
The memory error was detected during Rx Matching Host (CPU) access.

enum _flexcan_byte_error_syndrome
FlexCAN Memory Error Byte Syndrome.

Values:

enumerator kFLEXCAN_NoError
No bit error in this byte.

enumerator kFLEXCAN_ParityBits0Error
Parity bit 0 error in this byte.

enumerator kFLEXCAN_ParityBits1Error
Parity bit 1 error in this byte.

enumerator kFLEXCAN_ParityBits2Error
Parity bit 2 error in this byte.

enumerator kFLEXCAN_ParityBits3Error
Parity bit 3 error in this byte.

enumerator kFLEXCAN_ParityBits4Error
Parity bit 4 error in this byte.

enumerator kFLEXCAN_DataBits0Error
Data bit 0 error in this byte.

enumerator kFLEXCAN_DataBits1Error
Data bit 1 error in this byte.

enumerator kFLEXCAN_DataBits2Error
Data bit 2 error in this byte.

enumerator kFLEXCAN_DataBits3Error
Data bit 3 error in this byte.

enumerator kFLEXCAN_DataBits4Error
Data bit 4 error in this byte.

enumerator kFLEXCAN_DataBits5Error
Data bit 5 error in this byte.

enumerator kFLEXCAN_DataBits6Error
Data bit 6 error in this byte.

enumerator kFLEXCAN_DataBits7Error
Data bit 7 error in this byte.

enumerator kFLEXCAN_AllZeroError
All-zeros non-correctable error in this byte.

enumerator kFLEXCAN_AllOneError
All-ones non-correctable error in this byte.

enumerator kFLEXCAN_NonCorrectableErrors
Non-correctable error in this byte.

enum _flexcan_pn_match_source
FlexCAN Pretended Networking match source selection.

Values:

enumerator kFLEXCAN_PNMatSrcID
Message match with ID filtering.

enumerator kFLEXCAN_PNMatSrcIDAndData
Message match with ID filtering and payload filtering.

enum _flexcan_pn_match_mode
FlexCAN Pretended Networking mode match type.

Values:

enumerator kFLEXCAN_PNMatModeEqual
Match upon ID/Payload contents against an exact target value.

enumerator kFLEXCAN_PNMatModeGreater
Match upon an ID/Payload value greater than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeSmaller
Match upon an ID/Payload value smaller than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeRange
Match upon an ID/Payload value inside a range, greater than or equal to a specified lower limit, and smaller than or equal to a specified upper limit

typedef enum *_flexcan_frame_format* flexcan_frame_format_t
FlexCAN frame format.

typedef enum *_flexcan_frame_type* flexcan_frame_type_t
FlexCAN frame type.

typedef enum *_flexcan_clock_source* flexcan_clock_source_t
FlexCAN clock source.

Deprecated:
Do not use the kFLEXCAN_ClkSrcOs. It has been superceded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superceded kFLEXCAN_ClkSrc1

typedef enum *_flexcan_wake_up_source* flexcan_wake_up_source_t
FlexCAN wake up source.

typedef enum *_flexcan_endianness* flexcan_endianness_t
FlexCAN payload endianness.

typedef enum *_flexcan_rx_fifo_filter_type* flexcan_rx_fifo_filter_type_t
FlexCAN Rx Fifo Filter type.

typedef enum *_flexcan_mb_size* flexcan_mb_size_t
FlexCAN Message Buffer Payload size.

typedef enum *_flexcan_efifo_dma_per_read_length* flexcan_efifo_dma_per_read_length_t
FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

typedef enum *_flexcan_rx_fifo_priority* flexcan_rx_fifo_priority_t

FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

typedef enum *_flexcan_memory_error_type* flexcan_memory_error_type_t

FlexCAN Memory Error Type.

typedef enum *_flexcan_memory_access_type* flexcan_memory_access_type_t

FlexCAN Memory Access Type.

typedef enum *_flexcan_byte_error_syndrome* flexcan_byte_error_syndrome_t

FlexCAN Memory Error Byte Syndrome.

typedef struct *_flexcan_memory_error_report_status* flexcan_memory_error_report_status_t

FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of FLEXCAN_GetMemoryErrorReportStatus() function. And user can use FLEXCAN_GetMemoryErrorReportStatus to get the status of the last memory error access.

typedef struct *_flexcan_frame* flexcan_frame_t

FlexCAN message frame structure.

typedef struct *_flexcan_fd_frame* flexcan_fd_frame_t

CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see _flexcan_fd_frame_length.

typedef struct *_flexcan_timing_config* flexcan_timing_config_t

FlexCAN protocol timing characteristic configuration structure.

typedef struct *_flexcan_config* flexcan_config_t

FlexCAN module configuration structure.

Deprecated:

Do not use the baudRate. It has been superceded bitRate

Do not use the baudRateFD. It has been superceded bitRateFD

typedef struct *_flexcan_rx_mb_config* flexcan_rx_mb_config_t

FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of FLEXCAN_SetRxMbConfig() function. The FLEXCAN_SetRxMbConfig() function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

typedef enum *_flexcan_pn_match_source* flexcan_pn_match_source_t

FlexCAN Pretended Networking match source selection.

typedef enum *_flexcan_pn_match_mode* flexcan_pn_match_mode_t

FlexCAN Pretended Networking mode match type.

typedef struct *_flexcan_pn_config* flexcan_pn_config_t

FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of FLEXCAN_SetPNConfig() function. The FLEXCAN_SetPNConfig() function is used to configure FlexCAN Networking work mode.

typedef struct *_flexcan_rx_fifo_config* flexcan_rx_fifo_config_t

FlexCAN Legacy Rx FIFO configuration structure.

typedef struct *_flexcan_enhanced_rx_fifo_std_id_filter* flexcan_enhanced_rx_fifo_std_id_filter_t

FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

typedef struct *_flexcan_enhanced_rx_fifo_ext_id_filter* flexcan_enhanced_rx_fifo_ext_id_filter_t

FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

typedef struct *_flexcan_enhanced_rx_fifo_config* flexcan_enhanced_rx_fifo_config_t

FlexCAN Enhanced Rx FIFO configuration structure.

typedef struct *_flexcan_mb_transfer* flexcan_mb_transfer_t

FlexCAN Message Buffer transfer.

typedef struct *_flexcan_fifo_transfer* flexcan_fifo_transfer_t

FlexCAN Rx FIFO transfer.

typedef struct *_flexcan_handle* flexcan_handle_t

FlexCAN handle structure definition.

typedef void (*flexcan_transfer_callback_t)(CAN_Type *base, *flexcan_handle_t* *handle, *status_t* status, uint64_t result, void *userData)

FLEXCAN_WAIT_TIMEOUT

FLEXCAN_POLLING_TIMEOUT

Max loops to wait for polling transfer.

FLEXCAN_MODULE_TIMEOUT

Max loops to wait for FlexCAN register access complete.

DLC_LENGTH_DECODE(dlc)

FlexCAN frame length helper macro.

FLEXCAN_ID_STD(id)

FlexCAN Frame ID helper macro.

Standard Frame ID helper macro.

FLEXCAN_ID_EXT(id)

Extend Frame ID helper macro.

FLEXCAN_RX_MB_STD_MASK(id, rtr, ide)

FlexCAN Rx Message Buffer Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

FLEXCAN_RX_MB_EXT_MASK(id, rtr, ide)

Extend Rx Message Buffer Mask helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_A(id, rtr, ide)

FlexCAN Legacy Rx FIFO Mask helper macro.

Standard Rx FIFO Mask helper macro Type A helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_HIGH(id, rtr, ide)

Standard Rx FIFO Mask helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_LOW(id, rtr, ide)
Standard Rx FIFO Mask helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_HIGH(id)
Standard Rx FIFO Mask helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_HIGH(id)
Standard Rx FIFO Mask helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_LOW(id)
Standard Rx FIFO Mask helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_LOW(id)
Standard Rx FIFO Mask helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_A(id, rtr, ide)
Extend Rx FIFO Mask helper macro Type A helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_HIGH(id, rtr, ide)
Extend Rx FIFO Mask helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_LOW(id, rtr, ide)
Extend Rx FIFO Mask helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_HIGH(id)
Extend Rx FIFO Mask helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_HIGH(id)
Extend Rx FIFO Mask helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_LOW(id)
Extend Rx FIFO Mask helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_LOW(id)
Extend Rx FIFO Mask helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_A(id, rtr, ide)
FlexCAN Rx FIFO Filter helper macro.

Standard Rx FIFO Filter helper macro Type A helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_HIGH(id, rtr, ide)
Standard Rx FIFO Filter helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_LOW(id, rtr, ide)
Standard Rx FIFO Filter helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_HIGH(id)
Standard Rx FIFO Filter helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_HIGH(id)
Standard Rx FIFO Filter helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_LOW(id)
Standard Rx FIFO Filter helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_LOW(id)
Standard Rx FIFO Filter helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_A(id, rtr, ide)
Extend Rx FIFO Filter helper macro Type A helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_HIGH(id, rtr, ide)
Extend Rx FIFO Filter helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_LOW(id, rtr, ide)
Extend Rx FIFO Filter helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_HIGH(id)
Extend Rx FIFO Filter helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_HIGH(id)
Extend Rx FIFO Filter helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_LOW(id)
Extend Rx FIFO Filter helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_LOW(id)
Extend Rx FIFO Filter helper macro Type C lower part helper macro.

ENHANCED_RX_FIFO_FSCH(x)
FlexCAN Enhanced Rx FIFO Filter and Mask helper macro.

RTR_STD_HIGH(x)

RTR_STD_LOW(x)

RTR_EXT(x)

ID_STD_LOW(id)

ID_STD_HIGH(id)

ID_EXT(id)

FLEXCAN_ENHANCED_RX_FIFO_STD_MASK_AND_FILTER(id, rtr, id_mask, rtr_mask)
Standard ID filter element with filter + mask scheme.

FLEXCAN_ENHANCED_RX_FIFO_STD_FILTER_WITH_RANGE(id_upper, rtr, id_lower, rtr_mask)
Standard ID filter element with filter range.

FLEXCAN_ENHANCED_RX_FIFO_STD_TWO_FILTERS(id1, rtr1, id2, rtr2)
Standard ID filter element with two filters without masks.

FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_LOW(id, rtr)
Extended ID filter element with filter + mask scheme low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_HIGH(id_mask, rtr_mask)
Extended ID filter element with filter + mask scheme high word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_LOW(id_upper, rtr)
Extended ID filter element with range scheme low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_HIGH(id_lower, rtr_mask)
Extended ID filter element with range scheme high word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_LOW(id2, rtr2)
Extended ID filter element with two filters without masks low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_HIGH(id1, rtr1)
Extended ID filter element with two filters without masks high word.

FLEXCAN_PN_STD_MASK(id, rtr)

FlexCAN Pretended Networking ID Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

FLEXCAN_PN_EXT_MASK(id, rtr)

Extend Rx Message Buffer Mask helper macro.

FLEXCAN_PN_INT_MASK(x)

FlexCAN interrupt/status flag helper macro.

FLEXCAN_PN_INT_UNMASK(x)

FLEXCAN_PN_STATUS_MASK(x)

FLEXCAN_PN_STATUS_UNMASK(x)

FLEXCAN_EFIFO_INT_MASK(x)

FLEXCAN_EFIFO_INT_UNMASK(x)

FLEXCAN_EFIFO_STATUS_MASK(x)

FLEXCAN_EFIFO_STATUS_UNMASK(x)

FLEXCAN_MECR_INT_MASK(x)

FLEXCAN_MECR_INT_UNMASK(x)

FLEXCAN_MECR_STATUS_MASK(x)

FLEXCAN_MECR_STATUS_UNMASK(x)

FLEXCAN_ERROR_AND_STATUS_INT_FLAG

FLEXCAN_PNWAKE_UP_FLAG

FLEXCAN_WAKE_UP_FLAG

FLEXCAN_MEMORY_ERROR_INT_FLAG

FLEXCAN_MEMORY_ENHANCED_RX_FIFO_INT_FLAG

E_RX_FIFO(base)

FlexCAN Enhanced Rx FIFO base address helper macro.

FLEXCAN_CALLBACK(x)

FlexCAN transfer callback function.

The FlexCAN transfer callback returns a value from the underlying layer. If the status equals to kStatus_FLEXCAN_ErrorStatus, the result parameter is the Content of FlexCAN status register which can be used to get the working status(or error status) of FlexCAN module. If the status equals to other FlexCAN Message Buffer transfer status, the result is the index of Message Buffer that generate transfer event. If the status equals to other FlexCAN Message Buffer transfer status, the result is meaningless and should be Ignored.

struct _flexcan_memory_error_report_status

#include <fsl_flexcan.h> FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of FLEXCAN_GetMemoryErrorReportStatus() function. And user can use FLEXCAN_GetMemoryErrorReportStatus to get the status of the last memory error access.

Public Members

flexcan_memory_error_type_t errorType

The type of memory error that giving rise to the report.

flexcan_memory_access_type_t accessType

The type of memory access that giving rise to the memory error.

uint16_t accessAddress

The address where memory error detected.

uint32_t errorData

The raw data word read from memory with error.

struct _flexcan_frame

#include <fsl_flexcan.h> FlexCAN message frame structure.

struct _flexcan_fd_frame

#include <fsl_flexcan.h> CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see _flexcan_fd_frame_length.

Public Members

uint32_t idhit

Note: ID HIT offset is changed dynamically according to data length code (DLC), when DLC is 15, they will be located below. Using FLEXCAN_FixEnhancedRxFifoFrameIdHit API is recommended to ensure this idhit value is correct. CAN Enhanced Rx FIFO filter hit id (This value is only used in Enhanced Rx FIFO receive mode).

struct _flexcan_timing_config

#include <fsl_flexcan.h> FlexCAN protocol timing characteristic configuration structure.

Public Members

uint16_t preDivider

Classic CAN or CAN FD nominal phase bit rate prescaler.

uint8_t rJumpwidth

Classic CAN or CAN FD nominal phase Re-sync Jump Width.

uint8_t phaseSeg1

Classic CAN or CAN FD nominal phase Segment 1.

uint8_t phaseSeg2

Classic CAN or CAN FD nominal phase Segment 2.

uint8_t propSeg

Classic CAN or CAN FD nominal phase Propagation Segment.

uint16_t fpreDivider

CAN FD data phase bit rate prescaler.

uint8_t frJumpwidth

CAN FD data phase Re-sync Jump Width.

uint8_t fphaseSeg1
: CAN FD data phase Phase Segment 1.

uint8_t fphaseSeg2
: CAN FD data phase Phase Segment 2.

uint8_t fpropSeg
: CAN FD data phase Propagation Segment.

struct _flexcan_config
: *#include <fsl_flexcan.h>* FlexCAN module configuration structure.

Deprecated:
: Do not use the baudRate. It has been superceded bitRate

  Do not use the baudRateFD. It has been superceded bitRateFD

Public Members

flexcan_clock_source_t clkSrc
: Clock source for FlexCAN Protocol Engine.

flexcan_wake_up_source_t wakeupSrc
: Wake up source selection.

uint8_t maxMbNum
: The maximum number of Message Buffers used by user.

bool enableLoopBack
: Enable or Disable Loop Back Self Test Mode.

bool enableTimerSync
: Enable or Disable Timer Synchronization.

bool enableSelfWakeup
: Enable or Disable Self Wakeup Mode.

bool enableIndividMask
: Enable or Disable Rx Individual Mask and Queue feature.

bool disableSelfReception
: Enable or Disable Self Reflection.

bool enableListenOnlyMode
: Enable or Disable Listen Only Mode.

bool enableDoze
: Enable or Disable Doze Mode.

bool enablePretendedeNetworking
: Enable or Disable the Pretended Networking mode.

bool enableMemoryErrorControl
: Enable or Disable the memory errors detection and correction mechanism.

bool enableNonCorrectableErrorEnterFreeze
: Enable or Disable Non-Correctable Errors In FlexCAN Access Put Device In Freeze Mode.

bool enableTransceiverDelayMeasure

Enable or Disable the transceiver delay measurement, when it is enabled, then the secondary sample point position is determined by the sum of the transceiver delay measurement plus the enhanced TDC offset.

bool enableRemoteRequestFrameStored

true: Store Remote Request Frame in the same fashion of data frame. false: Generate an automatic Remote Response Frame.

flexcan_endianness_t payloadEndianness

Selects the byte order for the payload of transmit and receive frames, see flexcan_endianness_t.

struct __flexcan_rx_mb_config

#include <fsl_flexcan.h> FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of FLEXCAN_SetRxMbConfig() function. The FLEXCAN_SetRxMbConfig() function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

Public Members

uint32_t id

CAN Message Buffer Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

flexcan_frame_format_t format

CAN Frame Identifier format(Standard of Extend).

flexcan_frame_type_t type

CAN Frame Type(Data or Remote for classical CAN only).

struct __flexcan_pn_config

#include <fsl_flexcan.h> FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of FLEXCAN_SetPNConfig() function. The FLEXCAN_SetPNConfig() function is used to configure FlexCAN Networking work mode.

Public Members

bool enableTimeout

Enable or Disable timeout event trigger wakeup.

uint16_t timeoutValue

The timeout value that generates a wakeup event, the counter timer is incremented based on 64 times the CAN Bit Time unit.

bool enableMatch

Enable or Disable match event trigger wakeup.

flexcan_pn_match_source_t matchSrc

Selects the match source (ID and/or data match) to trigger wakeup.

uint8_t matchNum

The number of times a given message must match the predefined ID and/or data before generating a wakeup event, range in 0x1 ~ 0xFF.

flexcan_pn_match_mode_t idMatchMode

The ID match type.

flexcan_pn_match_mode_t dataMatchMode
The data match type.

uint32_t idLower
The ID target values 1 which used either for ID match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in ID match “range detection”.

uint32_t idUpper
The ID target values 2 which used only as the upper limit value in ID match “range detection” or used to store the ID mask in “equal to”.

uint8_t lengthLower
The lower limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

uint8_t lengthUpper
The upper limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

struct __flexcan__rx__fifo__config
#include <fsl_flexcan.h> FlexCAN Legacy Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable
Pointer to the FlexCAN Legacy Rx FIFO identifier filter table.

uint8_t idFilterNum
The FlexCAN Legacy Rx FIFO Filter elements quantity.

flexcan_rx_fifo_filter_type_t idFilterType
The FlexCAN Legacy Rx FIFO Filter type.

flexcan_rx_fifo_priority_t priority
The FlexCAN Legacy Rx FIFO receive priority.

struct __flexcan__enhanced__rx__fifo__std__id__filter
#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

Public Members

uint32_t filterType
FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1
CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t std1
CAN Frame Type(DATA or REMOTE).

uint32_t rtr2
CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct __flexcan_enhanced_rx_fifo_ext_id_filter

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

Public Members

uint32_t filterType

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1

CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t std1

CAN Frame Type(DATA or REMOTE).

uint32_t rtr2

CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct __flexcan_enhanced_rx_fifo_config

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable

Pointer to the FlexCAN Enhanced Rx FIFO identifier filter table, each table member occupies 32 bit word, table size should be equal to idFilterNum. There are two types of Enhanced Rx FIFO filter elements that can be stored in table : extended-ID filter element (1 word, occupie 1 table members) and standard-ID filter element (2 words, occupies 2 table members), the extended-ID filter element needs to be placed in front of the table.

uint8_t idFilterPairNum

idFilterPairNum is the Enhanced Rx FIFO identifier filter element pair numbers, each pair of filter elements occupies 2 words and can consist of one extended ID filter element or two standard ID filter elements.

uint8_t extendIdFilterNum

The number of extended ID filter element items in the FlexCAN enhanced Rx FIFO identifier filter table, each extended-ID filter element occupies 2 words, extendIdFilterNum need less than or equal to idFilterPairNum.

uint8_t fifoWatermark

(fifoWatermark + 1) is the minimum number of CAN messages stored in the Enhanced RX FIFO which can trigger FIFO watermark interrupt or a DMA request.

flexcan_efifo_dma_per_read_length_t dmaPerReadLength

Define the length of each read of the Enhanced RX FIFO element by the DAM, see _flexcan_fd_frame_length.

flexcan_rx_fifo_priority_t priority

The FlexCAN Enhanced Rx FIFO receive priority.

struct _flexcan_mb_transfer

#include <fsl_flexcan.h> FlexCAN Message Buffer transfer.

Public Members

flexcan_frame_t *frame

The buffer of CAN Message to be transfer.

uint8_t mbIdx

The index of Message buffer used to transfer Message.

struct _flexcan_fifo_transfer

#include <fsl_flexcan.h> FlexCAN Rx FIFO transfer.

Public Members

flexcan_fd_frame_t *framefd

The buffer of CAN Message to be received from Enhanced Rx FIFO.

flexcan_frame_t *frame

The buffer of CAN Message to be received from Legacy Rx FIFO.

size_t frameNum

Number of CAN Message need to be received from Legacy or Ehanced Rx FIFO.

struct _flexcan_handle

#include <fsl_flexcan.h> FlexCAN handle structure.

Public Members

flexcan_transfer_callback_t callback

Callback function.

void *userData

FlexCAN callback function parameter.

flexcan_frame_t *volatile mbFrameBuf[CAN_WORD1_COUNT]

The buffer for received CAN data from Message Buffers.

flexcan_fd_frame_t *volatile mbFDFrameBuf[CAN_WORD1_COUNT]

The buffer for received CAN FD data from Message Buffers.

flexcan_frame_t *volatile rxFifoFrameBuf

The buffer for received CAN data from Legacy Rx FIFO.

flexcan_fd_frame_t *volatile rxFifoFDFrameBuf

The buffer for received CAN FD data from Ehanced Rx FIFO.

size_t rxFifoFrameNum

The number of CAN messages remaining to be received from Legacy or Ehanced Rx FIFO.

size_t rxFifoTransferTotalNum

Total CAN Message number need to be received from Legacy or Ehanced Rx FIFO.

volatile uint8_t mbState[CAN_WORD1_COUNT]

Message Buffer transfer state.

volatile uint8_t rxFifoState

Rx FIFO transfer state.

volatile uint32_t timestamp[CAN_WORD1_COUNT]

Mailbox transfer timestamp.

struct byteStatus

Public Members

bool byteIsRead

The byte n (0~3) was read or not. The type of error and which bit in byte (n) is affected by the error.

struct ___unnamed14___

Public Members

uint32_t timestamp

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length

CAN frame data length in bytes (Range: 0~8).

uint32_t type

CAN Frame Type(DATA or REMOTE).

uint32_t format

CAN Frame Identifier(STD or EXT format).

uint32_t ___pad0___

Reserved.

uint32_t idhit

CAN Rx FIFO filter hit id(This value is only used in Rx FIFO receive mode).

struct ___unnamed16___

Public Members

uint32_t id

CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

uint32_t ___pad0___

Reserved.

union ___unnamed18___

Public Members

struct _flexcan_frame

struct _flexcan_frame

struct ___unnamed20___

Public Members

uint32_t dataWord0

CAN Frame payload word0.

uint32_t dataWord1

CAN Frame payload word1.

struct ___unnamed22___

Public Members

uint8_t dataByte3

CAN Frame payload byte3.

uint8_t dataByte2

CAN Frame payload byte2.

uint8_t dataByte1

CAN Frame payload byte1.

uint8_t dataByte0

CAN Frame payload byte0.

uint8_t dataByte7

CAN Frame payload byte7.

uint8_t dataByte6

CAN Frame payload byte6.

uint8_t dataByte5

CAN Frame payload byte5.

uint8_t dataByte4

CAN Frame payload byte4.

struct ___unnamed24___

Public Members

uint32_t timestamp

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length

CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t type

CAN Frame Type(DATA only).

uint32_t format

CAN Frame Identifier(STD or EXT format).

uint32_t srr

Substitute Remote request.

uint32_t esi

Error State Indicator.

uint32_t brs
: Bit Rate Switch.

uint32_t edl
: Extended Data Length.

struct ___unnamed26___

Public Members

uint32_t id
: CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

uint32_t ___pad0___
: Reserved.

union ___unnamed28___

Public Members

struct _flexcan_fd_frame

struct _flexcan_fd_frame

struct ___unnamed30___

Public Members

uint32_t dataWord[16]
: CAN FD Frame payload, 16 double word maximum.

struct ___unnamed32___

Public Members

uint8_t dataByte3
: CAN Frame payload byte3.

uint8_t dataByte2
: CAN Frame payload byte2.

uint8_t dataByte1
: CAN Frame payload byte1.

uint8_t dataByte0
: CAN Frame payload byte0.

uint8_t dataByte7
: CAN Frame payload byte7.

uint8_t dataByte6
: CAN Frame payload byte6.

uint8_t dataByte5
: CAN Frame payload byte5.

uint8_t dataByte4
CAN Frame payload byte4.

union ___unnamed34___

Public Members

struct _flexcan_config

struct _flexcan_config

struct ___unnamed36___

Public Members

uint32_t baudRate
FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.

uint32_t baudRateFD
FlexCAN FD bit rate in bps, for CANFD data phase.

struct ___unnamed38___

Public Members

uint32_t bitRate
FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.

uint32_t bitRateFD
FlexCAN FD bit rate in bps, for CANFD data phase.

union ___unnamed40___

Public Members

struct _flexcan_pn_config

< The data target values 1 which used either for data match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in data match “range

detection”.

struct _flexcan_pn_config

struct ___unnamed44___

< The data target values 1 which used either for data match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in data match “range

detection”.

Public Members

uint32_t lowerWord0
CAN Frame payload word0.

uint32_t lowerWord1
CAN Frame payload word1.

struct ___unnamed46___

Public Members

uint8_t lowerByte3
: CAN Frame payload byte3.

uint8_t lowerByte2
: CAN Frame payload byte2.

uint8_t lowerByte1
: CAN Frame payload byte1.

uint8_t lowerByte0
: CAN Frame payload byte0.

uint8_t lowerByte7
: CAN Frame payload byte7.

uint8_t lowerByte6
: CAN Frame payload byte6.

uint8_t lowerByte5
: CAN Frame payload byte5.

uint8_t lowerByte4
: CAN Frame payload byte4.

union ___unnamed42___

Public Members

struct __flexcan__pn__config

< The data target values 2 which used only as the upper limit value in data match “range

detection” or used to store the data mask in “equal to”.

struct __flexcan__pn__config

struct ___unnamed48___

< The data target values 2 which used only as the upper limit value in data match “range detection” or used to store the data mask in “equal to”.

Public Members

uint32_t upperWord0
: CAN Frame payload word0.

uint32_t upperWord1
: CAN Frame payload word1.

struct ___unnamed50___

Public Members

uint8_t upperByte3
: CAN Frame payload byte3.

uint8_t upperByte2
CAN Frame payload byte2.

uint8_t upperByte1
CAN Frame payload byte1.

uint8_t upperByte0
CAN Frame payload byte0.

uint8_t upperByte7
CAN Frame payload byte7.

uint8_t upperByte6
CAN Frame payload byte6.

uint8_t upperByte5
CAN Frame payload byte5.

uint8_t upperByte4
CAN Frame payload byte4.

2.19 FlexCAN eDMA Driver

void FLEXCAN_TransferCreateHandleEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle, *flexcan_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *rxFifoEdmaHandle)

Initializes the FlexCAN handle, which is used in transactional functions.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- callback – The callback function.
- userData – The parameter of the callback function.
- rxFifoEdmaHandle – User-requested DMA handle for Rx FIFO DMA transfer.

void FLEXCAN_PrepareTransfConfiguration(CAN_Type *base, *flexcan_fifo_transfer_t* *pFifoXfer, *edma_transfer_config_t* *pEdmaConfig)

Prepares the eDMA transfer configuration for FLEXCAN Legacy RX FIFO.

This function prepares the eDMA transfer configuration structure according to FLEXCAN Legacy RX FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

status_t FLEXCAN_StartTransferDatafromRxFIFO(CAN_Type *base, *flexcan_edma_handle_t* *handle, *edma_transfer_config_t* *pEdmaConfig)

Start Transfer Data from the FLEXCAN Legacy Rx FIFO using eDMA.

This function to Update edma transfer confiugration and Start eDMA transfer

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN_TransferReceiveFifoEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives the CAN Message from the Legacy Rx FIFO using eDMA.

This function receives the CAN Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN_TransferGetReceiveFifoCountEMDA(CAN_Type *base, *flexcan_edma_handle_t* *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXCAN_TransferAbortReceiveFifoEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle)

Aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

This function aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.

status_t FLEXCAN_TransferReceiveEnhancedFifoEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives the CAN FD Message from the Enhanced Rx FIFO using eDMA.

This function receives the CAN FD Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

static inline *status_t* FLEXCAN_TransferGetReceiveEnhancedFifoCountEMDA(CAN_Type *base, *flexcan_edma_handle_t* *handle, size_t *count)

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

FSL_FLEXCAN_EDMA_DRIVER_VERSION

FlexCAN EDMA driver version.

typedef struct *_flexcan_edma_handle* flexcan_edma_handle_t

typedef void (*flexcan_edma_transfer_callback_t)(CAN_Type *base, *flexcan_edma_handle_t* *handle, *status_t* status, void *userData)

FlexCAN transfer callback function.

struct _flexcan_edma_handle

#include <fsl_flexcan_edma.h> FlexCAN eDMA handle.

Public Members

flexcan_edma_transfer_callback_t callback

Callback function.

void *userData

FlexCAN callback function parameter.

edma_handle_t *rxFifoEdmaHandle

The EDMA handler for Rx FIFO.

volatile uint8_t rxFifoState

Rx FIFO transfer state.

size_t frameNum

The number of messages that need to be received.

flexcan_fd_frame_t *framefd

Point to the buffer of CAN Message to be received from Enhanced Rx FIFO.

2.20 FlexIO: FlexIO Driver

2.21 FlexIO Driver

void FLEXIO_GetDefaultConfig(*flexio_config_t* *userConfig)

Gets the default configuration to configure the FlexIO module. The configuration can used directly to call the FLEXIO_Configure().

Example:

```
flexio_config_t config;
FLEXIO_GetDefaultConfig(&config);
```

Parameters

- userConfig – pointer to flexio_config_t structure

void FLEXIO_Init(FLEXIO_Type *base, const *flexio_config_t* *userConfig)

Configures the FlexIO with a FlexIO configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_GetDefaultConfig().

Example

```
flexio_config_t config = {
.enableFlexio = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false
};
FLEXIO_Configure(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- userConfig – pointer to flexio_config_t structure

void FLEXIO_Deinit(FLEXIO_Type *base)

Gates the FlexIO clock. Call this API to stop the FlexIO clock.

Note: After calling this API, call the FLEXO_Init to use the FlexIO module.

Parameters

- base – FlexIO peripheral base address

uint32_t FLEXIO_GetInstance(FLEXIO_Type *base)

Get instance number for FLEXIO module.

Parameters

- base – FLEXIO peripheral base address.

void FLEXIO_Reset(FLEXIO_Type *base)

Resets the FlexIO module.

Parameters

- base – FlexIO peripheral base address

static inline void FLEXIO_Enable(FLEXIO_Type *base, bool enable)

Enables the FlexIO module operation.

Parameters

- base – FlexIO peripheral base address
- enable – true to enable, false to disable.

static inline uint32_t FLEXIO_ReadPinInput(FLEXIO_Type *base)

Reads the input data on each of the FlexIO pins.

Parameters

- base – FlexIO peripheral base address

Returns

FlexIO pin input data

static inline uint8_t FLEXIO_GetShifterState(FLEXIO_Type *base)

Gets the current state pointer for state mode use.

Parameters

- base – FlexIO peripheral base address

Returns

current State pointer

void FLEXIO_SetShifterConfig(FLEXIO_Type *base, uint8_t index, const *flexio_shifter_config_t* *shifterConfig)

Configures the shifter with the shifter configuration. The configuration structure covers both the SHIFTCTL and SHIFTCFG registers. To configure the shifter to the proper mode, select which timer controls the shifter to shift, whether to generate start bit/stop bit, and the polarity of start bit and stop bit.

Example

```
flexio_shifter_config_t config = {
.timerSelect = 0,
.timerPolarity = kFLEXIO_ShifterTimerPolarityOnPositive,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinPolarity = kFLEXIO_PinActiveLow,
.shifterMode = kFLEXIO_ShifterModeTransmit,
.inputSource = kFLEXIO_ShifterInputFromPin,
.shifterStop = kFLEXIO_ShifterStopBitHigh,
.shifterStart = kFLEXIO_ShifterStartBitLow
};
FLEXIO_SetShifterConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address

- index – Shifter index
- shifterConfig – Pointer to flexio_shifter_config_t structure

void FLEXIO_SetTimerConfig(FLEXIO_Type *base, uint8_t index, const *flexio_timer_config_t* *timerConfig)

Configures the timer with the timer configuration. The configuration structure covers both the TIMCTL and TIMCFG registers. To configure the timer to the proper mode, select trigger source for timer and the timer pin output and the timing for timer.

Example

```
flexio_timer_config_t config = {
.triggerSelect = FLEXIO_TIMER_TRIGGER_SEL_SHIFTnSTAT(0),
.triggerPolarity = kFLEXIO_TimerTriggerPolarityActiveLow,
.triggerSource = kFLEXIO_TimerTriggerSourceInternal,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinSelect = 0,
.pinPolarity = kFLEXIO_PinActiveHigh,
.timerMode = kFLEXIO_TimerModeDual8BitBaudBit,
.timerOutput = kFLEXIO_TimerOutputZeroNotAffectedByReset,
.timerDecrement = kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput,
.timerReset = kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput,
.timerDisable = kFLEXIO_TimerDisableOnTimerCompare,
.timerEnable = kFLEXIO_TimerEnableOnTriggerHigh,
.timerStop = kFLEXIO_TimerStopBitEnableOnTimerDisable,
.timerStart = kFLEXIO_TimerStartBitEnabled
};
FLEXIO_SetTimerConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Timer index
- timerConfig – Pointer to the flexio_timer_config_t structure

static inline void FLEXIO_SetClockMode(FLEXIO_Type *base, uint8_t index, *flexio_timer_decrement_source_t* clocksource)

This function set the value of the prescaler on flexio channels.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- index – Timer index
- clocksource – Set clock value

static inline void FLEXIO_EnableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Enables the shifter status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_DisableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Disables the shifter status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_EnableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)

Enables the shifter error interrupt. The interrupt generates when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_DisableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)

Disables the shifter error interrupt. The interrupt won't generate when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_EnableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Enables the timer status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using ((1 « timer index0) | (1 « timer index1))

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by (1 « timer index)

static inline void FLEXIO_DisableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Disables the timer status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using ((1 « timer index0) | (1 « timer index1))

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by (1 « timer index)

static inline uint32_t FLEXIO_GetShifterStatusFlags(FLEXIO_Type *base)

Gets the shifter status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter status flags

static inline void FLEXIO_ClearShifterStatusFlags(FLEXIO_Type *base, uint32_t mask)

Clears the shifter status flags.

Note: For clearing multiple shifter status flags, for example, two shifter status flags, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)

static inline uint32_t FLEXIO_GetShifterErrorFlags(FLEXIO_Type *base)

Gets the shifter error flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter error flags

static inline void FLEXIO_ClearShifterErrorFlags(FLEXIO_Type *base, uint32_t mask)

Clears the shifter error flags.

Note: For clearing multiple shifter error flags, for example, two shifter error flags, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by (1 « shifter index)

static inline uint32_t FLEXIO_GetTimerStatusFlags(FLEXIO_Type *base)

Gets the timer status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Timer status flags

static inline void FLEXIO_ClearTimerStatusFlags(FLEXIO_Type *base, uint32_t mask)

Clears the timer status flags.

Note: For clearing multiple timer status flags, for example, two timer status flags, can calculate the mask by using ((1 « timer index0) | (1 « timer index1))

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by (1 « timer index)

static inline void FLEXIO_EnableShifterStatusDMA(FLEXIO_Type *base, uint32_t mask, bool enable)

Enables/disables the shifter status DMA. The DMA request generates when the corresponding SSF is set.

Note: For multiple shifter status DMA enables, for example, calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)
- enable – True to enable, false to disable.

uint32_t FLEXIO_GetShifterBufferAddress(FLEXIO_Type *base, *flexio_shifter_buffer_type_t* type, uint8_t index)

Gets the shifter buffer address for the DMA transfer usage.

Parameters

- base – FlexIO peripheral base address
- type – Shifter type of flexio_shifter_buffer_type_t
- index – Shifter index

Returns

Corresponding shifter buffer index

status_t FLEXIO_RegisterHandleIRQ(void *base, void *handle, *flexio_isr_t* isr)

Registers the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- handle – Pointer to the handler for FlexIO simulated peripheral.
- isr – FlexIO simulated peripheral interrupt handler.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_UnregisterHandleIRQ(void *base)

Unregisters the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

static inline void FLEXIO_ClearPortOutput(FLEXIO_Type *base, uint32_t mask)

Sets the output level of the multiple FLEXIO pins to the logic 0.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

static inline void FLEXIO_SetPortOutput(FLEXIO_Type *base, uint32_t mask)

Sets the output level of the multiple FLEXIO pins to the logic 1.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

static inline void FLEXIO_TogglePortOutput(FLEXIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple FLEXIO pins.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

static inline void FLEXIO_PinWrite(FLEXIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the FLEXIO pins to the logic 1 or 0.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.
- output – FLEXIO pin output logic level.
  - 0: corresponding pin output low-logic level.
  - 1: corresponding pin output high-logic level.

static inline void FLEXIO_EnablePinOutput(FLEXIO_Type *base, uint32_t pin)

Enables the FLEXIO output pin function.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

static inline uint32_t FLEXIO_PinRead(FLEXIO_Type *base, uint32_t pin)

Reads the current input value of the FLEXIO pin.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

static inline uint32_t FLEXIO_GetPinStatus(FLEXIO_Type *base, uint32_t pin)

Gets the FLEXIO input pin status.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input status

- 0: corresponding pin input capture no status.
- 1: corresponding pin input capture rising or falling edge.

static inline void FLEXIO_SetPinLevel(FLEXIO_Type *base, uint8_t pin, bool level)

Sets the FLEXIO output pin level.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.
- level – FlexIO output pin level to set, can be either 0 or 1.

static inline bool FLEXIO_GetPinOverride(const FLEXIO_Type *const base, uint8_t pin)

Gets the enabled status of a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.

Return values

FlexIO – port enabled status

- 0: corresponding output pin is in disabled state.
- 1: corresponding output pin is in enabled state.

static inline void FLEXIO_ConfigPinOverride(FLEXIO_Type *base, uint8_t pin, bool enabled)

Enables or disables a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – Flexio pin number.
- enabled – Enable or disable the FlexIO pin.

static inline void FLEXIO_ClearPortStatus(FLEXIO_Type *base, uint32_t mask)
Clears the multiple FLEXIO input pins status.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

FSL_FLEXIO_DRIVER_VERSION
FlexIO driver version.

enum _flexio_timer_trigger_polarity
Define time of timer trigger polarity.

Values:

enumerator kFLEXIO_TimerTriggerPolarityActiveHigh
Active high.

enumerator kFLEXIO_TimerTriggerPolarityActiveLow
Active low.

enum _flexio_timer_trigger_source
Define type of timer trigger source.

Values:

enumerator kFLEXIO_TimerTriggerSourceExternal
External trigger selected.

enumerator kFLEXIO_TimerTriggerSourceInternal
Internal trigger selected.

enum _flexio_pin_config
Define type of timer/shifter pin configuration.

Values:

enumerator kFLEXIO_PinConfigOutputDisabled
Pin output disabled.

enumerator kFLEXIO_PinConfigOpenDrainOrBidirection
Pin open drain or bidirectional output enable.

enumerator kFLEXIO_PinConfigBidirectionOutputData
Pin bidirectional output data.

enumerator kFLEXIO_PinConfigOutput
Pin output.

enum _flexio_pin_polarity
Definition of pin polarity.

Values:

enumerator kFLEXIO_PinActiveHigh
Active high.

enumerator kFLEXIO_PinActiveLow
Active low.

enum _flexio_timer_mode
Define type of timer work mode.

Values:

enumerator kFLEXIO_TimerModeDisabled
Timer Disabled.

enumerator kFLEXIO_TimerModeDual8BitBaudBit
Dual 8-bit counters baud/bit mode.

enumerator kFLEXIO_TimerModeDual8BitPWM
Dual 8-bit counters PWM mode.

enumerator kFLEXIO_TimerModeSingle16Bit
Single 16-bit counter mode.

enumerator kFLEXIO_TimerModeDual8BitPWMLow
Dual 8-bit counters PWM Low mode.

enum _flexio_timer_output
Define type of timer initial output or timer reset condition.

Values:

enumerator kFLEXIO_TimerOutputOneNotAffectedByReset
Logic one when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputZeroNotAffectedByReset
Logic zero when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputOneAffectedByReset
Logic one when enabled and on timer reset.

enumerator kFLEXIO_TimerOutputZeroAffectedByReset
Logic zero when enabled and on timer reset.

enum _flexio_timer_decrement_source
Define type of timer decrement.

Values:

enumerator kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput
Decrement counter on FlexIO clock, Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTimerOutput
Decrement counter on Trigger input (both edges), Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnPinInputShiftPinInput
Decrement counter on Pin input (both edges), Shift clock equals Pin input.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTriggerInput
Decrement counter on Trigger input (both edges), Shift clock equals Trigger input.

enum _flexio_timer_reset_condition
Define type of timer reset condition.

Values:

enumerator kFLEXIO_TimerResetNever
Timer never reset.

enumerator kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput
Timer reset on Timer Pin equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerTriggerEqualToTimerOutput
Timer reset on Timer Trigger equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerPinRisingEdge
Timer reset on Timer Pin rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerRisingEdge
Timer reset on Trigger rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerBothEdge
Timer reset on Trigger rising or falling edge.

enum _flexio_timer_disable_condition
Define type of timer disable condition.

Values:

enumerator kFLEXIO_TimerDisableNever
Timer never disabled.

enumerator kFLEXIO_TimerDisableOnPreTimerDisable
Timer disabled on Timer N-1 disable.

enumerator kFLEXIO_TimerDisableOnTimerCompare
Timer disabled on Timer compare.

enumerator kFLEXIO_TimerDisableOnTimerCompareTriggerLow
Timer disabled on Timer compare and Trigger Low.

enumerator kFLEXIO_TimerDisableOnPinBothEdge
Timer disabled on Pin rising or falling edge.

enumerator kFLEXIO_TimerDisableOnPinBothEdgeTriggerHigh
Timer disabled on Pin rising or falling edge provided Trigger is high.

enumerator kFLEXIO_TimerDisableOnTriggerFallingEdge
Timer disabled on Trigger falling edge.

enum _flexio_timer_enable_condition
Define type of timer enable condition.

Values:

enumerator kFLEXIO_TimerEnabledAlways
Timer always enabled.

enumerator kFLEXIO_TimerEnableOnPrevTimerEnable
Timer enabled on Timer N-1 enable.

enumerator kFLEXIO_TimerEnableOnTriggerHigh
Timer enabled on Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerHighPinHigh
Timer enabled on Trigger high and Pin high.

enumerator kFLEXIO_TimerEnableOnPinRisingEdge
Timer enabled on Pin rising edge.

enumerator kFLEXIO_TimerEnableOnPinRisingEdgeTriggerHigh
Timer enabled on Pin rising edge and Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerRisingEdge
Timer enabled on Trigger rising edge.

enumerator kFLEXIO_TimerEnableOnTriggerBothEdge
Timer enabled on Trigger rising or falling edge.

enum _flexio_timer_stop_bit_condition

Define type of timer stop bit generate condition.

Values:

enumerator kFLEXIO_TimerStopBitDisabled

Stop bit disabled.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompare

Stop bit is enabled on timer compare.

enumerator kFLEXIO_TimerStopBitEnableOnTimerDisable

Stop bit is enabled on timer disable.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompareDisable

Stop bit is enabled on timer compare and timer disable.

enum _flexio_timer_start_bit_condition

Define type of timer start bit generate condition.

Values:

enumerator kFLEXIO_TimerStartBitDisabled

Start bit disabled.

enumerator kFLEXIO_TimerStartBitEnabled

Start bit enabled.

enum _flexio_timer_output_state

FlexIO as PWM channel output state.

Values:

enumerator kFLEXIO_PwmLow

The output state of PWM channel is low

enumerator kFLEXIO_PwmHigh

The output state of PWM channel is high

enum _flexio_shifter_timer_polarity

Define type of timer polarity for shifter control.

Values:

enumerator kFLEXIO_ShifterTimerPolarityOnPositive

Shift on positive edge of shift clock.

enumerator kFLEXIO_ShifterTimerPolarityOnNegitive

Shift on negative edge of shift clock.

enum _flexio_shifter_mode

Define type of shifter working mode.

Values:

enumerator kFLEXIO_ShifterDisabled

Shifter is disabled.

enumerator kFLEXIO_ShifterModeReceive

Receive mode.

enumerator kFLEXIO_ShifterModeTransmit

Transmit mode.

enumerator kFLEXIO_ShifterModeMatchStore
Match store mode.

enumerator kFLEXIO_ShifterModeMatchContinuous
Match continuous mode.

enumerator kFLEXIO_ShifterModeState
SHIFTBUF contents are used for storing programmable state attributes.

enumerator kFLEXIO_ShifterModeLogic
SHIFTBUF contents are used for implementing programmable logic look up table.

enum _flexio_shifter_input_source
Define type of shifter input source.

Values:

enumerator kFLEXIO_ShifterInputFromPin
Shifter input from pin.

enumerator kFLEXIO_ShifterInputFromNextShifterOutput
Shifter input from Shifter N+1.

enum _flexio_shifter_stop_bit
Define of STOP bit configuration.

Values:

enumerator kFLEXIO_ShifterStopBitDisable
Disable shifter stop bit.

enumerator kFLEXIO_ShifterStopBitLow
Set shifter stop bit to logic low level.

enumerator kFLEXIO_ShifterStopBitHigh
Set shifter stop bit to logic high level.

enum _flexio_shifter_start_bit
Define type of START bit configuration.

Values:

enumerator kFLEXIO_ShifterStartBitDisabledLoadDataOnEnable
Disable shifter start bit, transmitter loads data on enable.

enumerator kFLEXIO_ShifterStartBitDisabledLoadDataOnShift
Disable shifter start bit, transmitter loads data on first shift.

enumerator kFLEXIO_ShifterStartBitLow
Set shifter start bit to logic low level.

enumerator kFLEXIO_ShifterStartBitHigh
Set shifter start bit to logic high level.

enum _flexio_shifter_buffer_type
Define FlexIO shifter buffer type.

Values:

enumerator kFLEXIO_ShifterBuffer
Shifter Buffer N Register.

enumerator kFLEXIO_ShifterBufferBitSwapped
Shifter Buffer N Bit Byte Swapped Register.

enumerator kFLEXIO_ShifterBufferByteSwapped
Shifter Buffer N Byte Swapped Register.

enumerator kFLEXIO_ShifterBufferBitByteSwapped
Shifter Buffer N Bit Swapped Register.

enumerator kFLEXIO_ShifterBufferNibbleByteSwapped
Shifter Buffer N Nibble Byte Swapped Register.

enumerator kFLEXIO_ShifterBufferHalfWordSwapped
Shifter Buffer N Half Word Swapped Register.

enumerator kFLEXIO_ShifterBufferNibbleSwapped
Shifter Buffer N Nibble Swapped Register.

enum _flexio_gpio_direction
FLEXIO gpio direction definition.

Values:

enumerator kFLEXIO_DigitalInput
Set current pin as digital input

enumerator kFLEXIO_DigitalOutput
Set current pin as digital output

enum _flexio_pin_input_config
FLEXIO gpio input config.

Values:

enumerator kFLEXIO_InputInterruptDisabled
Interrupt request is disabled.

enumerator kFLEXIO_InputInterruptEnable
Interrupt request is enable.

enumerator kFLEXIO_FlagRisingEdgeEnable
Input pin flag on rising edge.

enumerator kFLEXIO_FlagFallingEdgeEnable
Input pin flag on falling edge.

typedef enum *_flexio_timer_trigger_polarity* flexio_timer_trigger_polarity_t
Define time of timer trigger polarity.

typedef enum *_flexio_timer_trigger_source* flexio_timer_trigger_source_t
Define type of timer trigger source.

typedef enum *_flexio_pin_config* flexio_pin_config_t
Define type of timer/shifter pin configuration.

typedef enum *_flexio_pin_polarity* flexio_pin_polarity_t
Definition of pin polarity.

typedef enum *_flexio_timer_mode* flexio_timer_mode_t
Define type of timer work mode.

typedef enum *_flexio_timer_output* flexio_timer_output_t
Define type of timer initial output or timer reset condition.

typedef enum *_flexio_timer_decrement_source* flexio_timer_decrement_source_t
Define type of timer decrement.

typedef enum *_flexio_timer_reset_condition* flexio_timer_reset_condition_t
Define type of timer reset condition.

typedef enum *_flexio_timer_disable_condition* flexio_timer_disable_condition_t
Define type of timer disable condition.

typedef enum *_flexio_timer_enable_condition* flexio_timer_enable_condition_t
Define type of timer enable condition.

typedef enum *_flexio_timer_stop_bit_condition* flexio_timer_stop_bit_condition_t
Define type of timer stop bit generate condition.

typedef enum *_flexio_timer_start_bit_condition* flexio_timer_start_bit_condition_t
Define type of timer start bit generate condition.

typedef enum *_flexio_timer_output_state* flexio_timer_output_state_t
FlexIO as PWM channel output state.

typedef enum *_flexio_shifter_timer_polarity* flexio_shifter_timer_polarity_t
Define type of timer polarity for shifter control.

typedef enum *_flexio_shifter_mode* flexio_shifter_mode_t
Define type of shifter working mode.

typedef enum *_flexio_shifter_input_source* flexio_shifter_input_source_t
Define type of shifter input source.

typedef enum *_flexio_shifter_stop_bit* flexio_shifter_stop_bit_t
Define of STOP bit configuration.

typedef enum *_flexio_shifter_start_bit* flexio_shifter_start_bit_t
Define type of START bit configuration.

typedef enum *_flexio_shifter_buffer_type* flexio_shifter_buffer_type_t
Define FlexIO shifter buffer type.

typedef struct *_flexio_config_* flexio_config_t
Define FlexIO user configuration structure.

typedef struct *_flexio_timer_config* flexio_timer_config_t
Define FlexIO timer configuration structure.

typedef struct *_flexio_shifter_config* flexio_shifter_config_t
Define FlexIO shifter configuration structure.

typedef enum *_flexio_gpio_direction* flexio_gpio_direction_t
FLEXIO gpio direction definition.

typedef enum *_flexio_pin_input_config* flexio_pin_input_config_t
FLEXIO gpio input config.

typedef struct *_flexio_gpio_config* flexio_gpio_config_t
The FLEXIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use inputConfig param. If configured as an output pin, use outputLogic.

typedef void (*flexio_isr_t)(void *base, void *handle)
typedef for FlexIO simulated driver interrupt handler.

FLEXIO_Type *const s_flexioBases[]
Pointers to flexio bases for each instance.

const *clock_ip_name_t* s_flexioClocks[]

Pointers to flexio clocks for each instance.

void FLEXIO_SetPinConfig(FLEXIO_Type *base, uint32_t pin, *flexio_gpio_config_t* *config)

Configure a FLEXIO pin used by the board.

To Config the FLEXIO PIN, define a pin configuration, as either input or output, in the user file. Then, call the FLEXIO_SetPinConfig() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
flexio_gpio_config_t config =
{
  kFLEXIO_DigitalInput,
  0U,
  kFLEXIO_FlagRisingEdgeEnable | kFLEXIO_InputInterruptEnable,
}
Define a digital output pin configuration,
flexio_gpio_config_t config =
{
  kFLEXIO_DigitalOutput,
  0U,
  0U
}
```

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.
- config – FLEXIO pin configuration pointer.

FLEXIO_TIMER_TRIGGER_SEL_PININPUT(**x**)

Calculate FlexIO timer trigger.

FLEXIO_TIMER_TRIGGER_SEL_SHIFTnSTAT(**x**)

FLEXIO_TIMER_TRIGGER_SEL_TIMn(**x**)

struct _flexio_config_

#include <fsl_flexio.h> Define FlexIO user configuration structure.

Public Members

bool enableFlexio

Enable/disable FlexIO module

bool enableInDoze

Enable/disable FlexIO operation in doze mode

bool enableInDebug

Enable/disable FlexIO operation in debug mode

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

struct _flexio_timer_config

#include <fsl_flexio.h> Define FlexIO timer configuration structure.

Public Members

uint32_t triggerSelect
: The internal trigger selection number using MACROs.

flexio_timer_trigger_polarity_t triggerPolarity
: Trigger Polarity.

flexio_timer_trigger_source_t triggerSource
: Trigger Source, internal (see 'trgsel') or external.

flexio_pin_config_t pinConfig
: Timer Pin Configuration.

uint32_t pinSelect
: Timer Pin number Select.

flexio_pin_polarity_t pinPolarity
: Timer Pin Polarity.

flexio_timer_mode_t timerMode
: Timer work Mode.

flexio_timer_output_t timerOutput
: Configures the initial state of the Timer Output and whether it is affected by the Timer reset.

flexio_timer_decrement_source_t timerDecrement
: Configures the source of the Timer decrement and the source of the Shift clock.

flexio_timer_reset_condition_t timerReset
: Configures the condition that causes the timer counter (and optionally the timer output) to be reset.

flexio_timer_disable_condition_t timerDisable
: Configures the condition that causes the Timer to be disabled and stop decrementing.

flexio_timer_enable_condition_t timerEnable
: Configures the condition that causes the Timer to be enabled and start decrementing.

flexio_timer_stop_bit_condition_t timerStop
: Timer STOP Bit generation.

flexio_timer_start_bit_condition_t timerStart
: Timer STRAT Bit generation.

uint32_t timerCompare
: Value for Timer Compare N Register.

struct __flexio_shifter_config
: *#include <fsl_flexio.h>* Define FlexIO shifter configuration structure.

Public Members

uint32_t timerSelect
: Selects which Timer is used for controlling the logic/shift register and generating the Shift clock.

flexio_shifter_timer_polarity_t timerPolarity
: Timer Polarity.

flexio_pin_config_t pinConfig
Shifter Pin Configuration.

uint32_t pinSelect
Shifter Pin number Select.

flexio_pin_polarity_t pinPolarity
Shifter Pin Polarity.

flexio_shifter_mode_t shifterMode
Configures the mode of the Shifter.

uint32_t parallelWidth
Configures the parallel width when using parallel mode.

flexio_shifter_input_source_t inputSource
Selects the input source for the shifter.

flexio_shifter_stop_bit_t shifterStop
Shifter STOP bit.

flexio_shifter_start_bit_t shifterStart
Shifter START bit.

struct _flexio_gpio_config
#include <fsl_flexio.h> The FLEXIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use inputConfig param. If configured as an output pin, use outputLogic.

Public Members

flexio_gpio_direction_t pinDirection
FLEXIO pin direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

uint8_t inputConfig
Set an input config

2.22 FlexIO eDMA SPI Driver

status_t FLEXIO_SPI_MasterTransferCreateHandleEDMA(*FLEXIO_SPI_Type* *base,
flexio_spi_master_edma_handle_t *handle,
flexio_spi_master_edma_transfer_callback_t callback, void *userData,
edma_handle_t *txHandle,
edma_handle_t *rxHandle)

Initializes the FlexIO SPI master eDMA handle.

This function initializes the FlexIO SPI master eDMA handle which can be used for other FlexIO SPI master transactional APIs. For a specified FlexIO SPI instance, call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_edma_handle_t structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested eDMA handle for FlexIO SPI RX eDMA transfer.
- rxHandle – User requested eDMA handle for FlexIO SPI TX eDMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO SPI eDMA type/handle table out of range.

status_t FLEXIO_SPI_MasterTransferEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle, *flexio_spi_transfer_t* *xfer)

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_MasterGetTransferCountEDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_edma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

void FLEXIO_SPI_MasterTransferAbortEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle)

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.

status_t FLEXIO_SPI_MasterTransferGetCountEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle, size_t *count)

Gets the number of bytes transferred so far using FlexIO SPI master eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

static inline void FLEXIO_SPI_SlaveTransferCreateHandleEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, *flexio_spi_slave_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *txHandle, *edma_handle_t* *rxHandle)

Initializes the FlexIO SPI slave eDMA handle.

This function initializes the FlexIO SPI slave eDMA handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_edma_handle_t structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested eDMA handle for FlexIO SPI TX eDMA transfer.
- rxHandle – User requested eDMA handle for FlexIO SPI RX eDMA transfer.

status_t FLEXIO_SPI_SlaveTransferEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, *flexio_spi_transfer_t* *xfer)

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_SlaveGetTransferCountEDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_edma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

static inline void FLEXIO_SPI_SlaveTransferAbortEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle)

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_edma_handle_t structure to store the transfer state.

static inline *status_t* FLEXIO_SPI_SlaveTransferGetCountEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, size_t *count)

Gets the number of bytes transferred so far using FlexIO SPI slave eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

FSL_FLEXIO_SPI_EDMA_DRIVER_VERSION

FlexIO SPI EDMA driver version.

typedef struct *_flexio_spi_master_edma_handle* flexio_spi_master_edma_handle_t

typedef for flexio_spi_master_edma_handle_t in advance.

typedef *flexio_spi_master_edma_handle_t* flexio_spi_slave_edma_handle_t

Slave handle is the same with master handle.

typedef void (*flexio_spi_master_edma_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle, *status_t* status, void *userData)

FlexIO SPI master callback for finished transmit.

typedef void (*flexio_spi_slave_edma_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, *status_t* status, void *userData)

FlexIO SPI slave callback for finished transmit.

struct _flexio_spi_master_edma_handle

#include <fsl_flexio_spi_edma.h> FlexIO SPI eDMA transfer handle, users should not touch the content of the handle.

Public Members

size_t transferSize

Total bytes to be transferred.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

bool txInProgress

Send transfer in progress

bool rxInProgress

Receive transfer in progress

edma_handle_t *txHandle

DMA handler for SPI send

edma_handle_t *rxHandle

DMA handler for SPI receive

flexio_spi_master_edma_transfer_callback_t callback

Callback for SPI DMA transfer

void *userData

User Data for SPI DMA callback

2.23 FlexIO eDMA UART Driver

status_t FLEXIO_UART_TransferCreateHandleEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *flexio_uart_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *txEdmaHandle, *edma_handle_t* *rxEdmaHandle)

Initializes the UART handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_UART_Type.
- handle – Pointer to flexio_uart_edma_handle_t structure.
- callback – The callback function.
- userData – The parameter of the callback function.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO SPI eDMA type/handle table out of range.

status_t FLEXIO_UART_TransferSendEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *flexio_uart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent out, the send callback function is called.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – UART handle pointer.
- xfer – UART eDMA transfer structure, see flexio_uart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXIO_UART_TxBusy – Previous transfer on going.

status_t FLEXIO_UART_TransferReceiveEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *flexio_uart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure
- xfer – UART eDMA transfer structure, see flexio_uart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_UART_RxBusy – Previous transfer on going.

void FLEXIO_UART_TransferAbortSendEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle)

Aborts the sent data which using eDMA.

This function aborts sent data which using eDMA.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure

void FLEXIO_UART_TransferAbortReceiveEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle)

Aborts the receive data which using eDMA.

This function aborts the receive data which using eDMA.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure

status_t FLEXIO_UART_TransferGetSendCountEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, size_t *count)

Gets the number of bytes sent out.

This function gets the number of bytes sent out.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

status_t FLEXIO_UART_TransferGetReceiveCountEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, size_t *count)

Gets the number of bytes received.

This function gets the number of bytes received.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

FSL_FLEXIO_UART_EDMA_DRIVER_VERSION
FlexIO UART EDMA driver version.

typedef struct *_flexio_uart_edma_handle* flexio_uart_edma_handle_t

typedef void (*flexio_uart_edma_transfer_callback_t)(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *status_t* status, void *userData)
UART transfer callback function.

struct _flexio_uart_edma_handle
#include <fsl_flexio_uart_edma.h> UART eDMA handle.

Public Members

flexio_uart_edma_transfer_callback_t callback
Callback function.

void *userData
UART callback function parameter.

size_t txDataSizeAll
Total bytes to be sent.

size_t rxDataSizeAll
Total bytes to be received.

edma_handle_t *txEdmaHandle
The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
The eDMA RX channel used.

uint8_t nbytes
eDMA minor byte transfer count initially configured.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state

2.24 FlexIO I2C Master Driver

status_t FLEXIO_I2C_CheckForBusyBus(*FLEXIO_I2C_Type* *base)
Make sure the bus isn't already pulled down.

Check the FLEXIO pin status to see whether either of SDA and SCL pin is pulled down.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure..

Return values

- kStatus_Success –
- kStatus_FLEXIO_I2C_Busy –

status_t FLEXIO_I2C_MasterInit(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, and configures the FlexIO I2C hardware configuration.

Example

```
FLEXIO_I2C_Type base = {
.flexioBase = FLEXIO,
.SDAPinIndex = 0,
.SCLPinIndex = 1,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_i2c_master_config_t config = {
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 100000
};
FLEXIO_I2C_MasterInit(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- masterConfig – Pointer to flexio_i2c_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Initialization successful
- kStatus_InvalidArgument – The source clock exceed upper range limitation

void FLEXIO_I2C_MasterDeinit(*FLEXIO_I2C_Type* *base)

De-initializes the FlexIO I2C master peripheral. Calling this API Resets the FlexIO I2C master shifer and timer config, module can't work unless the FLEXIO_I2C_MasterInit is called.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterGetDefaultConfig(*flexio_i2c_master_config_t* *masterConfig)

Gets the default configuration to configure the FlexIO module. The configuration can be used directly for calling the FLEXIO_I2C_MasterInit().

Example:

```
flexio_i2c_master_config_t config;
FLEXIO_I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – Pointer to flexio_i2c_master_config_t structure.

static inline void FLEXIO_I2C_MasterEnable(*FLEXIO_I2C_Type* *base, bool enable)

Enables/disables the FlexIO module operation.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – Pass true to enable module, false does not have any effect.

uint32_t FLEXIO_I2C_MasterGetStatusFlags(*FLEXIO_I2C_Type* *base)

Gets the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure

Returns

Status flag, use status flag to AND _flexio_i2c_master_status_flags can get the related status.

void FLEXIO_I2C_MasterClearStatusFlags(*FLEXIO_I2C_Type* *base, uint32_t mask)

Clears the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
  - kFLEXIO_I2C_RxFullFlag
  - kFLEXIO_I2C_ReceiveNakFlag

void FLEXIO_I2C_MasterEnableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Enables the FlexIO i2c master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source. Currently only one interrupt request source:
  - kFLEXIO_I2C_TransferCompleteInterruptEnable

void FLEXIO_I2C_MasterDisableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Disables the FlexIO I2C master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source.

void FLEXIO_I2C_MasterSetBaudRate(*FLEXIO_I2C_Type* *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the FlexIO I2C master transfer baudrate.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- baudRate_Bps – the baud rate value in HZ
- srcClock_Hz – source clock in HZ

void FLEXIO_I2C_MasterStart(*FLEXIO_I2C_Type* *base, uint8_t address, *flexio_i2c_direction_t* direction)

Sends START + 7-bit address to the bus.

Note: This API should be called when the transfer configuration is ready to send a START signal and 7-bit address to the bus. This is a non-blocking API, which returns directly after the address is put into the data register but the address transfer is not finished on the bus. Ensure that the kFLEXIO_I2C_RxFullFlag status is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- address – 7-bit address.
- direction – transfer direction. This parameter is one of the values in flexio_i2c_direction_t:
  - kFLEXIO_I2C_Write: Transmit
  - kFLEXIO_I2C_Read: Receive

void FLEXIO_I2C_MasterStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterRepeatedStart(*FLEXIO_I2C_Type* *base)

Sends the repeated start signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterAbortStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal when transfer is still on-going.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterEnableAck(*FLEXIO_I2C_Type* *base, bool enable)

Configures the sent ACK/NAK for the following byte.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – True to configure send ACK, false configure to send NAK.

status_t FLEXIO_I2C_MasterSetTransferCount(*FLEXIO_I2C_Type* *base, uint16_t count)

Sets the number of bytes to be transferred from a start signal to a stop signal.

Note: Call this API before a transfer begins because the timer generates a number of clocks according to the number of bytes that need to be transferred.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- count – Number of bytes need to be transferred from a start signal to a re-start/stop signal

Return values

- kStatus_Success – Successfully configured the count.
- kStatus_InvalidArgument – Input argument is invalid.

static inline void FLEXIO_I2C_MasterWriteByte(*FLEXIO_I2C_Type* *base, uint32_t data)

Writes one byte of data to the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- data – a byte of data.

static inline uint8_t FLEXIO_I2C_MasterReadByte(*FLEXIO_I2C_Type* *base)

Reads one byte of data from the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the data is ready in the register.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

Returns

data byte read.

status_t FLEXIO_I2C_MasterWriteBlocking(*FLEXIO_I2C_Type* *base, const uint8_t *txBuff, uint8_t txSize)

Sends a buffer of data in bytes.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- txBuff – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Nak – Receive NAK during writing data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterReadBlocking(*FLEXIO_I2C_Type* *base, uint8_t *rxBuff, uint8_t rxSize)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- rxBuff – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterTransferBlocking(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_transfer_t* *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to receiving NAK.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.
- xfer – pointer to flexio_i2c_master_transfer_t structure.

Returns

status of status_t.

status_t FLEXIO_I2C_MasterTransferCreateHandle(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, *flexio_i2c_master_transfer_callback_t* callback, void *userData)

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure to store the transfer state.
- callback – Pointer to user callback function.
- userData – User param passed to the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/isr table out of range.

status_t FLEXIO_I2C_MasterTransferNonBlocking(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, *flexio_i2c_master_transfer_t* *xfer)

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: The API returns immediately after the transfer initiates. Call FLEXIO_I2C_MasterTransferGetCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_FLEXIO_I2C_Busy, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state
- xfer – pointer to flexio_i2c_master_transfer_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_FLEXIO_I2C_Busy – FlexIO I2C is not idle, is running another transfer.

status_t FLEXIO_I2C_MasterTransferGetCount(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, size_t *count)

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.
- kStatus_Success – Successfully return the count.

void FLEXIO_I2C_MasterTransferAbort(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle)

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state

void FLEXIO_I2C_MasterTransferHandleIRQ(void *i2cType, void *i2cHandle)

Master interrupt handler.

Parameters

- i2cType – Pointer to FLEXIO_I2C_Type structure
- i2cHandle – Pointer to flexio_i2c_master_transfer_t structure

FSL_FLEXIO_I2C_MASTER_DRIVER_VERSION

FlexIO I2C transfer status.

Values:

enumerator kStatus_FLEXIO_I2C_Busy

I2C is busy doing transfer.

enumerator kStatus_FLEXIO_I2C_Idle

I2C is busy doing transfer.

enumerator kStatus_FLEXIO_I2C_Nak

NAK received during transfer.

enumerator kStatus_FLEXIO_I2C_Timeout

Timeout polling status flags.

enum _flexio_i2c_master_interrupt
Define FlexIO I2C master interrupt mask.

Values:

enumerator kFLEXIO_I2C_TxEmptyInterruptEnable
Tx buffer empty interrupt enable.

enumerator kFLEXIO_I2C_RxFullInterruptEnable
Rx buffer full interrupt enable.

enum _flexio_i2c_master_status_flags
Define FlexIO I2C master status mask.

Values:

enumerator kFLEXIO_I2C_TxEmptyFlag
Tx shifter empty flag.

enumerator kFLEXIO_I2C_RxFullFlag
Rx shifter full/Transfer complete flag.

enumerator kFLEXIO_I2C_ReceiveNakFlag
Receive NAK flag.

enum _flexio_i2c_direction
Direction of master transfer.

Values:

enumerator kFLEXIO_I2C_Write
Master send to slave.

enumerator kFLEXIO_I2C_Read
Master receive from slave.

typedef enum *_flexio_i2c_direction* flexio_i2c_direction_t
Direction of master transfer.

typedef struct *_flexio_i2c_type* FLEXIO_I2C_Type
Define FlexIO I2C master access structure typedef.

typedef struct *_flexio_i2c_master_config* flexio_i2c_master_config_t
Define FlexIO I2C master user configuration structure.

typedef struct *_flexio_i2c_master_transfer* flexio_i2c_master_transfer_t
Define FlexIO I2C master transfer structure.

typedef struct *_flexio_i2c_master_handle* flexio_i2c_master_handle_t
FlexIO I2C master handle typedef.

typedef void (*flexio_i2c_master_transfer_callback_t)(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, *status_t* status, void *userData)
FlexIO I2C master transfer callback typedef.

I2C_RETRY_TIMES
Retry times for waiting flag.

struct _flexio_i2c_type
#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master access structure typedef.

Public Members

FLEXIO_Type *flexioBase
: FlexIO base pointer.

uint8_t SDAPinIndex
: Pin select for I2C SDA.

uint8_t SCLPinIndex
: Pin select for I2C SCL.

uint8_t shifterIndex[2]
: Shifter index used in FlexIO I2C.

uint8_t timerIndex[3]
: Timer index used in FlexIO I2C.

uint32_t baudrate
: Master transfer baudrate, used to calculate delay time.

struct __flexio_i2c_master_config
: *#include <fsl_flexio_i2c_master.h>* Define FlexIO I2C master user configuration structure.

Public Members

bool enableMaster
: Enables the FlexIO I2C peripheral at initialization time.

bool enableInDoze
: Enable/disable FlexIO operation in doze mode.

bool enableInDebug
: Enable/disable FlexIO operation in debug mode.

bool enableFastAccess
: Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps
: Baud rate in Bps.

struct __flexio_i2c_master_transfer
: *#include <fsl_flexio_i2c_master.h>* Define FlexIO I2C master transfer structure.

Public Members

uint32_t flags
: Transfer flag which controls the transfer, reserved for FlexIO I2C.

uint8_t slaveAddress
: 7-bit slave address.

flexio_i2c_direction_t direction
: Transfer direction, read or write.

uint32_t subaddress
: Sub address. Transferred MSB first.

uint8_t subaddressSize
: Size of sub address.

uint8_t volatile *data
Transfer buffer.

volatile size_t dataSize
Transfer size.

struct __flexio_i2c_master_handle
#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master handle structure.

Public Members

flexio_i2c_master_transfer_t transfer
FlexIO I2C master transfer copy.

size_t transferSize
Total bytes to be transferred.

uint8_t state
Transfer state maintained during transfer.

flexio_i2c_master_transfer_callback_t completionCallback
Callback function called at transfer event. Callback function called at transfer event.

void *userData
Callback parameter passed to callback function.

bool needRestart
Whether master needs to send re-start signal.

2.25 FlexIO I2S Driver

void FLEXIO_I2S_Init(*FLEXIO_I2S_Type* *base, const *flexio_i2s_config_t* *config)
Initializes the FlexIO I2S.

This API configures FlexIO pins and shifter to I2S and configures the FlexIO I2S with a configuration structure. The configuration structure can be filled by the user, or be set with default values by FLEXIO_I2S_GetDefaultConfig().

Note: This API should be called at the beginning of the application to use the FlexIO I2S driver. Otherwise, any access to the FlexIO I2S module can cause hard fault because the clock is not enabled.

Parameters

- base – FlexIO I2S base pointer
- config – FlexIO I2S configure structure.

void FLEXIO_I2S_GetDefaultConfig(*flexio_i2s_config_t* *config)
Sets the FlexIO I2S configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in FLEXIO_I2S_Init(). Users may use the initialized structure unchanged in FLEXIO_I2S_Init() or modify some fields of the structure before calling FLEXIO_I2S_Init().

Parameters

- config – pointer to master configuration structure

void FLEXIO_I2S_Deinit(*FLEXIO_I2S_Type* *base)

De-initializes the FlexIO I2S.

Calling this API resets the FlexIO I2S shifter and timer config. After calling this API, call the FLEXO_I2S_Init to use the FlexIO I2S module.

Parameters

- base – FlexIO I2S base pointer

static inline void FLEXIO_I2S_Enable(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S module operation.

Parameters

- base – Pointer to FLEXIO_I2S_Type
- enable – True to enable, false dose not have any effect.

uint32_t FLEXIO_I2S_GetStatusFlags(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S status flags.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

Status flag, which are ORed by the enumerators in the _flexio_i2s_status_flags.

void FLEXIO_I2S_EnableInterrupts(*FLEXIO_I2S_Type* *base, uint32_t mask)

Enables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- mask – interrupt source

void FLEXIO_I2S_DisableInterrupts(*FLEXIO_I2S_Type* *base, uint32_t mask)

Disables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – pointer to FLEXIO_I2S_Type structure
- mask – interrupt source

static inline void FLEXIO_I2S_TxEnableDMA(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S Tx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

static inline void FLEXIO_I2S_RxEnableDMA(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S Rx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

static inline uint32_t FLEXIO_I2S_TxGetDataRegisterAddress(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S send data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

FlexIO i2s send data register address.

static inline uint32_t FLEXIO_I2S_RxGetDataRegisterAddress(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S receive data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

FlexIO i2s receive data register address.

void FLEXIO_I2S_MasterSetFormat(*FLEXIO_I2S_Type* *base, *flexio_i2s_format_t* *format, uint32_t srcClock_Hz)

Configures the FlexIO I2S audio format in master mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – I2S master clock source frequency in Hz.

void FLEXIO_I2S_SlaveSetFormat(*FLEXIO_I2S_Type* *base, *flexio_i2s_format_t* *format)

Configures the FlexIO I2S audio format in slave mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- format – Pointer to FlexIO I2S audio data format structure.

status_t FLEXIO_I2S_WriteBlocking(*FLEXIO_I2S_Type* *base, uint8_t bitWidth, uint8_t *txData, size_t size)

Sends data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- txData – Pointer to the data to be written.
- size – Bytes to be written.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

static inline void FLEXIO_I2S_WriteData(*FLEXIO_I2S_Type* *base, uint8_t bitWidth, uint32_t data)

Writes data into a data register.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- data – Data to be written.

status_t FLEXIO_I2S_ReadBlocking(*FLEXIO_I2S_Type* *base, uint8_t bitWidth, uint8_t *rxData, size_t size)

Receives a piece of data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- rxData – Pointer to the data to be read.
- size – Bytes to be read.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

static inline uint32_t FLEXIO_I2S_ReadData(*FLEXIO_I2S_Type* *base)

Reads a data from the data register.

Parameters

- base – FlexIO I2S base pointer

Returns

Data read from data register.

void FLEXIO_I2S_TransferTxCreateHandle(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_callback_t* callback, void *userData)

Initializes the FlexIO I2S handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- handle – Pointer to flexio_i2s_handle_t structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

void FLEXIO_I2S_TransferSetFormat(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_format_t* *format, uint32_t srcClock_Hz)

Configures the FlexIO I2S audio format.

Audio format can be changed at run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – FlexIO I2S handle pointer.
- format – Pointer to audio data format structure.
- srcClock_Hz – FlexIO I2S bit clock source frequency in Hz. This parameter should be 0 while in slave mode.

void FLEXIO_I2S_TransferRxCreateHandle(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_callback_t* callback, void *userData)

Initializes the FlexIO I2S receive handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

status_t FLEXIO_I2S_TransferSendNonBlocking(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_transfer_t* *xfer)

Performs an interrupt non-blocking send transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call FLEXIO_I2S_GetRemainingBytes to poll the transfer status and check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- xfer – Pointer to flexio_i2s_transfer_t structure

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_FLEXIO_I2S_TxBusy – Previous transmission still not finished, data not all written to TX register yet.
- kStatus_InvalidArgument – The input parameter is invalid.

status_t FLEXIO_I2S_TransferReceiveNonBlocking(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_transfer_t* *xfer)

Performs an interrupt non-blocking receive transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call FLEXIO_I2S_GetRemainingBytes to poll the transfer status to check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- xfer – Pointer to flexio_i2s_transfer_t structure

Return values

- kStatus_Success – Successfully start the data receive.
- kStatus_FLEXIO_I2S_RxBusy – Previous receive still not finished.
- kStatus_InvalidArgument – The input parameter is invalid.

void FLEXIO_I2S_TransferAbortSend(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)

Aborts the current send.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

void FLEXIO_I2S_TransferAbortReceive(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)

Aborts the current receive.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

status_t FLEXIO_I2S_TransferGetSendCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, size_t *count)

Gets the remaining bytes to be sent.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

status_t FLEXIO_I2S_TransferGetReceiveCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, size_t *count)

Gets the remaining bytes to be received.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes recieved.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

Returns

count Bytes received.

void FLEXIO_I2S_TransferTxHandleIRQ(void *i2sBase, void *i2sHandle)

Tx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure

void FLEXIO_I2S_TransferRxHandleIRQ(void *i2sBase, void *i2sHandle)

Rx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure.

FSL_FLEXIO_I2S_DRIVER_VERSION

FlexIO I2S driver version 2.2.2.

FlexIO I2S transfer status.

Values:

enumerator kStatus_FLEXIO_I2S_Idle

FlexIO I2S is in idle state

enumerator kStatus_FLEXIO_I2S_TxBusy

FlexIO I2S Tx is busy

enumerator kStatus_FLEXIO_I2S_RxBusy

FlexIO I2S Tx is busy

enumerator kStatus_FLEXIO_I2S_Error

FlexIO I2S error occurred

enumerator kStatus_FLEXIO_I2S_QueueFull

FlexIO I2S transfer queue is full.

enumerator kStatus_FLEXIO_I2S_Timeout
FlexIO I2S timeout polling status flags.

enum _flexio_i2s_master_slave
Master or slave mode.

Values:

enumerator kFLEXIO_I2S_Master
Master mode

enumerator kFLEXIO_I2S_Slave
Slave mode

_flexio_i2s_interrupt_enable Define FlexIO FlexIO I2S interrupt mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_I2S_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

_flexio_i2s_status_flags Define FlexIO FlexIO I2S status mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_I2S_RxDataRegFullFlag
Receive buffer full flag.

enum _flexio_i2s_sample_rate
Audio sample rate.

Values:

enumerator kFLEXIO_I2S_SampleRate8KHz
Sample rate 8000Hz

enumerator kFLEXIO_I2S_SampleRate11025Hz
Sample rate 11025Hz

enumerator kFLEXIO_I2S_SampleRate12KHz
Sample rate 12000Hz

enumerator kFLEXIO_I2S_SampleRate16KHz
Sample rate 16000Hz

enumerator kFLEXIO_I2S_SampleRate22050Hz
Sample rate 22050Hz

enumerator kFLEXIO_I2S_SampleRate24KHz
Sample rate 24000Hz

enumerator kFLEXIO_I2S_SampleRate32KHz
Sample rate 32000Hz

enumerator kFLEXIO_I2S_SampleRate44100Hz
Sample rate 44100Hz

enumerator kFLEXIO_I2S_SampleRate48KHz
Sample rate 48000Hz

enumerator kFLEXIO_I2S_SampleRate96KHz
Sample rate 96000Hz

enum _flexio_i2s_word_width
Audio word width.

Values:

enumerator kFLEXIO_I2S_WordWidth8bits
Audio data width 8 bits

enumerator kFLEXIO_I2S_WordWidth16bits
Audio data width 16 bits

enumerator kFLEXIO_I2S_WordWidth24bits
Audio data width 24 bits

enumerator kFLEXIO_I2S_WordWidth32bits
Audio data width 32 bits

typedef struct *_flexio_i2s_type* FLEXIO_I2S_Type
Define FlexIO I2S access structure typedef.

typedef enum *_flexio_i2s_master_slave* flexio_i2s_master_slave_t
Master or slave mode.

typedef struct *_flexio_i2s_config* flexio_i2s_config_t
FlexIO I2S configure structure.

typedef struct *_flexio_i2s_format* flexio_i2s_format_t
FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

typedef enum *_flexio_i2s_sample_rate* flexio_i2s_sample_rate_t
Audio sample rate.

typedef enum *_flexio_i2s_word_width* flexio_i2s_word_width_t
Audio word width.

typedef struct *_flexio_i2s_transfer* flexio_i2s_transfer_t
Define FlexIO I2S transfer structure.

typedef struct *_flexio_i2s_handle* flexio_i2s_handle_t

typedef void (*flexio_i2s_callback_t)(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *status_t* status, void *userData)
FlexIO I2S xfer callback prototype.

I2S_RETRY_TIMES
Retry times for waiting flag.

FLEXIO_I2S_XFER_QUEUE_SIZE
FlexIO I2S transfer queue size, user can refine it according to use case.

struct _flexio_i2s_type
#include <fsl_flexio_i2s.h> Define FlexIO I2S access structure typedef.

Public Members

FLEXIO_Type *flexioBase
: FlexIO base pointer

uint8_t txPinIndex
: Tx data pin index in FlexIO pins

uint8_t rxPinIndex
: Rx data pin index

uint8_t bclkPinIndex
: Bit clock pin index

uint8_t fsPinIndex
: Frame sync pin index

uint8_t txShifterIndex
: Tx data shifter index

uint8_t rxShifterIndex
: Rx data shifter index

uint8_t bclkTimerIndex
: Bit clock timer index

uint8_t fsTimerIndex
: Frame sync timer index

struct __flexio_i2s_config
: *#include <fsl_flexio_i2s.h>* FlexIO I2S configure structure.

Public Members

bool enableI2S
: Enable FlexIO I2S

flexio_i2s_master_slave_t masterSlave
: Master or slave

flexio_pin_polarity_t txPinPolarity
: Tx data pin polarity, active high or low

flexio_pin_polarity_t rxPinPolarity
: Rx data pin polarity

flexio_pin_polarity_t bclkPinPolarity
: Bit clock pin polarity

flexio_pin_polarity_t fsPinPolarity
: Frame sync pin polarity

flexio_shifter_timer_polarity_t txTimerPolarity
: Tx data valid on bclk rising or falling edge

flexio_shifter_timer_polarity_t rxTimerPolarity
: Rx data valid on bclk rising or falling edge

struct __flexio_i2s_format
: *#include <fsl_flexio_i2s.h>* FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

Public Members

uint8_t bitWidth
: Bit width of audio data, always 8/16/24/32 bits

uint32_t sampleRate_Hz
: Sample rate of the audio data

struct _flexio_i2s_transfer
: *#include <fsl_flexio_i2s.h>* Define FlexIO I2S transfer structure.

Public Members

uint8_t *data
: Data buffer start pointer

size_t dataSize
: Bytes to be transferred.

struct _flexio_i2s_handle
: *#include <fsl_flexio_i2s.h>* Define FlexIO I2S handle structure.

Public Members

uint32_t state
: Internal state

flexio_i2s_callback_t callback
: Callback function called at transfer event

void *userData
: Callback parameter passed to callback function

uint8_t bitWidth
: Bit width for transfer, 8/16/24/32bits

flexio_i2s_transfer_t queue[(4U)]
: Transfer queue storing queued transfer

size_t transferSize[(4U)]
: Data bytes need to transfer

volatile uint8_t queueUser
: Index for user to queue transfer

volatile uint8_t queueDriver
: Index for driver to get the transfer data and size

2.26 FlexIO SPI Driver

void FLEXIO_SPI_MasterInit(*FLEXIO_SPI_Type* *base, *flexio_spi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI master hardware, and configures the FlexIO SPI with FlexIO SPI master configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_MasterGetDefaultConfig().

Example

```
FLEXIO_SPI_Type spiDev = {
.flexioBase = FLEXIO,
.SDOPinIndex = 0,
.SDIPinIndex = 1,
.SCKPinIndex = 2,
.CSnPinIndex = 3,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_spi_master_config_t config = {
.enableMaster = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 500000,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_MasterInit(&spiDev, &config, srcClock_Hz);
```

Note: 1.FlexIO SPI master only support CPOL = 0, which means clock inactive low. 2.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI master communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by 2*2=4. If FlexIO SPI master communicates with FlexIO SPI slave, the maximum baud rate is FlexIO clock frequency divided by (1.5+2.5)*2=8.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- masterConfig – Pointer to the flexio_spi_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

void FLEXIO_SPI_MasterDeinit(*FLEXIO_SPI_Type* *base)

Resets the FlexIO SPI timer and shifter config.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

void FLEXIO_SPI_MasterGetDefaultConfig(*flexio_spi_master_config_t* *masterConfig)

Gets the default configuration to configure the FlexIO SPI master. The configuration can be used directly by calling the FLEXIO_SPI_MasterConfigure(). Example:

```
flexio_spi_master_config_t masterConfig;
FLEXIO_SPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – Pointer to the flexio_spi_master_config_t structure.

void FLEXIO_SPI_SlaveInit(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_config_t* *slaveConfig)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI slave hardware configuration, and configures the FlexIO SPI with FlexIO SPI slave configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_SlaveGetDefaultConfig().

Note: 1.Only one timer is needed in the FlexIO SPI slave. As a result, the second timer index is ignored. 2.FlexIO SPI slave only support CPOL = 0, which means clock inactive low. 3.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI slave communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by 3*2=6. If FlexIO SPI slave communicates with FlexIO SPI master, the maximum baud rate is FlexIO clock frequency divided by (1.5+2.5)*2=8. Example

```
FLEXIO_SPI_Type spiDev = {
.flexioBase = FLEXIO,
.SDOPinIndex = 0,
.SDIPinIndex = 1,
.SCKPinIndex = 2,
.CSnPinIndex = 3,
.shifterIndex = {0,1},
.timerIndex = {0}
};
flexio_spi_slave_config_t config = {
.enableSlave = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_SlaveInit(&spiDev, &config);
```

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

void FLEXIO_SPI_SlaveDeinit(*FLEXIO_SPI_Type* *base)

Gates the FlexIO clock.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

void FLEXIO_SPI_SlaveGetDefaultConfig(*flexio_spi_slave_config_t* *slaveConfig)

Gets the default configuration to configure the FlexIO SPI slave. The configuration can be used directly for calling the FLEXIO_SPI_SlaveConfigure(). Example:

```
flexio_spi_slave_config_t slaveConfig;
FLEXIO_SPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

uint32_t FLEXIO_SPI_GetStatusFlags(*FLEXIO_SPI_Type* *base)

Gets FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

Returns

status flag; Use the status flag to AND the following flag mask and get the status.

- kFLEXIO_SPI_TxEmptyFlag
- kFLEXIO_SPI_RxEmptyFlag

void FLEXIO_SPI_ClearStatusFlags(*FLEXIO_SPI_Type* *base, uint32_t mask)

Clears FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – status flag The parameter can be any combination of the following values:
  - kFLEXIO_SPI_TxEmptyFlag
  - kFLEXIO_SPI_RxEmptyFlag

void FLEXIO_SPI_EnableInterrupts(*FLEXIO_SPI_Type* *base, uint32_t mask)

Enables the FlexIO SPI interrupt.

This function enables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – interrupt source. The parameter can be any combination of the following values:
  - kFLEXIO_SPI_RxFullInterruptEnable
  - kFLEXIO_SPI_TxEmptyInterruptEnable

void FLEXIO_SPI_DisableInterrupts(*FLEXIO_SPI_Type* *base, uint32_t mask)

Disables the FlexIO SPI interrupt.

This function disables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – interrupt source The parameter can be any combination of the following values:
  - kFLEXIO_SPI_RxFullInterruptEnable
  - kFLEXIO_SPI_TxEmptyInterruptEnable

void FLEXIO_SPI_EnableDMA(*FLEXIO_SPI_Type* *base, uint32_t mask, bool enable)

Enables/disables the FlexIO SPI transmit DMA. This function enables/disables the FlexIO SPI Tx DMA, which means that asserting the kFLEXIO_SPI_TxEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – SPI DMA source.
- enable – True means enable DMA, false means disable DMA.

static inline uint32_t FLEXIO_SPI_GetTxDataRegisterAddress(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction)

Gets the FlexIO SPI transmit data register address for MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns
FlexIO SPI transmit data register address.

static inline uint32_t FLEXIO_SPI_GetRxDataRegisterAddress(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction)

Gets the FlexIO SPI receive data register address for the MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns
FlexIO SPI receive data register address.

static inline void FLEXIO_SPI_Enable(*FLEXIO_SPI_Type* *base, bool enable)

Enables/disables the FlexIO SPI module operation.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.
- enable – True to enable, false does not have any effect.

void FLEXIO_SPI_MasterSetBaudRate(*FLEXIO_SPI_Type* *base, uint32_t baudRate_Bps, uint32_t srcClockHz)

Sets baud rate for the FlexIO SPI transfer, which is only used for the master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- baudRate_Bps – Baud Rate needed in Hz.
- srcClockHz – SPI source clock frequency in Hz.

static inline void FLEXIO_SPI_WriteData(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, uint32_t data)

Writes one byte of data, which is sent using the MSB method.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- data – 8/16/32 bit data.

static inline uint32_t FLEXIO_SPI_ReadData(*FLEXIO_SPI_Type* *base,
flexio_spi_shift_direction_t direction)

Reads 8 bit/16 bit data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns

8 bit/16 bit data received.

status_t FLEXIO_SPI_WriteBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, const uint8_t *buffer, size_t size)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The data bytes to send.
- size – The number of data bytes to send.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_ReadBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, uint8_t *buffer, size_t size)

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The buffer to store the received bytes.
- size – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_MasterTransferBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_transfer_t* *xfer)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – pointer to FLEXIO_SPI_Type structure
- xfer – FlexIO SPI transfer structure, see flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

void FLEXIO_SPI_FlushShifters(*FLEXIO_SPI_Type* *base)

Flush tx/rx shifters.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

status_t FLEXIO_SPI_MasterTransferCreateHandle(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *flexio_spi_master_transfer_callback_t* callback, void *userData)

Initializes the FlexIO SPI Master handle, which is used in transactional functions.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_SPI_MasterTransferNonBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *flexio_spi_transfer_t* *xfer)

Master transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- xfer – FlexIO SPI transfer structure. See flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully start a transfer.

- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – SPI is not idle, is running another transfer.

void FLEXIO_SPI_MasterTransferAbort(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle)

Aborts the master data transfer, which used IRQ.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.

status_t FLEXIO_SPI_MasterTransferGetCount(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, size_t *count)

Gets the data transfer status which used IRQ.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXIO_SPI_MasterTransferHandleIRQ(void *spiType, void *spiHandle)

FlexIO SPI master IRQ handler function.

Parameters

- spiType – Pointer to the FLEXIO_SPI_Type structure.
- spiHandle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.

status_t FLEXIO_SPI_SlaveTransferCreateHandle(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_handle_t* *handle, *flexio_spi_slave_transfer_callback_t* callback, void *userData)

Initializes the FlexIO SPI Slave handle, which is used in transactional functions.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_SPI_SlaveTransferNonBlocking(*FLEXIO_SPI_Type* *base,
flexio_spi_slave_handle_t *handle,
flexio_spi_transfer_t *xfer)

Slave transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- base – Pointer to the FLEXIO_SPI_Type structure.
- xfer – FlexIO SPI transfer structure. See flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – SPI is not idle; it is running another transfer.

static inline void FLEXIO_SPI_SlaveTransferAbort(*FLEXIO_SPI_Type* *base,
flexio_spi_slave_handle_t *handle)

Aborts the slave data transfer which used IRQ, share same API with master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.

static inline *status_t* FLEXIO_SPI_SlaveTransferGetCount(*FLEXIO_SPI_Type* *base,
flexio_spi_slave_handle_t *handle,
size_t *count)

Gets the data transfer status which used IRQ, share same API with master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXIO_SPI_SlaveTransferHandleIRQ(void *spiType, void *spiHandle)

FlexIO SPI slave IRQ handler function.

Parameters

- spiType – Pointer to the FLEXIO_SPI_Type structure.
- spiHandle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.

FSL_FLEXIO_SPI_DRIVER_VERSION

FlexIO SPI driver version.

Error codes for the FlexIO SPI driver.

Values:

enumerator kStatus_FLEXIO_SPI_Busy
FlexIO SPI is busy.

enumerator kStatus_FLEXIO_SPI_Idle
SPI is idle

enumerator kStatus_FLEXIO_SPI_Error
FlexIO SPI error.

enumerator kStatus_FLEXIO_SPI_Timeout
FlexIO SPI timeout polling status flags.

enum _flexio_spi_clock_phase
FlexIO SPI clock phase configuration.

Values:

enumerator kFLEXIO_SPI_ClockPhaseFirstEdge
First edge on SPSCK occurs at the middle of the first cycle of a data transfer.

enumerator kFLEXIO_SPI_ClockPhaseSecondEdge
First edge on SPSCK occurs at the start of the first cycle of a data transfer.

enum _flexio_spi_shift_direction
FlexIO SPI data shifter direction options.

Values:

enumerator kFLEXIO_SPI_MsbFirst
Data transfers start with most significant bit.

enumerator kFLEXIO_SPI_LsbFirst
Data transfers start with least significant bit.

enum _flexio_spi_data_bitcount_mode
FlexIO SPI data length mode options.

Values:

enumerator kFLEXIO_SPI_8BitMode
8-bit data transmission mode.

enumerator kFLEXIO_SPI_16BitMode
16-bit data transmission mode.

enumerator kFLEXIO_SPI_32BitMode
32-bit data transmission mode.

enum _flexio_spi_interrupt_enable
Define FlexIO SPI interrupt mask.

Values:

enumerator kFLEXIO_SPI_TxEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_SPI_RxFullInterruptEnable
Receive buffer full interrupt enable.

enum _flexio_spi_status_flags

Define FlexIO SPI status mask.

Values:

enumerator kFLEXIO_SPI_TxBufferEmptyFlag

Transmit buffer empty flag.

enumerator kFLEXIO_SPI_RxBufferFullFlag

Receive buffer full flag.

enum _flexio_spi_dma_enable

Define FlexIO SPI DMA mask.

Values:

enumerator kFLEXIO_SPI_TxDmaEnable

Tx DMA request source

enumerator kFLEXIO_SPI_RxDmaEnable

Rx DMA request source

enumerator kFLEXIO_SPI_DmaAllEnable

All DMA request source

enum _flexio_spi_transfer_flags

Define FlexIO SPI transfer flags.

Note: Use kFLEXIO_SPI_csContinuous and one of the other flags to OR together to form the transfer flag.

Values:

enumerator kFLEXIO_SPI_8bitMsb

FlexIO SPI 8-bit MSB first

enumerator kFLEXIO_SPI_8bitLsb

FlexIO SPI 8-bit LSB first

enumerator kFLEXIO_SPI_16bitMsb

FlexIO SPI 16-bit MSB first

enumerator kFLEXIO_SPI_16bitLsb

FlexIO SPI 16-bit LSB first

enumerator kFLEXIO_SPI_32bitMsb

FlexIO SPI 32-bit MSB first

enumerator kFLEXIO_SPI_32bitLsb

FlexIO SPI 32-bit LSB first

enumerator kFLEXIO_SPI_csContinuous

Enable the CS signal continuous mode

typedef enum *_flexio_spi_clock_phase* flexio_spi_clock_phase_t

FlexIO SPI clock phase configuration.

typedef enum *_flexio_spi_shift_direction* flexio_spi_shift_direction_t

FlexIO SPI data shifter direction options.

typedef enum *_flexio_spi_data_bitcount_mode* flexio_spi_data_bitcount_mode_t

FlexIO SPI data length mode options.

typedef struct *_flexio_spi_type* FLEXIO_SPI_Type
Define FlexIO SPI access structure typedef.

typedef struct *_flexio_spi_master_config* flexio_spi_master_config_t
Define FlexIO SPI master configuration structure.

typedef struct *_flexio_spi_slave_config* flexio_spi_slave_config_t
Define FlexIO SPI slave configuration structure.

typedef struct *_flexio_spi_transfer* flexio_spi_transfer_t
Define FlexIO SPI transfer structure.

typedef struct *_flexio_spi_master_handle* flexio_spi_master_handle_t
typedef for flexio_spi_master_handle_t in advance.

typedef *flexio_spi_master_handle_t* flexio_spi_slave_handle_t
Slave handle is the same with master handle.

typedef void (*flexio_spi_master_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *status_t* status, void *userData)
FlexIO SPI master callback for finished transmit.

typedef void (*flexio_spi_slave_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_handle_t* *handle, *status_t* status, void *userData)
FlexIO SPI slave callback for finished transmit.

FLEXIO_SPI_DUMMYDATA
FlexIO SPI dummy transfer data, the data is sent while txData is NULL.

SPI_RETRY_TIMES
Retry times for waiting flag.

FLEXIO_SPI_XFER_DATA_FORMAT(flag)
Get the transfer data format of width and bit order.

struct _flexio_spi_type
#include <fsl_flexio_spi.h> Define FlexIO SPI access structure typedef.

Public Members

FLEXIO_Type *flexioBase
FlexIO base pointer.

uint8_t SDOPinIndex
Pin select for data output. To set SDO pin in Hi-Z state, user needs to mux the pin as GPIO input and disable all pull up/down in application.

uint8_t SDIPinIndex
Pin select for data input.

uint8_t SCKPinIndex
Pin select for clock.

uint8_t CSnPinIndex
Pin select for enable.

uint8_t shifterIndex[2]
Shifter index used in FlexIO SPI.

uint8_t timerIndex[2]
Timer index used in FlexIO SPI.

struct _flexio_spi_master_config

#include <fsl_flexio_spi.h> Define FlexIO SPI master configuration structure.

Public Members

bool enableMaster

Enable/disable FlexIO SPI master after configuration.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct _flexio_spi_slave_config

#include <fsl_flexio_spi.h> Define FlexIO SPI slave configuration structure.

Public Members

bool enableSlave

Enable/disable FlexIO SPI slave after configuration.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct _flexio_spi_transfer

#include <fsl_flexio_spi.h> Define FlexIO SPI transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData
Receive buffer.

size_t dataSize
Transfer bytes.

uint8_t flags
FlexIO SPI control flag, MSB first or LSB first.

struct __flexio_spi_master_handle
#include <fsl_flexio_spi.h> Define FlexIO SPI handle structure.

Public Members

const uint8_t *txData
Transfer buffer.

uint8_t *rxData
Receive buffer.

size_t transferSize
Total bytes to be transferred.

volatile size_t txRemainingBytes
Send data remaining in bytes.

volatile size_t rxRemainingBytes
Receive data remaining in bytes.

volatile uint32_t state
FlexIO SPI internal state.

uint8_t bytePerFrame
SPI mode, 2bytes or 1byte in a frame

flexio_spi_shift_direction_t direction
Shift direction.

flexio_spi_master_transfer_callback_t callback
FlexIO SPI callback.

void *userData
Callback parameter.

bool isCsContinuous
Is current transfer using CS continuous mode.

uint32_t timer1Cfg
TIMER1 TIMCFG regiser value backup.

2.27 FlexIO UART Driver

status_t FLEXIO_UART_Init(*FLEXIO_UART_Type* *base, const *flexio_uart_config_t* *userConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures FlexIO UART hardware, and configures the FlexIO UART with FlexIO UART configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_UART_GetDefaultConfig().

Example

```
FLEXIO_UART_Type base = {
.flexioBase = FLEXIO,
.TxPinIndex = 0,
.RxPinIndex = 1,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_uart_config_t config = {
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 115200U,
.bitCountPerChar = 8
};
FLEXIO_UART_Init(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- userConfig – Pointer to the flexio_uart_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Configuration success.
- kStatus_FLEXIO_UART_BaudrateNotSupport – Baudrate is not supported for current clock source frequency.

void FLEXIO_UART_Deinit(*FLEXIO_UART_Type* *base)

Resets the FlexIO UART shifter and timer config.

Note: After calling this API, call the FLEXO_UART_Init to use the FlexIO UART module.

Parameters

- base – Pointer to FLEXIO_UART_Type structure

void FLEXIO_UART_GetDefaultConfig(*flexio_uart_config_t* *userConfig)

Gets the default configuration to configure the FlexIO UART. The configuration can be used directly for calling the FLEXIO_UART_Init(). Example:

```
flexio_uart_config_t config;
FLEXIO_UART_GetDefaultConfig(&userConfig);
```

Parameters

- userConfig – Pointer to the flexio_uart_config_t structure.

uint32_t FLEXIO_UART_GetStatusFlags(*FLEXIO_UART_Type* *base)

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART status flags.

void FLEXIO_UART_ClearStatusFlags(*FLEXIO_UART_Type* *base, uint32_t mask)

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
  - kFLEXIO_UART_TxDataRegEmptyFlag
  - kFLEXIO_UART_RxEmptyFlag
  - kFLEXIO_UART_RxOverRunFlag

void FLEXIO_UART_EnableInterrupts(*FLEXIO_UART_Type* *base, uint32_t mask)

Enables the FlexIO UART interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Interrupt source.

void FLEXIO_UART_DisableInterrupts(*FLEXIO_UART_Type* *base, uint32_t mask)

Disables the FlexIO UART interrupt.

This function disables the FlexIO UART interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Interrupt source.

static inline uint32_t FLEXIO_UART_GetTxDataRegisterAddress(*FLEXIO_UART_Type* *base)

Gets the FlexIO UARt transmit data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART transmit data register address.

static inline uint32_t FLEXIO_UART_GetRxDataRegisterAddress(*FLEXIO_UART_Type* *base)

Gets the FlexIO UART receive data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART receive data register address.

static inline void FLEXIO_UART_EnableTxDMA(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART transmit DMA. This function enables/disables the FlexIO UART Tx DMA, which means asserting the kFLEXIO_UART_TxDataRegEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- enable – True to enable, false to disable.

static inline void FLEXIO_UART_EnableRxDMA(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART receive DMA. This function enables/disables the FlexIO UART Rx DMA, which means asserting kFLEXIO_UART_RxDataRegFullFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- enable – True to enable, false to disable.

static inline void FLEXIO_UART_Enable(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART module operation.

Parameters

- base – Pointer to the FLEXIO_UART_Type.
- enable – True to enable, false does not have any effect.

static inline void FLEXIO_UART_WriteByte(*FLEXIO_UART_Type* *base, const uint8_t *buffer)

Writes one byte of data.

Note: This is a non-blocking API, which returns directly after the data is put into the data register. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- buffer – The data bytes to send.

static inline void FLEXIO_UART_ReadByte(*FLEXIO_UART_Type* *base, uint8_t *buffer)

Reads one byte of data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- buffer – The buffer to store the received bytes.

status_t FLEXIO_UART_WriteBlocking(*FLEXIO_UART_Type* *base, const uint8_t *txData, size_t txSize)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- txData – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.

- kStatus_Success – Successfully wrote all data.

status_t FLEXIO_UART_ReadBlocking(*FLEXIO_UART_Type* *base, uint8_t *rxData, size_t rxSize)

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- rxData – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t FLEXIO_UART_TransferCreateHandle(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_callback_t* callback, void *userData)

Initializes the UART handle.

This function initializes the FlexIO UART handle, which can be used for other FlexIO UART transactional APIs. Call this API once to get the initialized handle.

The UART driver supports the "background" receiving, which means that users can set up a RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn't call the FLEXIO_UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – to FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

void FLEXIO_UART_TransferStartRingBuffer(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, uint8_t *ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_ReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, only 31 bytes are used for saving data.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – Size of the ring buffer.

void FLEXIO_UART_TransferStopRingBuffer(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferSendNonBlocking(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_t* *xfer)

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in ISR, the FlexIO UART driver calls the callback function and passes the kStatus_FLEXIO_UART_TxIdle as status parameter.

Note: The kStatus_FLEXIO_UART_TxIdle is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- xfer – FlexIO UART transfer structure. See flexio_uart_transfer_t.

Return values

- kStatus_Success – Successfully starts the data transmission.
- kStatus_UART_TxBusy – Previous transmission still not finished, data not written to the TX register.

void FLEXIO_UART_TransferAbortSend(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. Get the remainBytes to find out how many bytes are still not sent out.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferGetSendCount(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, size_t *count)

Gets the number of bytes sent.

This function gets the number of bytes sent driven by interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

status_t FLEXIO_UART_TransferReceiveNonBlocking(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_t* *xfer, size_t *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using the interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in ring buffer is copied and the parameter receivedBytes shows how many bytes are copied from the ring buffer. After copying, if the data in ring buffer is not enough to read, the receive request is saved by the UART driver. When new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter kStatus_UART_RxIdle. For example, if the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer, the 5 bytes are copied to xfer->data. This function returns with the parameter receivedBytes set to 5. For the last 5 bytes, newly arrived data is saved from the xfer->data[5]. When 5 bytes are received, the UART driver notifies upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to xfer->data. When all data is received, the upper layer is notified.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- xfer – UART transfer structure. See flexio_uart_transfer_t.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- kStatus_Success – Successfully queue the transfer into the transmit queue.
- kStatus_FLEXIO_UART_RxBusy – Previous receive request is not finished.

void FLEXIO_UART_TransferAbortReceive(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the receive data which was using IRQ.

This function aborts the receive data which was using IRQ.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferGetReceiveCount(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, size_t *count)

Gets the number of bytes received.

This function gets the number of bytes received driven by interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

void FLEXIO_UART_TransferHandleIRQ(void *uartType, void *uartHandle)

FlexIO UART IRQ handler function.

This function processes the FlexIO UART transmit and receives the IRQ request.

Parameters

- uartType – Pointer to the FLEXIO_UART_Type structure.
- uartHandle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

void FLEXIO_UART_FlushShifters(*FLEXIO_UART_Type* *base)

Flush tx/rx shifters.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

FSL_FLEXIO_UART_DRIVER_VERSION

FlexIO UART driver version.

Error codes for the UART driver.

Values:

enumerator kStatus_FLEXIO_UART_TxBusy

Transmitter is busy.

enumerator kStatus_FLEXIO_UART_RxBusy

Receiver is busy.

enumerator kStatus_FLEXIO_UART_TxIdle
UART transmitter is idle.

enumerator kStatus_FLEXIO_UART_RxIdle
UART receiver is idle.

enumerator kStatus_FLEXIO_UART_ERROR
ERROR happens on UART.

enumerator kStatus_FLEXIO_UART_RxRingBufferOverrun
UART RX software ring buffer overrun.

enumerator kStatus_FLEXIO_UART_RxHardwareOverrun
UART RX receiver overrun.

enumerator kStatus_FLEXIO_UART_Timeout
UART times out.

enumerator kStatus_FLEXIO_UART_BaudrateNotSupport
Baudrate is not supported in current clock source

enum _flexio_uart_bit_count_per_char
FlexIO UART bit count per char.

Values:

enumerator kFLEXIO_UART_7BitsPerChar
7-bit data characters

enumerator kFLEXIO_UART_8BitsPerChar
8-bit data characters

enumerator kFLEXIO_UART_9BitsPerChar
9-bit data characters

enum _flexio_uart_interrupt_enable
Define FlexIO UART interrupt mask.

Values:

enumerator kFLEXIO_UART_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_UART_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

enum _flexio_uart_status_flags
Define FlexIO UART status mask.

Values:

enumerator kFLEXIO_UART_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_UART_RxDataRegFullFlag
Receive buffer full flag.

enumerator kFLEXIO_UART_RxOverRunFlag
Receive buffer over run flag.

typedef enum *_flexio_uart_bit_count_per_char* flexio_uart_bit_count_per_char_t
FlexIO UART bit count per char.

typedef struct *_flexio_uart_type* FLEXIO_UART_Type
Define FlexIO UART access structure typedef.

typedef struct *_flexio_uart_config* flexio_uart_config_t
Define FlexIO UART user configuration structure.

typedef struct *_flexio_uart_transfer* flexio_uart_transfer_t
Define FlexIO UART transfer structure.

typedef struct *_flexio_uart_handle* flexio_uart_handle_t

typedef void (*flexio_uart_transfer_callback_t)(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *status_t* status, void *userData)
FlexIO UART transfer callback function.

UART_RETRY_TIMES
Retry times for waiting flag.

struct _flexio_uart_type
#include <fsl_flexio_uart.h> Define FlexIO UART access structure typedef.

Public Members

FLEXIO_Type *flexioBase
FlexIO base pointer.

uint8_t TxPinIndex
Pin select for UART_Tx.

uint8_t RxPinIndex
Pin select for UART_Rx.

uint8_t shifterIndex[2]
Shifter index used in FlexIO UART.

uint8_t timerIndex[2]
Timer index used in FlexIO UART.

struct _flexio_uart_config
#include <fsl_flexio_uart.h> Define FlexIO UART user configuration structure.

Public Members

bool enableUart
Enable/disable FlexIO UART TX & RX.

bool enableInDoze
Enable/disable FlexIO operation in doze mode

bool enableInDebug
Enable/disable FlexIO operation in debug mode

bool enableFastAccess
Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps
Baud rate in Bps.

flexio_uart_bit_count_per_char_t bitCountPerChar
number of bits, 7/8/9 -bit

struct __flexio_uart_transfer
#include <fsl_flexio_uart.h> Define FlexIO UART transfer structure.

Public Members

size_t dataSize
Transfer size

struct __flexio_uart_handle
#include <fsl_flexio_uart.h> Define FLEXIO UART handle structure.

Public Members

const uint8_t *volatile txData
Address of remaining data to send.

volatile size_t txDataSize
Size of the remaining data to send.

uint8_t *volatile rxData
Address of remaining data to receive.

volatile size_t rxDataSize
Size of the remaining data to receive.

size_t txDataSizeAll
Total bytes to be sent.

size_t rxDataSizeAll
Total bytes to be received.

uint8_t *rxRingBuffer
Start address of the receiver ring buffer.

size_t rxRingBufferSize
Size of the ring buffer.

volatile uint16_t rxRingBufferHead
Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail
Index for the user to get data from the ring buffer.

flexio_uart_transfer_callback_t callback
Callback function.

void *userData
UART callback function parameter.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state

union ___unnamed78___

Public Members

uint8_t *data
The buffer of data to be transfer.

uint8_t *rxData
The buffer to receive data.

const uint8_t *txData
The buffer of data to be sent.

2.28 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION
GPIO driver version.

enum _gpio_pin_direction
GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput
Set current pin as digital input

enumerator kGPIO_DigitalOutput
Set current pin as digital output

enum _gpio_checker_attribute
GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW
User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW
User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW
User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW
User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW
User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW
User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureR
User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureN
User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO_IgnoreAttributeCheck
Ignores the attribute check

enum _gpio_interrupt_config

Configures the interrupt generation condition.

Values:

enumerator kGPIO_InterruptStatusFlagDisabled

Interrupt status flag is disabled.

enumerator kGPIO_DMARisingEdge

ISF flag and DMA request on rising edge.

enumerator kGPIO_DMAFallingEdge

ISF flag and DMA request on falling edge.

enumerator kGPIO_DMAEitherEdge

ISF flag and DMA request on either edge.

enumerator kGPIO_FlagRisingEdge

Flag sets on rising edge.

enumerator kGPIO_FlagFallingEdge

Flag sets on falling edge.

enumerator kGPIO_FlagEitherEdge

Flag sets on either edge.

enumerator kGPIO_InterruptLogicZero

Interrupt when logic zero.

enumerator kGPIO_InterruptRisingEdge

Interrupt on rising edge.

enumerator kGPIO_InterruptFallingEdge

Interrupt on falling edge.

enumerator kGPIO_InterruptEitherEdge

Interrupt on either edge.

enumerator kGPIO_InterruptLogicOne

Interrupt when logic one.

enumerator kGPIO_ActiveHighTriggerOutputEnable

Enable active high-trigger output.

enumerator kGPIO_ActiveLowTriggerOutputEnable

Enable active low-trigger output.

enum _gpio_interrupt_selection

Configures the selection of interrupt/DMA request/trigger output.

Values:

enumerator kGPIO_InterruptOutput0

Interrupt/DMA request/trigger output 0.

enumerator kGPIO_InterruptOutput1

Interrupt/DMA request/trigger output 1.

enum gpio_pin_interrupt_control_t

GPIO pin and interrupt control.

Values:

enumerator kGPIO_PinControlNonSecure
Pin Control Non-Secure.

enumerator kGPIO_InterruptControlNonSecure
Interrupt Control Non-Secure.

enumerator kGPIO_PinControlNonPrivilege
Pin Control Non-Privilege.

enumerator kGPIO_InterruptControlNonPrivilege
Interrupt Control Non-Privilege.

typedef enum *_gpio_pin_direction* gpio_pin_direction_t
GPIO direction definition.

typedef enum *_gpio_checker_attribute* gpio_checker_attribute_t
GPIO checker attribute.

typedef struct *_gpio_pin_config* gpio_pin_config_t
The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

typedef enum *_gpio_interrupt_config* gpio_interrupt_config_t
Configures the interrupt generation condition.

typedef enum *_gpio_interrupt_selection* gpio_interrupt_selection_t
Configures the selection of interrupt/DMA request/trigger output.

typedef struct *_gpio_version_info* gpio_version_info_t
GPIO version information.

GPIO_FIT_REG(value)

struct _gpio_pin_config
#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

gpio_pin_direction_t pinDirection
GPIO direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

struct _gpio_version_info
#include <fsl_gpio.h> GPIO version information.

Public Members

uint16_t feature
Feature Specification Number.

uint8_t minor
Minor Version Number.

uint8_t major
Major Version Number.

2.29 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)
Initializes the GPIO peripheral.

This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDenit(GPIO_Type *base)
Denitializes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)
Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
  kGPIO_DigitalInput,
  0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
  kGPIO_DigitalOutput,
  0,
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

void GPIO_GetVersionInfo(GPIO_Type *base, *gpio_version_info_t* *info)
Get GPIO version information.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- info – GPIO version information

static inline void GPIO_SecurePrivilegeLock(GPIO_Type *base, *gpio_pin_interrupt_control_t* mask)
lock or unlock secure privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – pin or interrupt macro

static inline void GPIO_EnablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
Enable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
Disable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Enable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Disable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
Enable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Enable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputEnable(GPIO_Type *base, uint32_t mask)

Enable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputDisable(GPIO_Type *base, uint32_t mask)

Disable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
  - 0: corresponding pin output low-logic level.
  - 1: corresponding pin output high-logic level.

static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

static inline void GPIO_SetPinInterruptConfig(GPIO_Type *base, uint32_t pin, *gpio_interrupt_config_t* config)

Configures the gpio pin interrupt/DMA request.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- config – GPIO pin interrupt configuration.
  - kGPIO_InterruptStatusFlagDisabled: Interrupt/DMA request disabled.
  - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
  - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
  - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
  - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
  - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
  - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
  - kGPIO_InterruptLogicZero : Interrupt when logic zero.
  - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
  - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
  - kGPIO_InterruptEitherEdge : Interrupt on either edge.
  - kGPIO_InterruptLogicOne : Interrupt when logic one.
  - kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
  - kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

static inline void GPIO_SetPinInterruptChannel(GPIO_Type *base, uint32_t pin, *gpio_interrupt_selection_t* selection)

Configures the gpio pin interrupt/DMA request/trigger output channel selection.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- selection – GPIO pin interrupt output selection.
  - kGPIO_InterruptOutput0: Interrupt/DMA request/trigger output 0.
  - kGPIO_InterruptOutput1 : Interrupt/DMA request/trigger output 1.

uint32_t GPIO_GpioGetInterruptFlags(GPIO_Type *base)

Read the GPIO interrupt status flags.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)

Returns

The current GPIO's interrupt status flag. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint32_t GPIO_GpioGetInterruptChannelFlags(GPIO_Type *base, uint32_t channel)

Read the GPIO interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

Returns

The current GPIO's interrupt status flag based on the selected interrupt channel. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint8_t GPIO_PinGetInterruptFlag(GPIO_Type *base, uint32_t pin)

Read individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on)
- pin – GPIO specific pin number.

Returns

The current selected pin's interrupt status flag.

void GPIO_GpioClearInterruptFlags(GPIO_Type *base, uint32_t mask)

Clears GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

void GPIO_GpioClearInterruptChannelFlags(GPIO_Type *base, uint32_t mask, uint32_t channel)

Clears GPIO pin interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

void GPIO_PinClearInterruptFlag(GPIO_Type *base, uint32_t pin)

Clear GPIO individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on).
- pin – GPIO specific pin number.

static inline void GPIO_SetMultipleInterruptPinsConfig(GPIO_Type *base, uint32_t mask, *gpio_interrupt_config_t* config)

Sets the GPIO interrupt configuration in PCR register for multiple pins.

Parameters

- base – GPIO peripheral base pointer.
- mask – GPIO pin number macro.
- config – GPIO pin interrupt configuration.
  - kGPIO_InterruptStatusFlagDisabled: Interrupt disabled.
  - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
  - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
  - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
  - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
  - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
  - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
  - kGPIO_InterruptLogicZero : Interrupt when logic zero.
  - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
  - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
  - kGPIO_InterruptEitherEdge : Interrupt on either edge.
  - kGPIO_InterruptLogicOne : Interrupt when logic one.
  - kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
  - kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

void GPIO_CheckAttributeBytes(GPIO_Type *base, *gpio_checker_attribute_t* attribute)

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.30 I3C: I3C Driver

FSL_I3C_DRIVER_VERSION

I3C driver version.

I3C status return codes.

Values:

enumerator kStatus_I3C_Busy

The master is already performing a transfer.

enumerator kStatus_I3C_Idle
The slave driver is idle.

enumerator kStatus_I3C_Nak
The slave device sent a NAK in response to an address.

enumerator kStatus_I3C_WriteAbort
The slave device sent a NAK in response to a write.

enumerator kStatus_I3C_Term
The master terminates slave read.

enumerator kStatus_I3C_HdrParityError
Parity error from DDR read.

enumerator kStatus_I3C_CrcError
CRC error from DDR read.

enumerator kStatus_I3C_ReadFifoError
Read from M/SRDATAB register when FIFO empty.

enumerator kStatus_I3C_WriteFifoError
Write to M/SWDATAB register when FIFO full.

enumerator kStatus_I3C_MsgError
Message SDR/DDR mismatch or read/write message in wrong state

enumerator kStatus_I3C_InvalidReq
Invalid use of request.

enumerator kStatus_I3C_Timeout
The module has stalled too long in a frame.

enumerator kStatus_I3C_SlaveCountExceed
The I3C slave count has exceed the definition in I3C_MAX_DEVCNT.

enumerator kStatus_I3C_IBIWon
The I3C slave event IBI or MR or HJ won the arbitration on a header address.

enumerator kStatus_I3C_OverrunError
Slave internal from-bus buffer/FIFO overrun.

enumerator kStatus_I3C_UnderrunError
Slave internal to-bus buffer/FIFO underrun

enumerator kStatus_I3C_UnderrunNak
Slave internal from-bus buffer/FIFO underrun and NACK error

enumerator kStatus_I3C_InvalidStart
Slave invalid start flag

enumerator kStatus_I3C_SdrParityError
SDR parity error

enumerator kStatus_I3C_S0S1Error
S0 or S1 error

enum _i3c_hdr_mode
I3C HDR modes.

Values:

enumerator kI3C_HDRModeNone

enumerator kI3C_HDRModeDDR

enumerator kI3C_HDRModeTSP

enumerator kI3C_HDRModeTSL

typedef enum *_i3c_hdr_mode* i3c_hdr_mode_t

I3C HDR modes.

typedef struct *_i3c_device_info* i3c_device_info_t

I3C device information.

I3C_RETRY_TIMES

Max loops to wait for I3C operation status complete.

This is the maximum number of loops to wait for I3C operation status complete. If set to 0, it will wait indefinitely.

I3C_MAX_DEVCNT

I3C_IBI_BUFF_SIZE

struct __i3c_device_info

#include <fsl_i3c.h> I3C device information.

Public Members

uint8_t dynamicAddr

Device dynamic address.

uint8_t staticAddr

Static address.

uint8_t dcr

Device characteristics register information.

uint8_t bcr

Bus characteristics register information.

uint16_t vendorID

Device vendor ID(manufacture ID).

uint32_t partNumber

Device part number info

uint16_t maxReadLength

Maximum read length.

uint16_t maxWriteLength

Maximum write length.

uint8_t hdrMode

Support hdr mode, could be OR logic in i3c_hdr_mode.

2.31 I3C Common Driver

typedef struct *_i3c_config* i3c_config_t

Structure with settings to initialize the I3C module, could both initialize master and slave functionality.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

uint32_t I3C_GetInstance(I3C_Type *base)

Get which instance current I3C is used.

Parameters

- base – The I3C peripheral base address.

void I3C_GetDefaultConfig(*i3c_config_t* *config)

Provides a default configuration for the I3C peripheral, the configuration covers both master functionality and slave functionality.

This function provides the following default configuration for I3C:

```
config->enableMaster                = kI3C_MasterCapable;
config->disableTimeout              = false;
config->hKeep                       = kI3C_MasterHighKeeperNone;
config->enableOpenDrainStop         = true;
config->enableOpenDrainHigh         = true;
config->baudRate_Hz.i2cBaud         = 400000U;
config->baudRate_Hz.i3cPushPullBaud = 12500000U;
config->baudRate_Hz.i3cOpenDrainBaud = 2500000U;
config->masterDynamicAddress        = 0x0AU;
config->slowClock_Hz                = 1000000U;
config->enableSlave                 = true;
config->vendorID                    = 0x11BU;
config->enableRandomPart            = false;
config->partNumber                  = 0;
config->dcr                         = 0;
config->bcr = 0;
config->hdrMode             = (uint8_t)kI3C_HDRModeDDR;
config->nakAllRequest       = false;
config->ignoreS0S1Error     = false;
config->offline             = false;
config->matchSlaveStartStop = false;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the common I3C driver with I3C_Init().

Parameters

- config – **[out]** User provided configuration structure for default values. Refer to i3c_config_t.

void I3C_Init(I3C_Type *base, const *i3c_config_t* *config, uint32_t sourceClock_Hz)

Initializes the I3C peripheral. This function enables the peripheral clock and initializes the I3C peripheral as described by the user provided configuration. This will initialize both the master peripheral and slave peripheral so that I3C module could work as pure master, pure slave or secondary master, etc. A software reset is performed prior to configuration.

Parameters

- base – The I3C peripheral base address.
- config – User provided peripheral configuration. Use I3C_GetDefaultConfig() to get a set of defaults that you can override.

- sourceClock_Hz – Frequency in Hertz of the I3C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

struct _i3c_config

#include <fsl_i3c.h> Structure with settings to initialize the I3C module, could both initialize master and slave functionality.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

i3c_master_enable_t enableMaster

Enable master mode.

bool disableTimeout

Whether to disable timeout to prevent the ERRWARN.

i3c_master_hkeep_t hKeep

High keeper mode setting.

bool enableOpenDrainStop

Whether to emit open-drain speed STOP.

bool enableOpenDrainHigh

Enable Open-Drain High to be 1 PPBAUD count for i3c messages, or 1 ODBAUD.

i3c_baudrate_hz_t baudRate_Hz

Desired baud rate settings.

uint8_t masterDynamicAddress

Main master dynamic address configuration.

uint32_t maxWriteLength

Maximum write length.

uint32_t maxReadLength

Maximum read length.

bool enableSlave

Whether to enable slave.

uint8_t staticAddr

Static address.

uint16_t vendorID

Device vendor ID(manufacture ID).

uint32_t partNumber

Device part number info

uint8_t dcr

Device characteristics register information.

uint8_t bcr

Bus characteristics register information.

uint8_t hdrMode

Support hdr mode, could be OR logic in enumeration:i3c_hdr_mode_t.

bool nakAllRequest

Whether to reply NAK to all requests except broadcast CCC.

bool ignoreS0S1Error

Whether to ignore S0/S1 error in SDR mode.

bool offline

Whether to wait 60 us of bus quiet or HDR request to ensure slave track SDR mode safely.

bool matchSlaveStartStop

Whether to assert start/stop status only the time slave is addressed.

2.32 I3C Master Driver

void I3C_MasterGetDefaultConfig(*i3c_master_config_t* *masterConfig)

Provides a default configuration for the I3C master peripheral.

This function provides the following default configuration for the I3C master peripheral:

```
masterConfig->enableMaster            = kI3C_MasterOn;
masterConfig->disableTimeout          = false;
masterConfig->hKeep                   = kI3C_MasterHighKeeperNone;
masterConfig->enableOpenDrainStop     = true;
masterConfig->enableOpenDrainHigh     = true;
masterConfig->baudRate_Hz             = 100000U;
masterConfig->busType                 = kI3C_TypeI2C;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with I3C_MasterInit().

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to i3c_master_config_t.

void I3C_MasterInit(I3C_Type *base, const *i3c_master_config_t* *masterConfig, uint32_t sourceClock_Hz)

Initializes the I3C master peripheral.

This function enables the peripheral clock and initializes the I3C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The I3C peripheral base address.
- masterConfig – User provided peripheral configuration. Use I3C_MasterGetDefaultConfig() to get a set of defaults that you can override.
- sourceClock_Hz – Frequency in Hertz of the I3C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

void I3C_MasterDeinit(I3C_Type *base)

Deinitializes the I3C master peripheral.

This function disables the I3C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- base – The I3C peripheral base address.

status_t I3C_MasterCheckAndClearError(I3C_Type *base, uint32_t status)

status_t I3C_MasterWaitForCtrlDone(I3C_Type *base, bool waitIdle)

status_t I3C_CheckForBusyBus(I3C_Type *base)

static inline void I3C_MasterEnable(I3C_Type *base, *i3c_master_enable_t* enable)

Set I3C module master mode.

Parameters

- base – The I3C peripheral base address.
- enable – Enable master mode.

void I3C_SlaveGetDefaultConfig(*i3c_slave_config_t* *slaveConfig)

Provides a default configuration for the I3C slave peripheral.

This function provides the following default configuration for the I3C slave peripheral:

```
slaveConfig->enableslave              = true;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the slave driver with I3C_SlaveInit().

Parameters

- slaveConfig – **[out]** User provided configuration structure for default values. Refer to i3c_slave_config_t.

void I3C_SlaveInit(I3C_Type *base, const *i3c_slave_config_t* *slaveConfig, uint32_t slowClock_Hz)

Initializes the I3C slave peripheral.

This function enables the peripheral clock and initializes the I3C slave peripheral as described by the user provided configuration.

Parameters

- base – The I3C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use I3C_SlaveGetDefaultConfig() to get a set of defaults that you can override.
- slowClock_Hz – Frequency in Hertz of the I3C slow clock. Used to calculate the bus match condition values. If FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH defines as 1, this parameter is useless.

void I3C_SlaveDeinit(I3C_Type *base)

Deinitializes the I3C slave peripheral.

This function disables the I3C slave peripheral and gates the clock.

Parameters

- base – The I3C peripheral base address.

static inline void I3C_SlaveEnable(I3C_Type *base, bool isEnable)

Enable/Disable Slave.

Parameters

- base – The I3C peripheral base address.
- isEnable – Enable or disable.

static inline uint32_t I3C_MasterGetStatusFlags(I3C_Type *base)

Gets the I3C master status flags.

A bit mask with the state of all I3C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_master_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_MasterClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C master status flag state.

The following status register flags can be cleared:

- kI3C_MasterSlaveStartFlag
- kI3C_MasterControlDoneFlag
- kI3C_MasterCompleteFlag
- kI3C_MasterArbitrationWonFlag
- kI3C_MasterSlave2MasterFlag

Attempts to clear other flags has no effect.

See also:

_i3c_master_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _i3c_master_flags enumerators OR'd together. You may pass the result of a previous call to I3C_MasterGetStatusFlags().

static inline uint32_t I3C_MasterGetErrorStatusFlags(I3C_Type *base)

Gets the I3C master error status flags.

A bit mask with the state of all I3C master error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_master_error_flags

Parameters

- base – The I3C peripheral base address.

Returns
State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_MasterClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C master error status flag state.

See also:

_i3c_master_error_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of error status flags that are to be cleared. The mask is composed of _i3c_master_error_flags enumerators OR'd together. You may pass the result of a previous call to I3C_MasterGetStatusFlags().

i3c_master_state_t I3C_MasterGetState(I3C_Type *base)

Gets the I3C master state.

Parameters

- base – The I3C peripheral base address.

Returns
I3C master state.

static inline uint32_t I3C_SlaveGetStatusFlags(I3C_Type *base)

Gets the I3C slave status flags.

A bit mask with the state of all I3C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_flags

Parameters

- base – The I3C peripheral base address.

Returns
State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_SlaveClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave status flag state.

The following status register flags can be cleared:

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Attempts to clear other flags has no effect.

See also:

_i3c_slave_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _i3c_slave_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetStatusFlags().

static inline uint32_t I3C_SlaveGetErrorStatusFlags(I3C_Type *base)

Gets the I3C slave error status flags.

A bit mask with the state of all I3C slave error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_error_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_SlaveClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave error status flag state.

See also:

_i3c_slave_error_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of error status flags that are to be cleared. The mask is composed of _i3c_slave_error_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetErrorStatusFlags().

i3c_slave_activity_state_t I3C_SlaveGetActivityState(I3C_Type *base)

Gets the I3C slave state.

Parameters

- base – The I3C peripheral base address.

Returns

I3C slave activity state, refer i3c_slave_activity_state_t.

status_t I3C_SlaveCheckAndClearError(I3C_Type *base, uint32_t status)

static inline void I3C_MasterEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C master interrupt requests.

All flags except kI3C_MasterBetweenFlag and kI3C_MasterNackDetectFlag can be enabled as interrupts.

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _i3c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_MasterDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C master interrupt requests.

All flags except kI3C_MasterBetweenFlag and kI3C_MasterNackDetectFlag can be enabled as interrupts.

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _i3c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_MasterGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C master interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_master_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_MasterGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C master interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_master_flags enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_SlaveEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C slave interrupt requests.

Only below flags can be enabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag

- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_SlaveDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C slave interrupt requests.

Only below flags can be disabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_SlaveGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_SlaveGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_MasterEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)

Enables or disables I3C master DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

static inline uint32_t I3C_MasterGetTxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C master transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Master Transmit Data Register address.

static inline uint32_t I3C_MasterGetRxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C master receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Master Receive Data Register address.

static inline void I3C_SlaveEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)

Enables or disables I3C slave DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

static inline uint32_t I3C_SlaveGetTxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Slave Transmit Data Register address.

static inline uint32_t I3C_SlaveGetRxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Slave Receive Data Register address.

static inline void I3C_MasterSetWatermarks(I3C_Type *base, *i3c_tx_trigger_level_t* txLvl, *i3c_rx_trigger_level_t* rxLvl, bool flushTx, bool flushRx)

Sets the watermarks for I3C master FIFOs.

Parameters

- base – The I3C peripheral base address.
- txLvl – Transmit FIFO watermark level. The kI3C_MasterTxReadyFlag flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- rxLvl – Receive FIFO watermark level. The kI3C_MasterRxReadyFlag flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- flushTx – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- flushRx – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

static inline void I3C_MasterGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of bytes in the I3C master FIFOs.

Parameters

- base – The I3C peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

static inline void I3C_SlaveSetWatermarks(I3C_Type *base, *i3c_tx_trigger_level_t* txLvl, *i3c_rx_trigger_level_t* rxLvl, bool flushTx, bool flushRx)

Sets the watermarks for I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txLvl – Transmit FIFO watermark level. The kI3C_SlaveTxReadyFlag flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- rxLvl – Receive FIFO watermark level. The kI3C_SlaveRxReadyFlag flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- flushTx – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- flushRx – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

static inline void I3C_SlaveGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of bytes in the I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

void I3C_MasterSetBaudRate(I3C_Type *base, const *i3c_baudrate_hz_t* *baudRate_Hz, uint32_t sourceClock_Hz)

Sets the I3C bus frequency for master transactions.

The I3C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Parameters

- base – The I3C peripheral base address.
- baudRate_Hz – Pointer to structure of requested bus frequency in Hertz.
- sourceClock_Hz – I3C functional clock frequency in Hertz.

static inline bool I3C_MasterGetBusIdleState(I3C_Type *base)

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- base – The I3C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

status_t I3C_MasterStartWithRxSize(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir, uint8_t rxSize)

Sends a START signal and slave address on the I2C/I3C bus, receive size is also specified in the call.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the a address parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.
- rxSize – Read terminate size for the followed read transfer, limit to 255 bytes.

Return values

- kStatus_Success – START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.

status_t I3C_MasterStart(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir)

Sends a START signal and slave address on the I2C/I3C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- kStatus_Success – START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.

status_t I3C_MasterRepeatedStartWithRxSize(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir, uint8_t rxSize)

Sends a repeated START signal and slave address on the I2C/I3C bus, receive size is also specified in the call.

This function is used to send a Repeated START signal when a transfer is already in progress. Like I3C_MasterStart(), it also sends the specified 7-bit address. Call this API also configures the read terminate size for the following read transfer. For example, set the rxSize = 2, the following read transfer will be terminated after two bytes of data received. Write transfer will not be affected by the rxSize configuration.

Note: This function exists primarily to maintain compatible APIs between I3C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.
- rxSize – Read terminate size for the followed read transfer, limit to 255 bytes.

Return values

kStatus_Success – Repeated START signal and address were successfully enqueued in the transmit FIFO.

static inline *status_t* I3C_MasterRepeatedStart(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir)

Sends a repeated START signal and slave address on the I2C/I3C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like I3C_MasterStart(), it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between I3C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

kStatus_Success – Repeated START signal and address were successfully enqueued in the transmit FIFO.

status_t I3C_MasterSend(I3C_Type *base, const void *txBuff, size_t txSize, uint32_t flags)

Performs a polling send transfer on the I2C/I3C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns kStatus_I3C_Nak.

Parameters

- base – The I3C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.
- flags – Bit mask of options for the transfer. See enumeration _i3c_master_transfer_flags for available options.

Return values

- kStatus_Success – Data was sent successfully.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_Nak – The slave device sent a NAK in response to an address.
- kStatus_I3C_WriteAbort – The slave device sent a NAK in response to a write.
- kStatus_I3C_MsgError – Message SDR/DDR mismatch or read/write message in wrong state.
- kStatus_I3C_WriteFifoError – Write to M/SWDATAB register when FIFO full.
- kStatus_I3C_InvalidReq – Invalid use of request.

status_t I3C_MasterReceive(I3C_Type *base, void *rxBuff, size_t rxSize, uint32_t flags)

Performs a polling receive transfer on the I2C/I3C bus.

Parameters

- base – The I3C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.
- flags – Bit mask of options for the transfer. See enumeration _i3c_master_transfer_flags for available options.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_Term – The master terminates slave read.
- kStatus_I3C_HdrParityError – Parity error from DDR read.
- kStatus_I3C_CrcError – CRC error from DDR read.
- kStatus_I3C_MsgError – Message SDR/DDR mismatch or read/write message in wrong state.
- kStatus_I3C_ReadFifoError – Read from M/SRDATAB register when FIFO empty.
- kStatus_I3C_InvalidReq – Invalid use of request.

status_t I3C_MasterStop(I3C_Type *base)

Sends a STOP signal on the I2C/I3C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- base – The I3C peripheral base address.

Return values

- kStatus_Success – The STOP signal was successfully sent on the bus and the transaction terminated.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_InvalidReq – Invalid use of request.

void I3C_MasterEmitRequest(I3C_Type *base, *i3c_bus_request_t* masterReq)

I3C master emit request.

Parameters

- base – The I3C peripheral base address.
- masterReq – I3C master request of type i3c_bus_request_t

static inline void I3C_MasterEmitIBIResponse(I3C_Type *base, *i3c_ibi_response_t* ibiResponse)

I3C master emit request.

Parameters

- base – The I3C peripheral base address.
- ibiResponse – I3C master emit IBI response of type i3c_ibi_response_t

void I3C_MasterRegisterIBI(I3C_Type *base, *i3c_register_ibi_addr_t* *ibiRule)

I3C master register IBI rule.

Parameters

- base – The I3C peripheral base address.
- ibiRule – Pointer to ibi rule description of type i3c_register_ibi_addr_t

void I3C_MasterGetIBIRules(I3C_Type *base, *i3c_register_ibi_addr_t* *ibiRule)

I3C master get IBI rule.

Parameters

- base – The I3C peripheral base address.
- ibiRule – Pointer to store the read out ibi rule description.

i3c_ibi_type_t I3C_GetIBIType(I3C_Type *base)

I3C master get IBI Type.

Parameters

- base – The I3C peripheral base address.

Return values

i3c_ibi_type_t – Type of i3c_ibi_type_t.

static inline uint8_t I3C_GetIBIAddress(I3C_Type *base)

I3C master get IBI Address.

Parameters

- base – The I3C peripheral base address.

Return values

The – 8-bit IBI address.

status_t I3C_MasterProcessDAASpecifiedBaudrate(I3C_Type *base, uint8_t *addressList, uint32_t count, *i3c_master_daa_baudrate_t* *daaBaudRate)

Performs a DAA in the i3c bus with specified temporary baud rate.

Parameters

- base – The I3C peripheral base address.
- addressList – The pointer for address list which is used to do DAA.
- count – The address count in the address list.
- daaBaudRate – The temporary baud rate in DAA process, NULL for using initial setting. The initial setting is set back between the completion of the DAA and the return of this function.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_I3C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.
- kStatus_I3C_SlaveCountExceed – The I3C slave count has exceed the definition in I3C_MAX_DEVCNT.

static inline *status_t* I3C_MasterProcessDAA(I3C_Type *base, uint8_t *addressList, uint32_t count)

Performs a DAA in the i3c bus.

Parameters

- base – The I3C peripheral base address.
- addressList – The pointer for address list which is used to do DAA.
- count – The address count in the address list. The initial setting is set back between the completion of the DAA and the return of this function.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_I3C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.
- kStatus_I3C_SlaveCountExceed – The I3C slave count has exceed the definition in I3C_MAX_DEVCNT.

i3c_device_info_t *I3C_MasterGetDeviceListAfterDAA(I3C_Type *base, uint8_t *count)

Get device information list after DAA process is done.

Parameters

- base – The I3C peripheral base address.
- count – **[out]** The pointer to store the available device count.

Returns

Pointer to the i3c_device_info_t array.

void I3C_MasterClearDeviceCount(I3C_Type *base)

Clear the global device count which represents current devices number on the bus. When user resets all dynamic addresses on the bus, should call this API.

Parameters

- base – The I3C peripheral base address.

status_t I3C_MasterTransferBlocking(I3C_Type *base, *i3c_master_transfer_t* *transfer)

Performs a master polling transfer on the I2C/I3C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- base – The I3C peripheral base address.
- transfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_IBIWon – The I3C slave event IBI or MR or HJ won the arbitration on a header address.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_Nak – The slave device sent a NAK in response to an address.
- kStatus_I3C_WriteAbort – The slave device sent a NAK in response to a write.
- kStatus_I3C_Term – The master terminates slave read.
- kStatus_I3C_HdrParityError – Parity error from DDR read.

- kStatus_I3C_CrcError – CRC error from DDR read.
- kStatus_I3C_MsgError – Message SDR/DDR mismatch or read/write message in wrong state.
- kStatus_I3C_ReadFifoError – Read from M/SRDATAB register when FIFO empty.
- kStatus_I3C_WriteFifoError – Write to M/SWDATAB register when FIFO full.
- kStatus_I3C_InvalidReq – Invalid use of request.

status_t I3C_SlaveSend(I3C_Type *base, const void *txBuff, size_t txSize)

Performs a polling send transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

status_t I3C_SlaveReceive(I3C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

void I3C_MasterTransferCreateHandle(I3C_Type *base, *i3c_master_handle_t* *handle, const *i3c_master_transfer_callback_t* *callback, void *userData)

Creates a new handle for the I3C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the I3C_MasterTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input I3C. Need to notice that on some SoCs the I3C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The I3C peripheral base address.
- handle – **[out]** Pointer to the I3C master driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t I3C_MasterTransferNonBlocking(I3C_Type *base, *i3c_master_handle_t* *handle, *i3c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C/I3C bus.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to the I3C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_I3C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

status_t I3C_MasterTransferGetCount(I3C_Type *base, *i3c_master_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to the I3C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

void I3C_MasterTransferAbort(I3C_Type *base, *i3c_master_handle_t* *handle)

Terminates a non-blocking I3C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the I3C peripheral's IRQ priority.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to the I3C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_I3C_Idle – There is not a non-blocking transaction currently in progress.

void I3C_MasterTransferHandleIRQ(I3C_Type *base, void *intHandle)

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The I3C peripheral base address.
- intHandle – Pointer to the I3C master driver handle.

enum _i3c_master_flags

I3C master peripheral flags.

The following status register flags can be cleared:

- kI3C_MasterSlaveStartFlag
- kI3C_MasterControlDoneFlag
- kI3C_MasterCompleteFlag
- kI3C_MasterArbitrationWonFlag
- kI3C_MasterSlave2MasterFlag

All flags except kI3C_MasterBetweenFlag and kI3C_MasterNackDetectFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_MasterBetweenFlag
Between messages/DAAs flag

enumerator kI3C_MasterNackDetectFlag
NACK detected flag

enumerator kI3C_MasterSlaveStartFlag
Slave request start flag

enumerator kI3C_MasterControlDoneFlag
Master request complete flag

enumerator kI3C_MasterCompleteFlag
Transfer complete flag

enumerator kI3C_MasterRxReadyFlag
Rx data ready in Rx buffer flag

enumerator kI3C_MasterTxReadyFlag
Tx buffer ready for Tx data flag

enumerator kI3C_MasterArbitrationWonFlag
Header address won arbitration flag

enumerator kI3C_MasterErrorFlag
Error occurred flag

enumerator kI3C_MasterSlave2MasterFlag
Switch from slave to master flag

enumerator kI3C_MasterClearFlags

enum _i3c_master_error_flags

I3C master error flags to indicate the causes.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_MasterErrorNackFlag
Slave NACKed the last address

enumerator kI3C_MasterErrorWriteAbortFlag
Slave NACKed the write data

enumerator kI3C_MasterErrorParityFlag
Parity error from DDR read

enumerator kI3C_MasterErrorCrcFlag
CRC error from DDR read

enumerator kI3C_MasterErrorReadFlag
Read from MRDATAB register when FIFO empty

enumerator kI3C_MasterErrorWriteFlag
Write to MWDATAB register when FIFO full

enumerator kI3C_MasterErrorMsgFlag
Message SDR/DDR mismatch or read/write message in wrong state

enumerator kI3C_MasterErrorInvalidReqFlag
Invalid use of request

enumerator kI3C_MasterErrorTimeoutFlag
The module has stalled too long in a frame

enumerator kI3C_MasterAllErrorFlags
All error flags

enum _i3c_master_state
I3C working master state.

Values:

enumerator kI3C_MasterStateIdle
Bus stopped.

enumerator kI3C_MasterStateSlvReq
Bus stopped but slave holding SDA low.

enumerator kI3C_MasterStateMsgSdr
In SDR Message mode from using MWMSG_SDR.

enumerator kI3C_MasterStateNormAct
In normal active SDR mode.

enumerator kI3C_MasterStateDdr
In DDR Message mode.

enumerator kI3C_MasterStateDaa
In ENTDAA mode.

enumerator kI3C_MasterStateIbiAck
Waiting on IBI ACK/NACK decision.

enumerator kI3C_MasterStateIbiRcv
Receiving IBI.

enum _i3c_master_enable
I3C master enable configuration.

Values:

enumerator kI3C_MasterOff
Master off.

enumerator kI3C_MasterOn
Master on.

enumerator kI3C_MasterCapable
Master capable.

enum _i3c_master_hkeep
I3C high keeper configuration.

Values:

enumerator kI3C_MasterHighKeeperNone
Use PUR to hold SCL high.

enumerator kI3C_MasterHighKeeperWiredIn
Use pin_HK controls.

enumerator kI3C_MasterPassiveSDA
Hi-Z for Bus Free and hold SDA.

enumerator kI3C_MasterPassiveSDASCL
Hi-Z both for Bus Free, and can Hi-Z SDA for hold.

enum _i3c_bus_request
Emits the requested operation when doing in pieces vs. by message.

Values:

enumerator kI3C_RequestNone
No request.

enumerator kI3C_RequestEmitStartAddr
Request to emit start and address on bus.

enumerator kI3C_RequestEmitStop
Request to emit stop on bus.

enumerator kI3C_RequestIbiAckNack
Manual IBI ACK or NACK.

enumerator kI3C_RequestProcessDAA
Process DAA.

enumerator kI3C_RequestForceExit
Request to force exit.

enumerator kI3C_RequestAutoIbi
Hold in stopped state, but Auto-emit START,7E.

enum _i3c_bus_type
Bus type with EmitStartAddr.

Values:

enumerator kI3C_TypeI3CSdr
SDR mode of I3C.

enumerator kI3C_TypeI2C
Standard i2c protocol.

enumerator kI3C_TypeI3CDdr
HDR-DDR mode of I3C.

enum _i3c_ibi_response
IBI response.

Values:

enumerator kI3C_IbiRespAck
ACK with no mandatory byte.

enumerator kI3C_IbiRespNack
NACK.

enumerator kI3C_IbiRespAckMandatory
ACK with mandatory byte.

enumerator kI3C_IbiRespManual
Reserved.

enum _i3c_ibi_type
IBI type.

Values:

enumerator kI3C_IbiNormal
In-band interrupt.

enumerator kI3C_IbiHotJoin
slave hot join.

enumerator kI3C_IbiMasterRequest
slave master ship request.

enum _i3c_ibi_state
IBI state.

Values:

enumerator kI3C_IbiReady
In-band interrupt ready state, ready for user to handle.

enumerator kI3C_IbiDataBuffNeed
In-band interrupt need data buffer for data receive.

enumerator kI3C_IbiAckNackPending
In-band interrupt Ack/Nack pending for decision.

enum _i3c_direction
Direction of master and slave transfers.

Values:

enumerator kI3C_Write
Master transmit.

enumerator kI3C_Read
Master receive.

enum _i3c_tx_trigger_level
Watermark of TX int/dma trigger level.

Values:

enumerator kI3C_TxTriggerOnEmpty
Trigger on empty.

enumerator kI3C_TxTriggerUntilOneQuarterOrLess
Trigger on 1/4 full or less.

enumerator kI3C_TxTriggerUntilOneHalfOrLess
Trigger on 1/2 full or less.

enumerator kI3C_TxTriggerUntilOneLessThanFull
Trigger on 1 less than full or less.

enum _i3c_rx_trigger_level
Watermark of RX int/dma trigger level.

Values:

enumerator kI3C_RxTriggerOnNotEmpty
Trigger on not empty.

enumerator kI3C_RxTriggerUntilOneQuarterOrMore
Trigger on 1/4 full or more.

enumerator kI3C_RxTriggerUntilOneHalfOrMore
Trigger on 1/2 full or more.

enumerator kI3C_RxTriggerUntilThreeQuarterOrMore
Trigger on 3/4 full or more.

enum _i3c_rx_term_ops
I3C master read termination operations.

Values:

enumerator kI3C_RxTermDisable
Master doesn't terminate read, used for CCC transfer.

enumerator kI3C_RxAutoTerm
Master auto terminate read after receiving specified bytes(<=255).

enumerator kI3C_RxTermLastByte
Master terminates read at any time after START, no length limitation.

enum _i3c_start_scl_delay
I3C start SCL delay options.

Values:

enumerator kI3C_NoDelay
No delay.

enumerator kI3C_IncreaseSclHalfPeriod
Increases SCL clock period by 1/2.

enumerator kI3C_IncreaseSclOnePeriod
Increases SCL clock period by 1.

enumerator kI3C_IncreaseSclOneAndHalfPeriod
Increases SCL clock period by 1 1/2

enum _i3c_master_transfer_flags
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the _i3c_master_transfer::flags field.

Values:

enumerator kI3C_TransferDefaultFlag
Transfer starts with a start signal, stops with a stop signal.

enumerator kI3C_TransferNoStartFlag
Don't send a start condition, address, and sub address

enumerator kI3C_TransferRepeatedStartFlag
Send a repeated start condition

enumerator kI3C_TransferNoStopFlag
Don't send a stop condition.

enumerator kI3C_TransferWordsFlag
Transfer in words, else transfer in bytes.

enumerator kI3C_TransferDisableRxTermFlag
Disable Rx termination. Note: It's for I3C CCC transfer.

enumerator kI3C_TransferRxAutoTermFlag
Set Rx auto-termination. Note: It's adaptive based on Rx size(<=255 bytes) except in I3C_MasterReceive.

enumerator kI3C_TransferStartWithBroadcastAddr
Start transfer with 0x7E, then read/write data with device address.

typedef enum *_i3c_master_state* i3c_master_state_t
I3C working master state.

typedef enum *_i3c_master_enable* i3c_master_enable_t
I3C master enable configuration.

typedef enum *_i3c_master_hkeep* i3c_master_hkeep_t
I3C high keeper configuration.

typedef enum *_i3c_bus_request* i3c_bus_request_t
Emits the requested operation when doing in pieces vs. by message.

typedef enum *_i3c_bus_type* i3c_bus_type_t
Bus type with EmitStartAddr.

typedef enum *_i3c_ibi_response* i3c_ibi_response_t
IBI response.

typedef enum *_i3c_ibi_type* i3c_ibi_type_t
IBI type.

typedef enum *_i3c_ibi_state* i3c_ibi_state_t
IBI state.

typedef enum *_i3c_direction* i3c_direction_t
Direction of master and slave transfers.

typedef enum *_i3c_tx_trigger_level* i3c_tx_trigger_level_t
Watermark of TX int/dma trigger level.

typedef enum *_i3c_rx_trigger_level* i3c_rx_trigger_level_t
Watermark of RX int/dma trigger level.

typedef enum *_i3c_rx_term_ops* i3c_rx_term_ops_t
I3C master read termination operations.

typedef enum *_i3c_start_scl_delay* i3c_start_scl_delay_t
I3C start SCL delay options.

typedef struct *_i3c_register_ibi_addr* i3c_register_ibi_addr_t
Structure with setting master IBI rules and slave registry.

typedef struct *_i3c_baudrate* i3c_baudrate_hz_t
Structure with I3C baudrate settings.

typedef struct *_i3c_master_daa_baudrate* i3c_master_daa_baudrate_t
I3C DAA baud rate configuration.

typedef struct *_i3c_master_config* i3c_master_config_t
Structure with settings to initialize the I3C master module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef struct *_i3c_master_transfer* i3c_master_transfer_t

typedef struct *_i3c_master_handle* i3c_master_handle_t

typedef struct *_i3c_master_transfer_callback* i3c_master_transfer_callback_t
i3c master callback functions.

typedef void (*i3c_master_isr_t)(I3C_Type *base, void *handle)
Typedef for master interrupt handler.

struct _i3c_register_ibi_addr
#include <fsl_i3c.h> Structure with setting master IBI rules and slave registry.

Public Members

uint8_t address[5]
Address array for registry.

bool i3cFastStart
Allow the START header to run as push-pull speed if all dynamic addresses take MSB 0.

bool ibiHasPayload
Whether the address array has mandatory IBI byte.

struct _i3c_baudrate
#include <fsl_i3c.h> Structure with I3C baudrate settings.

Public Members

uint32_t i2cBaud
Desired I2C baud rate in Hertz.

uint32_t i3cPushPullBaud
Desired I3C push-pull baud rate in Hertz.

uint32_t i3cOpenDrainBaud
Desired I3C open-drain baud rate in Hertz.

struct _i3c_master_daa_baudrate
#include <fsl_i3c.h> I3C DAA baud rate configuration.

Public Members

uint32_t sourceClock_Hz
: FCLK, function clock in Hertz.

uint32_t i3cPushPullBaud
: Desired I3C push-pull baud rate in Hertz.

uint32_t i3cOpenDrainBaud
: Desired I3C open-drain baud rate in Hertz.

struct _i3c_master_config
: *#include <fsl_i3c.h>* Structure with settings to initialize the I3C master module.

  This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

  The configuration structure can be made constant so it resides in flash.

Public Members

i3c_master_enable_t enableMaster
: Enable master mode.

bool disableTimeout
: Whether to disable timeout to prevent the ERRWARN.

i3c_master_hkeep_t hKeep
: High keeper mode setting.

bool enableOpenDrainStop
: Whether to emit open-drain speed STOP.

bool enableOpenDrainHigh
: Enable Open-Drain High to be 1 PPBAUD count for i3c messages, or 1 ODBAUD.

i3c_baudrate_hz_t baudRate_Hz
: Desired baud rate settings.

struct _i3c_master_transfer_callback
: *#include <fsl_i3c.h>* i3c master callback functions.

Public Members

void (*slave2Master)(I3C_Type *base, void *userData)
: Transfer complete callback

void (*ibiCallback)(I3C_Type *base, *i3c_master_handle_t* *handle, *i3c_ibi_type_t* ibiType, *i3c_ibi_state_t* ibiState)
: IBI event callback

void (*transferComplete)(I3C_Type *base, *i3c_master_handle_t* *handle, *status_t* completionStatus, void *userData)
: Transfer complete callback

struct _i3c_master_transfer
: *#include <fsl_i3c.h>* Non-blocking transfer descriptor structure.

  This structure is used to pass transaction parameters to the I3C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags
: Bit mask of options for the transfer. See enumeration _i3c_master_transfer_flags for available options. Set to 0 or kI3C_TransferDefaultFlag for normal transfers.

uint8_t slaveAddress
: The 7-bit slave address.

i3c_direction_t direction
: Either kI3C_Read or kI3C_Write.

uint32_t subaddress
: Sub address. Transferred MSB first.

size_t subaddressSize
: Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data
: Pointer to data to transfer.

size_t dataSize
: Number of bytes to transfer.

i3c_bus_type_t busType
: bus type.

i3c_ibi_response_t ibiResponse
: ibi response during transfer.

struct __i3c_master_handle
: *#include <fsl_i3c.h>* Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state
: Transfer state machine current state.

uint32_t remainingBytes
: Remaining byte count in current state.

i3c_rx_term_ops_t rxTermOps
: Read termination operation.

i3c_master_transfer_t transfer
: Copy of the current transfer info.

uint8_t ibiAddress
: Slave address which request IBI.

uint8_t *ibiBuff
: Pointer to IBI buffer to keep ibi bytes.

size_t ibiPayloadSize
: IBI payload size.

i3c_ibi_type_t ibiType
: IBI type.

i3c_master_transfer_callback_t callback
Callback functions pointer.

void *userData
Application data passed to callback.

2.33 I3C Slave Driver

void I3C_SlaveGetDefaultConfig(*i3c_slave_config_t* *slaveConfig)
Provides a default configuration for the I3C slave peripheral.

This function provides the following default configuration for the I3C slave peripheral:

```
slaveConfig->enableslave              = true;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the slave driver with I3C_SlaveInit().

Parameters

- slaveConfig – **[out]** User provided configuration structure for default values. Refer to i3c_slave_config_t.

void I3C_SlaveInit(I3C_Type *base, const *i3c_slave_config_t* *slaveConfig, uint32_t slowClock_Hz)
Initializes the I3C slave peripheral.

This function enables the peripheral clock and initializes the I3C slave peripheral as described by the user provided configuration.

Parameters

- base – The I3C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use I3C_SlaveGetDefaultConfig() to get a set of defaults that you can override.
- slowClock_Hz – Frequency in Hertz of the I3C slow clock. Used to calculate the bus match condition values. If FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH defines as 1, this parameter is useless.

void I3C_SlaveDeinit(I3C_Type *base)
Deinitializes the I3C slave peripheral.

This function disables the I3C slave peripheral and gates the clock.

Parameters

- base – The I3C peripheral base address.

static inline void I3C_SlaveEnable(I3C_Type *base, bool isEnable)
Enable/Disable Slave.

Parameters

- base – The I3C peripheral base address.
- isEnable – Enable or disable.

static inline uint32_t I3C_SlaveGetStatusFlags(I3C_Type *base)

Gets the I3C slave status flags.

A bit mask with the state of all I3C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_SlaveClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave status flag state.

The following status register flags can be cleared:

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Attempts to clear other flags has no effect.

See also:

_i3c_slave_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _i3c_slave_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetStatusFlags().

static inline uint32_t I3C_SlaveGetErrorStatusFlags(I3C_Type *base)

Gets the I3C slave error status flags.

A bit mask with the state of all I3C slave error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_error_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.

- 0: related status flag is not set.

static inline void I3C_SlaveClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave error status flag state.

See also:

_i3c_slave_error_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of error status flags that are to be cleared. The mask is composed of _i3c_slave_error_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetErrorStatusFlags().

i3c_slave_activity_state_t I3C_SlaveGetActivityState(I3C_Type *base)

Gets the I3C slave state.

Parameters

- base – The I3C peripheral base address.

Returns

I3C slave activity state, refer i3c_slave_activity_state_t.

status_t I3C_SlaveCheckAndClearError(I3C_Type *base, uint32_t status)

static inline void I3C_SlaveEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C slave interrupt requests.

Only below flags can be enabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_SlaveDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C slave interrupt requests.

Only below flags can be disabled as interrupts.

- kI3C_SlaveBusStartFlag

- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_SlaveGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_SlaveGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_SlaveEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)

Enables or disables I3C slave DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

static inline uint32_t I3C_SlaveGetTxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.

- width – DMA read/write unit in bytes.

Returns
The I3C Slave Transmit Data Register address.

static inline uint32_t I3C_SlaveGetRxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns
The I3C Slave Receive Data Register address.

static inline void I3C_SlaveSetWatermarks(I3C_Type *base, *i3c_tx_trigger_level_t* txLvl, *i3c_rx_trigger_level_t* rxLvl, bool flushTx, bool flushRx)

Sets the watermarks for I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txLvl – Transmit FIFO watermark level. The kI3C_SlaveTxReadyFlag flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- rxLvl – Receive FIFO watermark level. The kI3C_SlaveRxReadyFlag flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- flushTx – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- flushRx – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

static inline void I3C_SlaveGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of bytes in the I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

status_t I3C_SlaveSend(I3C_Type *base, const void *txBuff, size_t txSize)

Performs a polling send transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Returns
Error or success status returned by API.

status_t I3C_SlaveReceive(I3C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

Returns
Error or success status returned by API.

void I3C_SlaveTransferCreateHandle(I3C_Type *base, *i3c_slave_handle_t* *handle, *i3c_slave_transfer_callback_t* callback, void *userData)

Creates a new handle for the I3C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the I3C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input I3C. Need to notice that on some SoCs the I3C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The I3C peripheral base address.
- handle – **[out]** Pointer to the I3C slave driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t I3C_SlaveTransferNonBlocking(I3C_Type *base, *i3c_slave_handle_t* *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and I3C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to I3C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of i3c_slave_transfer_event_t enumerators for the events you wish to receive. The kI3C_SlaveTransmitEvent and kI3C_SlaveReceiveEvent events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the kI3C_SlaveAllEvents constant is provided as a convenient way to enable all events.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to struct: _i3c_slave_handle structure which stores the transfer state.
- eventMask – Bit mask formed by OR'ing together i3c_slave_transfer_event_t enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and kI3C_SlaveAllEvents to enable all events.

Return values

- kStatus_Success – Slave transfers were successfully started.

- kStatus_I3C_Busy – Slave transfers have already been started on this handle.

status_t I3C_SlaveTransferGetCount(I3C_Type *base, *i3c_slave_handle_t* *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to i2c_slave_handle_t structure.
- count – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress –

void I3C_SlaveTransferAbort(I3C_Type *base, *i3c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to struct: _i3c_slave_handle structure which stores the transfer state.

Return values

- kStatus_Success –
- kStatus_I3C_Idle –

void I3C_SlaveTransferHandleIRQ(I3C_Type *base, void *intHandle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The I3C peripheral base address.
- intHandle – Pointer to struct: _i3c_slave_handle structure which stores the transfer state.

enum _i3c_slave_flags

I3C slave peripheral flags.

The following status register flags can be cleared:

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Only below flags can be enabled as interrupts.

- kI3C_SlaveBusStartFlag

- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_SlaveNotStopFlag
Slave status not stop flag

enumerator kI3C_SlaveMessageFlag
Slave status message, indicating slave is listening to the bus traffic or responding

enumerator kI3C_SlaveRequiredReadFlag
Slave status required, either is master doing SDR read from slave, or is IBI pushing out.

enumerator kI3C_SlaveRequiredWriteFlag
Slave status request write, master is doing SDR write to slave, except slave in ENTDAA mode

enumerator kI3C_SlaveBusDAAFlag
I3C bus is in ENTDAA mode

enumerator kI3C_SlaveBusHDRModeFlag
I3C bus is in HDR mode

enumerator kI3C_SlaveBusStartFlag
Start/Re-start event is seen since the bus was last cleared

enumerator kI3C_SlaveMatchedFlag
Slave address(dynamic/static) matched since last cleared

enumerator kI3C_SlaveBusStopFlag
Stop event is seen since the bus was last cleared

enumerator kI3C_SlaveRxReadyFlag
Rx data ready in rx buffer flag

enumerator kI3C_SlaveTxReadyFlag
Tx buffer ready for Tx data flag

enumerator kI3C_SlaveDynamicAddrChangedFlag
Slave dynamic address has been assigned, re-assigned, or lost

enumerator kI3C_SlaveReceivedCCCFlag
Slave received Common command code

enumerator kI3C_SlaveErrorFlag
Error occurred flag

enumerator kI3C_SlaveHDRCommandMatchFlag
High data rate command match

enumerator kI3C_SlaveCCCHandledFlag
Slave received Common command code is handled by I3C module

enumerator kI3C_SlaveEventSentFlag
Slave IBI/P2P/MR/HJ event has been sent

enumerator kI3C_SlaveIbiDisableFlag
Slave in band interrupt is disabled.

enumerator kI3C_SlaveMasterRequestDisabledFlag
Slave master request is disabled.

enumerator kI3C_SlaveHotJoinDisabledFlag
Slave Hot-Join is disabled.

enumerator kI3C_SlaveClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kI3C_SlaveAllIrqFlags

enum _i3c_slave_error_flags
I3C slave error flags to indicate the causes.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_SlaveErrorOverrunFlag
Slave internal from-bus buffer/FIFO overrun.

enumerator kI3C_SlaveErrorUnderrunFlag
Slave internal to-bus buffer/FIFO underrun

enumerator kI3C_SlaveErrorUnderrunNakFlag
Slave internal from-bus buffer/FIFO underrun and NACK error

enumerator kI3C_SlaveErrorTermFlag
Terminate error from master

enumerator kI3C_SlaveErrorInvalidStartFlag
Slave invalid start flag

enumerator kI3C_SlaveErrorSdrParityFlag
SDR parity error

enumerator kI3C_SlaveErrorHdrParityFlag
HDR parity error

enumerator kI3C_SlaveErrorHdrCRCFlag
HDR-DDR CRC error

enumerator kI3C_SlaveErrorS0S1Flag
S0 or S1 error

enumerator kI3C_SlaveErrorOverreadFlag
Over-read error

enumerator kI3C_SlaveErrorOverwriteFlag
Over-write error

enum _i3c_slave_event
I3C slave.event.

Values:

enumerator kI3C_SlaveEventNormal
Normal mode.

enumerator kI3C_SlaveEventIBI
In band interrupt event.

enumerator kI3C_SlaveEventMasterReq
Master request event.

enumerator kI3C_SlaveEventHotJoinReq
Hot-join event.

enum _i3c_slave_activity_state
I3C slave.activity state.

Values:

enumerator kI3C_SlaveNoLatency
Normal bus operation

enumerator kI3C_SlaveLatency1Ms
1ms of latency.

enumerator kI3C_SlaveLatency100Ms
100ms of latency.

enumerator kI3C_SlaveLatency10S
10s latency.

enum _i3c_slave_transfer_event
Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to I3C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kI3C_SlaveAddressMatchEvent
Received the slave address after a start or repeated start.

enumerator kI3C_SlaveTransmitEvent
Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kI3C_SlaveReceiveEvent
Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kI3C_SlaveRequiredTransmitEvent
Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kI3C_SlaveStartEvent
A start/repeated start was detected.

enumerator kI3C_SlaveHDRCommandMatchEvent
Slave Match HDR Command.

enumerator kI3C_SlaveCompletionEvent
A stop was detected, completing the transfer.

enumerator kI3C_SlaveRequestSentEvent
Slave request event sent.

enumerator kI3C_SlaveReceivedCCCEvent
Slave received CCC event, need to handle by application.

enumerator kI3C_SlaveAllEvents
Bit mask of all available events.

typedef enum *_i3c_slave_event* i3c_slave_event_t
I3C slave.event.

typedef enum *_i3c_slave_activity_state* i3c_slave_activity_state_t
I3C slave.activity state.

typedef struct *_i3c_slave_config* i3c_slave_config_t
Structure with settings to initialize the I3C slave module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_i3c_slave_transfer_event* i3c_slave_transfer_event_t
Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to I3C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_i3c_slave_transfer* i3c_slave_transfer_t
I3C slave transfer structure.

typedef struct *_i3c_slave_handle* i3c_slave_handle_t

typedef void (*i3c_slave_transfer_callback_t)(I3C_Type *base, *i3c_slave_transfer_t* *transfer, void *userData)
Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the I3C_SlaveSetCallback() function after you have created a handle.

Param base
Base address for the I3C instance on which the event occurred.

Param transfer
Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData
Arbitrary pointer-sized value passed from the application.

typedef void (*i3c_slave_isr_t)(I3C_Type *base, void *handle)

Typedef for slave interrupt handler.

struct _i3c_slave_config

#include <fsl_i3c.h> Structure with settings to initialize the I3C slave module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableSlave

Whether to enable slave.

uint8_t staticAddr

Static address.

uint16_t vendorID

Device vendor ID(manufacture ID).

uint32_t partNumber

Device part number info

uint8_t dcr

Device characteristics register information.

uint8_t bcr

Bus characteristics register information.

uint8_t hdrMode

Support hdr mode, could be OR logic in enumeration:i3c_hdr_mode_t.

bool nakAllRequest

Whether to reply NAK to all requests except broadcast CCC.

bool ignoreS0S1Error

Whether to ignore S0/S1 error in SDR mode.

bool offline

Whether to wait 60 us of bus quiet or HDR request to ensure slave track SDR mode safely.

bool matchSlaveStartStop

Whether to assert start/stop status only the time slave is addressed.

uint32_t maxWriteLength

Maximum write length.

uint32_t maxReadLength

Maximum read length.

struct _i3c_slave_transfer

#include <fsl_i3c.h> I3C slave transfer structure.

Public Members

uint32_t event
: Reason the callback is being invoked.

uint8_t *txData
: Transfer buffer

size_t txDataSize
: Transfer size

uint8_t *rxData
: Transfer buffer

size_t rxDataSize
: Transfer size

status_t completionStatus
: Success or error code describing how the transfer completed. Only applies for kI3C_SlaveCompletionEvent.

size_t transferredCount
: Number of bytes actually transferred since start or last repeated start.

struct _i3c_slave_handle
: *#include <fsl_i3c.h>* I3C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

i3c_slave_transfer_t transfer
: I3C slave transfer copy.

bool isBusy
: Whether transfer is busy.

bool wasTransmit
: Whether the last transfer was a transmit.

uint32_t eventMask
: Mask of enabled events.

uint32_t transferredCount
: Count of bytes transferred.

i3c_slave_transfer_callback_t callback
: Callback function called at transfer event.

void *userData
: Callback parameter passed to callback.

uint8_t txFifoSize
: Tx Fifo size

2.34 IMU: Inter CPU Messaging Unit

status_t IMU_Init(imu_link_t link)

Initializes the IMU module.

This function sets IMU to initialized state, including:

- Flush the send FIFO.
- Unlock the send FIFO.
- Set the water mark to (IMU_MAX_MSG_FIFO_WATER_MARK)
- Flush the receive FIFO.

If IMU_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout if flushing the receive FIFO takes too long.

Parameters

- link – IMU link.

Return values

- kStatus_Success – The IMU was initialized successfully.
- kStatus_InvalidArgument – Invalid link parameter.
- kStatus_Timeout – Timeout occurred while flushing the receive FIFO.

Returns

status_t

void IMU_Deinit(imu_link_t link)

De-initializes the IMU module.

Parameters

- link – IMU link.

static inline void IMU_WriteMsg(imu_link_t link, uint32_t msg)

Write one message to TX FIFO.

This function writes message to the TX FIFO, user need to make sure there is empty space in the TX FIFO, and TX FIFO not locked before calling this function.

Parameters

- link – IMU link.
- msg – The message to send.

static inline uint32_t IMU_ReadMsg(imu_link_t link)

Read one message from RX FIFO.

User need to make sure there is available message in the RX FIFO.

Parameters

- link – IMU link.

Returns

The message.

int32_t IMU_SendMsgsBlocking(imu_link_t link, const uint32_t *msgs, int32_t msgCount, bool lockSendFifo)

Blocking to send messages.

This function blocks until all messages have been filled to TX FIFO.

- If the TX FIFO is locked, this function returns IMU_ERR_TX_FIFO_LOCKED.
- If TX FIFO not locked, this function waits the available empty slot in TX FIFO, and fills the message to TX FIFO.
- To lock TX FIFO after filling all messages, set lockSendFifo to true.

If IMU_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return IMU_ERR_TIMEOUT if waiting for FIFO space takes too long.

Parameters

- link – IMU link.
- msgs – The messages to send.
- msgCount – Message count, one message is a 32-bit word.
- lockSendFifo – If set to true, the TX FIFO is locked after all messages filled to TX FIFO.

Returns

If TX FIFO is locked, this function returns IMU_ERR_TX_FIFO_LOCKED. If a timeout occurs while waiting for FIFO space, it returns IMU_ERR_TIMEOUT. Otherwise, this function returns the actual message count sent out, which equals msgCount because this function is blocking until all messages have been filled into TX FIFO or a timeout occurs.

int32_t IMU_TrySendMsgs(imu_link_t link, const uint32_t *msgs, int32_t msgCount, bool lockSendFifo)

Try to send messages.

This function is similar with IMU_SendMsgsBlocking, the difference is, this function tries to send as many as possible, if there is not enough empty slot in TX FIFO, this function fills messages to available empty slots and returns how many messages have been filled.

- If the TX FIFO is locked, this function returns IMU_ERR_TX_FIFO_LOCKED.
- If TX FIFO not locked, this function fills messages to TX FIFO empty slot, and returns how many messages have been filled.
- If lockSendFifo is set to true, TX FIFO is locked after all messages have been filled to TX FIFO. In other word, TX FIFO is locked if the function return value equals msgCount, when lockSendFifo set to true.

Parameters

- link – IMU link.
- msgs – The messages to send.
- msgCount – Message count, one message is a 32-bit word.
- lockSendFifo – If set to true, the TX FIFO is locked after all messages filled to TX FIFO.

Returns
If TX FIFO is locked, this function returns IMU_ERR_TX_FIFO_LOCKED, otherwise, this function returns the actual message count sent out.

int32_t IMU_TryReceiveMsgs(imu_link_t link, uint32_t *msgs, int32_t desiredMsgCount, bool *needAckLock)

Try to receive messages.

This function tries to read messages from RX FIFO. It reads the messages already exists in RX FIFO and returns the actual read count.

- If the RX FIFO has enough messages, this function reads the messages and returns.
- If the RX FIFO does not have enough messages, this function the messages in RX FIFO and returns the actual read count.
- During message reading, if RX FIFO is empty and locked, in this case peer CPU will not send message until current CPU send lock ack message. Then this function returns the message count actually received, and sets needAckLock to true to inform upper layer.

Parameters

- link – IMU link.
- msgs – The buffer to read messages.
- desiredMsgCount – Desired read count, one message is a 32-bit word.
- needAckLock – Upper layer should always check this value. When this is set to true by this function, upper layer should send lock ack message to peer CPU.

Returns
Count of messages actually received.

int32_t IMU_ReceiveMsgsBlocking(imu_link_t link, uint32_t *msgs, int32_t desiredMsgCount, bool *needAckLock)

Blocking to receive messages.

This function blocks until all desired messages have been received or the RX FIFO is locked.

- If the RX FIFO has enough messages, this function reads the messages and returns.
- If the RX FIFO does not have enough messages, this function waits for the new messages.
- During message reading, if RX FIFO is empty and locked, in this case peer CPU will not send message until current CPU send lock ack message. Then this function returns the message count actually received, and sets needAckLock to true to inform upper layer.

Parameters

- link – IMU link.
- msgs – The buffer to read messages.
- desiredMsgCount – Desired read count, one message is a 32-bit word.
- needAckLock – Upper layer should always check this value. When this is set to true by this function, upper layer should send lock ack message to peer CPU.

Returns
Count of messages actually received.

int32_t IMU_SendMsgPtrBlocking(imu_link_t link, uint32_t msgPtr, bool lockSendFifo)

Blocking to send messages pointer.

Compared with IMU_SendMsgsBlocking, this function fills message pointer to TX FIFO, but not the message content.

This function blocks until the message pointer is filled to TX FIFO.

- If the TX FIFO is locked, this function returns IMU_ERR_TX_FIFO_LOCKED.
- If TX FIFO not locked, this function waits the available empty slot in TX FIFO, and fills the message pointer to TX FIFO.
- To lock TX FIFO after filling the message pointer, set lockSendFifo to true.

If IMU_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return IMU_ERR_TIMEOUT if waiting for FIFO space takes too long.

Parameters

- link – IMU link.
- msgPtr – The buffer pointer to message to send.
- lockSendFifo – If set to true, the TX FIFO is locked after message pointer filled to TX FIFO.

Returns

If TX FIFO is locked, this function returns IMU_ERR_TX_FIFO_LOCKED. If a timeout occurs while waiting for FIFO space, it returns IMU_ERR_TIMEOUT. Otherwise, this function returns 0 to indicate success.

static inline void IMU_LockSendFifo(imu_link_t link, bool lock)

Lock or unlock the TX FIFO.

Parameters

- link – IMU link.
- lock – Use true to lock the FIFO, use false to unlock.

void IMU_FlushSendFifo(imu_link_t link)

Flush the send FIFO.

Flush all messages in send FIFO.

Parameters

- link – IMU link.

static inline void IMU_SetSendFifoWaterMark(imu_link_t link, uint8_t waterMark)

Set send FIFO warter mark.

The warter mark must be less than IMU_MAX_MSG_FIFO_WATER_MARK, i.e. 0 < waterMark <= IMU_MAX_MSG_FIFO_WATER_MARK.

Parameters

- link – IMU link.
- waterMark – Send FIFO warter mark.

static inline uint32_t IMU_GetReceivedMsgCount(imu_link_t link)

Get the message count in receive FIFO.

Parameters

- link – IMU link.

Returns
The message count in receive FIFO.

static inline uint32_t IMU_GetSendFifoEmptySpace(imu_link_t link)
Get the empty slot in send FIFO.

Parameters
- link – IMU link.

Returns
The empty slot count in send FIFO.

uint32_t IMU_GetStatusFlags(imu_link_t link)
Gets the IMU status flags.

Parameters
- link – IMU link.

Returns
Bit mask of the IMU status flags, see _imu_status_flags.

static inline void IMU_ClearPendingInterrupts(imu_link_t link, uint32_t mask)
Clear the IMU IRQ.

Parameters
- link – IMU link.
- mask – Bit mask of the interrupts to clear, see _imu_interrupts.

FSL_IMU_DRIVER_VERSION
IMU driver version.

enum _imu_status_flags
IMU status flags. .

Values:

enumerator kIMU_TxFifoEmpty

enumerator kIMU_TxFifoFull

enumerator kIMU_TxFifoAlmostFull

enumerator kIMU_TxFifoLocked

enumerator kIMU_RxFifoEmpty

enumerator kIMU_RxFifoFull

enumerator kIMU_RxFifoAlmostFull

enumerator kIMU_RxFifoLocked

enum _imu_interrupts
IMU interrupt. .

Values:

enumerator kIMU_RxMsgReadyInterrupt

enumerator kIMU_TxFifoSpaceAvailableInterrupt

IMU_MSG_FIFO_STATUS_MSG_FIFO_LOCKED_MASK

IMU_MSG_FIFO_STATUS_MSG_FIFO_ALMOST_FULL_MASK

IMU_MSG_FIFO_STATUS_MSG_FIFO_FULL_MASK

IMU_MSG_FIFO_STATUS_MSG_FIFO_EMPTY_MASK

IMU_MSG_FIFO_STATUS_MSG_COUNT_MASK

IMU_MSG_FIFO_STATUS_MSG_COUNT_SHIFT

IMU_MSG_FIFO_STATUS_WR_PTR_MASK

IMU_MSG_FIFO_STATUS_WR_PTR_SHIFT

IMU_MSG_FIFO_STATUS_RD_PTR_MASK

IMU_MSG_FIFO_STATUS_RD_PTR_SHIFT

IMU_MSG_FIFO_CNTL_MSG_RDY_INT_CLR_MASK

IMU_MSG_FIFO_CNTL_SP_AV_INT_CLR_MASK

IMU_MSG_FIFO_CNTL_FIFO_FLUSH_MASK

IMU_MSG_FIFO_CNTL_WAIT_FOR_ACK_MASK

IMU_MSG_FIFO_CNTL_FIFO_FULL_WATERMARK_MASK

IMU_MSG_FIFO_CNTL_FIFO_FULL_WATERMARK_SHIFT

IMU_MSG_FIFO_CNTL_FIFO_FULL_WATERMARK(x)

IMU_WR_MSG(link, msg)

IMU_RD_MSG(link)

IMU_RX_FIFO_LOCKED(link)

IMU_TX_FIFO_LOCKED(link)

IMU_TX_FIFO_ALMOST_FULL(link)

IMU_RX_FIFO_EMPTY(link)
Get Rx FIFO empty status.

IMU_LOCK_TX_FIFO(link)

IMU_UNLOCK_TX_FIFO(link)

IMU_RX_FIFO_MSG_COUNT(link)

IMU_TX_FIFO_MSG_COUNT(link)

IMU_RX_FIFO_MSG_COUNT_FROM_STATUS(rxFifoStatus)

IMU_RX_FIFO_LOCKED_FROM_STATUS(rxFifoStatus)

IMU_TX_FIFO_STATUS(link)

IMU_RX_FIFO_STATUS(link)

IMU_TX_FIFO_CNTL(link)

IMU_ERR_TX_FIFO_LOCKED
IMU driver returned error value.

IMU_ERR_TIMEOUT
IMU driver returned error value timeout.

IMU_MSG_FIFO_MAX_COUNT
: Maximum message numbers in FIFO.

IMU_MAX_MSG_FIFO_WATER_MARK
: Maximum message FIFO warter mark.

IMU_FIFO_SW_WRAPAROUND(ptr)

IMU_WR_PTR(link)

IMU_RD_PTR(link)

IMU_BUSY_POLL_COUNT
: Maximum polling iterations for IMU waiting loops.

  This parameter defines the maximum number of iterations for any polling loop in the IMU driver code before timing out and returning an error.

  It applies to all waiting loops in IMU driver.

  This is a count of loop iterations, not a time-based value.

  If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if sensors don't respond or if communication interfaces fail.

struct IMU_Type
: *#include <fsl_imu.h>* IMU register structure.

2.35 Common Driver

FSL_COMMON_DRIVER_VERSION
: common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE
: No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART
: Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART
: Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI
: Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC
: Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM
: Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART
: Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART
: Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART
: Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO
: Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI
: Debug console based on QSCI.

MIN(a, b)
: Computes the minimum of *a* and *b*.

MAX(a, b)
: Computes the maximum of *a* and *b*.

UINT16_MAX
: Max value of uint16_t type.

UINT32_MAX
: Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(addr, val)
: Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)
: Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)
: Set the bits specifiled by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)
: Clear the bits specifiled by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)
: Toggle the bits specifiled by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)
: For the variable at address *address*, clear the bits specifiled by *clearBits* and set the bits specifiled by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)
: For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)
: For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)
: Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)
: Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)
: Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)
: Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_SIZEALIGN(var, alignbytes)
: Macro to define a variable with L1 d-cache line size alignment

  Macro to define a variable with L2 cache line size alignment

  Macro to change a value to a given size aligned value

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

enum _status_groups

Status group numbers.

Values:

enumerator kStatusGroup_Generic

Group number for generic status codes.

enumerator kStatusGroup_FLASH

Group number for FLASH status codes.

enumerator kStatusGroup_LPSPI

Group number for LPSPI status codes.

enumerator kStatusGroup_FLEXIO_SPI

Group number for FLEXIO SPI status codes.

enumerator kStatusGroup_DSPI

Group number for DSPI status codes.

enumerator kStatusGroup_FLEXIO_UART

Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C

Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C

Group number for LPI2C status codes.

enumerator kStatusGroup_UART

Group number for UART status codes.

enumerator kStatusGroup_I2C

Group number for UART status codes.

enumerator kStatusGroup_LPSCI

Group number for LPSCI status codes.

enumerator kStatusGroup_LPUART

Group number for LPUART status codes.

enumerator kStatusGroup_SPI

Group number for SPI status code.

enumerator kStatusGroup_XRDC

Group number for XRDC status code.

enumerator kStatusGroup_SEMA42

Group number for SEMA42 status code.

enumerator kStatusGroup_SDHC
Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPI
Group number for ECSPI status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup_SFA
Group number for SFA status codes

enumerator kStatusGroup_SPC
Group number for SPC status codes.

enumerator kStatusGroup_PUF
Group number for PUF status codes.

enumerator kStatusGroup_TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup_VBAT
Group number for VBAT status codes

enumerator kStatusGroup_XSPI
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup_HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

enumerator kStatusGroup_OSA
Group number for OSA status codes.

enumerator kStatusGroup_COMMON_TASK
Group number for Common task status codes.

enumerator kStatusGroup_MSG
Group number for messaging status codes.

enumerator kStatusGroup_SDK_OCOTP
Group number for OCOTP status codes.

enumerator kStatusGroup_SDK_FLEXSPINOR
Group number for FLEXSPINOR status codes.

enumerator kStatusGroup_CODEC
Group number for codec status codes.

enumerator kStatusGroup_ASRC
Group number for codec status ASRC.

enumerator kStatusGroup_OTFAD
Group number for codec status codes.

enumerator kStatusGroup_SDIOSLV
Group number for SDIOSLV status codes.

enumerator kStatusGroup_MECC
Group number for MECC status codes.

enumerator kStatusGroup_ENET_QOS
Group number for ENET_QOS status codes.

enumerator kStatusGroup_LOG
Group number for LOG status codes.

enumerator kStatusGroup_I3CBUS
Group number for I3CBUS status codes.

enumerator kStatusGroup_QSCI
Group number for QSCI status codes.

enumerator kStatusGroup_ELEMU
Group number for ELEMU status codes.

enumerator kStatusGroup_QUEUEDSPI
Group number for QSPI status codes.

enumerator kStatusGroup_POWER_MANAGER
Group number for POWER_MANAGER status codes.

enumerator kStatusGroup_IPED
Group number for IPED status codes.

enumerator kStatusGroup_ELS_PKC
Group number for ELS PKC status codes.

enumerator kStatusGroup_CSS_PKC
Group number for CSS PKC status codes.

enumerator kStatusGroup_HOSTIF
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

Generic status return codes.

Values:

enumerator kStatus_Success
Generic status for Success.

enumerator kStatus_Fail
Generic status for Fail.

enumerator kStatus_ReadOnly
Generic status for read only failure.

enumerator kStatus_OutOfRange
Generic status for out of range access.

enumerator kStatus_InvalidArgument
Generic status for invalid argument check.

enumerator kStatus_Timeout

Generic status for timeout.

enumerator kStatus_NoTransferInProgress

Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

static inline *status_t* EnableIRQ(IRQn_Type interrupt)

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt enabled successfully
- kStatus_Fail – Failed to enable the interrupt

static inline *status_t* DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt disabled successfully
- kStatus_Fail – Failed to disable the interrupt

static inline *status_t* EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

static inline bool _SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t newValue)

static inline uint32_t _SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

```
| Unused    || Major Version || Minor Version ||  Bug Fix    |
31       25  24          17  16          9  8           0
```

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)
Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)
Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()
For switch case code block, if case section ends without "break;" statement, there wil be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, "SUPPRESS_FALL_THROUGH_WARNING();" need to be added at the end of each case section which misses "break;"statement.

MSDK_REG_SECURE_ADDR(x)
Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)
Convert the register address to the one used in non-secure mode.

MSDK_INVALID_IRQ_HANDLER
Invalid IRQ handler address.

2.36 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

enum _lpadc_status_flags
Define hardware flags of the module.

Values:

enumerator kLPADC_ResultFIFO0OverflowFlag
Indicates that more data has been written to the Result FIFO 0 than it can hold.

enumerator kLPADC_ResultFIFO0ReadyFlag
Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator kLPADC_TriggerExceptionFlag
Indicates that a trigger exception event has occurred.

enumerator kLPADC_TriggerCompletionFlag
Indicates that a trigger completion event has occurred.

enumerator kLPADC_CalibrationReadyFlag
Indicates that the calibration process is done.

enumerator kLPADC_ActiveFlag
Indicates that the ADC is in active state.

enumerator kLPADC_ResultFIFOOverflowFlag
To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowFlag as instead.

enumerator kLPADC_ResultFIFOReadyFlag
To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0ReadyFlag as instead.

enum _lpadc_interrupt_enable
Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_ResultFIFO0OverflowInterruptEnable

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator kLPADC_FIFO0WatermarkInterruptEnable

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator kLPADC_ResultFIFOOverflowInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowInterruptEnable as instead.

enumerator kLPADC_FIFOWatermarkInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_FIFO0WatermarkInterruptEnable as instead.

enumerator kLPADC_TriggerExceptionInterruptEnable

Configures ADC to generate trigger exception interrupt.

enumerator kLPADC_Trigger0CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kLPADC_Trigger1CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kLPADC_Trigger2CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kLPADC_Trigger3CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 3 completion.

enumerator kLPADC_Trigger4CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 4 completion.

enumerator kLPADC_Trigger5CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 5 completion.

enumerator kLPADC_Trigger6CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 6 completion.

enumerator kLPADC_Trigger7CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 7 completion.

enumerator kLPADC_Trigger8CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 8 completion.

enumerator kLPADC_Trigger9CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 9 completion.

enumerator kLPADC_Trigger10CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 10 completion.

enumerator kLPADC_Trigger11CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 11 completion.

enumerator kLPADC_Trigger12CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 12 completion.

enumerator kLPADC_Trigger13CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 13 completion.

enumerator kLPADC_Trigger14CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 14 completion.

enumerator kLPADC_Trigger15CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 15 completion.

enum _lpadc_trigger_status_flags

The enumerator of lpadc trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_Trigger0InterruptedFlag

Trigger 0 is interrupted by a high priority exception.

enumerator kLPADC_Trigger1InterruptedFlag

Trigger 1 is interrupted by a high priority exception.

enumerator kLPADC_Trigger2InterruptedFlag

Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag

Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag

Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag

Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag

Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag

Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag

Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag

Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag

Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag

Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag

Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag

Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag

Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag

Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag

Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag
Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag
Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag
Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag
Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag
Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag
Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag
Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag
Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag
Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag
Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag
Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag
Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag
Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag
Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag
Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum _lpadc_sample_scale_mode
Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC_SamplePartScale
Use divided input voltage signal. (For scale select,please refer to the reference manual).

enumerator kLPADC_SampleFullScale
Full scale (Factor of 1).

enum _lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC_SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC_SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC_SampleChannelDiffBothSideAB

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDiffBothSideBA

Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC_SampleChannelDiffBothSide

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDualSingleEndBothSide

Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum _lpadc_hardware_average_mode

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC_HardwareAverageCount1

Single conversion.

enumerator kLPADC_HardwareAverageCount2

2 conversions averaged.

enumerator kLPADC_HardwareAverageCount4

4 conversions averaged.

enumerator kLPADC_HardwareAverageCount8

8 conversions averaged.

enumerator kLPADC_HardwareAverageCount16

16 conversions averaged.

enumerator kLPADC_HardwareAverageCount32

32 conversions averaged.

enumerator kLPADC_HardwareAverageCount64

64 conversions averaged.

enumerator kLPADC_HardwareAverageCount128

128 conversions averaged.

enum _lpadc_sample_time_mode

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC_SampleTimeADCK3

3 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK5

5 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK7

7 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK11

11 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK19

19 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK35

35 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK67

69 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK131

131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC_HardwareCompareDisabled

Compare disabled.

enumerator kLPADC_HardwareCompareStoreOnTrue

Compare enabled. Store on true.

enumerator kLPADC_HardwareCompareRepeatUntilTrue

Compare enabled. Repeat channel acquisition until true.

enum _lpadc_conversion_resolution_mode

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

Values:

enumerator kLPADC_ConversionResolutionStandard

Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator kLPADC_ConversionResolutionHigh

High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum _lpadc_conversion_average_mode

Define enumeration of conversion averages mode.

Configure the converion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

Values:

enumerator kLPADC_ConversionAverage1

Single conversion.

enumerator kLPADC_ConversionAverage2

2 conversions averaged.

enumerator kLPADC_ConversionAverage4

4 conversions averaged.

enumerator kLPADC_ConversionAverage8

8 conversions averaged.

enumerator kLPADC_ConversionAverage16

16 conversions averaged.

enumerator kLPADC_ConversionAverage32

32 conversions averaged.

enumerator kLPADC_ConversionAverage64

64 conversions averaged.

enumerator kLPADC_ConversionAverage128

128 conversions averaged.

enum _lpadc_reference_voltage_mode

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

Values:

enumerator kLPADC_ReferenceVoltageAlt1

Option 1 setting.

enumerator kLPADC_ReferenceVoltageAlt2

Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3

Option 3 setting.

enum _lpadc_power_level_mode

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1
Lowest power setting.

enumerator kLPADC_PowerLevelAlt2
Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3
...

enumerator kLPADC_PowerLevelAlt4
Highest power setting.

enum _lpadc_offset_calibration_mode
Define enumeration of offset calibration mode.

Values:

enumerator kLPADC_OffsetCalibration12bitMode
12 bit offset calibration mode.

enumerator kLPADC_OffsetCalibration16bitMode
16 bit offset calibration mode.

enum _lpadc_trigger_priority_policy
Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

Values:

enumerator kLPADC_ConvPreemptImmediatelyNotAutoResumed
If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator kLPADC_ConvPreemptSoftlyNotAutoResumed
If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoRestarted
If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptSoftlyAutoRestarted
If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator kLPADC_ConvPreemptSoftlyAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator kLPADC_TriggerPriorityPreemptImmediately

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityPreemptSoftly

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityExceptionDisabled

High priority trigger exception disabled.

typedef enum *_lpadc_sample_scale_mode* lpadc_sample_scale_mode_t

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum *_lpadc_sample_channel_mode* lpadc_sample_channel_mode_t

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

typedef enum *_lpadc_hardware_average_mode* lpadc_hardware_average_mode_t

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

---

typedef enum *_lpadc_sample_time_mode* lpadc_sample_time_mode_t

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

typedef enum *_lpadc_hardware_compare_mode* lpadc_hardware_compare_mode_t

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally

only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum *_lpadc_conversion_resolution_mode* lpadc_conversion_resolution_mode_t

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

typedef enum *_lpadc_conversion_average_mode* lpadc_conversion_average_mode_t

Define enumeration of conversion averages mode.

Configure the converion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

---

typedef enum *_lpadc_reference_voltage_mode* lpadc_reference_voltage_source_t

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

typedef enum *_lpadc_power_level_mode* lpadc_power_level_mode_t

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

typedef enum *_lpadc_offset_calibration_mode* lpadc_offset_calibration_mode_t

Define enumeration of offset calibration mode.

typedef enum *_lpadc_trigger_priority_policy* lpadc_trigger_priority_policy_t

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: kLPADC_TriggerPriorityPreemptSubsequently is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

---

typedef struct *_lpadc_calibration_value* lpadc_calibration_value_t

A structure of calibration value.

LPADC_CONVERSION_COMPLETE_TIMEOUT

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

LPADC_CALIBRATION_READY_TIMEOUT

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

LPADC_GAIN_CAL_READY_TIMEOUT

Max loops to wait for LPADC gain calibration GAIN_CAL ready.

Before doing calibration, driver will wait for the gain calibration GAIN_CAL ready. This parameter defines how many loops to check the gain calibration GAIN_CAL ready. If defined as 0, driver will wait forever until ready.

ADC_OFSTRIM_OFSTRIM_MAX

ADC_OFSTRIM_OFSTRIM_SIGN

LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)

Define the MACRO function to get command status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)

Define the MACRO function to get trigger status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

void LPADC_Init(ADC_Type *base, const *lpadc_config_t* *config)

Initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.
- config – Pointer to configuration structure. See "lpadc_config_t".

void LPADC_GetDefaultConfig(*lpadc_config_t* *config)

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode        = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay            = 0x80;
config->referenceVoltageSource  = kLPADC_ReferenceVoltageAlt1;
config->powerLevelMode          = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy   = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause         = false;
config->convPauseDelay          = 0U;
config->FIFOWatermark           = 0U;
```

Parameters

- config – Pointer to configuration structure.

void LPADC_Deinit(ADC_Type *base)

De-initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_Enable(ADC_Type *base, bool enable)

Switch on/off the LPADC module.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the module.

static inline void LPADC_DoResetFIFO(ADC_Type *base)

Do reset the conversion FIFO.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_DoResetConfig(ADC_Type *base)

Do reset the module's configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- base – LPADC peripheral base address.

static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)

Get status flags.

Parameters

- base – LPADC peripheral base address.

Returns

status flags' mask. See to _lpadc_status_flags.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)

Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to _lpadc_status_flags.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns

The OR'ed value of _lpadc_trigger_status_flags.

static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of _lpadc_trigger_status_flags.

static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to _lpadc_interrupt_enable.

static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to _lpadc_interrupt_enable.

static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)

Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)

Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns

The count of result kept in conversion FIFO.

bool LPADC_GetConvResult(ADC_Type *base, *lpadc_conv_result_t* *result)

Get the result in conversion FIFO.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns

Status whether FIFO entry is valid.

void LPADC_GetConvResultBlocking(ADC_Type *base, *lpadc_conv_result_t* *result)

Get the result in conversion FIFO using blocking method.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const *lpadc_conv_trigger_config_t* *config)

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- config – Pointer to configuration structure. See to lpadc_conv_trigger_config_t.

void LPADC_GetDefaultConvTriggerConfig(*lpadc_conv_trigger_config_t* *config)

Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId       = 0U;
config->delayPower            = 0U;
config->priority              = 0U;
config->channelAFIFOSelect    = 0U;
```

(continues on next page)

(continued from previous page)

```
config->channelBFIFOSelect     = 0U;
config->enableHardwareTrigger  = false;
```

Parameters

- config – Pointer to configuration structure.

static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)

Do software trigger to conversion command.

Parameters

- base – LPADC peripheral base address.
- triggerIdMask – Mask value for software trigger indexes, which count from zero.

void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const *lpadc_conv_command_config_t* *config)

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.
- commandId – ID for command in command buffer. Typically, the available value range is 1 - 15.
- config – Pointer to configuration structure. See to lpadc_conv_command_config_t.

void LPADC_GetDefaultConvCommandConfig(*lpadc_conv_command_config_t* *config)

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode             = kLPADC_SampleFullScale;
config->channelBScaleMode           = kLPADC_SampleFullScale;
config->sampleChannelMode           = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber               = 0U;
config->channelBNumber              = 0U;
config->chainedNextCommandNumber    = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount                   = 0U;
config->hardwareAverageMode         = kLPADC_HardwareAverageCount1;
config->sampleTimeMode              = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode         = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh    = 0U;
config->hardwareCompareValueLow     = 0U;
config->conversionResolutionMode    = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger           = false;
config->enableChannelB              = false;
```

Parameters

- config – Pointer to configuration structure.

void LPADC_EnableCalibration(ADC_Type *base, bool enable)

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6- bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- base – LPADC peripheral base address.
- value – Setting offset value.

status_t LPADC_DoAutoCalibration(ADC_Type *base)

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional API including: -LPADC_EnableCalibration(...) -LPADC_LPADC_SetOffsetValue(...) -LPADC_SetConvCommandConfig(...) -LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- base – LPADC peripheral base address.
- value – Offset trim value, is a 10-bit signed value between -512 and 511.

static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)

Get trim value of offset.

Parameters

- base – LPADC peripheral base address.
- pValue – Pointer to the variable in type of int16_t to store offset value.

static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)

Enable the offset calibration function.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base, *lpadc_offset_calibration_mode_t* mode)

Set offset calibration mode.

Parameters

- base – LPADC peripheral base address.
- mode – set offset calibration mode.see to lpadc_offset_calibration_mode_t .

status_t LPADC_DoOffsetCalibration(ADC_Type *base)

Do offset calibration.

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_PrepareAutoCalibration(ADC_Type *base)

Prepare auto calibration, LPADC_FinishAutoCalibration has to be called before using the LPADC. LPADC_DoAutoCalibration has been split in two API to avoid to be stuck too long in the function.

Parameters

- base – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, *lpadc_calibration_value_t* *ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure, this memory block should be always powered on even in low power modes.

status_t LPADC_SetCalibrationValue(ADC_Type *base, const *lpadc_calibration_value_t* *ptrCalibrationValue)

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure which contains ADC's calibration value.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

FSL_LPADC_DRIVER_VERSION

LPADC driver version 2.9.3.

struct lpadc_config_t

#include <fsl_lpadc.h> LPADC global configuration.

This structure would used to keep the settings for initialization.

Public Members

bool enableInternalClock

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

bool enableVref1LowVoltage

If voltage reference option1 input is below 1.8V, it should be "true". If voltage reference option1 input is above 1.8V, it should be "false".

bool enableInDozeMode

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

lpadc_conversion_average_mode_t conversionAverageMode

Auto-Calibration Averages.

bool enableAnalogPreliminary

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

uint32_t powerUpDelay

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits to stabilize. The startup delay count of (powerUpDelay * 4) ADCK cycles must result in a longer delay than the analog startup time.

lpadc_reference_voltage_source_t referenceVoltageSource

Selects the voltage reference high used for conversions.

lpadc_power_level_mode_t powerLevelMode

Power Configuration Selection.

lpadc_trigger_priority_policy_t triggerPriorityPolicy

Control how higher priority triggers are handled, see to lpadc_trigger_priority_policy_t.

bool enableConvPause

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

uint32_t convPauseDelay

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (convPauseDelay*4) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

uint32_t FIFOWatermark

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

struct lpadc_conv_command_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion command.

Public Members

lpadc_sample_scale_mode_t sampleScaleMode

Sample scale mode.

lpadc_sample_scale_mode_t channelBScaleMode

Alternate channe B Scale mode.

lpadc_sample_channel_mode_t sampleChannelMode

Channel sample mode.

uint32_t channelNumber

Channel number, select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number, select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the "loopCount" field selects the number of times the selected channel is converted consecutively; when enabled, the "loopCount" field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct lpadc_conv_trigger_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is 2^delayPower ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. THe software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource
: Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex
: Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource
: Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue
: Data result.

struct __lpadc_calibration_value
: *#include <fsl_lpadc.h>* A structure of calibration value.

2.37 LPCMP: Low Power Analog Comparator Driver

void LPCMP_Init(LPCMP_Type *base, const *lpcmp_config_t* *config)
: Initialize the LPCMP.

  This function initializes the LPCMP module. The operations included are:

  - Enabling the clock for LPCMP module.
  - Configuring the comparator.
  - Enabling the LPCMP module. Note: For some devices, multiple LPCMP instance share the same clock gate. In this case, to enable the clock for any instance enables all the LPCMPs. Check the chip reference manual for the clock assignment of the LPCMP.

  Parameters

  - base – LPCMP peripheral base address.
  - config – Pointer to “lpcmp_config_t” structure.

void LPCMP_Deinit(LPCMP_Type *base)
: De-initializes the LPCMP module.

  This function de-initializes the LPCMP module. The operations included are:

  - Disabling the LPCMP module.
  - Disabling the clock for LPCMP module.

  This function disables the clock for the LPCMP. Note: For some devices, multiple LPCMP instance shares the same clock gate. In this case, before disabling the clock for the LPCMP, ensure that all the LPCMP instances are not used.

  Parameters

  - base – LPCMP peripheral base address.

void LPCMP_GetDefaultConfig(*lpcmp_config_t* *config)
: Gets an available pre-defined settings for the comparator’s configuration.

  This function initializes the comparator configuration structure to these default values:

```
config->enableStopMode      = false;
config->enableOutputPin     = false;
config->enableCmpToDacLink  = false;
config->useUnfilteredOutput = false;
config->enableInvertOutput  = false;
config->hysteresisMode      = kLPCMP_HysteresisLevel0;
config->powerMode           = kLPCMP_LowSpeedPowerMode;
config->functionalSourceClock = kLPCMP_FunctionalClockSource0;
config->plusInputSrc        = kLPCMP_PlusInputSrcMux;
config->minusInputSrc       = kLPCMP_MinusInputSrcMux;
```

Parameters

- config – Pointer to "lpcmp_config_t" structure.

static inline void LPCMP_Enable(LPCMP_Type *base, bool enable)

Enable/Disable LPCMP module.

Parameters

- base – LPCMP peripheral base address.
- enable – "true" means enable the module, and "false" means disable the module.

void LPCMP_SetInputChannels(LPCMP_Type *base, uint32_t positiveChannel, uint32_t negativeChannel)

Select the input channels for LPCMP. This function determines which input is selected for the negative and positive mux.

Parameters

- base – LPCMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

static inline void LPCMP_EnableDMA(LPCMP_Type *base, bool enable)

Enables/disables the DMA request for rising/falling events. Normally, the LPCMP generates a CPU interrupt if there is a rising/falling event. When DMA support is enabled and the rising/falling interrupt is enabled , the rising/falling event forces a DMA transfer request rather than a CPU interrupt instead.

Parameters

- base – LPCMP peripheral base address.
- enable – "true" means enable DMA support, and "false" means disable DMA support.

void LPCMP_SetFilterConfig(LPCMP_Type *base, const *lpcmp_filter_config_t* *config)

Configures the filter.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to "lpcmp_filter_config_t" structure.

void LPCMP_SetDACConfig(LPCMP_Type *base, const *lpcmp_dac_config_t* *config)

Configure the internal DAC module.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to "lpcmp_dac_config_t" structure. If config is "NULL", disable internal DAC.

static inline void LPCMP_EnableInterrupts(LPCMP_Type *base, uint32_t mask)

Enable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See "_lpcmp_interrupt_enable".

static inline void LPCMP_DisableInterrupts(LPCMP_Type *base, uint32_t mask)

Disable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See "_lpcmp_interrupt_enable".

static inline uint32_t LPCMP_GetStatusFlags(LPCMP_Type *base)

Get the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.

Returns

Mask value for the asserted flags. See "_lpcmp_status_flags".

static inline void LPCMP_ClearStatusFlags(LPCMP_Type *base, uint32_t mask)

Clear the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for the flags. See "_lpcmp_status_flags".

static inline void LPCMP_EnableWindowMode(LPCMP_Type *base, bool enable)

Enable/Disable window mode.When any windowed mode is active, COUTA is clocked by the bus clock whenever WINDOW = 1. The last latched value is held when WINDOW = 0. The optionally inverted comparator output COUT_RAW is sampled on every bus clock when WINDOW=1 to generate COUTA.

Parameters

- base – LPCMP peripheral base address.
- enable – "true" means enable window mode, and "false" means disable window mode.

void LPCMP_SetWindowControl(LPCMP_Type *base, const *lpcmp_window_control_config_t* *config)

Configure the window control, users can use this API to implement operations on the window, such as inverting the window signal, setting the window closing event(only valid in windowing mode), and setting the COUTA signal after the window is closed(only valid in windowing mode).

Parameters

- base – LPCMP peripheral base address.
- config – Pointer "lpcmp_window_control_config_t" structure.

FSL_LPCMP_DRIVER_VERSION
LPCMP driver version 2.3.2.

enum _lpcmp_status_flags
LPCMP status falgs mask.

Values:

enumerator kLPCMP_OutputRisingEventFlag
Rising-edge on the comparison output has occurred.

enumerator kLPCMP_OutputFallingEventFlag
Falling-edge on the comparison output has occurred.

enumerator kLPCMP_OutputAssertEventFlag
Return the current value of the analog comparator output. The flag does not support W1C.

enum _lpcmp_interrupt_enable
LPCMP interrupt enable/disable mask.

Values:

enumerator kLPCMP_OutputRisingInterruptEnable
Comparator interrupt enable rising.

enumerator kLPCMP_OutputFallingInterruptEnable
Comparator interrupt enable falling.

enum _lpcmp_hysteresis_mode
LPCMP hysteresis mode. See chip data sheet to get the actual hystersis value with each level.

Values:

enumerator kLPCMP_HysteresisLevel0
The hard block output has level 0 hysteresis internally.

enumerator kLPCMP_HysteresisLevel1
The hard block output has level 1 hysteresis internally.

enumerator kLPCMP_HysteresisLevel2
The hard block output has level 2 hysteresis internally.

enumerator kLPCMP_HysteresisLevel3
The hard block output has level 3 hysteresis internally.

enum _lpcmp_power_mode
LPCMP nano mode.

Values:

enumerator kLPCMP_LowSpeedPowerMode
Low speed comparison mode is selected.

enumerator kLPCMP_HighSpeedPowerMode
High speed comparison mode is selected.

enumerator kLPCMP_NanoPowerMode
Nano power comparator is enabled.

enum _lpcmp_dac_reference_voltage_source
Internal DAC reference voltage source.

Values:

enumerator kLPCMP_VrefSourceVin1
vrefh_int is selected as resistor ladder network supply reference Vin.

enumerator kLPCMP_VrefSourceVin2
vrefh_ext is selected as resistor ladder network supply reference Vin.

enum _lpcmp_couta_signal
Set the COUTA signal value when the window is closed.

Values:

enumerator kLPCMP_COUTASignalNoSet
NO set the COUTA signal value when the window is closed.

enumerator kLPCMP_COUTASignalLow
Set COUTA signal low(0) when the window is closed.

enumerator kLPCMP_COUTASignalHigh
Set COUTA signal high(1) when the window is closed.

enum _lpcmp_close_window_event
Set COUT event, which can close the active window in window mode.

Values:

enumerator kLPCMP_CLoseWindowEventNoSet
No Set COUT event, which can close the active window in window mode.

enumerator kLPCMP_CloseWindowEventRisingEdge
Set rising edge COUT signal as COUT event.

enumerator kLPCMP_CloseWindowEventFallingEdge
Set falling edge COUT signal as COUT event.

enumerator kLPCMP_CLoseWindowEventBothEdge
Set both rising and falling edge COUT signal as COUT event.

typedef enum *_lpcmp_hysteresis_mode* lpcmp_hysteresis_mode_t
LPCMP hysteresis mode. See chip data sheet to get the actual hystersis value with each level.

typedef enum *_lpcmp_power_mode* lpcmp_power_mode_t
LPCMP nano mode.

typedef enum *_lpcmp_dac_reference_voltage_source* lpcmp_dac_reference_voltage_source_t
Internal DAC reference voltage source.

typedef enum *_lpcmp_couta_signal* lpcmp_couta_signal_t
Set the COUTA signal value when the window is closed.

typedef enum *_lpcmp_close_window_event* lpcmp_close_window_event_t
Set COUT event, which can close the active window in window mode.

typedef struct *_lpcmp_filter_config* lpcmp_filter_config_t
Configure the filter.

typedef struct *_lpcmp_dac_config* lpcmp_dac_config_t
configure the internal DAC.

typedef struct *_lpcmp_config* lpcmp_config_t
Configures the comparator.

typedef struct *_lpcmp_window_control_config* lpcmp_window_control_config_t
Configure the window mode control.

LPCMP_CCR1_COUTA_CFG_MASK

LPCMP_CCR1_COUTA_CFG_SHIFT

LPCMP_CCR1_COUTA_CFG(x)

LPCMP_CCR1_EVT_SEL_CFG_MASK

LPCMP_CCR1_EVT_SEL_CFG_SHIFT

LPCMP_CCR1_EVT_SEL_CFG(x)

struct _lpcmp_filter_config

#include <fsl_lpcmp.h> Configure the filter.

Public Members

bool enableSample

Decide whether to use the external SAMPLE as a sampling clock input.

uint8_t filterSampleCount

Filter Sample Count. Available range is 1-7; 0 disables the filter.

uint8_t filterSamplePeriod

Filter Sample Period. The divider to the bus clock. Available range is 0-255. The sampling clock must be at least 4 times slower than the system clock to the comparator. So if enableSample is “false”, filterSamplePeriod should be set greater than 4.

struct _lpcmp_dac_config

#include <fsl_lpcmp.h> configure the internal DAC.

Public Members

bool enableLowPowerMode

Decide whether to enable DAC low power mode.

lpcmp_dac_reference_voltage_source_t referenceVoltageSource

Internal DAC supply voltage reference source.

uint8_t DACValue

Value for the DAC Output Voltage. Different devices has different available range, for specific values, please refer to the reference manual.

struct _lpcmp_config

#include <fsl_lpcmp.h> Configures the comparator.

Public Members

bool enableOutputPin

Decide whether to enable the comparator is available in selected pin.

bool useUnfilteredOutput

Decide whether to use unfiltered output.

bool enableInvertOutput

Decide whether to inverts the comparator output.

lpcmp_hysteresis_mode_t hysteresisMode

LPCMP hysteresis mode.

lpcmp_power_mode_t powerMode
LPCMP power mode.

struct _lpcmp_window_control_config
#include <fsl_lpcmp.h> Configure the window mode control.

Public Members

bool enableInvertWindowSignal
True: enable invert window signal, False: disable invert window signal.

lpcmp_couta_signal_t COUTASignal
Decide whether to define the COUTA signal value when the window is closed.

lpcmp_close_window_event_t closeWindowEvent
Decide whether to select COUT event signal edge defines a COUT event to close window.

2.38 LPI2C: Low Power Inter-Integrated Circuit Driver

void LPI2C_DriverIRQHandler(uint32_t instance)
LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- instance – LPI2C instance.

FSL_LPI2C_DRIVER_VERSION
LPI2C driver version.

LPI2C status return codes.

Values:

enumerator kStatus_LPI2C_Busy
The master is already performing a transfer.

enumerator kStatus_LPI2C_Idle
The slave driver is idle.

enumerator kStatus_LPI2C_Nak
The slave device sent a NAK in response to a byte.

enumerator kStatus_LPI2C_FifoError
FIFO under run or overrun.

enumerator kStatus_LPI2C_BitError
Transferred bit was not seen on the bus.

enumerator kStatus_LPI2C_ArbitrationLost
Arbitration lost error.

enumerator kStatus_LPI2C_PinLowTimeout
SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress
Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail

DMA request failed.

enumerator kStatus_LPI2C_Timeout

Timeout polling status flags.

IRQn_Type const kLpi2cIrqs[]

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

lpi2c_master_isr_t s_lpi2cMasterIsr

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

void *s_lpi2cMasterHandle[]

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

uint32_t LPI2C_GetInstance(LPI2C_Type *base)

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

I2C_RETRY_TIMES

Retry times for waiting flag.

2.39 LPI2C Master Driver

void LPI2C_MasterGetDefaultConfig(*lpi2c_master_config_t* *masterConfig)

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster             = true;
masterConfig->debugEnable              = false;
masterConfig->ignoreAck                = false;
masterConfig->pinConfig                = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz              = 100000U;
masterConfig->busIdleTimeout_ns        = 0;
masterConfig->pinLowTimeout_ns         = 0;
masterConfig->sdaGlitchFilterWidth_ns  = 0;
masterConfig->sclGlitchFilterWidth_ns  = 0;
masterConfig->hostRequest.enable       = false;
masterConfig->hostRequest.source       = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity     = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with LPI2C_MasterInit().

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to lpi2c_master_config_t.

void LPI2C_MasterInit(LPI2C_Type *base, const *lpi2c_master_config_t* *masterConfig, uint32_t sourceClock_Hz)

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The LPI2C peripheral base address.
- masterConfig – User provided peripheral configuration. Use LPI2C_MasterGetDefaultConfig() to get a set of defaults that you can override.
- sourceClock_Hz – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

void LPI2C_MasterDeinit(LPI2C_Type *base)

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const *lpi2c_data_match_config_t* *matchConfig)

Configures LPI2C master data match feature.

Parameters

- base – The LPI2C peripheral base address.
- matchConfig – Settings for the data match feature.

status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)

Convert provided flags to status code, and clear any errors if present.

Parameters

- base – The LPI2C peripheral base address.
- status – Current status flags value that will be checked.

Return values

- kStatus_Success –
- kStatus_LPI2C_PinLowTimeout –
- kStatus_LPI2C_ArbitrationLost –
- kStatus_LPI2C_Nak –
- kStatus_LPI2C_FifoError –

status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- base – The LPI2C peripheral base address.

Return values

- kStatus_Success –
- kStatus_LPI2C_Busy –

static inline void LPI2C_MasterReset(LPI2C_Type *base)

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as master.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as master.

static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_lpi2c_master_flags

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

Attempts to clear other flags has no effect.

See also:

_lpi2c_master_flags.

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _lpi2c_master_flags enumerators OR'd together. You may pass the result of a previous call to LPI2C_MasterGetStatusFlags().

static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Enables the LPI2C master interrupt requests.

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _lpi2c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C master interrupt requests.

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _lpi2c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of _lpi2c_master_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)

Enables or disables LPI2C master DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.

static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)

Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)

Gets LPI2C master receive data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)

Sets the watermarks for LPI2C master FIFOs.

Parameters

- base – The LPI2C peripheral base address.
- txWords – Transmit FIFO watermark value in words. The kLPI2C_MasterTxReadyFlag flag is set whenever the number of words in the transmit FIFO is equal or less than *txWords*. Writing a value equal or greater than the FIFO size is truncated.
- rxWords – Receive FIFO watermark value in words. The kLPI2C_MasterRxReadyFlag flag is set whenever the number of words in the receive FIFO is greater than *rxWords*. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- base – The LPI2C peripheral base address.
- txCount – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t baudRate_Hz)

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- base – The LPI2C peripheral base address.
- sourceClock_Hz – LPI2C functional clock frequency in Hertz.
- baudRate_Hz – Requested bus frequency in Hertz.

static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, *lpi2c_direction_t* dir)

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- base – The LPI2C peripheral base address.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kLPI2C_Read or kLPI2C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- kStatus_Success – START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.

static inline *status_t* LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address, *lpi2c_direction_t* dir)

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like LPI2C_MasterStart(), it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- base – The LPI2C peripheral base address.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kLPI2C_Read or kLPI2C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- kStatus_Success – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.

status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns kStatus_LPI2C_Nak.

Parameters

- base – The LPI2C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Return values

- kStatus_Success – Data was sent successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or over run.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterStop(LPI2C_Type *base)

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- base – The LPI2C peripheral base address.

Return values

- kStatus_Success – The STOP signal was successfully sent on the bus and the transaction terminated.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.

- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, *lpi2c_master_transfer_t* *transfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- base – The LPI2C peripheral base address.
- transfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_callback_t* callback, void *userData)

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.

- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

status_t LPI2C_MasterTransferGetCount(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

void LPI2C_MasterTransferAbort(LPI2C_Type *base, *lpi2c_master_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- lpi2cMasterHandle – Pointer to the LPI2C master driver handle.

enum _lpi2c_master_flags

LPI2C master peripheral flags.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag

- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_MasterTxReadyFlag
Transmit data flag

enumerator kLPI2C_MasterRxReadyFlag
Receive data flag

enumerator kLPI2C_MasterEndOfPacketFlag
End Packet flag

enumerator kLPI2C_MasterStopDetectFlag
Stop detect flag

enumerator kLPI2C_MasterNackDetectFlag
NACK detect flag

enumerator kLPI2C_MasterArbitrationLostFlag
Arbitration lost flag

enumerator kLPI2C_MasterFifoErrFlag
FIFO error flag

enumerator kLPI2C_MasterPinLowTimeoutFlag
Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag
Data match flag

enumerator kLPI2C_MasterBusyFlag
Master busy flag

enumerator kLPI2C_MasterBusBusyFlag
Bus busy flag

enumerator kLPI2C_MasterClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags
IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags
Errors to check for.

enum __lpi2c_direction
Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write
Master transmit.

enumerator kLPI2C_Read
Master receive.

enum _lpi2c_master_pin_config
LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain
LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly
LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull
LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull
LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave
LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave
LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave
LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput
LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source
LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin
Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger
Select the input trigger as the host request input

enum _lpi2c_host_request_polarity
LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow
Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh
Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode
LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled
LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1
LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1
LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1
LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1
LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1
LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1
LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum _lpi2c_master_transfer_flags
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the _lpi2c_master_transfer::flags field.

Values:

enumerator kLPI2C_TransferDefaultFlag
Transfer starts with a start signal, stops with a stop signal.

enumerator kLPI2C_TransferNoStartFlag
Don't send a start condition, address, and sub address

enumerator kLPI2C_TransferRepeatedStartFlag
Send a repeated start condition

enumerator kLPI2C_TransferNoStopFlag
Don't send a stop condition.

typedef enum *_lpi2c_direction* lpi2c_direction_t
Direction of master and slave transfers.

typedef enum *_lpi2c_master_pin_config* lpi2c_master_pin_config_t
LPI2C pin configuration.

typedef enum *_lpi2c_host_request_source* lpi2c_host_request_source_t
LPI2C master host request selection.

typedef enum *_lpi2c_host_request_polarity* lpi2c_host_request_polarity_t
LPI2C master host request pin polarity configuration.

typedef struct *_lpi2c_master_config* lpi2c_master_config_t
Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_data_match_config_mode* lpi2c_data_match_config_mode_t
LPI2C master data match configuration modes.

typedef struct *_lpi2c_match_config* lpi2c_data_match_config_t

LPI2C master data match configuration structure.

typedef struct *_lpi2c_master_transfer* lpi2c_master_transfer_t

LPI2C master descriptor of the transfer.

typedef struct *_lpi2c_master_handle* lpi2c_master_handle_t

LPI2C master handle of the transfer.

typedef void (*lpi2c_master_transfer_callback_t)(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *status_t* completionStatus, void *userData)

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterTransferCreateHandle().

Param base
The LPI2C peripheral base address.

Param handle
Pointer to the LPI2C master driver handle.

Param completionStatus
Either kStatus_Success or an error code describing how the transfer completed.

Param userData
Arbitrary pointer-sized value passed from the application.

typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

struct _lpi2c_master_config

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableMaster

Whether to enable master mode.

bool enableDoze

Whether master is enabled in doze mode.

bool debugEnable

Enable transfers to continue when halted in debug mode.

bool ignoreAck

Whether to ignore ACK/NACK.

lpi2c_master_pin_config_t pinConfig

The pin configuration option.

uint32_t baudRate_Hz

Desired baud rate in Hertz.

uint32_t busIdleTimeout_ns
: Bus idle timeout in nanoseconds. Set to 0 to disable.

uint32_t pinLowTimeout_ns
: Pin low timeout in nanoseconds. Set to 0 to disable.

uint8_t sdaGlitchFilterWidth_ns
: Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

uint8_t sclGlitchFilterWidth_ns
: Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

struct *_lpi2c_master_config* hostRequest
: Host request options.

struct _lpi2c_match_config
: *#include <fsl_lpi2c.h>* LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode
: Data match configuration setting.

bool rxDataMatchOnly
: When set to true, received data is ignored until a successful match.

uint32_t match0
: Match value 0.

uint32_t match1
: Match value 1.

struct _lpi2c_master_transfer
: *#include <fsl_lpi2c.h>* Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags
: Bit mask of options for the transfer. See enumeration _lpi2c_master_transfer_flags for available options. Set to 0 or kLPI2C_TransferDefaultFlag for normal transfers.

uint16_t slaveAddress
: The 7-bit slave address.

lpi2c_direction_t direction
: Either kLPI2C_Read or kLPI2C_Write.

uint32_t subaddress
: Sub address. Transferred MSB first.

size_t subaddressSize
: Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data
: Pointer to data to transfer.

size_t dataSize
Number of bytes to transfer.

struct _lpi2c_master_handle
#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state
Transfer state machine current state.

uint16_t remainingBytes
Remaining byte count in current state.

uint8_t *buf
Buffer pointer for current state.

uint16_t commandBuffer[6]
LPI2C command sequence. When all 6 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]

lpi2c_master_transfer_t transfer
Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback
Callback function pointer.

void *userData
Application data passed to callback.

struct hostRequest

Public Members

bool enable
Enable host request.

lpi2c_host_request_source_t source
Host request source.

lpi2c_host_request_polarity_t polarity
Host request pin polarity.

2.40 LPI2C Master DMA Driver

void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *edma_handle_t* *rxDmaHandle, *edma_handle_t* *txDmaHandle, *lpi2c_master_edma_transfer_callback_t* callback, void *userData)

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbortEDMA() API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- rxDmaHandle – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- txDmaHandle – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a DMA transaction currently in progress.

status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_LPI2C_Idle – There is not a DMA transaction currently in progress.

typedef struct *_lpi2c_master_edma_handle* lpi2c_master_edma_handle_t

LPI2C master EDMA handle of the transfer.

typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *status_t* completionStatus, void *userData)

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterCreateEDMAHandle().

Param base
The LPI2C peripheral base address.

Param handle
Handle associated with the completed transfer.

Param completionStatus
Either kStatus_Success or an error code describing how the transfer completed.

Param userData
Arbitrary pointer-sized value passed from the application.

struct _lpi2c_master_edma_handle

#include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base

LPI2C base pointer.

bool isBusy

Transfer state machine current state.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]

LPI2C command sequence. When all 10 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] + receive&Size[4 words]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_edma_transfer_callback_t completionCallback

Callback function pointer.

void *userData
: Application data passed to callback.

edma_handle_t *rx
: Handle for receive DMA channel.

edma_handle_t *tx
: Handle for transmit DMA channel.

edma_tcd_t tcds[3]
: Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.41 LPI2C Slave Driver

void LPI2C_SlaveGetDefaultConfig(*lpi2c_slave_config_t* *slaveConfig)

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave                = true;
slaveConfig->address0                   = 0U;
slaveConfig->address1                   = 0U;
slaveConfig->addressMatchMode           = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable           = true;
slaveConfig->filterEnable               = true;
slaveConfig->enableGeneralCall          = false;
slaveConfig->sclStall.enableAck         = false;
slaveConfig->sclStall.enableTx          = true;
slaveConfig->sclStall.enableRx          = true;
slaveConfig->sclStall.enableAddress     = true;
slaveConfig->ignoreAck                  = false;
slaveConfig->enableReceivedAddressRead  = false;
slaveConfig->sdaGlitchFilterWidth_ns    = 0;
slaveConfig->sclGlitchFilterWidth_ns    = 0;
slaveConfig->dataValidDelay_ns          = 0;
slaveConfig->clockHoldTime_ns           = 0;
```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with LPI2C_SlaveInit(). Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- slaveConfig – **[out]** User provided configuration structure that is set to default values. Refer to lpi2c_slave_config_t.

void LPI2C_SlaveInit(LPI2C_Type *base, const *lpi2c_slave_config_t* *slaveConfig, uint32_t sourceClock_Hz)

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- base – The LPI2C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use LPI2C_SlaveGetDefaultConfig() to get a set of defaults that you can override.

- sourceClock_Hz – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

void LPI2C_SlaveDeinit(LPI2C_Type *base)

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_SlaveReset(LPI2C_Type *base)

Performs a software reset of the LPI2C slave peripheral.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as slave.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as slave.

static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_lpi2c_slave_flags

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

Attempts to clear other flags has no effect.

See also:

_lpi2c_slave_flags.

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _lpi2c_slave_flags enumerators OR'd together. You may pass the result of a previous call to LPI2C_SlaveGetStatusFlags().

static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Enables the LPI2C slave interrupt requests.

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _lpi2c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C slave interrupt requests.

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _lpi2c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of _lpi2c_slave_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the kLPI2C_SlaveTransmitAckFlag is asserted. This only happens if you enable the sclStall.enableAck field of the lpi2c_slave_config_t configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.
- ackOrNack – Pass true for an ACK or false for a NAK.

static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- base – The LPI2C peripheral base address.
- enable – True will enable ACKSTALL,false will disable ACKSTALL.

static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)

Returns the slave address sent by the I2C master.

This function should only be called if the kLPI2C_SlaveAddressValidFlag is asserted.

Parameters

- base – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)

Performs a polling send transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.
- actualTxSize – **[out]**

Returns

Error or success status returned by API.

status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

- actualRxSize – **[out]**

Returns

Error or success status returned by API.

void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, *lpi2c_slave_transfer_callback_t* callback, void *userData)

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C slave driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of lpi2c_slave_transfer_event_t enumerators for the events you wish to receive. The kLPI2C_SlaveTransmitEvent and kLPI2C_SlaveReceiveEvent events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the kLPI2C_SlaveAllEvents constant is provided as a convenient way to enable all events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.
- eventMask – Bit mask formed by OR'ing together lpi2c_slave_transfer_event_t enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and kLPI2C_SlaveAllEvents to enable all events.

Return values

- kStatus_Success – Slave transfers were successfully started.
- kStatus_LPI2C_Busy – Slave transfers have already been started on this handle.

status_t LPI2C_SlaveTransferGetCount(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to i2c_slave_handle_t structure.
- count – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress –

void LPI2C_SlaveTransferAbort(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.

void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.

enum _lpi2c_slave_flags

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_SlaveTxReadyFlag
Transmit data flag

enumerator kLPI2C_SlaveRxReadyFlag
Receive data flag

enumerator kLPI2C_SlaveAddressValidFlag
Address valid flag

enumerator kLPI2C_SlaveTransmitAckFlag
Transmit ACK flag

enumerator kLPI2C_SlaveRepeatedStartDetectFlag
Repeated start detect flag

enumerator kLPI2C_SlaveStopDetectFlag
Stop detect flag

enumerator kLPI2C_SlaveBitErrFlag
Bit error flag

enumerator kLPI2C_SlaveFifoErrFlag
FIFO error flag

enumerator kLPI2C_SlaveAddressMatch0Flag
Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag
Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag
General call flag

enumerator kLPI2C_SlaveBusyFlag
Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag
Bus busy flag

enumerator kLPI2C_SlaveClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags
IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags
Errors to check for.

enum _lpi2c_slave_address_match
LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0
Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1
Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1
Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent

Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent

A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, *lpi2c_slave_transfer_t* *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the LPI2C_SlaveSetCallback() function after you have created a handle.

Param base
Base address for the LPI2C instance on which the event occurred.

Param transfer
Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData
Arbitrary pointer-sized value passed from the application.

struct _lpi2c_slave_config

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableSlave
Enable slave mode.

uint8_t address0
Slave's 7-bit address.

uint8_t address1
Alternate slave 7-bit address.

lpi2c_slave_address_match_t addressMatchMode
Address matching options.

bool filterDozeEnable
Enable digital glitch filter in doze mode.

bool filterEnable
Enable digital glitch filter.

bool enableGeneralCall
Enable general call address matching.

struct *_lpi2c_slave_config* sclStall
SCL stall enable options.

bool ignoreAck
Continue transfers after a NACK is detected.

bool enableReceivedAddressRead
Enable reading the address received address as the first byte of data.

uint32_t sdaGlitchFilterWidth_ns
Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t sclGlitchFilterWidth_ns
: Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t dataValidDelay_ns
: Width in nanoseconds of the data valid delay.

uint32_t clockHoldTime_ns
: Width in nanoseconds of the clock hold time.

struct _lpi2c_slave_transfer

#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t event
: Reason the callback is being invoked.

uint8_t receivedAddress
: Matching address send by master.

uint8_t *data
: Transfer buffer

size_t dataSize
: Transfer size

status_t completionStatus
: Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount
: Number of bytes actually transferred since start or last repeated start.

struct _lpi2c_slave_handle

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer
: LPI2C slave transfer copy.

bool isBusy
: Whether transfer is busy.

bool wasTransmit
: Whether the last transfer was a transmit.

uint32_t eventMask
: Mask of enabled events.

uint32_t transferredCount
: Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback
: Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.42 LPIT: Low-Power Interrupt Timer

enum _lpit_chnl

List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

Values:

enumerator kLPIT_Chnl_0

LPIT channel number 0

enumerator kLPIT_Chnl_1

LPIT channel number 1

enumerator kLPIT_Chnl_2

LPIT channel number 2

enumerator kLPIT_Chnl_3

LPIT channel number 3

enum _lpit_timer_modes

Mode options available for the LPIT timer.

Values:

enumerator kLPIT_PeriodicCounter

Use the all 32-bits, counter loads and decrements to zero

enumerator kLPIT_DualPeriodicCounter

Counter loads, lower 16-bits decrement to zero, then upper 16-bits decrement

enumerator kLPIT_TriggerAccumulator
Counter loads on first trigger and decrements on each trigger

enumerator kLPIT_InputCapture
Counter loads with 0xFFFFFFFF, decrements to zero. It stores the inverse of the current value when a input trigger is detected

enum _lpit_trigger_select
Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

Values:

enumerator kLPIT_Trigger_TimerChn0
Channel 0 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn1
Channel 1 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn2
Channel 2 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn3
Channel 3 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn4
Channel 4 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn5
Channel 5 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn6
Channel 6 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn7
Channel 7 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn8
Channel 8 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn9
Channel 9 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn10
Channel 10 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn11
Channel 11 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn12
Channel 12 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn13
Channel 13 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn14
Channel 14 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn15
Channel 15 is selected as a trigger source

enum _lpit_trigger_source

Trigger source options available.

Values:

enumerator kLPIT_TriggerSource_External

Use external trigger input

enumerator kLPIT_TriggerSource_Internal

Use internal trigger

enum _lpit_interrupt_enable

List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerInterruptEnable

Channel 0 Timer interrupt

enumerator kLPIT_Channel1TimerInterruptEnable

Channel 1 Timer interrupt

enumerator kLPIT_Channel2TimerInterruptEnable

Channel 2 Timer interrupt

enumerator kLPIT_Channel3TimerInterruptEnable

Channel 3 Timer interrupt

enum _lpit_status_flags

List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerFlag

Channel 0 Timer interrupt flag

enumerator kLPIT_Channel1TimerFlag

Channel 1 Timer interrupt flag

enumerator kLPIT_Channel2TimerFlag

Channel 2 Timer interrupt flag

enumerator kLPIT_Channel3TimerFlag

Channel 3 Timer interrupt flag

typedef enum *_lpit_chnl* lpit_chnl_t

List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

typedef enum *_lpit_timer_modes* lpit_timer_modes_t

Mode options available for the LPIT timer.

typedef enum *_lpit_trigger_select* lpit_trigger_select_t

Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

typedef enum *_lpit_trigger_source* lpit_trigger_source_t

Trigger source options available.

typedef enum *_lpit_interrupt_enable* lpit_interrupt_enable_t

List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef enum *_lpit_status_flags* lpit_status_flags_t

List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef struct *_lpit_chnl_params* lpit_chnl_params_t

Structure to configure the channel timer.

typedef struct *_lpit_config* lpit_config_t

LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

FSL_LPIT_DRIVER_VERSION

Version 2.1.2

LPIT_RESET_STATE_DELAY

Delay used in LPIT_Reset.

The macro value should be larger than 4 * core clock / LPIT peripheral clock.

void LPIT_Init(LPIT_Type *base, const *lpit_config_t* *config)

Ungates the LPIT clock and configures the peripheral for a basic operation.

This function issues a software reset to reset all channels and registers except the Module Control register.

Note: This API should be called at the beginning of the application using the LPIT driver.

Parameters

- base – LPIT peripheral base address.
- config – Pointer to the user configuration structure.

void LPIT_Deinit(LPIT_Type *base)

Disables the module and gates the LPIT clock.

Parameters

- base – LPIT peripheral base address.

void LPIT_GetDefaultConfig(*lpit_config_t* *config)

Fills in the LPIT configuration structure with default settings.

The default values are:

```
config->enableRunInDebug = false;
config->enableRunInDoze = false;
```

Parameters

- config – Pointer to the user configuration structure.

status_t LPIT_SetupChannel(LPIT_Type *base, *lpit_chnl_t* channel, const *lpit_chnl_params_t* *chnlSetup)

Sets up an LPIT channel based on the user's preference.

This function sets up the operation mode to one of the options available in the enumeration lpit_timer_modes_t. It sets the trigger source as either internal or external, trigger selection and the timers behaviour when a timeout occurs. It also chains the timer if a prior timer if requested by the user.

Parameters

- base – LPIT peripheral base address.
- channel – Channel that is being configured.
- chnlSetup – Configuration parameters.

static inline void LPIT_EnableInterrupts(LPIT_Type *base, uint32_t mask)

Enables the selected PIT interrupts.

Parameters

- base – LPIT peripheral base address.
- mask – The interrupts to enable. This is a logical OR of members of the enumeration lpit_interrupt_enable_t

static inline void LPIT_DisableInterrupts(LPIT_Type *base, uint32_t mask)

Disables the selected PIT interrupts.

Parameters

- base – LPIT peripheral base address.
- mask – The interrupts to enable. This is a logical OR of members of the enumeration lpit_interrupt_enable_t

static inline uint32_t LPIT_GetEnabledInterrupts(LPIT_Type *base)

Gets the enabled LPIT interrupts.

Parameters

- base – LPIT peripheral base address.

Returns

The enabled interrupts. This is the logical OR of members of the enumeration lpit_interrupt_enable_t

static inline uint32_t LPIT_GetStatusFlags(LPIT_Type *base)

Gets the LPIT status flags.

Parameters

- base – LPIT peripheral base address.

Returns

The status flags. This is the logical OR of members of the enumeration lpit_status_flags_t

static inline void LPIT_ClearStatusFlags(LPIT_Type *base, uint32_t mask)

Clears the LPIT status flags.

Parameters

- base – LPIT peripheral base address.
- mask – The status flags to clear. This is a logical OR of members of the enumeration lpit_status_flags_t

static inline void LPIT_SetTimerPeriod(LPIT_Type *base, *lpit_chnl_t* channel, uint32_t ticks)

Sets the timer period in units of count.

Timers begin counting down from the value set by this function until it reaches 0, at which point it generates an interrupt and loads this register value again. Writing a new value to this register does not restart the timer. Instead, the value is loaded after the timer expires.

Note: User can call the utility macros provided in fsl_common.h to convert to ticks.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.
- ticks – Timer period in units of ticks.

static inline void LPIT_SetTimerValue(LPIT_Type *base, *lpit_chnl_t* channel, uint32_t ticks)

Sets the timer period in units of count.

In the Dual 16-bit Periodic Counter mode, the counter will load and then the lower 16-bits will decrement down to zero, which will assert the output pre-trigger. The upper 16-bits will then decrement down to zero, which will negate the output pre-trigger and set the timer interrupt flag.

Note: Set TVAL register to 0 or 1 is invalid in compare mode.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.
- ticks – Timer period in units of ticks.

static inline uint32_t LPIT_GetCurrentTimerCount(LPIT_Type *base, *lpit_chnl_t* channel)

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in fsl_common.h to convert ticks to microseconds or milliseconds.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

Returns
Current timer counting value in ticks.

static inline void LPIT_StartTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Starts the timer counting.

After calling this function, timers load the period value and count down to 0. When the timer reaches 0, it generates a trigger pulse and sets the timeout interrupt flag.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

static inline void LPIT_StopTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Stops the timer counting.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

static void LPIT_ResetStateDelay(void)

Short wait for LPIT state reset.

After clear or set LPIT_EN, there should be delay longer than 4 LPIT functional clock.

Parameters

- count – Delay count.

static inline void LPIT_Reset(LPIT_Type *base)

Performs a software reset on the LPIT module.

This resets all channels and registers except the Module Control Register.

Parameters

- base – LPIT peripheral base address.

struct __lpit_chnl_params

#include <fsl_lpit.h> Structure to configure the channel timer.

Public Members

bool chainChannel

true: Timer chained to previous timer; false: Timer not chained

lpit_timer_modes_t timerMode

Timers mode of operation.

lpit_trigger_select_t triggerSelect

Trigger selection for the timer

lpit_trigger_source_t triggerSource

Decides if we use external or internal trigger.

bool enableReloadOnTrigger

true: Timer reloads when a trigger is detected; false: No effect

bool enableStopOnTimeout

true: Timer will stop after timeout; false: does not stop after timeout

bool enableStartOnTrigger

true: Timer starts when a trigger is detected; false: decrement immediately

struct _lpit_config

#include <fsl_lpit.h> LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

bool enableRunInDebug

true: Timers run in debug mode; false: Timers stop in debug mode

bool enableRunInDoze

true: Timers run in doze mode; false: Timers stop in doze mode

2.43 LPSPI: Low Power Serial Peripheral Interface

2.44 LPSPI Peripheral driver

void LPSPI_MasterInit(LPSPI_Type *base, const *lpspi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure lpspi_master_config_t.
- srcClock_Hz – Module source input clock in Hertz

void LPSPI_MasterGetDefaultConfig(*lpspi_master_config_t* *masterConfig)

Sets the lpspi_master_config_t structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to lpspi_master_config_t structure

void LPSPI_SlaveInit(LPSPI_Type *base, const *lpspi_slave_config_t* *slaveConfig)

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure lpspi_slave_config_t.

void LPSPI_SlaveGetDefaultConfig(*lpspi_slave_config_t* *slaveConfig)

Sets the lpspi_slave_config_t structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to lpspi_slave_config_t structure.

void LPSPI_Deinit(LPSPI_Type *base)

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

void LPSPI_Reset(LPSPI_Type *base)

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the _lpspi_flags. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag|kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type _lpspi_flags.

static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)

static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_interrupt_enable.

static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_interrupt_enable.

static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_dma_enable.

static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_dma_enable.

static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

bool LPSPI_CheckTransferArgument(LPSPI_Type *base, *lpspi_transfer_t* *transfer, bool isEdma)

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.

- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns
Return true for right and false for wrong.

static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, *lpspi_master_slave_mode_t* mode)

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type lpspi_master_slave_mode_t.

static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, *lpspi_which_pcs_t* select)

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.
- select – LPSPI Peripheral Chip Select (PCS) configuration.

static inline void LPSPI_SetPCSContinous(LPSPI_Type *base, bool IsContinous)

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

static inline bool LPSPI_IsMaster(LPSPI_Type *base)

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns
Returns true if the module is in master mode or false if the module is in slave mode.

static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.
- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum _lpspi_pcs_polarity.

static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPI in slave mode, although the command register does not update until after the LPSPI is enabled. After it is enabled, the transmit command register should only be changed if the LPSPI is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz, uint32_t *tcrPrescaleValue)

Sets the LPSPI baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate

in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale tcrPrescaleValue parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.
- tcrPrescaleValue – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a "0" if the LPSPI is not configured for master mode or if the LPSPI module is not disabled.

void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, *lpspi_delay_type_t* whichDelay)

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type lpspi_delay_type_t.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- scaler – The 8-bit delay value 0x00 to 0xFF (255).
- whichDelay – The desired delay to configure, must be of type lpspi_delay_type_t.

uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec, *lpspi_delay_type_t* whichDelay, uint32_t srcClock_Hz)

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type lpspi_delay_type_t.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler).

Parameters

- base – LPSPI peripheral address.
- delayTimeInNanoSec – The desired delay value in nano-seconds.
- whichDelay – The desired delay to configuration, which must be of type lpspi_delay_type_t.
- srcClock_Hz – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- base – LPSPI peripheral address.
- data – The data word to be sent.

static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The data read from the data buffer.

void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)

Set up the dummy data.

Parameters

- base – LPSPI peripheral address.
- dummyData – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_master_transfer_callback_t* callback, void *userData)

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to lpspi_master_handle_t.

- callback – DSPI callback.
- userData – callback function parameter.

status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, size_t *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of status_t.

void LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.

void LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.

void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *lpspi_slave_transfer_callback_t* callback, void *userData)

Initializes the LPSPI slave handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to lpspi_slave_handle_t.
- callback – DSPI callback.
- userData – callback function parameter.

status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, size_t *count)

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.

- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns
status of status_t.

void LPSPI_SlaveTransferAbort(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.

void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.

bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)

Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns
true for the tx FIFO is ready, false is not.

void LPSPI_DriverIRQHandler(uint32_t instance)

LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

FSL_LPSPI_DRIVER_VERSION

LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator kStatus_LPSPI_Busy
LPSPI transfer is busy.

enumerator kStatus_LPSPI_Error
LPSPI driver error.

enumerator kStatus_LPSPI_Idle
LPSPI is idle.

enumerator kStatus_LPSPI_OutOfRange
LPSPI transfer out Of range.

enumerator kStatus_LPSPI_Timeout
LPSPI timeout polling status flags.

enum _lpspi_flags
LPSPI status flags in SPIx_SR register.

Values:

enumerator kLPSPI_TxDataRequestFlag
Transmit data flag

enumerator kLPSPI_RxDataReadyFlag
Receive data flag

enumerator kLPSPI_WordCompleteFlag
Word Complete flag

enumerator kLPSPI_FrameCompleteFlag
Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag
Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag
Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag
Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag
Data Match flag

enumerator kLPSPI_ModuleBusyFlag
Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable
LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable
LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable
Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable
Receive data DMA enable

enum _lpspi_master_slave_mode
LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master
LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave
LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config
LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0
PCS[0]

enumerator kLPSPI_Pcs1
PCS[1]

enumerator kLPSPI_Pcs2
PCS[2]

enumerator kLPSPI_Pcs3
PCS[3]

enum _lpspi_pcs_polarity_config
LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh
PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow
PCS Active Low (idles high)

enum _lpspi_pcs_polarity
LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow
Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow
Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow
Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow
Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow
Pcs0 to Pcs5 Active Low (idles high).

enum _lpspi_clock_polarity
LPSPI clock polarity configuration.

Values:

enumerator kLPSPI_ClockPolarityActiveHigh
CPOL=0. Active-high LPSPI clock (idles low)

enumerator kLPSPI_ClockPolarityActiveLow
CPOL=1. Active-low LPSPI clock (idles high)

enum _lpspi_clock_phase
LPSPI clock phase configuration.

Values:

enumerator kLPSPI_ClockPhaseFirstEdge
CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator kLPSPI_ClockPhaseSecondEdge
CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum _lpspi_shift_direction
LPSPI data shifter direction options.

Values:

enumerator kLPSPI_MsbFirst
Data transfers start with most significant bit.

enumerator kLPSPI_LsbFirst
Data transfers start with least significant bit.

enum _lpspi_host_request_select
LPSPI Host Request select configuration.

Values:

enumerator kLPSPI_HostReqExtPin
Host Request is an ext pin.

enumerator kLPSPI_HostReqInternalTrigger
Host Request is an internal trigger.

enum _lpspi_match_config
LPSPI Match configuration options.

Values:

enumerator kLPSI_MatchDisabled
LPSPI Match Disabled.

enumerator kLPSI_1stWordEqualsM0orM1
LPSPI Match Enabled.

enumerator kLPSI_AnyWordEqualsM0orM1
LPSPI Match Enabled.

enumerator kLPSI_1stWordEqualsM0and2ndWordEqualsM1
LPSPI Match Enabled.

enumerator kLPSI_AnyWordEqualsM0andNxtWordEqualsM1
LPSPI Match Enabled.

enumerator kLPSI_1stWordAndM1EqualsM0andM1
LPSPI Match Enabled.

enumerator kLPSI_AnyWordAndM1EqualsM0andM1
LPSPI Match Enabled.

enum _lpspi_pin_config
LPSPI pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut
LPSPI SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut
LPSPI SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut
LPSPI SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut
LPSPI SDO input, SDI output.

enum _lpspi_data_out_config
LPSPI data output configuration.

Values:

enumerator kLpspiDataOutRetained
Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate
Data out is tristated when chip select is de-asserted

enum _lpspi_transfer_width
LPSPI transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer
1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer
2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer
4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type

LPSPI delay type selection.

Values:

enumerator kLPSPI_PcsToSck

PCS-to-SCK delay.

enumerator kLPSPI_LastSckToPcs

Last SCK edge to PCS delay.

enumerator kLPSPI_BetweenTransfer

Delay between transfers.

enum _lpspi_transfer_config_flag_for_master

Use this enumeration for LPSPI master transfer configFlags.

Values:

enumerator kLPSPI_MasterPcs0

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS0 signal

enumerator kLPSPI_MasterPcs1

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS1 signal

enumerator kLPSPI_MasterPcs2

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS2 signal

enumerator kLPSPI_MasterPcs3

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS3 signal

enumerator kLPSPI_MasterPcsContinuous

Is PCS signal continuous

enumerator kLPSPI_MasterByteSwap

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

i. If you set bitPerFrame = 8 , no matter the kLPSPI_MasterByteSwapyou flag is used or not, the waveform is 1 2 3 4 5 6 7 8.

ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPI_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_MasterByteSwap flag.

iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPI_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_MasterByteSwap flag.

enum _lpspi_transfer_config_flag_for_slave

Use this enumeration for LPSPI slave transfer configFlags.

Values:

enumerator kLPSPI_SlavePcs0

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS0 signal

enumerator kLPSPI_SlavePcs1

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS1 signal

enumerator kLPSPI_SlavePcs2

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS2 signal

enumerator kLPSPI_SlavePcs3

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS3 signal

enumerator kLPSPI_SlaveByteSwap

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

i. If you set bitPerFrame = 8 , no matter the kLPSPI_SlaveByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.

ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPI_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_SlaveByteSwap flag.

iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPI_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_SlaveByteSwap flag.

enum __lpspi_transfer_state

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator kLPSPI_Idle

Nothing in the transmitter/receiver.

enumerator kLPSPI_Busy

Transfer queue is not finished.

enumerator kLPSPI_Error

Transfer error.

typedef enum *_lpspi_master_slave_mode* lpspi_master_slave_mode_t

LPSPI master or slave mode configuration.

typedef enum *_lpspi_which_pcs_config* lpspi_which_pcs_t

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum *_lpspi_pcs_polarity_config* lpspi_pcs_polarity_config_t

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

typedef enum *_lpspi_clock_polarity* lpspi_clock_polarity_t

LPSPI clock polarity configuration.

typedef enum *_lpspi_clock_phase* lpspi_clock_phase_t

LPSPI clock phase configuration.

typedef enum *_lpspi_shift_direction* lpspi_shift_direction_t

LPSPI data shifter direction options.

typedef enum *_lpspi_host_request_select* lpspi_host_request_select_t

LPSPI Host Request select configuration.

typedef enum *_lpspi_match_config* lpspi_match_config_t

LPSPI Match configuration options.

typedef enum *_lpspi_pin_config* lpspi_pin_config_t

LPSPI pin (SDO and SDI) configuration.

typedef enum *_lpspi_data_out_config* lpspi_data_out_config_t

LPSPI data output configuration.

typedef enum *_lpspi_transfer_width* lpspi_transfer_width_t

LPSPI transfer width configuration.

typedef enum *_lpspi_delay_type* lpspi_delay_type_t

LPSPI delay type selection.

typedef struct *_lpspi_master_config* lpspi_master_config_t

LPSPI master configuration structure.

typedef struct *_lpspi_slave_config* lpspi_slave_config_t

LPSPI slave configuration structure.

typedef struct *_lpspi_master_handle* lpspi_master_handle_t

Forward declaration of the _lpspi_master_handle typedefs.

typedef struct *_lpspi_slave_handle* lpspi_slave_handle_t

Forward declaration of the _lpspi_slave_handle typedefs.

typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *status_t* status, void *userData)

Master completion callback function pointer type.

Param base
LPSPI peripheral address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer is completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *status_t* status, void *userData)

Slave completion callback function pointer type.

Param base
LPSPI peripheral address.

Param handle
Pointer to the handle for the LPSPI slave.

Param status
Success or error code describing whether the transfer is completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef struct *_lpspi_transfer* lpspi_transfer_t

LPSPI master/slave transfer structure.

volatile uint8_t g_lpspiDummyData[]

Global variable for dummy data value setting.

LPSPI_DUMMY_DATA

LPSPI dummy data if no Tx data.

Dummy data used for tx if there is not txData.

SPI_RETRY_TIMES

Retry times for waiting flag.

LPSPI_MASTER_PCS_SHIFT

LPSPI master PCS shift macro , internal used.

LPSPI_MASTER_PCS_MASK
: LPSPI master PCS shift macro , internal used.

LPSPI_SLAVE_PCS_SHIFT
: LPSPI slave PCS shift macro , internal used.

LPSPI_SLAVE_PCS_MASK
: LPSPI slave PCS shift macro , internal used.

struct _lpspi_master_config
: *#include <fsl_lpspi.h>* LPSPI master configuration structure.

Public Members

uint32_t baudRate
: Baud Rate for LPSPI.

uint32_t bitsPerFrame
: Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol
: Clock polarity.

lpspi_clock_phase_t cpha
: Clock phase.

lpspi_shift_direction_t direction
: MSB or LSB data shift direction.

uint32_t pcsToSckDelayInNanoSec
: PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t lastSckToPcsDelayInNanoSec
: Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec
: After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

lpspi_which_pcs_t whichPcs
: Desired Peripheral Chip Select (PCS).

lpspi_pcs_polarity_config_t pcsActiveHighOrLow
: Desired PCS active high or low

lpspi_pin_config_t pinCfg
: Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig
: Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

bool enableInputDelay
: Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

struct _lpspi_slave_config
: *#include <fsl_lpspi.h>* LPSPI slave configuration structure.

Public Members

uint32_t bitsPerFrame
: Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol
: Clock polarity.

lpspi_clock_phase_t cpha
: Clock phase.

lpspi_shift_direction_t direction
: MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs
: Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow
: Desired PCS active high or low

lpspi_pin_config_t pinCfg
: Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig
: Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct __lpspi__transfer
: *#include <fsl_lpspi.h>* LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData
: Send buffer.

uint8_t *rxData
: Receive buffer.

volatile size_t dataSize
: Transfer bytes.

uint32_t configFlags
: Transfer transfer configuration flags. Set from _lpspi_transfer_config_flag_for_master if the transfer is used for master or _lpspi_transfer_config_flag_for_slave enumeration if the transfer is used for slave.

struct __lpspi__master__handle
: *#include <fsl_lpspi.h>* LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous
: Is PCS continuous in transfer.

volatile bool writeTcrInIsr
: A flag that whether should write TCR in ISR.

volatile bool isByteSwap
: A flag that whether should byte swap.

volatile bool isTxMask
A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame
Number of bytes in each frame

volatile uint16_t frameSize
Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize
FIFO dataSize.

volatile uint8_t rxWatermark
Rx watermark.

volatile uint8_t bytesEachWrite
Bytes for each write TDR.

volatile uint8_t bytesEachRead
Bytes for each read RDR.

const uint8_t *volatile txData
Send buffer.

uint8_t *volatile rxData
Receive buffer.

volatile size_t txRemainingByteCount
Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
Read RDR register remaining times.

uint32_t totalByteCount
Number of transfer bytes

uint32_t txBuffIfNull
Used if the txData is NULL.

volatile uint8_t state
LPSPI transfer state , _lpspi_transfer_state.

lpspi_master_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

struct __lpspi_slave_handle
#include <fsl_lpspi.h> LPSPI slave transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap
A flag that whether should byte swap.

volatile uint8_t fifoSize
: FIFO dataSize.

volatile uint8_t rxWatermark
: Rx watermark.

volatile uint8_t bytesEachWrite
: Bytes for each write TDR.

volatile uint8_t bytesEachRead
: Bytes for each read RDR.

const uint8_t *volatile txData
: Send buffer.

uint8_t *volatile rxData
: Receive buffer.

volatile size_t txRemainingByteCount
: Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
: Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

volatile uint8_t state
: LPSPI transfer state , _lpspi_transfer_state.

volatile uint32_t errorCount
: Error count for slave transfer.

lpspi_slave_transfer_callback_t callback
: Completion callback.

void *userData
: Callback user data.

2.45 LPSPI eDMA Driver

FSL_LPSPI_EDMA_DRIVER_VERSION
: LPSPI EDMA driver version.

DMA_MAX_TRANSFER_COUNT
: DMA max transfer size.

typedef struct *_lpspi_master_edma_handle* lpspi_master_edma_handle_t
: Forward declaration of the _lpspi_master_edma_handle typedefs.

typedef struct *_lpspi_slave_edma_handle* lpspi_slave_edma_handle_t
: Forward declaration of the _lpspi_slave_edma_handle typedefs.

typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *status_t* status, void *userData)

Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *status_t* status, void *userData)

Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI slave.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

void LPSPI_MasterTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_master_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI master eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that the LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for edmaRxRegToRxDataHandle.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to lpspi_master_edma_handle_t.
- callback – LPSPI callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

status_t LPSPI_MasterTransferEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, uint32_t configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- configFlags – transfer configuration flags. _lpspi_transfer_config_flag_for_master.

Return values

- kStatus_Success – Execution successfully.
- kStatus_LPSPI_Busy – The LPSPI device is busy.

Returns

Indicates whether LPSPI master transfer was successful or not.

status_t LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.

- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure, config field is not uesed.

Return values

- kStatus_Success – Execution successfully.
- kStatus_LPSPI_Busy – The LPSPI device is busy.
- kStatus_InvalidArgument – The transfer structure is invalid.

Returns

Indicates whether LPSPI master transfer was successful or not.

void LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, size_t *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns

status of status_t.

void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_slave_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for edmaRxRegToRxDataHandle .

Parameters

- base – LPSPI peripheral base address.

- handle – LPSPI handle pointer to lpspi_slave_edma_handle_t.
- callback – LPSPI callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_slave_edma_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle)

LPSPI slave aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_slave_edma_handle_t structure which stores the transfer state.

status_t LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, size_t *count)

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_slave_edma_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the eDMA transaction.

Returns

status of status_t.

struct __lpspi_master_edma_handle

#include <fsl_lpspi_edma.h> LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous
: Is PCS continuous in transfer.

volatile bool isByteSwap
: A flag that whether should byte swap.

volatile uint8_t fifoSize
: FIFO dataSize.

volatile uint8_t rxWatermark
: Rx watermark.

volatile uint8_t bytesEachWrite
: Bytes for each write TDR.

volatile uint8_t bytesEachRead
: Bytes for each read RDR.

volatile uint8_t bytesLastRead
: Bytes for last read RDR.

volatile bool isThereExtraRxBytes
: Is there extra RX byte.

const uint8_t *volatile txData
: Send buffer.

uint8_t *volatile rxData
: Receive buffer.

volatile size_t txRemainingByteCount
: Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
: Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

edma_tcd_t *lastTimeTCD
: Pointer to the lastTime TCD

bool isMultiDMATransmit
: Is there multi DMA transmit

volatile uint8_t dmaTransmitTime
: DMA Transfer times.

uint32_t lastTimeDataBytes
: DMA transmit last Time data Bytes

uint32_t dataBytesEveryTime
: Bytes in a time for DMA transfer, default is DMA_MAX_TRANSFER_COUNT

edma_transfer_config_t transferConfigRx
: Config of DMA rx channel.

edma_transfer_config_t transferConfigTx
: Config of DMA tx channel.

uint32_t txBuffIfNull
: Used if there is not txData for DMA purpose.

uint32_t rxBuffIfNull
: Used if there is not rxData for DMA purpose.

uint32_t transmitCommand
: Used to write TCR for DMA purpose.

volatile uint8_t state
: LPSPI transfer state , _lpspi_transfer_state.

uint8_t nbytes
: eDMA minor byte transfer count initially configured.

lpspi_master_edma_transfer_callback_t callback
: Completion callback.

void *userData
: Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
: edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
: edma_handle_t handle point used for TxData to TxReg buff

edma_tcd_t lpspiSoftwareTCD[3]
: SoftwareTCD, internal used

struct __lpspi_slave_edma_handle
: *#include <fsl_lpspi_edma.h>* LPSPI slave eDMA transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap
: A flag that whether should byte swap.

volatile uint8_t fifoSize
: FIFO dataSize.

volatile uint8_t rxWatermark
: Rx watermark.

volatile uint8_t bytesEachWrite
: Bytes for each write TDR.

volatile uint8_t bytesEachRead
: Bytes for each read RDR.

volatile uint8_t bytesLastRead
: Bytes for last read RDR.

volatile bool isThereExtraRxBytes
: Is there extra RX byte.

uint8_t nbytes
: eDMA minor byte transfer count initially configured.

const uint8_t *volatile txData
: Send buffer.

uint8_t *volatile rxData
: Receive buffer.

volatile size_t txRemainingByteCount
: Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
: Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

uint32_t txBuffIfNull
: Used if there is not txData for DMA purpose.

uint32_t rxBuffIfNull
: Used if there is not rxData for DMA purpose.

volatile uint8_t state
: LPSPI transfer state.

uint32_t errorCount
: Error count for slave transfer.

lpspi_slave_edma_transfer_callback_t callback
: Completion callback.

void *userData
: Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
: edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
: edma_handle_t handle point used for TxData to TxReg

edma_tcd_t lpspiSoftwareTCD[2]
: SoftwareTCD, internal used

2.46 LPTMR: Low-Power Timer

void LPTMR_Init(LPTMR_Type *base, const *lptmr_config_t* *config)

Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

void LPTMR_Deinit(LPTMR_Type *base)

Gates the LPTMR clock.

Parameters

- base – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration lptmr_interrupt_enable_t

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration lptmr_interrupt_enable_t.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration lptmr_interrupt_enable_t

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration lptmr_status_flags_t

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration lptmr_status_flags_t.

static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

a. The TCF flag is set with the CNR equals the count provided here and then increments.

b. Call the utility macros provided in the fsl_common.h to convert to ticks.

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

static inline void LPTMR_StartTimer(LPTMR_Type *base)

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

static inline void LPTMR_StopTimer(LPTMR_Type *base)

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

FSL_LPTMR_DRIVER_VERSION

Driver Version

enum _lptmr_pin_select

LPTMR pin selection used in pulse counter mode.

Values:

enumerator kLPTMR_PinSelectInput_0

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1

Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2

Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3

Pulse counter input 3 is selected

enum _lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh

Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow

Pulse Counter input source is active-low

enum _lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter

Pulse Counter mode

enum _lptmr_prescaler_glitch_value

LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0

Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1

Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2

Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3
Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4
Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5
Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6
Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7
Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8
Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum _lptmr_interrupt_enable
List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable
Timer interrupt enable

enum _lptmr_status_flags
List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag
Timer compare flag

typedef enum *_lptmr_pin_select* lptmr_pin_select_t
LPTMR pin selection used in pulse counter mode.

typedef enum *_lptmr_pin_polarity* lptmr_pin_polarity_t
LPTMR pin polarity used in pulse counter mode.

typedef enum *_lptmr_timer_mode* lptmr_timer_mode_t
LPTMR timer mode selection.

typedef enum *_lptmr_prescaler_glitch_value* lptmr_prescaler_glitch_value_t
LPTMR prescaler/glitch filter values.

typedef enum *_lptmr_prescaler_clock_select* lptmr_prescaler_clock_select_t
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

---

typedef enum *_lptmr_interrupt_enable* lptmr_interrupt_enable_t
List of the LPTMR interrupts.

typedef enum *_lptmr_status_flags* lptmr_status_flags_t
List of the LPTMR status flags.

typedef struct *_lptmr_config* lptmr_config_t
LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)
Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address
- enable – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

struct _lptmr_config
#include <fsl_lptmr.h> LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

lptmr_timer_mode_t timerMode
Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect
LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity
LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning
: True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler
: True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource
: LPTMR clock source

lptmr_prescaler_glitch_value_t value
: Prescaler or glitch filter value

2.47 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.48 LPUART Driver

static inline void LPUART_SoftwareReset(LPUART_Type *base)
: Resets the LPUART using software.

  This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

  Parameters

  - base – LPUART peripheral base address.

status_t LPUART_Init(LPUART_Type *base, const *lpuart_config_t* *config, uint32_t srcClock_Hz)
: Initializes an LPUART instance with the user configuration structure and the peripheral clock.

  This function configures the LPUART module with user-defined settings. Call the LPUART_GetDefaultConfig() function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

  Parameters

  - base – LPUART peripheral base address.
  - config – Pointer to a user-defined configuration structure.
  - srcClock_Hz – LPUART clock source frequency in HZ.

  Return values

  - kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
  - kStatus_Success – LPUART initialize succeed

status_t LPUART_Deinit(LPUART_Type *base)

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

Return values

- kStatus_Success – Deinit is success.
- kStatus_LPUART_Timeout – Timeout during deinit.

void LPUART_GetDefaultConfig(*lpuart_config_t* *config)

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: lpuartConfig->baudRate_Bps = 115200U; lpuartConfig->parityMode = kLPUART_ParityDisabled; lpuartConfig->dataBitsCount = kLPUART_EightDataBits; lpuartConfig->isMsb = false; lpuartConfig->stopBitCount = kLPUART_OneStopBit; lpuartConfig->txFifoWatermark = 0; lpuartConfig->rxFifoWatermark = 1; lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit; lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1; lpuartConfig->enableTx = false; lpuartConfig->enableRx = false;

Parameters

- config – Pointer to a configuration structure.

status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not supported in the current clock source.
- kStatus_Success – Set baudrate succeeded.

void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – LPUART peripheral base address.
- enable – true to enable, flase to disable.

static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receices with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer, otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

static inline void LPUART_TransferEnable16Bit(*lpuart_handle_t* *handle, bool enable)

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in lpuart_handle_t.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

uint32_t LPUART_GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators _lpuart_flags. To check for a specific status, compare the return value with enumerators in the _lpuart_flags. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
   ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the _lpuart_flags.

status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only cleared or set by hardware are: kLPUART_TxDataRegEmptyFlag, kLPUART_TransmissionCompleteFlag, kLPUART_RxDataRegFullFlag, kLPUART_RxActiveFlag, kLPUART_NoiseErrorFlag, kLPUART_ParityErrorFlag, kLPUART_TxFifoEmptyFlag,kLPUART_RxFifoEmptyFlag Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the _lpuart_status_flag_t to do the OR operation and get the mask.

Return values

- kStatus_LPUART_FlagCannotClearManually – The flag can't be cleared by this function but it is cleared automatically by hardware.
- kStatus_Success – Status in the mask are cleared.

Returns

0 succeed, others failed.

void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the _lpuart_interrupt_enable. This examples shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1,kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↪RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of _lpuart_interrupt_enable.

void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See _lpuart_interrupt_enable. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1,kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↪RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of _lpuart_interrupt_enable.

uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators _lpuart_interrupt_enable. To check a specific interrupt enable status, compare the return value with enumerators in _lpuart_interrupt_enable. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in _lpuart_interrupt_enable.

static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, STAT[TDRE], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

uint32_t LPUART_GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

static inline uint8_t LPUART_ReadByte(LPUART_Type *base)

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

void LPUART_SendAddress(LPUART_Type *base, uint8_t address)

Transmit an address frame in 9-bit data mode.

Parameters

- base – LPUART peripheral base address.
- address – LPUART slave address.

status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the dat to be sent out to the bus.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.
- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.
- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

void LPUART_TransferCreateHandle(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_callback_t* callback, void *userData)

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the "background" receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn't call the LPUART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- callback – Callback function.
- userData – User data.

status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer)

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferStartRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle, uint8_t *ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

void LPUART_TransferStopRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, *lpuart_handle_t* *handle)

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

void LPUART_TransferAbortSend(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBtyes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetSendCount(LPUART_Type *base, *lpuart_handle_t* *handle, uint32_t *count)

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer, size_t *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter receivedBytes shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter kStatus_UART_RxIdle. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to xfer->data, which returns with the parameter receivedBytes set to 5. For the remaining 5 bytes, the newly arrived data is saved from xfer->data[5]. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to xfer->data. When all data is received, the upper layer is notified.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see uart_transfer_t.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- kStatus_Success – Successfully queue the transfer into the transmit queue.
- kStatus_LPUART_RxBusy – Previous receive request is not finished.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferAbortReceive(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the remainBytes to find out how many bytes not received yet.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, *lpuart_handle_t* *handle, uint32_t *count)

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_DriverIRQHandler(uint32_t instance)

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- instance – LPUART instance.

FSL_LPUART_DRIVER_VERSION

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator kStatus_LPUART_TxBusy

TX busy

enumerator kStatus_LPUART_RxBusy

RX busy

enumerator kStatus_LPUART_TxIdle

LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle

LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge

TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge

RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun
LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError
LPUART noise error.

enumerator kStatus_LPUART_FramingError
LPUART framing error.

enumerator kStatus_LPUART_ParityError
LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport
Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected
IDLE flag.

enumerator kStatus_LPUART_Timeout
LPUART times out.

enum _lpuart_parity_mode
LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled
Parity disabled

enumerator kLPUART_ParityEven
Parity enabled, type even, bit setting: PE|PT = 10

enumerator kLPUART_ParityOdd
Parity enabled, type odd, bit setting: PE|PT = 11

enum _lpuart_data_bits
LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits
Eight data bit

enumerator kLPUART_SevenDataBits
Seven data bit

enum _lpuart_stop_bit_count
LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit
One stop bit

enumerator kLPUART_TwoStopBit
Two stop bits

enum _lpuart_transmit_cts_source
LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin
CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult
CTS resource is the match result.

enum _lpuart_transmit_cts_config
LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart
CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle
CTS input is sampled when the transmitter is idle

enum _lpuart_idle_type_select
LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit
Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit
Start counting after a stop bit.

enum _lpuart_idle_config
LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1
the number of idle characters.

enumerator kLPUART_IdleCharacter2
the number of idle characters.

enumerator kLPUART_IdleCharacter4
the number of idle characters.

enumerator kLPUART_IdleCharacter8
the number of idle characters.

enumerator kLPUART_IdleCharacter16
the number of idle characters.

enumerator kLPUART_IdleCharacter32
the number of idle characters.

enumerator kLPUART_IdleCharacter64
the number of idle characters.

enumerator kLPUART_IdleCharacter128
the number of idle characters.

enum _lpuart_interrupt_enable
LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable
Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable
Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags
LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag
Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag
Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag
Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag
Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag
Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag
Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag
Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag
If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag
LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag
Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag
Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag
The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag
The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag
TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag
RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag
TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag
RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t
LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t
LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t
LPUART stop bit count.

typedef enum *_lpuart_transmit_cts_source* lpuart_transmit_cts_source_t
LPUART transmit CTS source.

typedef enum *_lpuart_transmit_cts_config* lpuart_transmit_cts_config_t
LPUART transmit CTS configure.

typedef enum *_lpuart_idle_type_select* lpuart_idle_type_select_t
LPUART idle flag type defines when the receiver starts counting.

typedef enum *_lpuart_idle_config* lpuart_idle_config_t
LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

typedef struct *_lpuart_config* lpuart_config_t
LPUART configuration structure.

typedef struct *_lpuart_transfer* lpuart_transfer_t
LPUART transfer structure.

typedef struct *_lpuart_handle* lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, *lpuart_handle_t* *handle, *status_t* status, void *userData)
LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES
Retry times for waiting flag.

struct _lpuart_config
#include <fsl_lpuart.h> LPUART configuration structure.

Public Members

uint32_t baudRate_Bps
LPUART baud rate

lpuart_parity_mode_t parityMode
Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount
Data bits count, eight (default), seven

bool isMsb
Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount
Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark
TX FIFO watermark

uint8_t rxFifoWatermark
RX FIFO watermark

bool enableRxRTS
RX RTS enable

bool enableTxCTS
TX CTS enable

lpuart_transmit_cts_source_t txCtsSource
TX CTS source

lpuart_transmit_cts_config_t txCtsConfig
TX CTS configure

lpuart_idle_type_select_t rxIdleType
RX IDLE type.

lpuart_idle_config_t rxIdleConfig
RX IDLE configuration.

bool enableTx
Enable TX

bool enableRx
Enable RX

struct __lpuart_transfer
#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize
The byte count to be transfer.

struct __lpuart_handle
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize
Size of the remaining data to send.

size_t txDataSizeAll
Size of the data to send out.

volatile size_t rxDataSize
Size of the remaining data to receive.

size_t rxDataSizeAll
Size of the data to receive.

size_t rxRingBufferSize
Size of the ring buffer.

volatile uint16_t rxRingBufferHead
Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail
Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback
Callback function.

void *userData
LPUART callback function parameter.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state.

bool isSevenDataBits
Seven data bits flag.

bool is16bitData
16bit data bits flag, only used for 9bit or 10bit data

union ___unnamed58___

Public Members

uint8_t *data
The buffer of data to be transfer.

uint8_t *rxData
The buffer to receive data.

uint16_t *rxData16
The buffer to receive data.

const uint8_t *txData
The buffer of data to be sent.

const uint16_t *txData16
The buffer of data to be sent.

union ___unnamed60___

Public Members

const uint8_t *volatile txData
Address of remaining data to send.

const uint16_t *volatile txData16
Address of remaining data to send.

union ___unnamed62___

Public Members

uint8_t *volatile rxData
Address of remaining data to receive.

uint16_t *volatile rxData16
Address of remaining data to receive.

union ___unnamed64___

Public Members

uint8_t *rxRingBuffer
Start address of the receiver ring buffer.

uint16_t *rxRingBuffer16
Start address of the receiver ring buffer.

2.49 LPUART eDMA Driver

void LPUART_TransferCreateHandleEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *txEdmaHandle, *edma_handle_t* *rxEdmaHandle)

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- callback – Callback function.
- userData – User data.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

status_t LPUART_SendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See lpuart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

status_t LPUART_ReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- xfer – LPUART eDMA transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – if succeed, others fail.
- kStatus_LPUART_RxBusy – Previous transfer ongoing.

- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferAbortSendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.

void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.

status_t LPUART_TransferGetSendCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferGetReceiveCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)

LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartEdmaHandle – LPUART handle pointer.

FSL_LPUART_EDMA_DRIVER_VERSION

LPUART EDMA driver version.

typedef struct *_lpuart_edma_handle* lpuart_edma_handle_t

typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *status_t* status, void *userData)

LPUART transfer callback function.

struct _lpuart_edma_handle

#include <fsl_lpuart_edma.h> LPUART eDMA handle.

Public Members

lpuart_edma_transfer_callback_t callback

Callback function.

void *userData

LPUART callback function parameter.

size_t rxDataSizeAll

Size of the data to receive.

size_t txDataSizeAll

Size of the data to send out.

edma_handle_t *txEdmaHandle

The eDMA TX channel used.

edma_handle_t *rxEdmaHandle

The eDMA RX channel used.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

2.50 LTC: LP Trusted Cryptography

FSL_LTC_DRIVER_VERSION

LTC driver version. Version 2.0.17.

Current version: 2.0.17

Change log:

- Version 2.0.1
  - fixed warning during g++ compilation
- Version 2.0.2
  - fixed [KPSDK-10932][LTC][SHA] LTC_HASH() blocks indefinitely when message size exceeds 4080 bytes
- Version 2.0.3
  - fixed LTC_PKHA_CompareBigNum() in case an integer argument is an array of all zeroes
- Version 2.0.4
  - constant LTC_PKHA_CompareBigNum() processing time
- Version 2.0.5
  - Fix MISRA issues
- Version 2.0.6
  - fixed [KPSDK-23603][LTC] AES Decrypt in ECB and CBC modes fail when ciphertext size > 0xff0 bytes
- Version 2.0.7
  - Fix MISRA-2012 issues
- Version 2.0.8
  - Fix Coverity issues
- Version 2.0.9
  - Fix sign-compare warning in ltc_set_context and in ltc_get_context
- Version 2.0.10
  - Fix MISRA-2012 issues
- Version 2.0.11
  - Fix MISRA-2012 issues
- Version 2.0.12
  - Fix AES Decrypt in CBC modes fail when used kLTC_DecryptKey.
- Version 2.0.13
  - Add feature macro FSL_FEATURE_LTC_HAS_NO_CLOCK_CONTROL_BIT into LTC_Init function.
- Version 2.0.14
  - Add feature macro FSL_FEATURE_LTC_HAS_NO_CLOCK_CONTROL_BIT into LTC_Deinit function.
- Version 2.0.15
  - Fix MISRA-2012 issues

- Version 2.0.16
  - Fix unitialized GCC warning in LTC_AES_GenerateDecryptKey()
- Version 2.0.17
  - Fix CMAC for payloads over one block, and if BRIC is present on the device, remove XCBC and “decrypt key” functionality

void LTC_Init(LTC_Type *base)

Initializes the LTC driver. This function initializes the LTC driver.

Parameters

- base – LTC peripheral base address

void LTC_Deinit(LTC_Type *base)

Deinitializes the LTC driver. This function deinitializes the LTC driver.

Parameters

- base – LTC peripheral base address

void LTC_SetDpaMaskSeed(LTC_Type *base, uint32_t mask)

Sets the DPA Mask Seed register.

The DPA Mask Seed register reseeds the mask that provides resistance against DPA (differential power analysis) attacks on AES or DES keys.

Differential Power Analysis Mask (DPA) resistance uses a randomly changing mask that introduces “noise” into the power consumed by the AES or DES. This reduces the signal-to-noise ratio that differential power analysis attacks use to “guess” bits of the key. This randomly changing mask should be seeded at POR, and continues to provide DPA resistance from that point on. However, to provide even more DPA protection it is recommended that the DPA mask be reseeded after every 50,000 blocks have been processed. At that time, software can opt to write a new seed (preferably obtained from an RNG) into the DPA Mask Seed register (DPAMS), or software can opt to provide the new seed earlier or later, or not at all. DPA resistance continues even if the DPA mask is never reseeded.

Parameters

- base – LTC peripheral base address
- mask – The DPA mask seed.

2.51 LTC AES driver

enum __ltc_aes_key_t

Type of AES key for ECB and CBC decrypt operations.

Values:

enumerator kLTC_EncryptKey

Input key is an encrypt key

typedef enum *_ltc_aes_key_t* ltc_aes_key_t

Type of AES key for ECB and CBC decrypt operations.

status_t LTC_AES_EncryptEcb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t *key, uint32_t keySize)

Encrypts AES using the ECB block mode.

Encrypts AES using the ECB block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plain text to encrypt
- ciphertext – **[out]** Output cipher text
- size – Size of input and output data in bytes. Must be multiple of 16 bytes.
- key – Input key to use for encryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.

Returns
Status from encrypt operation

status_t LTC_AES_DecryptEcb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t *key, uint32_t keySize, *ltc_aes_key_t* keyType)

Decrypts AES using ECB block mode.

Decrypts AES using ECB block mode.

Parameters

- base – LTC peripheral base address
- ciphertext – Input cipher text to decrypt
- plaintext – **[out]** Output plain text
- size – Size of input and output data in bytes. Must be multiple of 16 bytes.
- key – Input key.
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- keyType – Input type of the key (allows to directly load decrypt key for AES ECB decrypt operation.)

Returns
Status from decrypt operation

status_t LTC_AES_EncryptCbc(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[16], const uint8_t *key, uint32_t keySize)

Encrypts AES using CBC block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plain text to encrypt
- ciphertext – **[out]** Output cipher text
- size – Size of input and output data in bytes. Must be multiple of 16 bytes.
- iv – Input initial vector to combine with the first input block.
- key – Input key to use for encryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.

Returns
Status from encrypt operation

status_t LTC_AES_DecryptCbc(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[16], const uint8_t *key, uint32_t keySize, *ltc_aes_key_t* keyType)

Decrypts AES using CBC block mode.

Parameters

- base – LTC peripheral base address
- ciphertext – Input cipher text to decrypt
- plaintext – **[out]** Output plain text
- size – Size of input and output data in bytes. Must be multiple of 16 bytes.
- iv – Input initial vector to combine with the first input block.
- key – Input key to use for decryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- keyType – Input type of the key (allows to directly load decrypt key for AES CBC decrypt operation.)

Returns

Status from decrypt operation

status_t LTC_AES_CryptCtr(LTC_Type *base, const uint8_t *input, uint8_t *output, uint32_t size, uint8_t counter[16U], const uint8_t *key, uint32_t keySize, uint8_t counterlast[16U], uint32_t *szLeft)

Encrypts or decrypts AES using CTR block mode.

Encrypts or decrypts AES using CTR block mode. AES CTR mode uses only forward AES cipher and same algorithm for encryption and decryption. The only difference between encryption and decryption is that, for encryption, the input argument is plain text and the output argument is cipher text. For decryption, the input argument is cipher text and the output argument is plain text.

Parameters

- base – LTC peripheral base address
- input – Input data for CTR block mode
- output – **[out]** Output data for CTR block mode
- size – Size of input and output data in bytes
- counter – **[inout]** Input counter (updates on return)
- key – Input key to use for forward AES cipher
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- counterlast – **[out]** Output cipher of last counter, for chained CTR calls. NULL can be passed if chained calls are not used.
- szLeft – **[out]** Output number of bytes in left unused in counterlast block. NULL can be passed if chained calls are not used.

Returns

Status from encrypt operation

status_t LTC_AES_EncryptTagGcm(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t *iv, uint32_t ivSize, const uint8_t *aad, uint32_t aadSize, const uint8_t *key, uint32_t keySize, uint8_t *tag, uint32_t tagSize)

Encrypts AES and tags using GCM block mode.

Encrypts AES and optionally tags using GCM block mode. If plaintext is NULL, only the GHASH is calculated and output in the 'tag' field.

Parameters

- base – LTC peripheral base address
- plaintext – Input plain text to encrypt

- ciphertext – **[out]** Output cipher text.
- size – Size of input and output data in bytes
- iv – Input initial vector
- ivSize – Size of the IV
- aad – Input additional authentication data
- aadSize – Input size in bytes of AAD
- key – Input key to use for encryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- tag – **[out]** Output hash tag. Set to NULL to skip tag processing.
- tagSize – Input size of the tag to generate, in bytes. Must be 4,8,12,13,14,15 or 16.

Returns

Status from encrypt operation

status_t LTC_AES_DecryptTagGcm(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t *iv, uint32_t ivSize, const uint8_t *aad, uint32_t aadSize, const uint8_t *key, uint32_t keySize, const uint8_t *tag, uint32_t tagSize)

Decrypts AES and authenticates using GCM block mode.

Decrypts AES and optionally authenticates using GCM block mode. If ciphertext is NULL, only the GHASH is calculated and compared with the received GHASH in 'tag' field.

Parameters

- base – LTC peripheral base address
- ciphertext – Input cipher text to decrypt
- plaintext – **[out]** Output plain text.
- size – Size of input and output data in bytes
- iv – Input initial vector
- ivSize – Size of the IV
- aad – Input additional authentication data
- aadSize – Input size in bytes of AAD
- key – Input key to use for encryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- tag – Input hash tag to compare. Set to NULL to skip tag processing.
- tagSize – Input size of the tag, in bytes. Must be 4, 8, 12, 13, 14, 15, or 16.

Returns

Status from decrypt operation

status_t LTC_AES_EncryptTagCcm(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t *iv, uint32_t ivSize, const uint8_t *aad, uint32_t aadSize, const uint8_t *key, uint32_t keySize, uint8_t *tag, uint32_t tagSize)

Encrypts AES and tags using CCM block mode.

Encrypts AES and optionally tags using CCM block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plain text to encrypt
- ciphertext – **[out]** Output cipher text.
- size – Size of input and output data in bytes. Zero means authentication only.
- iv – Nonce
- ivSize – Length of the Nonce in bytes. Must be 7, 8, 9, 10, 11, 12, or 13.
- aad – Input additional authentication data. Can be NULL if aadSize is zero.
- aadSize – Input size in bytes of AAD. Zero means data mode only (authentication skipped).
- key – Input key to use for encryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- tag – **[out]** Generated output tag. Set to NULL to skip tag processing.
- tagSize – Input size of the tag to generate, in bytes. Must be 4, 6, 8, 10, 12, 14, or 16.

Returns

Status from encrypt operation

status_t LTC_AES_DecryptTagCcm(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t *iv, uint32_t ivSize, const uint8_t *aad, uint32_t aadSize, const uint8_t *key, uint32_t keySize, const uint8_t *tag, uint32_t tagSize)

Decrypts AES and authenticates using CCM block mode.

Decrypts AES and optionally authenticates using CCM block mode.

Parameters

- base – LTC peripheral base address
- ciphertext – Input cipher text to decrypt
- plaintext – **[out]** Output plain text.
- size – Size of input and output data in bytes. Zero means authentication only.
- iv – Nonce
- ivSize – Length of the Nonce in bytes. Must be 7, 8, 9, 10, 11, 12, or 13.
- aad – Input additional authentication data. Can be NULL if aadSize is zero.
- aadSize – Input size in bytes of AAD. Zero means data mode only (authentication skipped).
- key – Input key to use for decryption
- keySize – Size of the input key, in bytes. Must be 16, 24, or 32.
- tag – Received tag. Set to NULL to skip tag processing.
- tagSize – Input size of the received tag to compare with the computed tag, in bytes. Must be 4, 6, 8, 10, 12, 14, or 16.

Returns

Status from decrypt operation

LTC_AES_BLOCK_SIZE
AES block size in bytes

LTC_AES_IV_SIZE
AES Input Vector size in bytes

LTC_KEY_REGISTER_READABLE

LTC_AES_DecryptCtr(base, input, output, size, counter, key, keySize, counterlast, szLeft)
AES CTR decrypt is mapped to the AES CTR generic operation

LTC_AES_EncryptCtr(base, input, output, size, counter, key, keySize, counterlast, szLeft)
AES CTR encrypt is mapped to the AES CTR generic operation

2.52 LTC DES driver

status_t LTC_DES_EncryptEcb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t key[8])

Encrypts DES using ECB block mode.

Encrypts DES using ECB block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- key – Input key to use for encryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_DecryptEcb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t key[8])

Decrypts DES using ECB block mode.

Decrypts DES using ECB block mode.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- key – Input key to use for decryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_EncryptCbc(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key[8])

Encrypts DES using CBC block mode.

Encrypts DES using CBC block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Ouput ciphertext
- size – Size of input and output data in bytes
- iv – Input initial vector to combine with the first plaintext block. The iv does not need to be secret, but it must be unpredictable.
- key – Input key to use for encryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_DecryptCbc(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key[8])

Decrypts DES using CBC block mode.

Decrypts DES using CBC block mode.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input data in bytes
- iv – Input initial vector to combine with the first plaintext block. The iv does not need to be secret, but it must be unpredictable.
- key – Input key to use for decryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_EncryptCfb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key[8])

Encrypts DES using CFB block mode.

Encrypts DES using CFB block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- size – Size of input data in bytes
- iv – Input initial block.
- key – Input key to use for encryption
- ciphertext – **[out]** Output ciphertext

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_DecryptCfb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key[8])

Decrypts DES using CFB block mode.

Decrypts DES using CFB block mode.

Parameters

- base – LTC peripheral base address

- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes
- iv – Input initial block.
- key – Input key to use for decryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_EncryptOfb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key[8])

Encrypts DES using OFB block mode.

Encrypts DES using OFB block mode.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes
- iv – Input unique input vector. The OFB mode requires that the IV be unique for each execution of the mode under the given key.
- key – Input key to use for encryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES_DecryptOfb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key[8])

Decrypts DES using OFB block mode.

Decrypts DES using OFB block mode.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- iv – Input unique input vector. The OFB mode requires that the IV be unique for each execution of the mode under the given key.
- key – Input key to use for decryption

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_EncryptEcb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t key1[8], const uint8_t key2[8])

Encrypts triple DES using ECB block mode with two keys.

Encrypts triple DES using ECB block mode with two keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt

- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_DecryptEcb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t key1[8], const uint8_t key2[8])

Decrypts triple DES using ECB block mode with two keys.

Decrypts triple DES using ECB block mode with two keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_EncryptCbc(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8])

Encrypts triple DES using CBC block mode with two keys.

Encrypts triple DES using CBC block mode with two keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes
- iv – Input initial vector to combine with the first plaintext block. The iv does not need to be secret, but it must be unpredictable.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_DecryptCbc(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8])

Decrypts triple DES using CBC block mode with two keys.

Decrypts triple DES using CBC block mode with two keys.

Parameters

- base – LTC peripheral base address

- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes
- iv – Input initial vector to combine with the first plaintext block. The iv does not need to be secret, but it must be unpredictable.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_EncryptCfb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8])

Encrypts triple DES using CFB block mode with two keys.

Encrypts triple DES using CFB block mode with two keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes
- iv – Input initial block.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_DecryptCfb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8])

Decrypts triple DES using CFB block mode with two keys.

Decrypts triple DES using CFB block mode with two keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes
- iv – Input initial block.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES2_EncryptOfb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8])

Encrypts triple DES using OFB block mode with two keys.

Encrypts triple DES using OFB block mode with two keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes
- iv – Input unique input vector. The OFB mode requires that the IV be unique for each execution of the mode under the given key.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns

Status from encrypt/decrypt operation

status_t LTC_DES2_DecryptOfb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8])

Decrypts triple DES using OFB block mode with two keys.

Decrypts triple DES using OFB block mode with two keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes
- iv – Input unique input vector. The OFB mode requires that the IV be unique for each execution of the mode under the given key.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

Returns

Status from encrypt/decrypt operation

status_t LTC_DES3_EncryptEcb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Encrypts triple DES using ECB block mode with three keys.

Encrypts triple DES using ECB block mode with three keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle

- key3 – Third input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES3_DecryptEcb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Decrypts triple DES using ECB block mode with three keys.

Decrypts triple DES using ECB block mode with three keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes. Must be multiple of 8 bytes.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES3_EncryptCbc(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Encrypts triple DES using CBC block mode with three keys.

Encrypts triple DES using CBC block mode with three keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input data in bytes
- iv – Input initial vector to combine with the first plaintext block. The iv does not need to be secret, but it must be unpredictable.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES3_DecryptCbc(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Decrypts triple DES using CBC block mode with three keys.

Decrypts triple DES using CBC block mode with three keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt

- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes
- iv – Input initial vector to combine with the first plaintext block. The iv does not need to be secret, but it must be unpredictable.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES3_EncryptCfb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Encrypts triple DES using CFB block mode with three keys.

Encrypts triple DES using CFB block mode with three keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and ouput data in bytes
- iv – Input initial block.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES3_DecryptCfb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Decrypts triple DES using CFB block mode with three keys.

Decrypts triple DES using CFB block mode with three keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input data in bytes
- iv – Input initial block.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns
Status from encrypt/decrypt operation

status_t LTC_DES3_EncryptOfb(LTC_Type *base, const uint8_t *plaintext, uint8_t *ciphertext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Encrypts triple DES using OFB block mode with three keys.

Encrypts triple DES using OFB block mode with three keys.

Parameters

- base – LTC peripheral base address
- plaintext – Input plaintext to encrypt
- ciphertext – **[out]** Output ciphertext
- size – Size of input and output data in bytes
- iv – Input unique input vector. The OFB mode requires that the IV be unique for each execution of the mode under the given key.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns

Status from encrypt/decrypt operation

status_t LTC_DES3_DecryptOfb(LTC_Type *base, const uint8_t *ciphertext, uint8_t *plaintext, uint32_t size, const uint8_t iv[8], const uint8_t key1[8], const uint8_t key2[8], const uint8_t key3[8])

Decrypts triple DES using OFB block mode with three keys.

Decrypts triple DES using OFB block mode with three keys.

Parameters

- base – LTC peripheral base address
- ciphertext – Input ciphertext to decrypt
- plaintext – **[out]** Output plaintext
- size – Size of input and output data in bytes
- iv – Input unique input vector. The OFB mode requires that the IV be unique for each execution of the mode under the given key.
- key1 – First input key for key bundle
- key2 – Second input key for key bundle
- key3 – Third input key for key bundle

Returns

Status from encrypt/decrypt operation

LTC_DES_KEY_SIZE

LTC DES key size - 64 bits.

LTC_DES_IV_SIZE

LTC DES IV size - 8 bytes.

2.53 LTC HASH driver

enum _ltc_hash_algo_t

Supported cryptographic block cipher functions for HASH creation

Values:

enumerator kLTC_Cmac

CMAC (AES engine)

enumerator kLTC_Sha1

SHA_1 (MDHA engine)

enumerator kLTC_Sha224

SHA_224 (MDHA engine)

enumerator kLTC_Sha256

SHA_256 (MDHA engine)

typedef enum *_ltc_hash_algo_t* ltc_hash_algo_t

Supported cryptographic block cipher functions for HASH creation

typedef struct *_ltc_hash_ctx_t* ltc_hash_ctx_t

Storage type used to save hash context.

status_t LTC_HASH_Init(LTC_Type *base, *ltc_hash_ctx_t* *ctx, *ltc_hash_algo_t* algo, const uint8_t *key, uint32_t keySize)

Initialize HASH context.

This function initialize the HASH. Key shall be supplied if the underlaying algoritm is AES XCBC-MAC or CMAC. Key shall be NULL if the underlaying algoritm is SHA.

For XCBC-MAC, the key length must be 16. For CMAC, the key length can be the AES key lengths supported by AES engine. For MDHA the key length argument is ignored.

Parameters

- base – LTC peripheral base address
- ctx – **[out]** Output hash context
- algo – Underlaying algorithm to use for hash computation.
- key – Input key (NULL if underlaying algorithm is SHA)
- keySize – Size of input key in bytes

Returns

Status of initialization

status_t LTC_HASH_Update(*ltc_hash_ctx_t* *ctx, const uint8_t *input, uint32_t inputSize)

Add data to current HASH.

Add data to current HASH. This can be called repeatedly with an arbitrary amount of data to be hashed.

Parameters

- ctx – **[inout]** HASH context
- input – Input data
- inputSize – Size of input data in bytes

Returns

Status of the hash update operation

status_t LTC_HASH_Finish(*ltc_hash_ctx_t* *ctx, uint8_t *output, uint32_t *outputSize)

Finalize hashing.

Outputs the final hash and erases the context.

Parameters

- ctx – **[inout]** Input hash context
- output – **[out]** Output hash data
- outputSize – **[out]** Output parameter storing the size of the output hash in bytes

Returns

Status of the hash finish operation

status_t LTC_HASH(LTC_Type *base, *ltc_hash_algo_t* algo, const uint8_t *input, uint32_t inputSize, const uint8_t *key, uint32_t keySize, uint8_t *output, uint32_t *outputSize)

Create HASH on given data.

Perform the full keyed HASH in one function call.

Parameters

- base – LTC peripheral base address
- algo – Block cipher algorithm to use for CMAC creation
- input – Input data
- inputSize – Size of input data in bytes
- key – Input key
- keySize – Size of input key in bytes
- output – **[out]** Output hash data
- outputSize – **[out]** Output parameter storing the size of the output hash in bytes

Returns

Status of the one call hash operation.

LTC_HASH_CTX_SIZE

LTC HASH Context size.

struct _ltc_hash_ctx_t

#include <fsl_ltc.h> Storage type used to save hash context.

2.54 LTC PKHA driver

enum _ltc_pkha_timing_t

Use of timing equalized version of a PKHA function.

Values:

enumerator kLTC_PKHA_NoTimingEqualized

Normal version of a PKHA operation

enumerator kLTC_PKHA_TimingEqualized

Timing-equalized version of a PKHA operation

enum _ltc_pkha_f2m_t

Integer vs binary polynomial arithmetic selection.

Values:

enumerator kLTC_PKHA_IntegerArith

Use integer arithmetic

enumerator kLTC_PKHA_F2mArith

Use binary polynomial arithmetic

enum _ltc_pkha_montgomery_form_t

Montgomery or normal PKHA input format.

Values:

enumerator kLTC_PKHA_NormalValue

PKHA number is normal integer

enumerator kLTC_PKHA_MontgomeryFormat

PKHA number is in montgomery format

typedef struct *_ltc_pkha_ecc_point_t* ltc_pkha_ecc_point_t

PKHA ECC point structure

typedef enum *_ltc_pkha_timing_t* ltc_pkha_timing_t

Use of timing equalized version of a PKHA function.

typedef enum *_ltc_pkha_f2m_t* ltc_pkha_f2m_t

Integer vs binary polynomial arithmetic selection.

typedef enum *_ltc_pkha_montgomery_form_t* ltc_pkha_montgomery_form_t

Montgomery or normal PKHA input format.

int LTC_PKHA_CompareBigNum(const uint8_t *a, size_t sizeA, const uint8_t *b, size_t sizeB)

Compare two PKHA big numbers.

Compare two PKHA big numbers. Return 1 for a > b, -1 for a < b and 0 if they are same. PKHA big number is lsbyte first. Thus the comparison starts at msbyte which is the last member of tested arrays.

Parameters

- a – First integer represented as an array of bytes, lsbyte first.
- sizeA – Size in bytes of the first integer.
- b – Second integer represented as an array of bytes, lsbyte first.
- sizeB – Size in bytes of the second integer.

Returns

1 if a > b.

Returns

-1 if a < b.

Returns

0 if a = b.

status_t LTC_PKHA_NormalToMontgomery(LTC_Type *base, const uint8_t *N, uint16_t sizeN, uint8_t *A, uint16_t *sizeA, uint8_t *B, uint16_t *sizeB, uint8_t *R2, uint16_t *sizeR2, *ltc_pkha_timing_t* equalTime, *ltc_pkha_f2m_t* arithType)

Converts from integer to Montgomery format.

This function computes R2 mod N and optionally converts A or B into Montgomery format of A or B.

Parameters

- base – LTC peripheral base address
- N – modulus
- sizeN – size of N in bytes
- A – **[inout]** The first input in non-Montgomery format. Output Montgomery format of the first input.
- sizeA – **[inout]** pointer to size variable. On input it holds size of input A in bytes. On output it holds size of Montgomery format of A in bytes.
- B – **[inout]** Second input in non-Montgomery format. Output Montgomery format of the second input.
- sizeB – **[inout]** pointer to size variable. On input it holds size of input B in bytes. On output it holds size of Montgomery format of B in bytes.
- R2 – **[out]** Output Montgomery factor R2 mod N.
- sizeR2 – **[out]** pointer to size variable. On output it holds size of Montgomery factor R2 mod N in bytes.
- equalTime – Run the function time equalized or no timing equalization.
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

status_t LTC_PKHA_MontgomeryToNormal(LTC_Type *base, const uint8_t *N, uint16_t sizeN, uint8_t *A, uint16_t *sizeA, uint8_t *B, uint16_t *sizeB, *ltc_pkha_timing_t* equalTime, *ltc_pkha_f2m_t* arithType)

Converts from Montgomery format to int.

This function converts Montgomery format of A or B into int A or B.

Parameters

- base – LTC peripheral base address
- N – modulus.
- sizeN – size of N modulus in bytes.
- A – **[inout]** Input first number in Montgomery format. Output is non-Montgomery format.
- sizeA – **[inout]** pointer to size variable. On input it holds size of the input A in bytes. On output it holds size of non-Montgomery A in bytes.
- B – **[inout]** Input first number in Montgomery format. Output is non-Montgomery format.
- sizeB – **[inout]** pointer to size variable. On input it holds size of the input B in bytes. On output it holds size of non-Montgomery B in bytes.
- equalTime – Run the function time equalized or no timing equalization.
- arithType – Type of arithmetic to perform (integer or F2m)

Returns
Operation status.

status_t LTC_PKHA_ModAdd(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *B, uint16_t sizeB, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType)

Performs modular addition - (A + B) mod N.

This function performs modular addition of (A + B) mod N, with either integer or binary polynomial (F2m) inputs. In the F2m form, this function is equivalent to a bitwise XOR and it is functionally the same as subtraction.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- B – second addend (integer or binary polynomial)
- sizeB – Size of B in bytes
- N – modulus. For F2m operation this can be NULL, as N is ignored during F2m polynomial addition.
- sizeN – Size of N in bytes. This must be given for both integer and F2m polynomial additions.
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns
Operation status.

status_t LTC_PKHA_ModSub1(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *B, uint16_t sizeB, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize)

Performs modular subtraction - (A - B) mod N.

This function performs modular subtraction of (A - B) mod N with integer inputs.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- B – second addend (integer or binary polynomial)
- sizeB – Size of B in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes

Returns
Operation status.

status_t LTC_PKHA_ModSub2(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *B, uint16_t sizeB, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize)

Performs modular subtraction - (B - A) mod N.

This function performs modular subtraction of (B - A) mod N, with integer inputs.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- B – second addend (integer or binary polynomial)
- sizeB – Size of B in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes

Returns

Operation status.

status_t LTC_PKHA_ModMul(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *B, uint16_t sizeB, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType, *ltc_pkha_montgomery_form_t* montIn, *ltc_pkha_montgomery_form_t* montOut, *ltc_pkha_timing_t* equalTime)

Performs modular multiplication - (A x B) mod N.

This function performs modular multiplication with either integer or binary polynomial (F2m) inputs. It can optionally specify whether inputs and/or outputs will be in Montgomery form or not.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- B – second addend (integer or binary polynomial)
- sizeB – Size of B in bytes
- N – modulus.
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)
- montIn – Format of inputs
- montOut – Format of output
- equalTime – Run the function time equalized or no timing equalization. This argument is ignored for F2m modular multiplication.

Returns
Operation status.

status_t LTC_PKHA_ModExp(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *N, uint16_t sizeN, const uint8_t *E, uint16_t sizeE, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType, *ltc_pkha_montgomery_form_t* montIn, *ltc_pkha_timing_t* equalTime)

Performs modular exponentiation - (A^E) mod N.

This function performs modular exponentiation with either integer or binary polynomial (F2m) inputs.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- E – exponent
- sizeE – Size of E in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- montIn – Format of A input (normal or Montgomery)
- arithType – Type of arithmetic to perform (integer or F2m)
- equalTime – Run the function time equalized or no timing equalization.

Returns
Operation status.

status_t LTC_PKHA_ModRed(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType)

Performs modular reduction - (A) mod N.

This function performs modular reduction with either integer or binary polynomial (F2m) inputs.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns
Operation status.

status_t LTC_PKHA_ModInv(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType)

Performs modular inversion - (A^-1) mod N.

This function performs modular inversion with either integer or binary polynomial (F2m) inputs.

Parameters

- base – LTC peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

status_t LTC_PKHA_ModR2(LTC_Type *base, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType)

Computes integer Montgomery factor R^2 mod N.

This function computes a constant to assist in converting operands into the Montgomery residue system representation.

Parameters

- base – LTC peripheral base address
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

status_t LTC_PKHA_GCD(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *N, uint16_t sizeN, uint8_t *result, uint16_t *resultSize, *ltc_pkha_f2m_t* arithType)

Calculates the greatest common divisor - GCD (A, N).

This function calculates the greatest common divisor of two inputs with either integer or binary polynomial (F2m) inputs.

Parameters

- base – LTC peripheral base address
- A – first value (must be smaller than or equal to N)
- sizeA – Size of A in bytes
- N – second value (must be non-zero)
- sizeN – Size of N in bytes

- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns
Operation status.

status_t LTC_PKHA_PrimalityTest(LTC_Type *base, const uint8_t *A, uint16_t sizeA, const uint8_t *B, uint16_t sizeB, const uint8_t *N, uint16_t sizeN, bool *res)

Executes Miller-Rabin primality test.

This function calculates whether or not a candidate prime number is likely to be a prime.

Parameters

- base – LTC peripheral base address
- A – initial random seed
- sizeA – Size of A in bytes
- B – number of trial runs
- sizeB – Size of B in bytes
- N – candidate prime integer
- sizeN – Size of N in bytes
- res – **[out]** True if the value is likely prime or false otherwise

Returns
Operation status.

status_t LTC_PKHA_ECC_PointAdd(LTC_Type *base, const *ltc_pkha_ecc_point_t* *A, const *ltc_pkha_ecc_point_t* *B, const uint8_t *N, const uint8_t *R2modN, const uint8_t *aCurveParam, const uint8_t *bCurveParam, uint8_t size, *ltc_pkha_f2m_t* arithType, *ltc_pkha_ecc_point_t* *result)

Adds elliptic curve points - A + B.

This function performs ECC point addition over a prime field (Fp) or binary field (F2m) using affine coordinates.

Parameters

- base – LTC peripheral base address
- A – Left-hand point
- B – Right-hand point
- N – Prime modulus of the field
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from LTC_PKHA_ModR2() function).
- aCurveParam – A parameter from curve equation
- bCurveParam – B parameter from curve equation (constant)
- size – Size in bytes of curve points and parameters
- arithType – Type of arithmetic to perform (integer or F2m)
- result – **[out]** Result point

Returns
Operation status.

status_t LTC_PKHA_ECC_PointDouble(LTC_Type *base, const *ltc_pkha_ecc_point_t* *B, const uint8_t *N, const uint8_t *aCurveParam, const uint8_t *bCurveParam, uint8_t size, *ltc_pkha_f2m_t* arithType, *ltc_pkha_ecc_point_t* *result)

Doubles elliptic curve points - B + B.

This function performs ECC point doubling over a prime field (Fp) or binary field (F2m) using affine coordinates.

Parameters

- base – LTC peripheral base address
- B – Point to double
- N – Prime modulus of the field
- aCurveParam – A parameter from curve equation
- bCurveParam – B parameter from curve equation (constant)
- size – Size in bytes of curve points and parameters
- arithType – Type of arithmetic to perform (integer or F2m)
- result – **[out]** Result point

Returns

Operation status.

status_t LTC_PKHA_ECC_PointMul(LTC_Type *base, const *ltc_pkha_ecc_point_t* *A, const uint8_t *E, uint8_t sizeE, const uint8_t *N, const uint8_t *R2modN, const uint8_t *aCurveParam, const uint8_t *bCurveParam, uint8_t size, *ltc_pkha_timing_t* equalTime, *ltc_pkha_f2m_t* arithType, *ltc_pkha_ecc_point_t* *result, bool *infinity)

Multiplies an elliptic curve point by a scalar - E x (A0, A1).

This function performs ECC point multiplication to multiply an ECC point by a scalar integer multiplier over a prime field (Fp) or a binary field (F2m).

Parameters

- base – LTC peripheral base address
- A – Point as multiplicand
- E – Scalar multiple
- sizeE – The size of E, in bytes
- N – Modulus, a prime number for the Fp field or Irreducible polynomial for F2m field.
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from LTC_PKHA_ModR2() function).
- aCurveParam – A parameter from curve equation
- bCurveParam – B parameter from curve equation (C parameter for operation over F2m).
- size – Size in bytes of curve points and parameters
- equalTime – Run the function time equalized or no timing equalization.
- arithType – Type of arithmetic to perform (integer or F2m)
- result – **[out]** Result point

- infinity – **[out]** Output true if the result is point of infinity, and false otherwise. Writing of this output will be ignored if the argument is NULL.

Returns
Operation status.

struct __ltc__pkha__ecc__point__t
#include <fsl_ltc.h> PKHA ECC point structure

Public Members

uint8_t *X
X coordinate (affine)

uint8_t *Y
Y coordinate (affine)

2.55 LTC Blocking APIs

2.56 MCM: Miscellaneous Control Module

FSL__MCM__DRIVER__VERSION
MCM driver version.

Enum _mcm_interrupt_flag. Interrupt status flag mask. .

Values:

enumerator kMCM__CacheWriteBuffer
Cache Write Buffer Error Enable.

enumerator kMCM__ParityError
Cache Parity Error Enable.

enumerator kMCM__FPUInvalidOperation
FPU Invalid Operation Interrupt Enable.

enumerator kMCM__FPUDivideByZero
FPU Divide-by-zero Interrupt Enable.

enumerator kMCM__FPUOverflow
FPU Overflow Interrupt Enable.

enumerator kMCM__FPUUnderflow
FPU Underflow Interrupt Enable.

enumerator kMCM__FPUInexact
FPU Inexact Interrupt Enable.

enumerator kMCM__FPUInputDenormalInterrupt
FPU Input Denormal Interrupt Enable.

typedef union *_mcm_buffer_fault_attribute* mcm__buffer__fault__attribute__t
The union of buffer fault attribute.

typedef union *_mcm_lmem_fault_attribute* mcm__lmem__fault__attribute__t
The union of LMEM fault attribute.

static inline void MCM_EnableCrossbarRoundRobin(MCM_Type *base, bool enable)

Enables/Disables crossbar round robin.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable crossbar round robin.
  - **true** Enable crossbar round robin.
  - **false** disable crossbar round robin.

static inline void MCM_EnableInterruptStatus(MCM_Type *base, uint32_t mask)

Enables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(_mcm_interrupt_flag).

static inline void MCM_DisableInterruptStatus(MCM_Type *base, uint32_t mask)

Disables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(_mcm_interrupt_flag).

static inline uint16_t MCM_GetInterruptStatus(MCM_Type *base)

Gets the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline void MCM_ClearCacheWriteBufferErroStatus(MCM_Type *base)

Clears the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultAddress(MCM_Type *base)

Gets buffer fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetBufferFaultAttribute(MCM_Type *base, *mcm_buffer_fault_attribute_t* *bufferfault)

Gets buffer fault attributes.

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultData(MCM_Type *base)

Gets buffer fault data.

Parameters

- base – MCM peripheral base address.

static inline void MCM_LimitCodeCachePeripheralWriteBuffering(MCM_Type *base, bool enable)
Limit code cache peripheral write buffering.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable limit code cache peripheral write buffering.
  - **true** Enable limit code cache peripheral write buffering.
  - **false** disable limit code cache peripheral write buffering.

static inline void MCM_BypassFixedCodeCacheMap(MCM_Type *base, bool enable)
Bypass fixed code cache map.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable bypass fixed code cache map.
  - **true** Enable bypass fixed code cache map.
  - **false** disable bypass fixed code cache map.

static inline void MCM_EnableCodeBusCache(MCM_Type *base, bool enable)
Enables/Disables code bus cache.

Parameters

- base – MCM peripheral base address.
- enable – Used to disable/enable code bus cache.
  - **true** Enable code bus cache.
  - **false** disable code bus cache.

static inline void MCM_ForceCodeCacheToNoAllocation(MCM_Type *base, bool enable)
Force code cache to no allocation.

Parameters

- base – MCM peripheral base address.
- enable – Used to force code cache to allocation or no allocation.
  - **true** Force code cache to no allocation.
  - **false** Force code cache to allocation.

static inline void MCM_EnableCodeCacheWriteBuffer(MCM_Type *base, bool enable)
Enables/Disables code cache write buffer.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable code cache write buffer.
  - **true** Enable code cache write buffer.
  - **false** Disable code cache write buffer.

static inline void MCM_ClearCodeBusCache(MCM_Type *base)
Clear code bus cache.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnablePcParityFaultReport(MCM_Type *base, bool enable)

Enables/Disables PC Parity Fault Report.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity Fault Report.
  - **true** Enable PC Parity Fault Report.
  - **false** disable PC Parity Fault Report.

static inline void MCM_EnablePcParity(MCM_Type *base, bool enable)

Enables/Disables PC Parity.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity.
  - **true** Enable PC Parity.
  - **false** disable PC Parity.

static inline void MCM_LockConfigState(MCM_Type *base)

Lock the configuration state.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnableCacheParityReporting(MCM_Type *base, bool enable)

Enables/Disables cache parity reporting.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable cache parity reporting.
  - **true** Enable cache parity reporting.
  - **false** disable cache parity reporting.

static inline uint32_t MCM_GetLmemFaultAddress(MCM_Type *base)

Gets LMEM fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetLmemFaultAttribute(MCM_Type *base, *mcm_lmem_fault_attribute_t* *lmemFault)

Get LMEM fault attributes.

Parameters

- base – MCM peripheral base address.

static inline uint64_t MCM_GetLmemFaultData(MCM_Type *base)

Gets LMEM fault data.

Parameters

- base – MCM peripheral base address.

MCM_LMFATR_TYPE_MASK

MCM_LMFATR_MODE_MASK

MCM_LMFATR_BUFF_MASK

MCM_LMFATR_CACH_MASK

MCM_ISCR_STAT_MASK

FSL_COMPONENT_ID

union _mcm_buffer_fault_attribute

#include <fsl_mcm.h> The union of buffer fault attribute.

Public Members

uint32_t attribute

Indicates the faulting attributes, when a properly-enabled cache write buffer error interrupt event is detected.

struct *_mcm_buffer_fault_attribute._mcm_buffer_fault_attribut* attribute_memory

struct _mcm_buffer_fault_attribut

#include <fsl_mcm.h>

Public Members

uint32_t busErrorDataAccessType

Indicates the type of cache write buffer access.

uint32_t busErrorPrivilegeLevel

Indicates the privilege level of the cache write buffer access.

uint32_t busErrorSize

Indicates the size of the cache write buffer access.

uint32_t busErrorAccess

Indicates the type of system bus access.

uint32_t busErrorMasterID

Indicates the crossbar switch bus master number of the captured cache write buffer bus error.

uint32_t busErrorOverrun

Indicates if another cache write buffer bus error is detected.

union _mcm_lmem_fault_attribute

#include <fsl_mcm.h> The union of LMEM fault attribute.

Public Members

uint32_t attribute

Indicates the attributes of the LMEM fault detected.

struct *_mcm_lmem_fault_attribute._mcm_lmem_fault_attribut* attribute_memory

struct _mcm_lmem_fault_attribut

#include <fsl_mcm.h>

Public Members

uint32_t parityFaultProtectionSignal
: Indicates the features of parity fault protection signal.

uint32_t parityFaultMasterSize
: Indicates the parity fault master size.

uint32_t parityFaultWrite
: Indicates the parity fault is caused by read or write.

uint32_t backdoorAccess
: Indicates the LMEM access fault is initiated by core access or backdoor access.

uint32_t parityFaultSyndrome
: Indicates the parity fault syndrome.

uint32_t overrun
: Indicates the number of faultss.

2.57 MSCM: Miscellaneous System Control

FSL_MSCM_DRIVER_VERSION
: MSCM driver version 2.0.0.

typedef struct *_mscm_uid* mscm_uid_t

static inline void MSCM_GetUID(MSCM_Type *base, *mscm_uid_t* *uid)
: Get MSCM UID.

  Parameters

  - base – MSCM peripheral base address.
  - uid – Pointer to an uid struct.

static inline void MSCM_SetSecureIrqParameter(MSCM_Type *base, const uint32_t parameter)
: Set MSCM Secure Irq.

  Parameters

  - base – MSCM peripheral base address.
  - parameter – Value to be write to SECURE_IRQ.

static inline uint32_t MSCM_GetSecureIrq(MSCM_Type *base)
: Get MSCM Secure Irq.

  Parameters

  - base – MSCM peripheral base address.

  Returns
  MSCM Secure Irq.

FSL_COMPONENT_ID

struct _mscm_uid
: *#include <fsl_mscm.h>*

2.58 MU: Messaging Unit

uint32_t MU_GetInstance(MU_Type *base)

Get the MU instance index.

Parameters

- base – MU peripheral base address.

Returns

MU instance index.

void MU_Init(MU_Type *base)

Initializes the MU module.

This function enables the MU clock only.

Parameters

- base – MU peripheral base address.

void MU_Deinit(MU_Type *base)

De-initializes the MU module.

This function disables the MU clock only.

Parameters

- base – MU peripheral base address.

static inline void MU_SendMsgNonBlocking(MU_Type *base, uint32_t regIndex, uint32_t msg)

Writes a message to the TX register.

This function writes a message to the specific TX register. It does not check whether the TX register is empty or not. The upper layer should make sure the TX register is empty before calling this function. This function can be used in ISR for better performance.

```
while (!(kMU_Tx0EmptyFlag & MU_GetStatusFlags(base))) { }  Wait for TX0 register empty.
MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG_VAL);  Write message to the TX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – TX register index, see mu_msg_reg_index_t.
- msg – Message to send.

status_t MU_SendMsg(MU_Type *base, uint32_t regIndex, uint32_t msg)

Blocks to send a message.

This function waits until the TX register is empty and sends the message. If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and returns kStatus_Timeout.

Parameters

- base – MU peripheral base address.
- regIndex – MU message register, see mu_msg_reg_index_t.
- msg – Message to send.

Return values

- kStatus_Success – Message sent successfully.
- kStatus_Timeout – Timeout occurred while waiting for TX register to be empty.

Returns
status_t

static inline uint32_t MU_ReceiveMsgNonBlocking(MU_Type *base, uint32_t regIndex)

Reads a message from the RX register.

This function reads a message from the specific RX register. It does not check whether the RX register is full or not. The upper layer should make sure the RX register is full before calling this function. This function can be used in ISR for better performance.

```
uint32_t msg;
while (!(kMU_Rx0FullFlag & MU_GetStatusFlags(base)))
{
}  Wait for the RX0 register full.

msg = MU_ReceiveMsgNonBlocking(base, kMU_MsgReg0);  Read message from RX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.

Returns
The received message.

status_t MU_ReceiveMsgTimeout(MU_Type *base, uint32_t regIndex, uint32_t *readValue)

Blocks to receive a message with timeout protection.

This function waits until the RX register is full and receives the message. If MU_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

This function provides the same blocking behavior as MU_ReceiveMsg() but with additional timeout protection to prevent system hangs if the other core becomes unresponsive or if hardware issues occur.

Note: Both MU_ReceiveMsg() and MU_ReceiveMsgTimeout() are blocking functions. The difference is that this function includes timeout protection while MU_ReceiveMsg() waits indefinitely.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.
- readValue – Pointer to store the received message.

Return values

- kStatus_Success – Message received successfully.
- kStatus_InvalidArgument – Invalid readValue pointer.
- kStatus_Timeout – Timeout occurred while waiting for RX register to be full.

Returns
status_t

uint32_t MU_ReceiveMsg(MU_Type *base, uint32_t regIndex)

Blocks to receive a message (infinite wait, no timeout protection).

This function waits until the RX register is full and receives the message. This function will wait indefinitely until a message is received.

Note: Both MU_ReceiveMsg() and MU_ReceiveMsgTimeout() are blocking functions. The difference is that MU_ReceiveMsgTimeout() includes timeout protection while this function waits indefinitely.

Warning: This function does not include timeout protection and may cause system hangs if the other core becomes unresponsive. For applications requiring timeout protection, use MU_ReceiveMsgTimeout() instead.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.

Returns

The received message.

static inline void MU_SetFlagsNonBlocking(MU_Type *base, uint32_t flags)

Sets the 3-bit MU flags reflect on the other MU side.

This function sets the 3-bit MU flags directly. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. The upper layer should make sure the status flag kMU_FlagsUpdatingFlag is cleared before calling this function.

```
while (kMU_FlagsUpdatingFlag & MU_GetStatusFlags(base))
{
}  Wait for previous MU flags updating.

MU_SetFlagsNonBlocking(base, 0U);  Set the mU flags.
```

Parameters

- base – MU peripheral base address.
- flags – The 3-bit MU flags to set.

status_t MU_SetFlags(MU_Type *base, uint32_t flags)

brief Blocks setting the 3-bit MU flags reflect on the other MU side.

This function blocks setting the 3-bit MU flags. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. This function waits for the MU status flag kMU_FlagsUpdatingFlag cleared and sets the 3-bit MU flags.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

return status_t retval kStatus_Success Flags were set successfully. retval kStatus_Timeout Timeout occurred while waiting for flags to update.

Parameters

- base – MU peripheral base address.
- flags – The 3-bit MU flags to set.

static inline uint32_t MU_GetFlags(MU_Type *base)

Gets the current value of the 3-bit MU flags set by the other side.

This function gets the current 3-bit MU flags on the current side.

Parameters

- base – MU peripheral base address.

Returns

flags Current value of the 3-bit flags.

uint32_t MU_GetStatusFlags(MU_Type *base)

Gets the MU status flags.

This function returns the bit mask of the MU status flags. See _mu_status_flags.

```
uint32_t flags;
flags = MU_GetStatusFlags(base);  Get all status flags.
if (kMU_Tx0EmptyFlag & flags)
{
    The TX0 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG0_VAL);
}
if (kMU_Tx1EmptyFlag & flags)
{
    The TX1 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg1, MSG1_VAL);
}
```

If there are more than 4 general purpose interrupts, use MU_GetGeneralPurposeStatusFlags.

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU status flags, see _mu_status_flags.

static inline uint32_t MU_GetInterruptsPending(MU_Type *base)

Gets the MU IRQ pending status of enabled interrupts.

This function returns the bit mask of the pending MU IRQs of enabled interrupts. Only these flags are checked. kMU_Tx0EmptyFlag kMU_Tx1EmptyFlag kMU_Tx2EmptyFlag kMU_Tx3EmptyFlag kMU_Rx0FullFlag kMU_Rx1FullFlag kMU_Rx2FullFlag kMU_Rx3FullFlag kMU_GenInt0Flag kMU_GenInt1Flag kMU_GenInt2Flag kMU_GenInt3Flag

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU IRQs pending.

static inline void MU_ClearStatusFlags(MU_Type *base, uint32_t flags)

Clears the specific MU status flags.

This function clears the specific MU status flags. The flags to clear should be passed in as bit mask. See _mu_status_flags.

```
Clear general interrupt 0 and general interrupt 1 pending flags.
MU_ClearStatusFlags(base, kMU_GenInt0Flag | kMU_GenInt1Flag);
```

If there are more than 4 general purpose interrupts, use MU_ClearGeneralPurposeStatusFlags.

Parameters

- base – MU peripheral base address.
- flags – Bit mask of the MU status flags. See _mu_status_flags. Only the following flags can be cleared by software, other flags are cleared by hardware:
  - kMU_GenInt0Flag
  - kMU_GenInt1Flag
  - kMU_GenInt2Flag
  - kMU_GenInt3Flag
  - kMU_MuResetInterruptFlag
  - #kMU_OtherSideEnterRunInterruptFlag
  - #kMU_OtherSideEnterHaltInterruptFlag
  - #kMU_OtherSideEnterWaitInterruptFlag
  - #kMU_OtherSideEnterStopInterruptFlag
  - #kMU_OtherSideEnterPowerDownInterruptFlag
  - #kMU_ResetAssertInterruptFlag
  - #kMU_HardwareResetInterruptFlag

static inline void MU_EnableInterrupts(MU_Type *base, uint32_t interrupts)

Enables the specific MU interrupts.

This function enables the specific MU interrupts. The interrupts to enable should be passed in as bit mask. See _mu_interrupt_enable.

```
  Enable general interrupt 0 and TX0 empty interrupt.
MU_EnableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);
```

If there are more than 4 general purpose interrupts, use MU_EnableGeneralPurposeInterrupts.

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU interrupts. See _mu_interrupt_enable.

static inline void MU_DisableInterrupts(MU_Type *base, uint32_t interrupts)

Disables the specific MU interrupts.

This function disables the specific MU interrupts. The interrupts to disable should be passed in as bit mask. See _mu_interrupt_enable.

```
  Disable general interrupt 0 and TX0 empty interrupt.
MU_DisableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);
```

If there are more than 4 general purpose interrupts, use MU_DisableGeneralPurposeInterrupts.

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU interrupts. See _mu_interrupt_enable.

status_t MU_TriggerInterrupts(MU_Type *base, uint32_t interrupts)

Triggers interrupts to the other core.

This function triggers the specific interrupts to the other core. The interrupts to trigger are passed in as bit mask. See _mu_interrupt_trigger. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
if (kStatus_Success != MU_TriggerInterrupts(base, kMU_GenInt0InterruptTrigger | kMU_
↪GenInt2InterruptTrigger))
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

If there are more than 4 general purpose interrupts, use MU_TriggerGeneralPurposeInterrupts.

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the interrupts to trigger. See _mu_interrupt_trigger.

Return values

- kStatus_Success – Interrupts have been triggered successfully.
- kStatus_Fail – Previous interrupts have not been accepted.

static inline void MU_EnableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Enables the MU general purpose interrupts.

This function enables the MU general purpose interrupts. The interrupts to enable should be passed in as bit mask of mu_general_purpose_interrupt_t. The function MU_EnableInterrupts only support general interrupt 0~3, this function supports all general interrupts.

For example, to enable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt3);
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU general purpose interrupts, see mu_general_purpose_interrupt_t.

static inline void MU_DisableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Disables the MU general purpose interrupts.

This function disables the MU general purpose interrupts. The interrupts to disable should be passed in as bit mask of mu_general_purpose_interrupt_t. The function MU_DisableInterrupts only support general interrupt 0~3, this function supports all general interrupts.

For example, to disable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt3);
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU general purpose interrupts. see mu_general_purpose_interrupt_t.

static inline uint32_t MU_GetGeneralPurposeStatusFlags(MU_Type *base)

Gets the MU general purpose interrupt status flags.

This function returns the bit mask of the MU general purpose interrupt status flags. MU_GetStatusFlags can only get general purpose interrupt status 0~3, this function can get all general purpose interrupts status.

This example shows to check whether general purpose interrupt 0 and 3 happened.

```
uint32_t flags;
flags = MU_GetGeneralPurposeStatusFlags(base);
if (kMU_GeneralPurposeInterrupt0 & flags)
{
}
if (kMU_GeneralPurposeInterrupt3 & flags)
{
}
```

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU general purpose interrupt status flags.

static inline void MU_ClearGeneralPurposeStatusFlags(MU_Type *base, uint32_t flags)

Clear the MU general purpose interrupt status flags.

This function clears the specific MU general purpose interrupt status flags. The flags to clear should be passed in as bit mask. mu_general_purpose_interrupt_t_mu_status_flags.

Example to clear general purpose interrupt 0 and general interrupt 1 pending flags.

```
MU_ClearGeneralPurposeStatusFlags(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt1);
```

Parameters

- base – MU peripheral base address.
- flags – Bit mask of the MU general purpose interrupt status flags. See mu_general_purpose_interrupt_t.

static inline uint32_t MU_GetRxStatusFlags(MU_Type *base)

Return the RX status flags in reverse numerical order.

This function return the RX status flags in reverse order. Note: RFn bits of SR[3-0](mu status register) are mapped in ascending numerical order: RF0 -> SR[0] RF1 -> SR[1] RF2 -> SR[2] RF3 -> SR[3] This function will return these bits in reverse numerical order(RF3->RF1) to comply with MU_GetRxStatusFlags() of mu driver. See MU_GetRxStatusFlags() from drivers/mu/fsl_mu.h

```
status_reg = MU_GetRxStatusFlags(base);
```

Parameters

- base – MU peripheral base address.

Returns

MU RX status flags in reverse order

status_t MU_TriggerGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Triggers general purpose interrupts to the other core.

This function triggers the specific general purpose interrupts to the other core. The interrupts to trigger are passed in as bit mask. See mu_general_purpose_interrupt_t. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
status_t status;
status = MU_TriggerGeneralPurposeInterrupts(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt2);

if (kStatus_Success != status)
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the interrupts to trigger. See mu_general_purpose_interrupt_t.

Return values

- kStatus_Success – Interrupts have been triggered successfully.
- kStatus_Fail – Previous interrupts have not been accepted.

void MU_BootOtherCore(MU_Type *base, mu_core_boot_mode_t mode)

Boots the other core.

This function boots the other core with a boot configuration.

Parameters

- base – MU peripheral base address.
- mode – The other core boot mode.

void MU_HoldOtherCoreReset(MU_Type *base)

Holds the other core reset.

This function causes the other core to be held in reset following any reset event.

Parameters

- base – MU peripheral base address.

static inline *status_t* MU_ResetBothSides(MU_Type *base)

Resets the MU for both A side and B side.

This function resets the MU for both A side and B side. Before reset, it is recommended to interrupt processor B, because this function may affect the ongoing processor B programs.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations if waiting for the other side to come out of reset takes too long.

Note: For some platforms, only MU side A could use this function, check reference manual for details.

Parameters

- base – MU peripheral base address.

Return values

- kStatus_Success – The MU was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other side to come out of reset.

Returns
status_t

status_t MU_HardwareResetOtherCore(MU_Type *base, bool waitReset, bool holdReset, mu_core_boot_mode_t bootMode)

Hardware reset the other core.

This function resets the other core, the other core could mask the hardware reset by calling MU_MaskHardwareReset. The hardware reset mask feature is only available for some platforms. This function could be used together with MU_BootOtherCore to control the other core reset workflow.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout if waiting for the other core to enter or exit reset takes too long.

Example 1: Reset the other core, and no hold reset

```
MU_HardwareResetOtherCore(MU_A, true, false, bootMode);
```

In this example, the core at MU side B will reset with the specified boot mode.

Example 2: Reset the other core and hold it, then boot the other core later. Here the other core enters reset, and the reset is hold

```
MU_HardwareResetOtherCore(MU_A, true, true, modeDontCare);
```

Current core boot the other core when necessary.

```
MU_BootOtherCore(MU_A, bootMode);
```

Note: The feature waitReset, holdReset, and bootMode might be not supported for some platforms. waitReset is only available for platforms that FSL_FEATURE_MU_NO_CORE_STATUS not defined as 1 and FSL_FEATURE_MU_HAS_RESET_ASSERT_INT not defined as 0. holdReset is only available for platforms that FSL_FEATURE_MU_HAS_RSTH not defined as 0. bootMode is only available for platforms that FSL_FEATURE_MU_HAS_BOOT not defined as 0.

Parameters

- base – MU peripheral base address.
- waitReset – Wait the other core enters reset. Only work when there is CSSR0[RAIP].
  - true: Wait until the other core enters reset, if the other core has masked the hardware reset, then this function will be blocked.
  - false: Don't wait the reset.
- holdReset – Hold the other core reset or not. Only work when there is CCR0[RSTH].

- true: Hold the other core in reset, this function returns directly when the other core enters reset.
- false: Don't hold the other core in reset, this function waits until the other core out of reset.

- bootMode – Boot mode of the other core, if holdReset is true, this parameter is useless.

Return values

- kStatus_Success – The other core was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other core to enter or exit reset.

Returns

status_t

FSL_MU_DRIVER_VERSION

MU driver version.

enum _mu_status_flags

MU status flags.

Values:

enumerator kMU_Tx0EmptyFlag

TX0 empty.

enumerator kMU_Tx1EmptyFlag

TX1 empty.

enumerator kMU_Tx2EmptyFlag

TX2 empty.

enumerator kMU_Tx3EmptyFlag

TX3 empty.

enumerator kMU_Rx0FullFlag

RX0 full.

enumerator kMU_Rx1FullFlag

RX1 full.

enumerator kMU_Rx2FullFlag

RX2 full.

enumerator kMU_Rx3FullFlag

RX3 full.

enumerator kMU_GenInt0Flag

General purpose interrupt 0 pending.

enumerator kMU_GenInt1Flag

General purpose interrupt 1 pending.

enumerator kMU_GenInt2Flag

General purpose interrupt 2 pending.

enumerator kMU_GenInt3Flag

General purpose interrupt 3 pending.

enumerator kMU_RxFullPendingFlag

Any RX full flag is pending.

enumerator kMU_TxEmptyPendingFlag
Any TX empty flag is pending.

enumerator kMU_GenIntPendingFlag
Any general interrupt flag is pending.

enumerator kMU_EventPendingFlag
MU event pending.

enumerator kMU_FlagsUpdatingFlag
MU flags update is on-going.

enumerator kMU_MuInResetFlag
MU of any side is in reset.

enumerator kMU_MuResetInterruptFlag
The other side initializes MU reset.

enum _mu_interrupt_enable
MU interrupt source to enable.

Values:

enumerator kMU_Tx0EmptyInterruptEnable
TX0 empty.

enumerator kMU_Tx1EmptyInterruptEnable
TX1 empty.

enumerator kMU_Tx2EmptyInterruptEnable
TX2 empty.

enumerator kMU_Tx3EmptyInterruptEnable
TX3 empty.

enumerator kMU_Rx0FullInterruptEnable
RX0 full.

enumerator kMU_Rx1FullInterruptEnable
RX1 full.

enumerator kMU_Rx2FullInterruptEnable
RX2 full.

enumerator kMU_Rx3FullInterruptEnable
RX3 full.

enumerator kMU_GenInt0InterruptEnable
General purpose interrupt 0.

enumerator kMU_GenInt1InterruptEnable
General purpose interrupt 1.

enumerator kMU_GenInt2InterruptEnable
General purpose interrupt 2.

enumerator kMU_GenInt3InterruptEnable
General purpose interrupt 3.

enumerator kMU_MuResetInterruptEnable
The other side initializes MU reset.

enum _mu_interrupt_trigger

MU interrupt that could be triggered to the other core.

Values:

enumerator kMU_GenInt0InterruptTrigger

General purpose interrupt 0.

enumerator kMU_GenInt1InterruptTrigger

General purpose interrupt 1.

enumerator kMU_GenInt2InterruptTrigger

General purpose interrupt 2.

enumerator kMU_GenInt3InterruptTrigger

General purpose interrupt 3.

enum _mu_msg_reg_index

MU message register index.

Values:

enumerator kMU_MsgReg0

Message register 0.

enumerator kMU_MsgReg1

Message register 1.

enumerator kMU_MsgReg2

Message register 2.

enumerator kMU_MsgReg3

Message register 3.

enum _mu_general_purpose_interrupt

MU general purpose interrupts.

Values:

enumerator kMU_GeneralPurposeInterrupt0

General purpose interrupt 0

enumerator kMU_GeneralPurposeInterrupt1

General purpose interrupt 1

enumerator kMU_GeneralPurposeInterrupt2

General purpose interrupt 2

enumerator kMU_GeneralPurposeInterrupt3

General purpose interrupt 3

typedef enum *_mu_msg_reg_index* mu_msg_reg_index_t

MU message register index.

typedef enum *_mu_general_purpose_interrupt* mu_general_purpose_interrupt_t

MU general purpose interrupts.

MU_CORE_INTR(intr)

MU_MISC_INTR(intr)

MU_TX_INTR(intr)

MU_RX_INTR(intr)

MU_GI_INTR(intr)

MU_GET_CORE_INTR(intrs)

MU_GET_TX_INTR(intrs)

MU_GET_RX_INTR(intrs)

MU_GET_GI_INTR(intrs)

MU_CORE_FLAG(flag)

MU_STAT_FLAG(flag)

MU_TX_FLAG(flag)

MU_RX_FLAG(flag)

MU_GI_FLAG(flag)

MU_GET_CORE_FLAG(flags)

MU_GET_STAT_FLAG(flags)

MU_GET_TX_FLAG(flags)

MU_GET_RX_FLAG(flags)

MU_GET_GI_FLAG(flags)

MU1_BUSY_POLL_COUNT

Maximum polling iterations for MU waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the MU code before timing out and returning an error.

It applies to all waiting loops in MU driver, such as waiting for TX register to be empty or waiting for RX register to be full.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if a core becomes unresponsive.

2.59 PORT: Port Control and Interrupts

static inline void PORT_GetVersionInfo(PORT_Type *base, *port_version_info_t* *info)

Get PORT version information.

Parameters

- base – PORT peripheral base pointer
- info – PORT version information

static inline void PORT_SecletPortVoltageRange(PORT_Type *base, *port_voltage_range_t* range)

Get PORT version information.

Note: : PORTA_CONFIG[RANGE] controls the voltage ranges of Port A, B, and C. Read or write PORTB_CONFIG[RANGE] and PORTC_CONFIG[RANGE] does not take effect.

Parameters

- base – PORT peripheral base pointer
- range – port voltage range

static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const *port_pin_config_t* *config)

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const *port_pin_config_t* *config)

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask, port_interrupt_t config)

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.

- #kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
- #kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
- #kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
- #kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
- #kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
- #kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
- #kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
- #kPORT_InterruptLogicZero : Interrupt when logic zero.
- #kPORT_InterruptRisingEdge : Interrupt on rising edge.
- #kPORT_InterruptFallingEdge: Interrupt on falling edge.
- #kPORT_InterruptEitherEdge : Interrupt on either edge.
- #kPORT_InterruptLogicOne : Interrupt when logic one.
- #kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
- #kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, *port_mux_t* mux)

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the PORT_SetPinsConfig, because the PORT_SetPinsConfig need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : kPORT_PinDisabledOrAnalog). This function is recommended to use to reset the pin mux

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- mux – pin muxing slot selection.
  - kPORT_PinDisabledOrAnalog: Pin disabled or work in analog function.
  - kPORT_MuxAsGpio : Set as GPIO.
  - kPORT_MuxAlt2 : chip-specific.
  - kPORT_MuxAlt3 : chip-specific.
  - kPORT_MuxAlt4 : chip-specific.
  - kPORT_MuxAlt5 : chip-specific.
  - kPORT_MuxAlt6 : chip-specific.
  - kPORT_MuxAlt7 : chip-specific.

static inline void PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- enable – PORT digital filter configuration.

static inline void PORT_SetDigitalFilterConfig(PORT_Type *base, const *port_digital_filter_config_t* *config)

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- config – PORT digital filter configuration structure.

static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)

Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- strength – PORT pin drive strength
  - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
  - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline void PORT_EnablePinDoubleDriveStrength(PORT_Type *base, uint32_t pin, bool enable)

Enables the port pin double drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- enable – PORT pin drive strength configuration.

static inline void PORT_SetPinPullValue(PORT_Type *base, uint32_t pin, uint8_t value)

Configures the port pin pull value.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- value – PORT pin pull value
  - kPORT_LowPullResistor = 0U - Low internal pull resistor value is selected.
  - kPORT_HighPullResistor = 1U - High internal pull resistor value is selected.

static inline uint32_t PORT_GetEFTDetectFlags(PORT_Type *base)

Get EFT detect flags.

Parameters

- base – PORT peripheral base pointer

Returns

EFT detect flags

static inline void PORT_EnableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)

Enable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_DisableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)

Disable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllLowEFTDetectors(PORT_Type *base)

Clear all low EFT detector.

Note: : Port B and Port C pins share the same EFT detector clear control from PORTC_EDCR register. Any write to the PORTB_EDCR does not take effect.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllHighEFTDetectors(PORT_Type *base)

Clear all high EFT detector.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum _port_pull

Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable

Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown

Internal pull-down resistor is enabled.

enumerator kPORT_PullUp

Internal pull-up resistor is enabled.

enum _port_pull_value

Internal resistor pull value selection.

Values:

enumerator kPORT_LowPullResistor

Low internal pull resistor value is selected.

enumerator kPORT_HighPullResistor
High internal pull resistor value is selected.

enum _port_slew_rate
Slew rate selection.

Values:

enumerator kPORT_FastSlewRate
Fast slew rate is configured.

enumerator kPORT_SlowSlewRate
Slow slew rate is configured.

enum _port_open_drain_enable
Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable
Open drain output is disabled.

enumerator kPORT_OpenDrainEnable
Open drain output is enabled.

enum _port_passive_filter_enable
Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable
Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable
Passive input filter is enabled.

enum _port_drive_strength
Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength
Low-drive strength is configured.

enumerator kPORT_HighDriveStrength
High-drive strength is configured.

enum _port_drive_strength1
Configures the drive strength1.

Values:

enumerator kPORT_NormalDriveStrength
Normal drive strength

enumerator kPORT_DoubleDriveStrength
Double drive strength

enum _port_invet_input
Digital input is not inverted or it is inverted.

Values:

enumerator kPORT_InputNormal
Digital input is not inverted

enumerator kPORT_InputInvert
Digital input is inverted

enum _port_lock_register
Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister
Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister
Pin Control Register fields [15:0] are locked.

enum _port_mux
Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog
Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio
Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0
Chip-specific

enumerator kPORT_MuxAlt1
Chip-specific

enumerator kPORT_MuxAlt2
Chip-specific

enumerator kPORT_MuxAlt3
Chip-specific

enumerator kPORT_MuxAlt4
Chip-specific

enumerator kPORT_MuxAlt5
Chip-specific

enumerator kPORT_MuxAlt6
Chip-specific

enumerator kPORT_MuxAlt7
Chip-specific

enumerator kPORT_MuxAlt8
Chip-specific

enumerator kPORT_MuxAlt9
Chip-specific

enumerator kPORT_MuxAlt10
Chip-specific

enumerator kPORT_MuxAlt11
Chip-specific

enumerator kPORT_MuxAlt12
Chip-specific

enumerator kPORT_MuxAlt13
Chip-specific

enumerator kPORT_MuxAlt14
Chip-specific

enumerator kPORT_MuxAlt15
Chip-specific

enum _port_digital_filter_clock_source
Digital filter clock source selection.

Values:

enumerator kPORT_BusClock
Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock
Digital filters are clocked by the 1 kHz LPO clock.

enum _port_voltage_range
PORT voltage range.

Values:

enumerator kPORT_VoltageRange1Dot71V_3Dot6V
Port voltage range is 1.71 V - 3.6 V.

enumerator kPORT_VoltageRange2Dot70V_3Dot6V
Port voltage range is 2.70 V - 3.6 V.

typedef enum *_port_mux* port_mux_t
Pin mux selection.

typedef enum *_port_digital_filter_clock_source* port_digital_filter_clock_source_t
Digital filter clock source selection.

typedef struct *_port_digital_filter_config* port_digital_filter_config_t
PORT digital filter feature configuration definition.

typedef struct *_port_pin_config* port_pin_config_t
PORT pin configuration structure.

typedef struct *_port_version_info* port_version_info_t
PORT version information.

typedef enum *_port_voltage_range* port_voltage_range_t
PORT voltage range.

FSL_COMPONENT_ID

struct _port_digital_filter_config
#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t digitalFilterWidth
Set digital filter width

port_digital_filter_clock_source_t clockSource
Set digital filter clockSource

struct _port_pin_config
#include <fsl_port.h> PORT pin configuration structure.

Public Members

uint16_t pullSelect
No-pull/pull-down/pull-up select

uint16_t pullValueSelect
Pull value select

uint16_t slewRate
Fast/slow slew rate Configure

uint16_t passiveFilterEnable
Passive filter enable/disable

uint16_t openDrainEnable
Open drain enable/disable

uint16_t driveStrength
Fast/slow drive strength configure

uint16_t driveStrength1
Normal/Double drive strength enable/disable

uint16_t invertInput
Invert Input Configure

uint16_t lockRegister
Lock/unlock the PCR field[15:0]

struct __port__version__info
#include <fsl_port.h> PORT version information.

Public Members

uint16_t feature
Feature Specification Number.

uint8_t minor
Minor Version Number.

uint8_t major
Major Version Number.

2.60 RTC: Real Time Clock

void RTC_Init(RTC_Type *base, const *rtc_config_t* *config)
Ungates the RTC clock and configures the peripheral for basic operation.

This function issues a software reset if the timer invalid flag is set.

Note: This API should be called at the beginning of the application using the RTC driver.

Parameters

- base – RTC peripheral base address
- config – Pointer to the user's RTC configuration structure.

static inline void RTC_Deinit(RTC_Type *base)

Stops the timer and gate the RTC clock.

Parameters

- base – RTC peripheral base address

void RTC_GetDefaultConfig(*rtc_config_t* *config)

Fills in the RTC config struct with the default settings.

The default values are as follows.

```
config->clockOutput = false;
config->wakeupSelect = false;
config->updateMode = false;
config->supervisorAccess = false;
config->compensationInterval = 0;
config->compensationTime = 0;
```

Parameters

- config – Pointer to the user's RTC configuration structure.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the RTC date and time according to the given time structure.

The RTC counter must be stopped prior to calling this function because writes to the RTC seconds register fail if the RTC counter is running.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

Returns

kStatus_Success: Success in setting the time and starting the RTC kStatus_InvalidArgument: Error because the datetime format is incorrect

void RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Gets the RTC time and stores it in the given time structure.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

status_t RTC_SetAlarm(RTC_Type *base, const *rtc_datetime_t* *alarmTime)

Sets the RTC alarm time.

The function checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error.

Parameters

- base – RTC peripheral base address
- alarmTime – Pointer to the structure where the alarm time is stored.

Returns

kStatus_Success: success in setting the RTC alarm kStatus_InvalidArgument: Error because the alarm datetime format is incorrect kStatus_Fail: Error because the alarm time has already passed

void RTC_GetAlarm(RTC_Type *base, *rtc_datetime_t* *datetime)

Returns the RTC alarm time.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the alarm date and time details are stored.

void RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration rtc_interrupt_enable_t

void RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration rtc_interrupt_enable_t

uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration rtc_interrupt_enable_t

uint32_t RTC_GetStatusFlags(RTC_Type *base)

Gets the RTC status flags.

Parameters

- base – RTC peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration rtc_status_flags_t

void RTC_ClearStatusFlags(RTC_Type *base, uint32_t mask)

Clears the RTC status flags.

Parameters

- base – RTC peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration rtc_status_flags_t

static inline void RTC_StartTimer(RTC_Type *base)

Starts the RTC time counter.

After calling this function, the timer counter increments once a second provided SR[TOF] or SR[TIF] are not set.

Parameters

- base – RTC peripheral base address

static inline void RTC_StopTimer(RTC_Type *base)

Stops the RTC time counter.

RTC's seconds register can be written to only when the timer is stopped.

Parameters

- base – RTC peripheral base address

void RTC_GetMonotonicCounter(RTC_Type *base, uint64_t *counter)

Reads the values of the Monotonic Counter High and Monotonic Counter Low and returns them as a single value.

Parameters

- base – RTC peripheral base address
- counter – Pointer to variable where the value is stored.

void RTC_SetMonotonicCounter(RTC_Type *base, uint64_t counter)

Writes values Monotonic Counter High and Monotonic Counter Low by decomposing the given single value. The Monotonic Overflow Flag in RTC_SR is cleared due to the API.

Parameters

- base – RTC peripheral base address
- counter – Counter value

status_t RTC_IncrementMonotonicCounter(RTC_Type *base)

Increments the Monotonic Counter by one.

Increments the Monotonic Counter (registers RTC_MCLR and RTC_MCHR accordingly) by setting the monotonic counter enable (MER[MCE]) and then writing to the RTC_MCLR register. A write to the monotonic counter low that causes it to overflow also increments the monotonic counter high.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success: success kStatus_Fail: error occurred, either time invalid or monotonic overflow flag was found

FSL_RTC_DRIVER_VERSION

Version 2.4.0

enum _rtc_interrupt_enable

List of RTC interrupts.

Values:

enumerator kRTC_TimeInvalidInterruptEnable

Time invalid interrupt.

enumerator kRTC_TimeOverflowInterruptEnable

Time overflow interrupt.

enumerator kRTC_AlarmInterruptEnable

Alarm interrupt.

enumerator kRTC_MonotonicOverflowInterruptEnable

Monotonic Overflow Interrupt Enable

enumerator kRTC_SecondsInterruptEnable
Seconds interrupt.

enumerator kRTC_TestModeInterruptEnable

enumerator kRTC_FlashSecurityInterruptEnable

enumerator kRTC_TamperPinInterruptEnable

enumerator kRTC_SecurityModuleInterruptEnable

enumerator kRTC_LossOfClockInterruptEnable

enum _rtc_status_flags
List of RTC flags.

Values:

enumerator kRTC_TimeInvalidFlag
Time invalid flag

enumerator kRTC_TimeOverflowFlag
Time overflow flag

enumerator kRTC_AlarmFlag
Alarm flag

enumerator kRTC_MonotonicOverflowFlag
Monotonic Overflow Flag

enumerator kRTC_TamperInterruptDetectFlag
Tamper interrupt detect flag

enumerator kRTC_TestModeFlag

enumerator kRTC_FlashSecurityFlag

enumerator kRTC_TamperPinFlag

enumerator kRTC_SecurityTamperFlag

enumerator kRTC_LossOfClockTamperFlag

typedef enum *_rtc_interrupt_enable* rtc_interrupt_enable_t
List of RTC interrupts.

typedef enum *_rtc_status_flags* rtc_status_flags_t
List of RTC flags.

typedef struct *_rtc_datetime* rtc_datetime_t
Structure is used to hold the date and time.

typedef struct *_rtc_pin_config* rtc_pin_config_t
RTC pin config structure.

typedef struct *_rtc_config* rtc_config_t
RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

static inline uint32_t RTC_GetTamperTimeSeconds(RTC_Type *base)

Get the RTC tamper time seconds.

Parameters

- base – RTC peripheral base address

static inline void RTC_Reset(RTC_Type *base)

Performs a software reset on the RTC module.

This resets all RTC registers except for the SWR bit and the RTC_WAR and RTC_RAR registers. The SWR bit is cleared by software explicitly clearing it.

Parameters

- base – RTC peripheral base address

static inline void RTC_EnableClockOutput(RTC_Type *base, bool enable)

Enables or disables the RTC 32 kHz clock output.

This function enables or disables the RTC 32 kHz clock output.

Parameters

- base – RTC_Type base pointer.
- enable – true to enable, false to disable.

struct _rtc_datetime

#include <fsl_rtc.h> Structure is used to hold the date and time.

Public Members

uint16_t year

Range from 1970 to 2099.

uint8_t month

Range from 1 to 12.

uint8_t day

Range from 1 to 31 (depending on month).

uint8_t hour

Range from 0 to 23.

uint8_t minute

Range from 0 to 59.

uint8_t second

Range from 0 to 59.

struct _rtc_pin_config

#include <fsl_rtc.h> RTC pin config structure.

Public Members

bool inputLogic

true: Tamper pin input data is logic one. false: Tamper pin input data is logic zero.

bool pinActiveLow

true: Tamper pin is active low. false: Tamper pin is active high.

bool filterEnable

true: Input filter is enabled on the tamper pin. false: Input filter is disabled on the tamper pin.

bool pullSelectNegate

true: Tamper pin pull resistor direction will negate the tamper pin. false: Tamper pin pull resistor direction will assert the tamper pin.

bool pullEnable

true: Pull resistor is enabled on tamper pin. false: Pull resistor is disabled on tamper pin.

struct _rtc_config

#include <fsl_rtc.h> RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool clockOutput

true: The 32 kHz clock is not output to other peripherals; false: The 32 kHz clock is output to other peripherals

bool wakeupSelect

true: Wakeup pin outputs the 32 KHz clock; false:Wakeup pin used to wakeup the chip

bool updateMode

true: Registers can be written even when locked under certain conditions, false: No writes allowed when registers are locked

bool supervisorAccess

true: Non-supervisor accesses are allowed; false: Non-supervisor accesses are not supported

uint32_t compensationInterval

Compensation interval that is written to the CIR field in RTC TCR Register

uint32_t compensationTime

Compensation time that is written to the TCR field in RTC TCR Register

2.61 SEMA42: Hardware Semaphores Driver

FSL_SEMA42_DRIVER_VERSION

SEMA42 driver version.

SEMA42 status return codes.

Values:

enumerator kStatus_SEMA42_Busy

SEMA42 gate has been locked by other processor.

enumerator kStatus_SEMA42_Reseting

SEMA42 gate reseting is ongoing.

enum _sema42_gate_status

SEMA42 gate lock status.

Values:

enumerator kSEMA42_Unlocked
The gate is unlocked.

enumerator kSEMA42_LockedByProc0
The gate is locked by processor 0.

enumerator kSEMA42_LockedByProc1
The gate is locked by processor 1.

enumerator kSEMA42_LockedByProc2
The gate is locked by processor 2.

enumerator kSEMA42_LockedByProc3
The gate is locked by processor 3.

enumerator kSEMA42_LockedByProc4
The gate is locked by processor 4.

enumerator kSEMA42_LockedByProc5
The gate is locked by processor 5.

enumerator kSEMA42_LockedByProc6
The gate is locked by processor 6.

enumerator kSEMA42_LockedByProc7
The gate is locked by processor 7.

enumerator kSEMA42_LockedByProc8
The gate is locked by processor 8.

enumerator kSEMA42_LockedByProc9
The gate is locked by processor 9.

enumerator kSEMA42_LockedByProc10
The gate is locked by processor 10.

enumerator kSEMA42_LockedByProc11
The gate is locked by processor 11.

enumerator kSEMA42_LockedByProc12
The gate is locked by processor 12.

enumerator kSEMA42_LockedByProc13
The gate is locked by processor 13.

enumerator kSEMA42_LockedByProc14
The gate is locked by processor 14.

typedef enum *_sema42_gate_status* sema42_gate_status_t

SEMA42 gate lock status.

void SEMA42_Init(SEMA42_Type *base)

Initializes the SEMA42 module.

This function initializes the SEMA42 module. It only enables the clock but does not reset the gates because the module might be used by other processors at the same time. To reset the gates, call either SEMA42_ResetGate or SEMA42_ResetAllGates function.

Parameters

- base – SEMA42 peripheral base address.

void SEMA42_Deinit(SEMA42_Type *base)

De-initializes the SEMA42 module.

This function de-initializes the SEMA42 module. It only disables the clock.

Parameters

- base – SEMA42 peripheral base address.

status_t SEMA42_TryLock(SEMA42_Type *base, uint8_t gateNum, uint8_t procNum)

Tries to lock the SEMA42 gate.

This function tries to lock the specific SEMA42 gate. If the gate has been locked by another processor, this function returns an error code.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to lock.
- procNum – Current processor number.

Return values

- kStatus_Success – Lock the sema42 gate successfully.
- kStatus_SEMA42_Busy – Sema42 gate has been locked by another processor.

status_t SEMA42_Lock(SEMA42_Type *base, uint8_t gateNum, uint8_t procNum)

Locks the SEMA42 gate.

This function locks the specific SEMA42 gate. If the gate has been locked by other processors, this function waits until it is unlocked and then lock it.

If SEMA42_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to lock.
- procNum – Current processor number.

Return values

- kStatus_Success – The gate was successfully locked.
- kStatus_Timeout – Timeout occurred while waiting for the gate to be unlocked.

Returns

status_t

static inline void SEMA42_Unlock(SEMA42_Type *base, uint8_t gateNum)

Unlocks the SEMA42 gate.

This function unlocks the specific SEMA42 gate. It only writes unlock value to the SEMA42 gate register. However, it does not check whether the SEMA42 gate is locked by the current processor or not. As a result, if the SEMA42 gate is not locked by the current processor, this function has no effect.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to unlock.

static inline *sema42_gate_status_t* SEMA42_GetGateStatus(SEMA42_Type *base, uint8_t gateNum)

Gets the status of the SEMA42 gate.

This function checks the lock status of a specific SEMA42 gate.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number.

Returns

status Current status.

status_t SEMA42_ResetGate(SEMA42_Type *base, uint8_t gateNum)

Resets the SEMA42 gate to an unlocked status.

This function resets a SEMA42 gate to an unlocked status.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number.

Return values

- kStatus_Success – SEMA42 gate is reset successfully.
- kStatus_SEMA42_Reseting – Some other reset process is ongoing.

static inline *status_t* SEMA42_ResetAllGates(SEMA42_Type *base)

Resets all SEMA42 gates to an unlocked status.

This function resets all SEMA42 gate to an unlocked status.

Parameters

- base – SEMA42 peripheral base address.

Return values

- kStatus_Success – SEMA42 is reset successfully.
- kStatus_SEMA42_Reseting – Some other reset process is ongoing.

SEMA42_GATE_NUM_RESET_ALL

The number to reset all SEMA42 gates.

SEMA42_GATEn(base, n)

SEMA42 gate n register address.

The SEMA42 gates are sorted in the order 3, 2, 1, 0, 7, 6, 5, 4, ... not in the order 0, 1, 2, 3, 4, 5, 6, 7, ... The macro SEMA42_GATEn gets the SEMA42 gate based on the gate index.

The input gate index is XOR'ed with 3U: 0 ^ 3 = 3 1 ^ 3 = 2 2 ^ 3 = 1 3 ^ 3 = 0 4 ^ 3 = 7 5 ^ 3 = 6 6 ^ 3 = 5 7 ^ 3 = 4 ...

SEMA42_BUSY_POLL_COUNT

Maximum polling iterations for SEMA42 waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the SEMA42 driver code before timing out and returning an error.

It applies to all waiting loops in SEMA42 driver, such as waiting for a gate to be unlocked, waiting for a reset to complete, or waiting for a resource to become available.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if hardware doesn't respond or if a resource is never released.

2.62 SFA: Signal Frequency Analyser

void SFA_GetDefaultConfig(*sfa_config_t* *config)

Fill the SFA configuration structure with default settings.

The default values are:

```
config->mode = kSFA_FrequencyMeasurement0;
config->cutSelect = kSFA_CUTSelect0;
config->refSelect = kSFA_REFSelect0;
config->prediv = 0U;
config->trigStart = kSFA_TriggerStartSelect0;
config->startPolarity = kSFA_TriggerStartPolarityRiseEdge;
config->trigEnd = kSFA_TriggerEndSelect0;
config->endPolarity = kSFA_TriggerEndPolarityRiseEdge;
config->enableTrigMeasurement = false;
config->enableCUTPin = false;
config->cutTarget = 0xffffU;
config->refTarget = 0xffffffffU;
```

Parameters

- config – Pointer to the user configuration structure.

void SFA_Init(SFA_Type *base)

Initialize SFA.

Parameters

- base – SFA peripheral base address.

status_t SFA_Deinit(SFA_Type *base)

Clear counter, disable SFA and gate the SFA clock.

Parameters

- base – SFA peripheral base address.

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

static inline void SFA_EnableCUTPin(SFA_Type *base, bool enable)

Control the connection of the clock under test to an external pin.

Parameters

- base – SFA peripheral base address.
- enable – true: connect the clock under test and external pin. false: Disconnect the clock under test and external pin.

static inline uint32_t SFA_GetStatusFlags(SFA_Type *base)

Get SFA status flags.

Parameters

- base – SFA peripheral base address.

void SFA_ClearStatusFlag(SFA_Type *base, uint32_t mask)

Clear the SFA status flags.

Note: To clear kSFA_RefStoppedFlag, kSFA_CUTStoppedFlag, kSFA_MeasurementStartedFlag, and kSFA_ReferenceCounterTimeOutFlag, each counter will also be cleared.

Parameters

- base – SFA peripheral base address.
- mask – SFA status flag mask (see _sfa_status_flags for bit definition).

static inline void SFA_EnableInterrupts(SFA_Type *base, uint32_t mask)

Enable the selected SFA interrupt.

Parameters

- base – SFA peripheral base address.
- mask – The interrupt to enable (see _sfa_interrupts_enable for definition).

static inline void SFA_DisableInterrupts(SFA_Type *base, uint32_t mask)

Disable the selected SFA interrupt.

Parameters

- base – SFA peripheral base address.
- mask – The interrupt to disable (see _sfa_interrupts_enable for definition).

static inline uint8_t SFA_GetMode(SFA_Type *base)

Get SFA measurement mode.

Parameters

- base – SFA peripheral base address.

static inline uint8_t SFA_GetCUTPredivide(SFA_Type *base)

Get CUT predivide value.

Parameters

- base – SFA peripheral base address.

void SFA_InstallCallback(SFA_Type *base, *sfa_callback_t* function)

Install the callback function to be called when IRQ happens or measurement completes.

Parameters

- base – SFA peripheral base address.
- function – the SFA measure completed callback function.

void SFA_SetMeasureConfig(SFA_Type *base, const *sfa_config_t* *config)

Set Measurement options with the passed in configuration structure.

Parameters

- base – SFA peripheral base address.
- config – SFA configuration structure.

status_t SFA_MeasureBlocking(SFA_Type *base)

Start SFA measurement in blocking mode.

Parameters

- base – SFA peripheral base address.

Return values

- kStatus_SFA_MeasurementCompleted – SFA measure completes.
- kStatus_SFA_ReferenceCounterTimeout – reference counter timeout error happens.
- kStatus_SFA_CUTCounterTimeout – CUT counter time out happens.

void SFA_MeasureNonBlocking(SFA_Type *base)

Start measure sequence in NonBlocking mode.

This function performs nonblocking measurement by enabling sfa interrupt (Please enable the FreqGreaterThanMax and FreqLessThanMin interrupts individually as needed). The callback function must be installed before invoking this function.

Note: This function has different functions for different instances.

Parameters

- base – SFA peripheral base address.

void SFA_AbortMeasureSequence(SFA_Type *base)

Abort SFA measurement sequence.

Parameters

- base – SFA peripheral base address.

uint32_t SFA_CalculateFrequencyOrPeriod(SFA_Type *base, uint32_t refFrequency)

Calculate the frequency or period.

Parameters

- base – SFA peripheral base address.
- refFrequency – The reference clock frequency(BUS clock recommended).

static inline uint32_t SFA_GetCUTCounter(SFA_Type *base)

Get current count of the clock under test.

Parameters

- base – SFA peripheral base address.

static inline void SFA_SetCUTTargetCount(SFA_Type *base, uint32_t count)

Set the target count for the clock under test.

Parameters

- base – SFA peripheral base address.
- count – target count for CUT.

static inline uint32_t SFA_GetCUTTargetCount(SFA_Type *base)

Get the target count of the clock under test.

Parameters

- base – SFA peripheral base address.

static inline void SFA_SetCUTLowLimitClockCount(SFA_Type *base, uint32_t count)

Set CUT low limit clock count.

Parameters

- base – SFA peripheral base address.
- count – low limit count for CUT clock.

static inline uint32_t SFA_GetCUTLowLimitClockCount(SFA_Type *base)

Get CUT low limit clock count.

Parameters

- base – SFA peripheral base address.

static inline void SFA_SetCUTHighLimitClockCount(SFA_Type *base, uint32_t count)

Set CUT high limit clock count.

Parameters

- base – SFA peripheral base address.
- count – high limit count for CUT clock.

static inline uint32_t SFA_GetCUTHighLimitClockCount(SFA_Type *base)

Get CUT high limit clock count.

Parameters

- base – SFA peripheral base address.

static inline uint32_t SFA_GetREFCounter(SFA_Type *base)

Get current count of the reference clock.

Parameters

- base – SFA peripheral base address.

static inline void SFA_SetREFTargetCount(SFA_Type *base, uint32_t count)

Set the target count for the reference clock.

Parameters

- base – SFA peripheral base address.
- count – target count for reference clock.

static inline uint32_t SFA_GetREFTargetCount(SFA_Type *base)

Get the target count of the reference clock.

Parameters

- base – SFA peripheral base address.

static inline uint32_t SFA_GetREFStartCount(SFA_Type *base)

Get saved reference clock counter which is loaded when measurement start.

Parameters

- base – SFA peripheral base address.

static inline uint32_t SFA_GetREFEndCount(SFA_Type *base)

Get saved reference clock counter which is loaded when measurement complete.

Parameters

- base – SFA peripheral base address.

static inline void SFA_SetREFLowLimitClockCount(SFA_Type *base, uint32_t count)

Set REF low limit clock count.

Parameters

- base – SFA peripheral base address.

- count – low limit count for REF clock.

static inline uint32_t SFA_GetREFLowLimitClockCount(SFA_Type *base)

Get REF low limit clock count.

Parameters

- base – SFA peripheral base address.

static inline void SFA_SetREFHighLimitClockCount(SFA_Type *base, uint32_t count)

Set REF high limit clock count.

Parameters

- base – SFA peripheral base address.
- count – high limit count for REF clock.

static inline uint32_t SFA_GetREFHighLimitClockCount(SFA_Type *base)

Get REF high limit clock count.

Parameters

- base – SFA peripheral base address.

FSL_SFA_DRVIER_VERSION

SFA driver version 2.1.3.

SFA_MEASUREMENT_START_TIMEOUT

Max loops to wait for SFA measurement started.

This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

SFA_CUT_COUNTER_STOP_TIMEOUT

Max loops to wait for SFA CUT counter has stopped.

This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

SFA_REF_COUNTER_STOP_TIMEOUT

Max loops to wait for SFA REF counter has stopped.

This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

SFA status return codes.

enumeration _sfa_status

Values:

enumerator kStatus_SFA_MeasurementCompleted

Measurement completed

enumerator kStatus_SFA_ReferenceCounterTimeout

Reference counter timeout

enumerator kStatus_SFA_CUTCounterTimeout

CUT counter timeout

enumerator kStatus_SFA_CUTClockFreqLessThanMinLimit

CUT clock frequency less than minimum limit

enumerator kStatus_SFA_CUTClockFreqGreaterThanMaxLimit

CUT clock frequency greater than maximum limit

enum _sfa_status_flags

List of SFA status flags.

The following status register flags can be cleared on any write to REF_CNT.

- kSFA_RefStoppedFlag
- kSFA_CutStoppedFlag
- kSFA_MeasurementStartedFlag
- kSFA_ReferenceCounterTimeOutFlag

Note: These enums are meant to be OR'd together to from a bit mask.

Values:

enumerator kSFA_RefStoppedFlag
Reference counter stopped flag

enumerator kSFA_CutStoppedFlag
CUT counter stopped flag

enumerator kSFA_MeasurementStartedFlag
Measurement Started flag

enumerator kSFA_ReferenceCounterTimeOutFlag
Reference counter time out flag

enumerator kSFA_InterruptRequestFlag
SFA interrupt request flag

enumerator kSFA_FreqGreaterThanMaxInterruptFlag
FREQ_GT_MAX interrupt flag

enumerator kSFA_FreqLessThanMinInterruptFlag
FREQ_LT_MIN interrupt flag

enumerator kSFA_AllStatusFlags

enum _sfa_interrupts_enable

List of SFA interrupt.

Values:

enumerator kSFA_InterruptEnable
SFA interrupt enable

enumerator kSFA_FreqGreaterThanMaxInterruptEnable
FREQ_GT_MAX interrupt enable

enumerator kSFA_FreqLessThanMinInterruptEnable
FREQ_LT_MIN interrupt enable

enum _sfa_measurement_mode

List of SFA measurement mode(Please check the mode configuration according to the manual).

Values:

enumerator kSFA_FrequencyMeasurement0
Frequency measurement performed with REF frequency > CUT frequency

enumerator kSFA_FrequencyMeasurement1

Frequency measurement performed with REF frequency < CUT frequency

enumerator kSFA_CUTPeriodMeasurement

CUT period measurement performed

enumerator kSFA_TriggerBasedMeasurement

Trigger based measurement performed

enum _sfa_cut_select

List of CUT which is connected to the CUT counter (Please refer to the manual for configuration).

Values:

enumerator kSFA_CUTSelect0

enumerator kSFA_CUTSelect1

enumerator kSFA_CUTSelect2

enumerator kSFA_CUTSelect3

enumerator kSFA_CUTSelect4

enumerator kSFA_CUTSelect5

enumerator kSFA_CUTSelect6

enumerator kSFA_CUTSelect7

enumerator kSFA_CUTSelect8

enumerator kSFA_CUTSelect9

enumerator kSFA_CUTSelect10

enumerator kSFA_CUTSelect11

enumerator kSFA_CUTSelect12

enumerator kSFA_CUTSelect13

enumerator kSFA_CUTSelect14

enumerator kSFA_CUTSelect15

enum _sfa_ref_select

List of REF which is connected to the REF counter (Please refer to the manual for configuration).

Values:

enumerator kSFA_REFSelect0

enumerator kSFA_REFSelect1

enumerator kSFA_REFSelect2

enum _sfa_trigger_start_select

List of Signal MUX for Trigger Based Measurement Start.

Values:

enumerator kSFA_TriggerStartSelect0

enumerator kSFA_TriggerStartSelect1

enum _sfa_trigger_end_select

List of Signal MUX for Trigger Based Measurement End.

Values:

enumerator kSFA_TriggerEndSelect0

enumerator kSFA_TriggerEndSelect1

enum _sfa_trigger_start_polarity

List of Trigger Start Polarity.

Values:

enumerator kSFA_TriggerStartPolarityRiseEdge

Rising edge will begin the measurement sequence

enumerator kSFA_TriggerStartPolarityFallEdge

Falling edge will begin the measurement sequence

enum _sfa_trigger_end_polarity

List of Trigger End Polarity.

Values:

enumerator kSFA_TriggerEndPolarityRiseEdge

Rising edge will end the measurement sequence

enumerator kSFA_TriggerEndPolarityFallEdge

Falling edge will end the measurement sequence

typedef void (*sfa_callback_t)(*status_t* status)

sfa measure completion callback function pointer type

This callback can be used in non blocking IRQHandler. Specify the callback you want in the call to SFA_InstallCallback().

Param base

SFA peripheral base address.

Param status

The runtime measurement status. kStatus_SFA_MeasurementCompleted: The measurement completes. kStatus_SFA_ReferenceCounterTimeout: Reference counter timeout happenes. kStatus_SFA_CUTCounterTimeout: CUT counter timeout happenes.

typedef enum *_sfa_measurement_mode* sfa_measurement_mode_t

List of SFA measurement mode(Please check the mode configuration according to the manual).

typedef enum *_sfa_cut_select* sfa_cut_select_t

List of CUT which is connected to the CUT counter (Please refer to the manual for configuration).

typedef enum *_sfa_ref_select* sfa_ref_select_t

List of REF which is connected to the REF counter (Please refer to the manual for configuration).

typedef enum *_sfa_trigger_start_select* sfa_trigger_start_select_t

List of Signal MUX for Trigger Based Measurement Start.

typedef enum *_sfa_trigger_end_select* sfa_trigger_end_select_t

List of Signal MUX for Trigger Based Measurement End.

typedef enum *_sfa_trigger_start_polarity* sfa_trigger_start_polarity_t

List of Trigger Start Polarity.

typedef enum *_sfa_trigger_end_polarity* sfa_trigger_end_polarity_t

List of Trigger End Polarity.

typedef struct *_sfa_init_config* sfa_config_t

Structure with setting to initialize the SFA module.

This structure holds configuration setting for the SFA peripheral. To initialize this structure to reasonable defaults, call the SFA_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

SFA_CUT_CLK_Enable(val)

struct _sfa_init_config

#include <fsl_sfa.h> Structure with setting to initialize the SFA module.

This structure holds configuration setting for the SFA peripheral. To initialize this structure to reasonable defaults, call the SFA_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

Public Members

sfa_measurement_mode_t mode

measurement mode

sfa_cut_select_t cutSelect

Select clock connected to the clock under test counter

sfa_ref_select_t refSelect

Selcet REF connected the bus clock

uint8_t prediv

Integer divide of the Input CUT signal

sfa_trigger_start_select_t trigStart

Select the signal will be used to end a trigger based measurement

sfa_trigger_start_polarity_t startPolarity

Select the polarity of the start trigger signal

sfa_trigger_end_select_t trigEnd

Select the signal will be used to commence a trigger based measurement

sfa_trigger_end_polarity_t endPolarity

Select the polarity of the end trigger signal

bool enableTrigMeasurement

false: The measurement will start by default with a dummy write to the CUT counter; true : The measurement will start after receiving a dummy write to the REF_CNT followed by receiving the trigger edge

bool enableCUTPin

Control the connection of the clock under test to an external pin.

uint32_t refTarget

Reference counter target counts

uint32_t cutTarget
CUT counter target counts

2.63 SMSCM: Secure Miscellaneous System Control Module

FSL_MSCM_DRIVER_VERSION
SMSCM driver version 2.0.0.

enum _smscm_debug
SMSCM debug enable type.

Values:

enumerator kSMSCM_InvasiveDebug

enumerator kSMSCM_SecureInvasiveDebug

enumerator kSMSCM_NonInvasiveDebug

enumerator kSMSCM_SecureNonInvasiveDebug

enumerator kSMSCM_AltInvasiveDebug

enumerator kSMSCM_AltDebug

enum _smscm_mem
SMSCM On-Chip Memory Descriptor Register.

Values:

enumerator kSMSCM_Mem0

enumerator kSMSCM_Mem2

enumerator kSMSCM_Mem3

enumerator kSMSCM_Mem5

enum _smscm_ecc_ctrl
SMSCM ECC control type of On-Chip Memory.

Values:

enumerator kSMSCM_EccDisable

enumerator kSMSCM_EccEnableOnWrite

enumerator kSMSCM_EccEnableOnRead

enumerator kSMSCM_EccEnableOnWriteAndRead

typedef enum *_smscm_mem* smscm_mem_t
SMSCM On-Chip Memory Descriptor Register.

typedef enum *_smscm_ecc_ctrl* smscm_ecc_ctrl_t
SMSCM ECC control type of On-Chip Memory.

typedef struct *smscm_ecc_fault_attr* smscm_ecc_fault_attr_t
SMSCM attribute.

static inline void SMSCM_EnableDebug(SMSCM_Type *base, uint32_t debugToEnable)

Enable the Debug function. DebugToEnable could be bitwise OR of _smscm_debug.

Parameters

- base – SMSCM peripheral address.
- debugToEnable – debug enable type.

static inline void SMSCM_DisableDebug(SMSCM_Type *base, uint32_t debugToDisable)

Disables the Debug function. DebugToDisable could be bitwise OR of _smscm_debug.

Parameters

- base – SMSCM peripheral address.
- debugToDisable – debug disable type.

static inline void SMSCM_DebugLock(SMSCM_Type *base)

Lock the debug function.

Parameters

- base – SMSCM peripheral base address.

static inline uint32_t SMSCM_GetSecurityCount(SMSCM_Type *base)

Get value in Security Counter Register (SCTR).

Parameters

- base – SMSCM peripheral base address.

Returns

SMSCM SCTR value.

static inline void SMSCM_SetSecurityCount(SMSCM_Type *base, uint32_t val)

Set value in Security Counter Register (SCTR).

Parameters

- base – SMSCM peripheral base address.
- val – SCTR value to set.

static inline void SMSCM_IncreaseSecurityCount(SMSCM_Type *base, uint32_t val)

Write value to be plused in Security Counter Register (SCTR).

The entire contents of the write data word are added to the security counter, and next-state SCTR =current-state SCTR + DATA32.

Parameters

- base – SMSCM peripheral base address.
- val – SCTR value to plus.

static inline void SMSCM_DecreaseSecurityCount(SMSCM_Type *base, uint32_t val)

Write value to be minused in Security Counter Register (SCTR).

The entire contents of the write data word are added to the security counter, and next-state SCTR =current-state SCTR - DATA32.

Parameters

- base – SMSCM peripheral base address.
- val – SCTR value to be minused.

static inline void SMSCM_IncreaseSecurityCountBy1(SMSCM_Type *base)

Increase security counter rigister by 1.

Parameters

- base – SMSCM peripheral base address.

static inline void SMSCM_DecreaseSecurityCountBy1(SMSCM_Type *base)

Decrease security counter rigister by 1.

Parameters

- base – SMSCM peripheral base address.

static inline void SMSCM_LockMemControlReg(SMSCM_Type *base, *smscm_mem_t* mem)

Lock the on-chip memory descriptor. This register bit provides a mechanism to "lock" the configuration state defined by OCMDRn[11:0]. Once asserted, attempted writes to the OCMDRn[11:0] register are ignored until the next reset clears the flag.

Parameters

- base – SMSCM peripheral address.
- mem – Select OCMDRn to enable read-only mode.

static inline void SMSCM_EnableFlashCache(SMSCM_Type *base, bool enable)

Enable or disable the on-chip memory flash cache.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_EnableFlashInstructionCache(SMSCM_Type *base, bool enable)

Enable flash instruction cache.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_EnableFlashDataCache(SMSCM_Type *base, bool enable)

Enable flash data cache.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_ClearFlashCache(SMSCM_Type *base)

Clear the on-chip memory flash cache.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_LockFlashIFR1(SMSCM_Type *base)

Lock IFR1 by flash controller.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_EnableFlashSpeculate(SMSCM_Type *base, bool enable)

SMSCM Flash Speculate enable.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_EnableDataPrefetch(SMSCM_Type *base, bool enable)

SMSCM Data Prefetch enable.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_EnableFlashDataNonCorrectableBusError(SMSCM_Type *base, bool enable)

Disable non-correctable bus errors on flash data fetches.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_EnableFlashInstructionNonCorrectableBusError(SMSCM_Type *base, bool enable)

Disable non-correctable bus errors on flash instruction fetches.

Parameters

- base – SMSCM peripheral address.

static inline void SMSCM_SetMemEccControl(SMSCM_Type *base, *smscm_mem_t* mem, *smscm_ecc_ctrl_t* eccCtrl)

Select ecc control type in OCMDRn.

Parameters

- base – SMSCM peripheral address.
- mem – Select OCMDRn.
- eccCtrl – Select ecc control type.

static inline void SMSCM_EnableEccReport(SMSCM_Type *base)

Enable RAM ECC 1 bit and non-correctable reporting.

Parameters

- base – SMSCM peripheral base address.

static inline bool SMSCM_GetEccValid(SMSCM_Type *base)

Get the ECC location valid states.

Parameters

- base – SMSCM peripheral base address.

Returns

State of ECC Error Location field.

static inline uint8_t SMSCM_GetEccLocation(SMSCM_Type *base)

Get the ECC location.

Parameters

- base – SMSCM peripheral base address.

Returns

ECC fault location.

void SMSCM_ClearEccError(SMSCM_Type *base, uint8_t errLocation)

Clear each 1-bit correctable or non-correctable error.

Parameters

- base – SMSCM peripheral address.
- errLocation – ECC Error Location

static inline uint32_t SMSCM_GetEccAddress(SMSCM_Type *base)

Get the ECC fault address.

Parameters

- base – SMSCM peripheral base address.

Returns

ECC fault address.

void SMSCM_GetEccAttribute(SMSCM_Type *base, *smscm_ecc_fault_attr_t* *eccAttribute)

Get ECC attribute.

Parameters

- base – SMSCM peripheral address.
- eccAttribute – Ecc attribute.

static inline uint32_t SMSCM_GetEccFaultDataHigh(SMSCM_Type *base)

Get ECC Fault Data High.

This read-only field specifies the upper 32-bit read data word (data[63:32]) from the last captured ECCevent. For ECC events that occur in 32-bit RAMs, this 32-bit field will return 32'h0.

Parameters

- base – SMSCM peripheral base address.

Returns

The higher 32-bit read data word.

static inline uint32_t SMSCM_GetEccFaultDataLow(SMSCM_Type *base)

Get ECC Fault Data Low.

Parameters

- base – SMSCM peripheral base address.

Returns

The lower 32-bit read data word.

struct smscm_ecc_fault_attr

#include <fsl_smscm.h> SMSCM attribute.

2.64 SPC: System Power Control driver

SPC status enumeration.

Values:

enumerator kStatus_SPC_Busy

The SPC instance is busy executing any type of power mode transition.

enumerator kStatus_SPC_DCDCLowDriveStrengthIgnore

DCDC Low drive strength setting be ignored for LVD/HVD enabled.

enumerator kStatus_SPC_DCDCPulseRefreshModeIgnore

DCDC Pulse Refresh Mode drive strength setting be ignored for LVD/HVD enabled.

enumerator kStatus_SPC_SYSLDOOverDriveVoltageFail

SYS LDO regulate to Over drive voltage failed for SYS LDO HVD must be disabled.

enumerator kStatus_SPC_SYSLDOLowDriveStrengthIgnore
SYS LDO Low driver strength setting be ignored for LDO LVD/HVD enabled.

enumerator kStatus_SPC_CORELDOLowDriveStrengthIgnore
CORE LDO Low driver strength setting be ignored for LDO LVD/HVD enabled.

enumerator kStatus_SPC_CORELDOVoltageWrong
Core LDO voltage is wrong.

enumerator kStatus_SPC_CORELDOVoltageSetFail
Core LDO voltage set fail.

enumerator kStatus_SPC_BandgapModeWrong
Selected Bandgap Mode wrong.

enum _spc_voltage_detect_flags
Voltage Detect Status Flags.

Values:

enumerator kSPC_IOVDDHighVoltageDetectFlag
IO VDD High-Voltage detect flag.

enumerator kSPC_SystemVDDHighVoltageDetectFlag
System VDD High-Voltage detect flag.

enumerator kSPC_CoreVDDHighVoltageDetectFlag
Core VDD High-Voltage detect flag.

enumerator kSPC_IOVDDLowVoltageDetectFlag
IO VDD Low-Voltage detect flag.

enumerator kSPC_SystemVDDLowVoltageDetectFlag
System VDD Low-Voltage detect flag.

enumerator kSPC_CoreVDDLowVoltageDetectFlag
Core VDD Low-Voltage detect flag.

enum _spc_power_domains
SPC power domain isolation status.

Values:

enumerator kSPC_MAINPowerDomainRetain
Peripherals and IO pads retain in MAIN Power Domain.

enumerator kSPC_WAKEPowerDomainRetain
Peripherals and IO pads retain in WAKE Power Domain.

enumerator kSPC_2P4GPowerDoaminRetain
Peripherals and IO pads retion in 2.4G Power Domain.

enum _spc_power_domain_id
The enumeration of spc power domain, the connected power domain is chip specfic, please refer to chip's RM for details.

Values:

enumerator kSPC_PowerDomain0
Power domain0, the connected power domain is chip specific.

enumerator kSPC_PowerDomain1
Power domain1, the connected power domain is chip specific.

enumerator kSPC_PowerDomain2
Power domain2, the connected power domain is chip specific.

enum _spc_power_domain_low_power_mode
The enumeration of Power domain's low power mode.

Values:

enumerator kSPC_SleepWithSYSClockRunning
Power domain request SLEEP mode with SYS clock running.

enumerator kSPC_SleepWithSysClockOff
Power domain request SLEEP mode with SYS clock off.

enumerator kSPC_DeepSleepSysClockOff
Power domain request DEEP SLEEP mode with SYS clock off.

enumerator kSPC_PowerDownWithSysClockOff
Power domain request POWER DOWN mode with SYS clock off.

enumerator kSPC_DeepPowerDownWithSysClockOff
Power domain request DEEP POWER DOWN mode with SYS clock off.

enum _spc_lowPower_request_pin_polarity
SPC low power request output pin polarity.

Values:

enumerator kSPC_HighTruePolarity
Control the High Polarity of the Low Power Reqest Pin.

enumerator kSPC_LowTruePolarity
Control the Low Polarity of the Low Power Reqest Pin.

enum _spc_lowPower_request_output_override
SPC low power request output override.

Values:

enumerator kSPC_LowPowerRequestNotForced
Not Forced.

enumerator kSPC_LowPowerRequestReserved
Reserved.

enumerator kSPC_LowPowerRequestForcedLow
Forced Low (Ignore LowPower request output polarity setting.)

enumerator kSPC_LowPowerRequestForcedHigh
Forced High (Ignore LowPower request output polarity setting.)

enum _spc_bandgap_mode
SPC Bandgap mode enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_BandgapDisabled
Bandgap disabled.

enumerator kSPC_BandgapEnabledBufferDisabled
Bandgap enabled with Buffer disabled.

enumerator kSPC_BandgapEnabledBufferEnabled
Bandgap enabled with Buffer enabled.

enumerator kSPC_BandgapReserved
Reserved.

enum _spc_dcdc_voltage_level
DCDC regulator voltage level enumeration in Active mode or Low Power Mode.

Values:

enumerator kSPC_DCDC_SafeModeVoltage
DCDC VDD Regulator regulate to Safe-Mode Voltage.

enumerator kSPC_DCDC_NormalVoltage
DCDC VDD Regulator regulate to Normal Voltage.

enumerator kSPC_DCDC_MidVoltage
DCDC VDD Regulator regulate to Mid Voltage.

enumerator kSPC_DCDC_LowUnderVoltage
DCDC VDD Regulator regulate to Low Under Voltage.

enum _spc_dcdc_drive_strength
DCDC regulator Drive Strength enumeration in Active mode or Low Power Mode.

Values:

enumerator kSPC_DCDC_PulseRefreshMode
DCDC VDD Regulator Drive Strength set to Pulse Refresh Mode. This enum member is only useful for Low Power Mode config.

enumerator kSPC_DCDC_LowDriveStrength
DCDC VDD regulator Drive Strength set to low.

enumerator kSPC_DCDC_NormalDriveStrength
DCDC VDD regulator Drive Strength set to Normal.

enumerator kSPC_DCDC_Reserved
Reserved.

enum _spc_sys_ldo_voltage_level
SYS LDO regulator voltage level enumeration in Active mode.

Values:

enumerator kSPC_SysLDO_NormalVoltage
SYS LDO VDD Regulator regulate to Normal Voltage(1.8V).

enumerator kSPC_SysLDO_OverDriveVoltage
SYS LDO VDD Regulator regulate to Over Drive Voltage(2.5V).

enum _spc_sys_ldo_drive_strength
SYS LDO regulator Drive Strength enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_SysLDO_LowDriveStrength
SYS LDO VDD regulator Drive Strength set to low.

enumerator kSPC_SysLDO_NormalDriveStrength
SYS LDO VDD regulator Drive Strength set to Normal.

enum _spc_core_ldo_voltage_level
Core LDO regulator voltage level enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_CoreLDO_NormalVoltage
Core LDO VDD regulator regulate to Normal Voltage.

enumerator kSPC_CoreLDO_MidDriveVoltage
Core LDO VDD regulator regulate to Mid Drive Voltage.

enumerator kSPC_CoreLDO_UnderDriveVoltage
Core LDO VDD regulator regulate to Under Drive Voltage.

enumerator kSPC_CoreLDO_SafeModeVoltage
Core LDO VDD regulator regulate to Safe-Mode Voltage.

enum _spc_core_ldo_drive_strength
CORE LDO VDD regulator Drive Strength enumeration in Low Power mode.

Values:

enumerator kSPC_CoreLDO_LowDriveStrength
Core LDO VDD regulator Drive Strength set to low.

enumerator kSPC_CoreLDO_NormalDriveStrength
Core LDO VDD regulator Drive Strength set to Normal.

enum _spc_low_voltage_level_select
System/IO VDD Low-Voltage Level Select.

Values:

enumerator kSPC_LowVoltageNormalLevel
Trip point set to Normal level.

enumerator kSPC_LowVoltageSafeLevel
Trip point set to Safe level.

enum _spc_sram_operat_voltage
SRAM operate voltage enumeration.

Values:

enumerator kSPC_SRAM_OperatVoltage1P0V
SRAM operate voltage set to 1.0V.

enumerator kSPC_SRAM_OperatVoltage1P1V
SRAM operate voltage set to 1.1V.

enum _spc_hp_request_override_option
The enumeration of high power request override option.

Values:

enumerator kSPC_HpRequestOverrideDisable
Disable high power request override feature.

enumerator kSPC_HpRequestOverride0
Enable high power request override feature and force value as 0.

enumerator kSPC_HpReqestOverride1
Enable high power request override feature and force value as 1.

enum _spc_vdd_core_glitch_ripple_counter_select
Used to select output of 4-bit ripple counter is used to monitor a glitch on VDD core.

Values:

enumerator kSPC_selectBit0Of4bitRippleCounter
Select bit-0 of 4-bit Ripple Counter to detect glitch on VDD Core.

enumerator kSPC_selectBit1Of4bitRippleCounter
Select bit-1 of 4-bit Ripple Counter to detect glitch on VDD Core.

enumerator kSPC_selectBit2Of4bitRippleCounter
Select bit-2 of 4-bit Ripple Counter to detect glitch on VDD Core.

enumerator kSPC_selectBit3Of4bitRippleCounter
Select bit-3 of 4-bit Ripple Counter to detect glitch on VDD Core.

typedef enum *_spc_power_domain_id* spc_power_domain_id_t
The enumeration of spc power domain, the connected power domain is chip specfic, please refer to chip's RM for details.

typedef enum *_spc_power_domain_low_power_mode* spc_power_domain_low_power_mode_t
The enumeration of Power domain's low power mode.

typedef enum *_spc_lowPower_request_pin_polarity* spc_lowpower_request_pin_polarity_t
SPC low power request output pin polarity.

typedef enum *_spc_lowPower_request_output_override* spc_lowpower_request_output_override_t
SPC low power request output override.

typedef enum *_spc_bandgap_mode* spc_bandgap_mode_t
SPC Bandgap mode enumeration in Active mode or Low Power mode.

typedef enum *_spc_dcdc_voltage_level* spc_dcdc_voltage_level_t
DCDC regulator voltage level enumeration in Active mode or Low Power Mode.

typedef enum *_spc_dcdc_drive_strength* spc_dcdc_drive_strength_t
DCDC regulator Drive Strength enumeration in Active mode or Low Power Mode.

typedef enum *_spc_sys_ldo_voltage_level* spc_sys_ldo_voltage_level_t
SYS LDO regulator voltage level enumeration in Active mode.

typedef enum *_spc_sys_ldo_drive_strength* spc_sys_ldo_drive_strength_t
SYS LDO regulator Drive Strength enumeration in Active mode or Low Power mode.

typedef enum *_spc_core_ldo_voltage_level* spc_core_ldo_voltage_level_t
Core LDO regulator voltage level enumeration in Active mode or Low Power mode.

typedef enum *_spc_core_ldo_drive_strength* spc_core_ldo_drive_strength_t
CORE LDO VDD regulator Drive Strength enumeration in Low Power mode.

typedef enum *_spc_low_voltage_level_select* spc_low_voltage_level_select_t
System/IO VDD Low-Voltage Level Select.

typedef enum *_spc_sram_operat_voltage* spc_sram_operat_voltage_t
SRAM operate voltage enumeration.

typedef struct *_spc_lowpower_request_config* spc_lowpower_request_config_t
Low Power Request output pin configuration.

typedef struct *_spc_intergrated_power_switch_config* spc_intergrated_power_switch_config_t
Integrated power switch configuration.

Note: Legacy structure, will be removed.

typedef struct *_spc_active_mode_core_ldo_option* spc_active_mode_core_ldo_option_t
Core LDO regulator options in Active mode.

typedef struct *_spc_active_mode_sys_ldo_option* spc_active_mode_sys_ldo_option_t
System LDO regulator options in Active mode.

typedef struct *_spc_active_mode_dcdc_option* spc_active_mode_dcdc_option_t
DCDC regulator options in Active mode.

typedef struct *_spc_lowpower_mode_core_ldo_option* spc_lowpower_mode_core_ldo_option_t
Core LDO regulator options in Low Power mode.

typedef struct *_spc_lowpower_mode_sys_ldo_option* spc_lowpower_mode_sys_ldo_option_t
System LDO regulator options in Low Power mode.

typedef struct *_spc_lowpower_mode_dcdc_option* spc_lowpower_mode_dcdc_option_t
DCDC regulator options in Low Power mode.

typedef struct *_spc_voltage_detect_option* spc_voltage_detect_option_t
CORE/SYS/IO VDD Voltage Detect options.

typedef struct *_spc_dcdc_burst_config* spc_dcdc_burst_config_t
DCDC Burst configuration.

typedef struct *_spc_core_voltage_detect_config* spc_core_voltage_detect_config_t
Core Voltage Detect configuration.

typedef struct *_spc_system_voltage_detect_config* spc_system_voltage_detect_config_t
System Voltage Detect Configuration.

typedef struct *_spc_io_voltage_detect_config* spc_io_voltage_detect_config_t
IO Voltage Detect Configuration.

typedef struct *_spc_active_mode_regulators_config* spc_active_mode_regulators_config_t
Active mode configuration.

typedef struct *_spc_lowpower_mode_regulators_config* spc_lowpower_mode_regulators_config_t
Low Power Mode configuration.

typedef enum *_spc_hp_request_override_option* spc_hp_override_request_option_t
The enumeration of high power request override option.

typedef *spc_active_mode_dcdc_option_t* spc_hp_mode_dcdc_option_t

typedef *spc_active_mode_sys_ldo_option_t* spc_hp_mode_sys_ldo_option_t

typedef *spc_active_mode_core_ldo_option_t* spc_hp_mode_core_ldo_option_t

typedef *spc_active_mode_regulators_config_t* spc_hp_mode_regulators_config_t

typedef enum *_spc_vdd_core_glitch_ripple_counter_select*
spc_vdd_core_glitch_ripple_counter_select_t
Used to select output of 4-bit ripple counter is used to monitor a glitch on VDD core.

typedef struct *_spc_vdd_core_glitch_detector_config* spc_vdd_core_glitch_detector_config_t
The configuration of VDD Core glitch detector.

SPC_BUSY_TIMEOUT
Max loops to wait for SPC to stop being busy.

The BUSY bitfield will be set when the SPC performs any kind of power mode transition in active mode or any chip low power mode. You need to wait until this flag is cleared before changing the power mode configuration registers. This parameter defines how many loops to check completion before return timeout. If defined as 0, the driver will wait until completion.

SPC_SRAM_ACK_TIMEOUT

Max loops to wait for SPC to stop being busy.

When changing SRAM voltage, need to wait for SRAM voltage update request acknowledgment. This parameter defines how many loops to check completion before return timeout. If defined as 0, the driver will wait until completion.

SPC_DCDC_ACK_TIMEOUT

Max loops to wait for DCDC burst completed.

When the DCDC burst is requested, it is necessary to wait for the DCDC burst to complete. This parameter defines how many loops to check completion before return timeout. If defined as 0, the driver will wait until it completes.

SPC_HP_CNFG_CTRL_OVERRIDE_OPT_MASK

SPC_HP_CNFG_CTRL_OVERRIDE_OPT_SHIFT

SPC_HP_CNFG_CTRL_OVERRIDE_OPT(x)

uint8_t SPC_GetPeriphIOIsolationStatus(SPC_Type *base)

Gets Isolation status for each power domains.

This function gets the status which indicates whether certain peripheral and the IO pads are in a latched state as a result of having been in POWERDOWN mode.

Parameters

- base – SPC peripheral base address.

Returns

Current isolation status for each power domains. See _spc_power_domains for details.

static inline void SPC_ClearPeriphIOIsolationFlag(SPC_Type *base)

Clears peripherals and I/O pads isolation flags for each power domains.

This function clears peripherals and I/O pads isolation flags for each power domains. After recovering from the POWERDOWN mode, user must invoke this function to release the I/O pads and certain peripherals to their normal run mode state. Before invoking this function, user must restore chip configuration in particular pin configuration for enabled WUU wakeup pins.

Parameters

- base – SPC peripheral base address.

static inline bool SPC_GetBusyStatusFlag(SPC_Type *base)

Gets SPC busy status flag.

This function gets SPC busy status flag. When SPC executing any type of power mode transition in ACTIVE mode or any of the SOC low power mode, the SPC busy status flag is set and this function returns true. When changing CORE LDO voltage level and DCDC voltage level in ACTIVE mode, the SPC busy status flag is set and this function return true.

Parameters

- base – SPC peripheral base address.

Returns

Ack busy flag. true - SPC is busy. false - SPC is not busy.

static inline bool SPC_CheckLowPowerReqest(SPC_Type *base)

Checks system low power request.

Note: Only when all power domains request low power mode entry, the result of this function is true. That means when all power domains request low power mode entry, the SPC regulators will be controlled by LP_CFG register.

Parameters

- base – SPC peripheral base address.

Returns

The system low power request check result.

- **true** All power domains have requested low power mode and SPC has entered a low power state and power mode configuration are based on the LP_CFG configuration register.
- **false** SPC in active mode and ACTIVE_CFG register control system power supply.

static inline void SPC_ClearLowPowerRequest(SPC_Type *base)

Clears system low power request, set SPC in active mode.

Parameters

- base – SPC peripheral base address.

static inline bool SPC_CheckPowerSwitchState(SPC_Type *base)

Checks power switch state.

Parameters

- base – SPC peripheral base address.

Returns

The state(ON/OFF) of power switch.

- **true** Indicates the power switch is ON.
- **false** Indicates the power switch is OFF.

spc_power_domain_low_power_mode_t SPC_GetPowerDomainLowPowerMode(SPC_Type *base, *spc_power_domain_id_t* powerDomainId)

Gets selected power domain's requested low power mode.

Parameters

- base – SPC peripheral base address.
- powerDomainId – Power Domain Id, please refer to spc_power_domain_id_t.

Returns

The selected power domain's requested low power mode, please refer to spc_power_domain_low_power_mode_t.

static inline bool SPC_CheckPowerDomainLowPowerRequest(SPC_Type *base, *spc_power_domain_id_t* powerDomainId)

Checks power domain's low power request.

Parameters

- base – SPC peripheral base address.
- powerDomainId – Power Domain Id, please refer to spc_power_domain_id_t.

Returns

The result of power domain's low power request.

- **true** The selected power domain requests low power mode entry.
- **false** The selected power domain does not request low power mode entry.

static inline void SPC_ClearPowerDomainLowPowerRequestFlag(SPC_Type *base, *spc_power_domain_id_t* powerDomainId)

Clears selected power domain's low power request flag.

Parameters

- base – SPC peripheral base address.
- powerDomainId – Power Domain Id, please refer to spc_power_domain_id_t.

void SPC_SetLowPowerRequestConfig(SPC_Type *base, const *spc_lowpower_request_config_t* *config)

Configs Low power request output pin.

This function config the low power request output pin

Parameters

- base – SPC peripheral base address.
- config – Pointer the spc_lowpower_request_config_t structure.

static inline void SPC_SoftwareGatePowerSwitch(SPC_Type *base, bool gate)

Gates/Un-gates power switch in software mode.

Parameters

- base – SPC peripheral base address.
- gate – Used to gate/ungate power switch
  - **true** The power switch will be gated.
  - **false** The power switch will be un-gated.

static inline void SPC_PowerModeControlPowerSwitch(SPC_Type *base)

Gates power switch at low power modes entry, and un-gates power switch at low power mode wakeup.

Parameters

- base – SPC peripheral base address.

static inline void SPC_SetWakeUpValue(SPC_Type *base, uint32_t data)

Set the address of the function/image to be executed if chip wake from power down or deep power down mode.

Note: Data written by this function is used by BootROM to quickly retore ARM Core context, or to switch execution to a defined address in Flash/SRAM on WakeUp.

Note: The first word must be SP, and the second word must be PC.

Note: Please remember to calculate the CRC value of the first 48 bytes of image/function and save the result to REGFILE1->REG[0]. The BootROM will check this CRC value, if authenticated successfully then the image/function will be executed.

Parameters

- base – SPC peripheral base address.
- data – The address of the function/image to be executed if wakeup from low power mode.

static inline uint32_t SPC_GetWakeUpValue(SPC_Type *base)

Gets back the WakeUp value.

Parameters

- base – SPC peripheral base address.

Returns

The WakeUp value.

static inline bool SPC_CheckHPCfgSelected(SPC_Type *base)

Check if HP_CFG selected as active configuration register.

Parameters

- base – SPC peripheral base address.

Return values

- false – ACTIVE_CFG selected as the active configuration register.
- true – HP_CFG selected as the active configuration register.

static inline void SPC_EnableHighPowerRequest(SPC_Type *base, bool enable)

Enable/disable high power request feature.

Parameters

- base – SPC peripheral base address.
- enable – Used to specify enable/disable the high power request feature:
  - **true** Enable high power request;
  - **false** Disable high power reques.

static inline void SPC_OverrideHighPowerRequest(SPC_Type *base, *spc_hp_override_request_option_t* opt)

Override high power request manually.

Parameters

- base – SPC peripheral base address.
- opt – Specify the option of high power override request, please refer to spc_hp_override_request_option_t.

static inline *spc_core_ldo_voltage_level_t* SPC_GetHighPowerModeCoreLDOVDDVoltageLevel(SPC_Type *base)

Get voltage level of CORE LDO in high power mode.

Parameters

- base – SPC peripheral base address.

Returns
The voltage level of CORE LDO in high power mode, please refer to spc_core_ldo_voltage_level_t.

static inline *spc_bandgap_mode_t* SPC_GetHighPowerModeBandgapMode(SPC_Type *base)

Get bandgap mode in high power mode.

Parameters
- base – SPC peripheral base address.

Returns
The bandgap mode in high power mode, please refer to spc_bandgap_mode_t.

static inline uint32_t SPC_GetHighPowerModeVoltageDetectStatus(SPC_Type *base)

Get enabled state of all voltage detectors.

Parameters
- base – SPC peripheral base address.

Returns
All enabled status of all voltage detectors, 1b1 means the corrsponding voltage detector is enabled.

status_t SPC_SetHighPowerModeBandgapModeConfig(SPC_Type *base, *spc_bandgap_mode_t* mode)

Set bandgap mode in high power mode.

Parameters
- base – SPC peripheral base address.
- mode – Specify the bandgap mode in high power mode.

Return values
- kStatus_SPC_BandgapModeWrong – The Bandgap can not be disabled in high power mode.
- kStatus_Success – Config Bandgap mode in high power mode successful.

static inline void SPC_EnableHighPowerModeCMPBandgapBuffer(SPC_Type *base, bool enable)

Enable/disable CMP buffer in high power mode.

Parameters
- base – SPC peripheral base address.
- enable – Used to enable/disable CMP buffer:
  - **true** Enable CMP buffer in high power mode;
  - **false** Disable CMP buffer in high power mode.

static inline void SPC_DisableHighPowerModeVddCoreGlitchDetect(SPC_Type *base, bool disable)

Disable/enable VDD Core Glitch detect feature in high power mode.

Parameters
- base – SPC peripheral base address.
- disable – Used to disable/enable VDD Core Glitch detect feature:
  - **true** Disable VDD Core Glitch detect feature;
  - **false** Enable VDD Core Glitch detect feature.

status_t SPC_SetHighPowerModeCoreLDORegulatorConfig(SPC_Type *base, *spc_hp_mode_core_ldo_option_t* *option)

Configure CORE LDO regulator in high power mode.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the CORE LDO regulator configuration, please refer to spc_hp_mode_core_ldo_option_t.

Return values

- kStatus_Success – Config Core LDO regulator in High power mode successful.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_CORELDOLowDriveStrengthIgnore – If any voltage detect enabled, core_ldo's drive strength can not set to low.
- kStatus_SPC_CORELDOVoltageWrong – The selected voltage level in high power mode is not allowed.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetHighPowerModeSystemLDORegulatorConfig(SPC_Type *base, *spc_hp_mode_sys_ldo_option_t* *option)

Configure System LDO regulator in high power mode.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the SYSTEM LDO regulator configuration, please refer to spc_hp_mode_sys_ldo_option_t.

Return values

- kStatus_Success – Config System LDO regulator in Active power mode successful.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_SYSLDOOverDriveVoltageFail – Fail to regulator to Over Drive Voltage.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetHighPowerModeDCDCRegulatorConfig(SPC_Type *base, *spc_hp_mode_dcdc_option_t* *option)

Configure DCDC regulator in high power mode.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the DCDC regulator configuration, please refer to spc_hp_mode_dcdc_option_t.

Return values

- kStatus_Success – Config DCDC regulator in Active power mode successful.

- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_DCDCLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetHighPowerModeRegulatorsConfig(SPC_Type *base, *spc_hp_mode_regulators_config_t* *config)

Set configuration of regulators in high power mode.

Parameters

- base – SPC peripheral base address.
- config – Pointer to the regulator configuration, please refer to spc_hp_mode_regulators_config_t.

Return values

- kStatus_Success – Config regulators in High power mode successful.
- kStatus_SPC_BandgapModeWrong – The bandgap mode setting in high power mode is wrong.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_CORELDOVoltageWrong – The selected voltage level in high mode is not allowed.
- kStatus_SPC_SYSLDOOverDriveVoltageFail – Fail to regulator to Over Drive Voltage.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_SPC_DCDCLowDriveStrengthIgnore – Set driver strength to Low will be ignored.

static inline void SPC_EnableHighPowerModeCoreLowVoltageDetect(SPC_Type *base, bool enable)

Enable/disable low voltage detect for VDD_CORE in high power mode.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable low voltage detect feature for VDD_CORE in high power mode:
  - **true** Enable low voltage detect feature for VDD_CORE in high power mode;
  - **false** Disable low voltage detect feature for VDD_CORE in high power mode.

static inline void SPC_EnableHighPowerModeCoreHighVoltageDetect(SPC_Type *base, bool enable)

Enable/disable high voltage detect for VDD_CORE in high power mode.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable high voltage detect feature for VDD_CORE in high power mode:

- **true** Enable low voltage detect feature for VDD_CORE in high power mode;
- **false** Disable low voltage detect feature for VDD_CORE in high power mode.

static inline void SPC_EnableHighPowerModeSystemLowVoltageDetect(SPC_Type *base, bool enable)

Enable/disable low voltage detect for VDD_SYS in high power mode.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable low voltage detect feature for VDD_SYS in high power mode:
  - **true** Enable low voltage detect feature for VDD_SYS in high power mode;
  - **false** Disable low voltage detect feature for VDD_SYS in high power mode.

static inline void SPC_EnableHighPowerModeSystemHighVoltageDetect(SPC_Type *base, bool enable)

Enable/disable high voltage detect for VDD_SYS in high power mode.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable high voltage detect feature for VDD_SYS in high power mode:
  - **true** Enable high voltage detect feature for VDD_SYS in high power mode;
  - **false** Disable high voltage detect feature for VDD_SYS in high power mode.

static inline void SPC_EnableHighPowerModeIOLowVoltageDetect(SPC_Type *base, bool enable)

Enable/disable low voltage detect for VDD_IO_ABC in high power mode.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable low voltage detect feature for VDD_IO_ABC in high power mode:
  - **true** Enable low voltage detect feature for VDD_IO_ABC in high power mode;
  - **false** Disable low voltage detect feature for VDD_IO_ABC in high power mode.

static inline void SPC_EnableHighPowerModeIOHighVoltageDetect(SPC_Type *base, bool enable)

Enable/disable high voltage detect for VDD_IO_ABC in high power mode.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable high voltage detect feature for VDD_IO_ABC in high power mode:
  - **true** Enable high voltage detect feature for VDD_IO_ABC in high power mode;
  - **false** Disable high voltage detect feature for VDD_IO_ABC in high power mode.

static inline *spc_core_ldo_voltage_level_t* SPC_GetActiveModeCoreLDOVDDVoltageLevel(SPC_Type *base)

Gets CORE LDO VDD Regulator Voltage level.

This function returns the voltage level of CORE LDO Regulator in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

Voltage level of CORE LDO in type of spc_core_ldo_voltage_level_t enumeration.

static inline *spc_bandgap_mode_t* SPC_GetActiveModeBandgapMode(SPC_Type *base)

Gets the Bandgap mode in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

Bandgap mode in the type of spc_bandgap_mode_t enumeration.

static inline uint32_t SPC_GetActiveModeVoltageDetectStatus(SPC_Type *base)

Gets all voltage detectors status in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

All voltage detectors status in Active mode.

void SPC_SetActiveModeIntegratedPowerSwitchConfig(SPC_Type *base, const *spc_intergrated_power_switch_config_t* *config)

Configs Integrated power switch in active mode.

Note: Legacy API and will be removed.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_intergrated_power_switch_config_t pointer.

status_t SPC_SetActiveModeBandgapModeConfig(SPC_Type *base, *spc_bandgap_mode_t* mode)

Configs Bandgap mode in Active mode.

Note: In active mode, because CORELDO_VDD_DS is reserved and set to Normal, so it is impossible to disable Bandgap in active mode

Parameters

- base – SPC peripheral base address.
- mode – The Bandgap mode be selected.

Return values

- kStatus_SPC_BandgapModeWrong – The Bandgap can not be disabled in active mode.

- kStatus_Success – Config Bandgap mode in Active power mode successful.

static inline void SPC_EnableActiveModeCMPBandgapBuffer(SPC_Type *base, bool enable)

Enables/Disable the CMP Bandgap Buffer in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference voltage to CMP. false - Disable Buffer Stored Reference voltage to CMP.

static inline void SPC_SetActiveModeVoltageTrimDelay(SPC_Type *base, uint16_t delay)

Sets the delay when the regulators change voltage level in Active mode.

Parameters

- base – SPC peripheral base address.
- delay – The number of SPC timer clock cycles.

status_t SPC_SetActiveModeRegulatorsConfig(SPC_Type *base, const *spc_active_mode_regulators_config_t* *config)

Configs regulators in Active mode.

This function provides the method to config all on-chip regulators in active mode.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_active_mode_regulators_config_t structure.

Return values

- kStatus_Success – Config regulators in Active power mode successful.
- kStatus_SPC_BandgapModeWrong – The bandgap mode setting in Active mode is wrong.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_CORELDOVoltageWrong – The selected voltage level in active mode is not allowed.
- kStatus_SPC_SYSLDOOverDriveVoltageFail – Fail to regulator to Over Drive Voltage.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_SPC_DCDCLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void SPC_DisableActiveModeVddCoreGlitchDetect(SPC_Type *base, bool disable)

Disable/Enable VDD Core Glitch Detect in Active mode.

Note: State of glitch detect disable feature will be ignored if bandgap is disabled and glitch detect hardware will be forced to OFF state.

Parameters

- base – SPC peripheral base address.

- disable – Used to disable/enable VDD Core Glitch detect feature.
  - **true** Disable VDD Core Low Voltage detect;
  - **false** Enable VDD Core Low Voltage detect.

void SPC_SetLowPowerModeIntegratedPowerSwitchConfig(SPC_Type *base, const *spc_intergrated_power_switch_config_t* *config)

Configs Integrated power switch in Low Power mode.

Note: Legacy API, will be removed.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_intergrated_power_switch_config_t pointer.

static inline void SPC_EnableLowPowerModeVDDCWellBias(SPC_Type *base, bool enable)

Enables/Disables VDDC Well Bias in low power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable the VDDC Well Bias. true - Enable Vddc Well Bias. false - Disable Vddc Well Bias.

static inline *spc_core_ldo_drive_strength_t* SPC_GetLowPowerCoreLDOVDDDriveStrength(SPC_Type *base)

Gets CORE LDO VDD Drive Strength for Low Power modes.

Parameters

- base – SPC peripheral base address.

Returns

The CORE LDO's VDD Drive Strength.

static inline *spc_core_ldo_voltage_level_t* SPC_GetLowPowerCoreLDOVDDVoltageLevel(SPC_Type *base)

Gets the CORE LDO VDD Regulator Voltage Level for Low Power modes.

Parameters

- base – SPC peripheral base address.

Returns

The CORE LDO VDD Regulator's voltage level.

static inline *spc_bandgap_mode_t* SPC_GetLowPowerModeBandgapMode(SPC_Type *base)

Gets the Bandgap mode in Low Power mode.

Parameters

- base – SPC peripheral base address.

Returns

Bandgap mode in the type of spc_bandgap_mode_t enumeration.

static inline uint32_t SPC_GetLowPowerModeVoltageDetectStatus(SPC_Type *base)

Gets the status of all voltage detectors in Low Power mode.

Parameters

- base – SPC peripheral base address.

Returns
The status of all voltage detectors in low power mode.

static inline void SPC_EnableLowPowerModeLowPowerIREF(SPC_Type *base, bool enable)

Enables/Disables Low Power IREF in low power modes.

This function enables/disables Low Power IREF. Low Power IREF can only get disabled in Deep power down mode. In other low power modes, the Low Power IREF is always enabled.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Low Power IREF. true - Enable Low Power IREF for Low Power modes. false - Disable Low Power IREF for Deep Power Down mode.

status_t SPC_SetLowPowerModeBandgapmodeConfig(SPC_Type *base, *spc_bandgap_mode_t* mode)

Configs Bandgap mode in Low Power mode.

This function configs Bandgap mode in Low Power mode. IF user want to disable Bandgap while keeping any of the Regulator in Normal Driver Strength or if any of the High voltage detectors/Low voltage detectors are kept enabled, the Bandgap mode will be set as Bandgap Enabled with Buffer Disabled.

Note: This API shall be invoked following set HVDs/LVDs and regulators' driver strength.

Parameters

- base – SPC peripheral base address.
- mode – The Bandgap mode be selected.

Return values

- kStatus_SPC_BandgapModeWrong – The bandgap mode setting in Low Power mode is wrong.
- kStatus_Success – Config Bandgap mode in Low Power power mode successful.

static inline void SPC_EnableLowPowerModeCMPBandgapBufferMode(SPC_Type *base, bool enable)

Enables/Disables CMP Bandgap Buffer.

This function gates CMP bandgap buffer. CMP bandgap buffer is automatically disabled and turned off in Deep Power Down mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference Voltage to CMP. false - Disable Buffer Stored Reference Voltage to CMP.

static inline void SPC_EnableLowPowerModeCoreVDDInternalVoltageScaling(SPC_Type *base, bool enable)

Enables/Disables CORE VDD IVS(Internal Voltage Scaling) in low power modes.

This function gates CORE VDD IVS. When enabled, the IVS regulator will scale the external input CORE VDD to a lower voltage level to reduce internal leakage. IVS is invalid in Sleep or Deep power down mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IVS. true - enable CORE VDD IVS in Deep Sleep mode or Power Down mode. false - disable CORE VDD IVS in Deep Sleep mode or Power Down mode.

static inline void SPC_SetLowPowerWakeUpDelay(SPC_Type *base, uint16_t delay)

Sets the delay when exit the low power modes.

Parameters

- base – SPC peripheral base address.
- delay – The number of SPC timer clock cycles that the SPC waits on exit from low power modes.

status_t SPC_SetLowPowerModeRegulatorsConfig(SPC_Type *base, const *spc_lowpower_mode_regulators_config_t* *config)

Configs regulators in Low Power mode.

This function provides the method to config all on-chip regulators in Low Power mode.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_lowpower_mode_regulators_config_t structure.

Return values

- kStatus_Success – Config regulators in Low power mode successful.
- kStatus_SPC_BandgapModeWrong – The bandgap mode setting in Low Power mode is wrong.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_CORELDOVoltageWrong – The selected voltage level is wrong.
- kStatus_SPC_CORELDOLowDriveStrengthIgnore – Set driver strength to low will be ignored.
- #kStatus_SPC_CORELDOVoltageSetFail. – Fail to change Core LDO voltage level.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to low will be ignored.
- kStatus_SPC_DCDCPulseRefreshModeIgnore – Set driver strength to Pulse Refresh mode will be ignored.
- kStatus_SPC_DCDCLowDriveStrengthIgnore – Set driver strength to Low Drive Strength will be ignored.

static inline void SPC_DisableLowPowerModeVddCoreGlitchDetect(SPC_Type *base, bool disable)

Disable/Enable VDD Core Glitch Detect in low power mode.

Note: State of glitch detect disable feature will be ignored if bandgap is disabled and glitch detect hardware will be forced to OFF state.

Parameters

- base – SPC peripheral base address.
- disable – Used to disable/enable VDD Core Glitch detect feature.
  - **true** Disable VDD Core Low Voltage detect;
  - **false** Enable VDD Core Low Voltage detect.

static inline uint8_t SPC_GetVoltageDetectStatusFlag(SPC_Type *base)

Get Voltage Detect Status Flags.

Parameters

- base – SPC peripheral base address.

Returns

Voltage Detect Status Flags. See _spc_voltage_detect_flags for details.

static inline void SPC_ClearVoltageDetectStatusFlag(SPC_Type *base, uint8_t mask)

Clear Voltage Detect Status Flags.

Parameters

- base – SPC peripheral base address.
- mask – The mask of the voltage detect status flags. See _spc_voltage_detect_flags for details.

void SPC_SetCoreVoltageDetectConfig(SPC_Type *base, const *spc_core_voltage_detect_config_t* *config)

Configs CORE voltage detect options.

This function config CORE voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_core_voltage_detect_config_t structure.

static inline void SPC_LockCoreVoltageDetectResetSetting(SPC_Type *base)

Locks Core voltage detect reset setting.

This function locks core voltage detect reset setting. After invoking this function any configuration of Core voltage detect reset will be ignored.

Parameters

- base – SPC peripheral base address.

static inline void SPC_UnlockCoreVoltageDetectResetSetting(SPC_Type *base)

Unlocks Core voltage detect reset setting.

This function unlocks core voltage detect reset setting. If locks the Core voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

status_t SPC_EnableActiveModeCoreHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core High Voltage Detector in Active mode.

Note: If the CORE_LDO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core High voltage detector in active mode. false - Disable Core High voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable Core High Voltage Detect successfully.

status_t SPC_EnableActiveModeCoreLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core Low Voltage Detector in Active mode.

Note: If the CORE_LDO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core LVD. true - Enable Core Low voltage detector in active mode. false - Disable Core Low voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable Core Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeCoreHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core High Voltage Detector in Low Power mode.

This function enables/disables the Core High Voltage Detector. If enabled the Core High Voltage detector. The Bandgap mode in low power mode must be programmed so that Bandgap is enabled.

Note: If the CORE_LDO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in low power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core High voltage detector in low power mode. false - Disable Core High voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable Core High Voltage Detect in low power mode successfully.

status_t SPC_EnableLowPowerModeCoreLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core Low Voltage Detector in Low Power mode.

This function enables/disables the Core Low Voltage Detector. If enabled the Core Low Voltage detector. The Bandgap mode in low power mode must be programmed so that Bandgap is enabled.

Note: If the CORE_LDO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core Low voltage detector in low power mode. false - Disable Core Low voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable Core Low Voltage Detect in low power mode successfully.

void SPC_SetSystemVDDLowVoltageLevel(SPC_Type *base, *spc_low_voltage_level_select_t* level)

Set system VDD Low-voltage level selection.

This function selects the system VDD low-voltage level. Changing system VDD low-voltage level must be done after disabling the System VDD low voltage reset and interrupt.

Deprecated:

In latest RM, reserved for all devices, will removed in next release.

Parameters

- base – SPC peripheral base address.
- level – System VDD Low-Voltage level selection.

void SPC_SetSystemVoltageDetectConfig(SPC_Type *base, const *spc_system_voltage_detect_config_t* *config)

Configs SYS voltage detect options.

This function config SYS voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_system_voltage_detect_config_t structure.

static inline void SPC_LockSystemVoltageDetectResetSetting(SPC_Type *base)

Lock System voltage detect reset setting.

This function locks system voltage detect reset setting. After invoking this function any configuration of System Voltage detect reset will be ignored.

Parameters

- base – SPC peripheral base address.

static inline void SPC_UnlockSystemVoltageDetectResetSetting(SPC_Type *base)

Unlock System voltage detect reset setting.

This function unlocks system voltage detect reset setting. If locks the System voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

status_t SPC_EnableActiveModeSystemHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the System High Voltage Detector in Active mode.

Note: If the System_LDO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System High voltage detector in active mode. false - Disable System High voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable System High Voltage Detect successfully.

status_t SPC_EnableActiveModeSystemLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disable the System Low Voltage Detector in Active mode.

Note: If the System_LDO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System LVD. true - Enable System Low voltage detector in active mode. false - Disable System Low voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable the System Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeSystemHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the System High Voltage Detector in Low Power mode.

Note: If the System_LDO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System High voltage detector in low power mode. false - Disable System High voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable System High Voltage Detect in low power mode successfully.

status_t SPC_EnableLowPowerModeSystemLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the System Low Voltage Detector in Low Power mode.

Note: If the System_LDO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System Low voltage detector in low power mode. false - Disable System Low voltage detector in low power mode.

Return values

kStatus_Success – Enables System Low Voltage Detect in low power mode successfully.

void SPC_SetIOVDDLowVoltageLevel(SPC_Type *base, *spc_low_voltage_level_select_t* level)

Set IO VDD Low-Voltage level selection.

This function selects the IO VDD Low-voltage level. Changing IO VDD low-voltage level must be done after disabling the IO VDD low voltage reset and interrupt.

Parameters

- base – SPC peripheral base address.
- level – IO VDD Low-voltage level selection.

void SPC_SetIOVoltageDetectConfig(SPC_Type *base, const *spc_io_voltage_detect_config_t* *config)

Configs IO voltage detect options.

This function config IO voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_voltage_detect_config_t structure.

static inline void SPC_LockIOVoltageDetectResetSetting(SPC_Type *base)

Lock IO Voltage detect reset setting.

This function locks IO voltage detect reset setting. After invoking this function any configuration of system voltage detect reset will be ignored.

Parameters

- base – SPC peripheral base address.

static inline void SPC_UnlockIOVoltageDetectResetSetting(SPC_Type *base)

Unlock IO voltage detect reset setting.

This function unlocks IO voltage detect reset setting. If locks the IO voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

status_t SPC_EnableActiveModeIOHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO High Voltage Detector in Active mode.

Note: If the IO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO HVD. true - Enable IO High voltage detector in active mode. false - Disable IO High voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable IO High Voltage Detect successfully.

status_t SPC_EnableActiveModeIOLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO Low Voltage Detector in Active mode.

Note: If the IO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO LVD. true - Enable IO Low voltage detector in active mode. false - Disable IO Low voltage detector in active mode.

Return values

kStatus_Success – Enable IO Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeIOHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO High Voltage Detector in Low Power mode.

Note: If the IO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO HVD. true - Enable IO High voltage detector in low power mode. false - Disable IO High voltage detector in low power mode.

Return values

kStatus_Success – Enable IO High Voltage Detect in low power mode successfully.

status_t SPC_EnableLowPowerModeIOLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO Low Voltage Detector in Low Power mode.

Note: If the IO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO LVD. true - Enable IO Low voltage detector in low power mode. false - Disable IO Low voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable IO Low Voltage Detect in low power mode successfully.

void SPC_SetExternalVoltageDomainsConfig(SPC_Type *base, uint8_t lowPowerIsoMask, uint8_t IsoMask)

Configs external voltage domains.

This function configs external voltage domains isolation.

Parameters

- base – SPC peripheral base address.
- lowPowerIsoMask – The mask of external domains isolate enable during low power mode. Please read the Reference Manual for the Bitmap.
- IsoMask – The mask of external domains isolate. Please read the Reference Manual for the Bitmap.

static inline uint8_t SPC_GetExternalDomainsStatus(SPC_Type *base)

Gets External Domains status.

This function configs external voltage domains status.

Parameters

- base – SPC peripheral base address.

Returns

The status of each external domain.

static inline void SPC_EnableCoreLDORegulator(SPC_Type *base, bool enable)

Enable/Disable Core LDO regulator.

Note: The CORE LDO enable bit is write-once.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CORE LDO Regulator. true - Enable CORE LDO Regulator. false - Disable CORE LDO Regulator.

static inline void SPC_PullDownCoreLDORegulator(SPC_Type *base, bool pulldown)

Enable/Disable the CORE LDO Regulator pull down in Deep Power Down.

Note: This function only useful when enabled the CORE LDO Regulator.

Parameters

- base – SPC peripheral base address.
- pulldown – Enable/Disable CORE LDO pulldown in Deep Power Down mode. true - CORE LDO Regulator will discharge in Deep Power Down mode. false - CORE LDO Regulator will not discharge in Deep Power Down mode.

status_t SPC_SetActiveModeCoreLDORegulatorConfig(SPC_Type *base, const *spc_active_mode_core_ldo_option_t* *option)

Configs Core LDO VDD Regulator in Active mode.

Note: If any voltage detect feature is enabled in Active mode, then CORE_LDO's drive strength must not set to low.

Note: Core VDD level for the Core LDO low power regulator can only be changed when CORELDO_VDD_DS is normal

Parameters

- base – SPC peripheral base address.
- option – Pointer to the spc_active_mode_core_ldo_option_t structure.

Return values

- kStatus_Success – Config Core LDO regulator in Active power mode successful.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_CORELDOLowDriveStrengthIgnore – If any voltage detect enabled, core_ldo's drive strength can not set to low.
- kStatus_SPC_CORELDOVoltageWrong – The selected voltage level in active mode is not allowed.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetLowPowerModeCoreLDORegulatorConfig(SPC_Type *base, const *spc_lowpower_mode_core_ldo_option_t* *option)

Configs CORE LDO Regulator in low power mode.

This function configs CORE LDO Regulator in Low Power mode. If CORE LDO VDD Drive Strength is set to Normal, the CORE LDO VDD regulator voltage level in Active mode must be equal to the voltage level in Low power mode. And the Bandgap must be programmed to select bandgap enabled. Core VDD voltage levels for the Core LDO low power regulator can only be changed when the CORE LDO Drive Strength set as Normal.

Parameters

- base – SPC peripheral base address.

- option – Pointer to the spc_lowpower_mode_core_ldo_option_t structure.

Return values

- kStatus_Success – Config Core LDO regulator in power mode successfully.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_CORELDOLowDriveStrengthIgnore – Set driver strength to low will be ignored.
- #kStatus_SPC_CORELDOVoltageSetFail. – Fail to change Core LDO voltage level.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void SPC_EnableSystemLDORegulator(SPC_Type *base, bool enable)

Enable/Disable System LDO regulator.

Note: The SYSTEM LDO enable bit is write-once.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System LDO Regulator. true - Enable System LDO Regulator. false - Disable System LDO Regulator.

static inline void SPC_EnableSystemLDOSinkFeature(SPC_Type *base, bool sink)

Enable/Disable current sink feature of System LDO Regulator.

Parameters

- base – SPC peripheral base address.
- sink – Enable/Disable current sink feature. true - Enable current sink feature of System LDO Regulator. false - Disable current sink feature of System LDO Regulator.

status_t SPC_SetActiveModeSystemLDORegulatorConfig(SPC_Type *base, const *spc_active_mode_sys_ldo_option_t* *option)

Configs System LDO VDD Regulator in Active mode.

This function configs System LDO VDD Regulator in Active mode. If System LDO VDD Drive Strength is set to Normal, the Bandgap mode in Active mode must be programmed to a value that enables the bandgap. If any voltage detects are kept enabled, configuration to set System LDO VDD drive strength to low will be ignored. If select System LDO VDD Regulator voltage level to Over Drive Voltage, the Drive Strength of System LDO VDD Regulator must be set to Normal otherwise the regulator Drive Strength will be forced to Normal. If select System LDO VDD Regulator voltage level to Over Drive Voltage, the High voltage detect must be disabled. Otherwise it will be fail to regulator to Over Drive Voltage.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the spc_active_mode_sys_ldo_option_t structure.

Return values

- kStatus_Success – Config System LDO regulator in Active power mode successful.

- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_SYSLDOOverDriveVoltageFail – Fail to regulator to Over Drive Voltage.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetLowPowerModeSystemLDORegulatorConfig(SPC_Type *base, const *spc_lowpower_mode_sys_ldo_option_t* *option)

Configs System LDO regulator in low power modes.

This function configs System LDO regulator in low power modes. If System LDO VDD Regulator Drive strength is set to normal, bandgap mode in low power mode must be programmed to a value that enables the Bandgap. If any High voltage detectors or Low Voltage detectors are kept enabled, configuration to set System LDO Regulator drive strength as Low will be ignored.

Parameters

- base – SPC peripheral base address.
- option – Pointer to spc_lowpower_mode_sys_ldo_option_t structure.

Return values

- kStatus_Success – Config System LDO regulator in Low Power Mode successfully.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to low will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void SPC_EnableDCDCRegulator(SPC_Type *base, bool enable)

Enable/Disable DCDC Regulator.

Note: The DCDC enable bit is write-once.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable DCDC Regulator. true - Enable DCDC Regulator. false - Disable DCDC Regulator.

status_t SPC_SetDCDCBurstConfig(SPC_Type *base, *spc_dcdc_burst_config_t* *config)

Config DCDC Burst options.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_dcdc_burst_config_t structure.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void SPC_SetDCDCRefreshCount(SPC_Type *base, uint16_t count)

Set the count value of the reference clock.

This function set the count value of the reference clock to control the frequency of dcdc refresh when dcdc is configured in Pulse Refresh mode.

Parameters

- base – SPC peripheral base address.
- count – The count value, 16 bit width.

status_t SPC_SetActiveModeDCDCRegulatorConfig(SPC_Type *base, const *spc_active_mode_dcdc_option_t* *option)

Configs DCDC VDD Regulator in Active mode.

This function configs DCDC VDD Regulator in Active mode. If DCDDC VDD Drive Strength is set to Normal, the Bandgap mode in Active mode must be programmed to a value that enable the bandgap. If any voltage detects are kept enabled, configuration to set DCDC VDD drive strength to low will be ignored. When switching DCDC from low drive strength to Normal driver strength, make sure the DCDC high VDD LVL setting to the same level that was set prior to switching the DCDC to low drive strength.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the spc_active_mode_dcdc_option_t structure.

Return values

- kStatus_Success – Config DCDC regulator in Active power mode successful.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_DCDCLowDriveStrengthIgnore – Set driver strength to Low will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetLowPowerModeDCDCRegulatorConfig(SPC_Type *base, const *spc_lowpower_mode_dcdc_option_t* *option)

Configs DCDC VDD Regulator in Low power modes.

This function configs DCDC VDD Regulator in Low Power modes. If DCDC VDD Drive Strength is set to Normal, the Bandgap mode in Low Power mode must be programmed to a value that enables the Bandgap. If any of voltage detectors are kept enabled, configuration to set DCDC VDD Drive Strength to Low or Pulse mode will be ignored. In Deep Power Down mode, DCDC regulator is always turned off.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the spc_lowpower_mode_dcdc_option_t structure.

Return values

- kStatus_Success – Config DCDC regulator in low power mode successfully.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_DCDCPulseRefreshModeIgnore – Set driver strength to Pulse Refresh mode will be ignored.

- kStatus_SPC_DCDCLowDriveStrengthIgnore – Set driver strength to Low Drive Strength will be ignored.
- kStatus_Timeout – Timeout occurs while waiting completion.

status_t SPC_SetSRAMOperateVoltage(SPC_Type *base, *spc_sram_operat_voltage_t* voltage)

Set the SRAM operate voltage level.

Parameters

- base – SPC peripheral base address.
- voltage – Target SRAM operate voltage level, please refer to spc_sram_operat_voltage_t.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void SPC_ConfigVddCoreGlitchDetector(SPC_Type *base, const *spc_vdd_core_glitch_detector_config_t* *config)

Configures VDD Core Glitch detector, including ripple counter selection, timeout value and so on.

Parameters

- base – SPC peripheral base address.
- config – Pointer to the structure in type of spc_vdd_core_glitch_detector_config_t.

static inline bool SPC_CheckGlitchRippleCounterOutput(SPC_Type *base, *spc_vdd_core_glitch_ripple_counter_select_t* rippleCounter)

Checks selected 4-bit glitch ripple counter's output.

Parameters

- base – SPC peripheral base address.
- rippleCounter – The ripple counter to check, please refer to spc_vdd_core_glitch_ripple_counter_select_t.

Return values

- true – The selected ripple counter output is 1, will generate interrupt or reset based on settings.
- false – The selected ripple counter output is 0.

static inline void SPC_ClearGlitchRippleCounterOutput(SPC_Type *base, *spc_vdd_core_glitch_ripple_counter_select_t* rippleCounter)

Clears output of selected glitch ripple counter.

Parameters

- base – SPC peripheral base address.
- rippleCounter – The ripple counter to check, please refer to spc_vdd_core_glitch_ripple_counter_select_t.

static inline void SPC_LockVddCoreVoltageGlitchDetectResetControl(SPC_Type *base)

After invoking this function, writes to SPC_VDD_CORE_GLITCH_DETECT_SC[RE] register are ignored.

Parameters

- base – SPC peripheral base address.

static inline void SPC_UnlockVddCoreVoltageGlitchDetectResetControl(SPC_Type *base)

After invoking this function, writes to SPC_VDD_CORE_GLITCH_DETECT_SC[RE] register are allowed.

Parameters

- base – SPC peripheral base address.

static inline bool SPC_CheckVddCoreVoltageGlitchResetControlState(SPC_Type *base)

Checks if SPC_VDD_CORE_GLITCH_DETECT_SC[RE] register is writable.

Parameters

- base – SPC peripheral base address.

Return values

- true – SPC_VDD_CORE_GLITCH_DETECT_SC[RE] register is writable.
- false – SPC_VDD_CORE_GLITCH_DETECT_SC[RE] register is not writable.

FSL_SPC_DRIVER_VERSION

SPC driver version 2.7.0.

SPC_EVD_CFG_REG_EVDISO_SHIFT

SPC_EVD_CFG_REG_EVDLPISO_SHIFT

SPC_EVD_CFG_REG_EVDSTAT_SHIFT

SPC_EVD_CFG_REG_EVDISO(x)

SPC_EVD_CFG_REG_EVDLPISO(x)

SPC_EVD_CFG_REG_EVDSTAT(x)

struct _spc_lowpower_request_config

#include <fsl_spc.h> Low Power Request output pin configuration.

Public Members

bool enable

Low Power Request Output enable.

spc_lowpower_request_pin_polarity_t polarity

Low Power Request Output pin polarity select.

spc_lowpower_request_output_override_t override

Low Power Request Output Override.

struct _spc_intergrated_power_switch_config

#include <fsl_spc.h> Integrated power switch configuration.

Note: Legacy structure, will be removed.

Public Members

bool wakeup

Assert an output pin to un-gate the integrated power switch.

bool sleep
Assert an output pin to power gate the intergrated power switch.

struct _spc_active_mode_core_ldo_option
#include <fsl_spc.h> Core LDO regulator options in Active mode.

Public Members

spc_core_ldo_voltage_level_t CoreLDOVoltage
Core LDO Regulator Voltage Level selection in Active mode.

spc_core_ldo_drive_strength_t CoreLDODriveStrength
Core LDO Regulator Drive Strength selection in Active mode

struct _spc_active_mode_sys_ldo_option
#include <fsl_spc.h> System LDO regulator options in Active mode.

Public Members

spc_sys_ldo_voltage_level_t SysLDOVoltage
System LDO Regulator Voltage Level selection in Active mode.

spc_sys_ldo_drive_strength_t SysLDODriveStrength
System LDO Regulator Drive Strength selection in Active mode.

struct _spc_active_mode_dcdc_option
#include <fsl_spc.h> DCDC regulator options in Active mode.

Public Members

spc_dcdc_voltage_level_t DCDCVoltage
DCDC Regulator Voltage Level selection in Active mode.

spc_dcdc_drive_strength_t DCDCDriveStrength
DCDC VDD Regulator Drive Strength selection in Active mode.

struct _spc_lowpower_mode_core_ldo_option
#include <fsl_spc.h> Core LDO regulator options in Low Power mode.

Public Members

spc_core_ldo_voltage_level_t CoreLDOVoltage
Core LDO Regulator Voltage Level selection in Low Power mode.

spc_core_ldo_drive_strength_t CoreLDODriveStrength
Core LDO Regulator Drive Strength selection in Low Power mode

struct _spc_lowpower_mode_sys_ldo_option
#include <fsl_spc.h> System LDO regulator options in Low Power mode.

Public Members

spc_sys_ldo_drive_strength_t SysLDODriveStrength
System LDO Regulator Drive Strength selection in Low Power mode.

struct _spc_lowpower_mode_dcdc_option
#include <fsl_spc.h> DCDC regulator options in Low Power mode.

Public Members

spc_dcdc_voltage_level_t DCDCVoltage
DCDC Regulator Voltage Level selection in Low Power mode.

spc_dcdc_drive_strength_t DCDCDriveStrength
DCDC VDD Regulator Drive Strength selection in Low Power mode.

struct __spc__voltage__detect__option
#include <fsl_spc.h> CORE/SYS/IO VDD Voltage Detect options.

Public Members

bool HVDInterruptEnable
CORE/SYS/IO VDD High Voltage Detect interrupt enable.

bool HVDResetEnable
CORE/SYS/IO VDD High Voltage Detect reset enable.

bool LVDInterruptEnable
CORE/SYS/IO VDD Low Voltage Detect interrupt enable.

bool LVDResetEnable
CORE/SYS/IO VDD Low Voltage Detect reset enable.

struct __spc__dcdc__burst__config
#include <fsl_spc.h> DCDC Burst configuration.

Public Members

bool sofwareBurstRequest
Enable/Disable DCDC Software Burst Request.

bool externalBurstRequest
Enable/Disable DCDC External Burst Request.

bool stabilizeBurstFreq
Enable/Disable DCDC frequency stabilization.

uint8_t freq
The frequency of the current burst.

struct __spc__core__voltage__detect__config
#include <fsl_spc.h> Core Voltage Detect configuration.

Public Members

spc_voltage_detect_option_t option
Core VDD Voltage Detect option.

struct __spc__system__voltage__detect__config
#include <fsl_spc.h> System Voltage Detect Configuration.

Public Members

spc_voltage_detect_option_t option
System VDD Voltage Detect option.

spc_low_voltage_level_select_t level

Deprecated:

, reserved for all devices, will removed in next release.

struct _spc_io_voltage_detect_config

#include <fsl_spc.h> IO Voltage Detect Configuration.

Public Members

spc_voltage_detect_option_t option

IO VDD Voltage Detect option.

spc_low_voltage_level_select_t level

IO VDD Low-voltage level selection.

struct _spc_active_mode_regulators_config

#include <fsl_spc.h> Active mode configuration.

struct _spc_lowpower_mode_regulators_config

#include <fsl_spc.h> Low Power Mode configuration.

struct _spc_vdd_core_glitch_detector_config

#include <fsl_spc.h> The configuration of VDD Core glitch detector.

Public Members

spc_vdd_core_glitch_ripple_counter_select_t rippleCounterSelect

Used to set ripple counter.

uint8_t resetTimeoutValue

The timeout value used to reset glitch detect/compare logic after an initial glitch is detected.

bool enableReset

Used to enable/disable POR/LVD reset that caused by CORE VDD glitch detect error.

bool enableInterrupt

Used to enable/disable hardware interrupt if CORE VDD glitch detect error.

2.65 SYSPM: System Performance Monitor

enum _syspm_monitor

syspm select control monitor

Values:

enumerator kSYSPM_Monitor0

Monitor 0

enum _syspm_event

syspm select event

Values:

enumerator kSYSPM_Event1

Event 1

enumerator kSYSPM_Event2
Event 2

enumerator kSYSPM_Event3
Event 3

enum _syspm_mode
syspm set count mode

Values:

enumerator kSYSPM_BothMode
count in both modes

enumerator kSYSPM_UserMode
count only in user mode

enumerator kSYSPM_PrivilegedMode
count only in privileged mode

enum _syspm_startstop_control
syspm start/stop control

Values:

enumerator kSYSPM_Idle
idle >

enumerator kSYSPM_LocalStop
local stop

enumerator kSYSPM_LocalStart
local start

enumerator KSYSPM_EnableTraceControl
enable global TSTART/TSTOP

enumerator kSYSPM_GlobalStart
global stop

enumerator kSYSPM_GlobalStop
global start

typedef enum *_syspm_monitor* syspm_monitor_t
syspm select control monitor

typedef enum *_syspm_event* syspm_event_t
syspm select event

typedef enum *_syspm_mode* syspm_mode_t
syspm set count mode

typedef enum *_syspm_startstop_control* syspm_startstop_control_t
syspm start/stop control

void SYSPM_Init(SYSPM_Type *base)
Initializes the SYSPM.

This function enables the SYSPM clock.

Parameters

- base – SYSPM peripheral base address.

void SYSPM_Deinit(SYSPM_Type *base)

Deinitializes the SYSPM.

This function disables the SYSPM clock.

Parameters

- base – SYSPM peripheral base address.

void SYSPM_SelectEvent(SYSPM_Type *base, *syspm_monitor_t* monitor, *syspm_event_t* event, uint8_t eventCode)

Select event counters.

Parameters

- base – SYSPM peripheral base address.
- event – syspm select event, see to syspm_event_t.
- eventCode – select which event to be counted in PMECTRx., see to table Events.

void SYSPM_ResetEvent(SYSPM_Type *base, *syspm_monitor_t* monitor, *syspm_event_t* event)

Reset event counters.

Parameters

- base – SYSPM peripheral base address.
- monitor – syspm control monitor, see to syspm_monitor_t.

void SYSPM_ResetInstructionEvent(SYSPM_Type *base, *syspm_monitor_t* monitor)

Reset Instruction Counter.

Parameters

- base – SYSPM peripheral base address.
- monitor – syspm control monitor, see to syspm_monitor_t.

void SYSPM_SetCountMode(SYSPM_Type *base, *syspm_monitor_t* monitor, *syspm_mode_t* mode)

Set count mode.

Parameters

- base – SYSPM peripheral base address.
- monitor – syspm control monitor, see to syspm_monitor_t.
- mode – syspm select counter mode, see to syspm_mode_t.

void SYSPM_SetStartStopControl(SYSPM_Type *base, *syspm_monitor_t* monitor, *syspm_startstop_control_t* ssc)

Set Start/Stop Control.

Parameters

- base – SYSPM peripheral base address.
- monitor – syspm control monitor, see to syspm_monitor_t.
- ssc – This 3-bit field provides a three-phase mechanism to start/stop the counters. It includes a prioritized scheme with local start > local stop > global start > global stop > conditional TSTART > TSTOP. The global and conditional start/stop affect all configured PM/PSAM module concurrently so counters are “coherent”. see to syspm_startstop_control_t

void SYSPM_DisableCounter(SYSPM_Type *base, *syspm_monitor_t* monitor)

Disable Counters if Stopped or Halted.

Parameters

- base – SYSPM peripheral base address.
- monitor – syspm control monitor, see to syspm_monitor_t.

uint64_t SYSPM_GetEventCounter(SYSPM_Type *base, *syspm_monitor_t* monitor, *syspm_event_t* event)

This is the the 40-bits of eventx counter. The value in this register increments each time the event selected in PMCRx[SELEVTx] occurs.

Parameters

- base – SYSPM peripheral base address.
- monitor – syspm control monitor, see to syspm_monitor_t.
- event – syspm select event, see to syspm_event_t.

Returns

- When the return value is not equal to SYSPM_COUNT_STABLE_TIMEOUT_RETURN_VALUE, the return value represents a 40 bits eventx counter.
- When the return value is equal to SYSPM_COUNT_STABLE_TIMEOUT_RETURN_VALUE, the return value represents timeout occured.

EVENT_COUNT_STABLE_TIMEOUT

Max loops to wait for SYSPM event count stable (0 means wait forever)

INSTRUCTION_COUNT_STABLE_TIMEOUT

Max loops to wait for SYSPM instruction count stable (0 means wait forever)

FSL_SYSPM_DRIVER_VERSION

SYSPM driver version.

SYSPM_COUNT_STABLE_TIMEOUT_RETURN_VALUE

2.66 TPM: Timer PWM Module

uint32_t TPM_GetInstance(TPM_Type *base)

Gets the instance from the base address.

Parameters

- base – TPM peripheral base address

Returns

The TPM instance

void TPM_Init(TPM_Type *base, const *tpm_config_t* *config)

Ungates the TPM clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the TPM driver.

Parameters

- base – TPM peripheral base address

- config – Pointer to user's TPM config structure.

void TPM_Deinit(TPM_Type *base)

Stops the counter and gates the TPM clock.

Parameters

- base – TPM peripheral base address

void TPM_GetDefaultConfig(*tpm_config_t* *config)

Fill in the TPM config struct with the default settings.

The default values are:

```
    config->prescale = kTPM_Prescale_Divide_1;
    config->useGlobalTimeBase = false;
    config->syncGlobalTimeBase = false;
    config->dozeEnable = false;
    config->dbgMode = false;
    config->enableReloadOnTrigger = false;
    config->enableStopOnOverflow = false;
    config->enableStartOnTrigger = false;
#if FSL_FEATURE_TPM_HAS_PAUSE_COUNTER_ON_TRIGGER
    config->enablePauseOnTrigger = false;
#endif
    config->triggerSelect = kTPM_Trigger_Select_0;
#if FSL_FEATURE_TPM_HAS_EXTERNAL_TRIGGER_SELECTION
    config->triggerSource = kTPM_TriggerSource_External;
    config->extTriggerPolarity = kTPM_ExtTrigger_Active_High;
#endif
#if defined(FSL_FEATURE_TPM_HAS_POL) && FSL_FEATURE_TPM_HAS_POL
    config->chnlPolarity = 0U;
#endif
```

Parameters

- config – Pointer to user's TPM config structure.

tpm_clock_prescale_t TPM_CalculateCounterClkDiv(TPM_Type *base, uint32_t counterPeriod_Hz, uint32_t srcClock_Hz)

Calculates the counter clock prescaler.

This function calculates the values for SC[PS].

return Calculated clock prescaler value.

Parameters

- base – TPM peripheral base address
- counterPeriod_Hz – The desired frequency in Hz which corresponding to the time when the counter reaches the mod value
- srcClock_Hz – TPM counter clock in Hz

status_t TPM_SetupPwm(TPM_Type *base, const *tpm_chnl_pwm_signal_param_t* *chnlParams, uint8_t numOfChnls, *tpm_pwm_mode_t* mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Configures the PWM signal parameters.

User calls this function to configure the PWM signals period, mode, dutycycle and edge. Use this function to configure all the TPM channels that will be used to output a PWM signal

Parameters

- base – TPM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)
- numOfChnls – Number of channels to configure, this should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration tpm_pwm_mode_t
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – TPM counter clock in Hz

Returns

kStatus_Success PWM setup successful kStatus_Error PWM setup failed kStatus_Timeout PWM setup timeout when write register CnV or MOD

status_t TPM_UpdatePwmDutycycle(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_pwm_mode_t* currentPwmMode, uint8_t dutyCyclePercent)

Update the duty cycle of an active PWM signal.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number. In combined mode, this represents the channel pair number
- currentPwmMode – The current PWM mode set during PWM setup
- dutyCyclePercent – New PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

Returns

kStatus_Success if the PWM setup was successful, kStatus_Error on failure

void TPM_UpdateChnlEdgeLevelSelect(TPM_Type *base, *tpm_chnl_t* chnlNumber, uint8_t level)

Update the edge level selection for a channel.

Note: When the TPM has PWM pause level select feature (FSL_FEATURE_TPM_HAS_PAUSE_LEVEL_SELECT = 1), the PWM output cannot be turned off by selecting the output level. In this case, must use TPM_DisableChannel API to close the PWM output.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- level – The level to be set to the ELSnB:ELSnA field; valid values are 00, 01, 10, 11. See the appropriate SoC reference manual for details about this field.

static inline uint8_t TPM_GetChannelContorlBits(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Get the channel control bits value (mode, edge and level bit fileds).

This function disable the channel by clear all mode and level control bits.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns
The contorl bits value. This is the logical OR of members of the enumeration tpm_chnl_control_bit_mask_t.

static inline *status_t* TPM_DisableChannel(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Dsiable the channel.

This function disable the channel by clear all mode and level control bits.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns
kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

static inline *status_t* TPM_EnableChannel(TPM_Type *base, *tpm_chnl_t* chnlNumber, uint8_t control)

Enable the channel according to mode and level configs.

This function enable the channel output according to input mode/level config parameters.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- control – The contorl bits value. This is the logical OR of members of the enumeration tpm_chnl_control_bit_mask_t.

Returns
kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

void TPM_SetupInputCapture(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_input_capture_edge_t* captureMode)

Enables capturing an input signal on the channel using the function parameters.

When the edge specified in the captureMode argument occurs on the channel, the TPM counter is captured into the CnV register. The user has to read the CnV register separately to get this value.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- captureMode – Specifies which edge to capture

status_t TPM_SetupOutputCompare(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_output_compare_mode_t* compareMode, uint32_t compareValue)

Configures the TPM to generate timed pulses.

When the TPM counter matches the value of compareVal argument (this is written into CnV reg), the channel output is changed based on what is specified in the compareMode argument.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

- compareMode – Action to take on the channel output when the compare condition is met
- compareValue – Value to be programmed in the CnV register.

Returns

kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnV

void TPM_SetupDualEdgeCapture(TPM_Type *base, *tpm_chnl_t* chnlPairNumber, const *tpm_dual_edge_capture_param_t* *edgeParam, uint32_t filterValue)

Configures the dual edge capture mode of the TPM.

This function allows to measure a pulse width of the signal on the input of channel of a channel pair. The filter function is disabled if the filterVal argument passed is zero.

Parameters

- base – TPM peripheral base address
- chnlPairNumber – The TPM channel pair number; options are 0, 1, 2, 3
- edgeParam – Sets up the dual edge capture function
- filterValue – Filter value, specify 0 to disable filter.

void TPM_SetupQuadDecode(TPM_Type *base, const *tpm_phase_params_t* *phaseAParams, const *tpm_phase_params_t* *phaseBParams, *tpm_quad_decode_mode_t* quadMode)

Configures the parameters and activates the quadrature decode mode.

Parameters

- base – TPM peripheral base address
- phaseAParams – Phase A configuration parameters
- phaseBParams – Phase B configuration parameters
- quadMode – Selects encoding mode used in quadrature decoder mode

static inline void TPM_SetChannelPolarity(TPM_Type *base, *tpm_chnl_t* chnlNumber, bool enable)

Set the input and output polarity of each of the channels.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- enable – true: Set the channel polarity to active high; false: Set the channel polarity to active low;

static inline void TPM_EnableChannelExtTrigger(TPM_Type *base, *tpm_chnl_t* chnlNumber, bool enable)

Enable external trigger input to be used by channel.

In input capture mode, configures the trigger input that is used by the channel to capture the counter value. In output compare or PWM mode, configures the trigger input used to modulate the channel output. When modulating the output, the output is forced to the channel initial value whenever the trigger is not asserted.

Note: No matter how many external trigger sources there are, only input trigger 0 and 1 are used. The even numbered channels share the input trigger 0 and the odd numbered channels share the second input trigger 1.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- enable – true: Configures trigger input 0 or 1 to be used by channel; false: Trigger input has no effect on the channel

void TPM_EnableInterrupts(TPM_Type *base, uint32_t mask)

Enables the selected TPM interrupts.

Parameters

- base – TPM peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration tpm_interrupt_enable_t

void TPM_DisableInterrupts(TPM_Type *base, uint32_t mask)

Disables the selected TPM interrupts.

Parameters

- base – TPM peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration tpm_interrupt_enable_t

uint32_t TPM_GetEnabledInterrupts(TPM_Type *base)

Gets the enabled TPM interrupts.

Parameters

- base – TPM peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration tpm_interrupt_enable_t

void TPM_RegisterCallBack(TPM_Type *base, *tpm_callback_t* callback)

Register callback.

If channel or overflow interrupt is enabled by the user, then a callback can be registered which will be invoked when the interrupt is triggered.

Parameters

- base – TPM peripheral base address
- callback – Callback function

static inline uint32_t TPM_GetChannelValue(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Gets the TPM channel value.

Note: The TPM channel value contain the captured TPM counter value for the input modes or the match value for the output modes.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns

The channle CnV regisyer value.

static inline uint32_t TPM_GetStatusFlags(TPM_Type *base)

Gets the TPM status flags.

Parameters

- base – TPM peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration tpm_status_flags_t

static inline void TPM_ClearStatusFlags(TPM_Type *base, uint32_t mask)

Clears the TPM status flags.

Parameters

- base – TPM peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration tpm_status_flags_t

static inline *status_t* TPM_SetTimerPeriod(TPM_Type *base, uint32_t ticks)

Sets the timer period in units of ticks.

Timers counts from 0 until it equals the count value set here. The count value is written to the MOD register.

Note:

a. This API allows the user to use the TPM module as a timer. Do not mix usage of this API with TPM's PWM setup API's.

b. Call the utility macros provided in the fsl_common.h to convert usec or msec to ticks.

Parameters

- base – TPM peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.

Returns

kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

static inline uint32_t TPM_GetCurrentTimerCount(TPM_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – TPM peripheral base address

Returns

The current counter value in ticks

static inline void TPM_StartTimer(TPM_Type *base, *tpm_clock_source_t* clockSource)

Starts the TPM counter.

Parameters

- base – TPM peripheral base address
- clockSource – TPM clock source; once clock source is set the counter will start running

static inline *status_t* TPM_StopTimer(TPM_Type *base)

Stops the TPM counter.

Parameters

- base – TPM peripheral base address

Returns

kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

FSL_TPM_DRIVER_VERSION

TPM driver version 2.4.0.

enum _tpm_chnl

List of TPM channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kTPM_Chnl_0

TPM channel number 0

enumerator kTPM_Chnl_1

TPM channel number 1

enumerator kTPM_Chnl_2

TPM channel number 2

enumerator kTPM_Chnl_3

TPM channel number 3

enumerator kTPM_Chnl_4

TPM channel number 4

enumerator kTPM_Chnl_5

TPM channel number 5

enumerator kTPM_Chnl_6

TPM channel number 6

enumerator kTPM_Chnl_7

TPM channel number 7

enum _tpm_pwm_mode

TPM PWM operation modes.

Values:

enumerator kTPM_EdgeAlignedPwm

Edge aligned PWM

enumerator kTPM_CenterAlignedPwm

Center aligned PWM

enumerator kTPM_CombinedPwm

Combined PWM (Edge-aligned, center-aligned, or asymmetrical PWMs can be obtained in combined mode using different software configurations)

enum _tpm_pwm_level_select

TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

Values:

enumerator kTPM_HighTrue

High true pulses

enumerator kTPM_LowTrue

Low true pulses

enum _tpm_pwm_pause_level_select

TPM PWM output when first enabled or paused: set or clear.

Values:

enumerator kTPM_ClearOnPause

Clear Output when counter first enabled or paused.

enumerator kTPM_SetOnPause

Set Output when counter first enabled or paused.

enum _tpm_chnl_control_bit_mask

List of TPM channel modes and level control bit mask.

Values:

enumerator kTPM_ChnlELSnAMask

Channel ELSA bit mask.

enumerator kTPM_ChnlELSnBMask

Channel ELSB bit mask.

enumerator kTPM_ChnlMSAMask

Channel MSA bit mask.

enumerator kTPM_ChnlMSBMask

Channel MSB bit mask.

enum _tpm_trigger_select

Trigger sources available.

This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

Values:

enumerator kTPM_Trigger_Select_0

enumerator kTPM_Trigger_Select_1

enumerator kTPM_Trigger_Select_2

enumerator kTPM_Trigger_Select_3

enumerator kTPM_Trigger_Select_4

enumerator kTPM_Trigger_Select_5

enumerator kTPM_Trigger_Select_6

enumerator kTPM_Trigger_Select_7

enumerator kTPM_Trigger_Select_8

enumerator kTPM_Trigger_Select_9

enumerator kTPM_Trigger_Select_10

enumerator kTPM_Trigger_Select_11

enumerator kTPM_Trigger_Select_12

enumerator kTPM_Trigger_Select_13

enumerator kTPM_Trigger_Select_14

enumerator kTPM_Trigger_Select_15

enum _tpm_trigger_source

Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal triger.

Values:

enumerator kTPM_TriggerSource_External

Use external trigger input

enumerator kTPM_TriggerSource_Internal

Use internal trigger (channel pin input capture)

enum _tpm_ext_trigger_polarity

External trigger source polarity.

Note: Selects the polarity of the external trigger source.

Values:

enumerator kTPM_ExtTrigger_Active_High

External trigger input is active high

enumerator kTPM_ExtTrigger_Active_Low

External trigger input is active low

enum _tpm_output_compare_mode

TPM output compare modes.

Values:

enumerator kTPM_NoOutputSignal

No channel output when counter reaches CnV

enumerator kTPM_ToggleOnMatch
Toggle output

enumerator kTPM_ClearOnMatch
Clear output

enumerator kTPM_SetOnMatch
Set output

enumerator kTPM_HighPulseOutput
Pulse output high

enumerator kTPM_LowPulseOutput
Pulse output low

enum _tpm_input_capture_edge
TPM input capture edge.

Values:

enumerator kTPM_RisingEdge
Capture on rising edge only

enumerator kTPM_FallingEdge
Capture on falling edge only

enumerator kTPM_RiseAndFallEdge
Capture on rising or falling edge

enum _tpm_quad_decode_mode
TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

Values:

enumerator kTPM_QuadPhaseEncode
Phase A and Phase B encoding mode

enumerator kTPM_QuadCountAndDir
Count and direction encoding mode

enum _tpm_phase_polarity
TPM quadrature phase polarities.

Values:

enumerator kTPM_QuadPhaseNormal
Phase input signal is not inverted

enumerator kTPM_QuadPhaseInvert
Phase input signal is inverted

enum _tpm_clock_source
TPM clock source selection.

Values:

enumerator kTPM_SystemClock
System clock

enumerator kTPM_ExternalClock
External TPM_EXTCLK pin clock

enumerator kTPM_ExternalInputTriggerClock
Selected external input trigger clock

enum _tpm_clock_prescale
TPM prescale value selection for the clock source.

Values:

enumerator kTPM_Prescale_Divide_1
Divide by 1

enumerator kTPM_Prescale_Divide_2
Divide by 2

enumerator kTPM_Prescale_Divide_4
Divide by 4

enumerator kTPM_Prescale_Divide_8
Divide by 8

enumerator kTPM_Prescale_Divide_16
Divide by 16

enumerator kTPM_Prescale_Divide_32
Divide by 32

enumerator kTPM_Prescale_Divide_64
Divide by 64

enumerator kTPM_Prescale_Divide_128
Divide by 128

enum _tpm_interrupt_enable
List of TPM interrupts.

Values:

enumerator kTPM_Chnl0InterruptEnable
Channel 0 interrupt.

enumerator kTPM_Chnl1InterruptEnable
Channel 1 interrupt.

enumerator kTPM_Chnl2InterruptEnable
Channel 2 interrupt.

enumerator kTPM_Chnl3InterruptEnable
Channel 3 interrupt.

enumerator kTPM_Chnl4InterruptEnable
Channel 4 interrupt.

enumerator kTPM_Chnl5InterruptEnable
Channel 5 interrupt.

enumerator kTPM_Chnl6InterruptEnable
Channel 6 interrupt.

enumerator kTPM_Chnl7InterruptEnable
Channel 7 interrupt.

enumerator kTPM_TimeOverflowInterruptEnable
Time overflow interrupt.

enum _tpm_status_flags
List of TPM flags.

Values:

enumerator kTPM_Chnl0Flag
Channel 0 flag

enumerator kTPM_Chnl1Flag
Channel 1 flag

enumerator kTPM_Chnl2Flag
Channel 2 flag

enumerator kTPM_Chnl3Flag
Channel 3 flag

enumerator kTPM_Chnl4Flag
Channel 4 flag

enumerator kTPM_Chnl5Flag
Channel 5 flag

enumerator kTPM_Chnl6Flag
Channel 6 flag

enumerator kTPM_Chnl7Flag
Channel 7 flag

enumerator kTPM_TimeOverflowFlag
Time overflow flag

typedef enum *_tpm_chnl* tpm_chnl_t
List of TPM channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_tpm_pwm_mode* tpm_pwm_mode_t
TPM PWM operation modes.

typedef enum *_tpm_pwm_level_select* tpm_pwm_level_select_t
TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

typedef enum *_tpm_pwm_pause_level_select* tpm_pwm_pause_level_select_t
TPM PWM output when first enabled or paused: set or clear.

typedef enum *_tpm_chnl_control_bit_mask* tpm_chnl_control_bit_mask_t
List of TPM channel modes and level control bit mask.

typedef struct *_tpm_chnl_pwm_signal_param* tpm_chnl_pwm_signal_param_t
Options to configure a TPM channel's PWM signal.

typedef enum *_tpm_trigger_select* tpm_trigger_select_t

Trigger sources available.

This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

typedef enum *_tpm_trigger_source* tpm_trigger_source_t

Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal triger.

typedef enum *_tpm_ext_trigger_polarity* tpm_ext_trigger_polarity_t

External trigger source polarity.

Note: Selects the polarity of the external trigger source.

typedef enum *_tpm_output_compare_mode* tpm_output_compare_mode_t

TPM output compare modes.

typedef enum *_tpm_input_capture_edge* tpm_input_capture_edge_t

TPM input capture edge.

typedef struct *_tpm_dual_edge_capture_param* tpm_dual_edge_capture_param_t

TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_quad_decode_mode* tpm_quad_decode_mode_t

TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_phase_polarity* tpm_phase_polarity_t

TPM quadrature phase polarities.

typedef struct *_tpm_phase_param* tpm_phase_params_t

TPM quadrature decode phase parameters.

typedef enum *_tpm_clock_source* tpm_clock_source_t

TPM clock source selection.

typedef enum *_tpm_clock_prescale* tpm_clock_prescale_t

TPM prescale value selection for the clock source.

typedef struct *_tpm_config* tpm_config_t

TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the TPM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

typedef enum *_tpm_interrupt_enable* tpm_interrupt_enable_t

List of TPM interrupts.

typedef enum *_tpm_status_flags* tpm_status_flags_t

List of TPM flags.

typedef void (*tpm_callback_t)(TPM_Type *base)

TPM callback function pointer.

Param base
TPM peripheral base address.

static inline void TPM_Reset(TPM_Type *base)

Performs a software reset on the TPM module.

Reset all internal logic and registers, except the Global Register. Remains set until cleared by software.

Note: TPM software reset is available on certain SoC's only

Parameters

- base – TPM peripheral base address

void TPM_DriverIRQHandler(uint32_t instance)

TPM driver IRQ handler common entry.

This function provides the common IRQ request entry for TPM.

Parameters

- instance – TPM instance.

TPM_TIMEOUT

Max loops to wait for writing register.

When writing MOD CnV CnSC and SC register, driver will wait until register is updated. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

TPM_MAX_COUNTER_VALUE(x)

Help macro to get the max counter value.

struct _tpm_chnl_pwm_signal_param

#include <fsl_tpm.h> Options to configure a TPM channel's PWM signal.

Public Members

tpm_chnl_t chnlNumber

TPM channel to configure. In combined mode (available in some SoC's), this represents the channel pair number

tpm_pwm_pause_level_select_t pauseLevel

PWM output level when counter first enabled or paused

tpm_pwm_level_select_t level

PWM output active level select

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=always active signal (100% duty cycle)

uint8_t firstEdgeDelayPercent

Used only in combined PWM mode to generate asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure, leave as 0. Should be specified as percentage of the PWM period, (dutyCyclePercent + firstEdgeDelayPercent) value should be not greate than 100.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

tpm_pwm_pause_level_select_t secPauseLevel

Used only in combined PWM mode. Define the second channel output level when counter first enabled or paused

uint8_t deadTimeValue[2]

The dead time value for channel n and n+1 in combined complementary PWM mode. Deadtime insertion is disabled when this value is zero, otherwise deadtime insertion for channel n/n+1 is configured as (deadTimeValue * 4) clock cycles. deadTimeValue's available range is 0 ~ 15.

struct __tpm__dual__edge__capture__param

#include <fsl_tpm.h> TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

Public Members

bool enableSwap

true: Use channel n+1 input, channel n input is ignored; false: Use channel n input, channel n+1 input is ignored

tpm_input_capture_edge_t currChanEdgeMode

Input capture edge select for channel n

tpm_input_capture_edge_t nextChanEdgeMode

Input capture edge select for channel n+1

struct __tpm__phase__param

#include <fsl_tpm.h> TPM quadrature decode phase parameters.

Public Members

uint32_t phaseFilterVal

Filter value, filter is disabled when the value is zero

tpm_phase_polarity_t phasePolarity

Phase polarity

struct __tpm__config

#include <fsl_tpm.h> TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the TPM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

tpm_clock_prescale_t prescale

Select TPM clock prescale value

bool useGlobalTimeBase

true: The TPM channels use an external global time base (the local counter still use for generate overflow interrupt and DMA request); false: All TPM channels use the local counter as their timebase

bool syncGlobalTimeBase

true: The TPM counter is synchronized to the global time base; false: disabled

tpm_trigger_select_t triggerSelect

Input trigger to use for controlling the counter operation

tpm_trigger_source_t triggerSource

Decides if we use external or internal trigger.

tpm_ext_trigger_polarity_t extTriggerPolarity

when using external trigger source, need selects the polarity of it.

bool enableDoze

true: TPM counter is paused in doze mode; false: TPM counter continues in doze mode

bool enableDebugMode

true: TPM counter continues in debug mode; false: TPM counter is paused in debug mode

bool enableReloadOnTrigger

true: TPM counter is reloaded on trigger; false: TPM counter not reloaded

bool enableStopOnOverflow

true: TPM counter stops after overflow; false: TPM counter continues running after overflow

bool enableStartOnTrigger

true: TPM counter only starts when a trigger is detected; false: TPM counter starts immediately

bool enablePauseOnTrigger

true: TPM counter will pause while trigger remains asserted; false: TPM counter continues running

uint8_t chnlPolarity

Defines the input/output polarity of the channels in POL register

2.67 TRDC: Trusted Resource Domain Controller

void TRDC_Init(TRDC_Type *base)

Initializes the TRDC module.

This function enables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

void TRDC_Deinit(TRDC_Type *base)

De-initializes the TRDC module.

This function disables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

static inline uint8_t TRDC_GetCurrentMasterDomainId(TRDC_Type *base)

Gets the domain ID of the current bus master.

Parameters

- base – TRDC peripheral base address.

Returns

Domain ID of current bus master.

void TRDC_GetHardwareConfig(TRDC_Type *base, *trdc_hardware_config_t* *config)

Gets the TRDC hardware configuration.

This function gets the TRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.

static inline void TRDC_SetDacGlobalValid(TRDC_Type *base)

Sets the TRDC DAC(Domain Assignment Controllers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

static inline void TRDC_LockMasterDomainAssignment(TRDC_Type *base, uint8_t master)

Locks the bus master domain assignment register.

This function locks the master domain assignment. After it is locked, the register can't be changed until next reset.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure.

static inline void TRDC_SetMasterDomainAssignmentValid(TRDC_Type *base, uint8_t master, bool valid)

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure.
- valid – True to set valid, false to set invalid.

void TRDC_GetDefaultProcessorDomainAssignment(*trdc_processor_domain_assignment_t* *domainAssignment)

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:

```
assignment->domainId          = 0U;
assignment->domainIdSelect    = kTRDC_DidMda;
assignment->lock              = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

void TRDC_GetDefaultNonProcessorDomainAssignment(*trdc_non_processor_domain_assignment_t* *domainAssignment)

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```
assignment->domainId          = 0U;
assignment->privilegeAttr     = kTRDC_ForceUser;
assignment->secureAttr        = kTRDC_ForceSecure;
assignment->bypassDomainId    = 0U;
assignment->lock              = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

void TRDC_SetProcessorDomainAssignment(TRDC_Type *base, const *trdc_processor_domain_assignment_t* *domainAssignment)

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter assignIndex specifies which assignment register to set.

Example: Set domain assignment for core 0.

```
trdc_processor_domain_assignment_t processorAssignment;

TRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
TRDC_SetMasterDomainAssignment(TRDC, &processorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- domainAssignment – Pointer to the assignment structure.

static inline void TRDC_EnableProcessorDomainAssignment(TRDC_Type *base, bool enable)

Enables the processor bus master domain assignment.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

void TRDC_SetNonProcessorDomainAssignment(TRDC_Type *base, uint8_t master, const *trdc_non_processor_domain_assignment_t* *domainAssignment)

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter assignIndex specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```
trdc_non_processor_domain_assignment_t nonProcessorAssignment;

TRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx      = xxx;

TRDC_SetMasterDomainAssignment(TRDC, kTrdcMasterDma0, 0U, &nonProcessorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to trdc_master_t in processor header file.
- domainAssignment – Pointer to the assignment structure.

void TRDC_GetDefaultIDAUConfig(*trdc_idau_config_t* *idauConfiguration)

Gets the default IDAU(Implementation-Defined Attribution Unit) configuration.

```
config->lockSecureVTOR    = false;
config->lockNonsecureVTOR = false;
config->lockSecureMPU     = false;
config->lockNonsecureMPU  = false;
config->lockSAU           = false;
```

Parameters

- idauConfiguration – Pointer to the configuration structure.

void TRDC_SetIDAU(TRDC_Type *base, const *trdc_idau_config_t* *idauConfiguration)

Sets the IDAU(Implementation-Defined Attribution Unit) control configuration.

Example: Lock the secure and non-secure MPU registers.

```
trdc_idau_config_t idauConfiguration;

TRDC_GetDefaultIDAUConfig(&idauConfiguration);

idauConfiguration.lockSecureMPU = true;
idauConfiguration.lockNonsecureMPU     = true;
TRDC_SetIDAU(TRDC, &idauConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- idauConfiguration – Pointer to the configuration structure.

static inline void TRDC_EnableFlashLogicalWindow(TRDC_Type *base, bool enable)

Enables/disables the FLW(flash logical window) function.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

static inline void TRDC_LockFlashLogicalWindow(TRDC_Type *base)

Locks FLW registers. Once locked the registers can noy be updated until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint32_t TRDC_GetFlashLogicalWindowPbase(TRDC_Type *base)

Gets the FLW physical base address.

Parameters

- base – TRDC peripheral base address.

Returns

Physical address of the FLW function.

static inline void TRDC_GetSetFlashLogicalWindowSize(TRDC_Type *base, uint16_t size)

Sets the FLW size.

Parameters

- base – TRDC peripheral base address.
- size – Size of the FLW in unit of 32k bytes.

void TRDC_GetDefaultFlashLogicalWindowConfig(*trdc_flw_config_t* *flwConfiguration)

Gets the default FLW(Flsh Logical Window) configuration.

```
config->blockCount    = false;
config->arrayBaseAddr = false;
config->lock      = false;
config->enable    = false;
```

Parameters

- flwConfiguration – Pointer to the configuration structure.

void TRDC_SetFlashLogicalWindow(TRDC_Type *base, const *trdc_flw_config_t* *flwConfiguration)

Sets the FLW function's configuration.

```
trdc_flw_config_t flwConfiguration;

TRDC_GetDefaultIDAUConfig(&flwConfiguration);

flwConfiguration.blockCount = 32U;
flwConfiguration.arrayBaseAddr = 0xXXXXXXXX;
TRDC_SetIDAU(TRDC, &flwConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- flwConfiguration – Pointer to the configuration structure.

status_t TRDC_GetAndClearFirstDomainError(TRDC_Type *base, *trdc_domain_error_t* *error)

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.

Returns

If the access violation is captured, this function returns the kStatus_Success. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the kStatus_NoData.

status_t TRDC_GetAndClearFirstSpecificDomainError(TRDC_Type *base, *trdc_domain_error_t* *error, uint8_t domainId)

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.
- domainId – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the kStatus_Success. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the kStatus_NoData.

static inline void TRDC_SetMrcGlobalValid(TRDC_Type *base)

Sets the TRDC MRC(Memory Region Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint8_t TRDC_GetMrcRegionNumber(TRDC_Type *base, uint8_t mrcIdx)

Gets the TRDC MRC(Memory Region Checkers) region number valid.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.

Returns

the region number of the given MRC instance

void TRDC_MrcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, uint8_t mrcIdx, uint8_t regIdx)

Sets the memory access configuration for one of the access control register of one MRC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMrcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mrcIdx – MRC index.
- regIdx – Register number.

void TRDC_MrcEnableDomainNseUpdate(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask, bool enable)

Enables the update of the selected domains.

After the domains' update are enabled, their regions' NSE bits can be set or clear.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domains to be enabled.
- enable – True to enable, false to disable.

void TRDC_MrcRegionNseSet(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)

Sets the NSE bits of the selected regions for domains.

This function sets the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to set.

void TRDC_MrcRegionNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)

Clears the NSE bits of the selected regions for domains.

This function clears the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to clear.

void TRDC_MrcDomainNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask)

Clears the NSE bits for all the regions of the selected domains.

This function clears the NSE bits for all regions of selected domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domains whose NSE bits to clear.

void TRDC_MrcSetRegionDescriptorConfig(TRDC_Type *base, const *trdc_mrc_region_descriptor_config_t* *config)

Sets the configuration for one of the region descriptor per domain per MRC instnce.

This function sets the configuration for one of the region descriptor, including the start and end address of the region, memory access control policy and valid.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to region descriptor configuration structure.

static inline void TRDC_SetMbcGlobalValid(TRDC_Type *base)

Sets the TRDC MBC(Memory Block Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

void TRDC_GetMbcHardwareConfig(TRDC_Type *base, *trdc_slave_memory_hardware_config_t* *config, uint8_t mbcIdx, uint8_t slvIdx)

Gets the hardware configuration of the one of two slave memories within each MBC(memory block checker).

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.
- mbcIdx – MBC number.
- slvIdx – Slave number.

void TRDC_MbcSetNseUpdateConfig(TRDC_Type *base, const *trdc_mbc_nse_update_config_t* *config, uint8_t mbcIdx)

Sets the NSR update configuration for one of the MBC instance.

After set the NSE configuration, the configured memory area can be updateby NSE set/clear.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to NSE update configuration structure.
- mbcIdx – MBC index.

void TRDC_MbcWordNseSet(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Sets the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to set.

void TRDC_MbcWordNseClear(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Clears the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to clear.

void TRDC_MbcNseClearAll(TRDC_Type *base, uint8_t mbcIdx, uint16_t domainMask, uint8_t slaveMask)

Clears all configuration words' NSE bits of the selected domain and memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- domainMask – Mask of the domains whose NSE bits to clear, 0b110 means clear domain 1&2.
- slaveMask – Mask of the slaves whose NSE bits to clear, 0x11 means clear all slave 0&1's NSE bits.

void TRDC_MbcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, uint8_t mbcIdx, uint8_t rgdIdx)

Sets the memory access configuration for one of the region descriptor of one MBC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMbcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mbcIdx – MBC index.
- rgdIdx – Region descriptor number.

void TRDC_MbcSetMemoryBlockConfig(TRDC_Type *base, const *trdc_mbc_memory_block_config_t* *config)

Sets the configuration for one of the memory block per domain per MBC instnce.

This function sets the configuration for one of the memory block, including the memory access control policy and nse enable.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to memory block configuration structure.

enum _trdc_did_sel

TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

Values:

enumerator kTRDC_DidMda

Use MDAn[2:0] as DID.

enumerator kTRDC_DidInput

Use the input DID (DID_in) as DID.

enumerator kTRDC_DidMdaAndInput

Use MDAn[2] concatenated with DID_in[1:0] as DID.

enumerator kTRDC_DidReserved

Reserved.

enum _trdc_secure_attr

TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

Values:

enumerator kTRDC_ForceSecure

Force the bus attribute for this master to secure.

enumerator kTRDC_ForceNonSecure

Force the bus attribute for this master to non-secure.

enumerator kTRDC_MasterSecure

Use the bus master's secure/nonsecure attribute directly.

enumerator kTRDC_MasterSecure1

Use the bus master's secure/nonsecure attribute directly.

enum _trdc_privilege_attr

TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

Values:

enumerator kTRDC_ForceUser

Force the bus attribute for this master to user.

enumerator kTRDC_ForcePrivilege

Force the bus attribute for this master to privileged.

enumerator kTRDC_MasterPrivilege

Use the bus master's attribute directly.

enumerator kTRDC_MasterPrivilege1

Use the bus master's attribute directly.

enum _trdc_controller

TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

Values:

enumerator kTRDC_MemBlockController0

Memory block checker 0.

enumerator kTRDC_MemBlockController1
Memory block checker 1.

enumerator kTRDC_MemBlockController2
Memory block checker 2.

enumerator kTRDC_MemBlockController3
Memory block checker 3.

enumerator kTRDC_MemRegionChecker0
Memory region checker 0.

enumerator kTRDC_MemRegionChecker1
Memory region checker 1.

enumerator kTRDC_MemRegionChecker2
Memory region checker 2.

enumerator kTRDC_MemRegionChecker3
Memory region checker 3.

enumerator kTRDC_MemRegionChecker4
Memory region checker 4.

enumerator kTRDC_MemRegionChecker5
Memory region checker 5.

enumerator kTRDC_MemRegionChecker6
Memory region checker 6.

enum _trdc_error_state
TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or TRDC_MRCn_DERR_W1[EST].

Values:

enumerator kTRDC_ErrorStateNone
No access violation detected.

enumerator kTRDC_ErrorStateNone1
No access violation detected.

enumerator kTRDC_ErrorStateSingle
Single access violation detected.

enumerator kTRDC_ErrorStateMulti
Multiple access violation detected.

enum _trdc_error_attr
TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or TRDC_MRCn_DERR_W1[EATR].

Values:

enumerator kTRDC_ErrorSecureUserInst
Secure user mode, instruction fetch access.

enumerator kTRDC_ErrorSecureUserData
Secure user mode, data access.

enumerator kTRDC_ErrorSecurePrivilegeInst
Secure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorSecurePrivilegeData
Secure privileged mode, data access.

enumerator kTRDC_ErrorNonSecureUserInst
NonSecure user mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecureUserData
NonSecure user mode, data access.

enumerator kTRDC_ErrorNonSecurePrivilegeInst
NonSecure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum __trdc_error_type
TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

Values:

enumerator kTRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kTRDC_ErrorTypeWrite
Error occurs on write reference.

enum __trdc_region_descriptor
The region descriptor enumeration, used to form a mask to set/clear the NSE bits for one or several regions.

Values:

enumerator kTRDC_RegionDescriptor0
Region descriptor 0.

enumerator kTRDC_RegionDescriptor1
Region descriptor 1.

enumerator kTRDC_RegionDescriptor2
Region descriptor 2.

enumerator kTRDC_RegionDescriptor3
Region descriptor 3.

enumerator kTRDC_RegionDescriptor4
Region descriptor 4.

enumerator kTRDC_RegionDescriptor5
Region descriptor 5.

enumerator kTRDC_RegionDescriptor6
Region descriptor 6.

enumerator kTRDC_RegionDescriptor7
Region descriptor 7.

enumerator kTRDC_RegionDescriptor8
Region descriptor 8.

enumerator kTRDC_RegionDescriptor9
Region descriptor 9.

enumerator kTRDC_RegionDescriptor10
Region descriptor 10.

enumerator kTRDC_RegionDescriptor11
Region descriptor 11.

enumerator kTRDC_RegionDescriptor12
Region descriptor 12.

enumerator kTRDC_RegionDescriptor13
Region descriptor 13.

enumerator kTRDC_RegionDescriptor14
Region descriptor 14.

enumerator kTRDC_RegionDescriptor15
Region descriptor 15.

enum _trdc_MRC_domain
The MRC domain enumeration, used to form a mask to enable/disable the update or clear all NSE bits of one or several domains.

Values:

enumerator kTRDC_MrcDomain0
Domain 0.

enumerator kTRDC_MrcDomain1
Domain 1.

enumerator kTRDC_MrcDomain2
Domain 2.

enumerator kTRDC_MrcDomain3
Domain 3.

enumerator kTRDC_MrcDomain4
Domain 4.

enumerator kTRDC_MrcDomain5
Domain 5.

enumerator kTRDC_MrcDomain6
Domain 6.

enumerator kTRDC_MrcDomain7
Domain 7.

enumerator kTRDC_MrcDomain8
Domain 8.

enumerator kTRDC_MrcDomain9
Domain 9.

enumerator kTRDC_MrcDomain10
Domain 10.

enumerator kTRDC_MrcDomain11
Domain 11.

enumerator kTRDC_MrcDomain12
Domain 12.

enumerator kTRDC_MrcDomain13
Domain 13.

enumerator kTRDC_MrcDomain14
Domain 14.

enumerator kTRDC_MrcDomain15
Domain 15.

enum _trdc_MBC_domain
The MBC domain enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several domains.

Values:

enumerator kTRDC_MbcDomain0
Domain 0.

enumerator kTRDC_MbcDomain1
Domain 1.

enumerator kTRDC_MbcDomain2
Domain 2.

enumerator kTRDC_MbcDomain3
Domain 3.

enumerator kTRDC_MbcDomain4
Domain 4.

enumerator kTRDC_MbcDomain5
Domain 5.

enumerator kTRDC_MbcDomain6
Domain 6.

enumerator kTRDC_MbcDomain7
Domain 7.

enum _trdc_MBC_memory
The MBC slave memory enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several memory block.

Values:

enumerator kTRDC_MbcSlaveMemory0
Memory 0.

enumerator kTRDC_MbcSlaveMemory1
Memory 1.

enumerator kTRDC_MbcSlaveMemory2
Memory 2.

enumerator kTRDC_MbcSlaveMemory3
Memory 3.

enum _trdc_MBC_bit
The MBC bit enumeration, used to form a mask to set/clear configured words' NSE.

Values:

enumerator kTRDC_MbcBit0
Bit 0.

enumerator kTRDC_MbcBit1
Bit 1.

enumerator kTRDC_MbcBit2
Bit 2.

enumerator kTRDC_MbcBit3
Bit 3.

enumerator kTRDC_MbcBit4
Bit 4.

enumerator kTRDC_MbcBit5
Bit 5.

enumerator kTRDC_MbcBit6
Bit 6.

enumerator kTRDC_MbcBit7
Bit 7.

enumerator kTRDC_MbcBit8
Bit 8.

enumerator kTRDC_MbcBit9
Bit 9.

enumerator kTRDC_MbcBit10
Bit 10.

enumerator kTRDC_MbcBit11
Bit 11.

enumerator kTRDC_MbcBit12
Bit 12.

enumerator kTRDC_MbcBit13
Bit 13.

enumerator kTRDC_MbcBit14
Bit 14.

enumerator kTRDC_MbcBit15
Bit 15.

enumerator kTRDC_MbcBit16
Bit 16.

enumerator kTRDC_MbcBit17
Bit 17.

enumerator kTRDC_MbcBit18
Bit 18.

enumerator kTRDC_MbcBit19
Bit 19.

enumerator kTRDC_MbcBit20
Bit 20.

enumerator kTRDC_MbcBit21
Bit 21.

enumerator kTRDC_MbcBit22
Bit 22.

enumerator kTRDC_MbcBit23
Bit 23.

enumerator kTRDC_MbcBit24
Bit 24.

enumerator kTRDC_MbcBit25
Bit 25.

enumerator kTRDC_MbcBit26
Bit 26.

enumerator kTRDC_MbcBit27
Bit 27.

enumerator kTRDC_MbcBit28
Bit 28.

enumerator kTRDC_MbcBit29
Bit 29.

enumerator kTRDC_MbcBit30
Bit 30.

enumerator kTRDC_MbcBit31
Bit 31.

typedef struct *_trdc_hardware_config* trdc_hardware_config_t
TRDC hardware configuration.

typedef struct *_trdc_slave_memory_hardware_config* trdc_slave_memory_hardware_config_t
Hardware configuration of the two slave memories within each MBC(memory block checker).

typedef enum *_trdc_did_sel* trdc_did_sel_t
TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

typedef enum *_trdc_secure_attr* trdc_secure_attr_t
TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

typedef struct *_trdc_processor_domain_assignment* trdc_processor_domain_assignment_t
Domain assignment for the processor bus master.

typedef enum *_trdc_privilege_attr* trdc_privilege_attr_t
TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

typedef struct *_trdc_non_processor_domain_assignment*
trdc_non_processor_domain_assignment_t
Domain assignment for the non-processor bus master.

typedef struct *_trdc_idau_config* trdc_idau_config_t
IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

typedef struct *_trdc_flw_config* trdc_flw_config_t
FLW(Flash Logical Window) configuration.

typedef enum *_trdc_controller* trdc_controller_t
TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

typedef enum *_trdc_error_state* trdc_error_state_t

TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or TRDC_MRCn_DERR_W1[EST].

typedef enum *_trdc_error_attr* trdc_error_attr_t

TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or TRDC_MRCn_DERR_W1[EATR].

typedef enum *_trdc_error_type* trdc_error_type_t

TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

typedef struct *_trdc_domain_error* trdc_domain_error_t

TRDC domain error definition.

typedef struct *_trdc_memory_access_control_config* trdc_memory_access_control_config_t

Memory access control configuration for MBC/MRC.

typedef struct *_trdc_mrc_region_descriptor_config* trdc_mrc_region_descriptor_config_t

The configuration of each region descriptor per domain per MRC instance.

typedef struct *_trdc_mbc_nse_update_config* trdc_mbc_nse_update_config_t

The configuration of MBC NSE update.

typedef struct *_trdc_mbc_memory_block_config* trdc_mbc_memory_block_config_t

The configuration of each memory block per domain per MBC instance.

FSL_TRDC_DRIVER_VERSION

struct _trdc_hardware_config

#include <fsl_trdc.h> TRDC hardware configuration.

Public Members

uint8_t masterNumber

Number of bus masters.

uint8_t domainNumber

Number of domains.

uint8_t mbcNumber

Number of MBCs.

uint8_t mrcNumber

Number of MRCs.

struct _trdc_slave_memory_hardware_config

#include <fsl_trdc.h> Hardware configuration of the two slave memories within each MBC(memory block checker).

Public Members

uint32_t blockNum

Number of blocks.

uint32_t blockSize

Block size.

struct _trdc_processor_domain_assignment

#include <fsl_trdc.h> Domain assignment for the processor bus master.

Public Members

uint32_t domainId
: Domain ID.

uint32_t domainIdSelect
: Domain ID select method, see trdc_did_sel_t.

uint32_t ___pad0___
: Reserved.

uint32_t secureAttr
: Secure attribute, see trdc_secure_attr_t.

uint32_t ___pad1___
: Reserved.

uint32_t lock
: Lock the register.

uint32_t ___pad2___
: Reserved.

struct __trdc__non__processor__domain__assignment
: *#include <fsl_trdc.h>* Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId
: Domain ID.

uint32_t privilegeAttr
: Privileged attribute, see trdc_privilege_attr_t.

uint32_t secureAttr
: Secure attribute, see trdc_secure_attr_t.

uint32_t bypassDomainId
: Bypass domain ID.

uint32_t ___pad0___
: Reserved.

uint32_t lock
: Lock the register.

uint32_t ___pad1___
: Reserved.

struct __trdc__idau__config
: *#include <fsl_trdc.h>* IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

Public Members

uint32_t ___pad0___
: Reserved.

uint32_t lockSecureVTOR
: Disable writes to secure VTOR(Vector Table Offset Register).

uint32_t lockNonsecureVTOR
: Disable writes to non-secure VTOR, Application interrupt and Reset Control Registers.

uint32_t lockSecureMPU
: Disable writes to secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor in Secure state.

uint32_t lockNonsecureMPU
: Disable writes to non-secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor.

uint32_t lockSAU
: Disable writes to SAU(Security Attribution Unit) registers.

uint32_t ___pad1___
: Reserved.

struct __trdc__flw__config
: *#include <fsl_trdc.h>* FLW(Flash Logical Window) configuration.

Public Members

uint16_t blockCount
: Block count of the Flash Logic Window in 32KByte blocks.

uint32_t arrayBaseAddr
: Flash array base address of the Flash Logical Window.

bool lock
: Disable writes to FLW registers.

bool enable
: Enable FLW function.

struct __trdc__domain__error
: *#include <fsl_trdc.h>* TRDC domain error definition.

Public Members

trdc_controller_t controller
: Which controller captured access violation.

uint32_t address
: Access address that generated access violation.

trdc_error_state_t errorState
: Error state.

trdc_error_attr_t errorAttr
: Error attribute.

trdc_error_type_t errorType
: Error type.

uint8_t errorPort
: Error port.

uint8_t domainId
: Domain ID.

uint8_t slaveMemoryIdx
The slave memory index. Only apply when violation in MBC.

struct __trdc_memory_access_control_config
#include <fsl_trdc.h> Memory access control configuration for MBC/MRC.

Public Members

uint32_t nonsecureUsrX
Allow nonsecure user execute access.

uint32_t nonsecureUsrW
Allow nonsecure user write access.

uint32_t nonsecureUsrR
Allow nonsecure user read access.

uint32_t ___pad0___
Reserved.

uint32_t nonsecurePrivX
Allow nonsecure privilege execute access.

uint32_t nonsecurePrivW
Allow nonsecure privilege write access.

uint32_t nonsecurePrivR
Allow nonsecure privilege read access.

uint32_t ___pad1___
Reserved.

uint32_t secureUsrX
Allow secure user execute access.

uint32_t secureUsrW
Allow secure user write access.

uint32_t secureUsrR
Allow secure user read access.

uint32_t ___pad2___
Reserved.

uint32_t securePrivX
Allownsecure privilege execute access.

uint32_t securePrivW
Allownsecure privilege write access.

uint32_t securePrivR
Allownsecure privilege read access.

uint32_t ___pad3___
Reserved.

uint32_t lock
Lock the configuration until next reset, only apply to access control register 0.

struct __trdc_mrc_region_descriptor_config
#include <fsl_trdc.h> The configuration of each region descriptor per domain per MRC instance.

Public Members

uint8_t memoryAccessControlSelect
: Select one of the 8 access control policies for this region, for access cotrol policies see trdc_memory_access_control_config_t.

uint32_t startAddr
: Physical start address.

bool valid
: Lock the register.

bool nseEnable
: Enable non-secure accesses and disable secure accesses.

uint32_t endAddr
: Physical start address.

uint8_t mrcIdx
: The index of the MRC for this configuration to take effect.

uint8_t domainIdx
: The index of the domain for this configuration to take effect.

uint8_t regionIdx
: The index of the region for this configuration to take effect.

struct __trdc_mbc_nse_update_config
: *#include <fsl_trdc.h>* The configuration of MBC NSE update.

Public Members

uint32_t ___pad0___
: Reserved.

uint32_t wordIdx
: MBC configuration word index to be updated.

uint32_t ___pad1___
: Reserved.

uint32_t memorySelect
: Bit mask of the selected memory to be updated. _trdc_MBC_memory.

uint32_t ___pad2___
: Reserved.

uint32_t domianSelect
: Bit mask of the selected domain to be updated. _trdc_MBC_domain.

uint32_t ___pad3___
: Reserved.

uint32_t autoIncrement
: Whether to increment the word index after current word is updated using this configuration.

struct __trdc_mbc_memory_block_config
: *#include <fsl_trdc.h>* The configuration of each memory block per domain per MBC instance.

Public Members

uint32_t memoryAccessControlSelect

Select one of the 8 access control policies for this memory block, for access cotrol policies see trdc_memory_access_control_config_t.

uint32_t nseEnable

Enable non-secure accesses and disable secure accesses.

uint32_t mbcIdx

The index of the MBC for this configuration to take effect.

uint32_t domainIdx

The index of the domain for this configuration to take effect.

uint32_t slaveMemoryIdx

The index of the slave memory for this configuration to take effect.

uint32_t memoryBlockIdx

The index of the memory block for this configuration to take effect.

2.68 TRGMUX: Trigger Mux Driver

static inline void TRGMUX_LockRegister(TRGMUX_Type *base, uint32_t index)

Sets the flag of the register which is used to mark writeable.

The function sets the flag of the register which is used to mark writeable. Example:

```
TRGMUX_LockRegister(TRGMUX0,kTRGMUX_Trgmux0Dmamux0);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum trgmux_device_t defined in <SOC>.h.

status_t TRGMUX_SetTriggerSource(TRGMUX_Type *base, uint32_t index, *trgmux_trigger_input_t* input, uint32_t trigger_src)

Configures the trigger source of the appointed peripheral.

The function configures the trigger source of the appointed peripheral. Example:

```
TRGMUX_SetTriggerSource(TRGMUX0, kTRGMUX_Trgmux0Dmamux0, kTRGMUX_TriggerInput0,
↪ kTRGMUX_SourcePortPin);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum trgmux_device_t defined in <SOC>.h.
- input – The MUX select for peripheral trigger input
- trigger_src – The trigger inputs for various peripherals. See the enum trgmux_source_t defined in <SOC>.h.

Return values

- kStatus_Success – Configured successfully.

- kStatus_TRGMUX_Locked – Configuration failed because the register is locked.

FSL_TRGMUX_DRIVER_VERSION
TRGMUX driver version.

TRGMUX configure status.

Values:

enumerator kStatus_TRGMUX_Locked
Configure failed for register is locked

enum _trgmux_trigger_input
Defines the MUX select for peripheral trigger input.

Values:

enumerator kTRGMUX_TriggerInput0
The MUX select for peripheral trigger input 0

enumerator kTRGMUX_TriggerInput1
The MUX select for peripheral trigger input 1

enumerator kTRGMUX_TriggerInput2
The MUX select for peripheral trigger input 2

enumerator kTRGMUX_TriggerInput3
The MUX select for peripheral trigger input 3

typedef enum *_trgmux_trigger_input* trgmux_trigger_input_t
Defines the MUX select for peripheral trigger input.

2.69 TSTMR: Timestamp Timer Driver

void TSTMR_Init(TSTMR_Type *base)
Init TSTMR.

This function initializes the TSTMR module.

Parameters

- base – TSTMR peripheral base address.

void TSTMR_Deinit(TSTMR_Type *base)
Deinit TSTMR.

This function deinitializes the TSTMR module.

Parameters

- base – TSTMR peripheral base address.

FSL_TSTMR_DRIVER_VERSION
Version 2.1.0

static inline uint64_t TSTMR_ReadTimeStamp(TSTMR_Type *base)
Reads the time stamp.

This function reads the low and high registers and returns the 56-bit free running counter value. This can be read by software at any time to determine the software ticks. TSTMR registers can be read with 32-bit accesses only. The TSTMR LOW read should occur first, followed by the TSTMR HIGH read.

Parameters

- base – TSTMR peripheral base address.

Returns

The 56-bit time stamp value.

void TSTMR_DelayUs(TSTMR_Type *base, uint64_t delayInUs)

Delays for a specified number of microseconds.

This function repeatedly reads the timestamp register and waits for the user-specified delay value.

Parameters

- base – TSTMR peripheral base address.
- delayInUs – Delay value in microseconds.

2.70 VBAT: Smart Power Switch

The enumeration of VBAT module status.

Values:

enumerator kStatus_VBAT_Fro16kNotEnabled

Internal 16kHz free running oscillator not enabled.

enumerator kStatus_VBAT_BandgapNotEnabled

Bandgap not enabled.

enum _vbat_status_flag

The enumeration of VBAT status flags.

Values:

enumerator kVBAT_StatusFlagPORDetect

VBAT domain has been reset

enumerator kVBAT_StatusFlagWakeupPin

A falling edge is detected on the wakeup pin.

enumerator kVBAT_StatusFlagBandgapTimer0

Bandgap Timer0 period reached.

enumerator kVBAT_StatusFlagBandgapTimer1

Bandgap Timer1 period reached.

enumerator kVBAT_StatusFlagLdoReady

LDO is enabled and ready.

enum _vbat_interrupt_enable

The enumeration of VBAT interrupt enable.

Values:

enumerator kVBAT_InterruptEnablePORDetect

Enable POR detect interrupt.

enumerator kVBAT_InterruptEnableWakeupPin

Enable the interrupt when a falling edge is detected on the wakeup pin.

enumerator kVBAT_InterruptEnableBandgapTimer0
Enable the interrupt if Bandgap Timer0 period reached.

enumerator kVBAT_InterruptEnableBandgapTimer1
Enable the interrupt if Bandgap Timer1 period reached.

enumerator kVBAT_InterruptEnableLdoReady
Enable LDO ready interrupt.

enumerator kVBAT_AllInterruptsEnable
Enable all interrupts.

enum _vbat_wakeup_enable
The enumeration of VBAT wakeup enable.

Values:

enumerator kVBAT_WakeupEnablePORDetect
Enable POR detect wakeup.

enumerator kVBAT_WakeupEnableWakeupPin
Enable wakeup feature when a falling edge is detected on the wakeup pin.

enumerator kVBAT_WakeupEnableBandgapTimer0
Enable wakeup feature when bandgap timer0 period reached.

enumerator kVBAT_WakeupEnableBandgapTimer1
Enable wakeup feature when bandgap timer1 period reached.

enumerator kVBAT_WakeupEnableLdoReady
Enable wakeup when LDO ready.

enumerator kVBAT_AllWakeupsEnable
Enable all wakeup.

enum _vbat_bandgap_timer_id
The enumeration of bandgap timer id, VBAT support two bandgap timers.

Values:

enumerator kVBAT_BandgapTimer0
Bandgap Timer0.

enumerator kVBAT_BandgapTimer1
Bandgap Timer1.

enum _vbat_bandgap_refresh_period
The enumeration of bandgap refresh period.

Values:

enumerator kVBAT_BandgapRefresh7P8125ms
Bandgap refresh every 7.8125ms.

enumerator kVBAT_BandgapRefresh15P625ms
Bandgap refresh every 15.625ms.

enumerator kVBAT_BandgapRefresh31P25ms
Bandgap refresh every 31.25ms.

enumerator kVBAT_BandgapRefresh62P5ms
Bandgap refresh every 62.5ms.

enum _vbat_bandgap_timer_timeout_period

The enumeration of bandgap timer timeout period.

Values:

enumerator kVBAT_BangapTimerTimeout1s

Bandgap timer timerout every 1s.

enumerator kVBAT_BangapTimerTimeout500ms

Bandgap timer timerout every 500ms.

enumerator kVBAT_BangapTimerTimeout250ms

Bandgap timer timerout every 250ms.

enumerator kVBAT_BangapTimerTimeout125ms

Bandgap timer timerout every 125ms.

enumerator kVBAT_BangapTimerTimeout62P5ms

Bandgap timer timerout every 62.5ms.

enumerator kVBAT_BangapTimerTimeout31P25ms

Bandgap timer timerout every 31.25ms.

typedef enum *_vbat_bandgap_refresh_period* vbat_bandgap_refresh_period_t

The enumeration of bandgap refresh period.

typedef enum *_vbat_bandgap_timer_timeout_period* vbat_bandgap_timer_timeout_period_t

The enumeration of bandgap timer timeout period.

typedef struct *_vbat_fro16k_config* vbat_fro16k_config_t

The structure of internal 16kHz free running oscillator attributes.

VBAT_LDO_READY_TIMEOUT

Max loops to wait for LDO ready.

When configuring the LDO, driver will wait for LDO ready. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

void VBAT_ConfigFRO16k(VBAT_Type *base, const *vbat_fro16k_config_t* *config)

Configure internal 16kHz free running oscillator, including enabel FRO16k, gate FRO16k output.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to vbat_fro16k_config_t structure.

static inline void VBAT_EnableFRO16k(VBAT_Type *base, bool enable)

Enable/disable internal 16kHz free running oscillator.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable 16kHz FRO.
  - **true** Enable internal 16kHz free running oscillator.
  - **false** Disable internal 16kHz free running oscillator.

static inline bool VBAT_CheckFRO16kEnabled(VBAT_Type *base)

Check if internal 16kHz free running oscillator is enabled.

Parameters

- base – VBAT peripheral base address.

Return values

- true – The internal 16kHz Free running oscillator is enabled.
- false – The internal 16kHz Free running oscillator is enabled.

static inline void VBAT_UngateFRO16k(VBAT_Type *base, bool unGateFRO16k)

Ungate/gate FRO 16kHz output clock to other modules.

Parameters

- base – VBAT peripheral base address.
- unGateFRO16k – Used to gate/ungate FRO 16kHz output.
  - **true** FRO 16kHz output clock to other modules is enabled.
  - **false** FRO 16kHz output clock to other modules is disabled.

static inline void VBAT_LockFRO16kSettings(VBAT_Type *base)

Lock settings of internal 16kHz free running oscillator, please note that if locked 16kHz FRO's settings can not be updated until the next POR.

Note: Please note that the operation to ungate/gate FRO 16kHz output clock can not be locked by this function.

Parameters

- base – VBAT peripheral base address.

status_t VBAT_EnableBandgap(VBAT_Type *base, bool enable)

Enable/disable Bandgap.

Note: The FRO16K must be enabled before enabling the bandgap.

Note: This setting can be locked by VBAT_LockLdoRamSettings() function.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable bandgap.
  - **true** Enable the bandgap.
  - **false** Disable the bandgap.

Return values

- kStatus_Success – Success to enable/disable the bandgap.
- kStatus_VBAT_Fro16kNotEnabled – Fail to enable the bandgap due to FRO16k is not enabled previously.

static inline bool VBAT_CheckBandgapEnabled(VBAT_Type *base)

Check if bandgap is enabled.

Parameters

- base – VBAT peripheral base address.

Return values

- true – The bandgap is enabled.
- false – The bandgap is disabled.

static inline void VBAT_EnableBandgapRefreshMode(VBAT_Type *base, bool enableRefreshMode)

Enable/disable bandgap low power refresh mode.

Note: This setting can be locked by VBAT_LockLdoRamSettings() function.

Parameters

- base – VBAT peripheral base address.
- enableRefreshMode – Used to enable/disable bandgap low power refresh mode.
  - **true** Enable bandgap low power refresh mode.
  - **false** Disable bandgap low power refresh mode.

status_t VBAT_EnableBackupSRAMRegulator(VBAT_Type *base, bool enable)

Enable/disable Backup RAM Regulator(RAM_LDO).

Note: This setting can be locked by VBAT_LockLdoRamSettings() function.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable RAM_LDO.
  - **true** Enable backup SRAM regulator.
  - **false** Disable backup SRAM regulator.

Return values

- kStatusSuccess – Success to enable/disable backup SRAM regulator.
- kStatus_VBAT_Fro16kNotEnabled – Fail to enable backup SRAM regulator due to FRO16k is not enabled previously.
- kStatus_VBAT_BandgapNotEnabled – Fail to enable backup SRAM regulator due to the bandgap is not enabled previously.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void VBAT_LockLdoRamSettings(VBAT_Type *base)

Lock settings of RAM_LDO, please note that if locked then RAM_LDO's settings can not be updated until the next POR.

Parameters

- base – VBAT peripheral base address.

status_t VBAT_SwitchSRAMPowerByVBAT(VBAT_Type *base)

Switch the SRAM to be powered by VBAT in software mode.

Note: This function can be used to switch the SRAM to the VBAT retention supply at any time, but please note that the SRAM must not be accessed during this time and software must manually invoke VBAT_SwitchSRAMPowerBySocSupply() before accessing the SRAM again.

Parameters

- base – VBAT peripheral base address.

Return values

- kStatusSuccess – Success to Switch SRAM powered by VBAT.
- kStatus_VBAT_Fro16kNotEnabled – Fail to switch SRAM powered by VBAT due to FRO16K not enabled previously.

static inline void VBAT_SwitchSRAMPowerBySocSupply(VBAT_Type *base)

Switch the RAM to be powered by Soc Supply in software mode.

Parameters

- base – VBAT peripheral base address.

static inline void VBAT_EnableSRAMArrayRetained(VBAT_Type *base, bool enable)

Enable/disable SRAM array remains powered from Soc power, when LDO_RAM is disabled.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable SRAM array power retained.
  - **true** SRAM array is retained when powered from VDD_CORE.
  - **false** SRAM array is not retained when powered from VDD_CORE.

static inline void VBAT_EnableSRAMIsolation(VBAT_Type *base, bool enable)

Enable/disable SRAM isolation.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable SRAM violation.
  - **true** SRAM will be isolated.
  - **false** SRAM state follows the SoC power modes.

status_t VBAT_EnableBandgapTimer(VBAT_Type *base, bool enable, uint8_t timerIdMask)

Enable/disable Bandgap timer.

Note: The bandgap timer is available when the bandgap is enabled and are clocked by the FRO16k.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable bandgap timer.
- timerIdMask – The mask of bandgap timer Id, should be the OR'ed value of vbat_bandgap_timer_id_t.

Return values

- kStatus_Success – Success to enable/disable selected bandgap timer.
- kStatus_VBAT_Fro16kNotEnabled – Fail to enable/disable selected bandgap timer due to FRO16k not enabled previously.
- kStatus_VBAT_BandgapNotEnabled – Fail to enable/disable selected bandgap timer due to bandgap not enabled previously.

void VBAT_SetBandgapTimerTimeoutValue(VBAT_Type *base, *vbat_bandgap_timer_timeout_period_t* timeoutPeriod, uint8_t timerIdMask)

Set bandgap timer timeout value.

Parameters

- base – VBAT peripheral base address.
- timeoutPeriod – Bandgap timer timeout value, please refer to vbat_bandgap_timer_timeout_period_t.
- timerIdMask – The mask of bandgap timer Id, should be the OR'ed value of vbat_bandgap_timer_id_t.

static inline uint32_t VBAT_GetStatusFlags(VBAT_Type *base)

Get VBAT status flags.

Parameters

- base – VBAT peripheral base address.

Returns

The asserted status flags, should be the OR'ed value of vbat_status_flag_t.

static inline void VBAT_ClearStatusFlags(VBAT_Type *base, uint32_t mask)

Clear VBAT status flags.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of status flags to be cleared, should be the OR'ed value of vbat_status_flag_t except kVBAT_StatusFlagLdoReady.

static inline void VBAT_EnableInterrupts(VBAT_Type *base, uint32_t mask)

Enable interrupts for the VBAT module, such as POR detect interrupt, Wakeup Pin interrupt and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of interrupts to be enabled, should be the OR'ed value of vbat_interrupt_enable_t.

static inline void VBAT_DisableInterrupts(VBAT_Type *base, uint32_t mask)

Disable interrupts for the VBAT module, such as POR detect interrupt, wakeup pin interrupt and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of interrupts to be disabled, should be the OR'ed value of vbat_interrupt_enable_t.

static inline void VBAT_EnableWakeup(VBAT_Type *base, uint32_t mask)

Enable wakeup for the VBAT module, such as POR detect wakeup, wakeup pin wakeup and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of enumerators in vbat_wakeup_enable_t.

static inline void VBAT_DisableWakeup(VBAT_Type *base, uint32_t mask)

Disable wakeup for VBAT module, such as POR detect wakeup, wakeup pin wakeup and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of enumerators in vbat_wakeup_enable_t.

static inline void VBAT_LockInterruptWakeupSettings(VBAT_Type *base)

Lock VBAT interrupt and wakeup settings, please note that if locked the interrupt and wakeup settings can not be updated until the next POR.

Parameters

- base – VBAT peripheral base address.

FSL_VBAT_DRIVER_VERSION

VBAT driver version 2.1.1.

struct _vbat_fro16k_config

#include <fsl_vbat.h> The structure of internal 16kHz free running oscillator attributes.

Public Members

bool enableFRO16k

Enable/disable internal 16kHz free running oscillator.

bool enableFRO16kOutput

Enable/disable FRO 16k output clock to other modules.

2.71 VREF: Voltage Reference Driver

void VREF_Init(VREF_Type *base, const *vref_config_t* *config)

Enables the clock gate and configures the VREF module according to the configuration structure.

This function must be called before calling all other VREF driver functions, read/write registers, and configurations with user-defined settings. The example below shows how to set up vref_config_t parameters and how to call the VREF_Init function by passing in these parameters.

```
vref_config_t vrefConfig;
VREF_GetDefaultConfig(VREF, &vrefConfig);
vrefConfig.bufferMode = kVREF_ModeHighPowerBuffer;
VREF_Init(VREF, &vrefConfig);
```

Parameters

- base – VREF peripheral address.
- config – Pointer to the configuration structure.

void VREF_Deinit(VREF_Type *base)

Stops and disables the clock for the VREF module.

This function should be called to shut down the module. This is an example.

```
vref_config_t vrefUserConfig;
VREF_GetDefaultConfig(VREF, &vrefUserConfig);
VREF_Init(VREF, &vrefUserConfig);
...
VREF_Deinit(VREF);
```

Parameters

- base – VREF peripheral address.

void VREF_GetDefaultConfig(*vref_config_t* *config)

Initializes the VREF configuration structure.

This function initializes the VREF configuration structure to default values. This is an example.

```
config->bufferMode = kVREF_ModeHighPowerBuffer;
config->enableInternalVoltageRegulator = true;
config->enableChopOscillator           = true;
config->enableHCBandgap                = true;
config->enableCurvatureCompensation    = true;
config->enableLowPowerBuff             = true;
```

Parameters

- config – Pointer to the initialization structure.

void VREF_SetVrefTrimVal(VREF_Type *base, uint8_t trimValue)

Sets a TRIM value for the accurate 1.0V bandgap output.

This function sets a TRIM value for the reference voltage. It will trim the accurate 1.0V bandgap by 0.5mV each step.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

void VREF_SetTrim21Val(VREF_Type *base, uint8_t trim21Value)

Sets a TRIM value for the accurate buffered VREF output.

This function sets a TRIM value for the reference voltage. If buffer mode be set to other values (Buf21 enabled), it will trim the VREF_OUT by 0.1V each step from 1.0V to 2.1V.

Note: When Buf21 is enabled, the value of UTRIM[TRIM2V1] should be ranged from 0b0000 to 0b1011 in order to trim the output voltage from 1.0V to 2.1V, other values will make the VREF_OUT to default value, 1.0V.

Parameters

- base – VREF peripheral address.
- trim21Value – Value of the trim register to set the output reference voltage (maximum 0xF (4-bit)).

uint8_t VREF_GetVrefTrimVal(VREF_Type *base)

Reads the trim value.

This function gets the TRIM value from the UTRIM register. It reads UTRIM[VREFTRIM] (13:8)

Parameters

- base – VREF peripheral address.

Returns
6-bit value of trim setting.

uint8_t VREF_GetTrim21Val(VREF_Type *base)

Reads the VREF 2.1V trim value.

This function gets the TRIM value from the UTRIM register. It reads UTRIM[TRIM2V1] (3:0),

Parameters

- base – VREF peripheral address.

Returns
4-bit value of trim setting.

FSL_VREF_DRIVER_VERSION

Version 2.4.0.

enum _vref_buffer_mode

VREF buffer modes.

Values:

enumerator kVREF_ModeBandgapOnly

Bandgap enabled/standby.

enumerator kVREF_ModeLowPowerBuffer

Low-power buffer mode enabled

enumerator kVREF_ModeHighPowerBuffer

High-power buffer mode enabled

typedef enum *_vref_buffer_mode* vref_buffer_mode_t

VREF buffer modes.

typedef struct *_vref_config* vref_config_t

The description structure for the VREF module.

struct _vref_config

#include <fsl_vref.h> The description structure for the VREF module.

Public Members

vref_buffer_mode_t bufferMode

Buffer mode selection

bool enableInternalVoltageRegulator

Provide additional supply noise rejection.

bool enableChopOscillator

Enable Chop oscillator.

bool enableHCBandgap

Enable High-Accurate bandgap.

bool enableCurvatureCompensation

Enable second order curvature compensation.

bool enableLowPowerBuff

Provides bias current for other peripherals.

2.72 WDOG32: 32-bit Watchdog Timer

void WDOG32_GetDefaultConfig(*wdog32_config_t* *config)

Initializes the WDOG32 configuration structure.

This function initializes the WDOG32 configuration structure to default values. The default values are:

```
wdog32Config->enableWdog32 = true;
wdog32Config->clockSource = kWDOG32_ClockSource1;
wdog32Config->prescaler = kWDOG32_ClockPrescalerDivide1;
wdog32Config->workMode.enableWait = true;
wdog32Config->workMode.enableStop = false;
wdog32Config->workMode.enableDebug = false;
wdog32Config->testMode = kWDOG32_TestModeDisabled;
wdog32Config->enableUpdate = true;
wdog32Config->enableInterrupt = false;
wdog32Config->enableWindowMode = false;
wdog32Config->windowValue = 0U;
wdog32Config->timeoutValue = 0xFFFFU;
```

See also:

wdog32_config_t

Parameters

- config – Pointer to the WDOG32 configuration structure.

AT_QUICKACCESS_SECTION_CODE (status_t WDOG32_Init(WDOG_Type *base, const wdog32_config_t *config))

Initializes the WDOG32 module.

This function initializes the WDOG32. To reconfigure the WDOG32 without forcing a reset first, enableUpdate must be set to true in the configuration.

Example:

```
wdog32_config_t config;
WDOG32_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
config.enableUpdate = true;
WDOG32_Init(wdog_base,&config);
```

Note: If there is errata ERR010536 (FSL_FEATURE_WDOG_HAS_ERRATA_010536 defined as 1), then after calling this function, user need delay at least 4 LPO clock cycles before accessing other WDOG32 registers.

Parameters

- base – WDOG32 peripheral base address.
- config – The configuration of the WDOG32.

Return values

- kStatus_Success – The initialization was successful
- kStatus_Timeout – The initialization timed out

status_t WDOG32_Deinit(WDOG_Type *base)

De-initializes the WDOG32 module.

This function shuts down the WDOG32. Ensure that the WDOG_CS.UPDATE is 1, which means that the register update is enabled.

Parameters

- base – WDOG32 peripheral base address.

Return values

- kStatus_Success – The de-initialization was successful
- kStatus_Timeout – The de-initialization timed out

AT_QUICKACCESS_SECTION_CODE (status_t WDOG32_Unlock(WDOG_Type *base))

Unlocks the WDOG32 register written.

This function unlocks the WDOG32 register written.

Before starting the unlock sequence and following the configuration, disable the global interrupts. Otherwise, an interrupt could effectively invalidate the unlock sequence and the WCT may expire. After the configuration finishes, re-enable the global interrupts.

Parameters

- base – WDOG32 peripheral base address

Return values

- kStatus_Success – The unlock sequence was successful
- kStatus_Timeout – The unlock sequence timed out

AT_QUICKACCESS_SECTION_CODE (void WDOG32_Enable(WDOG_Type *base))

Enables the WDOG32 module.

Disables the WDOG32 module.

This function writes a value into the WDOG_CS register to enable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

This function writes a value into the WDOG_CS register to disable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- base – WDOG32 peripheral base address

AT_QUICKACCESS_SECTION_CODE (void WDOG32_EnableInterrupts(WDOG_Type *base, uint32_t mask))

Enables the WDOG32 interrupt.

Clears the WDOG32 flag.

Disables the WDOG32 interrupt.

This function writes a value into the WDOG_CS register to enable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true

for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Example to clear an interrupt flag:

```
WDOG32_ClearStatusFlags(wdog_base,kWDOG32_InterruptFlag);
```

Parameters

- base – WDOG32 peripheral base address.
- mask – The interrupts to enable. The parameter can be a combination of the following source if defined:
  - kWDOG32_InterruptEnable

  This function writes a value into the WDOG_CS register to disable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.
- base – WDOG32 peripheral base address.
- mask – The interrupts to disabled. The parameter can be a combination of the following source if defined:
  - kWDOG32_InterruptEnable

  This function clears the WDOG32 status flag.
- base – WDOG32 peripheral base address.
- mask – The status flags to clear. The parameter can be any combination of the following values:
  - kWDOG32_InterruptFlag

static inline uint32_t WDOG32_GetStatusFlags(WDOG_Type *base)

Gets the WDOG32 all status flags.

This function gets all status flags.

Example to get the running flag:

```
uint32_t status;
status = WDOG32_GetStatusFlags(wdog_base) & kWDOG32_RunningFlag;
```

See also:

_wdog32_status_flags_t

- true: related status flag has been set.
- false: related status flag is not set.

Parameters

- base – WDOG32 peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

AT_QUICKACCESS_SECTION_CODE (void WDOG32_SetTimeoutValue(WDOG_Type *base, uint16_t timeoutCount))

Sets the WDOG32 timeout value.

This function writes a timeout value into the WDOG_TOVAL register. The WDOG_TOVAL register is a write-once register. To ensure the reconfiguration fits the timing of WCT, unlock function will be called inline.

Parameters

- base – WDOG32 peripheral base address
- timeoutCount – WDOG32 timeout value, count of WDOG32 clock ticks.

AT_QUICKACCESS_SECTION_CODE (void WDOG32_SetWindowValue(WDOG_Type *base, uint16_t windowValue))

Sets the WDOG32 window value.

This function writes a window value into the WDOG_WIN register. The WDOG_WIN register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- windowValue – WDOG32 window value.

static inline void WDOG32_Refresh(WDOG_Type *base)

Refreshes the WDOG32 timer.

This function feeds the WDOG32. This function should be called before the Watchdog timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WDOG32 peripheral base address

static inline uint16_t WDOG32_GetCounterValue(WDOG_Type *base)

Gets the WDOG32 counter value.

This function gets the WDOG32 counter value.

Parameters

- base – WDOG32 peripheral base address.

Returns

Current WDOG32 counter value.

WDOG_FIRST_WORD_OF_UNLOCK

First word of unlock sequence

WDOG_SECOND_WORD_OF_UNLOCK

Second word of unlock sequence

WDOG_FIRST_WORD_OF_REFRESH

First word of refresh sequence

WDOG_SECOND_WORD_OF_REFRESH

Second word of refresh sequence

FSL_WDOG32_DRIVER_VERSION

WDOG32 driver version.

enum _wdog32_clock_source

Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

Values:

enumerator kWDOG32_ClockSource0

Clock source 0

enumerator kWDOG32_ClockSource1

Clock source 1

enumerator kWDOG32_ClockSource2

Clock source 2

enumerator kWDOG32_ClockSource3

Clock source 3

enum _wdog32_clock_prescaler

Describes the selection of the clock prescaler.

Values:

enumerator kWDOG32_ClockPrescalerDivide1

Divided by 1

enumerator kWDOG32_ClockPrescalerDivide256

Divided by 256

enum _wdog32_test_mode

Describes WDOG32 test mode.

Values:

enumerator kWDOG32_TestModeDisabled

Test Mode disabled

enumerator kWDOG32_UserModeEnabled

User Mode enabled

enumerator kWDOG32_LowByteTest

Test Mode enabled, only low byte is used

enumerator kWDOG32_HighByteTest

Test Mode enabled, only high byte is used

enum _wdog32_interrupt_enable_t

WDOG32 interrupt configuration structure.

This structure contains the settings for all of the WDOG32 interrupt configurations.

Values:

enumerator kWDOG32_InterruptEnable

Interrupt is generated before forcing a reset

enum _wdog32_status_flags_t

WDOG32 status flags.

This structure contains the WDOG32 status flags for use in the WDOG32 functions.

Values:

enumerator kWDOG32_RunningFlag

Running flag, set when WDOG32 is enabled

enumerator kWDOG32_InterruptFlag

Interrupt flag, set when interrupt occurs

typedef enum *_wdog32_clock_source* wdog32_clock_source_t

Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

typedef enum *_wdog32_clock_prescaler* wdog32_clock_prescaler_t

Describes the selection of the clock prescaler.

typedef struct *_wdog32_work_mode* wdog32_work_mode_t

Defines WDOG32 work mode.

typedef enum *_wdog32_test_mode* wdog32_test_mode_t

Describes WDOG32 test mode.

typedef struct *_wdog32_config* wdog32_config_t

Describes WDOG32 configuration structure.

struct _wdog32_work_mode

#include <fsl_wdog32.h> Defines WDOG32 work mode.

Public Members

bool enableWait

Enables or disables WDOG32 in wait mode

bool enableStop

Enables or disables WDOG32 in stop mode

bool enableDebug

Enables or disables WDOG32 in debug mode

struct _wdog32_config

#include <fsl_wdog32.h> Describes WDOG32 configuration structure.

Public Members

bool enableWdog32

Enables or disables WDOG32

wdog32_clock_source_t clockSource

Clock source select

wdog32_clock_prescaler_t prescaler
Clock prescaler value

wdog32_work_mode_t workMode
Configures WDOG32 work mode in debug stop and wait mode

wdog32_test_mode_t testMode
Configures WDOG32 test mode

bool enableUpdate
Update write-once register enable

bool enableInterrupt
Enables or disables WDOG32 interrupt

bool enableWindowMode
Enables or disables WDOG32 window mode

uint16_t windowValue
Window value

uint16_t timeoutValue
Timeout value

2.73 WUU: Wakeup Unit driver

void WUU_SetExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex, const *wuu_external_wakeup_pin_config_t* *config)

Enables and Configs External WakeUp Pins.

This function enables/disables the external pin as wakeup input. What's more this function configs pins options, including edge detection wakeup event and operate mode.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin. See Reference Manual for the details.
- config – Pointer to wuu_external_wakeup_pin_config_t structure.

void WUU_ClearExternalWakeupPinsConfig(WUU_Type *base, uint8_t pinIndex)

Disable and clear external wakeup pin settings.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin.

static inline uint32_t WUU_GetExternalWakeUpPinsFlag(WUU_Type *base)

Gets External Wakeup pin flags.

This function return the external wakeup pin flags.

Parameters

- base – WUU peripheral base address.

Returns
Wakeup flags for all external wakeup pins.

static inline void WUU_ClearExternalWakeUpPinsFlag(WUU_Type *base, uint32_t mask)

Clears External WakeUp Pin flags.

This function clears external wakeup pins flags based on the mask.

Parameters

- base – WUU peripheral base address.
- mask – The mask of Wakeup pin index to be cleared.

void WUU_SetInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex, *wuu_internal_wakeup_module_event_t* event)

Config Internal modules' event as the wake up soures.

This function configs the internal modules event as the wake up sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – Select interrupt or DMA/Trigger of the internal module as the wake up source.

void WUU_ClearInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex, *wuu_internal_wakeup_module_event_t* event)

Disable an on-chip internal modules' event as the wakeup sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – The event(interrupt or DMA/trigger) of the internal module to disable.

void WUU_SetPinFilterConfig(WUU_Type *base, uint8_t filterIndex, const *wuu_pin_filter_config_t* *config)

Configs and Enables Pin filters.

This function configs Pin filter, including pin select, filer operate mode filer wakeup event and filter edge detection.

Parameters

- base – WUU peripheral base address.
- filterIndex – The index of the pin filer.
- config – Pointer to wuu_pin_filter_config_t structure.

bool WUU_GetPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

void WUU_ClearPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

bool WUU_GetExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0. return True if the specific pin is a wakeup source.

void WUU_ClearExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0.

FSL_WUU_DRIVER_VERSION

Defines WUU driver version 2.4.0.

enum _wuu_external_pin_edge_detection

External WakeUp pin edge detection enumeration.

Values:

enumerator kWUU_ExternalPinDisable

External input Pin disabled as wake up input.

enumerator kWUU_ExternalPinRisingEdge

External input Pin enabled with the rising edge detection.

enumerator kWUU_ExternalPinFallingEdge

External input Pin enabled with the falling edge detection.

enumerator kWUU_ExternalPinAnyEdge

External input Pin enabled with any change detection.

enum _wuu_external_wakeup_pin_event

External input wake up pin event enumeration.

Values:

enumerator kWUU_ExternalPinInterrupt

External input Pin configured as interrupt.

enumerator kWUU_ExternalPinDMARequest

External input Pin configured as DMA request.

enumerator kWUU_ExternalPinTriggerEvent

External input Pin configured as Trigger event.

enum _wuu_external_wakeup_pin_mode

External input wake up pin mode enumeration.

Values:

enumerator kWUU_ExternalPinActiveDSPD
External input Pin is active only during Deep Sleep/Power Down Mode.

enumerator kWUU_ExternalPinActiveAlways
External input Pin is active during all power modes.

enum __wuu_internal_wakeup_module_event
Internal module wake up event enumeration.

Values:

enumerator kWUU_InternalModuleInterrupt
Internal modules' interrupt as a wakeup source.

enumerator kWUU_InternalModuleDMATrigger
Internal modules' DMA/Trigger as a wakeup source.

enum __wuu_filter_edge
Pin filter edge enumeration.

Values:

enumerator kWUU_FilterDisabled
Filter disabled.

enumerator kWUU_FilterPosedgeEnable
Filter posedge detect enabled.

enumerator kWUU_FilterNegedgeEnable
Filter negedge detect enabled.

enumerator kWUU_FilterAnyEdge
Filter any edge detect enabled.

enum __wuu_filter_event
Pin Filter event enumeration.

Values:

enumerator kWUU_FilterInterrupt
Filter output configured as interrupt.

enumerator kWUU_FilterDMARequest
Filter output configured as DMA request.

enumerator kWUU_FilterTriggerEvent
Filter output configured as Trigger event.

enum __wuu_filter_mode
Pin filter mode enumeration.

Values:

enumerator kWUU_FilterActiveDSPD
External input pin filter is active only during Deep Sleep/Power Down Mode.

enumerator kWUU_FilterActiveAlways
External input Pin filter is active during all power modes.

typedef enum *_wuu_external_pin_edge_detection* wuu_external_pin_edge_detection_t
External WakeUp pin edge detection enumeration.

typedef enum *_wuu_external_wakeup_pin_event* wuu_external_wakeup_pin_event_t
External input wake up pin event enumeration.

typedef enum *_wuu_external_wakeup_pin_mode* wuu_external_wakeup_pin_mode_t
External input wake up pin mode enumeration.

typedef enum *_wuu_internal_wakeup_module_event* wuu_internal_wakeup_module_event_t
Internal module wake up event enumeration.

typedef enum *_wuu_filter_edge* wuu_filter_edge_t
Pin filter edge enumeration.

typedef enum *_wuu_filter_event* wuu_filter_event_t
Pin Filter event enumeration.

typedef enum *_wuu_filter_mode* wuu_filter_mode_t
Pin filter mode enumeration.

typedef struct *_wuu_external_wakeup_pin_config* wuu_external_wakeup_pin_config_t
External WakeUp pin configuration.

typedef struct *_wuu_pin_filter_config* wuu_pin_filter_config_t
Pin Filter configuration.

struct __wuu_external_wakeup_pin_config
#include <fsl_wuu.h> External WakeUp pin configuration.

Public Members

wuu_external_pin_edge_detection_t edge
External Input pin edge detection.

wuu_external_wakeup_pin_event_t event
External Input wakeup Pin event

wuu_external_wakeup_pin_mode_t mode
External Input wakeup Pin operate mode.

struct __wuu_pin_filter_config
#include <fsl_wuu.h> Pin Filter configuration.

Public Members

uint32_t pinIndex
The index of wakeup pin to be muxxed into filter.

wuu_filter_edge_t edge
The edge of the pin digital filter.

wuu_filter_event_t event
The event of the filter output.

wuu_filter_mode_t mode
The mode of the filter operate.

Chapter 3

Middleware

3.1 Motor Control

3.1.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called "packet-driven BDM" interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT]((https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to FreeMASTER community or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the src/platforms directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called FMSTR_TRANSPORT with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The *mcuxsdk* folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a "middleware" component which may be downloaded along with the example applications from https://mcuxpresso.nxp.com/en/welcome.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- The official FreeMASTER middleware repository.
- Online version of this document

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer's physical or virtual COM port. The typical transmission speed is 115200 bps.

- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER "middleware" driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample spplications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.

- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.

- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory

block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- "External" single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- "True" single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as "automatic" in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- ***src/platforms*** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- ***src/common*** folder—contains the common driver source files shared by the driver for all supported platforms. All the *.c* files must be added to the project, compiled, and linked together with the application.
  - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
  - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
  - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
  - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
  - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
  - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
  - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
  - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
  - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

  - *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
  - *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
  - *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
  - *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
  - *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
  - *freemaster_serial.h* - defines the low-level character-oriented Serial API.
  - *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
  - *freemaster_can.h* - defines the low-level message-oriented CAN API.
  - *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
  - *freemaster_net.h* - definitions related to the Network transport.
  - *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
  - *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
  - *freemaster_utils.h* - definitions related to utility code.
- ***src/drivers/[sdk]/serial*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
  - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- ***src/drivers/[sdk]/can*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
  - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- ***src/drivers/[sdk]/network*** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
  - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
  - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR   [0|1]
#define FMSTR_SHORT_INTR  [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See *Driver interrupt modes*.

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- **FMSTR_SERIAL** - serial communication protocol
- **FMSTR_CAN** - using CAN communication
- **FMSTR_PDBDM** - using packet-driven BDM communication
- **FMSTR_NET** - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as FMSTR_SERIAL_DRV. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_RQUEUE_SIZE

```
#define FMSTR_COMM_RQUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode.
The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the "True" single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call FMSTR_SetCanBaseAddress() to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with FMSTR_CAN_EXTID bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with FMSTR_CAN_EXTID bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options

FMSTR_DISABLE

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options

FMSTR_USE_SCOPE

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options

FMSTR_USE_RECORDER

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()" API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()" API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.

Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature.
Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options

FMSTR_USE_TSA

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool.
Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables.
Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project.
Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions.
Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used.
Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support.
The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr, FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_RQUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial "character time" which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the FMSTR_Poll routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the *src/common/platforms/[your_platform]* folder are a part of the project. See *Driver files* for more details.
- Configure the FreeMASTER driver by creating or editing the *freemaster_cfg.h* file and by saving it into the application project directory. See *Driver configuration* for more details.
- Include the *freemaster.h* file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the *freemaster_cfg.h* file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the "idle" time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the FMSTR_Poll function is called at least once per the time calculated as:

*N * Tchar*

where:

- *N* is equal to the length of the receive FIFO queue (configured by the FMSTR_COMM_RQUEUE_SIZE macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see *Driver interrupt modes*), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance *0* which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see *Configurable items*.

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-langiage symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type)  /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type)  /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type)  /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINT*n*	Unsigned integer type of size *n* bits (n=8,16,32,64)
FMSTR_TSA_SINT*n*	Signed integer type of size *n* bits (n=8,16,32,64)
FMSTR_TSA_FRAC*n*	Fractional number of size *n* bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(*m*,*n*)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(*m*,*n*)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FMSTR_TSA_USERTYPE(*name*)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()

FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)

/* Directory entry applies to all subsequent MEMFILE entries */
FMSTR_TSA_DIRECTORY("/text_files")     /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```
/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index))          /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()
```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```
FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);
```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
  - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
  - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
  - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the FMSTR_USE_TSA_DYNAMIC configuration option and when the FMSTR_SetUpTsaBuff function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See *TSA table definition* for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the FMSTR_APPCMDRESULT_NOCMD constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the FMSTR_AppCmdAck call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The FMSTR_GetAppCmd function does not report the commands for which a callback handler function exists. If the FMSTR_GetAppCmd function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns FMSTR_APPCMDRESULT_NOCMD.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see *FMSTR_GetAppCmd*).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↪PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
    FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
↪
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_xxx and FMSTR_PIPE_SIZE_xxx constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the nGranularity value equal to the nLength value, all data are considered as one chunk which is either written successfully as a whole or not at all. The nGranularity value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The readGranularity argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
FMSTR_ADDR	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	
FMSTR_SIZE	Data type used to hold the memory block size.
It is required that this type is unsigned and at least 16 bits wide integer.	
FMSTR_BOOL	Data type used as a general boolean type.
This type is used only in zero/non-zero conditions in the driver code.	
FMSTR_APPCM	Data type used to hold the Application Command code.
Generally, this is an unsigned 8-bit value.	
FMSTR_APPCM	Data type used to create the Application Command data buffer.
Generally, this is an unsigned 8-bit value.	
FMSTR_APPCM	Data type used to hold the Application Command result code.
Generally, this is an unsigned 8-bit value.	

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

FMSTR_TSA_TII	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables.
By default, this is defined as FMSTR_SIZE.	
FMSTR_TSA_TS	Data type used to hold a memory block size, as used in the TSA descriptors.
By default, this is defined as FMSTR_SIZE.	

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

FMSTR_HPIPE	Pipe handle that identifies the open-pipe object.
Generally, this is a pointer to a void type.	
FMSTR_PIPE_P(	Integer type required to hold at least 7 bits of data.
Generally, this is an unsigned 8-bit or 16-bit type.	
FMSTR_PIPE_SI	Integer type required to hold at least 16 bits of data.
This is used to store the data buffer sizes.	
FMSTR_PPIPEF	Pointer to the pipe handler function.
See *FMSTR_PipeOpen* for more details.	

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

FMSTR_U8	The smallest memory entity. On the vast majority of platforms, this is an unsigned 8-bit integer. On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.
FMSTR_U16	Unsigned 16-bit integer.
FMSTR_U32	Unsigned 32-bit integer.
FMSTR_S8	Signed 8-bit integer.
FMSTR_S16	Signed 16-bit integer.
FMSTR_S32	Signed 32-bit integer.
FMSTR_FLOAT	4-byte standard IEEE floating-point type.
FMSTR_FLAGS	Data type forming a union with a structure of flag bit-fields.
FMSTR_SIZE8	Data type holding a general size value, at least 8 bits wide.
FMSTR_INDEX	General for-loop index. Must be signed, at least 16 bits wide.
FMSTR_BCHR	A single character in the communication buffer. Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.
FMSTR_BPTR	A pointer to the communication buffer (an array of FMSTR_BCHR).

Document references

Links

- This document online: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: https://github.com/nxp-mcuxpresso/mcux-freemaster
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document AN4752)
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document AN4771)
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document AN4860)

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

3.2 Wireless

3.2.1 NXP Wireless Framework and Stacks

Wireless Framework

Wireless Connectivity Framework Connectivity Framework repository provides both connectivity platform enablement with hardware abstraction layer and a set of Services for NXP connectivity stacks : BLE, Zigbee, OpenThread, Matter.

The connectivity framework repository consists of:

- Common folder to common header files for minimal type definition to be used in the repo
- Platform folder used for platform enablement with Hardware abstraction:
  - platform/include: common API header files used by several platforms
  - platform/common: common code for several platforms
  - specifics platform folders , See below the supported platform list
  - platform/../configs folder: configuration files for framework repository and other middlewares (rpmsg, mbedTls, etc.._)
- Services folder
- Zephyr folder for zephyr modules integrated in mcux SDK
- clang formatting script and script folder to format appropriately the source files of the repo

Supported platforms The following devices/platforms are supported in platform folder for connectivity applications:

- kw45x, k32w1x, mcxw71x, under wireless_mcu, kw45_k32w1_mcxw71 folders.
- kw47x, mcxw72x families under wireless_mcu, kw47_mcxw72, kw47_mcxw72_nbu folders.
- rw61x
- RT1060 and RT1170 for Matter
- Other RT devices such as i.MX RT595s

Supported services The supported services are provided for connectivity stacks and their demo application, and are usually dependent on PLATFORM API implementation:

- DBG: Light Debug Module, currently a stubbed header file
- FSCI: Framework Serial Communication Interface between BLE host stack and upper layer located on an other core/device
- FunctionLib: wrapper to toolchain memory manipulation functions (memcpy, memcmp, etc) or use its own implementation for code size reduction
- HWParameters: Store Factory hardware parameters and Application parameters in Flash or IFR
- LowPower: wrapper of SDK power manager for connectivity applications
- ModuleInfo: Store and handle connectivity component versions
- NVM: NXP proprietary File System used for KW45, KW47 automotive devices and RT1060/RT1170 platform for Matter
- OtaSupport: Handle OTA binary writes into internal or external flash.
- SecLib and RNG: Crypto and Random Number generator functions. It supports several ports:
  - Software algorithms
  - Secure subsystem interface to an HW enclave
  - MbedTls 2.x interface
- Sensors: Provides service for Battery and temperature measurements

- SFC: Smart Frequency Calibration to be run from KW47/MCXW71 from NBU core. Matter related modules:
- OTW: Over The Wire module for External Transceiver firmware update from RT platforms
- FactoryDataProvider to be used for Matter

Supported Zephyr modules integration in mcux SDK Connectivity framework provides integration and port layers to the following Zephyr Modules located into zephyr/subsys:

- NVS: Zephyr File System used by Matter and Zigbee
- Settings: Over layer module that allows to store keys into NVS File System used by Matter Port layer and required libraries for these zephyr modules are located in port and lib folder in zephyr directory

Connectivity framework CHANGELOG

7.0.3 RFP mcux SDK 25.09.00

Major Changes

- [wireless_mcu] Replaced ICS RX linked list with message queue to eliminate memory allocation in ISR context and enable user callbacks to run in thread context where memory allocation is permitted.
- [wireless_mcu] Added HCI RX workqueue processing support to reduce ISR execution time and system impact. Feature controlled by gPlatformHciUseWorkqueueRxProcessing_d configuration option (enabled by default on kw45_k32w1_mcxw71 and kw47_mcxw72 platforms in freertos applications). When enabled, HCI transport processes received data in system workqueue thread, allowing user callbacks to run in thread context.
- [wireless_nbu] Introduced PLATFORM_ConfigureSmuDmemMapping() API to configure SMU and DMEM sharing on NBU for kw47_mcxw72 platform, using linker file symbols for correct configuration.
- [mcxw23] Implemented HCI interface using PLATFORM API as preliminary requirement for Zephyr enablement, introducing PLATFORM_SendHciMessageAlt() alternative API.
- [wireless_mcu][wireless_nbu] Added NBU2Host event manager for status indications to host (Information, Warning, Error) sent over RPMSG.
- [wireless_mcu] Added a call to PLATFORM_IcsRxWorkHandler() within PLATFORM_NbuApiReq() for baremetal applications to prevent potential deadlocks.

Minor Changes

- [wireless_mcu] Fixed variable underflow issue in PLATFORM_RemoteActiveRel().
- [SecLib_RNG] Fixed escaping local HashKeyBuffer address issue and added missing cast in RNG_GetTrueRandomNumber() function.
- [Common] Fixed heap memory manager return values and added missing include to fwk_freertos_utils.h.
- [rw61x] Prevented array out of bounds in PLATFORM_RegisterRtcHandle().
- [FSCI] Fixed memory leak in FSCI module.
- [NVM] Enhanced debug facilitation by restricting variable scope, assigning return statuses to variables, and fixing display format in NV_ShowFlashTable().

- [wireless_mcu] Added new chip revision A2.1 support in PLATFORM_SendChipRevision() API.
- [kw47_mcxw72] Implemented BLE BD address retrieval from IFR memory with fallback to OUI + RNG.
- [DBG] Added ThreadX support to fault handlers and reworked fault handler structure with dedicated RTOS files.
- [DBG][Common] Added NBU debug support on host side to detect faults and system errors, with debug info extraction capability (limited to MCXW72/KW47).
- [Common] Platform CMake rework and Kconfig renaming, removing unneeded checks and renaming PRJSEG platform Kconfigs to COMPONENT.
- [mcxw23] Added experimental SecLib PSA support with additional configuration for MBEDTLS_ECP_C and MBEDTLS_BIGNUM_C.
- [wireless_mcu] Cleaned CMakeLists.txt to avoid wrong inclusions of files and folders from incorrect platforms.
- [wireless_mcu][wireless_nbu] Added NBU2Host warning when 32MHz crystal is unready on low power exit.
- [wireless_mcu][ot] Introduced gPlatformUseOuiFromIfr to use OUI from IFR for the extended address (disabled by default). When enabled and IFR is not blank, copies first three bytes to OUI field of extended address, otherwise uses static OUI as fallback.
- [General] Removed useless warning about TSTMR_CLOCK_FREQUENCY_MHZ definition.
- [General] Updated framework license and SBOM for 25.09 RFP release.
- [wireless_mcu] Fixed unused variable warning when gPlatformIcsUseWorkqueueRxProcessing_d and gPlatformHciUseWorkqueueRxProcessing_dare disable

7.0.3 revB mcux SDK 25.09.00

Major Changes

- [wireless_mcu] Adjusted default value of BOARD_RADIO_DOMAIN_WAKE_UP_DELAY from 0x16 to 0x10 to address stability issues observed with the previous setting. This change enhances system reliability but will reduce low-power performance.

Minor Changes (bug fixes)

- [Common] Added MDK compatibility for the errno framework header.
- [mcxw23] Implemented missing PLATFORM_OtaClearBootInterface() API.
- [mcxw23] Refactored fwk_platform.c to separate BLE-specific logic into fwk_platform_ble.c.
- [OTA] Corrected definition of gEepromParams_WriteAlignment_c flag for mcxw23
- [OTA] Enabled calling OTA_GetImgState() prior to OTA_Initialize().
- [wireless_mcu] Fixed PLATFORM_IsExternalFlashSectorBlank() to check the entire sector instead of just one page.
- [mcxw23] Added support for OTA using external flash.
- [mcxw23] Introduced PLATFORM_GetRadioIdleDuration32K() to estimate time until next radio event.
- [OTA] Removed gUseInternalStorageLink_d linker flag definition when external OTA storage is used.

- [mcxw23] Extended CopyAndReboot() to support external flash OTA.
- [wireless_mcu] Resolved counter wrap issue in PLATFORM_GetDeltaTimeStamp().
- [kw43_mcxw70] Defined LPTMR frequency constants in fwk_platform_definitions.h.
- [kw47_mcxw72] Updated shared memory allocation for RPMsg adapter.
- [mcxw23] Implement PLATFORM_IsExternalFlashBusy() API.
- [kw45_mcxw71][kw47_mcxw72] Moved RAM bank definitions from the connectivity framework to device-specific definitions.

7.0.3 revA mcux SDK 25.09.00

Major Changes

- [wireless_nbu] Enhanced XTAL32M trimming handling: updates are applied when requested by the application core and the NBU enters low-power mode, ensuring no interference from ongoing radio activity. Introduced new APIs to lock (PLATFORM_LockXtal32MTrim()) and unlock XTAL32M (PLATFORM_UnlockXtal32MTrim()) trimming updates using a counter-based mechanism. Also added a reset API (PLATFORM_ResetContext()) for platform-specific variables (currently limited to the trimming lock).
- [wireless_mcu] Introduced a new API, PLATFORM_SetLdoCoreNormalDriveVoltage(), to enable support for NBU clock frequency at 64 MHz, as required by BLE channel sounding applications.
- [wireless_mcu][wireless_nbu] Increased delayLpoCycle default from 2 to 3 to address link layer instabilities in low-power NBU use cases. Adjusted BOARD_RADIO_DOMAIN_WAKE_UP_DELAY from 0x10 to 0x16 to balance power consumption and stability. NBU may malfunction if delayLpoCycle (or BOARD_LL_32MHz_WAKEUP_ADVANCE_HSLOT) is set to 2 while BOARD_RADIO_DOMAIN_WAKE_UP_DELAY is 0x16.

Minor Changes (bug fixes)

- [WorkQ] Increased stack size when RNG use mbedtls port and coverage is enabled.
- [FSCI] Resolved an issue where messages remained unprocessed in the queue by ensuring OSA_EventSet() is triggered when pending messages are detected.
- [OTA] Fixed a bug in in OTA_PullImageChunk() that prevented retrieval of data previously received via OTA_PushImageChunk() when still buffered in RAM during posted operations.
- [OTA] Various MISRA and coverity fixes.
- [mcxw23] Fixed an unused variable warning in PLATFORM_RegisterNbuTemperatureRequestEventCb() API.
- [SFC] Remove obsolete flag gNbuJtagCapability.
- [wireless_mcu] Introduced new API PLATFORM_GetRadioIdleDuration32K(). Deprecated PLATFORM_CheckNextBleConnectivityActivity() API.
- [mcxw23] Aligned platform-specific implementations with the corresponding prototypes defined in wireless_mcu.
- [DBG] Cleaned up fwk_fault_handler.c.

7.0.2 RFP mcux SDK 25.06.00

Major Changes

- [wireless_mcu][wireless_nbu] Introduced PLATFORM_Get32KTimeStamp() API, available on platforms that support it.
- [RNG] Switched to using a workqueue for scheduling seed generation tasks.
- [Sensors] Integrated workqueue to trigger temperature readings on periodic timer expirations.
- [wireless_nbu] Removed outdated configuration files from wireless_nbu/configs.
- [SecLib_RNG][PSA] Added a PSA-compliant implementation for SecLib_RNG. This is an experimental feature and should be used with caution.
- [wireless_mcu][wireless_nbu] Implemented PLATFORM_SendNBUXtal32MTrim() API to transmit XTAL32M trimming values to the NBU.

Minor Changes (bug fixes)

- [MWS] Migrated the Mobile Wireless Standard (MWS) service to the public repository. This service manages coexistence between connectivity protocols such as BLE, 802.15.4, and GenFSK.
- [HWParameter][NVM][SecLib_RNG][Sensors] Addressed various MISRA compliance issues across multiple modules.
- [Sensors] Applied a filtering mechanism to temperature data measured by the application core before forwarding it to the NBU, improving data reliability.
- [Common] Relocated the GetPowerOfTwoShift() function to a shared module for broader accessibility across components.
- [RNG] Resolved inconsistencies in RNG behavior when using the fsl_adapter_rng HAL by aligning it with other API implementations.
- [SecLib] Updated the AES CMAC block counter in AES_128_CMAC() and AES_128_CMAC_LsbFirstInput() to support data segments larger than 4KB.
- [SecLib] Utilized sss_sscp_key_object_free() with kSSS_keyObjFree_KeysStoreDefragment to avoid key allocation failures.
- [MCXW23] Removed redundant NVIC_SetPriority() call for the ctimer IRQ in the platform file, as it's already handled by the driver.
- [WorkQ] Increased workqueue stack size to accommodate RNG usage with mbedtls.
- [wireless_mcu][ot] Suppressed chip revision transmission when operating with nbu_15_4.
- [platform][mflash] Ensured proper address alignment for external flash reads in PLATFORM_ReadExternalFlash() when required by platform constraints.
- [RNG] Corrected reseed flag behavior in RNG_GetPseudoRandomData() after reaching gRngMaxRequests_d threshold.
- [platform][mflash] Fixed uninitialized variable issue in PLATFORM_ReadExternalFlash().
- [platform][wireless_nbu] Fixed an issue on KW47 where PLATFORM_InitFro192M incorrectly reads IFR1 from a hardcoded flash address (0x48000), leading to unstable FRO192M trimming. The function is now conditionally compiled for KW45 only.

7.0.2 revB mcux SDK 25.06.00

Major Changes

- [RNG][wireless_mcu][wireless_nbu] Rework RNG seeding on NBU request
- [wireless_mcu] [LowPower] Add gPlatformEnableFro6MCalLowpower_d macro to enable FRO6M frequency verification on exit of Low Power
  - add PLATFORM_StartFro6MCalibration() and PLATFORM_EndFro6MCalibration() new function for FRO6M calibration (6MHz or 2Mhz) on wake-up from low power mode.
  - Enabled by default in fwk_config.h
- [wireless_nbu][LowPower] Clear pending interrupt status of the systick before going in low-power - Reduce NBU active time
- [wireless_nbu] Fix impossibility to go to WFI in combo mode (15.4/BLE)
- [wireless_mcu] Implement XTAL32M temperature compensation mechanism. 2 new APIs:
  - PLATFORM_RegisterXtal32MTempCompLut(): register the temperature compensation table for XTAL32M.
  - PLATFORM_CalibrateXtal32M(): apply XTAL32M temperature compensation depending on current temperature.
- [Sensors][wireless_mcu] Add support for periodic temperature measurement. new API:
  - SENSORS_TriggerTemperatureMeasurementUnsafe(): to be called from Interrupt masked critical section, from ISR or when scheduler is stopped
- [SFC] Change default maximal ppm target of the SFC algorithm from 200 to 360ppm. Impact the SFC algorith of kw45 and mcxw71 platforms, 360ppm was already the default setting for kw47 and mcxw72 platforms

Minor Changes (bug fixes)

- [DBG] Fix FWK_DBG_PERF_DWT_CYCLE_CNT_STOP macro
- [wireless_nbu] Add gPlatformIsNbu_d compile Macro set to 1
- [wireless_nbu][ics] gFwkSrvHostChipRevision_c can be processed in the system workqueue
- [kw45_mcxw71][kw47_mcxw72]
  - Remove LTC dependency from platform in kconfig
  - gPlatformShutdownEccRamInLowPower moved from fwk_platform_definition.h to fwk_confg.h as this is a configuration flag.
- [wireless_mcu][sensors] Rework and remove unnecessary ADC APIs
- [wireless_nbu] Add PLATFORM_GetMCUUid() function from Chip UID
- [SecLib] Change AES_MMO_BlockUpdate() function from private to public for zigbee.

7.0.2 revA mcux SDK 25.06.00 **Supported platforms:**

- Same as 25.03.00 release

Major Changes

- [KW45/MCXW71] HW parameters placement now located in IFR section. Flash storage is not longer used:
  - Compilation: Macro gHwParamsProdDataPlacement_c changed from gHwParamsProdDataMainFlash2IfrMode_c to gHwParamsProdDataIfrMode_c

- [KW47] NBU: Add new fwk_platform_dcdc.[ch] files to allow DCDC stepping by using SPC high power mode. This requires new API in board_dcdc.c files. Please refer to new compilation MACROs gBoardDcdcRampTrim_c and gBoardDcdcEnableHighPowerModeOnNbu_d in board_platform.h files located in kw47evk, kw47loc, frdmmcxw72 board folders.
- [KW45/MCXW71/KW47/MCXW72] Trigger an interrupt each time App core calls PLATFORM_RemoteActiveReq() to access NBU power domain in order to restart NBU core for domain low power process

Minor Changes (bug fixes)

Services

- [SecLib_RNG]
  - Rename mSecLibMutexId mutex to mSecLibSssMutexId in SecLib_sss.c
  - Remove MEM_TRACKING flag from RNG.c
  - Implement port to fsl_adapter_rng.h API using gRngUseRngAdapter_c compil Macro from RNG.c
  - Add support for BLE debug Keys in SecLi and SecLin_sss.c with gSecLibUseBleDebugKeys_d - for Debug only
- [FSCI] Add queue mechanism to prevent corruption of FSCI global variableAllow the application to override the trig sample number parameter when gFsciOverRpmsg_c is set to 1
- [DBG][btsnoop] Add a mechanism to dump raw HCI data via UART using SBTSNOOP_MODE_RAW
- [OTA]
  - OtaInternalFlash.c: Take into account chunks smaller than a flash phrase worth
  - fwk_platform_ot.c: dependencies and include files to gpio, port, pin_mux removed

Platform specific

- [kw45_mcxw71][kw47_mcxw72]
  - fwk_platform_reset.h : add compil Macro gUseResetByLvdForce_c and gUseResetByDeepPowerDown_c to avoid compile the code if not supported on some platforms
  - New compile Flag gPlatformHasNbu_d
  - Rework FRO32K notification service for MISRA fix

7.0.1 RFP mcux SDK 25.03.00 Supported platforms:

- KW45x, KW47x, MCXW71, MCXW72, K32W1x
- RW61x
- RT595, RT1060, RT1170
- MCXW23

Minor Changes (bug fixes)

- [General] Various MISRA/Coverity fixes in framework: NVM, RNG, LowPower, SecLib and platform files

Services

- [SecLib_RNG] fix return status from RNG_GetTrueRandomNumber() function: return correctly gRngSuccess_d when RNG_entropy_func() function is successful
- [SFC] Allow the application to override the trig sample number parameter
- [Settings] Re-define the framework settings API name to avoid double definition when gSettingsRedefineApiName_c flag is defined

Platform specific

- [wireless_mcu] fwk_platform_sensors update :
  - Enable temperature measurement over ADC ISR
  - Enable temperature handling requested by NBU
- [wireless_mcu] fwk_platform_lcl coex config update for KW45
- [kw47_mcxw72] Change the default ppm_target of SFC algorithm from 200 to 360ppm

7.0.1 revB mcux SDK 25.03.00 **Supported platforms:**

- KW45x, KW47x, MCXW71, MCXW72, K32W1x
- RW61x
- RT595, RT1060, RT1170
- MCXW23

Minor Changes (bug fixes)

General

- [General] Various MISRA/Coverity fixes in framework: NVM, RNG, LowPower, FunctionLib and platform files

Services

- [SecLib_RNG] AES-CBC evolution:
  - added AES_CBC_Decrypt() API for sw, SSS and mbedtls variants.
  - Made AES-CBC SW implementation reentrant avoiding use of static storage of AES block.
  - fixed SSS version to update Initialization Vector within SecLib, simplifying caller's implementation.
  - modified AES_128_CBC_Encrypt_And_Pad() so as to avoid the constraint mandating that 16 byte headroom be available at end of input buffer.
- [SecLib_RNG] RNG modifications:
  - RNG_GetPseudoRandomData() could return 0 in some error cases where caller expected a negative status.
    - Explicited RNG error codes
    - Added argument checks for all APIs and return gRngBadArguments_d (-2) when wrong

    - added checks of RNG initalization and return gRngNotInitialized_d (-3) when not done
    - fixed correcteness of RNG_GetPrngFunc() and RNG_GetPrngContext() relative to API description.
    - Added RNG_DeInit() function mostly for test and coverage purposes.
    - Improved RNG description in README.md
    - Unified the APIs behaviour between mbedtls and non mbedtls variants.
  - RNG/mbedtls : Prevent RNG_Init() from corrupting RNG entropy context if called more than once.
  - RNG/mbedtls: fixed RNG_GetTrueRandomNumber() to return a proper mbedtls_entropy_func() result.
  - Use defragmetation option when freeing key object in SecLib_sss to avoid leak in S200 memory
  - Add new API ECP256_IsKeyValid() to check whether a public key is valid
- [OtaSupport] Update return status to OTA_Flash_Success when success at the end of InternalFlash_WriteData() and InternalFlash_FlushWriteBuffer() APIs
- [WorQ] Implementing a simple workqueue service to the framework
- [SFC] Keep using immediate measurement for some measurement before switching to configuration trig to confirm the calibration made
- [DBG] Adding modules to framework DBG :
  - sbtsnoop
  - SWO
- [Common] Fix HAL_CTZ and HAL_RBIT IAR versions
- [LowPower] Fix wrong tick error calculation in case of infinite timeout
- [Settings] Add new macro gSettingsRedefineApiName_c to avoid multiple definition of settings API when using connectivity framework repo

Platform specific

- [KW47/MCXW72] Change xtal cload default value from 4 to 8 in order to increase the precision of the link layer timebase in NBU
- [wireless_mcu] [wireless_nbu] Use new WorkQ service to process framework intercore messages
- [rw61x] Fix HCI message sending failure in some corner case by releasing controller wakes up after that the host has send its HCI message
- [MCXW23] Adding the initial support of MCXW23 into the framework

7.0.0 mcux SDK 24.12.00 Supported platforms:

- KW45x, KW47x, MCXW71, MCXW72, K32W1x
- RW61x
- RT595, RT1060, RT1170

Minor Changes (bug fixes)

Platform specific

- [RW61X]
  - Add MCUX_COMPONENT_middleware.wireless.framework.platform.rng to the platform to fix a warning at generation
  - Retrieve IEEE 64 bits address from OTP memory
- [KW45x, MCXW71x, KW47x, MCXW72x]
  - Ignore the secure bit from RAM addresses when comparing used ram bank in bank retention mechanism
  - Add gPlatformNbuDebugGpioDAccessEnabled_d Compile Macro (enabled by default). Can be used to disable the NBU debug capability using IOs in case Trustzone is enabled ("PLATFORM_InitNbu()' code executed from unsecure world).
  - Fix in NBU firmware when sending ICS messages gFwkSrvNbuApiRequest_c (from controller_api.h API functions)

Services

- [OTA]
  - Add choice name to OtaSupport flash selection in Kconfig
- [NVM]
  - Add gNvmErasePartitionWhenFlashing_c feature support to gcc toolchain
- [SecLib_RNG]
  - Misra fixes

7.0.0 revB mcux SDK 24.12.00 Supported platforms: KW45x, KW47x, MCXW71, MCXW72, K32W1x, RW61x, RT595, RT1060, RT1170

Major Changes (User Applications may be impacted)

- mcux github support with cmake/Kconfig from sdk3 user shall now use CmakeLists.txt and Kconfig files from root folder. Compilation should be done using west build command. In order to see the Framework Kconfig, use command >west build -t guiconfig
- Board files and linker scripts moved to examples repository

Bugfixes

- [platform lowpower]
  - Entering Deep down power mode will no longer call PLATFORM_EnterPowerDown(). This API is now called only when going to Power down mode

Platform specific

- [KW47/MCXW72]: Early access release only
  - Deep sleep power mode not fully tested. User can experiment deep sleep and deep down modes using low power reference design applications
  - XTAL32K-less support using FRO32K not tested
- [KW45/MCXW71/K32W148]

  - Deep sleep mode is supported. Power down mode is supported in low power reference design applications as experimental only
  - XTAL32K-less support using FRO32K is experimental - FRO32K notifications callback is debug only and should not be used for mass production firmware builds

Minor Changes (no impact on application)

- Overall folder restructuring for SDK3
  - [Platform]:
    * Rename platform_family from connected_mcu/nbu to wireless_mcu/nbu
    * platform family have now a dedicated fwk_config.h, rpmsg_config.h and SecLib_mbedtls_config.h
  - [Services]
    * Move all framework services in a common directory “services/”

7.0.0 revA: KW45/KW47/MCX W71/MCX W72/K32W148

Experimental Features only

- Power down on application power domain: Some tests have shown some failure. Power consumption higher than Deep Sleep. => This feature is not fully supported in this release
- XTAL32K less board with FRO32K support: Some additional stress tests are under progress.
- FRO32K notifications callback is for debug only and shall not be used for production. User shall not execute long processing (such as PRINTF) as it is executed in ISR context.

Main Changes

- Cmake/Kconfig support for SDK3.0
- [Sensors] API renaming:
  - SENSORS_InitAdc() renamed to SENSORS_Init()
  - SENSORS_DeinitAdc() remamed to SENSORS_Deinit()
- [HWparams]
  - Repair PROD_DATA sector in case of ECC error (implies loss of previous contents of sector)
- [NVM] Linker script modification for armgcc whenever gNvTableKeptInRam_d option is used:
  - placement of NVM_TABLE_RW in data initialized section, providing start and end address symbols. For details see NVM_Interface.h comments.
- [OtaSupport]
  - OTA_Initialize(): now transitions the image state from RunCandidate to Permanent if not done by the application. OTA module shall always be initialized on a Permanent image, this change ensures it is the case.
  - OTA_MakeHeadRoomForNextBlock(): now erases the OTA partition up to the image total size (rounded to the sector) if known.

Minor changes

- [Platform]
  - Updated macro values: -kw47: BOARD_32MHZ_XTAL_CDAC_VALUE from 12U to 16U, BOARD_32MHZ_XTAL_ISEL_VALUE from 7U to 11U, BOARD_32KHZ_XTAL_CLOAD_DEFAULT from 8U to 4U, BOARD_32KHZ_XTAL_COARSE_ADJ_DEFAULT from 1U to 3U
    * MCX W72 (low-power reference design applications only): BOARD_32MHZ_XTAL_CDAC_VALUE from 12U to 10U, BOARD_32MHZ_XTAL_ISEL_VALUE from 7U to 11U, BOARD_32KHZ_XTAL_CLOAD_DEFAULT from 8U to 4U, BOARD_32KHZ_XTAL_COARSE_ADJ_DEFAULT from 1U to 3U
  - New PLATFORM_RegisterNbuTemperatureRequestEventCb() API: register a function callback when NBU request new temperature measurement. API provides the interval request for the temperature measurement
  - Update PLATFORM_IsNbuStarted() API to return true only if the NBU firmware has been started.
- [platform lowpower]
  - Move RAM layout values in fwk_platform_definition.h and update RAM retention API for KW47/MCXW72

Bugfixes

- [OtaSupport]
  - OTA_MakeHeadRoomForNextBlock(): fixed a case where the function could try to erase outside the OTA partition range.

6.2.4: KW45/K32W1x/MCXW71/RX61x SDK 2.16.100 This release does not contain the changes from 6.2.3 release.

This release contains changes from 6.2.2 release.

Main Change

- armgcc support for Cmake sdk2 support and VS code integration

Minor changes

- [NBU]
  - Optimize some critical sections on nbu firmware
- [Platform]
  - Optimize PLATFORM_RemoteActiveReq() execution time.

6.2.3: KW47 EAR1.0 Initial Connectivity Framework enablement for KW47 EAR1.0 support.

New features

- OpenNBU feature : nbu_ble project is available for modification and building

Supported features

- Deep sleep mode

Unsuported features

- Power down mode
- FRO32K support (XTAL32K less boards)

Main changes

- [NBU]
  - LPTMR2 available and TimerManager initialization with Compile Macro: gPlatformUseLptmr_d
  - NBU can now have access to GPIOD
  - SW RNG and SW SecLib ported to NBU (Software implementation only)
- [RNG]
  - Obsoleted API removed : FWK_RNG_DEPRECATED_API
  - RNG can be built without SecLib for NBU, using gRngUseSecLib_d in fwk_config.h
  - Some API updates:
    - RNG_IsReseedneeded() renamed to RNG_IsReseedNeeded,
    - RNG_TriggerReseed() renamed to RNG_NotifyReseedNeeded(),
    - RNG_SetSeed() and RNG_SetExternalSeed() return status code.
  - Optimized Linear Congruential modulus computation to reduce cycle count.

Minor changes

- [NVM]
  - Optimize NvIsRecordErased() procedure for faster garbage collection
  - MISRA fix : Remove externs and weaks from NVM module - Make RNG and timer manager dependencies conditional
- [Platform]
  - Allow the debugger to wakeup the KW47/MCXW72 target

6.2.2: KW45/K32W1 MR6 SDK 2.16.000 Experimental Features only:

- Power down on application power domain : Some tests have shown some failure. Power consumption higher than Deep Sleep. => This feature is not fully supported in this release
- XTAL32K less board with FRO32K support : Some additional stress tests are under progress.
- FRO32K notifications callback is for debug only and shall not be used for production. User shall not execute long processing (such as PRINTF) as it is executed in ISR context.

Changes

- [Board] Support for freedom board FRDM-MCX W7X
- [HWparams]
  - Support for location of HWParameters and Application Factory Data IFR in IFR1
  - Default is still to use HWparams in Flash to keep backward compatibility
- [RNG]: API updates:
  - New APIS RNG_IsReseedneeded(), RNG_SetSeed() to provide See to PRNG on NBU/App core - See BluetoothLEHost_ProcessIdleTask() in app_conn.c
  - New APIs RNG_SetExternalSeed() : User can provide external seed. Typically used on NBU firmrware for App core to set a seed to RNG. RNG_TriggerReseed() : Not required on App core. Used on NBU only.
- [NVS] Wear statistics counters added - Fix nvs_file_stat() function
- [NVM] fix Nv_Shutdown() API
- [SecLib] New feature AES MMO supported for Zigbee

6.2.2: RW61x RFP4 SDK 2.16.000

- [Platform] Support Zigbee stack
- [OTA] Add support for RW61x OTA with remap feature.
  - Required modifications to prevent direct access to flash logical addresses when remap is active.
  - Image trailers expected at different offset with remap enabled (see gPlatformMcuBootUseRemap_d in fwk_config.h)
  - fixed image state assessment procedure when in RunCandidate.
- [NVS] Wear statistics counters added
- [SecLib] New feature AES MMO supported for Zigbee
- [Misra] various fixes

6.2.1: KW45/K32W1 MR5 SDK 2.15.000 Experimental Features only:

- Power down on application power domain : Some tests have shown some failure. This feature is not fully supported in this release
- XTAL32K less board with FRO32K support : Some additional stress tests are under progress. Timing variation of the timebase are being analyzed

Major changes

- [RNG]: API updates
  - New compile flag to keep deprecated API: FWK_RNG_DEPRECATED_API
  - change return error code to int type for RNG_Init(), RNG_ReInit()
  - New APIs RNG_GetTrueRandomNumber(), RNG_GetPseudoRandomData()
- [Platform]
  - fwk_platform_sensors
    - Change default temperature value from -1 to 999999 when unknown

  - fwk_platform_genfsk
    * rename from platform_genfsk.c/h to fwk_platform_genfsk.c/h
  - platform family
    * Rename the framework platform folder from kw45_k32w1 to connected_mcu to support other platform from the same family
  - fwk_platform_intflash
    * Moved from fwk_platform files to the new fwk_platform_intflash files the internal flash dependant API
- [NBU]
  - BOARD_LL_32MHz_WAKEUP_ADVANCE_HSLOT changed from 2 to 3 by default
  - BOARD_RADIO_DOMAIN_WAKE_UP_DELAY changed from 0x10 to 0x0F
- [gcc linker]
  - Exclude k32w1_nbu_ble_15_4_dyn.bin from .data section

Minor Changes

- [Platform]
  - PLATFORM_GetTimeStamp(0 has an important fix for reading the Timestamp in TSTMR0
  - New API PLATFORM_TerminateCrypto(), PLATFORM_ResetCrypto() called from SecLib for lowpower exit
  - Fix when enable fro debug callback on nbu
- [DBG]
  - SWO
    * Add new files fwk_debug_swo.c/h to use SWO for debug purpose
    * Two new flags has been added:
      · BOARD_DBG_SWO_CORE_FUNNEL to chose on which core you want to use SWO
      · BOARD_DBG_SWO_PIN_ENABLE to enable SWO on a pin
- [NVS]
  - Add support of NVS and Settings in framework
- [NBU]
  - Fix power down issues and reduce critical section on NBU side:
    * new API PLATFORM_RemoteActiveReqWithoutDelay() called from NBU functions where waiting delay is not required
    * Increase delay needed in power down for OEM part to request the SOC to be active
    * Remove unnecessary code to PLATFORM_RemoteActiveReqWithoutDelay() from PLATFORM_HciRpmsgRxCallback()
    * Improve nbu memory allocation failure debug messages
- [SDK]
  - Multicore: remove critical section in HAL_RpmsgSendTimeout() (only required in FPGA HDI mode)
  - Flash drivers: update for ECC detection

- [Platform]
  - fwk_platform_sensors
    - Fix temperature reporting to NBU
  - fwk_platform_extflash
    - Align .c and .h prototype of PLATFORM_ExternalFlashAreaIsBlank() function
- [NVM]
  - Keep Mutex in NvModuleDeInit(). In Bare metal OS, Mutex can not be destroyed
  - New API NvRegisterEccFaultNotificationCb() to register Notification callback when Ecc error happens in FileSystem
- [MISRA] fixes
  - SecLib_sss.c: ECDH_P256_ComputeDhKey()
  - fwk_platform_extflash.c: PLATFORM_IsExternalFlashPageBlank()
  - fwk_fs_abstraction.c: Various fixes
- [HWparams]
  - Fix on if condition when gHwParamsProdDataPlacementLegacy2IfrMode_c mode is selected
- [OTA]
  - Enable gOtaCheckEccFaults_d by default to avoid bus in case of ECC error during OTA
  - Fix OTA partition overflow during OTA stop and resume transfer
- [BOARD]
  - Place code button or led specific under correct defines in board_comp.c/h
  - Bring back MACROs BOARD_INITRFSWITCHCONTROLPINS in pin_mux header file of the loc board
- [SecLib]
  - Add some undefinition in SecLib_mbedtls_config as new dependency has been added in mbedtls repo:
    - MBEDTLS_SSL_CBC_RECORD_SPLITTING, MBEDTLS_SSL_PROTO_TLS1, MBEDTLS_SSL_PROTO_TLS1_1
- [FRO32K]
  - FRO32K notification callback PLATFORM_FroDebugCallback_t() has new parameter to report he fro_trim value
  - maxCalibrationIntervalMs value can be provided to NBU using PLATFORM_FwkSrvSetRfSfcConfig()
- [Sensors]
  - fix: PLATFORM_GetTemperatureValue() shall have NBU started to send temperature to NBU

6.2.1: RW61x RFP3

- [NVS]
  - Add support of NVS and Settings in framework
- [MISRA] fixes
  - board_lp.c BOARD_UninitDebugConsole() and BOARD_ReinitDebugConsole()

  - fwk_platform_ble.c: Various fixes
- [OTA]
  - Fix OTA partition overflow during OTA stop and resume transfer

6.2.0: RT1060/RT1170 SDK2.15 Major

6.1.8: KW45/K32W1 MR4

- [BOARD PLATFORM]
  - Move gBoardUseFro32k_d to board_platform.h file
  - Offer the possibility to change the source clock accuracy to gain in power consumption
- [BOARD LP]
  - Move PLATFORM_SetRamBanksRetained() at end of BOARD_EnterLowPowerCb() in case a memory allocation is done previously in this function
  - fix low power, increase BOARD_RADIO_DOMAIN_WAKE_UP_DELAY from 0 to 0x10 - Skip this delay when App requesting NBU wakeup
- [PLATFORM]
  - fwk_platform_ble.c/h: New timestamp API that returns the difference between the current value of the LL clock and the argument of the function
  - fwk_platform.c/h:
    * New PLATFORM_EnableEccFaultsAPI_d compile flag: Enable APIs for interception of ECC Fault in bus fault handler
    * New gInterceptEccBusFaults_d compile flag: Provide FaultRecovery() demo code for bus fault handler to Intercept bus fault from Flash Ecc error
- [LOC]
  - Incorrect behavior for set_dtest_page (DqTEST11 overridden)
  - Fix SW1 button wake able on Localization board
  - Fix yellow led not properly initialized
  - Format localization pin_mux.c/h files
- [Inter Core]
  - Affect values to enumeration giving the inter core service message ids
  - Shared memory settings shared between both cores
  - Add callback to register when NBU has unrecoverable Radio issue
- [NVM]
  - Add NV_STORAGE_MAX_SECTORS, NV_STORAGE_SIZE as linker symbol for alignment with other toolchain
  - ECC detection and recovery. New gNvSalvageFromEccFault_d and gNvVerifyReadBackAfterProgram_d compile flags. Please refer to ECC Fault detection section in README.md file located in NVM folder
- [OTA]
  - Prevent bus fault in case of ECC error when reading back OTA_CFR update status (disable by default)
- [SecLib]

  - Shared mutex for RNG and SecLib as they share same hardware resource
- [Key storage]
  - Fix to ignore the garbage at the end of buffers
  - Detect when buffers are too small in KS_AddKey() functions
- [FileCache]
  - Fix deadlock in Filecache FC_Process()
- [SDK]
  - Applications: remove definition of stack location and use default from linker script, fix warmboot stack in freertos at 0x20004000
  - Memory Manager Light:
    * fix Null pointer harfault when MEM_STATISTICS_INTERNAL enable
    * Fix MemReinitBank() on wakeup from lowpower when Ecc banks are turned off

6.1.7: KW45/K32W1 MR3

- [OTA]
  - New API OTA_SetNewImageFlagWithOffset()
  - Fix StorageBitmapSize calculation
  - OTA clean up: Removed OTA_ValidateImage()
- [Low Power]
  - New linker Symbol m_lowpower_flag_start in linker file.
    * Flag is used to indicate NBU that Application domain goes to power down mode. Keep this flag to 0 if only Deep sleep is supported
    * This flag will be set to 1 if Application domain goes to power down mode
  - Re-introduce PWR_AllowDeviceToSleep()/PWR_DisallowDeviceToSleep(), PWR_IsDeviceAllowedToSleep() API
  - Implement tick compensation mechanism for idle hook in a dedicated freertos utils file fwk_freertos_utils.[ch], new functions: FWK_PreIdleHookTickCompensation() and FWK_PostIdleHookTickCompensation
  - Rework timestamping on K4W1
    * PLATFORM_GetMaxTimeStamp() based on TSTMR
    * Rename PLATFORM_GetTimestamp() to PLATFORM_GetTimeStamp()
    * Update PLATFORM_Delay(): Rework to use TSTMR instead of LPTMR for platform_delay
    * Update PLATFORM_WaitTimeout(): Fixed a bug in PLATFORM_WaitTimeout() related to timer wrap
    * Add PLATFORM_IsTimeoutExpired() API
  - Fix race condition in PWR_EnterLowPower(), masking interrupts in case not done at upper layer
  - Low power timer split in new files fwk_platform_lowpower_timer.[ch]
  - New PWR_systicks_bm.c file for bare metal usage: implement SysTick suspend/resume functionality, New weak PWR_SysTicksLowPowerInit()
- [FRO32K]

  - Improve FRO32K calibration in NBU
  - create PLATFORM_InitFro32K() to initialize FRO32K instead of XTAL32K (to be called from hardware_init())
  - update FRO32K README.md file in SFC module
  - Debug:
  - Add Notification callback feature for SFC module FRO32K
  - Linker script update to support m_sfc_log_start in SMU2
- [SecLib]
  - Remove gSecLibSssUseEncryptedKeys_d compile option, split Secure/Unsecure APIs
  - RNG update to use same mutex than SecLib
  - Fix AES_128_CBC_Encrypt_And_Pad length
  - Implement RNG_ReInit() for lowpower
  - Fix issue in ECDH_P256_GenerateKeys() when waking up from power down
  - Call CRYPTO_ELEMU_reset() from SecLib_reInit() for power down support
- [BOARD]
  - Create new board_platform.h file for all Board characteristics settings (32Mhz XTAL, 32KHZ XTAL, etc..)
  - TM_EnterLowpower() TM_EnterLowpower() to be called from LP callbacks
  - Support Localization boards, Only BUTTON0 supported
    * New compile flag BOARD_LOCALIZATION_REVISION_SUPPORT
    * New pin_mux.[ch] files
  - Offer the possibility to override CDAC and ISEL 32MHz settings before the initialization of the crystal in board_platform.h
    * new BOARD_32MHZ_XTAL_CDAC_VALUE, BOARD_32MHZ_XTAL_ISEL_VALUE
    * BOARD_32MHZ_XTAL_TRIM_DEFAULT obsoleted
- [NVM file system]
  - Look ahead in pending save queue - Avoid consuming space to save outdated record
  - Fix NVM gNvDualImageSupport feature in NvIsRecordCopied
- [Inter Core]
  - Change PLATFORM_NbuApiReq() API return parameters granularity from uint32 to uint8
  - MAX_VARIANT_SZ change from 20 to 25
  - Set lp wakeup delay to 0 to reduce time of execution on host side, NBU waits XTAL to be ready before starting execution
  - Update inter core config rpmsg_config.h
  - Add timeout to while loops that relies on hardware in RemoteActiveReq(), Application can register Callbacks when timeout
  - Return non-0 status when calling PLATFORM_FwkSrvSendPacket when NBU non started
  - Let PLATFORM_GetNbuInfo return -10 if response not received on timeout - Doxygen platform_ics APIs
- [HW params]

  - New compile Macro for HW params placement in IFR - Save 8K in FLash: gHwParamsProdDataPlacement_c . 3 modes:
  - Legacy placement, move from legacy to IFR, IFR only placement
  - New compile Macro for Application data to be stored with HW params (in shared flash sector): gHwParamsAppFactoryDataExtension_d, New APIs:
    * Nv_WriteAppFactoryData(), Nv_GetAppFactoryData()
  - See HWParameter.h
- [Platform]
  - Implement PLATFORM_GetIeee802_15_4Addr() API in fwk_platform_ot.c - New gPlatformUseUniqueDeviceIdFor15_4Addr_d compile Macro
  - Wakeup NBU domain when reading RADIO_CTRL UID_LSB register in PLATFORM_GenerateNewBDAddr()
- [Reset]
  - New reset Implementations using Deep power down mode or LVD:
    * new files fwk_platform_reset.[ch]
    * new APIs: PLATFORM_ForceDeepPowerDownReset(), PLATFORM_ForceLvdReset() + reset on ext pins
    * new compile flags: gAppForceDeepPowerDownResetOnResetPinDet_d and gAppForceLvdResetOnResetPinDet_d to reset on external pins
- [FSCI]
  - fix when gFsciRxAck_c enabled
  - integrate new reset APIs

6.1.4: RW610/RW612 RFP1

- [Low Power]
  - Added support of low power for OpenThread stack.
  - Added PWR_AllowDeviceToSleep/PWR_DisallowDeviceToSleep/PWR_IsDeviceAllowedToSleep APIs.
- [platform]
  - Added PLATFORM_GetMaxTimeStamp API.
  - Fixed high impact Coverity.
- [FreeRTOS]
  - Created a new utilities module for FreeRTOS: fwk_freertos_utils.c/h.
  - Implemented a tick compensation mechanism to be used in FreeRTOS idle hook, likely around flash operations. This mechanism aims to estimate the number of ticks missed by FreeRTOS in case the interrupts are masked for a long time.

6.1.4: KW45/K32W1 MR2

- [Low power]
  - Powerdown mode tested and enabled on Low Power Reference Design applications
  - XTAL32K removal functionality using FRO32K, supported from NBU firmwares - limitation: Application domain supports Deep Sleep only (not power down)

  - NBU low power improvement: low power entry sequence improvement and system clock reduction to 16Mhz during WFI
  - Wake up time from cold boot, reset, power switch greatly improved. Device starts on FRO32K, switch to XTAL32K when ready if gBoardUseFro32k_d not set
  - Bug fixes:
    * Move PWR LowPower callback to PLATFORM layers
    * Fix wrong compensation of SysTicks
    * Reinit system clocks when exiting power down mode: BOARD_ExitPowerDownCb(), restore 96MHz clock is set before going to low power
    * Call Timermanager lowpower entry exit callbacks from PLATFORM_EnterLowPower()
    * Update PLATFORM_ShutdownRadio() function to force NBU for Deep power down mode
  - K32W1:
    * Support lowpower mode for 15.4 stacks
- [NVM]
  - New Compilation MACRO gNvDualImageSupport to support multiple firmware image with different register dataset
  - Change default configuration gNvStorageIncluded_d to 1, gNvFragmentation_Enabled_d to 1, gUnmirroredFeatureSet_d to TRUE
  - Some MISRA issues for this new configuration.
  - Remove deprecated functionality gNvUseFlexNVM_d
- [SecLib]
  - New NXP Ultrafast ecp256 security library:
    * New optimized API for ecdh DhKey/ecp256 key pair computation: Ecdh_ComputeDhKeyUltraFast(), ECP256_GenerateKeyPairUltraFast().
    * New macro gSecLibUseDspExtension_d.
    * Improved software version of Seclib with Ultrafast library for ECP256_LePointValid()
  - Bug fixes:
    * Share same mutex between Seclib and RNG to prevent concurrent access to S200
    * Optimized S200 re-initialization, restore ecdh key pair after power down
    * Fixed race condition when power down low power entry is aborted
    * Endianness function updates and clean up
- [OTA]
  - OTASupport improvements:
    * New API OTA_GetImgState(), OTA_UpdateImgState()
    * OTASupport and fwk_platform_extflash API updates for external flash: OTA_SelectExternalStoragePartition(), PLATFORM_IsExternalFlashSectorBlank(), PLATFORM_IsExternalFlashPageBlank(), PLATFORM_OtaGetOtaPartitionConfig()
    * Updated OtaExternalFlash.c, 2 new APIs in fwk_platform_extflash.c

    - Removed unused FLASH_op_type and FLASH_TransactionOpNode_t definitions from public API
    - Removed unused InternalFlash_EraseBlock() from OtaInternalFlash.c
- [NBU firmware]
  - Mechanism to set frequency constraint to controller from the host PLATFORM_SetNbuConstraintFrequency()
  - NbuInfo has one more digit in versionBuildNo field
- [Board]
  - Support Extflash low power mode, add BOARD_UninitExternalFlash(), PLATFORM_UninitExternalFlash(), PLATFORM_ReinitExternalFlash()
  - Support XTAL32K removal functionatity, use FRO32K instead by setting gBoardUseFro32k_d to 1 in board.h file
  - Support localization boards KW45B41Z-LOC Rev C
  - Low power improvement: New BOARD_InitPins() and BOARD_InitPinButtonBootConfig() called from hardware_init.c
  - Removed KW45_A0_SUPPORT support (dcdc)
  - Bug fixes:
    - Fixed glitches on the serial manager RX when exiting from power down
    - Fixed ADC not deinitialized in clock gated modes in BOARD_EnterLowPowerCb()
    - Fixed UART output flush when going to low power: BOARD_UninitAppConsole()
- [platform]
  - PLATFORM_InitBle(), PLATFORM_SendHci() can now block with timeout if NBU does not answer. Application can register callback function to be notified when it occurs: PLATFORM_RegisterBleErrorCallback()
  - Added API to set and get 32Khz XTAL capacitance values: PLATFORM_GetOscCap32KValue() and PLATFORM_SetOscCap32KValue()
  - Added new Service FWK call gFwkSrvNbuMemFullIndication_c to get NBU mem full indication, register with PLATFORM_RegisterNbuMemErrorCallback()
  - Added support negative value in platform intercore service
- [linker script]
  - Realigned gcc linker script with IAR linker script.
  - Added possibility to redefine cstack_start position
  - Added Possibility to change gNvmSectors in gcc linker script
  - Added dedicated reserved Section in shared memory for LL debugging
- [FreeRTOSConfig.h]
  - Removed unused MACRO configFRTOS_MEMORY_SCHEME and configTOTAL_HEAP_SIZE
- [HW Param]
  - Added xtalCap32K field to store XTAL32K triming value
- [fwk_hal_macros.h]
  - Added MACRO for KB, MB and set, clear bits in bit fields
- [Debug]

  - Added MACROs for performance measurement using DWT: DBG_PERF_MEAS

6.1.3 KW45 MR1 QP1

- [Initialization] Delay the switch to XTAL32K source clock until the BLE host stack is initialized
- [lowpower] NBU wakeup from lowpower: configuration can now be programmed with BOARD_NBU_WAKEUP_DELAY_LPO_CYCLE, BOARD_RADIO_DOMAIN_WAKE_UP_DELAY in board.h file
- [NBU firmware] Major fix for NBU system clock accuracy
- [clock_config]
  - Update SRAM margin and flash config when switching system frequency
  - Trim FIRC in HSRUN case
- [XTAL 32K trim] XTAL 32K configuration can be tuned in board.h file with BOARD_32MHZ_XTAL_TRIM_DEFAULT, BOARD_32KHZ_XTAL_CLOAD_DEFAULT, BOARD_32KHZ_XTAL_COARSE_ADJ_DEFAULT
- [MAC address] Add OUI field in PLATFORM_GenerateNewBDAddr() when using Unique Device Id

6.1.2: RW610/RW612 PRC1

- [Low Power]
  - Updates after SDK Power Manager files renaming.
  - Moved PWR LowPower callback to PLATFORM layers.
  - Bug fixes:
    - Fixed wrong compensation of SysTicks during tickless idle.
    - Reinit RTC bus clock after exit from PM3 (power down).
- [OTA]
  - Initial support for OTA using the external flash.
- [platform]
  - Implemented platform specific time stamp APIs over OSTIMER.
  - Implemented platform specific APIs for OTA and external flash support.
  - Removed PLATFORM_GetLowpowerMode API.
  - Added support of CPU2 wake up over Spinel for OpenThread stack.
  - Bug fixes:
    - Fixed issues related to handling CPU2 power state.
- [board]
  - Updated flash_config to support 64MB range.
- [linker script]
  - Fixed wrong assert.

6.1.1: KW45/K32W1 MR1

- [platform] Use new FLib_MemSet32Aligned() to write in ECC RAM bank to force ECC calculation in the MEM_ReinitRamBank() function
- [FunctionLib] Implement new API to set a word aligned
- [platform] Set coarse amplifier gain of the oscilattor 32k to 3
- [platform] Switch back to RNG for MAC Adress generation
- [SecLib] Get rid of the lowpower constraint of deep sleep in ECDH API
- [DCDC] Set DCDC output voltage to 1.35V in case LDO core is set to 1.1V to ensure a drop of 250mV between them
- [NVM] NvIdle() is now returning the number of operations that has been executed
- [documentation] Add markdown of each framework module by default on all package
- [LowPower] Add a delay advised by hardware team on exit of lowpower for SPC
- [SecLib] Rework of SecLib_mbedTLS ECDH functions
- [OTA] Make OTA_IsTransactionPending() public API
- [FunctionLib] Change prototype of FLib_MemCpyWord(), pDst is now a void* to permit more flexibility
- [NVM] Add an API to know if there is a pending operation in the queue
- [FSCI] Fix wrong error case handling in FSCI_Monitor()

6.1.0: KW45/K32W1 RFP

- [LowPower] Do not call PLATFORM_StopWakeUpTimer() in PWR_EnterLowPower() if PLATFORM_StartWakeUpTimer() was not previously called
- [boards] Add the possibility to wakeup on UART 0 even if it is not the default UART
- [boards] Add support for Hardware flow control for UART0, Enable with gBoardUseUart0HwFlowControl, Pin mux update with two additional API for RTS, CTS pins
- [Sensors] Improve ADC wakeup time from deep sleep state: use save and restore API for ADC context before/after deep sleep state.
- [linker script] update SMU2 shared memory region layout with NBU: increase sqram_btblebuf_size to support 24 connections. Shared memory region moved to the end
- [SecLib] SecLib_DeriveBluetoothSKD() API update to support if EdgeLock key shall be regenerated

6.0.11: KW45/K32W1 PRC3.1

FSCI: Framework Serial Communication Interface

Overview The Framework Serial Communication Interface (FSCI) is both a software module and a protocol that allows monitoring and extensive testing of the protocol layers. It also allows separation of the protocol stack between two protocol layers in a two processing entities setup, the host processor (typically running the upper layers of a protocol stack) and the Black Box application (typically containing the lower layers of the stack, serving as a modem). The Test Tool software is an example of a host processor, which can interact with FSCI Black Boxes at various

layers. In this setup, the user can run numerous commands to test the Black Box application services and interfaces.

The FSCI enables common service features for each device enables monitoring of specific interfaces and API calls. Additionally, the FSCI injects or calls specific events and commands into the interfaces between layers.

An entity which needs to be interfaced to the FSCI module can use the API to register opcodes to specific interfaces. After doing so, any packet coming from that interface with the same opcode triggers a callback execution. Two or more entities cannot register the same opcode on the same interface, but they can do so on different interfaces. For example, two MAC instances can register the same opcodes, one over UARTA, and the other over UARTB. This way, Test Tool can communicate with each MAC layer over two UART interfaces.

The FSCI module executes either in the context of the Serial Manager task or owns its dedicated task if the compilation Macro *gFsciUseDedicatedTask_c* is set to 1.

FSCI packet structure The FSCI module sends and receives messages as shown in the figure below. This structure is not specific to a serial interface and is designed to offer the best communication reliability. The Black Box device expects messages in little-endian format. It also responds with messages in little-endian format.

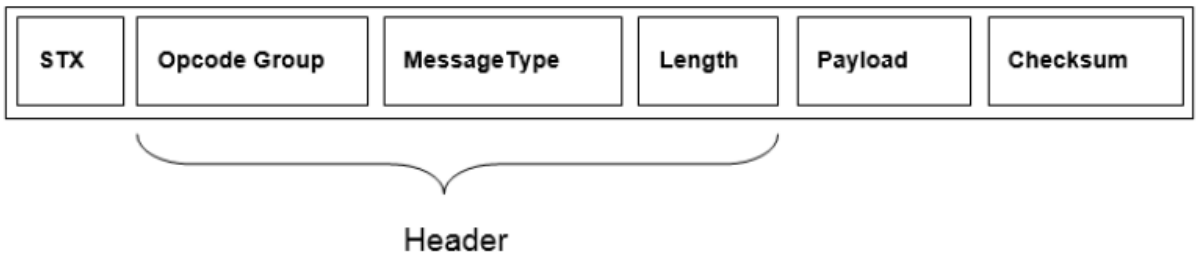

Below is an illustration of the FSCI packet structure when a virtual interface is used instead :

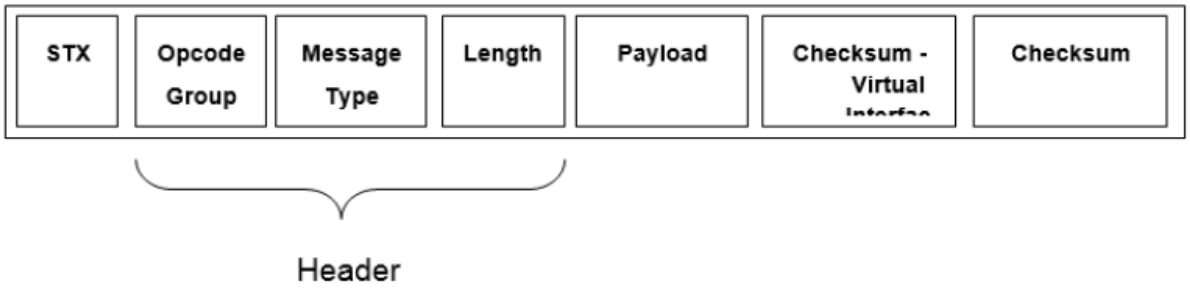

Field name	Length (bytes)	Description
STX	1	Used for synchronization over the serial interface. The value is always 0x02.
Opcode Group	1	Distinguishes between different Service Access Primitives (for example MLME or MCPS).
Message Type	1	Specifies the exact message opcode that is contained in the packet.
Length	1 or 2	The length of the packet payload, excluding the header and FCS. The length field content must be provided in little-endian format.
Payload	variable	Payload of the actual message.
Checksum	1	Checksum field used to check the data integrity of the packet.
Checksum2	0 or 1	The second CRC field appears only for virtual interfaces.

NOTE : When virtual interfaces are used, the first checksum is decremented with the ID of the interface. The second checksum is used for error detection.

constant definition The following Macro configurs the FSCI module

```
#define gFsciIncluded_c 0 /* Enable/Disable FSCI module */
#define gFsciUseDedicatedTask_c 1 /* Enable Fsci task to avoid recursivity in Fsci module (Misra␣
↪compliant) */
#define gFsciMaxOpGroups_c 8
#define gFsciMaxInterfaces_c 1
#define gFsciMaxVirtualInterfaces_c 0
#define gFsciMaxPayloadLen_c 245 /* bytes */
#define gFsciTimestampSize_c 0 /* bytes */
#define gFsciLenHas2Bytes_c 0 /* boolean */
#define gFsciUseEscapeSeq_c 0 /* boolean */
#define gFsciUseFmtLog_c 0 /* boolean */
#define gFsciUseFileDataLog_c 0 /* boolean */
#define gFsciLoggingInterface_c 1 /* [0..gFsciMaxInterfaces_c) */
#define gFsciHostMacSupport_c 0 /* Host support at MAC layer */
```

The following provides the OpGroups values reserved by MAC, application, and FSCI.

FSCI Host FSCI Host is a functionality that allows separation at a certain stack layer between two entities, usually two boards running separate layers of a stack.

Support is provided for functionality at the MAC layer, for example, MAC/PHY layers of a stack are running as a Black Box on a board, and MAC higher layers are running on another. The higher layers send and receive serial commands to and from the MAC Black Box using the FSCI set of operation codes and groups.

The protocol of communication between the two is the same. The current level of support is provided for:

- FSCI_MsgResetCPUReqFunc – sends a CPU reset request to black box
- FSCI_MsgWriteExtendedAdrReqFunc – configures MAC extended address to the Black Box
- FSCI_MsgReadExtendedAdrReqFunc – N/A

The approach on the Host interfacing a Black Box using synchronous primitives is by default the polling of the FSCI_receivePacket function, until the response is received from the Black Box. The calling task polls whenever the task is being scheduled. This is required because a stack synchronous primitive requires that the response of that request is available in the context of the caller right after the SAP call has been executed.

The other option, available for RTOS environments, is using an event mechanism. The calling task blocks waiting for the event that is sent from the Serial Manager task when the response is available from the Black Box. This option is disabled by default. The disadvantage of this option is that the primitive cannot be received from another Black Box through a serial interface because the blocked task is the Serial Manager task, which reaches a deadlock as cannot be released again.

FSCI ACK ACK transmission is enabled through the gFsciTxAck_c macro definition. Each FSCI valid packet received triggers an FSCI ACK packet transmission on the same FSCI interface that the packet was received on. The serial write call is performed synchronously to send the ACK packet before any other FSCI packet. Only then the registered handler is called to process the received packet. The ACK is represented by the gFSCI_CnfOpcodeGroup_c and mFsciMsgAck_c Opcode. An additional byte is left empty in the payload so that it can be used optionally as a packet identifier to correlate packets and ACKs. ACK reception is the other component that is enabled through gFsciRxAck_c. The behavior is such that every FSCI packet sent through a serial

interface triggers an FSCI ACK packet reception on the same interface after the packet is sent. If an ACK packet is received, the transmission is considered successful. Otherwise, the packet is resent a number of times. The ACK wait period is configurable through mFsciRxAckTimeoutMs_c and the number of transmission retries through mFsciTxRetryCnt_c. The ACK mechanism described above can also be coupled with a FSCI packet reception timeout enabled through gFsciRxTimeout_c and configurable through mFsciRxRestartTimeoutMs_c. Whenever there are no more bytes to be read from a serial interface, a timeout is configured at the predefined value if no other bytes are received. If new bytes are received, the timer is stopped and eventually canceled at successful reception. However, if, for any reason, the timeout is triggered, the FSCI module considers that the current packet is invalid, drops it, and searches for a new start marker.

FSCI usage example Detailed data types and APIs are described in ConnFWK API documentation.

Initialization

```
/* Configure the number of interfaces and virtual interfaces used */
#define gFsciMaxInterfaces_c 4
#define gFsciMaxVirtualInterfaces_c 2
....
/* Define the interfaces used */
static const gFsciSerialConfig_t myFsciSerials[] = {
    /* Baudrate, interface type, channel No, virtual interface */ {gUARTBaudRate115200_c, gSerialMgrUart_
↪c, 1, 0}, {gUARTBaudRate115200_c, gSerialMgrUart_c, 1, 1}, {0 , gSerialMgrIICSlave_c, 1, 0}, {0 ,␣
↪gSerialMgrUSB_c, 0, 0},
};
....
/* Call init function to open all interfaces */
FSCI_Init( (void*)mFsciSerials );
```

Registering operation groups

```
myOpGroup = 0x12; // Operation Group used
myParam = NULL; // pointer to a parameter to be passed to the handler function (myHandlerFunc)
myInterface = 1; // index of entry from myFsciSerials
...
FSCI_RegisterOpGroup( myOpGroup, gFsciMonitorMode_c, myHandlerFunc, myParam, myInterface );
```

Implementing handler function

```
void fsciMcpsReqHandler(void *pData, void* param, uint32_t interfaceId)
{
    clientPacket_t *pClientPacket = ((clientPacket_t*)pData);
    fsciLen_t myNewLen;
    switch( pClientPacket->structured.header.opCode )
    {
        case 0x01:
        {
            /* Reuse packet received over the serial interface The OpCode remains the same. The length of the␣
↪response must be <= that the length of the received packet */
            pClientPacket->structured.header.opGroup = myResponseOpGroup;/* Process packet */
            ...
            pClientPacket->structured.header. len = myNewLen;
            FSCI_transmitFormatedPacket(pClientPacket, interfaceId);
            return;
        }
        case 0x02:
        {
```

(continues on next page)

(continued from previous page)

```
        /* Alocate a new message for the response. The received packet is Freed */
        clientPacket_t *pResponsePkt = MEM_BufferAlloc( sizeof(clientPacketHdr_t) + myPayloadSize_d␣
↪+ sizeof(uint8_t) // CRC);
        if(pResponsePkt)
        {
            /* Process received data and fill the response packet */ ...
            pResponsePkt->structured.header. len = myPayloadSize_d;
            FSCI_transmitFormatedPacket(pClientPacket, interfaceId);
        }
        break;
    }
    default:
        MEM_BufferFree( pData );
        FSCI_Error( gFsciUnknownOpcode_c, interfaceId );
        return;
  }
  /* Free message received over the serial interface */
  MEM_BufferFree( pData );
}
```

Helper Functions Library

Overview This framework provides a collection of features commonly used in embedded software centered on memory manipulation.

HWParameter: Hardware parameter

Production Data Storage Hardware parameters provide production data storage

Overview Different platforms/boards need board/network node-specific settings to function according to the design. (Examples of such settings are IEEE® addresses and radio calibration values specific to the node.) For this purpose, the last flash sector is reserved and contains hardware-specific parameters for production data storage. These parameters pertain to the network node as a distinct entity. For example, a silicon mounted on a PCB in a specific configuration, rather than to just the silicon itself. This sector is reserved by the linker file, through the PROD_DATA section and it should be read/written only through the API described below.

> Note : This sector is not erased/written at code download time and it is not updated via over-the-air firmware update procedures to preserve the respective node-specific data, regardless of the firmware running on it.

Constant Definitions Name :

```
extern uint32_t PROD_DATA_BASE_ADDR[];
```

Description :

This symbol is defined in the linker script. It specifies the start address of the PROD_DATA section.

Name :

```
static const uint8_t mProdDataIdentifier[10] = {"PROD_DATA:"};
```

Description :

The value of this constant is copied as identification word (header) at the beginning of the PROD_DATA area and verified by the dedicated read function.

Note: the length of mProdDataIdentifier imposes the definition of PROD_DATA_ID_STRING_SZ as 10. The legacy HW parameters structure provides headroom for future usage. There are currently 63 bytes available.

Data type definitions Name :

```
typedef PACKED_STRUCT HwParameters_tag
{
    uint8_t identificationWord[PROD_DATA_ID_STRING_SZ]; /* internal usage only: valid data present */
    /*@{*/
    uint8_t bluetooth_address[BLE_MAC_ADDR_SZ];      /*!< Bluetooth address */
    uint8_t ieee_802_15_4_address[IEEE_802_15_4_SZ]; /*!< IEEE 802.15.4 MAC address - K32W1 only␣
↪*/
    uint8_t xtalTrim;                                /*!< XTAL 32MHz Trim value */
    uint8_t xtalCap32K;                               /*!< XTAL 32kHz capacitance value */
    /* For forward compatibility additional fields may be added here
       Existing data in flash will not be compatible after modifying the hardwareParameters_t typedef.
       In this case the size of the padding has to be adjusted.
    */
    uint8_t reserved[1];
    /* first byte of padding : actual size if 63 for legacy HwParameters but
      complement to 128 bytes in the new structure */
}
hardwareParameters_t;
```

Description:

Defines the structure of the hardware-dependent information.

> Note : Some members of this structure may be ignored on a specific board/silicon configuration. Also, new members may be added for implementation-specific purposes and the backward compatibility must be maintained.

The CRC calculation starts from the reserved field of the hardwareParameters_t and ends before the hardwareParamsCrc field. Additional members to this structure may be added using the following method :

Add new fields before the reserved field. This method does not cause a CRC fail, but you must keep in mind to subtract the total size of the new fields from the size of the reserved field. For example, if a field of uint8_t size is added using this method, the size of the reserved field shall be changed to 63.

Co-locating application factory data in HW Parameters flash sector. The sector containing the Hardware parameter structure may be located in the internal flash, usually at its last sector. The actual Hardware parameter structure has a size of 128 bytes - including padding reserved for future use. Since there is plenty of room available in a flash sector (4kB or 8kB), co-locating Application Factory Data in the same structure prevents from reserving another flash sector for these data. The application designer may adopt this solution by defining gHwParamsAppFactoryDataExtension_d as 1. A total of 2kB is alloted to this purpose.

If this option was chosen, whenever any of the Hardware parameter fields is modified, its CRC16 will change so the sector will need erasing. The gHwParamsAppFactoryDataPreserveOnHwParamUpdate_d compilation option deals with restoring the contents of the App Factory Data. Nonetheless this requires a temporary allocation a 2kB buffer to preserve the previous content and restore then on completion of the Hw Parameter update.

Special reserved area at start of IFR1 in range [0x02002000..0x02002600[On development boards a 1536 byte area is reserved and the actual Hardware parameter area begins at offset 0x600. Preserving this area on a HW parameter update also requires a temporary 1.5kB dynamic allocation (in addition to the App Factory 2kB allocation), to be able to restore on completion of update operation.

HW Parameters Production Data placement options The placement of production data (PROD_DATA) can be selected based on the definition of gHwParamsProdDataPlacement_c (see fwk_config.h). The productions data seldom need update for final products, once calibration data, MAC addresses or others have been programmed. Two cases exist, plus a transition mode :

1) gHwParamsProdDataMainFlashMode_c (0) :
   - PROD_DATA are located at top of Main Flash. Hardware parameters section is placed in the last sector of internal flash [0xfe000..0x100000[.
   - The linker script must reserve this area explicitly so as to prevent placement of NVM or text sections at that location by setting gUseProdInfoMainFlash_d.
2) gHwParamsProdDataMainFlash2IfrMode_c(1) : - PROD_DATA are located in IFR1, but MainFlash version still exists during interim period. - If the contents of the PROD_DATA section in MainFlash is valid (not blank and correct CRC) but the IFR PROD_DATA is still blank, copy the contents of MainFlash PROD_DATA to IFR location. - When done PROD_DATA in IFR are used. Once the transition is done, an application using (2: gHwParamsProdDataPlacementIfrMode_c) may be programmed.
3) gHwParamsProdDataIfrMode_c (2) :
   - PROD_DATA section dwells in the IFR1 sector [0x02002000..0x02004000[
   - in development phase the area comprised between [0x02002000..0x02002600[must be reserved for internal purposes.
   - This allows to free up the top sector of Main Flash by linking with gUseProdInfoMainFlash_d unset.

LowPower

Low Power reference user guide This Readme file describes the connectivity software architecture and provides the general low power enablement user guide.

1- Connectivity Low Power SW architecture The connectivity low power software architecture is composed of various components. These are described from the lower layer to the application layer:

1. The SDK power manager in component/power_manager. This component provides the basic low power framework. It is not specific to the connectivity but generic across devices. it covers:
   - gather the low power constraints for upper layer and take the decision on the best suitable low power state the device is allowed to go to fullfill the constraints.
   - call the low power entry and exit function callbacks
   - call the appropriate SW routines to switch the device into the suitable low power state
2. Connectivity Low power module in the connectivity framework. This module is composed of:

- The low power service called PWR inside framework/LowPower (this folder), This module is generic to all connectivity devices.
- The platform lowpower: fwk_platform_lowpower.[ch] located in framework\platform\<platform_name>. These files are a collection of low power routines functions for the PWR module and upper layer. These are specific to the device.

  Both PWR and platform lowpower files are detailed in section below.

3. Low power Application modules, it consists of 3 parts:
   - Application initialization file app_services_init.c where the application initializes the low power framework, see next section 'Demo example for typical usage of low power framework'
   - Application Idle task from application to call the main low power entry function PWR_EnterLowPower() to switch the device into lowpower. This function is application specific, one example is given in the section 1.3.3
   - Low power board files : board_lp.[ch] located in board/lowpower. These files implement the low power entry and exit functions related to the application and board. Customers shall modify these files for their own needs. Example code is given for the connectivity applications.

     User guide is provided in section 1.3 below.

   Note : Linker script may also be impacted for power down mode support in order to provide an RAM area for ROM warm boot (depends on the platform) and application warmboot stack

The Low power central and master reference design applications provide an example of Low power implementation for BLE. Customer can also refer to the associated document 'low power connectivity reference design user guide'.

1.1 - SDK power manager This module provides the main low power functionalities such as:

- Decide the best low-power mode dependent on the constraints set by upper layers by using PWR_SetLowPowerModeConstraints() API function.
- Handle the sequences to enter and exit low-power mode.
- Enable and configure wake up sources, call the application callbacks on low power entry/exit sequences.

The SDK power manager provides the capability for application and all components to receive low power constraints to the power. The Application does not set the low-power mode the device shall go into. When going to low power, the SDK power manager selects the best low-power mode that fits all the constraints.

As an example, if the low power constraint set from Application is Power Down mode, and no other constraint is set, the SDK power manager selects Power down mode, the next time the device enters low power. However, if a new constraint is set by another component, such as the SecLib module that operates Hardware encryption, the SecLib module would select WFI as additional low power constraint. Also, the SDK power manager selects this last low-power mode until the constraint is released by the SecLib module. It then reselects Power Down mode for further low power entry modes.

1.2 - PWR Low power module The PWR module in the connectivity framework provides additional services for the connectivity stacks and applications on top of the SDK power manager.

It also provides a simple API for Connectivity Stack and Connectivity applications.

However, more advanced features such as configuring the wake-up sources are only accessible from the SDK Power Manager API.

In addition to the SDK Power Manager, the PWR module uses the software resources from lower level drivers but is independent of the platform used.

1.2.1 - Functional description Initialization of the PWR module should be done through PWR_Init() function. This is mainly to initialize the SDK power manager and the platform for low power. It also registers PWR low power entry/exit callback PWR_LowpowerCb() to the SDK power manager. This function will be called back when entering and exiting low power to perform mandatory save/restore operations for connectivity stacks. The application can perform extra optional save/restore operations in the board_lp file where it can register to the SDK Power Manager its own callback. This is usually used to handle optional peripherals such as serial interfaces, GPIOs, and so on.The main entry function is PWR_EnterLowPower(). It should be called from Idle task when no SW activity is required. The maximum duration for lowpower is given as argument timeoutUs in useconds. This function will check the next Hardware event in the connectivity stack, typically the next Radio activity. A wakeup timer is programmed if the timeoutUs value is shorter than the next radio event timing. Passing a timeout of 0us will be interpreted as no timeout on the application side.

On device wakeup from low power state, the function will return the time duration the device has been in low power state.

Two APi are provided to set and release low power state constraints : PWR_SetLowPowerModeConstraint() and PWR_ReleaseLowPowerModeConstraint(). These are helper functions. User can use directly the SDK power manager if needed.

The PWR module also provides some API to be set as callbacks into other components to prevent from going to low power state. It can be used in following examples :

1. If a DMA is running, the module in charge of the DMA would need to set a constraint to avoid the system from going to a low power state when the RAM and system bus are no longer available.
2. If transfer is going on a peripheral, the drivers shall set a constraint to forbid low power mode.
3. If encryption is on going through an Hardware accelerator, the HW accelerator and the required ressources (clocks, etc), shall be kept active also by setting a constraints.

1.2.2 - Tickless mode support This module also provides some routines functions PWR_SysticksPreProcess() and PWR_SysticksPostProcess() from PWR_systicks.c in order to support the tickless mode when using FreeRTOS. The tickless mode is the capability to suspend the periodic system ticks from FreeRTOS and keep timebase tracking using another low power counter. In this implementation, the Timer Manager and time_stamp component are used for this purpose.

Idle task shall call these functions PWR_SysticksPreProcess() and PWR_SysticksPostProcess() before and after the call to the main low power entry function PWR_EnterLowPower().

Refer to framework/LowPower/PWR_systicks.c file or section 2.1 below for more information.

1.3 - Low power platform submodule Low power platform module file fwk_platform_lowpower.c provides the necessary helper functions to support low power device initialization, device entry, and exit routines. These are platform and device specific. Typically, the PWR module uses the low power platform submodule for all low power specific routines.

The low power platform submodule is documented in the Connectivity Framework Reference Manual document and in the Connectivity Framework API document.

1.4 - Low power board files Low power board files board_lp.[ch] are both application and board specific. Users should update this file to add new functions to include new used peripherals that require low power support. In the current SDK package, only Serial Manager over UART and button (IO toggle wake up source) are supported and demonstrated in the Bluetooth LE demo application.

Other peripherals that require specific action on low power entry and restore on low power exit should be added to low power board files. For more details, refer to section Low power board file update

2 - Low power Application user guide This section provides a user guide to enable Low power on a connectivity application, It gives example of typical implementation for the initialization, Idle task function and low power entry/exit functions.

2.1 - Application Project updates It is recommended to reuse the low-power peripheral/central reference design application projects as a start. This ensures that everything is in place for the low-power optimization feature. Then, application files may be added to one of the two projects.

However, users can start directly from the application project and implement low power in it, by performing the steps described in the following sections.

2.1.1 - SDK Power Manager Most of the Low power functionality is implemented in the SDK Power Manager. The files to add into the project SDK power_manager module are listed in the figure below:

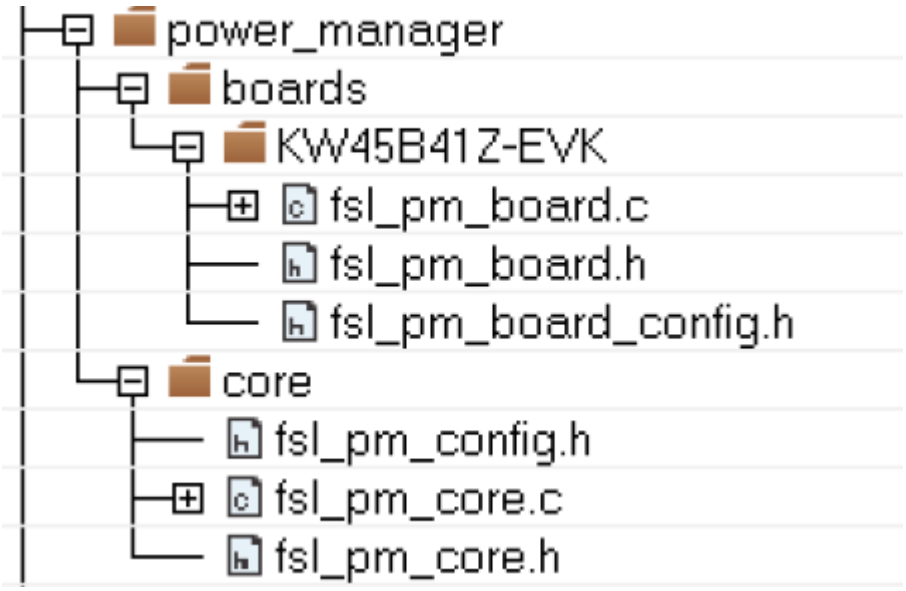

You need to use the files located in the folder that match your device.

2.1.2 - PWR connectivity framework module PWR.c PWR_Interface.h shall be added to your application projects :

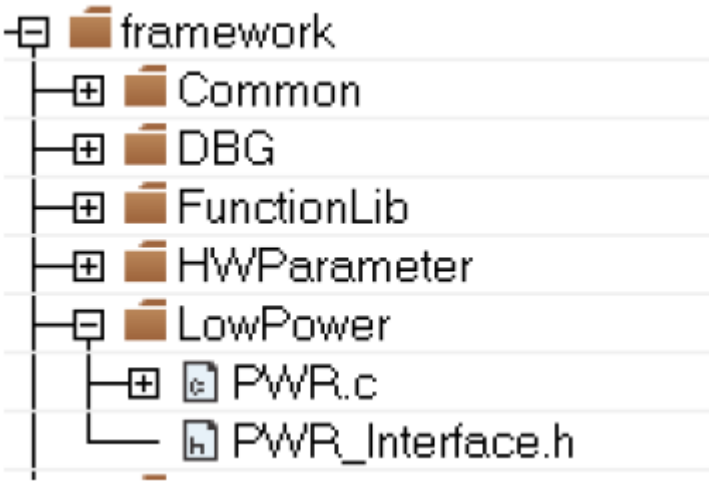

Optionally, in order to support Systick less mode, PWR_systicks.c or PWR_systicks_bm.c could also be added.

The include path to add is: middleware/wireless/framework/LowPower

2.1.3 -Low power platform submodule Low power platform files can be found in the 'Platform' module in the connectivity framework:

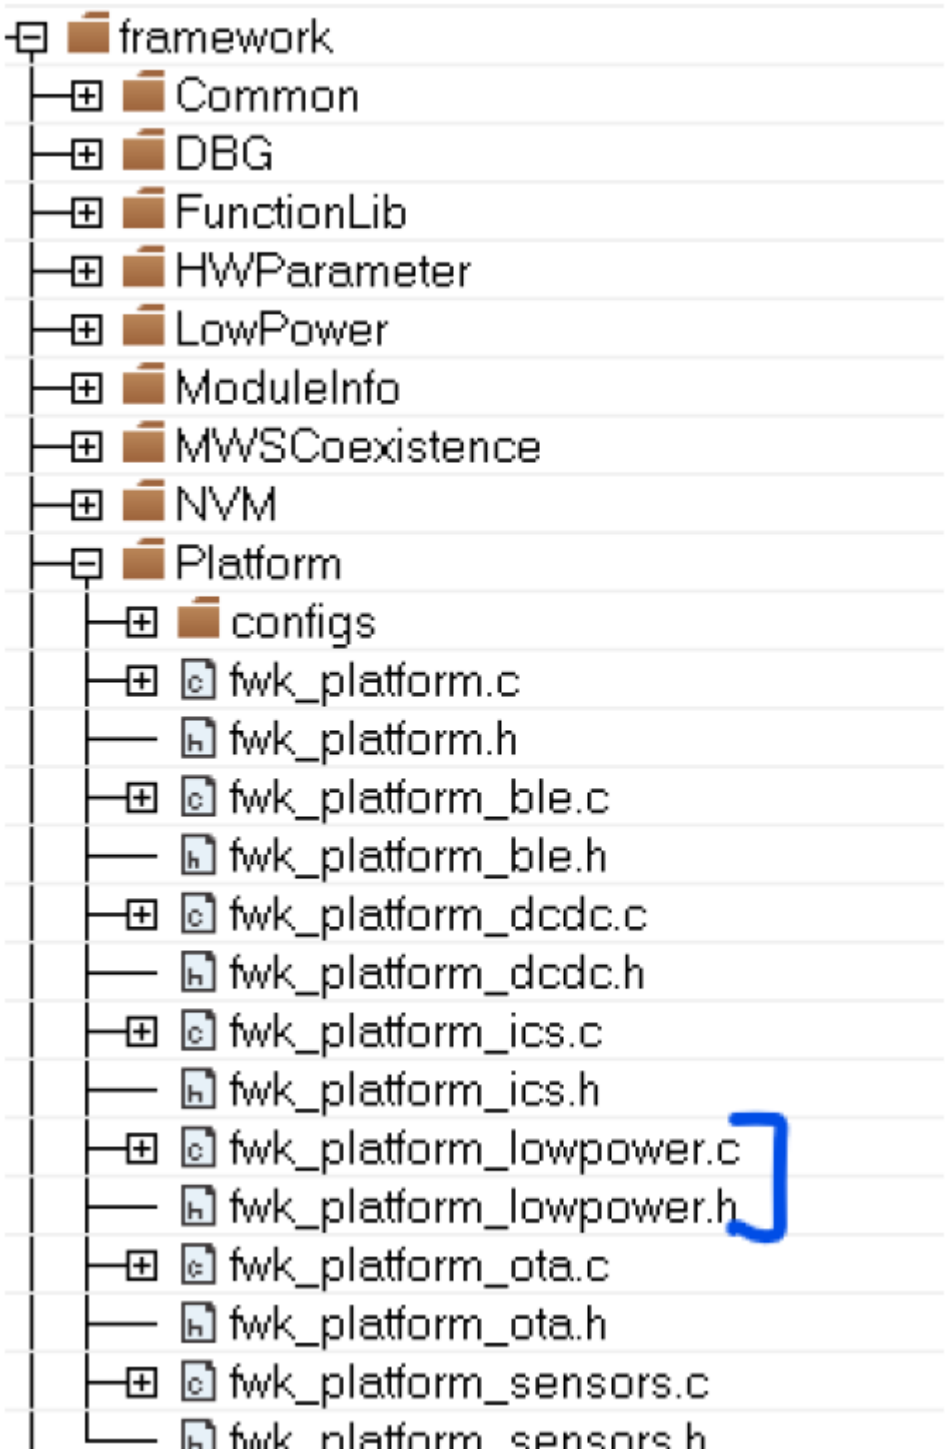

2.1.4 - Low power board files These files are located in the same folder that the other board files board.[ch]. Hence, it is not required to add any new include path at compiler command line.

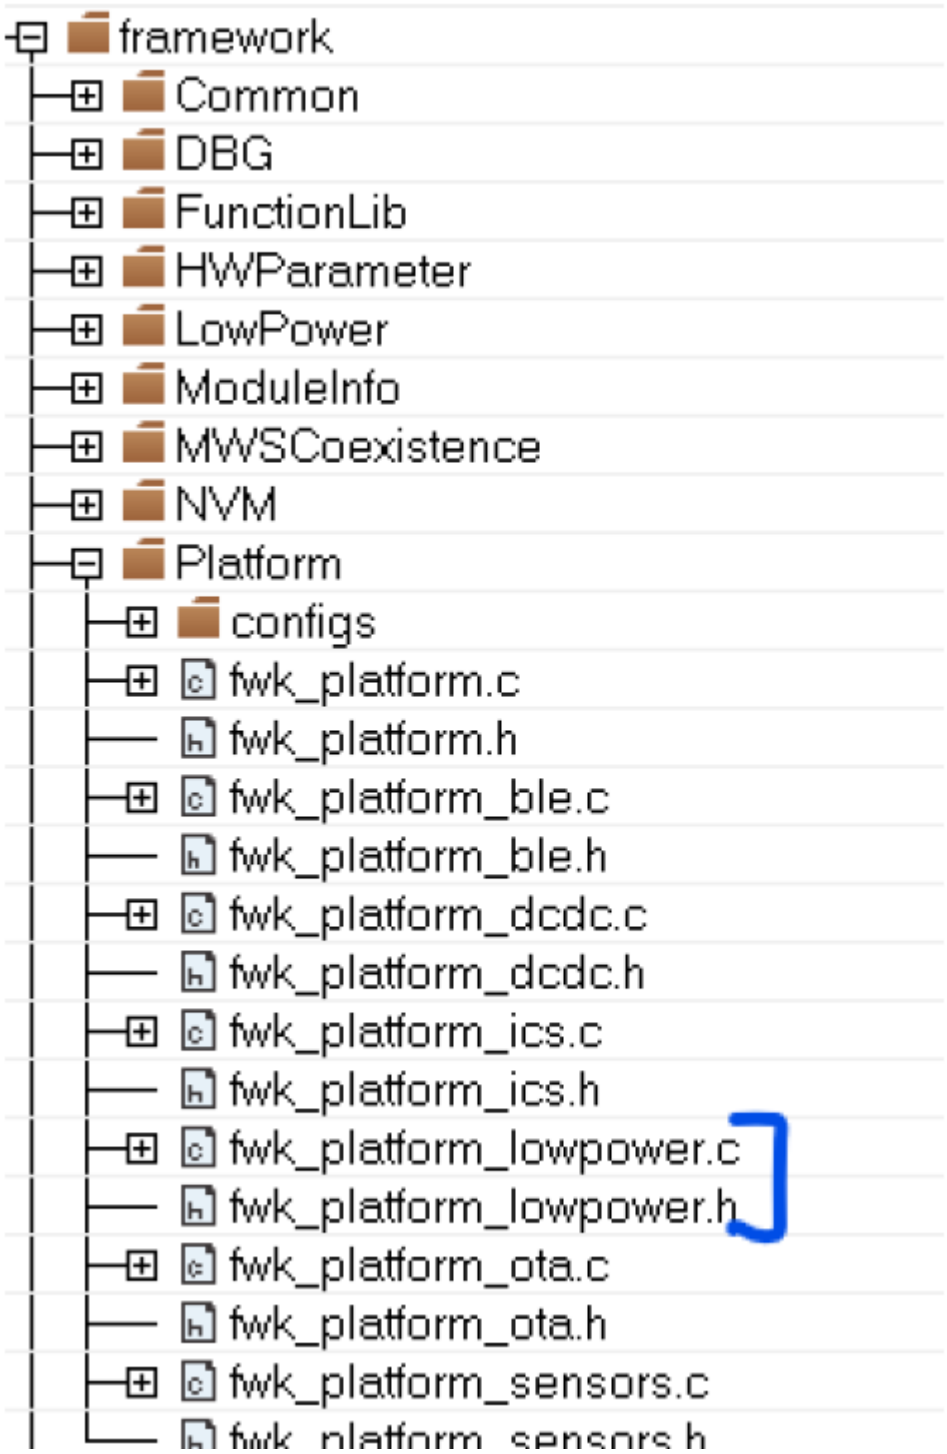

2.1.5 - Application RTOS Idle hook and tickeless hook functions See section 2.4.3 Idle task implementation example

2.2 - Low power and wake up sources Initialization Low power initialization and configuration are performed in APP_ServiceInitLowpower()function. This is called from APP_InitServices() function called from the main() function so all is already set up when calling the main application entry point, typically BluetoothLEHost_AppInit() function in the Bluetooth LE demo applications.

The default Low Power mode configured in APP_InitServices() is Deep Sleep mode. In Bluetooth

LE, (or any other stack technology), Deep Sleep mode fits for all use cases. For instance, for Bluetooth LE states: Advertising, Connected, Scanning states. This mode already performs a very good level of power saving and likely, this is not required to optimize more if the device is powered from external supply.

APP_ServiceInitLowpower() function performs the following initialization and configuration:

- Initialize the Connectivity framework Low power module PWR_Init(), this function initialized the SDK power manager.
- Configure the wakeup sources such as serial manager wake up source for UART, or button for IO wake up configuration. These are typical wakeup sources used in the connectivity application. Developer may want to add additional wake up sources here specific for the application.

  Note : The low power timer wakeup source and wakeup from Radio domain are directly enabled from the Connectivity framework Low power module PWR as it is mandatory for the connectivity stack. If your application supports other peripherals (such as i2c, spi, and others) that require wake sources from low power, developer should add additional wake up sources setting in this function APP_ServiceInitLowpower(). The complete list of wakeup sources are available from the SDK power manager component, see file fsl_pm_board.h in component/boards/<device_name>/.
- Initialize and register the Low power board file used to register and implement low power entry and exit callback function used for peripheral. This is done by calling the BOARD_LowPowerInit() function.
- Register low power Enter and exit critical function to driver component to enable / disable low power when the Hardware is active. Example is given for serial manager that needs to disable low power when the TX ring buffer contains data so the device does not enter low power until the buffer is empty.

Finally, APP_ServiceInitLowpower() function configures the Deep Sleep mode as the default low power constraint for the application. It is recommended to keep this level of low power constraint during all the connectivity stack initialization.

Example of low power framework initialization can be found in app_services_init.c file. Below is some code example for initializing the low power framework and wake up sources:

```
static void APP_ServiceInitLowpower(void)
{
    PWR_ReturnStatus_t status = PWR_Success;

    /* It is required to initialize PWR module so the application
     * can call PWR API during its init (wake up sources...) */
    PWR_Init();

    /* Initialize board_lp module, likely to register the enter/exit
     * low power callback to Power Manager */
    BOARD_LowPowerInit();

    /* Set Deep Sleep constraint by default (works for All application)
     *   Application will be allowed to release the Deep Sleep constraint
     *   and set a deepest lowpower mode constraint such as Power down if it needs
     *   more optimization */
    status = PWR_SetLowPowerModeConstraint(PWR_DeepSleep);
    assert(status == PWR_Success);

#if (defined(gAppButtonCnt_c) && (gAppButtonCnt_c > 0))

    /* Init and enable button0 as wake up source
     * BOARD_WAKEUP_SOURCE_BUTTON0 can be customized based on board configuration
```

(continues on next page)

(continued from previous page)

```
    * On EVK we use the SW2 mapped to GPIOD */
   PM_InitWakeupSource(&button0WakeUpSource, BOARD_WAKEUP_SOURCE_BUTTON0, NULL,␣
↪true);
#endif

#if (gAppButtonCnt_c > 1)
   /* Init and enable button1 as wake up source
    * BOARD_WAKEUP_SOURCE_BUTTON1 can be customized based on board configuration
    * On EVK we use the SW3 mapped to PTC6 */
   PM_InitWakeupSource(&button1WakeUpSource, BOARD_WAKEUP_SOURCE_BUTTON1, NULL,␣
↪true);
#endif

#if (defined(gAppUseSerialManager_c) && (gAppUseSerialManager_c > 0))

#if defined(gAppLpuart0WakeUpSourceEnable_d) && (gAppLpuart0WakeUpSourceEnable_d > 0)
   /* To be able to wake up from LPUART0, we need to keep the FRO6M running
    * also, we need to keep the WAKE domain is SLEEP.
    * We can't put the WAKE domain in DEEP SLEEP because the LPUART0 is not mapped
    * to the WUU as wake up source */
   (void)PM_SetConstraints(PM_LP_STATE_NO_CONSTRAINT, APP_LPUART0_WAKEUP_
↪CONSTRAINTS);
#endif

   /* Register PWR functions into SerialManager module in order to disable device lowpower
      during SerialManager processing. Typically, allow only WFI instruction when
      uart data are processed by serail manager  */
   SerialManager_SetLowpowerCriticalCb(&gSerMgr_LowpowerCriticalCBs);
#endif

#if defined(gAppUseSensors_d) && (gAppUseSensors_d > 0)
   Sensors_SetLowpowerCriticalCb(&app_LowpowerSensorsCriticalCBs);
#endif

   (void)status;
}
```

2.3 - low power entry/exit sequences : board files updates Board Files that handles low-power are board_lp.[ch] files.

Low power board files implement the low-power callbacks of the peripherals to be notified when entering or exiting Low Power mode. This module also registers these low-power callbacks to the SDK Power Manager component to get the notifications when the device is about to enter low-power or exit Low Power mode. The Low-power callbacks are registered from BOARD_LowPowerInit() function. This function is called from app_services_init.c file after PWR module initialization.

The low power callback functions can be categorized in two groups:

- Entry Low power call back functions: These are usually used to prepare the peripherals to enter low-power. For example, they can be used for flushing FIFOs, switching off some clocks, and reconfiguring pin mux to avoid leakage on pins. In case of Power Down mode, these functions could be used to save the Hardware peripheral context.
- Exit Low power call back functions: These are typically used to restore the peripherals to functionality. Therefore, they perform the reverse of what is done by the entry call-back functions: restoring the pin mux, re-enabling the clock, in case of Power Down mode, restoring the Hardware peripheral context, and so on.

Note that distinction can be done between clock gating mode (Deep Sleep mode), and power gated mode (Power down mode) when entering and exiting Low Power mode. The

BOARD_EnterLowPowerCb() and BOARD_ExitLowPowerCb() functions provide the code to call the various peripheral entry and exit functions to go and exit Deep Sleep mode: serial manager, button, debug console, and others.

However, the processing to save and restore the Hardware peripheral is implemented in different functions BOARD_EnterPowerDownCb() and BOARD_ExitPowerDownCb(). These two functions should be called when exiting power gated modes of the power domain. These two should implement specific code for such case (likely the complete reinitialization of each peripheral). In order to know the Low Power mode that the wake up domain, or main domain has been entered, the low-power platform API PLATFORM_GetLowpowerMode() can be called.

> **Note :** BOARD_ExitPowerDownCb() is called before BOARD_ExitLowPowerCb() as it is generally required to restore the Hardware peripheral contexts before reconfiguring the pin mux to avoid any signal glitches on the pads

Also, It is important to know whether the location of the Hardware peripheral is in the main domain or wake up domain. The two power domains can go into different power modes with the limitation that the wakeup domain cannot go to a deepest Low Power mode than the main domain. Depending on the constraint set on SDK power manager, the wake up domain could remain in active while the main domain can go to deep sleep or power down modes. In this case, the peripherals in the wake up domain does not required to be restored, as explained in the section Power Down. Likely, only pin mux reconfiguration is required in this case.

example Low power entry and exit functions shall be registered to the SDK power manager so these functions will be called when the device will enter and exit low power mode. This is done by BOARD_LowPowerInit() typically called from application source code in app_services_init.c file

```
static pm_notify_element_t boardLpNotifyGroup = {
    .notifyCallback = BOARD_LowpowerCb,
    .data           = NULL,
};

void BOARD_LowPowerInit(void)
{
    status_t status;

    status = PM_RegisterNotify(kPM_NotifyGroup2, &boardLpNotifyGroup);
    assert(status == kStatus_Success);
    (void)status;
}
```

BOARD_LowpowerCb() callback function will handle both the entry and exit sequences. An argument is passed to the function to indicate the lowpower state the device enter/exit. Typical implementation is given below. Customer shall make sure to differentiate low power entry and exit, and the various low power states.

Typically, nothing is expected to be done if low power state is WFI or Sleep mode. These modes are some light low power states and the system can be woken up by interrupt trigger.

In Deep sleep mode, the clock tree and source clocks are off, the system needs to be woken up from an event from the WUU module.

In Power down mode, some peripherals are likely to be powered off, context save and restore may need to be done in these functions.

```
static status_t BOARD_LowpowerCb(pm_event_type_t eventType, uint8_t powerState, void *data)
{
    status_t ret = kStatus_Success;
    if (powerState < PLATFORM_DEEP_SLEEP_STATE)
    {
        /* Nothing to do when entering WFI or Sleep low power state
           NVIC fully functionnal to trigger upcoming interrupts */
```

(continues on next page)

(continued from previous page)

```
    }
    else
    {
        if (eventType == kPM_EventEnteringSleep)
        {
            BOARD_EnterLowPowerCb();

            if (powerState >= PLATFORM_POWER_DOWN_STATE)
            {
                /* Power gated low power modes often require extra specific
                 * entry/exit low power procedures, those should be implemented
                 * in the following BOARD API */
                BOARD_EnterPowerDownCb();
            }
        }
        else
        {
            /* Check if Main power domain domain really went to Power down,
             *   powerState variable is just an indication, Lowpower mode could have been skipped by an␣
↪immediate wakeup
             */
            PLATFORM_PowerDomainState_t main_pd_state = PLATFORM_NO_LOWPOWER;
            PLATFORM_status_t           status;

            status = PLATFORM_GetLowpowerMode(PLATFORM_MainDomain, &main_pd_state);
            assert(status == PLATFORM_Successful);
            (void)status;

            if (main_pd_state == PLATFORM_POWER_DOWN_MODE)
            {
                /* Process wake up from power down mode on Main domain
                 *  Note that Wake up domain has not been in power down mode */
                BOARD_ExitPowerDownCb();
            }

            BOARD_ExitLowPowerCb();
        }
    }
    return ret;
}
```

2.4 - Low power constraint updates and optimization Except for the board file update as seen in previous section, the application does not need any other changes for low-power support in Deep Sleep mode. It shall work as if no low-power is supported. However, If more aggressive power saving is required, this constraint can be changed in your application in order to further reduce the power consumption in Low Power mode.

2.4.1 - Changing the Default Application low power constraint after firmware initialization The Low power reference design applications (central or peripheral) provides demonstration on how to change the Application low power constraint. In the Application main entry point BluetoothLEHost_AppInit(), Deep Sleep mode is configured by default from APP_ServiceInitLowpower() function.

> **Note :** It is recommended to keep Deep Sleep mode as default during all the stack initialization phase until BluetoothLEHost_Initialized() and BleApp_StartInit() functions are called. In case of Bonded device with privacy, it is recommended to wait for gControllerPrivacyStateChanged_c event to be called.

BleApp_LowpowerInit() function provides an example of code on how to release the default Deep sleep low-power constraint and set a new constraint such as Power down mode for the application. This deeper low-power mode is used when no Bluetooth LE activity is on going, and if no other higher Low-power constraint is set by another components or layer. For instance, if some serial transmission is on going by the serial manager, or if the SecLib module has on going activity on the HW crypto accelerator, the low-power mode could less deep.

```
static void BleApp_LowpowerInit(void)
{
#if defined(gAppLowpowerEnabled_d) && (gAppLowpowerEnabled_d>0)
    PWR_ReturnStatus_t status;

    /*
     * Optionally, Allow now Deepest lowpower mode constraint given by gAPP_
↪LowPowerConstraintInNoBleActivity_c
     *    rather than DeepSleep mode.
     * Deep Sleep mode constraint has been set in APP_InitServices(), this is fine
     *    to keep this constraint for typical lowpower application but we want the
     *    lowpower reference design application to be more agressive in term of power saving.

     *   To apply a lower lowpower mode than Deep Sleep mode, we need to
     *    - 1) First, release the Deep sleep mode constraint previously set  by default in app_services_init()
     *    - 2) Apply new lowpower constraint when No BLE activity
     *   In the various BLE states (advertising, scanning, connected mode), a new Lowpower
     *    mode constraint will be applied depending of Application Compilation macro set in app_preinclude.
↪h :
     *    gAppPowerDownInAdvertising, gAppPowerDownInConnected, gAppPowerDownInScanning
     */

    /*  1) Release the Deep sleep mode constraint previously set  by default in app_services_init() */
    status = PWR_ReleaseLowPowerModeConstraint(PWR_DeepSleep);
    assert(status == PWR_Success);
    (void)status;

    /*  2) Apply new Lowpower mode constraint gAppLowPowerConstraintInNoBleActivity_c *
     *      The BleAppStart() call above has already set up the new lowpower constraint
     *       when Advertising request has been sent to controller        */
    BleApp_SetLowPowerModeConstraint(gAppLowPowerConstraintInNoBleActivity_c);
#endif
}
```

2.4.2 - Changing the Application lowest low power constraint during application execution

In the various application use cases, (in the various Bluetooth LE activity states, advertising, connected, scanning), some lower low-power constraint can be set, as Power down for advertising, Deep Sleep for connected, or Scanning. Customer can change the level of Low Power mode in the various use case mainly depending of the time duration the device is supposed to remain in low-power. The longer the time that the device remains in low power, the higher the benefit for a deeper Low Power mode such as Power down mode. However, please note that the wake up from power down mode takes significantly more time than deep sleep as ROM code is re executed and the hardware logic needs to be restored. Sections Deep Sleep and Power Down provide some guidance on when to use Deep Sleep mode or Power Down modes respectively.

In the low power reference design applications, four application compilations macros are defined to adjust the low-power mode into advertising, scanning, connected, or no Bluetooth LE activity. Other use cases can be added as desired. For instance, If application needs to run a DMA transfer, or if application needs to wakeup regularly to process data from external device, it may be useful to set WFI constraint (in case of DMA transfer), or Deep Sleep constraint (in case of regular wake up to process external data), rather than power down or a even lower low-power mode.

The 4 application compilation macros can be found in app_preinclude.h file of the project. See

app_preinclude.h for low power reference design peripheral application :

```
/*! Lowpower Constraint setting for various BLE states (Advertising, Scanning, connected mode)
   The value shall map with the type defintion PWR_LowpowerMode_t in PWR_Interface.h
     0 : no LowPower, WFI only
     1 : Reserved
     2 : Deep Sleep
     3 : Power Down
     4 : Deep Power Down
   Note that if a Ble State is configured to Power Down mode, please make sure
     gLowpowerPowerDownEnable_d variable is set to 1 in Linker Script
   The PowerDown mode will allow lowest power consumption but the wakeup time is longer
     and the first 16K in SRAM is reserved to ROM code (this section will be corrupted on
     each power down wakeup so only temporary data could be stored there.)
         Power down feature not supported. */

#define gAppLowPowerConstraintInAdvertising_c          3
/* Scanning not supported on peripheral */
//#define gAppLowPowerConstraintInScanning_c            2
#define gAppLowPowerConstraintInConnected_c           2
#define gAppLowPowerConstraintInNoBleActivity_c       4
```

In lowpower_central.c lowpower_preripheral.c files, the application sets and releases the low power constraint from BleApp_SetLowPowerModeConstraint() and BleApp_ReleaseLowPowerModeConstraint() functions. These functions are called with the macro value passed as argument.

> **Important Note :** Setting the application low power constraint shall be done on new Bluetooth LE state request so the new constraint is applied immediately, while the application low-power mode constraint shall be released when the Bluetooth LE state is exited. For example, setting the new low power constraint for Advertising shall be done when the application requests advertising to start. Releasing the low power constraint shall be done in the advertising stop callback (advertising has been stopped).

After releasing the low power constraint, the previous low power constraint, (likely the one that has been set during firmware initialization in APP_ServiceInitLowpower() function, or the updated low power constraint in BleApp_StartInit() function) applies again.

2.4.3 - Idle task implementation example

2.4.3.1 Tickless mode support and Low power entry function Idle task configuration from FreeRTOS shall be enabled by configUSE_TICKLESS_IDLE in FreeRTOSConfig.h. This will have the effect to have vPortSuppressTicksAndSleep() called from Idle task created by FreeRTOS. Here is a typical implementation of this function:

```
void vPortSuppressTicksAndSleep(TickType_t xExpectedIdleTime)
{

    bool abortIdle = false;
    uint64_t actualIdleTimeUs, expectedIdleTimeUs;

    /* The OSA_InterruptDisable() API will prevent us to wakeup so we use
     * OSA_DisableIRQGlobal() */
    OSA_DisableIRQGlobal();

    /* Disable and prepare systicks for low power */
    abortIdle = PWR_SysticksPreProcess((uint32_t)xExpectedIdleTime, &expectedIdleTimeUs);

    if (abortIdle == false)
    {
```

(continues on next page)

(continued from previous page)

```
        /* Enter low power with a maximal timeout */
        actualIdleTimeUs = PWR_EnterLowPower(expectedIdleTimeUs);

        /* Re enable systicks and compensate systick timebase */
        PWR_SysticksPostProcess(expectedIdleTimeUs, actualIdleTimeUs);
    }

    /* Exit from critical section */
    OSA_EnableIRQGlobal();
}
```

2.4.3.2 Connectivity background tasks and Idle hook function example

Some process needs to be run in background before going into low power. This is the case for writing in NVM, or firmware update OTA to be writen in Flash. If so, configUSE_IDLE_HOOK shall be enabled in FreeRTOSCOnfig.h so vApplicationIdleHook() will be called prior to vPortSuppressTicksAndSleep(). Typical implementation of vApplicationIdleHook() function can be found here :

```
void vApplicationIdleHook(void)
{
    /* call some background tasks required by connectivity */
#if ((gAppUseNvm_d) || \
    (defined gAppOtaASyncFlashTransactions_c && (gAppOtaASyncFlashTransactions_c > 0)))

    if (PLATFORM_CheckNextBleConnectivityActivity() == true)
    {
        BluetoothLEHost_ProcessIdleTask();
    }
#endif
}
```

PLATFORM_CheckNextBleConnectivityActivity() function implemented in low power platform file fwk_platform_lowpower.c typically checks the next connectivity event and returns true if there's enough time to perform time consuming tasks such as flash erase/write operations (can be defined by the compile macro depending on the platform).

2. Low power features

2.1 - FreeRTOS systicks

Low power module in framework supports the systick generation for FreeRTOS. Systicks in FreeRTOS are most of the time not required in the Bluetooth LE demos applications because the framework already supports timers by the timer manager component, so the application can use the timers from this module. The systicks in FreeRTOS are useful for all internal timer service provided by FreeRTOS (through OSA) like OSA_TimeDelay(), OSA_TimeGetMsec(), OSA_EventWait(). When systicks are enabled, an interrupt (systick interrupt) is triggered and executed on a periodic basis. In order to save power, periodic systick interrupts are undesirable and thus disabled when going to low-power mode. This feature is called low power FreeRTOS tickless mode. When entering the low power state, the system ticks shall be disabled and switch to a low power timer. On wake-up, the module retrieves the time passed in low power and compensate the ticks count accordingly. This feature does not apply on bare metal scheduler.

On FreeRTOS, the vPortSuppressTicksAndSleep() function implemented in the app_low_power.c file will be called when going to idle. FreeRTOS will give to this function the xExpectedIdleTime, time in tick periods before a task is due to be moved into the Ready state. This function will manage the systicks (disable/enable) through PWR_SysticksPreProcess() and PWR_SysticksPostProcess() calls. Then, when calling PWR_EnterLowPower(), a time out duration in micro seconds will be given and the function will set a timer before entering low power.

In addition, this function will return the low power period duration, used to compensate the ticks count.

In our example low power reference design peripheral application, an OSA_EventWait() has been added to demonstrate the tickless mode feature. You can adjust the timeout with the gAppTaskWaitTimeout_ms_c flag in the app_preinclude.h file, its value in our demo is 8000ms. So 8 seconds after stopping any activity we will wake up from low power. If the flag is not defined in the application its value will be osaWaitForever_c and there will be no OS wake up.

2.2 - Selective RAM bank retention To optimize the consumption in low power, the linker script specific function PLATFORM_GetDefaultRamBanksRetained() is implemented. This function obtains the RAM banks that need to be retained when the device goes in low power, in order to set them with PLATFORM_SetRamBanksRetained() function. The RAM banks that are not needed are set in power off state, when the device goes in low power mode.

The function PLATFORM_GetDefaultRamBanksRetained() is linker script specific. Hence, it cannot be adapted for a different application. If these functions are called from board_lp.c, it is possible to give to PLATFORM_SetRamBanksRetained() a different bank_mask adapted to your specific application.

In deep power down, this feature does not have any impact because in this power mode, all RAM banks are already powered off.

3 - Low power modes overview PWR module API provides the capability to set low power mode constraints from various components or from the application. These constraints are provided to the SDK power manager. Upper layer (all Application code, connectivity stacks, etc.) can call directly the SDK Power Manger if it requires more advanced tuning. The PWR API can be found in PWR_Interface.h.

> **Note :** 'Upper layer' signifies all layers, applications, components, or modules that are above the connectivity framework in the Software architecture.
>
> **Note :** Each power domain has its own Low Power mode capability. The Low Power modes described below are for the main domain and it is supposed that the wake up domain goes to the same Low Power mode. This is not always true as the wake up domain that contains some wake up peripheral can go a lower Low Power mode state than the main domain so the peripherals in the wake up domain can remain operational when the main domain is in Low Power mode (deep sleep or power down modes). In this case, the context of the Hardware peripheral located in the wake up domain does not need to be saved and restored as for the peripherals located in the main domain

3.1 Wait for Interrupt (WFI) Definition

In the Wait for Interrupt (WFI) state, the CPU core is powered on, but is in an idle mode with the clock turned OFF.

Wake up time and typical use case

The wakeup time from this Low Power mode is insignificant because the Fast clock from FRO is still running.

This Low Power mode is mainly used when there is an hardware activity while the Software runs the Idle task. This allows the code execution to be temporarily suspende, thus reducing a bit the power consumption of the device by switching off the processor clock. When an interrupt fires, the processor clock is instantaneously restored to process the Interrupt Service Routine (ISR).

Usage

In order to prevent the software from programming the device to go to a lower Low Power mode (such as Deep Sleep, Power Down mode or Deep Power Down mode), the component responsible for the hardware drivers shall call PWR_SetLowPowerModeConstraint(PWR_WFI) function. When the Hardware activity is completed, the component shall release the constraint by calling PWR_ReleaseLowPowerModeConstraint(PWR_WFI).

Alternatively, the component can call PWR_LowPowerEnterCritical() and then PWR_LowPowerExitCritical() functions.

For fine tuning of the Low Power mode allowing more power saving, the component can call directly the SDK power manager API with PM_SetConstraints() function using the appropriate Low Power mode and low power constraint. However, this is reserved for more advanced user that knows the device very well. It is not recommended to do so.

The PWR module has no external dependencies, so the low-power entry and exit callback functions must be defined by the user for each peripheral that has specific low power constraints It is consequently convenient to register to the component the low power callbacks structure that is used for entering and exit low power critical sections. In Bluetooth LE, you can take the example in the app_conn.c file as shown here :

```
#if defined(gAppLowpowerEnabled_d) && (gAppLowpowerEnabled_d>0)
static const Seclib_LowpowerCriticalCBs_t app_LowpowerCriticalCBs =
{
  .SeclibEnterLowpowerCriticalFunc = &PWR_LowPowerEnterCritical,
  .SeclibExitLowpowerCriticalFunc  = &PWR_LowPowerExitCritical,
};
#endif

void BluetoothLEHost_Init(..)
{
  ...
      /* Cryptographic hardware initialization */
      SecLib_Init();
#if defined(gAppLowpowerEnabled_d) && (gAppLowpowerEnabled_d>0)
      /* Register PWR functions into SecLib module in order to disable device lowpower
         during Seclib processing. Typically, allow only WFI instruction when
         commands (key generation, encryption) are processed by Seclib  */
      SecLib_SetLowpowerCriticalCb(&app_LowpowerCriticalCBs);
#endif
  ...
}
```

Limitations

No limitation when using the WFI mode.

3.2 Sleep mode Sleep mode is similar to WFI low power mode but with some additional clock gating. The Sleep mode is device specific, please consult the Hardware reference manuel of the device for more information.

3.2 Deep Sleep mode Definition

In Deep Sleep mode, the fast clock is turned off, and the CPU along with the main power domain are placed into a retention state, with the voltage being scaled down to support state retention only. Because no high frequency clock is running, the voltage applied on the power domain can be reduced to reduce leakage on the hardware logic. This reduces the overall power consumption in the Deep Sleep mode. When waking up from Deep sleep mode, the core voltage is increased back to nominal voltage and the fast clock (FRO) is turned back on, the peripheral in this domain can be reused as normal.

To same more additional power, Some unused RAM banks can be powered off. this prevents from having current leakage and consequently, allow to reduce even more the power consumption in Deep SLeep mode. This is achieved by calling PLATFORM_SetRamBanksRetained() from low power entry function from board_lp.c file.

Usage

All firmware is able to implement Deep Sleep mode transparently to the application thanks to the PWR module, low power platform submodule and low power board file. This is described in the section Low-power implementation.

When entering this mode, it is recommended to turn the output pins into input mode, or high impedance to reduce leakage on the pads. This is typically done in pin_mux.c file, called from board.c file and executed from the low power callback in board_lp.c file. As an example, the TX line of the UART peripheral can be turned to disabled so it prevents the current from being drawn by the pad in Low Power mode.

Wake up time and typical use case

The wake up time is very fast, it takes mostly the time for the Fast FRO to start up again (couple of hundreds of microseconds) so this mode is a very good balance between power consumption in low-power mode and wake up latency and shall be used extensively in most of the use cases of the application.

Limitations

In Deep Sleep mode, the clock is disabled to the CPU and the main peripheral domain, so peripheral activity (for example, an on-going DMA transfer) is not possible in Deep Sleep mode.

3.3 Power Down mode **Definition**

In Power Down mode, both the clock, and power are shut off to the CPU and the main peripheral domain. SRAM is retained, but register values are lost. The SDK power manager handles the restore of the processor registers and dependencies such as interrupt controller and similar ones transparently from the application.

Usage

The application, with the help of the low power board files, saves and restores the peripherals that were located in the power domain during the entry and exit of the power down mode. This is done from low power board_lp files in the entry/exit low power callbacks. Example is given for the serial manager and debug console in *board_lp.c* file in function *BOARD_ExitPowerDownCb()*.

If the device contains a dedicated wake up power domain where some wake up peripherals are located, if this wake up domain is not turned into power down mode but only Deep sleep mode or active mode, this peripheral does not need for a save and restore on low power entry/exit. For instance, on KW45, This is basically achieved when enabling the wakeup source of the peripheral *PWR_EnableWakeUpSource()* from *APP_ServiceInitLowpower()* function. Alternatively, this can be directly achieved by setting the constraint to the SDK power manager by calling *PM_SetConstraints()*, (use APP_LPUART0_WAKEUP_CONSTRAINTS for wakeup from UART constraint).

On exit from low power, The low power state of power domain can be retrieved by Platform API PLATFORM_GetLowpowerMode(). This API shall be called from low power exit callback function only.

As for Deep Sleep mode, software shall configure the output pins into input or high impedance during the Low Power mode to avoid leakage on the pads.

Wake up time and typical use case

The wake up time is significantly longer than wake up time from Deep Sleep (from several hundreds of micro-seconds to a couple of milliseconds depending on the platform). On some platform, it can takes longer, for instance, if ROM code is implemented and perform authentication checks for security and hardware logic in power domain needs to be restored (case for KW45).

However, After ROM code execution, the SDK power manager resumes the Idle task execution from where it left before entering low-power mode. Hence, the wakeup time from this mode is still significantly lower that the initialization time from a power on reset or any other reset.

Depending on the wakeup time of the platform and the low power time duration, This mode is recommended when no Software activity is expected to happen for the next several seconds. In Bluetooth LE, this mode is preferred in advertising or without Bluetooth LE activity. However, in scanning or connected mode, Regular wakes up happens regularly for instance to retrieve HCI message responses from the Link layer, the Deep Sleep mode is rather recommended.

Limitations

In addition to the Deep Sleep limitation (no Hardware processing on going when going to Power down mode) and the significant increase of the wake time, the Power Down mode requires the ROM code to execute and this last uses significant amount of memory in SRAM.

Typically, The first SRAM bank (16 KBytes) is used by the ROM code during execution so the Application firmware can use this section of SRAM for storing bss, rw data, or stacks. Only temporary data could be stored here and this location is overwritten on every Power Down exit sequence.

In order to avoid placing firmware data section (bss, rw, etc.) in the first SRAM bank, the linker script variable *gLowpowerPowerDownEnable_d* should be set to 1. Setting the linker script variable to avoid placing firmware data section in the first SRAM bank, The effect of setting this flag is to prevent the firmware from using the first 16 KB in SRAM.

> *Note* : This setting is ONLY required if the application implements Power Down mode.
> If Application uses other low-power mode, this is not required.

3.4 Deep Power-down mode **Definition**

In Deep Power Down mode, the SRAM is not retained. This power mode is the lowest disponible, it is exited through reset sequence.

Usage

In addition to the Power Down limitation, the Deep Power Down mode shut down all memory in SRAM. Because it is exited through reset sequence the wake time is also longer.

Wake up time and typical use case

As this low-power mode is exited through the reset sequence, the wake up time is longer than any other mode. In Bluetooth LE, this mode is possible in no Bluetooth LE activity, and is preferred if we know that there will be no Bluetooth LE activity before a several amount of time.

Limitations

All memory in SRAM will be shut down in deep power down, the main limitation in going in this low-power mode is that the context will not be saved.

ModuleInfo

Overview The ModuleInfo is a small Connectivity Framework module that provides a mechanism that allows stack components to register information about themselves.

The information comprises :

- Component or module name (for example: Bootloader, IEEE 802.15.4 MAC, and Bluetooth LE Host) and associated version string
- Component or module ID
- Version number
- Build number

The information can be retrieved using shell commands or FSCI commands.

Detailed data types and APIs used in ConnFWK_APIs_documentation.pdf.

NVM: Non-volatile memory module

Overview In a standard Harvard-architecture-based MCU, the flash memory is used to store the program code and program constant data. Modern processors have a built-in flash memory controller that can be used under user program execution to store non-volatile data. The flash memories have individually erasable segments (sectors) and each segment has a limited number of erase cycles. If the same segments are used to store various kinds of data all the time, those segments quickly become unreliable. Therefore, a wear-leveling mechanism is necessary to prolong the service life of the memory. The NVM module in the connectivity framework provides a file system with a wear-leveling mechanism, described in the subsequent sections. The *NvIdle()* function handles the program and erase memory operations. Before resetting the MCU, *NvShutdown()* must be called to ensure that all save operations have been processed.

NVM boundaries and linker script requirement Most of the MCUs have only a standard flash memory that the non-volatile (NV) storage system uses. The amount of memory that the NV system uses for permanent storage and its boundaries are defined in the linker configuration file though the following linker symbols :

- NV_STORAGE_START_ADDRESS
- NV_STORAGE_END_ADDRESS
- NV_STORAGE_MAX_SECTORS
- NV_STORAGE_SECTOR_SIZE

The reserved memory consists of two virtual pages. The virtual pages are equally sized and each page is using one or more physical flash sectors. Therefore, the smallest configuration is using two physical sectors, one sector per virtual page.

NVM Table The Flash Management and Non-Volatile Storage Module holds a pointer to a RAM table. The upper layers of this table register information about data that the storage system should save and restore. An example of NVM table entry list is given below.

pData	ElemCount	ElemSize	EntryId	EntryType
0x1FFF9000	3	8	0xF1F4	MirroredInRam
0x1FFF7640	5	4	0xA2A6	NotMirroredInRam
0x1FFF1502	6	1	0x4212	NotMirroredInRam AutoRestore
0x1FFFF200	2	6	0x118F	MirroredInRam

NVM Table entry As show above, A NVM table entry contains a generic pointer to a contiguous RAM data structure, the number of elements the structure contains, the size of a single element, a table entry ID, and an entry type.

A RAM table entry has the following structure:

- pData (4 bytes) is a pointer to the RAM memory location where the dataset elements are stored.

- elemCnt (2 bytes) represents how many elements the dataset has.
- elemSz (2 bytes) is the size of a single element.
- entryID is a 16-bit unique ID of the dataset.
- dataEntryType is a 16-bit value representing the type of entry (mirrored/unmirrored/unmirrored auto restore).

For mirrored datasets, pData must point directly to the RAM data. For unmirrored datasets, it must be a double pointer to a vector of pointers. Each pointer in this table points to a RAM/FLASH area. Mirrored datasets require the data to be permanently kept in RAM, while unmirrored datasets have dataset entries either in flash or in RAM. If the unmirrored entries must be restored at the initialization, NotMirroredInRamAutoRestore should be used. The entryID gUnmirroredFeatureSet_d should be set to 1 for enabling unmirrored entries in the application. The last entry in the RAM table must have the entryID set to gNvEndOfTableId_c.

pData	0x1FFF8000
elemCnt	4
elemSz	10
entryID	1
dataEntryType	gNVM_NotM gNVM_NotM

The figure below provides an example of table entry :

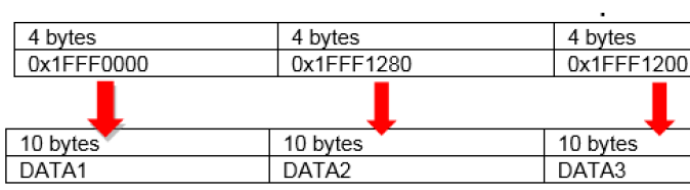

When the data pointed to by the table entry pointer (pData) has changed (entirely or just a single element), the upper layers call the appropriate API function that requests the storage system to save the modified data. All the save operations (except for the synchronous save and atomic save) and the page erase and page copy operations are performed on system idle task. The application must create a task that calls NvIdle in an infinite loop. It should be created with OSA_PRIORITY_IDLE. However, the application may choose another priority. The save operations are done in one virtual page, which is the active page. After a save operation is performed on an unmirrored dataset, pData points to a flash location and the RAM pointer is freed. As a result, the effective data should always be allocated using the memory management module.

Active page The active page contains information about the records and the records. The storage system can save individual elements of a table entry or the entire table entry. Unmirrored datasets can only have individual saves. On mirrored datasets, the save/restore functions must receive the pointer to RAM data. For example, if the application must save the third element in the above vector, it should send 0x1FFF8000 + 2 * elemSz. For unmirrored datasets, the application must send the pointer that points to the area where the data is located. For example, if the application must save the third element in the above vector, it should send 0x1FFF8000 + 2 * sizeof(void*).

The page validity is guaranteed by the page counter. The page counter is a 32-bit value and is written at the beginning and at the end of the active page. The values need to be equal to consider the page a valid one. The value of the page counter is incremented after each page copy operation. A page erase operation is performed when the system is formatted. It is also performed when the page is full and a new record cannot be written into that page. Before being erased, the full page is first copied (only the most recent saves) and erased afterward.

The validity of the Meta Information Tag (MIT), and, therefore, of a record, is guaranteed by the MIT start and stop validation bytes. These two bytes must be equal to consider the record

referred by the MIT valid. Furthermore, the value of these bytes indicates the type of the record, whether it is a single element or an entire table entry. The nonvolatile storage system allows dynamic changes of the table within the RAM memory, as follows:

- Remove table entry
- Register table entry

A new table entry can be successfully registered if there is at least one entry previously removed or if the NV table contains uninitialized table entries, declared explicitly to register new table entries at run time. A new table entry can also replace an existing one if the register table entry is called with an overwrite set to true. This functionality is disabled by default and must be enabled by the application by setting gNvUseExtendedFeatureSet_d to 1.

The layout of an active page is shown below:

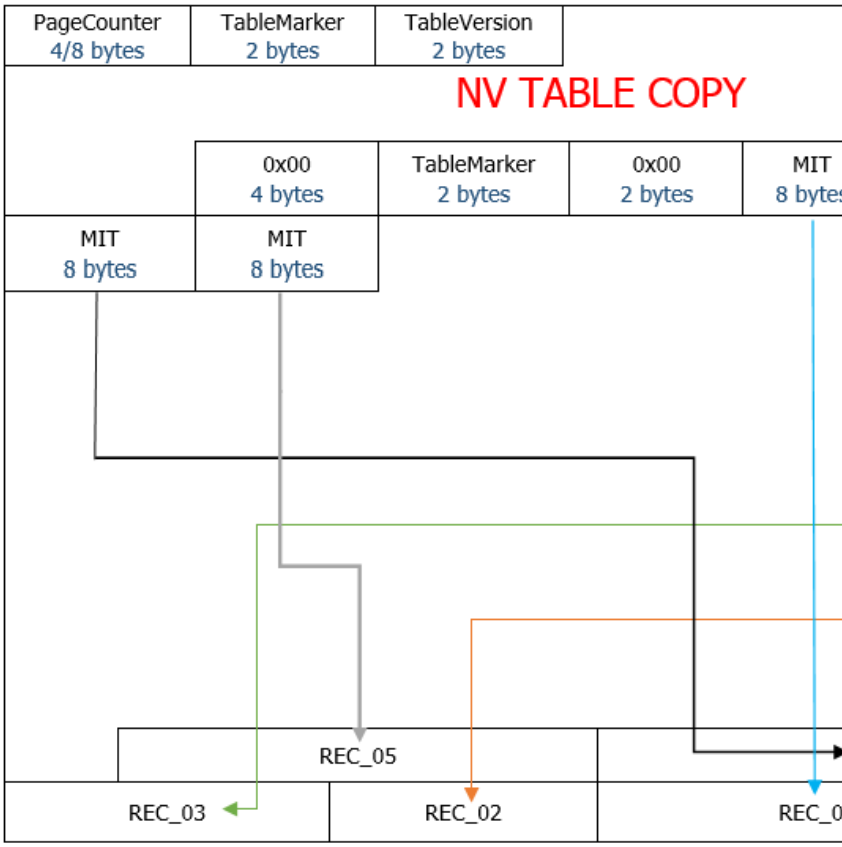

As shown above, the table stored in the RAM memory is copied into the flash active page, just after the table version. The “table start” and “table end” are marked by the table markers. The data pointers from RAM are not copied. A flash copy of a RAM table entry has the following structure:

Where:

- entryID is the ID of the table entry
- entryType represents the type of the entry (mirrored/unmirrored/unmirrored auto restore)
- elemCnt is the elements count of that entry
- elemSz is the size of a single element

This copy of the RAM table in flash is used to determine whether the RAM table has changed. The table marker has a value of 0x4254 (“TB” if read as ASCII codes) and marks the beginning

and end of the NV table copy.

After the end of the RAM table copy, the Meta Information Tags (MITs) follow. Each MIT is used to store information related to one record. An MIT has the following structure:

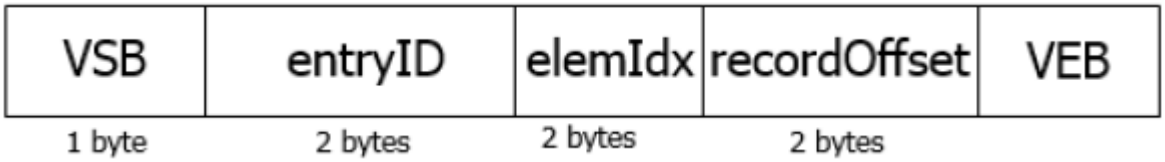

Where:

- VSB is the validation start byte.
- entryID is the ID of the NV table entry.
- elemIdx is the element index.
- recordOffset is the offset of the record related to the start address of the virtual page.
- VEB is the validation end byte.

A valid MIT has a VSB equal to a VEB. If the MIT refers to a single-element record type, VSB=VEB=0xAA. If the MIT refers to a full table entry record type (all elements from a table entry), VSB=VEB=0x55. Because the records are written to the flash page, the available page space decreases. As a result, the page becomes full and a new record does not have enough free space to be copied into that page.

In the example given below, the virtual page 1 is considered to be full if a new save request is pending and the page free space is not sufficient to copy the new record and the additional MIT. In this case, the latest saved datasets (table entries) are copied to virtual page 2.

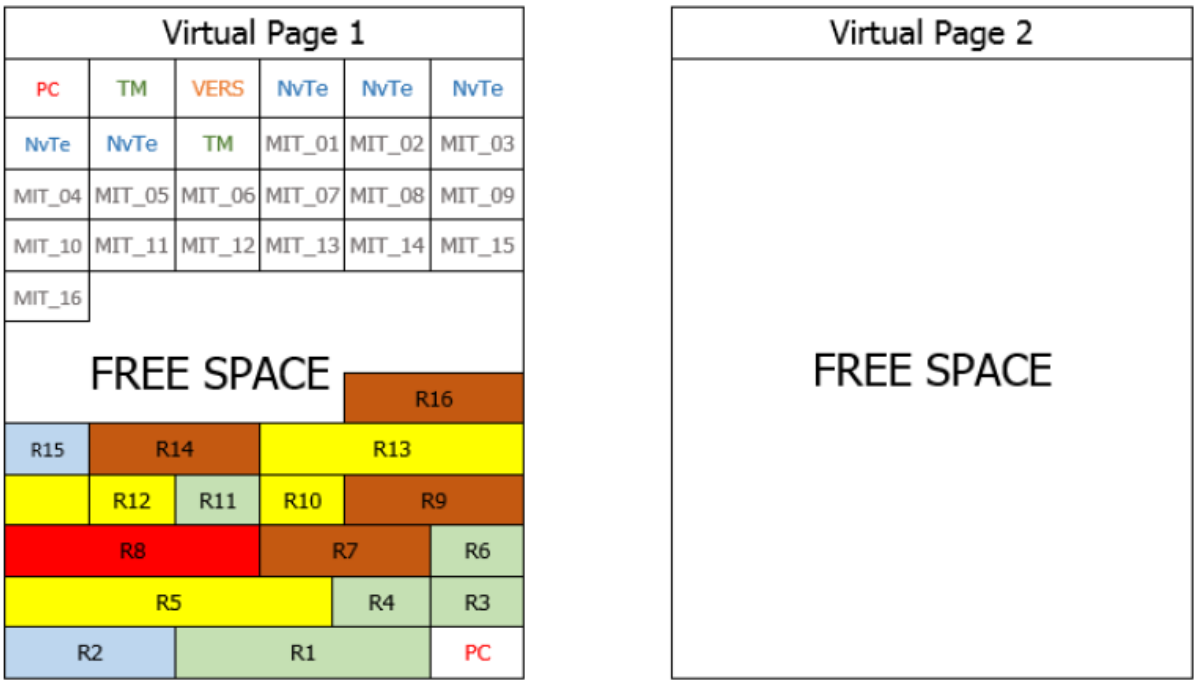

In this example, there are five datasets (one color for each dataset) with both 'full' and 'single' record types.

- R1 is a 'full' record type (contains all the NV table entry elements), whereas R3, R4, R6 and R11 are 'single' record types.
- R2 – full record type; R15 – single record type
- R5, R13 – full record type; R10, R12 – single record type

- R8 – full record type
- R7, R9, R14, R16 – full record type

As shown above, the R3, R4, R6, and R11 are 'single' record types, while R1 is a 'full' record type of the same dataset. When copied to virtual page 2, a defragmentation process takes place. As a result, the record copied to virtual page 2 has as much elements as R1, but individual elements are taken from R3, R4, R6, and R11. After the copy process completes, the virtual page 2 has five 'full' record types, one for each dataset. |This is illustrated below:

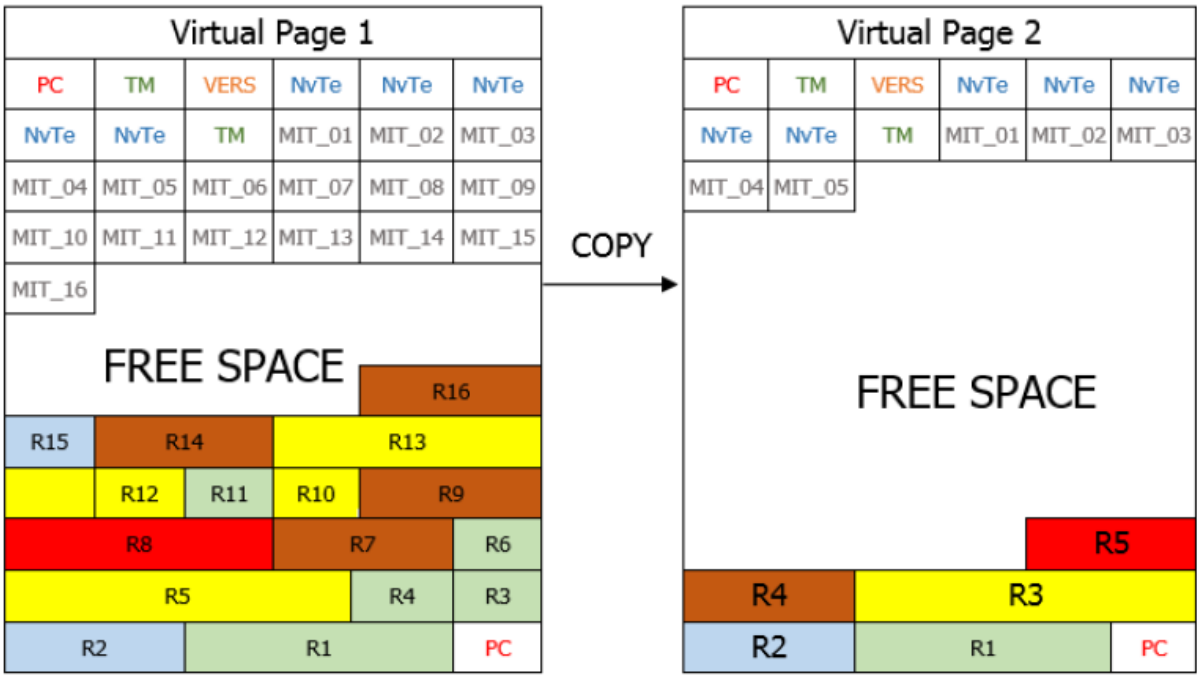

Finally, the virtual page 2 is validated by writing the PC value and a request to erase virtual page 1 is performed. The page is erased on an idle task, sector by sector where only one sector is erased at a time when idle task is executed.

If there is any difference between the RAM and flash tables, the application must call RecoverNvEntry for each entry that is different from its RAM copy to recover the entry data (ID, Type, ElemSz, ElemCnt) from flash before calling NvInit. The application must allocate the pData and change the RAM entry. It can choose to ignore the flash entry if the entry is not desired. If any entry from RAM differs from its flash equivalent at initialization, a page copy is triggered that ignores the entries that are different. In other words, data stored in those entries is lost.

The application can check if the RAM table was updated. In other words, if the MCU program was changed and the RAM table was updated, using the function GetFlashTableVersion and compare the result with the constant gNvFlashTableVersion_c. If the versions are different, NvInit detects the update and automatically upgrades the flash table. The upgrade process triggers a page copy that moves the flash data from the active page to the other one. It keeps the entries that were not modified intact and it moves the entries that had their elements count changed as follows:

- If the RAM element count is smaller than the flash element count, the upgrade only copies as many elements as are in RAM.
- If the RAM element count is larger than the flash element count, the upgrade copies all data from flash and fills the remaining space with data from RAM. If the entry size is changed, the entry is not copied. Any entryIds that are present in flash and not present in RAM are also not copied. This functionality is not supported if gNvUseExtendedFeatureSet_d is not set to 1.

ECC Fault detection The KW45/K32W1 internal flash is organized in 16 byte phrases and 8kB sectors (minimal erase unit). Its flash controller is synthesized so that it generates ECC information and an ECC generator / checker. During the programming of internal flash, errors may accidentally happen and cause ECC errors as a flash phrase is being written. These may happen due to multiple reasons:

- programmatic errors such as overwriting an already programmed phrase (transitioning bits from 0b to 1b). These are evitable by performing a blank check verification over phrase to be programmed, at the expense of processing power.
- occurrence of power drop or glitches during a programming operation.
- excessive wear of flash sector. The flash controller is capable of correcting one single ECC error but raises a bud fault whenever reading a phrase containing more than one ECC fault. Once an ECC error has 'infected' a flash phrase, the fault will remain and raise again at each read operation over the same phrase including blank check and prefetch. It can only be rid of by erasing the whole flash sector that contained the faulty phrase. In order to recover from situations where an ECC fault has occurred a gNvSalvageFromEccFault_d option has been added, which forces gNvVerifyReadBackAfterProgram_d to be defined to TRUE. If defined, the gNvVerifyReadBackAfterProgram_d option of the NVM module, causes the program to read back the programmed area after every flash programming operation. The verification is performed in safe mode if gNvSalvageFromEccFault_d is also defined. This is so as to detect ECC faults as early as possible as they appear, indeed when verifying a programming operation, one cannot be certain of the absence of ECC fault and avoid the bus fault. The safe API is thence used to perform the read back operation is performed using this safe API, so that we can tread in the flash and detect potential errors. The defects are detected on the fly whereas in the absence of safe read back, the error would cause a fault, potentially much later. During normal operation, assuming that no chip reset was provoked, this will consist in a single ECC fault either in the last record data or its meta information. Detecting such a fault calls for an immediate page copy to the other virtual page, so that the currently active page gets erased and the error gets cleared. Should the ECC fault occurs in the middle of a page copy operation, the switch of active page is postponed so that the fault page can be erased again and the copy can be restarted.

If the system underwent a power drop during a flash programming operation, sufficient to provoke a reset, at the ensuing reboot, ECC fault(s) may be present in the NVM area at the location that was being written. The detection is performed by an NVM sweeping mechanism, using the safe read API. That marks the faulty virtual page so that all subsequent reads within this virtual page are done with the safe API. If this case arises, a copy of the valid contents of the faulty page is attempted to the other virtual page. At NVM initialization, faults should be detected, either at the top of the meta data or at the bottom of the record area within the previous active page. This should guarantee that only the latest record write operation may be impaired. When the page copy has taken place, the faulty page is erased and the execution may resume. During NvCopyPage, when 'garbage collecting' occurs or whenever the current virtual active page needs to be transferred to the other virtual page, ECC errors are intercepted so that the operation can be attempted again in case of error. In case of NVM contents clobbering by programming errors, the salvage operation does its best to rescue as many records as possible but data will inevitably be lost.

An additional option -namely *gInterceptEccBusFaults_d* - was introduced in order to catch and correct ECC faults at Bus Fault handler level. Indeed, should an ECC bus fault fire, in spite of the precautions taken with NVM's gNvSalvageFromEccFault_d, we verify if the fault belongs to the NV storage. If so, a drastic policy can be adopted consisting in an erasure of the faulty sector. The corresponding Bus Fault handling is not part of the NVM, but dwells in the framework platform specific sources. Alternative handling could be implemented by the customer.

Save policy: Execution of program and erase operations on a flash an MCU core fetches code from cause perturbations of the core activity or requires to place critical code in RAM so that real-time ISR can still be served. The penalty of a sector erase is much higher than a simple program operation. The NVM is designed so as to limit the erase operations at 'garbage collecting' time,

so that flash wear is limited and no time is wasted. Several write policies are implemented to cope with the application constraints, one synchronous mode API and several posted write APIs. Among the posted write policies, the gNvmSaveOnIdleTimerPolicy_d compilation option selects a mode where flash write operations occur at time interval within the Idle task. Another option exists to 'randomize' the time interval with some jitter.

1) NvSyncSave performs a write synchronously with the disadvantage of stalling processor activity until comp
2) NvSaveOnCount posts a pending write operation and postpones the actual flash operation until number of record updates has reached a maximum. The actual write happens during Idle Task execution.see NvSetCountsBetweenSaves related API.
3) NvSaveOnInterval: posts a pending write operation and postpones the actual flash operation until the predefined number of ticks has elapsed. Optional mode - Active if (gNvmSaveOnIdleTimerPolicy_d & gNvmUseSaveOnTimerOn_c). see NvSetMinimumTicksBetweenSaves related API. Note that gNvmUseSaveIntervalJitter_c policy is a sub-option of gNvmSaveOnIdleTimerPolicy_d used to randomize slightly the time at which the write operation will happen.

Constant macro definition

- *gNvStorageIncluded_d* : If set to TRUE, it enables the whole functionality of the nonvolatile storage system. By default, it is set to FALSE (no code or data is generated for this module).
- *gNvUseFlexNVM_d* : If set to TRUE, it enables the FlexNVM functionality of the nonvolatile storage system. By default, it is set to FALSE. If FlexNVM is used, the standard nonvolatile storage system is disabled.
- *gNvFragmentation_Enabled_d* : Macro used to enable/disable the fragmented saves/restores (a particular element from a table entry can be saved or restored). It is set to FALSE by default.
- *gNvUseExtendedFeatureSet_d* : Macro used to enable/disable the extended feature set of the module:
  - Remove existing NV table entries
  - Register new NV table entries
  - Table upgrade

  It is set to FALSE by default.
- *gUnmirroredFeatureSet_d* : Macro used to enable unmirrored datasets. It is set to 0 by default.
- *gNvTableEntriesCountMax_c* : This constant defines the maximum count of the table entries (datasets) that the application is going to use. It is set to 32 by default.
- *gNvRecordsCopiedBufferSize_c* : This constant defines the size of the buffer used by the page copy function, when the copy operation performs defragmentation. The chosen value must be bigger than the maximum number of elements stored in any of the table entries. It is set by default to 64.
- *gNvCacheBufferSize_c* : This constant defines the size of the cache buffer used by the page copy function, when the copy operation does not perform defragmentation. The chosen value must be a multiple of 8. It is set by default to 64.
- *gNvMinimumTicksBetweenSaves_c* : This constant defines the minimum timer ticks between dataset saves (in seconds). It is set to 4 by default.
- *gNvCountsBetweenSaves_c* : This constant defines the number of calls to 'NvSaveOnCount' between dataset saves. It is set to 256 by default.

- *gNvInvalidDataEntry_c* : Macro used to mark a table entry as invalid in the NV table. The default value is 0xFFFFU.
- *gNvFormatRetryCount_c* : Macro used to define the maximum retries count value for the format operation. It is set to 3 by default.
- *gNvPendingSavesQueueSize_c* : Macro used to define the size of the pending saves queue. It is set to 32 by default.
- *gFifoOverwriteEnabled_c* : Macro used to enable overwriting older entries in the pending saves queue (if it is full). If it is FALSE and the queue is full, the module tries to process the oldest save in the queue to free a position. It is set to FALSE by default.
- *gNvMinimumFreeBytesCountStart_c* : Macro used to define the minimum free space at initialization. If the free space is smaller than this value, a page copy is triggered. It is set by default to 128.
- *gNvEndOfTableId_c* : Macro used to define the ID of the end-of-table entry. It is set to 0xFFFEU by default. No valid entry should use this ID.
- *gNvTableMarker_c* : Macro used to define the table marker value. The table marker is used to indicate the start and the end of the flash copy of the NV table. It is set to 0x4254U by default.
- *gNvFlashTableVersion_c* : Macro used to define the flash table version. It is used to determine if the NVM table was updated. It is set to 1 by default. The application should modify this every time the NVM table is updated and the data from NVM is still required.
- *gNvTableKeptInRam_d* : Set gNvTableKeptInRam_d to FALSE, if the NVM table is stored in FLASH memory (default). If the NVM table is stored in RAM memory, set the macro to TRUE.
- *gNvVerifyReadBackAfterProgram_d* : set by default force verification of NVM programming operations. Is forced implicitly when gNvSalvageFromEccFault_d is defined.
- *gNvSalvageFromEccFault_d* : use safe flash API to read from flash, and provide corrective action when ECC fault is met.

OtaSupport: Over-the-Air Programming Support

Overview This module includes APIs for the over-the-air image upgrade process. A Server device receives an image over the serial interface from a PC or other device thorough FSCI commands. If the Server has an image storage, the image is saved locally. If not, the image is requested chunk by chunk: With image storage

- OTA_RegisterToFsci()
- OTA_InitExternalMemory()
- OTA_WriteExternalMemory()
- ...
- OTA_WriteExternalMemory()

Without image storage:

- OTA_RegisterToFsci()
- OTA_QueryImageReq()
- OTA_ImageChunkReq()
- ...
- OTA_ImageChunkReq()

A Client device processes the received image by computing the CRC and filter unused data and stores the received image into a non-volatile storage. After the entire image has been transferred and verified, the Client device informs the Bootloader application that a new image is available, and that the MCU must be reset to start the upgrade process. See the following command sequence:

- OTA_StartImage()
- OTA_PushImageChunk() and OTA_CrcCompute ()
- ...
- OTA_PushImageChunk() and OTA_CrcCompute ()
- OTA_CommitImage()
- OTA_SetNewImageFlag()
- ResetMCU()

SecLib_RNG: Security library and random number generator

Random number generator

Overview The RNG module is part of the framework used for random number generation. It uses hardware RNG peripherals as entropy sources (TRNG, Secure Subsystem, ...) to provide a true random number generator interface. A Pseudo-Random number generator (PRNG) implementation is available. The PRNG may depend of SecLib services (thus requiring a common mutex) to perform HMAC-SHA256, SHA256, AES-CTR, or alternateively a Lehmer Linear Congruential generator. A prerequisite for the PRNG to function with desired randomness is to be seeded using a proper source of entropy. If no hardware acceleration is present, the RNG may fallback to lesser quality ad-hoc source e.g if present SIM_UID registers, the UIDL is used as the initial seed for the random number generator.

Initialization The RNG module requires an initialization via a call to RNG_Init. The RNG initialization involves a call to RNG_SetSeed.

In the case of a dual core system consisting of a Host core and an NBU core, the Secure Subsystem is owned by the Host core. The Host core then has a direct access to its TRNG embedded in its secure subssystem. On the NBU code side, a request is emitted via RPMSG to the Host to provide a seed. On receipt of this request, the Host sets a 'reseed needed' flag (from the ISR context) If the core running the RNG service owns the TRNG entropy hardware (if any), it can get the seed directly form this hardware synchronously. In the case of an NBU that does not control the devices entropy source, that is owned by the Host, it request a seed from the Host processor via RPMSG exchange. On receipt of this request the Host sets a flag notifying of this request from the RPMSG ISR context. From the Idle thread, this flag is polled via the RNG_IsReseedNeeded API. If set the seed is regenerated and forwarded to the NBU via RPMSG.

RNG_ReInit API is to be used at wake up time in the context of LowPower. RNG_DeInit is used for unit tests and coverage purposes but has no useful role in a real application.

Seed handling RNG_SetSeed: RNG_SetExternalSeed may be used to inject application entropy to RNG context seed using a supplied array of bytes. RNG_IsReseedNeeded used from task in Host core to check whether seed must be sent to NBU core.

RNG_GetTrueRandomNumber is the API used to generate a Random 32 bit number from a HW source of entropy. It is essential if only to seed the pseudo random number generator.

RNG_GetPseudoRandomData is used to generate arrays of random bytes.

Security Library

Overview The framework provides support for cryptography in the security module. It supports both software and hardware encryption. Depending on the device, the hardware encryption uses either the S200, MMCAU, LTC, or CAU3 module instruction set or dedicated AES and SHA hardware blocks.

Software implementation is provided in a library format.

Support for security algorithms

	SW Seclib : SecLib.c	EdgeLock SecLib_sss.c	Seclib_e	Mbedtls SecLib_mbec	nccl (part of SecLib.c)	Usage example
AES_128	SecLib_aes.c	x		x		
AES_128_ECB		x		x		
AES_128_CBC	x	x		x		
AES_128_CTR encryption	x	x				
AES_128_OFB Encryption	x					
AES_128_CMAC	x	x		x		BLE connection, ieee 15.4
AES_128_EAX	x					
AES_128_CCM	x	x		x		BLE, ieee 15.4
SHA1	SecLib_sha.c	x		x		
SHA256	x	x		x		
HMAC_SHA256	x	x		x		PRNG, Digest for Matter
ECDH_P256 shared secret generation	x (by 15 incremental steps) -> SecLib_ecdh.c	x with MACRO SecLibECDHUseSSS	x	x	x	BLE pairing,
EC_P256 key pair generation	x	x	x	x	x	
EC_P256 public key generation from private key			x	x	x	Matter (ECDSA)
ECDSA_P256 hash and msg signature generation / verification		only if owner of the key pair		x	x	Matter
SPAKE2+ P256 arithmetics				x	x	Matter

BLE advanced secure mode

New elements in existing structures: computeDhKeyParam_t::keepInternalBlob - boolean telling if the shared blob is kept in this structure(in .outpoint) after ECDH_P256_ComputeDhKey() or ECDH_P256_ComputeDhKeySeg() call.

New arguments in existing functions: ECDH_P256_ComputeDhKey keepBlobDhKey - boolean telling ECDH_P256_ComputeDhKey() or ECDH_P256_ComputeDhKeySeg() to keep the shared object after computation for later use (it is required by the SecLib_GenerateBluetoothF5KeysSecure).

New macros: gSecLibSssUseEncryptedKeys_d - Enable or disable S200 blobs SecLib support. 0 - the Bluetooth Keys are available in plaintext, 1 - the Bluetooth Keys are not available in plaintext, but in secured blobs. Default is disabled.

New functions:

LE Secure connections pairing:

void ECDH_P256_FreeDhKeyDataSecure This is a function used to free the shared object stored in computeDhKeyParam_t. When user calls ECDH_P256_ComputeDhKeySeg() with keepBlobDhKey set to 1, it should also call **ECDH_P256_FreeDhKeyDataSecure** .

SecLib_GenerateBluetoothF5Keys This function is extracted from the Bluetooth LE Host Stack implementation. This corresponds to the legacy implementation without key blobs.

SecLib_GenerateBluetoothF5KeysSecure Similar to **SecLib_GenerateBluetoothF5Keys** this function is modified to work with key blobs, the reason is to not use SSS inside the Bluetooth LE Host Stack.

SecLib_DeriveBluetoothSKD This is a helper function used by the Bluetooth LE Host Stack in the pairing procedure, when receiving the vendor HCI command specifying that the ESK needs to be provided to LL.

ELKE_BLE_SM_F5_DeriveKeys This is a private function, helper for **SecLib_GenerateBluetoothF5KeysSecure**. It was provided by the STEC team.

Privacy:

SecLib_ObfuscateKeySecure This is a function used by the Bluetooth LE Host Stack to obfuscate the IRK before setting it to Bluetooth LE Controller or before saving it to NVM

SecLib_DeobfuscateKeySecure This is a function used by the Bluetooth LE Host Stack to extract the plaintext IRK key from the saved NVM blob.

SecLib_VerifyBluetoothAh This function is extracted from the legacy Bluetooth LE Host Stack implementation using plaintext keys.

SecLib_VerifyBluetoothAhSecure Similar to **SecLib_VerifyBluetoothAh** with modification to work with S200 key blob.

SecLib_GenerateSymmetricKey This is a function used by the application to generate the local IRK and local CSRK.

SecLib_GenerateBluetoothEIRKBlobSecure This is a function used by the application to generate the EIRK needed by Bluetooth LE Controller from the IRK blob.

A2B feature

ECDH_P256_ComputeA2BKey This function is used to compute the EdgeLock to EdgeLock key. pInPeerPublicKey points to the peer public key, pOutE2EKey is the pointer to where the E2E key object will be stored, this will be freed by the application when it is no longer required by calling ECDH_P256_FreeE2EKeyData().

ECDH_P256_FreeE2EKeyData This function is used to free the key object given as a parameter. It is used by the application to free the E2E key when is no longer needed.

SecLib_ExportA2BBlobSecure This function is used to import an ELKE blob or plain text symmetric key in s200 and export an E2E key blob. The input type is identified by the keyType parameter.

SecLib_ImportA2BBlobSecure This function is used to import an E2E key blob in s200 and export an ELKE blob or plain text symmetric key. The output type is identified by the keyType parameter.

LE Secure connections Pairing flow and SecLib usage:

1. Each device needs to generate locally the public+private keypair. This is done using **ECDH_P256_GenerateKeys**.
2. Devices exchange their public keys.
3. Upon receiving the peer device's public key, local device is computing DH key using **ECDH_P256_ComputeDhKey**.
4. Each device sends DHKeyCheck packet
5. Upon receiving DhKeyCheck each device computes LTK blob using **SecLib_GenerateBluetoothF5Keys**
6. After computing the each device sends HCI_LeStartEnc (on initiator), HCI_Le_Provide_Long_Term_Key (on responder)
7. Bluetooth LE Controller sends back SKD report custom event
8. Bluetooth LE Host Stack computes ESKD based on LTK blob using **SecLib_DeriveBluetoothSKD** and sends it to Bluetooth LE Controller
9. Bluetooth LE Controller encrypts the link

IRK flow and SecLib usage:

1. At startup, when gInitializationComplete_c event is received:
   - the local IRK is generated using **SecLib_GenerateSymmetricKey**
   - the local EIRK is generated using **SecLib_GenerateBluetoothEIRKBlobSecure**
   - local CSRK is generated using **SecLib_GenerateSymmetricKey**
2. During legacy pairing when receiving bonding keys, IRK is obfuscated using **SecLib_ObfuscateKeySecure** and stored
3. When app wants to set the OOB keys using Gap_SaveKeys the IRK is obfuscated using **SecLib_ObfuscateKeySecure**
4. When application calls API Gap_VerifyPrivateResolvableAddress IRK is obfuscated using **SecLib_ObfuscateKeySecure** and verified using **SecLib_VerifyBluetoothAhSecure**
5. When a new connection is received in Host with RPA address not resolved by the Bluetooth LE Controller, the Host tries to resolve it by obfuscating it using **SecLib_ObfuscateKeySecure** and verifying it using **SecLib_VerifyBluetoothAhSecure**
6. When adding a peer in Bluetooth LE Controller resolving list, the peer's IRK is obfuscated using **SecLib_ObfuscateKeySecure** before setting it using **HCI_Le_Add_Device_To_Resolving_List**.
7. When an IRK plaintext is requested by the application using Gap_LoadKeys it is obtained using **SecLib_DeobfuscateKeySecure**
8. When legacy pairing completes and LTK needs to be send in the pairing complete event (gConnEvtPairingComplete_c) the **SecLib_DeobfuscateKey** is used to extract the plaintext.

A2B flow and SecLib usage:

1. At startup, when gInitializationComplete_c event is received, the application will call **ECDH_P256_GenerateKeys** to generate the public/private key pair required for the E2E key derivation and send the public key to the peer device.
2. When the public key is received from the peer device, the application will call **ECDH_P256_ComputeA2BKeySecure** to generate the EdgeLock to EdgeLock key.
3. The application will obtain an E2E IRK blob by calling **SecLib_ExportA2BBlobSecure** with key type gSecElkeBlob_c. The obtained blob is sent to the peer anchor. The peer anchor will call **SecLib_ImportA2BBlob** with keyType gSecElkeBlob_c and save the resulting ELKE blob in NVM, for Digital Key both anchors must have the same IRK.
4. After pairing, in order to send the LTK and IRK contained in the bonding data securely, the application will call **SecLib_ExportA2BBlobSecure** with keyType gSecLtkElkeBlob_c for the LTK, and **SecLib_ExportA2BBlobSecure** with keyType gSecPlainText_c for the IRK. The E2E blobs obtained are sent along with the rest of the bonding data to the peer anchor device.
5. After the bonding data is trasfered the E2E key is no longer needed and **ECDH_P256_FreeE2EKeyData** is called with the key object obtained at step 2 when **ECDH_P256_ComputeA2BKeySecure** was called.

Sensors

Overview The Sensors module provides an API to communicate with the ADC. Two values can be obtained by this module :

- Temperature value

- Battery level

The temperature is given in tenths of degrees Celsius and the battery in percentage.

This module is multi-caller, the ADC is protected by a mutex on the resource and by prevententing lowpower (only WFI) during its processing. Platform specific code can be find in fwk_platform_sensors.c/h.

Constant macro definitions Name :

```
#define VALUE_NOT_AVAILABLE_8 0xFFu
#define VALUE_NOT_AVAILABLE_32 0xFFFFFFFFu
```

Description :

Defines the error value that can be compared to the value obtain on the ADC.

SFC : Smart Frequency Calibration

Overview The Smart Frequency Calibration module provides operations and calibration for the FRO32K source clock. This module is split between main core and Radio core:

- fwk_rf_sfc.[ch]: RF_SFC module on Radio core that provides Main FRO32K measurement/calibration and state machine in synchornization with Radio domain activities. See details below.
- fwk_sfc.h: SFC module on host core that provides type definition for usage with fwk_platform_ics.[ch] with PLATFORM_FwkSrvSetRfSfcConfig() API and fwk_platform_ble.c for received callback from the NBU core

Host SFC Module

Algorithm parametrization This module provides ability to configure the RF_SFC module by sending message to Radio core through fwk_platform_ics.c PLATFORM_FwkSrvSetRfSfcConfig():

- Filter size
- Maximum ppm threshold
- Maximum calibration interval
- Number of sample in filter to swicth from convergence to monitor mode

Ppm target The ppm target is the deviation from the target clock accepted by the algorithm. When the deviation is larger than the ppm target. The algorithm will update the trimming value and reset the filter. The ppm target cannot be more aggressive RF_SFC_MAXIMAL_PPM_TARGET in order to avoid having to update trimming value at each measurement.

Filter size Filter size must be included between RF_SFC_MINIMAL_FILTER_SIZE and RF_SFC_MAXIMAL_FILTER_SIZE. See *Filtering and Frequency estimation* section for more details on the parameter.

Maximum calibration interval In monitor mode, new measurement are triggered by low-power entry/exit. If the NBU core has a lot of radio activity it could never enter lowpower. The maximum calibration interval is here to ensure a measurement is done regularly. When executing idle the SFC module checks when the last measurement has been done, if it has been too long, it reset the filter and forces a new measurement

Trig sample number The trig sample number is the number of samples needed by the algorithm in its filter to switch from convergence to monitor mode. Having more than one sample in convergence mode allows to confirm the trimming value that we have set.

SFC debug information On the other way, the RF_SFC from Radio core sends back notifications to SFC module on main core using RX callback PLATFORM_RegisterFroNotificationCallback() from fwk_platform_ics.h and such information:

- last measured frequency
- average ppm from 32768Khz frequency
- last ppm measured from 32768Khz frequency
- FRO trimming value

RF_SFC module The RF_SFC module provides the functionality to calibrate the FRO32K source clock during Initialization and radio activity.

The RF_SFC is mostly used on XTAL32K less solution when no 32Khz crystal is soldered on the board. It allows to calibrate the FRO32K source clock to the desired frequency to keep Radio time base within the allowed tolerance given by the connectivity standards. However, even on a XTAL32K solution, the RF_SFC is also used during Initialization until the XTAL32K is up and running in the system. The system firstly runs on the FRO32K clock source then switch to the XTAL32K clock source when it is ready with enough accuracy. This allows to save significant boot time as the FRO32K start up (including calibration) is much faster compared to XTAL32K .

This module will handle:

- FRO32K clock frequency measurement against 32Mhz crystal. It schedules appropriately the start of the measurement and gets the result when completed,
- Filter and estimate the 32Khz frequency value and error by averaging from the last measurements,
- FRO32K calibration in order to update the trimming value to reduce the frequency error on the clock.

The targeted frequency offset shall be within 200ppm. The RF_SFC will handle two modes of operation:

- Convergence mode: when frequency estimation is above 200pm,
- Monitor mode: when frequency estimation is below 200pm.

The RF_SFC module works in active and all low power modes on NBU domain, or on host application domain except power down mode. Power down mode on host application domain is not supported with the FRO32K configuration as clock source.

Feature enablement Enabling the FRO32K is done by calling the PLATFORM_InitFro32K() function during application initialization in hardware_init.c file, in BOARD_InitHardware() function. If FRO32K is not enabled, Oscillator XTAL32K shall be called instead by calling PLATFORM_InitOsc32K() function. The call to PLATFORM_InitFro32K() from BOARD_InitHardware() can be done by setting the Compilation flag gBoardUseFro32k_d to 1 in hardware_init.c or any header files included from this file.

```
#define gBoardUseFro32k_d       1
```

Detailed description

Frequency measurements When NBU low power is enabled, the frequency measurements are triggered on Low power wake-up by HW signal. The SFC process called from Idle task will check regularly the completion of the frequency measurement. When the measurement is done, it goes to filtering and frequency estimation process. The frequency measurement duration depends on monitor mode or convergence mode: In convergence mode, the frequency measurement duration is 0.5ms while it is 2ms in monitor mode. In monitor mode, the duration value remains less than the minimal radio activity duration so it does not impact the low power consumption in monitoring mode.

Filtering and Frequency estimation The FRO32KHz frequency measurement values are noisy because of thermal noise on the FRO32K itself. Also, the frequency measurement can introduce some error. In monitoring mode, it is required to filter the measurements by applying an exponential filter. new_estimation = (new_measurement + ((1 « n) -1) * last_estimation) » n

Default value for n is 7 (meaning 128 samples in the averaging window).

Frequency calibration When the frequency estimation gets higher than the targeted 200ppm target, the RF_SFC updates the trimming value for one positive or negative increment. For this purpose, it requires to:

- wake up the host application domain and keep the domain active,
- update the trim register of the FRO32K , this register is used to trim the capacitance value of the FRO32K,
- re-allow the host application domain to enter low power.

A slight power impact is expected during a calibration update due to host domain wake-up.

Operational modes When the low power mode is enabled on NBU power domain, RF SFC handles two modes of operation: convergence and monitor modes. However, when low power is disabled on NBU power domain, only convergence mode is supported.

Convergence mode Convergence mode is used when the estimated FRO32K frequency is above 200ppm or when the filter has been reset. Typically this occurs :

- During Power ON reset or other reset when NBU is switched OFF
- When temperature varies and FRO32K frequency deviates outside 200ppm threshold target
- When no calibration has been done during some time as we discard old values that could influence the algorithm

The convergence mode process typically starts with a FRO32K trim register update, performs a frequency measurement and the FRO32K trim register is updated until the measured frequency gets below 200ppm. These operations are repeated in a loop until the estimated frequency value gets below 200ppm. When below 200ppm during multiple measurements, the RC SFC switches to Monitoring mode. The convergence mode is only a transition mode to monitoring mode. In convergence mode, the NBU power domain does not go to low power. The convergence mode time duration depends on the initial frequency error of the FR032K. Default frequency measurement duration is 0.5ms so 20 measurements (given as example only) will require less than 10 ms to converge.

Monitoring mode Monitoring mode is used when the estimated FRO32K frequency is below 200ppm. In this mode, the measurement is triggered on NBU domain wake up from low power mode using an internal hardware signal. The exponential filter is applied to compute the frequency estimation. If the frequency estimation value is still within 200ppm, the NBU power domain is allowed to go to low power. If the estimated value gets above the 200ppm threshold, the RF SFC switch back to convergence mode. The trim register is updated by one increment (positive or negative) and because the frequency has been adjusted and changed, the estimated filtered frequency is reset to discard all previous measurements. Going back to convergence mode typically happens during a temperature gradient. If the temperature is constant, it is not expected to have the estimated value to go beyond 200ppm so no calibration should be required.

Initialization and configuration During initialization, the RF SFC module will block the Radio Software until monitoring mode is reached. This is to prevent the radio from running with an inaccurate time base due to an important 32k clock frequency error.

Initialization and configuration is done by the NBU core. The configuration parameters can set up:

- The 200ppm target threshold. This value shall be 200ppm or higher.
- The filtering number n (see section above), It shall be between 0 and 8. Default is 7 which is similar to an averaging filter of 128 samples. A higher value will be more robust against noise. A lower value will track temperature variation more faster.

In order to prevent the host application domain from going into power down mode (power down mode not supported with FRO32K as clock source), the fwkSrvLowPowerConstraintCallbacks functions structure is registered to the Framework service on host application core from fwk_platform_lowpower.c file, PLATFORM_LowPowerInit() function. The NBU code applies a low power Deep Sleep constraint to the application core. This constraint is released when the NBU firmware has no activity to do and re-applied when a new activity starts.

Lowpower impact

Power impact during active mode: In monitoring mode (this should be 99.9% of the time if temperature does not vary), the FRO32KHz frequency measurements are performed during a Radio activity so it does not increase the active current as the sources clocks are already active. Also, it does not increase the active time as the measurement takes less time than an advertising event or connection event so no impact on power consumption.

The main power impact will be in convergence mode. In this case, measurements/calibrations are done in loop until the monitoring mode is reached (frequency error less than 200ppm). This could happen:

- During power ON reset,
- When temperature varies: The frequency will deviate from 32768Hz and FRO32K trimming register correction will need to be updated for that,
- When no measurement has been done during some time as we cannot predict if the FRO has drifted, so we discard older values and start convergence mode.

When FRO32K frequency needs to be adjusted, the NBU core will wake-up the main power domain and will update the FRO32K trimming register.

Power impact during low power mode: The power consumption in low power mode will increase slightly due to running FRO32K compared to XTAL32K. The power consumption of FRO32K typically consumes 350nA while it is only 100nA with XTAL32K. Refer to the product datasheet for the exact numbers.

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK

Overview The purpose of this document is to describes the FreeRTOS kernel repo integration into the NXP MCUXpresso Software Development Kit: mcuxsdk. MCUXpresso SDK provides a comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on MCUs from NXP. This project involves the FreeRTOS kernel repo fork with:

- cmake and Kconfig support to allow the configuration and build in MCUXpresso SDK ecosystem
- FreeRTOS OS additions, such as FreeRTOS driver wrappers, RTOS ready FatFs file system, and the implementation of FreeRTOS tickless mode

The history of changes in FreeRTOS kernel repo for MCUXpresso SDK are summarized in *CHANGELOG_mcuxsdk.md* file.

The MCUXpresso SDK framework also contains a set of FreeRTOS examples which show basic FreeRTOS OS features. This makes it easy to start a new FreeRTOS project or begin experimenting with FreeRTOS OS. Selected drivers and middleware are RTOS ready with related FreeRTOS adaptation layer.

FreeRTOS example applications The FreeRTOS examples are written to demonstrate basic FreeRTOS features and the interaction between peripheral drivers and the RTOS.

List of examples The list of freertos_examples, their description and availability for individual supported MCUXpresso SDK development boards can be obtained here: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/examples/freertos_examples/index.html

Location of examples The FreeRTOS examples are located in mcuxsdk-examples repository, see the freertos_examples folder.

Once using MCUXpresso SDK zip packages created via the MCUXpresso SDK Builder the FreeRTOS kernel library and associated freertos_examples are added into final zip package once FreeRTOS components is selected on the Developer Environment Settings page:

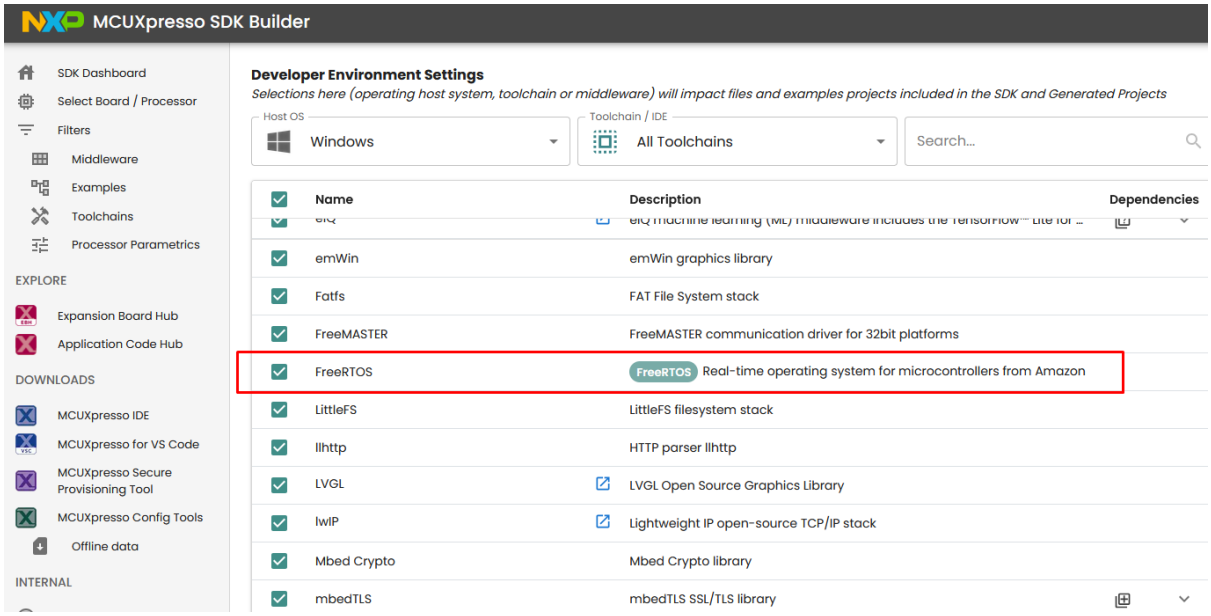

The FreeRTOS examples in MCUXpresso SDK zip packages are located in <MCUXpressoSDK_install_dir>/boards/<board_name>/freertos_examples/ subfolders.

Building a FreeRTOS example application For information how to use the cmake and Kconfig based build and configuration system and how to build freertos_examples visit: MCUXpresso SDK documentation for Build And Configuration MCUXpresso SDK Getting Start Guide

Tip: To list all FreeRTOS example projects and targets that can be built via the west build command, use this west list_project command in mcuxsdk workspace:

```
west list_project -p examples/freertos_examples
```

FreeRTOS aware debugger plugin NXP provides FreeRTOS task aware debugger for GDB. The plugin is compatible with Eclipse-based (MCUXpressoIDE) and is available after the installation.

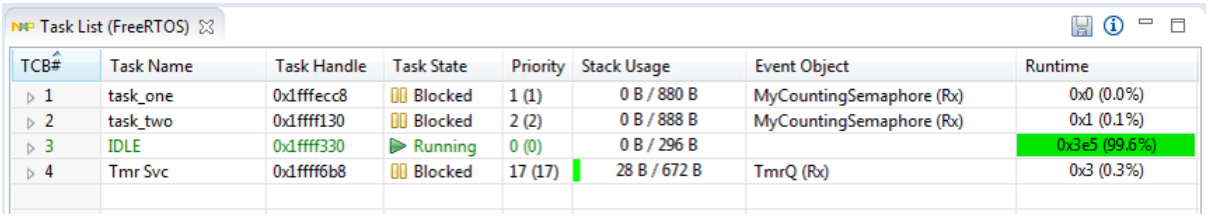

FreeRTOS kernel for MCUXpresso SDK ChangeLog

Changelog FreeRTOS kernel for MCUXpresso SDK All notable changes to this project will be documented in this file.

The format is based on Keep a Changelog, and this project adheres to Semantic Versioning.

[Unreleased]

Added

- Kconfig added CONFIG_FREERTOS_USE_CUSTOM_CONFIG_FRAGMENT config to optionally include custom FreeRTOSConfig fragment
  include file FreeRTOSConfig_frag.h. File must be provided by application.
- Added missing Kconfig option for configUSE_PICOLIBC_TLS.
- Add correct header files to build when configUSE_NEWLIB_REENTRANT and configUSE_PICOLIBC_TLS is selected in config.

[11.1.0_rev0]

- update amazon freertos version

[11.0.1_rev0]

- update amazon freertos version

[10.5.1_rev0]

- update amazon freertos version

[10.4.3_rev1]

- Apply CM33 security fix from 10.4.3-LTS-Patch-2. See rtos\freertos\freertos_kernel\History.txt
- Apply CM33 security fix from 10.4.3-LTS-Patch-1. See rtos\freertos\freertos_kernel\History.txt

[10.4.3_rev0]

- update amazon freertos version.

[10.4.3_rev0]

- update amazon freertos version.

[9.0.0_rev3]

- New features:
  - Tickless idle mode support for Cortex-A7. Add fsl_tickless_epit.c and fsl_tickless_generic.h in portable/IAR/ARM_CA9 folder.
  - Enabled float context saving in IAR for Cortex-A7. Added configUSE_TASK_FPU_SUPPORT macros. Modified port.c and portmacro.h in portable/IAR/ARM_CA9 folder.
- Other changes:
  - Transformed ARM_CM core specific tickless low power support into generic form under freertos/Source/portable/low_power_tickless/.

[9.0.0_rev2]

- New features:
  - Enabled MCUXpresso thread aware debugging. Add freertos_tasks_c_additions.h and configINCLUDE_FREERTOS_TASK_C_ADDITIONS_H and configFREERTOS_MEMORY_SCHEME macros.

[9.0.0_rev1]

- New features:
  - Enabled -flto optimization in GCC by adding **attribute**((used)) for vTaskSwitchContext.
  - Enabled KDS Task Aware Debugger. Apply FreeRTOS patch to enable configRECORD_STACK_HIGH_ADDRESS macro. Modified files are task.c and FreeRTOS.h.

[9.0.0_rev0]

- New features:
  - Example freertos_sem_static.
  - Static allocation support RTOS driver wrappers.
- Other changes:
  - Tickless idle rework. Support for different timers is in separated files (fsl_tickless_systick.c, fsl_tickless_lptmr.c).
  - Removed configuration option configSYSTICK_USE_LOW_POWER_TIMER. Low power timer is now selected by linking of apropriate file fsl_tickless_lptmr.c.
  - Removed configOVERRIDE_DEFAULT_TICK_CONFIGURATION in RVDS port. Use of **attribute**((weak)) is the preferred solution. Not same as _weak!

[8.2.3]

- New features:
  - Tickless idle mode support.
  - Added template application for Kinetis Expert (KEx) tool (template_application).
- Other changes:
  - Folder structure reduction. Keep only Kinetis related parts.

FreeRTOS kernel Readme

MCUXpresso SDK: FreeRTOS kernel This repository is a fork of FreeRTOS kernel (https://github.com/FreeRTOS/FreeRTOS-Kernel)(11.1.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS kernel repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

For more information about the FreeRTOS kernel repo adoption see README_mcuxsdk.md: FreeRTOS kernel for MCUXpresso SDK Readme document.

Getting started This repository contains FreeRTOS kernel source/header files and kernel ports only. This repository is referenced as a submodule in FreeRTOS/FreeRTOS repository, which contains pre-configured demo application projects under FreeRTOS/Demo directory.

The easiest way to use FreeRTOS is to start with one of the pre-configured demo application projects. That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the FreeRTOS Kernel Quick Start Guide for detailed instructions and other useful links.

Additionally, for FreeRTOS kernel feature information refer to the Developer Documentation, and API Reference.

Also for contributing and creating a Pull Request please refer to *the instructions here*.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the FreeRTOS Community Support Forum.

To consume FreeRTOS-Kernel

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_kernel
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Kernel.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
)
```

In case you prefer to add it as a git submodule, do:

```
git submodule add https://github.com/FreeRTOS/FreeRTOS-Kernel.git <path of the submodule>
git submodule update --init
```

- Add a freertos_config library (typically an INTERFACE library) The following assumes the directory structure:
  - include/FreeRTOSConfig.h

```
add_library(freertos_config INTERFACE)

target_include_directories(freertos_config SYSTEM
INTERFACE
    include
)

target_compile_definitions(freertos_config
  INTERFACE
    projCOVERAGE_TEST=0
)
```

In case you installed FreeRTOS-Kernel as a submodule, you will have to add it as a subdirectory:

```
add_subdirectory(${FREERTOS_PATH})
```

- Configure the FreeRTOS-Kernel and make it available
  - this particular example supports a native and cross-compiled build option.

```
set( FREERTOS_HEAP "4" CACHE STRING "" FORCE)
# Select the native compile PORT
set( FREERTOS_PORT "GCC_POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  set(FREERTOS_PORT "GCC_ARM_CA9" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_kernel)
```

- In case of cross compilation, you should also add the following to freertos_config:

```
target_compile_definitions(freertos_config INTERFACE ${definitions})
target_compile_options(freertos_config INTERFACE ${options})
```

Consuming stand-alone - Cloning this repository To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Kernel.git
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Kernel.git
```

Repository structure

- The root of this repository contains the three files that are common to every port - list.c, queue.c and tasks.c. The kernel is contained within these three files. croutine.c implements the optional co-routine functionality - which is normally only used on very memory limited systems.
- The ./portable directory contains the files that are specific to a particular microcontroller and/or compiler. See the readme file in the ./portable directory for more information.
- The ./include directory contains the real time kernel header files.
- The ./template_configuration directory contains a sample FreeRTOSConfig.h to help jumpstart a new project. See the *FreeRTOSConfig.h* file for instructions.

Code Formatting FreeRTOS files are formatted using the "uncrustify" tool. The configuration file used by uncrustify can be found in the FreeRTOS/CI-CD-GitHub-Actions's uncrustify.cfg file.

Line Endings File checked into the FreeRTOS-Kernel repository use unix-style LF line endings for the best compatibility with git.

For optimal compatibility with Microsoft Windows tools, it is best to enable the git autocrlf feature. You can enable this setting for the current repository using the following command:

```
git config core.autocrlf true
```

Git History Optimizations Some commits in this repository perform large refactors which touch many lines and lead to unwanted behavior when using the git blame command. You can configure git to ignore the list of large refactor commits in this repository with the following command:

```
git config blame.ignoreRevsFile .git-blame-ignore-revs
```

Spelling and Formatting We recommend using Visual Studio Code, commonly referred to as VSCode, when working on the FreeRTOS-Kernel. The FreeRTOS-Kernel also uses cSpell as part of its spelling check. The config file for which can be found at *cspell.config.yaml* There is additionally a cSpell plugin for VSCode that can be used as well. .cSpellWords.txt contains words that are not traditionally found in an English dictionary. It is used by the spellchecker to verify the various jargon, variable names, and other odd words used in the FreeRTOS code base are correct. If your pull request fails to pass the spelling and you believe this is a mistake, then add the word to .cSpellWords.txt. When adding a word please then sort the list, which can be done by running the bash command: `sort -u .cSpellWords.txt -o .cSpellWords.txt` Note that only the FreeRTOS-Kernel Source Files, *include*, *portable/MemMang*, and *portable/Common* files are checked for proper spelling, and formatting at this time.

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

MCUXpresso SDK: backoffAlgorithm Library This repository is a fork of backoffAlgorithm library (https://github.com/FreeRTOS/backoffalgorithm)(1.3.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable backoffAlgorithm repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

backoffAlgorithm Library This repository contains the backoffAlgorithm library, a utility library to calculate backoff period using an exponential backoff with jitter algorithm for retrying network operations (like failed network connection with server). This library uses the "Full Jitter" strategy for the exponential backoff with jitter algorithm. More information about the algorithm can be seen in the Exponential Backoff and Jitter AWS blog.

The backoffAlgorithm library is distributed under the *MIT Open Source License*.

Exponential backoff with jitter is typically used when retrying a failed network connection or operation request with the server. An exponential backoff with jitter helps to mitigate failed network operations with servers, that are caused due to network congestion or high request load on the server, by spreading out retry requests across multiple devices attempting network operations. Besides, in an environment with poor connectivity, a client can get disconnected at any time. A backoff strategy helps the client to conserve battery by not repeatedly attempting reconnections when they are unlikely to succeed.

See memory requirements for this library *here*.

backoffAlgorithm v1.3.0 source code is part of the FreeRTOS 202210.00 LTS release.

backoffAlgorithm v1.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example The example below shows how to use the backoffAlgorithm library on a POSIX platform to retry a DNS resolution query for amazon.com.

```
#include "backoff_algorithm.h"
#include <stdlib.h>
#include <string.h>
#include <netdb.h>
#include <unistd.h>
#include <time.h>

/* The maximum number of retries for the example code. */
#define RETRY_MAX_ATTEMPTS            ( 5U )

/* The maximum back-off delay (in milliseconds) for between retries in the example. */
#define RETRY_MAX_BACKOFF_DELAY_MS    ( 5000U )

/* The base back-off delay (in milliseconds) for retry configuration in the example. */
#define RETRY_BACKOFF_BASE_MS         ( 500U )

int main()
{
    /* Variables used in this example. */
    BackoffAlgorithmStatus_t retryStatus = BackoffAlgorithmSuccess;
    BackoffAlgorithmContext_t retryParams;
    char serverAddress[] = "amazon.com";
    uint16_t nextRetryBackoff = 0;

    int32_t dnsStatus = -1;
    struct addrinfo hints;
    struct addrinfo ** pListHead = NULL;
    struct timespec tp;

    /* Add hints to retrieve only TCP sockets in getaddrinfo. */
    ( void ) memset( &hints, 0, sizeof( hints ) );

    /* Address family of either IPv4 or IPv6. */
    hints.ai_family = AF_UNSPEC;
    /* TCP Socket. */
    hints.ai_socktype = ( int32_t ) SOCK_STREAM;
    hints.ai_protocol = IPPROTO_TCP;

    /* Initialize reconnect attempts and interval. */
    BackoffAlgorithm_InitializeParams( &retryParams,
                                       RETRY_BACKOFF_BASE_MS,
                                       RETRY_MAX_BACKOFF_DELAY_MS,
                                       RETRY_MAX_ATTEMPTS );


    /* Seed the pseudo random number generator used in this example (with call to
     * rand() function provided by ISO C standard library) for use in backoff period
     * calculation when retrying failed DNS resolution. */

    /* Get current time to seed pseudo random number generator. */
    ( void ) clock_gettime( CLOCK_REALTIME, &tp );
    /* Seed pseudo random number generator with seconds. */
    srand( tp.tv_sec );

    do
    {
        /* Perform a DNS lookup on the given host name. */
        dnsStatus = getaddrinfo( serverAddress, NULL, &hints, pListHead );
```

(continues on next page)

(continued from previous page)

```
        /* Retry if DNS resolution query failed. */
        if( dnsStatus != 0 )
        {
            /* Generate a random number and get back-off value (in milliseconds) for the next retry.
             * Note: It is recommended to use a random number generator that is seeded with
             * device-specific entropy source so that backoff calculation across devices is different
             * and possibility of network collision between devices attempting retries can be avoided.
             *
             * For the simplicity of this code example, the pseudo random number generator, rand()
             * function is used. */
            retryStatus = BackoffAlgorithm_GetNextBackoff( &retryParams, rand(), &nextRetryBackoff );

            /* Wait for the calculated backoff period before the next retry attempt of querying DNS.
             * As usleep() takes nanoseconds as the parameter, we multiply the backoff period by 1000. */
            ( void ) usleep( nextRetryBackoff * 1000U );
        }
    } while( ( dnsStatus != 0 ) && ( retryStatus != BackoffAlgorithmRetriesExhausted ) );

    return dnsStatus;
}
```

Building the library A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses a header file introduced in ISO C99, stdint.h. For compilers that do not provide this header file, the *source/include* directory contains *stdint.readme*, which can be renamed to stdint.h to build the backoffAlgorithm library.

For instance, if the example above is copied to a file named example.c, *gcc* can be used like so:

```
gcc -I source/include example.c source/backoff_algorithm.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/backoff_algorithm.c
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with update=none in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like amazon-freertos that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
  - C89 or later compiler like gcc
  - CMake 3.13.0 or later
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described *above*.)
2. Create build directory: `mkdir build && cd build`
3. Run *cmake* while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

MCUXpresso SDK: coreHTTP Client Library

This repository is a fork of coreHTTP Client library (https://github.com/FreeRTOS/corehttp)(3.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreHTTP Client repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

coreHTTP Client Library

This repository contains a C language HTTP client library designed for embedded platforms. It has no dependencies on any additional libraries other than the standard C library, llhttp, and a customer-implemented transport interface. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a GNU Complexity score over 8. This library has also undergone both static code analysis from Coverity static analysis, and validation of memory safety and data structure invariance through the CBMC automated reasoning tool.

See memory requirements for this library *here*.

coreHTTP v3.0.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreHTTP v2.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

coreHTTP Config File The HTTP client library exposes configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_http_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named `core_http_config.h` can be provided by the user application to the library.

By default, a `core_http_config.h` custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `HTTP_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

The HTTP client library can be built by either:

- Defining a core_http_config.h file in the application, and adding it to the include directories for the library build. **OR**
- Defining the HTTP_DO_NOT_USE_CUSTOM_CONFIG preprocessor macro for the library build.

Building the Library The *httpFilePaths.cmake* file contains the information of all source files and header include paths required to build the HTTP client library.

As mentioned in the *previous section*, either a custom config file (i.e. core_http_config.h) OR HTTP_DO_NOT_USE_CUSTOM_CONFIG macro needs to be provided to build the HTTP client library.

For a CMake example of building the HTTP library with the httpFilePaths.cmake file, refer to the coverity_analysis library target in *test/CMakeLists.txt* file.

Building Unit Tests

Platform Prerequisites

- For running unit tests, the following are required:
  - **C90 compiler** like gcc
  - **CMake 3.13.0 or later**
  - **Ruby 2.0.0 or later** is required for this repository's CMock test framework.
- For running the coverage target, the following are required:
  - **gcov**
  - **lcov**

Steps to build Unit Tests

1. Go to the root directory of this repository.
2. Run the *cmake* command: cmake -S test -B build -DBUILD_CLONE_SUBMODULES=ON
3. Run this command to build the library and unit tests: make -C build all
4. The generated test executables will be present in build/bin/tests folder.
5. Run cd build && ctest to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material here.

The test/cbmc/proofs directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions here.

Reference examples The AWS IoT Device SDK for Embedded C repository contains demos of using the HTTP client library here on a POSIX platform. These can be used as reference examples for the library API.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreHTTP may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.5 corejson

JSON parser.

Readme

MCUXpresso SDK: coreJSON Library This repository is a fork of coreJSON library (https://github.com/FreeRTOS/corejson)(3.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreJSON repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

coreJSON Library This repository contains the coreJSON library, a parser that strictly enforces the ECMA-404 JSON standard and is suitable for low memory footprint embedded devices. The coreJSON library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a GNU Complexity score over 8, and checks against deviations from mandatory rules in the MISRA coding standard. Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from Coverity static analysis, and validation of memory safety through the CBMC automated reasoning tool.

See memory requirements for this library *here*.

coreJSON v3.2.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreJSON v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example

```
#include <stdio.h>
#include "core_json.h"

int main()
{
    // Variables used in this example.
    JSONStatus_t result;
    char buffer[] = "{\"foo\":\"abc\",\"bar\":{\"foo\":\"xyz\"}}";
    size_t bufferLength = sizeof( buffer ) - 1;
    char queryKey[] = "bar.foo";
    size_t queryKeyLength = sizeof( queryKey ) - 1;
    char * value;
    size_t valueLength;

    // Calling JSON_Validate() is not necessary if the document is guaranteed to be valid.
    result = JSON_Validate( buffer, bufferLength );

    if( result == JSONSuccess )
    {
        result = JSON_Search( buffer, bufferLength, queryKey, queryKeyLength,
                              &value, &valueLength );
    }

    if( result == JSONSuccess )
    {
        // The pointer "value" will point to a location in the "buffer".
        char save = value[ valueLength ];
        // After saving the character, set it to a null byte for printing.
        value[ valueLength ] = '\0';
        // "Found: bar.foo -> xyz" will be printed.
        printf( "Found: %s -> %s\n", queryKey, value );
        // Restore the original character.
        value[ valueLength ] = save;
    }

    return 0;
}
```

A search may descend through nested objects when the queryKey contains matching key strings joined by a separator, .. In the example above, bar has the value {"foo":"xyz"}. Therefore, a search for query key bar.foo would output xyz.

Building coreJSON A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses 2 header files introduced in ISO C99, stdbool.h and stdint.h. For compilers that do not provide this header file, the *source/include* directory contains *stdbool.readme* and *stdint.readme*, which can be renamed to stdbool.h and stdint.h respectively.

For instance, if the example above is copied to a file named example.c, *gcc* can be used like so:

```
gcc -I source/include example.c source/core_json.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/core_json.c
```

Documentation

Existing documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of the coreJSON library may differ across repositories.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like amazon-freertos that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
  - C90 compiler like gcc
  - CMake 3.13.0 or later
  - Ruby 2.0.0 or later is additionally required for the Unity test framework (that we use).
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described *above*.)
2. Create build directory: `mkdir build && cd build`
3. Run *cmake* while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material here.

The test/cbmc/proofs directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions here.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

MCUXpresso SDK: coreMQTT Library

This repository is a fork of coreMQTT library (https://github.com/FreeRTOS/coremqtt)(2.1.1). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

coreMQTT Client Library

This repository contains the coreMQTT library that has been optimized for a low memory footprint. The coreMQTT library is compliant with the MQTT 3.1.1 standard. It has no dependencies on any additional libraries other than the standard C library, a customer-implemented network transport interface, and *optionally* a user-implemented platform time function. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a GNU Complexity score over 8, and checks against deviations from mandatory rules in the MISRA coding standard. Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from Coverity static analysis, and validation of memory safety through the CBMC automated reasoning tool.

See memory requirements for this library *here*.

coreMQTT v2.1.1 source code is part of the FreeRTOS 202210.01 LTS release.

MQTT Config File The MQTT client library exposes build configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_mqtt_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named core_mqtt_config.h can be provided by the application to the library.

By default, a core_mqtt_config.h custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide MQTT_DO_NOT_USE_CUSTOM_CONFIG as a compile time preprocessor macro.

Thus, the MQTT library can be built by either:

- Defining a core_mqtt_config.h file in the application, and adding it to the include directories list of the library
  OR
- Defining the MQTT_DO_NOT_USE_CUSTOM_CONFIG preprocessor macro for the library build.

Sending metrics to AWS IoT When establishing a connection with AWS IoT, users can optionally report the Operating System, Hardware Platform and MQTT client version information of their device to AWS. This information can help AWS IoT provide faster issue resolution and technical support. If users want to report this information, they can send a specially formatted string (see below) in the username field of the MQTT CONNECT packet.

Format

The format of the username string with metrics is:

```
<Actual_Username>?SDK=<OS_Name>&Version=<OS_Version>&Platform=<Hardware_Platform>&
↪MQTTLib=<MQTT_Library_name>@<MQTT_Library_version>
```

Where

- <Actual_Username> is the actual username used for authentication, if username and password are used for authentication. When username and password based authentication is not used, this is an empty value.
- <OS_Name> is the Operating System the application is running on (e.g. FreeRTOS)
- <OS_Version> is the version number of the Operating System (e.g. V10.4.3)
- <Hardware_Platform> is the Hardware Platform the application is running on (e.g. WinSim)
- <MQTT_Library_name> is the MQTT Client library being used (e.g. coreMQTT)
- <MQTT_Library_version> is the version of the MQTT Client library being used (e.g. 1.0.2)

Example

- Actual_Username = “iotuser”, OS_Name = FreeRTOS, OS_Version = V10.4.3, Hardware_Platform_Name = WinSim, MQTT_Library_Name = coremqtt, MQTT_Library_version = 2.1.1. If username is not used, then “iotuser” can be removed.

```
/* Username string:
 * iotuser?SDK=FreeRTOS&Version=v10.4.3&Platform=WinSim&MQTTLib=coremqtt@2.1.1
 */

#define OS_NAME                    ”FreeRTOS”
#define OS_VERSION                 ”V10.4.3”
#define HARDWARE_PLATFORM_NAME     ”WinSim”
#define MQTT_LIB                   ”coremqtt@2.1.1”

#define USERNAME_STRING            ”iotuser?SDK=” OS_NAME ”&Version=” OS_VERSION ”&
↪Platform=” HARDWARE_PLATFORM_NAME ”&MQTTLib=” MQTT_LIB
#define USERNAME_STRING_LENGTH     ( ( uint16_t ) ( sizeof( USERNAME_STRING ) - 1 ) )

MQTTConnectInfo_t connectInfo;
connectInfo.pUserName = USERNAME_STRING;
connectInfo.userNameLength = USERNAME_STRING_LENGTH;
mqttStatus = MQTT_Connect( pMqttContext, &connectInfo, NULL, CONNACK_RECV_TIMEOUT_MS,␣
↪pSessionPresent );
```

Upgrading to v2.0.0 and above With coreMQTT versions >=v2.0.0, there are breaking changes. Please refer to the *coreMQTT version >=v2.0.0 Migration Guide*.

Building the Library The *mqttFilePaths.cmake* file contains the information of all source files and the header include path required to build the MQTT library.

Additionally, the MQTT library requires two header files that are not part of the ISO C90 standard library, stdbool.h and stdint.h. For compilers that do not provide these header files, the

source/include directory contains the files *stdbool.readme* and *stdint.readme*, which can be renamed to stdbool.h and stdint.h, respectively, to provide the type definitions required by MQTT.

As mentioned in the previous section, either a custom config file (i.e. core_mqtt_config.h) OR MQTT_DO_NOT_USE_CUSTOM_CONFIG macro needs to be provided to build the MQTT library.

For a CMake example of building the MQTT library with the mqttFilePaths.cmake file, refer to the coverity_analysis library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule By default, the submodules in this repository are configured with update=none in *.gitmodules* to avoid increasing clone time and disk space usage of other repositories (like amazon-freertos that submodules this repository).

To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Platform Prerequisites

- Docker

or the following:

- For running unit tests
  - **C90 compiler** like gcc
  - **CMake 3.13.0 or later**
  - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. If using docker, launch the container:
   1. docker build -t coremqtt .
   2. docker run -it -v "$PWD":/workspaces/coreMQTT -w /workspaces/coreMQTT coremqtt
2. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described *above*)
3. Run the *cmake* command: cmake -S test -B build
4. Run this command to build the library and unit tests: make -C build all
5. The generated test executables will be present in build/bin/tests folder.
6. Run cd build && ctest to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material here.

The test/cbmc/proofs directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions here.

Reference examples Please refer to the demos of the MQTT client library in the following locations for reference examples on POSIX and FreeRTOS platforms:

Platform	Location	Transport Interface Implementation
POSIX	AWS IoT Device SDK for Embedded C	POSIX sockets for TCP/IP and OpenSSL for TLS stack
FreeRTOS	FreeRTOS/FreeRTOS	FreeRTOS+TCP for TCP/IP and mbedTLS for TLS stack
FreeRTOS	FreeRTOS AWS Reference Integrations	Based on Secure Sockets Abstraction

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreMQTT may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.7 coremqtt-agent

The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library.

Readme

MCUXpresso SDK: coreMQTT Agent Library This repository is a fork of coreMQTT Agent library (https://github.com/FreeRTOS/coremqtt-agent)(1.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT Agent repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

coreMQTT Agent Library The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library. The library provides thread safe equivalents to the coreMQTT's APIs, greatly simplifying its use in multi-threaded environments. The coreMQTT Agent library manages the MQTT connection by serializing the access to the coreMQTT library and reducing implementation overhead (e.g., removing the need for the application to repeatedly call to MQTT_ProcessLoop). This allows your multi-threaded applications to share the same MQTT connection, and enables you to design an embedded application without having to worry about coreMQTT thread safety.

This library has gone through code quality checks including verification that no function has a GNU Complexity score over 8, and checks against deviations from mandatory rules in the MISRA coding standard. Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from Coverity static analysis, and validation of memory safety through the CBMC automated reasoning tool.

See memory requirements for this library *here*.

Cloning this repository This repo uses Git Submodules to bring in dependent components.

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

Using SSH:

```
git clone git@github.com:FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

If you have downloaded the repo without using the --recurse-submodules argument, you need to run:

```
git submodule update --init --recursive
```

coreMQTT Agent Library Configurations The MQTT Agent library uses the same core_mqtt_config.h configuration file as coreMQTT, with the addition of configuration constants listed at the top of *core_mqtt_agent.h* and *core_mqtt_agent_command_functions.h*. Documentation for these configurations can be found here.

To provide values for these configuration values, they must be either:

- Defined in core_mqtt_config.h used by coreMQTT **OR**
- Passed as compile time preprocessor macros

Porting the coreMQTT Agent Library In order to use the MQTT Agent library on a platform, you need to supply thread safe functions for the agent's *messaging interface*.

Messaging Interface Each of the following functions must be thread safe.

Function Pointer	Description
MQTTAgentMessageSend_t	A function that sends commands (as MQTTAgentCommand_t * pointers) to be received by MQTTAgent_CommandLoop. This can be implemented by pushing to a thread safe queue.
MQTTAgentMessageRecv_t	A function used by MQTTAgent_CommandLoop to receive MQTTAgentCommand_t * pointers that were sent by API functions. This can be implemented by receiving from a thread safe queue.
MQTTAgentCommandGet_t	A function that returns a pointer to an allocated MQTTAgentCommand_t structure, which is used to hold information and arguments for a command to be executed in MQTTAgent_CommandLoop(). If using dynamic memory, this can be implemented using malloc().
MQTTAgentCommandRelease_t	A function called to indicate that a command structure that had been allocated with the MQTTAgentCommandGet_t function pointer will no longer be used by the agent, so it may be freed or marked as not in use. If using dynamic memory, this can be implemented with free().

Reference implementations for the interface functions can be found in the *reference examples* below.

Additional Considerations

Static Memory If only static allocation is used, then the MQTTAgentCommandGet_t and MQTTAgentCommandRelease_t could instead be implemented with a pool of MQTTAgentCommand_t structures, with a queue or semaphore used to control access and provide thread safety. The below *reference examples* use static memory with a command pool.

Subscription Management The MQTT Agent does not track subscriptions for MQTT topics. The receipt of any incoming PUBLISH packet will result in the invocation of a single MQTTAgentIncomingPublishCallback_t callback, which is passed to MQTTAgent_Init() for initialization. If it is desired for different handlers to be invoked for different incoming topics, then the publish callback will have to manage subscriptions and fan out messages. A platform independent subscription manager example is implemented in the *reference examples* below.

Building the Library You can build the MQTT Agent source files that are in the *source* directory, and add *source/include* to your compiler's include path. Additionally, the MQTT Agent library requires the coreMQTT library, whose files follow the same source/ and source/include pattern as the agent library; its build instructions can be found here.

If using CMake, the *mqttAgentFilePaths.cmake* file contains the above information of the source files and the header include path from this repository. The same information is found for coreMQTT from mqttFilePaths.cmake in the *coreMQTT submodule*.

For a CMake example of building the MQTT Agent library with the mqttAgentFilePaths.cmake file, refer to the coverity_analysis library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Unit Test Platform Prerequisites

- For running unit tests
  - **C90 compiler** like gcc
  - **CMake 3.13.0 or later**
  - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described *above*)
2. Run the *cmake* command: `cmake -S test -B build`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material here.

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions here.

Reference examples Please refer to the demos of the MQTT Agent library in the following locations for reference examples on FreeRTOS platforms:

Location
coreMQTT Agent Demos
FreeRTOS/FreeRTOS

Documentation The MQTT Agent API documentation can be found here.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages yourself, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Getting help You can use your Github login to get support from both the FreeRTOS community and directly from the primary FreeRTOS developers on our active support forum. You can find a list of frequently asked questions here.

Contributing See *CONTRIBUTING.md* for information on contributing.

License This library is licensed under the MIT License. See the *LICENSE* file.

4.1.8 corepkcs11

PKCS #11 key management library.

Readme

MCUXpresso SDK: corePKCS11 Library This repository is a fork of PKCS #11 key management library (https://github.com/FreeRTOS/corePKCS11/tree/v3.5.0)(v3.5.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable corepkcs11 repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

corePKCS11 Library PKCS #11 is a standardized and widely used API for manipulating common cryptographic objects. It is important because the functions it specifies allow application software to use, create, modify, and delete cryptographic objects, without ever exposing those objects to the application's memory. For example, FreeRTOS AWS reference integrations use a small subset of the PKCS #11 API to, among other things, access the secret (private) key necessary to create a network connection that is authenticated and secured by the Transport Layer Security (TLS) protocol – without the application ever 'seeing' the key.

The Cryptoki or PKCS #11 standard defines a platform-independent API to manage and use cryptographic tokens. The name, "PKCS #11", is used interchangeably to refer to the API itself and the standard which defines it.

This repository contains a software based mock implementation of the PKCS #11 interface (API) that uses the cryptographic functionality provided by Mbed TLS. Using a software mock enables rapid development and flexibility, but it is expected that the mock be replaced by an implementation specific to your chosen secure key storage in production devices.

Only a subset of the PKCS #11 standard is implemented, with a focus on operations involving asymmetric keys, random number generation, and hashing.

The targeted use cases include certificate and key management for TLS authentication and code-sign signature verification, on small embedded devices.

corePKCS11 is implemented on PKCS #11 v2.4.0, the full PKCS #11 standard can be found on the oasis website.

This library has gone through code quality checks including verification that no function has a GNU Complexity score over 8, and checks against deviations from mandatory rules in the MISRA coding standard. Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from Coverity static analysis and validation of memory safety through the CBMC automated reasoning tool.

See memory requirements for this library *here*.

corePKCS11 v3.5.0 source code is part of the FreeRTOS 202210.00 LTS release.

corePKCS11 v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Purpose Generally vendors for secure cryptoprocessors such as Trusted Platform Module (TPM), Hardware Security Module (HSM), Secure Element, or any other type of secure hardware enclave, distribute a PKCS #11 implementation with the hardware. The purpose of the corePKCS11 software only mock library is therefore to provide a non hardware specific PKCS #11 implementation that allows for rapid prototyping and development before switching to a cryptoprocessor specific PKCS #11 implementation in production devices.

Since the PKCS #11 interface is defined as part of the PKCS #11 specification replacing this library with another implementation should require little porting effort, as the interface will not change. The system tests distributed in this repository can be leveraged to verify the behavior of a different implementation is similar to corePKCS11.

corePKCS11 Configuration The corePKCS11 library exposes preprocessor macros which must be defined prior to building the library. A list of all the configurations and their default values are defined in the doxygen documentation for this library.

Build Prerequisites

Library Usage For building the library the following are required:

- **A C99 compiler**
- **mbedcrypto** library from mbedtls version 2.x or 3.x.
- **pkcs11 API header(s)** available from OASIS or OpenSC

Optionally, variables from the pkcsFilePaths.cmake file may be referenced if your project uses cmake.

Integration and Unit Tests In order to run the integration and unit test suites the following are dependencies are necessary:

- **C Compiler**
- **CMake 3.13.0 or later**
- **Ruby 2.0.0 or later** required by CMock.
- **Python 3** required for configuring mbedtls.
- **git** required for fetching dependencies.
- **GNU Make** or **Ninja**

The *mbedtls*, *CMock*, and *Unity* libraries are downloaded and built automatically using the cmake FetchContent feature.

Coverage Measurement and Instrumentation The following software is required to run the coverage target:

- Linux, MacOS, or another POSIX-like environment.
- A recent version of **GCC** or **Clang** with support for gcov-like coverage instrumentation.
- **gcov** binary corresponding to your chosen compiler
- **lcov** from the Linux Test Project
- **perl** needed to run the lcov utility.

Coverage builds are validated on recent versions of Ubuntu Linux.

Running the Integration and Unit Tests

1. Navigate to the root directory of this repository in your shell.
2. Run **cmake** to construct a build tree: `cmake -S test -B build`
   - You may specify your preferred build tool by appending `-G'Unix Makefiles'` or `-GNinja` to the command above.
   - You may append `-DUNIT_TESTS=0` or `-DSYSTEM_TESTS=0` to disable Unit Tests or Integration Tests respectively.
3. Build the test binaries: `cmake --build ./build --target all`
4. Run `ctest --test-dir ./build` or `cmake --build ./build --target test` to run the tests without capturing coverage.
5. Run `cmake --build ./build --target coverage` to run the tests and capture coverage data.

CBMC To learn more about CBMC and proofs specifically, review the training material here.

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions here.

Reference examples The FreeRTOS-Labs repository contains demos using the PKCS #11 library here using FreeRTOS on the Windows simulator platform. These can be used as reference examples for the library API.

Porting Guide Documentation for porting corePKCS11 to a new platform can be found on the AWS docs web page.

corePKCS11 is not meant to be ported to projects that have a TPM, HSM, or other hardware for offloading crypto-processing. This library is specifically meant to be used for development and prototyping.

Related Example Implementations These projects implement the PKCS #11 interface on real hardware and have similar behavior to corePKCS11. It is preferred to use these, over corePKCS11, as they allow for offloading Cryptography to separate hardware.

- ARM's Platform Security Architecture.
- Microchip's cryptoauthlib.
- Infineon's Optiga Trust X.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C
FreeRTOS.org

Note that the latest included version of corePKCS11 may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Security See *CONTRIBUTING* for more information.

License This library is licensed under the MIT-0 License. See the LICENSE file.

4.1.9 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme

MCUXpresso SDK: FreeRTOS-Plus-TCP Library This repository is a fork of FreeRTOS-Plus-TCP library (https://github.com/FreeRTOS/freertos-plus-tcp)(4.3.3). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS-Plus-TCP repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(https://github.com/nxp-mcuxpresso/mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

FreeRTOS-Plus-TCP Library FreeRTOS-Plus-TCP is a lightweight TCP/IP stack for FreeRTOS. It provides a familiar Berkeley sockets interface, making it as simple to use and learn as possible. FreeRTOS-Plus-TCP's features and RAM footprint are fully scalable, making FreeRTOS-Plus-TCP equally applicable to smaller lower throughput microcontrollers as well as larger higher throughput microprocessors.

This library has undergone static code analysis and checks for compliance with the MISRA coding standard. Any deviations from the MISRA C:2012 guidelines are documented under MISRA Deviations. The library is validated for memory safety and data structure invariance through the CBMC automated reasoning tool for the functions that parse data originating from the network. The library is also protocol tested using Maxwell protocol tester for both IPv4 and IPv6.

FreeRTOS-Plus-TCP Library V4.2.2 source code is part of the FreeRTOS 202406.01 LTS release.

Getting started The easiest way to use version 4.0.0 and later of FreeRTOS-Plus-TCP is to refer the Getting started Guide (found here) Another way is to start with the pre-configured IPv4 Windows Simulator demo (found in this directory) or IPv6 Multi-endpoint Windows Simulator demo (found in this directory). That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the FreeRTOS Kernel Quick Start Guide for detailed instructions and other useful links.

Additionally, for FreeRTOS-Plus-TCP source code organization refer to the Documentation, and API Reference.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the FreeRTOS Community Support Forum. Please also refer to FAQ for frequently asked questions.

Also see the Submitting a bugs/feature request section of CONTRIBUTING.md for more details.

Note: All the remaining sections are generic and applies to all the versions from V3.0.0 onwards.

Upgrading to V4.3.0 and above For users of STM32 network interfaces:

Starting from version V4.3.0, the STM32 network interfaces have been consolidated into a single unified implementation located at source/portable/NetworkInterface/STM32/NetworkInterface.c, supporting STM32 F4, F7, and H7 series microcontrollers, with newly added support for STM32 H5. The new interface has been tested with the STM32 HAL Ethernet (ETH) drivers, available at source/portable/NetworkInterface/STM32/Drivers. For compatibility, the legacy interfaces (STM32Fxx and STM32Hxx) have been retained and relocated to source/portable/NetworkInterface/STM32/Legacy.

Upgrading to V3.0.0 and V3.1.0 In version 3.0.0 or 3.1.0, the folder structure of FreeRTOS-Plus-TCP has changed and the files have been broken down into smaller logically separated modules. This change makes the code more modular and conducive to unit-tests. FreeRTOS-Plus-TCP V3.0.0 improves the robustness, security, and modularity of the library. Version 3.0.0 adds comprehensive unit test coverage for all lines and branches of code and has undergone protocol testing, and penetration testing by AWS Security to reduce the exposure to security vulnerabilities. Additionally, the source files have been moved to a source directory. This change requires modification of any existing project(s) to include the modified source files and directories.

FreeRTOS-Plus-TCP V3.1.0 source code(.c .h) is part of the FreeRTOS 202210.00 LTS release.

Generating pre V3.0.0 folder structure for backward compatibility: If you wish to continue using a version earlier than V3.0.0 i.e. continue to use your existing source code organization, a script is provided to generate the folder structure similar to this.

Note: After running the script, while the .c files will have same names as the pre V3.0.0 source, the files in the include directory will have different names and the number of files will differ as well. This should, however, not pose any problems to most projects as projects generally include all files in a given directory.

Running the script to generate pre V3.0.0 folder structure: For running the script, you will need Python version > 3.7. You can download/install it from here.

Once python is downloaded and installed, you can verify the version from your terminal/command window by typing python --version.

To run the script, you should switch to the FreeRTOS-Plus-TCP directory Then run python <Path/to/the/script>/GenerateOriginalFiles.py.

To consume FreeRTOS+TCP

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_plus_tcp
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
```

(continues on next page)

(continued from previous page)

```
  GIT_SUBMODULES "" # Don't grab any submodules since not latest
)
```

- Configure the FreeRTOS-Kernel and make it available
  - this particular example supports a native and cross-compiled build option.

```
# Select the native compile PORT
set( FREERTOS_PLUS_TCP_NETWORK_IF "POSIX" CACHE STRING "" FORCE)
# Or: select a cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  # Eg. STM32Hxx version of port
  set(FREERTOS_PLUS_TCP_NETWORK_IF "STM32HXX" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_plus_tcp)
```

Consuming stand-alone This repository uses Git Submodules to bring in dependent components.

Note: If you download the ZIP file provided by GitHub UI, you will not get the contents of the submodules. (The ZIP file is also not a valid Git repository)

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel
```

Porting The porting guide is available on this page.

Repository structure This repository contains the FreeRTOS-Plus-TCP repository and a number of supplementary libraries for testing/PR Checks. Below is the breakdown of what each directory contains:

- tools
  - This directory contains the tools and related files (CMock/uncrustify) required to run tests/checks on the TCP source code.
- tests
  - This directory contains all the tests (unit tests and CBMC) and the dependencies (FreeRTOS-Kernel/Litani-port) the tests require.
- source/portable
  - This directory contains the portable files required to compile the FreeRTOS-Plus-TCP source code for different hardware/compilers.
- source/include
  - The include directory has all the 'core' header files of FreeRTOS-Plus-TCP source.
- source

– This directory contains all the [.c] source files.

Note At this time it is recommended to use BufferAllocation_2.c in which case it is essential to use the heap_4.c memory allocation scheme. See memory management.

Kernel sources The FreeRTOS Kernel Source is in FreeRTOS/FreeRTOS-Kernel repository, and it is consumed by testing/PR checks as a submodule in this repository.

The version of the FreeRTOS Kernel Source in use could be accessed at ./test/FreeRTOS-Kernel directory.

CBMC The test/cbmc/proofs directory contains CBMC proofs.

To learn more about CBMC and proofs specifically, review the training material here.

In order to run these proofs you will need to install CBMC and other tools by following the instructions here.