



MCUXpresso SDK Documentation

Release 25.12.00



NXP
Dec 18, 2025



Table of contents

1	FRDM-K32L3A6	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	58
1.3.1	Getting Started with MCUXpresso SDK Repository	58
1.4	Release Notes	65
1.4.1	MCUXpresso SDK Release Notes	65
1.5	ChangeLog	69
1.5.1	MCUXpresso SDK Changelog	69
1.6	Driver API Reference Manual	156
1.7	Middleware Documentation	157
1.7.1	Multicore	157
1.7.2	FreeMASTER	157
1.7.3	FreeRTOS	157
1.7.4	File systemFatfs	157
2	K32L3A60	159
2.1	CACHE: LPCAC CACHE Memory Controller	159
2.2	CACHE: LPLMEM CACHE Memory Controller	160
2.3	CAU3	161
2.4	CAU3 AES driver	165
2.5	CAU3 Blob driver	166
2.6	CAU3 CHACHA20_POLY1305 driver	167
2.7	CAU3 TDES driver	168
2.8	CAU3 HASH driver	170
2.9	CAU3 PKHA driver	171
2.10	Clock Driver	182
2.11	CRC: Cyclic Redundancy Check Driver	203
2.12	DAC: Digital-to-Analog Converter Driver	206
2.13	DMAMUX: Direct Memory Access Multiplexer Driver	211
2.14	eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver	212
2.15	EWM: External Watchdog Monitor Driver	232
2.16	FGPIO Driver	235
2.17	C90TFS Flash Driver	237
2.18	FlexBus: External Bus Interface Driver	237
2.19	FlexIO: FlexIO Driver	242
2.20	FlexIO Driver	242
2.21	FlexIO eDMA I2S Driver	259
2.22	FlexIO eDMA SPI Driver	263
2.23	FlexIO eDMA UART Driver	266
2.24	FlexIO I2C Master Driver	269
2.25	FlexIO I2S Driver	278
2.26	FlexIO SPI Driver	288
2.27	FlexIO UART Driver	301
2.28	ftfx adapter	312

2.29	Ftftx CACHE Driver	312
2.30	ftfx controller	313
2.31	ftfx feature	330
2.32	Ftftx FLASH Driver	331
2.33	Ftftx FLEXNVM Driver	344
2.34	ftfx utilities	355
2.35	GPIO: General-Purpose Input/Output Driver	356
2.36	GPIO Driver	357
2.37	INTMUX: Interrupt Multiplexer Driver	359
2.38	Common Driver	361
2.39	Lin_lpuart_driver	373
2.40	LLWU: Low-Leakage Wakeup Unit Driver	381
2.41	LPADC: 12-bit SAR Analog-to-Digital Converter Driver	385
2.42	LPCMP: Low Power Analog Comparator Driver	404
2.43	LPI2C: Low Power Inter-Integrated Circuit Driver	413
2.44	LPI2C Master Driver	414
2.45	LPI2C Master DMA Driver	429
2.46	LPI2C Slave Driver	431
2.47	LPIT: Low-Power Interrupt Timer	442
2.48	LPSPi: Low Power Serial Peripheral Interface	448
2.49	LPSPi Peripheral driver	448
2.50	LPSPi eDMA Driver	470
2.51	LPTMR: Low-Power Timer	477
2.52	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	482
2.53	LPUART Driver	482
2.54	LPUART eDMA Driver	501
2.55	MMDVSQ: Memory-Mapped Divide and Square Root	504
2.56	MSCM: Miscellaneous System Control	506
2.57	MSMC: Multicore System Mode Controller	506
2.58	MU: Messaging Unit	516
2.59	PORT: Port Control and Interrupts	524
2.60	RTC: Real Time Clock	531
2.61	SAI: Serial Audio Interface	539
2.62	SAI Driver	539
2.63	SAI EDMA Driver	565
2.64	SEMA42: Hardware Semaphores Driver	572
2.65	SIM: System Integration Module Driver	575
2.66	Smart Card	577
2.67	Smart Card EMVSIM Driver	585
2.68	Smart Card PHY Driver	588
2.69	Smart Card PHY EMVSIM Driver	589
2.70	Smart Card PHY TDA8035 Driver	589
2.71	SPM: System Power Manager	589
2.72	TPM: Timer PWM Module	604
2.73	TRGMUX: Trigger Mux Driver	620
2.74	TRNG: True Random Number Generator	621
2.75	TSTMR: Timestamp Timer Driver	626
2.76	USDHC: Ultra Secured Digital Host Controller Driver	627
2.77	VREF: Voltage Reference Driver	656
2.78	WDOG32: 32-bit Watchdog Timer	660
2.79	XRDC: Extended Resource Domain Controller	666
3	Middleware	687
3.1	File System	687
3.1.1	FatFs	687
3.2	Motor Control	689
3.2.1	FreeMASTER	689
3.3	MultiCore	726

3.3.1	Multicore SDK	726
4	RTOS	825
4.1	FreeRTOS	825
4.1.1	FreeRTOS kernel	825
4.1.2	FreeRTOS drivers	825
4.1.3	backoffalgorithm	825
4.1.4	corehttp	825
4.1.5	corejson	825
4.1.6	coremqtt	826
4.1.7	corepkcs11	826
4.1.8	freertos-plus-tcp	826

This documentation contains information specific to the frdmk32l3a6 board.

Chapter 1

FRDM-K32L3A6

1.1 Overview

The NXP FRDM-K32L3A6 is a development board for the Kinetis K32L3A60 72 MHz 32-bit ARM Cortex-M4 and ARM Cortex-M0P MCUs



MCU device and part on board is shown below:

- Device: K32L3A60
- PartNumber: K32L3A60VPJ1A

1.2 Getting Started with MCUXpresso SDK Package

1.2.1 Getting Started with MCUXpresso SDK Package

Starting with version 25.09.00, MCUXpresso SDK introduced two package versions for offline development:

- **Classic SDK Package:** Traditional board-specific packages with pre-configured IDE projects for MCUXpresso IDE, IAR, Keil, and other toolchains.
- **Repository-Layout SDK Package:** Board-specific packages that maintain the same structure and build system as the GitHub Repository SDK, providing offline access to the repository SDK development experience. Available when selecting the ARMGCC toolchain.

From version 25.12.00 onward:

- When you select ARMGCC, the SDK download will use the Repository-Layout version.
- For all other toolchains, the SDK download will remain in the Classic version.


Note: The Repository-Layout SDK package was first introduced in version 25.09.00, but initially only for MCXW23x platforms.

Classic SDK Package

Overview The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN).

For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

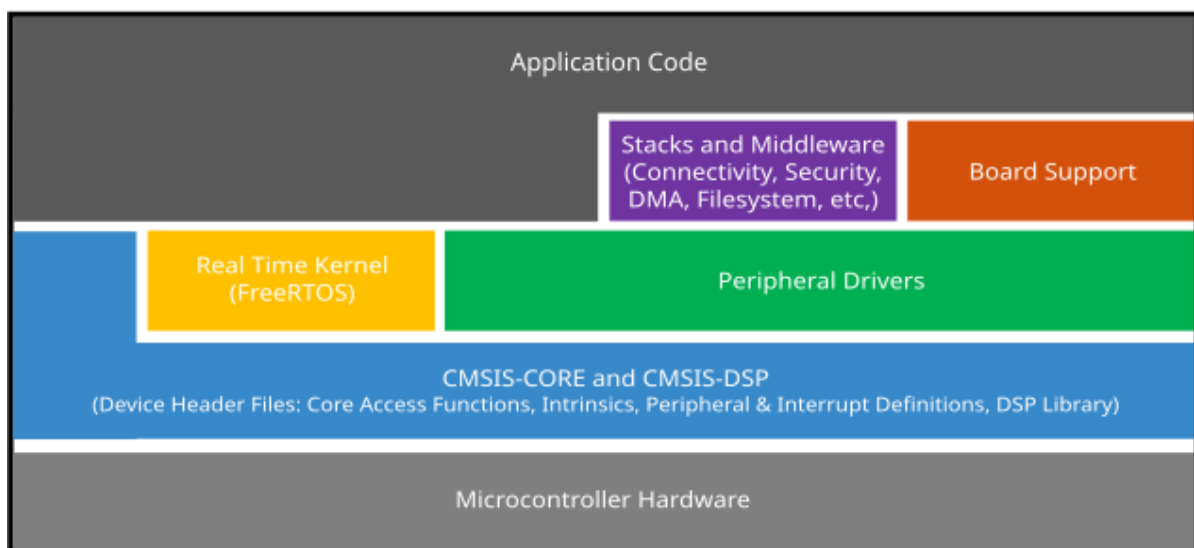


MCUXpresso SDK board support package folders MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):

- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.
- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` example (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

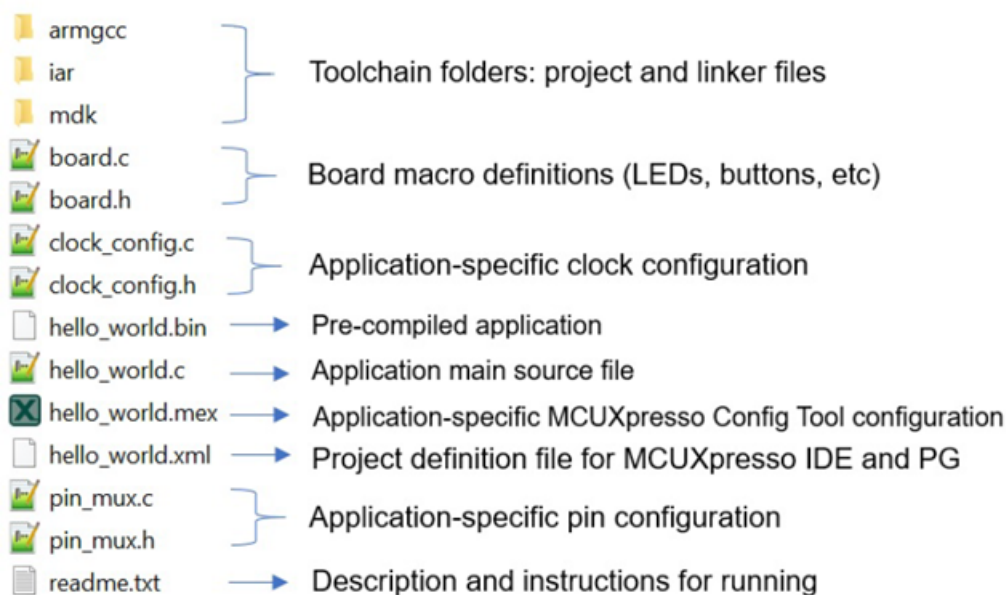

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications
- `devices/<device_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the

rtos folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.


Run a demo using MCUXpresso IDE **Note:** Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.

This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

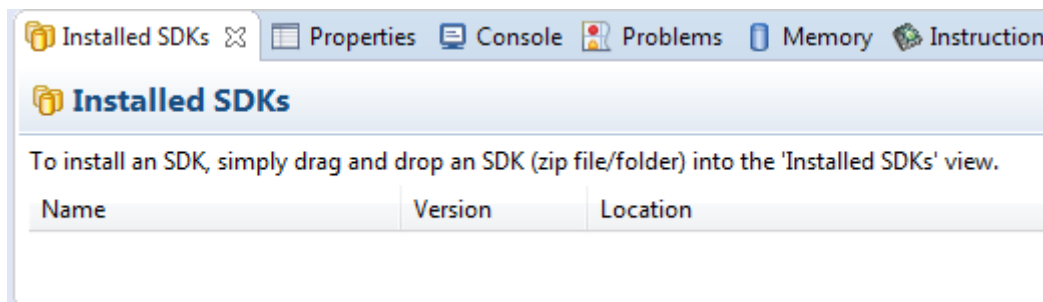

2. On the **Quickstart Panel**, click **Import SDK example(s)...**

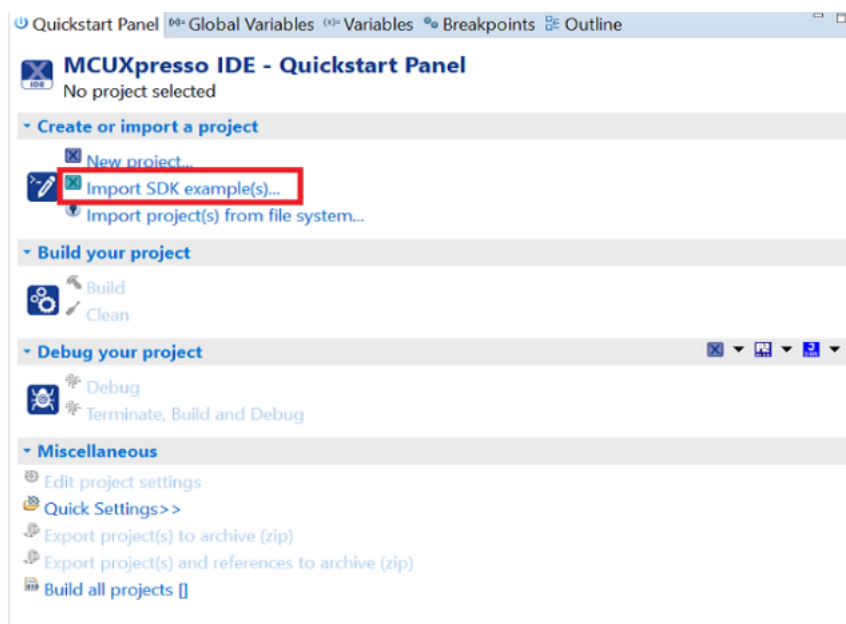

3. Expand the `demo_apps` folder and select `hello_world`.

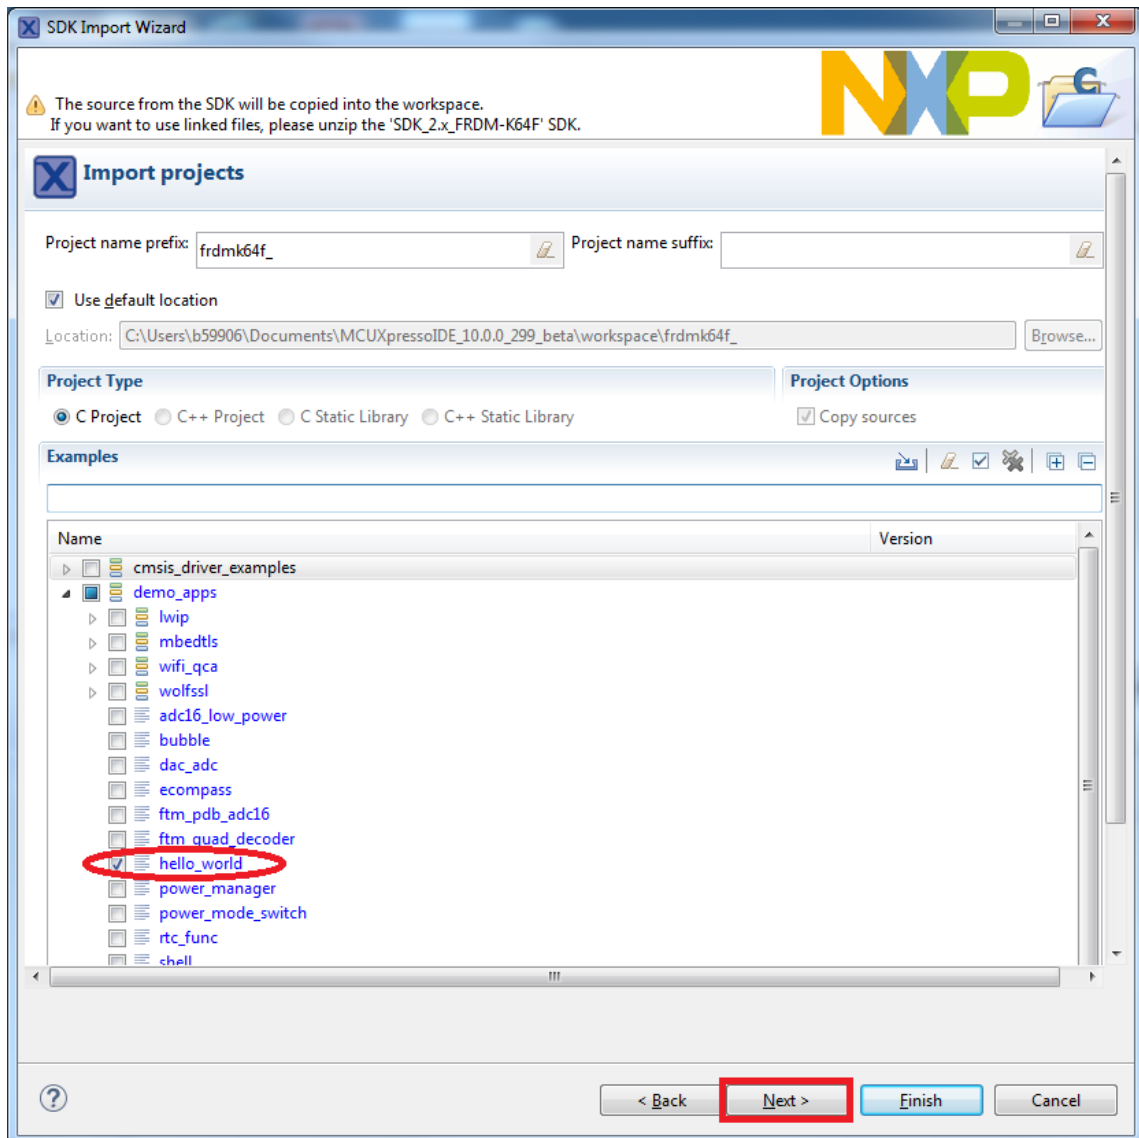4. Click **Next**.


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.

To download and run the application, perform the following steps:


1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)

2. No parity
3. 8 data bits

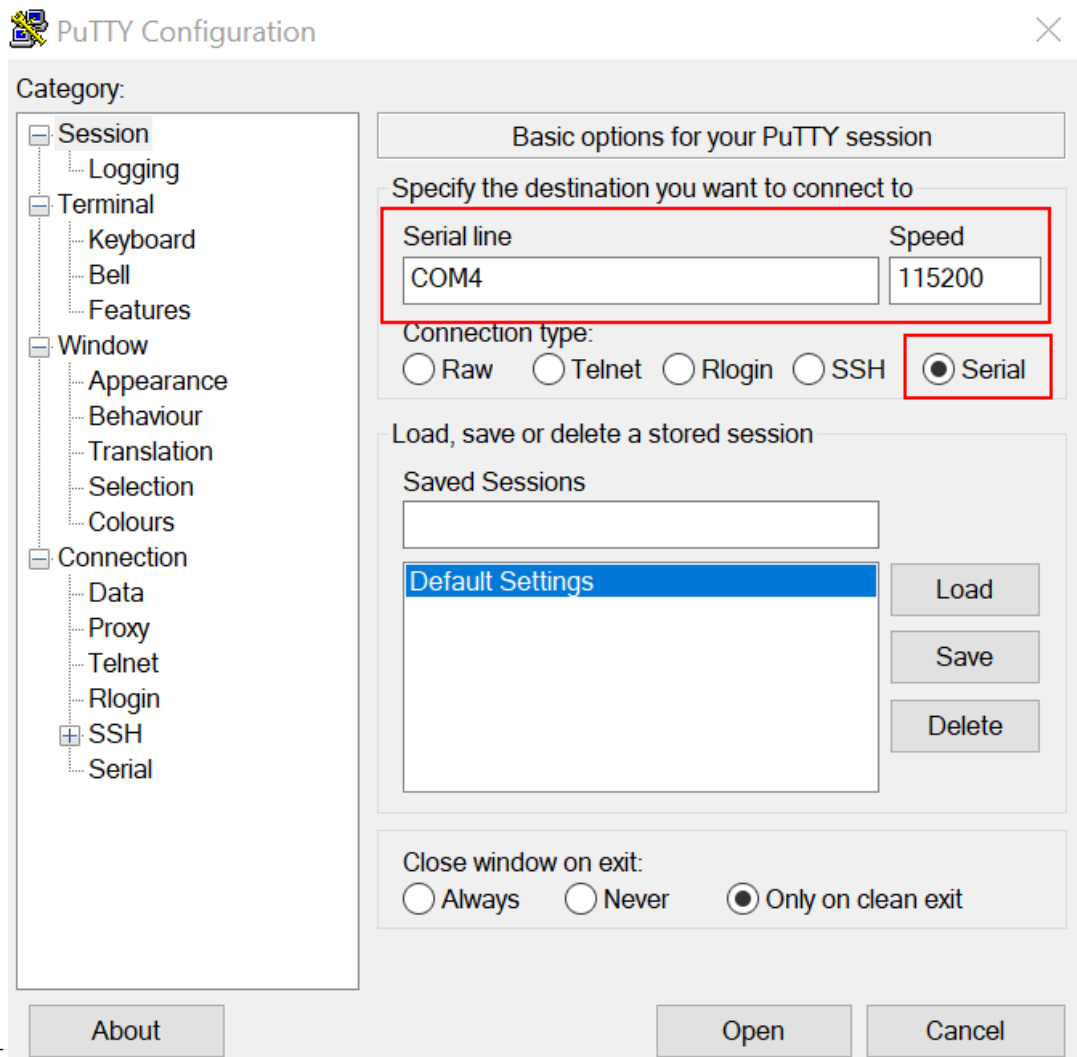

4. 1 stop bit

4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

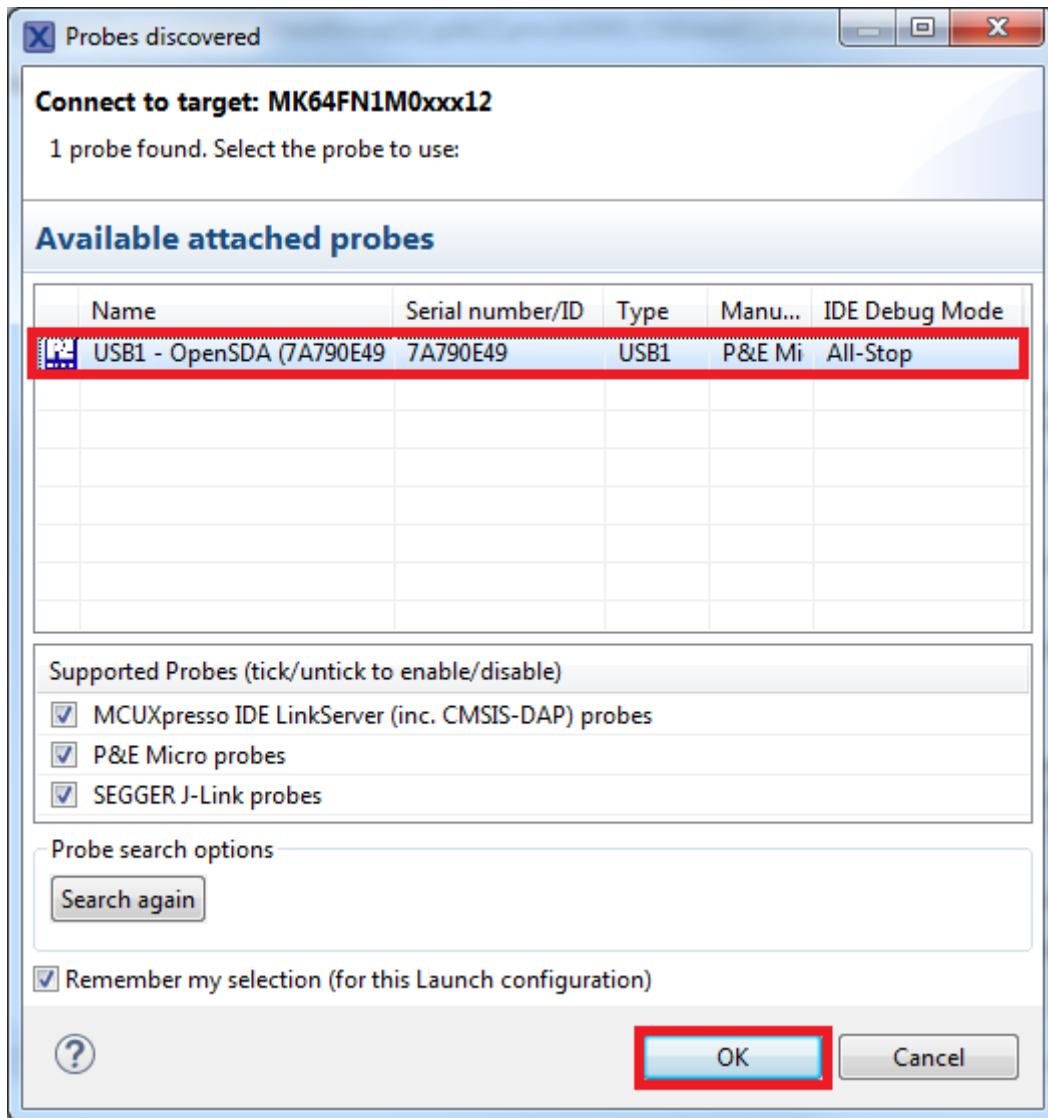

- The application is downloaded to the target and automatically runs to `main()`.
- Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

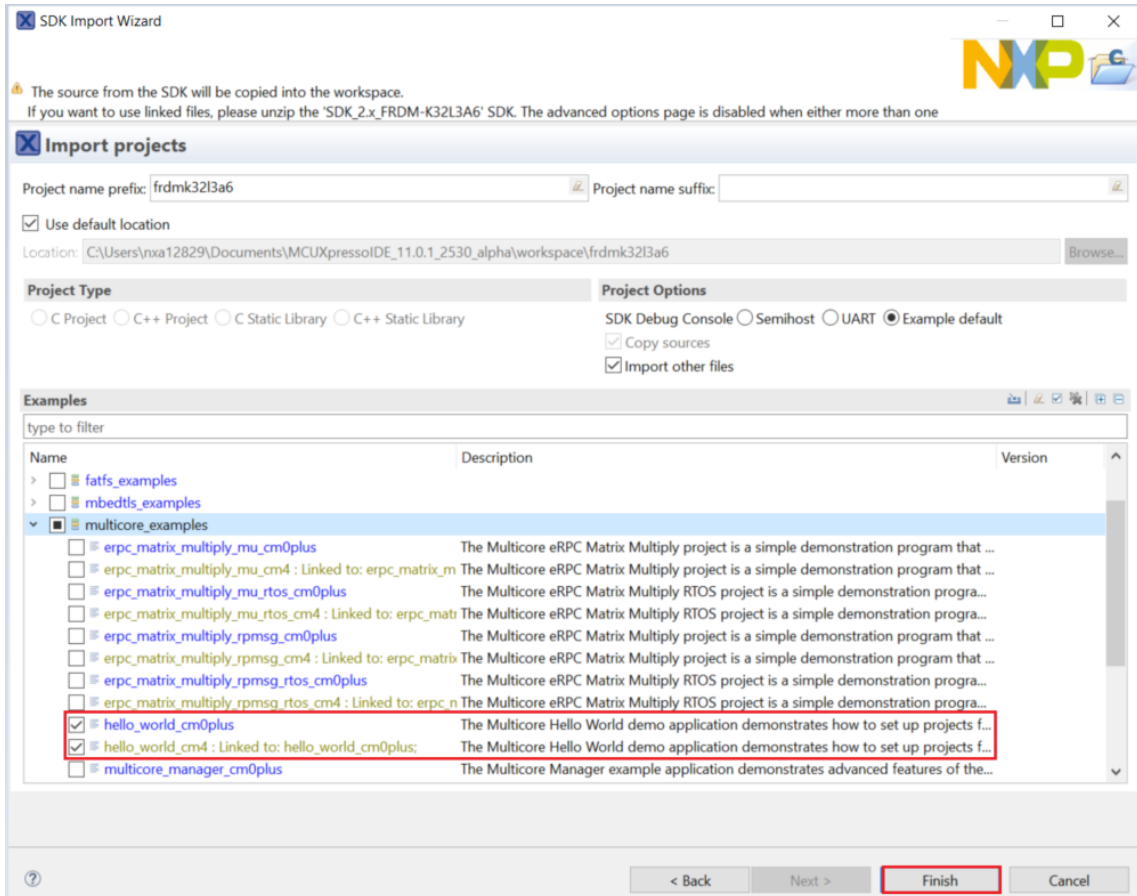


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

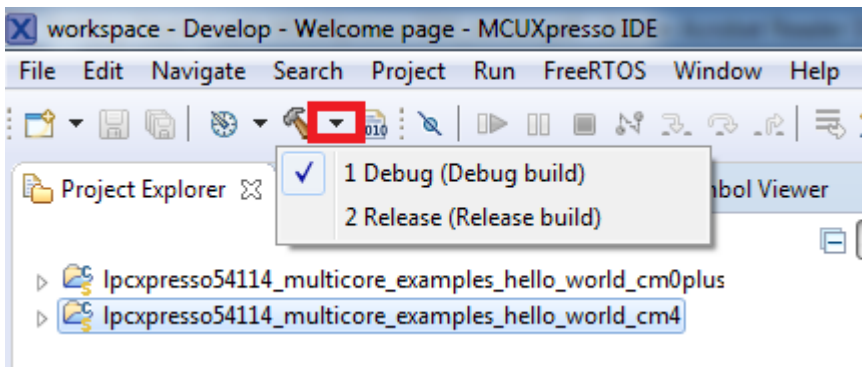




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations** -> **Set Active** -> **Release**. This alternate navigation using the menu item is **Project** -> **Build Configuration** -> **Set Active** -> **Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

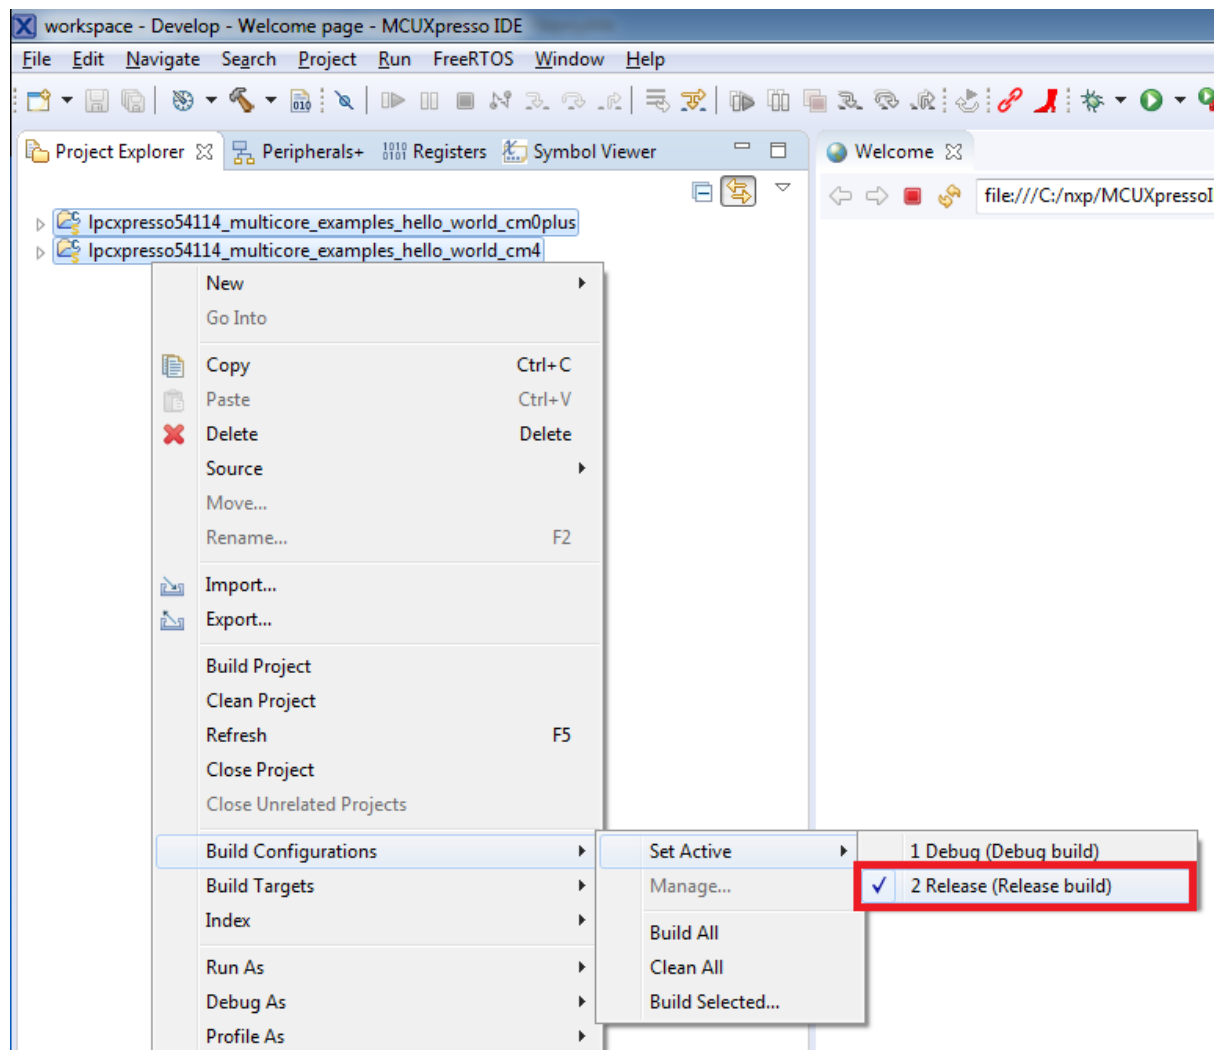


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

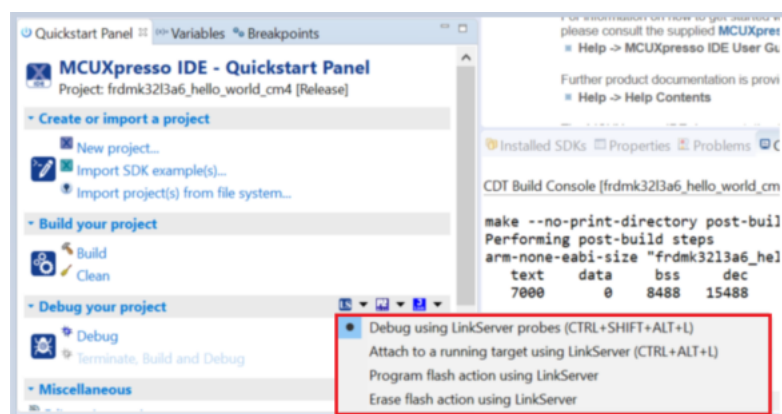

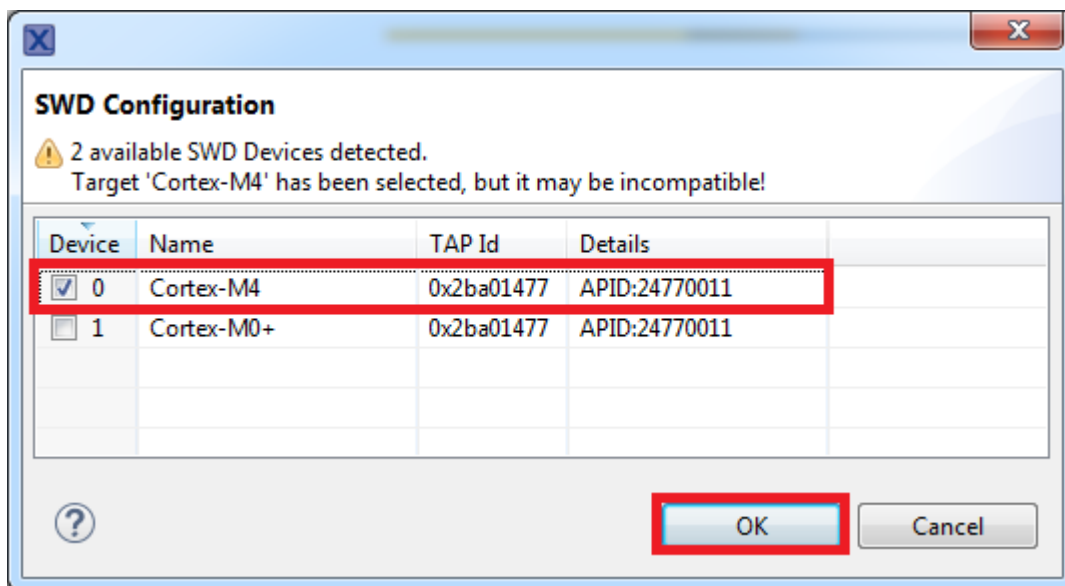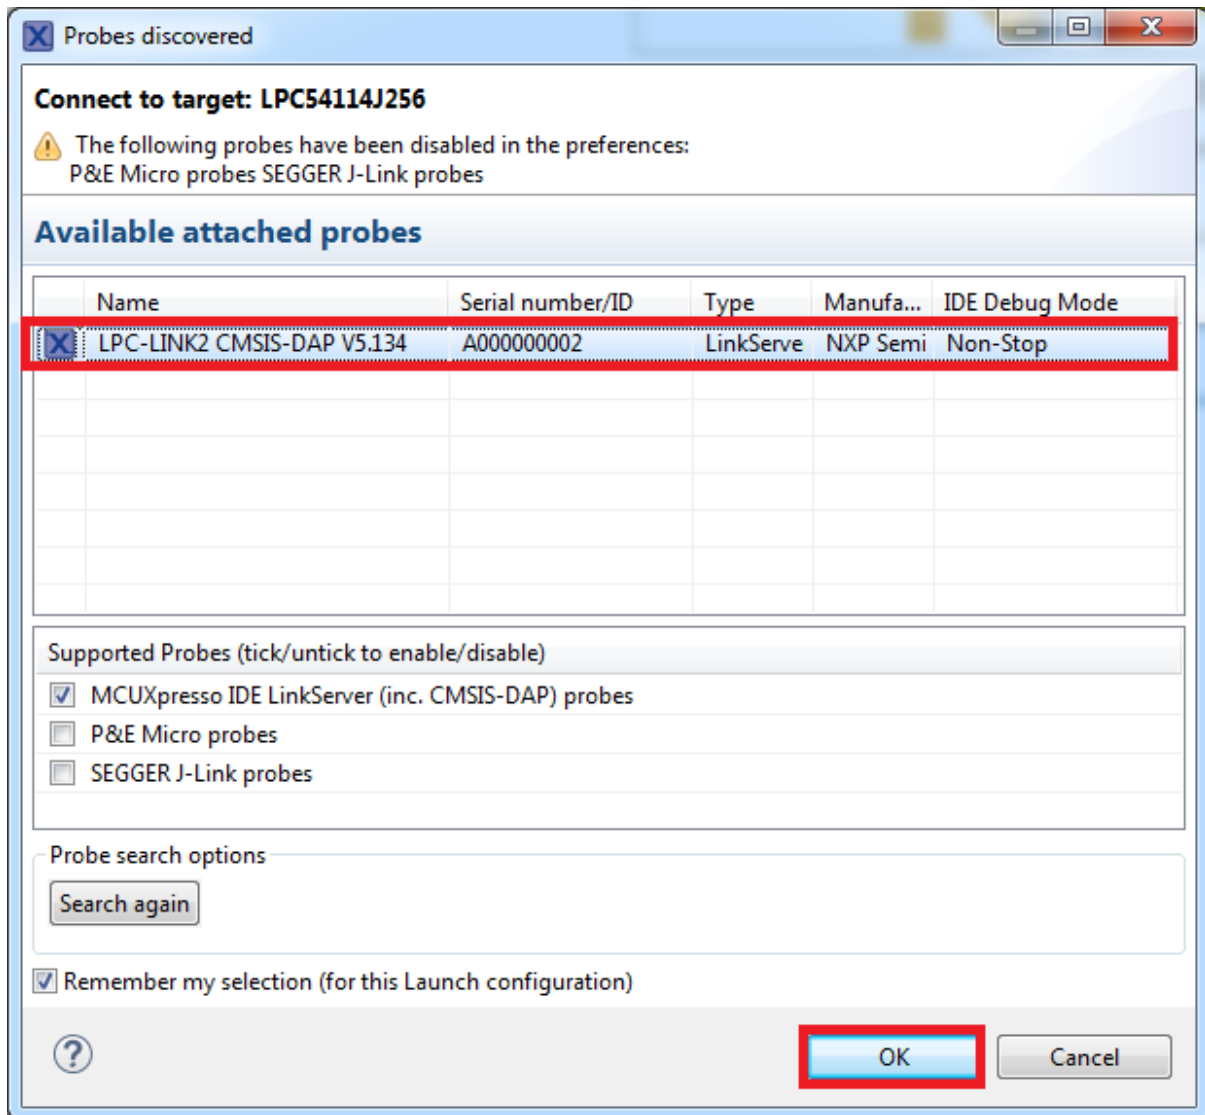

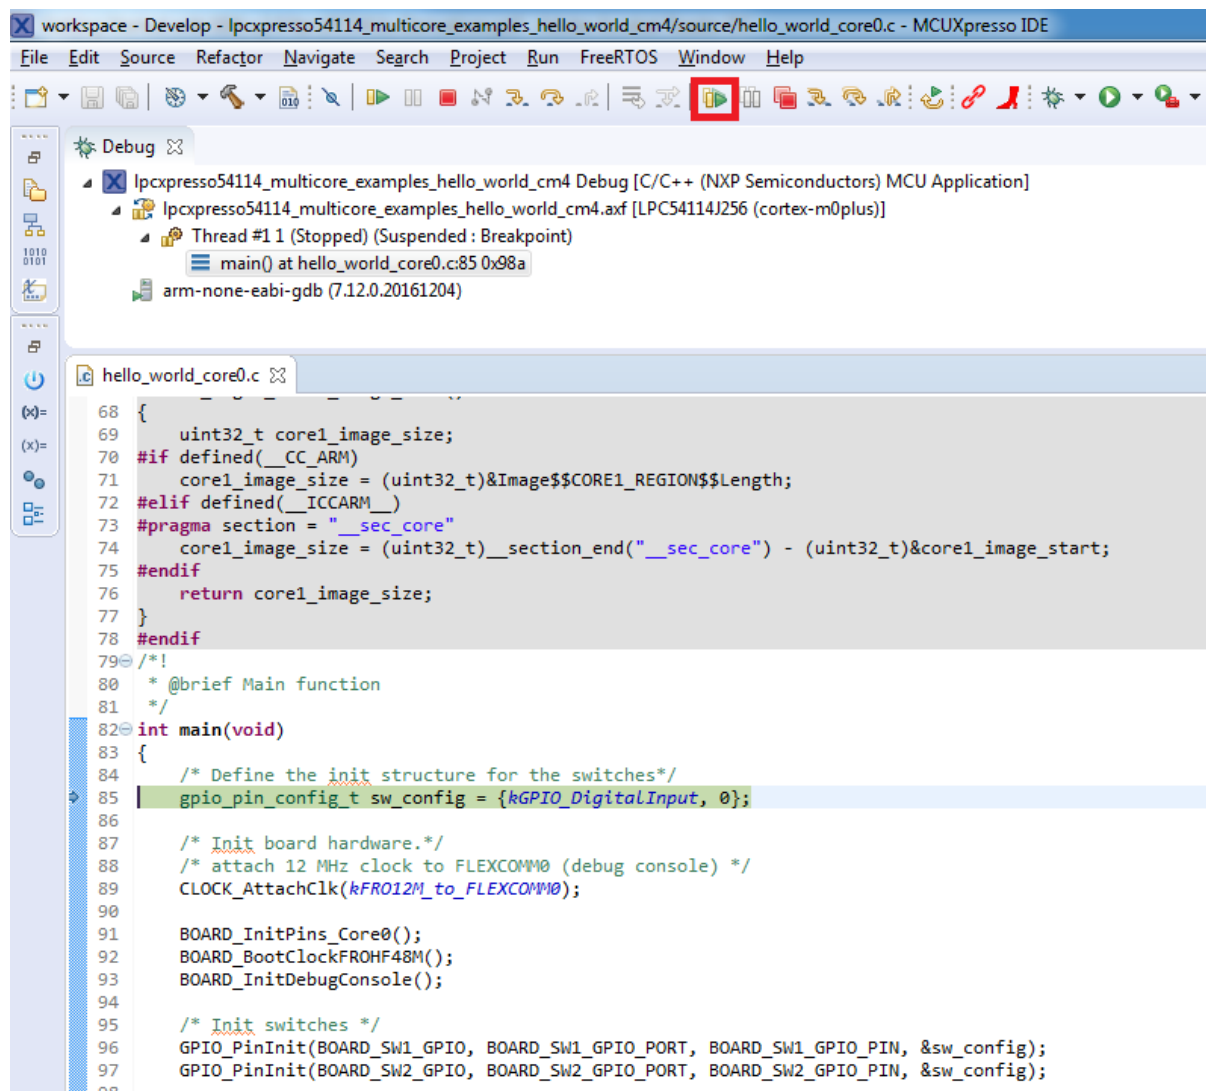



After clicking the “Resume All Debug sessions” button, the `hello_world` multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

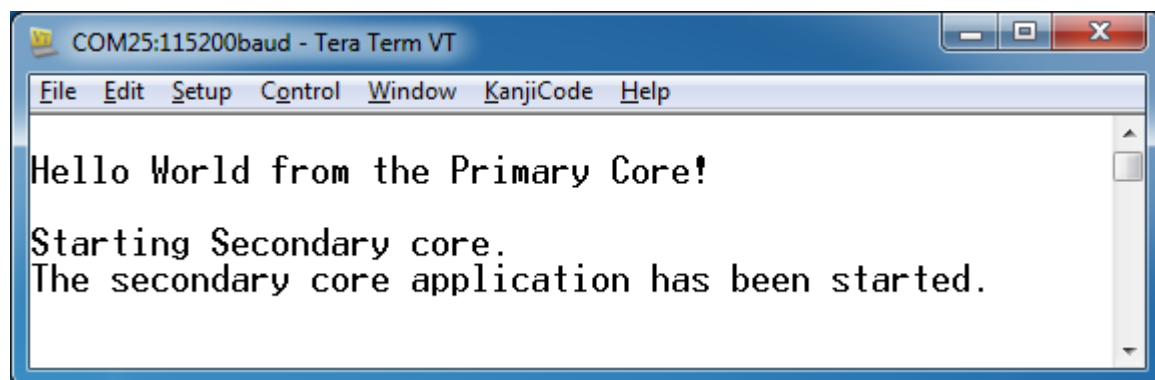


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the `lpcxpresso54114_multicore_examples_hello_world_cm0plus` project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

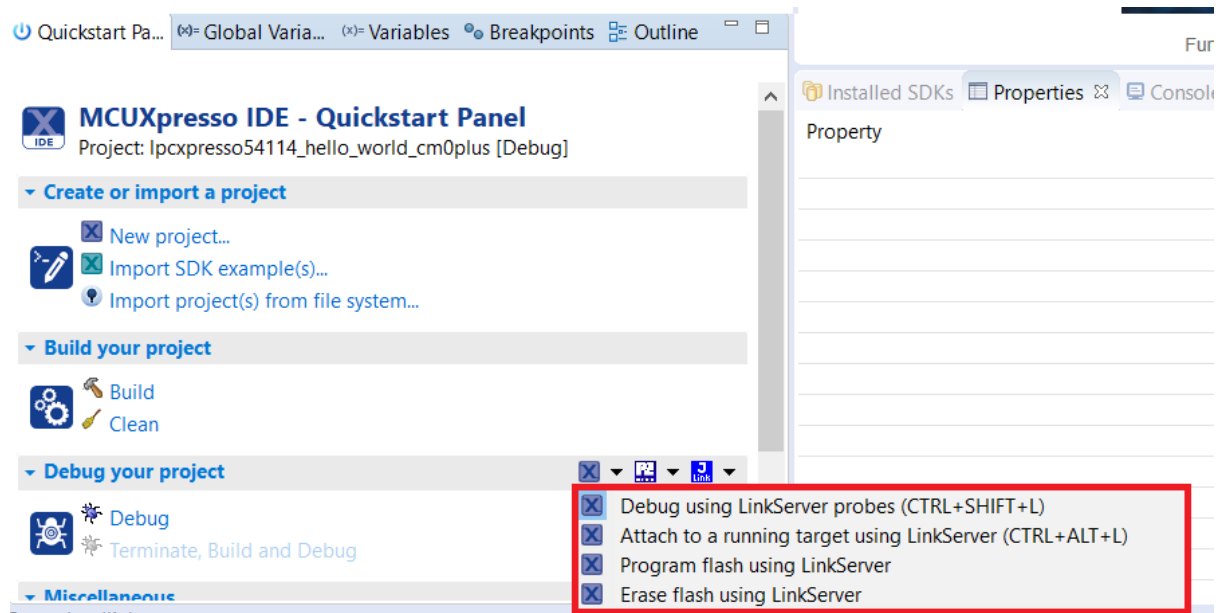


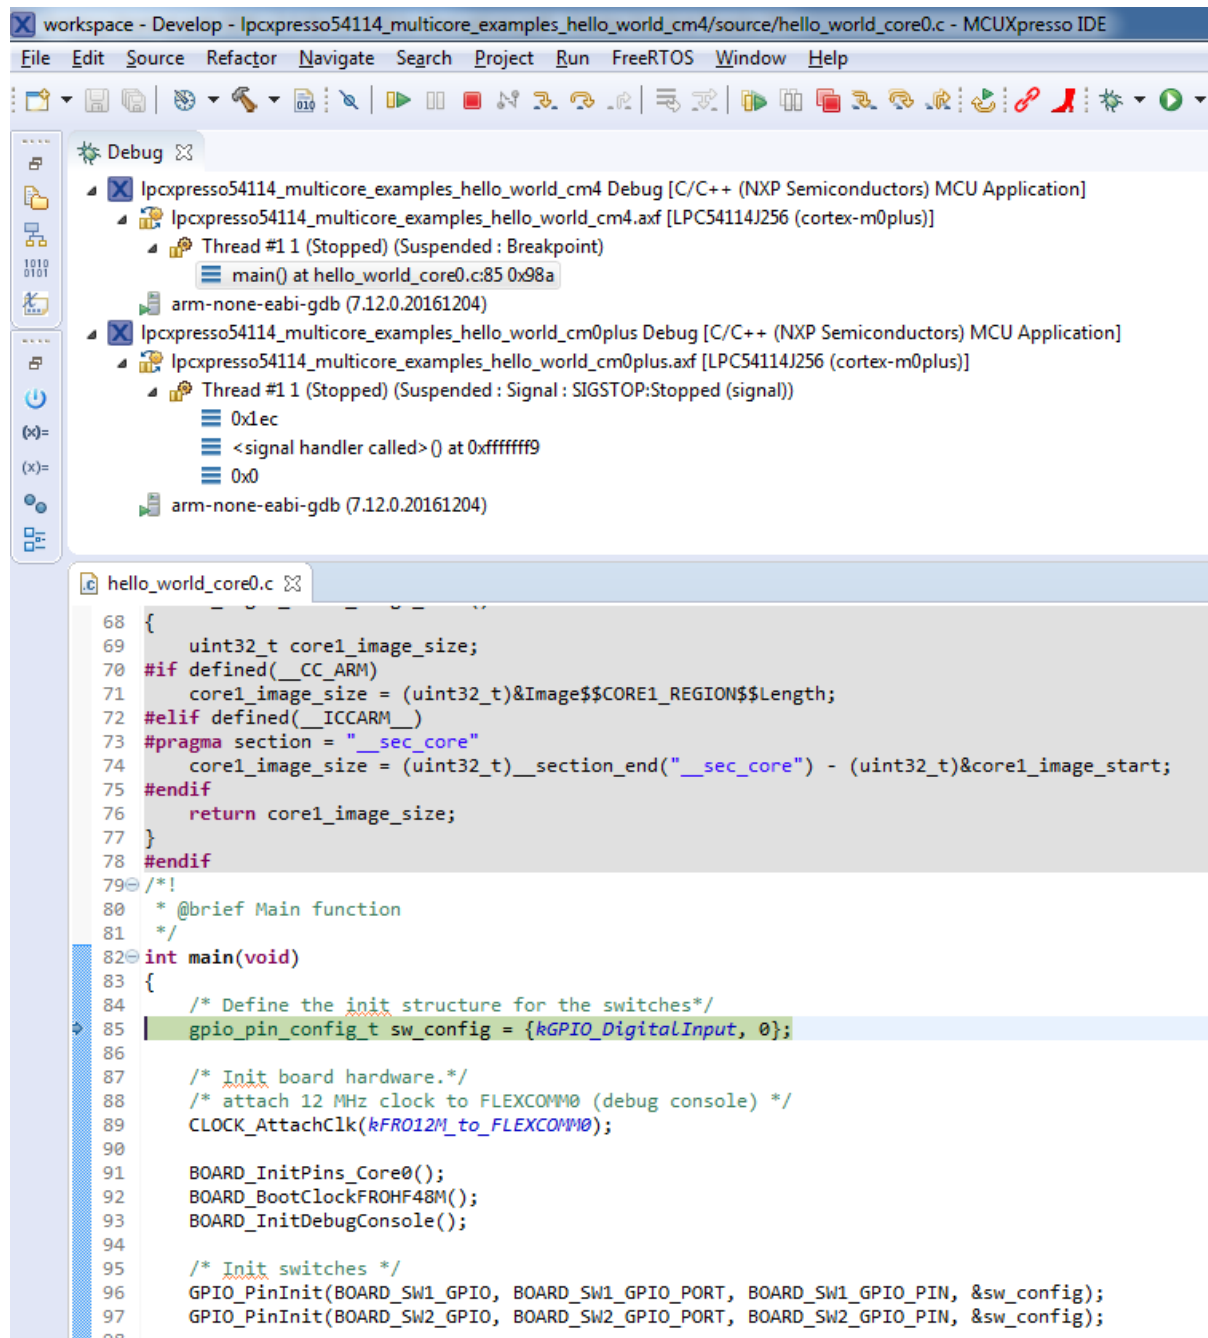


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

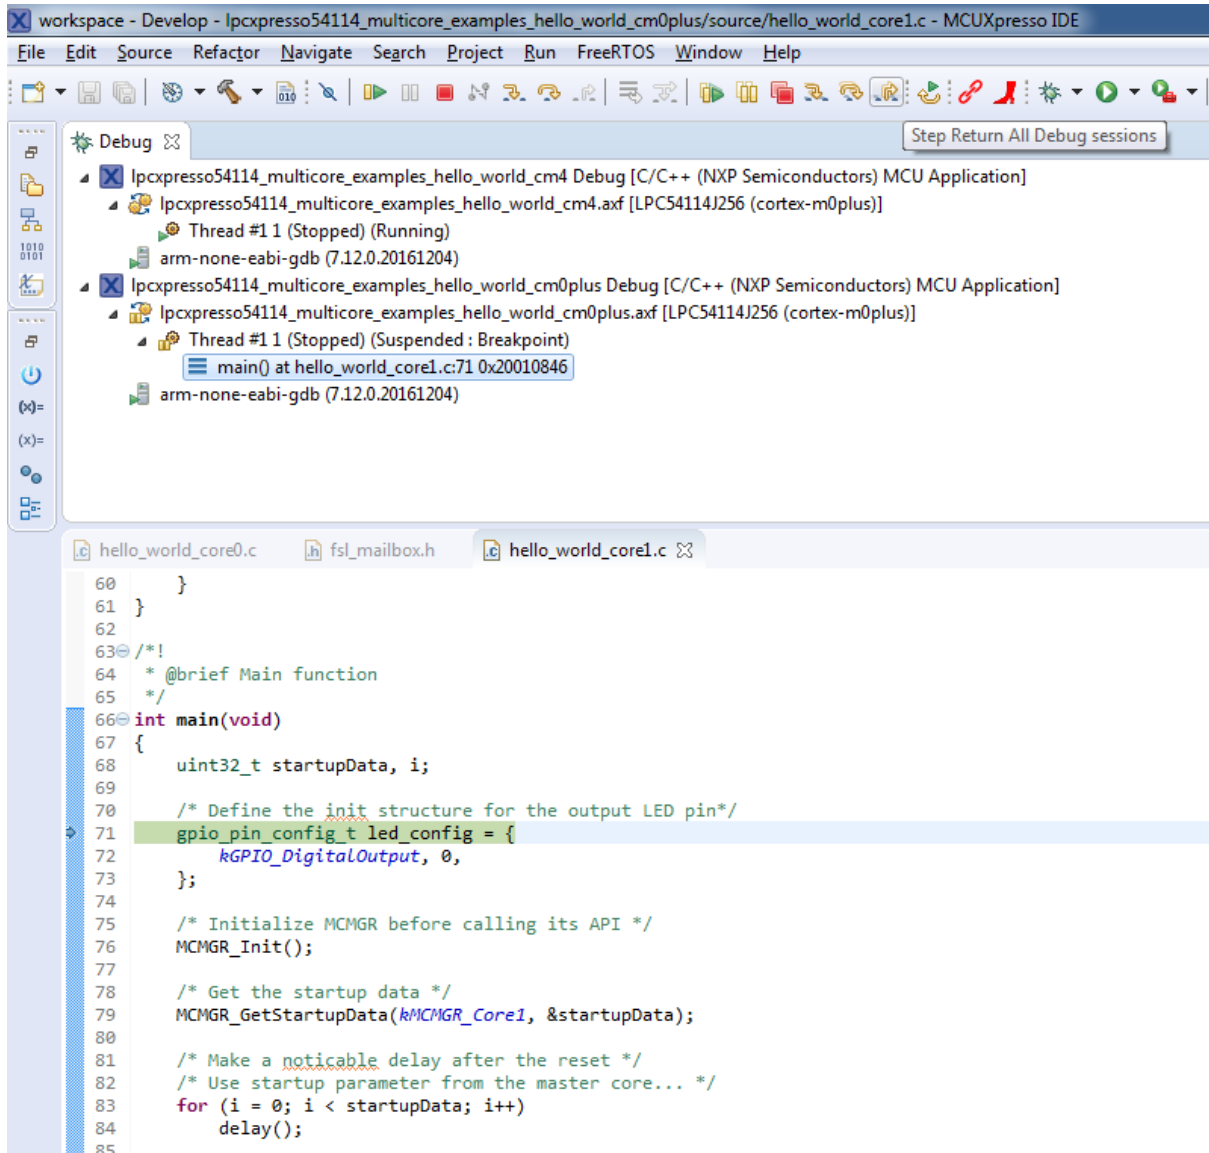


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

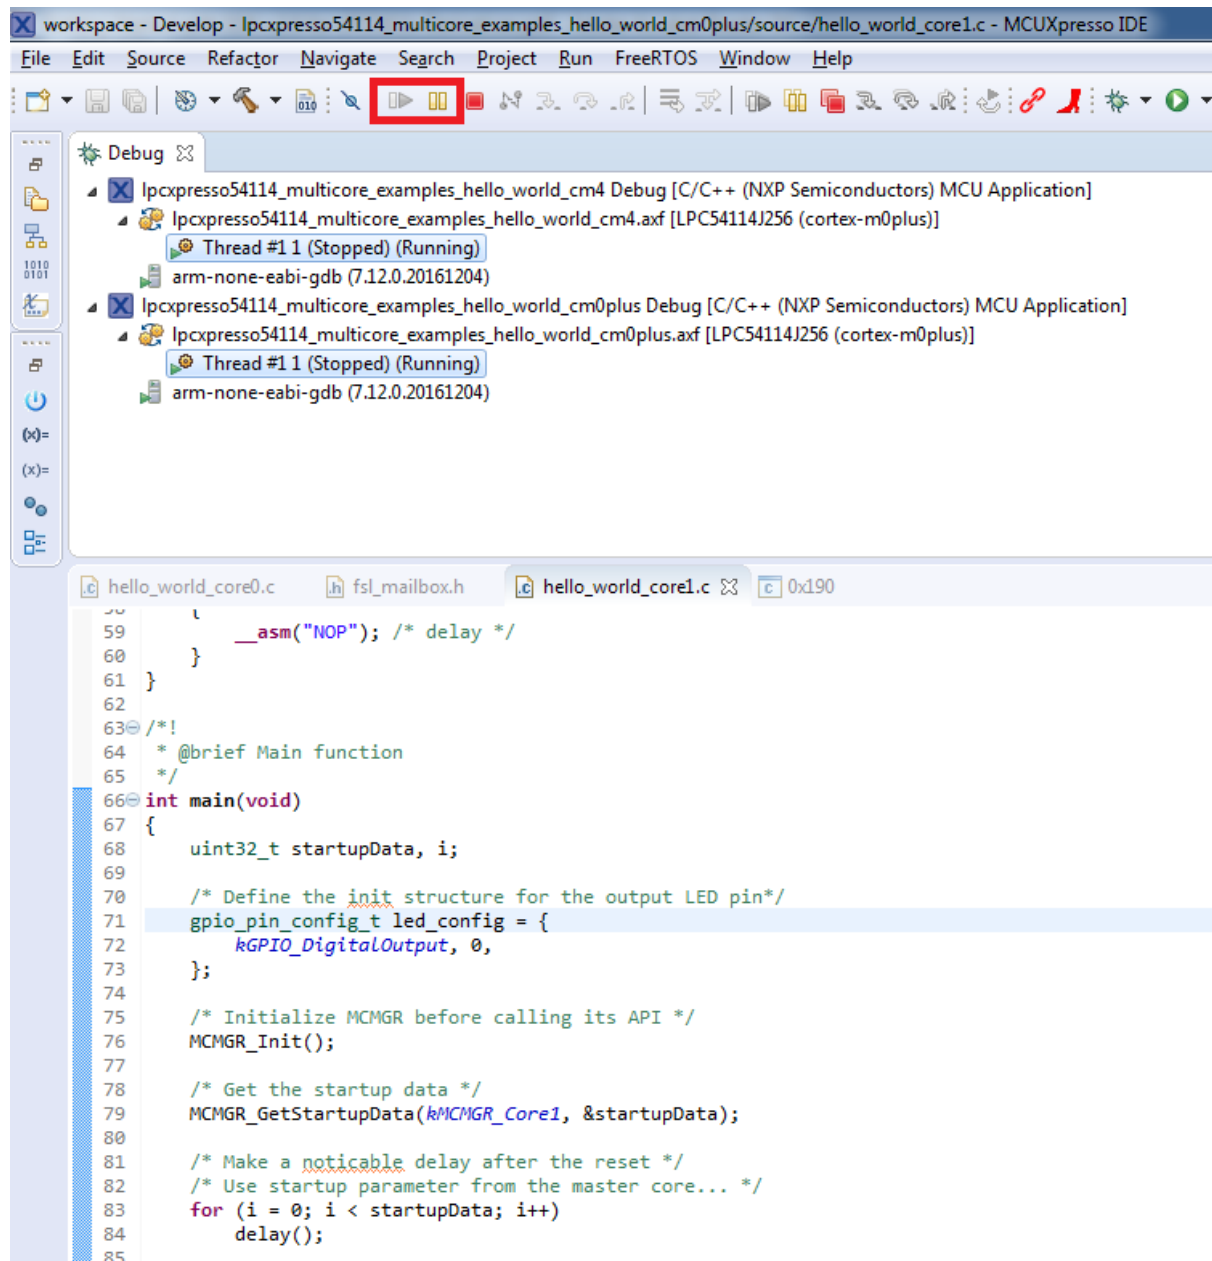

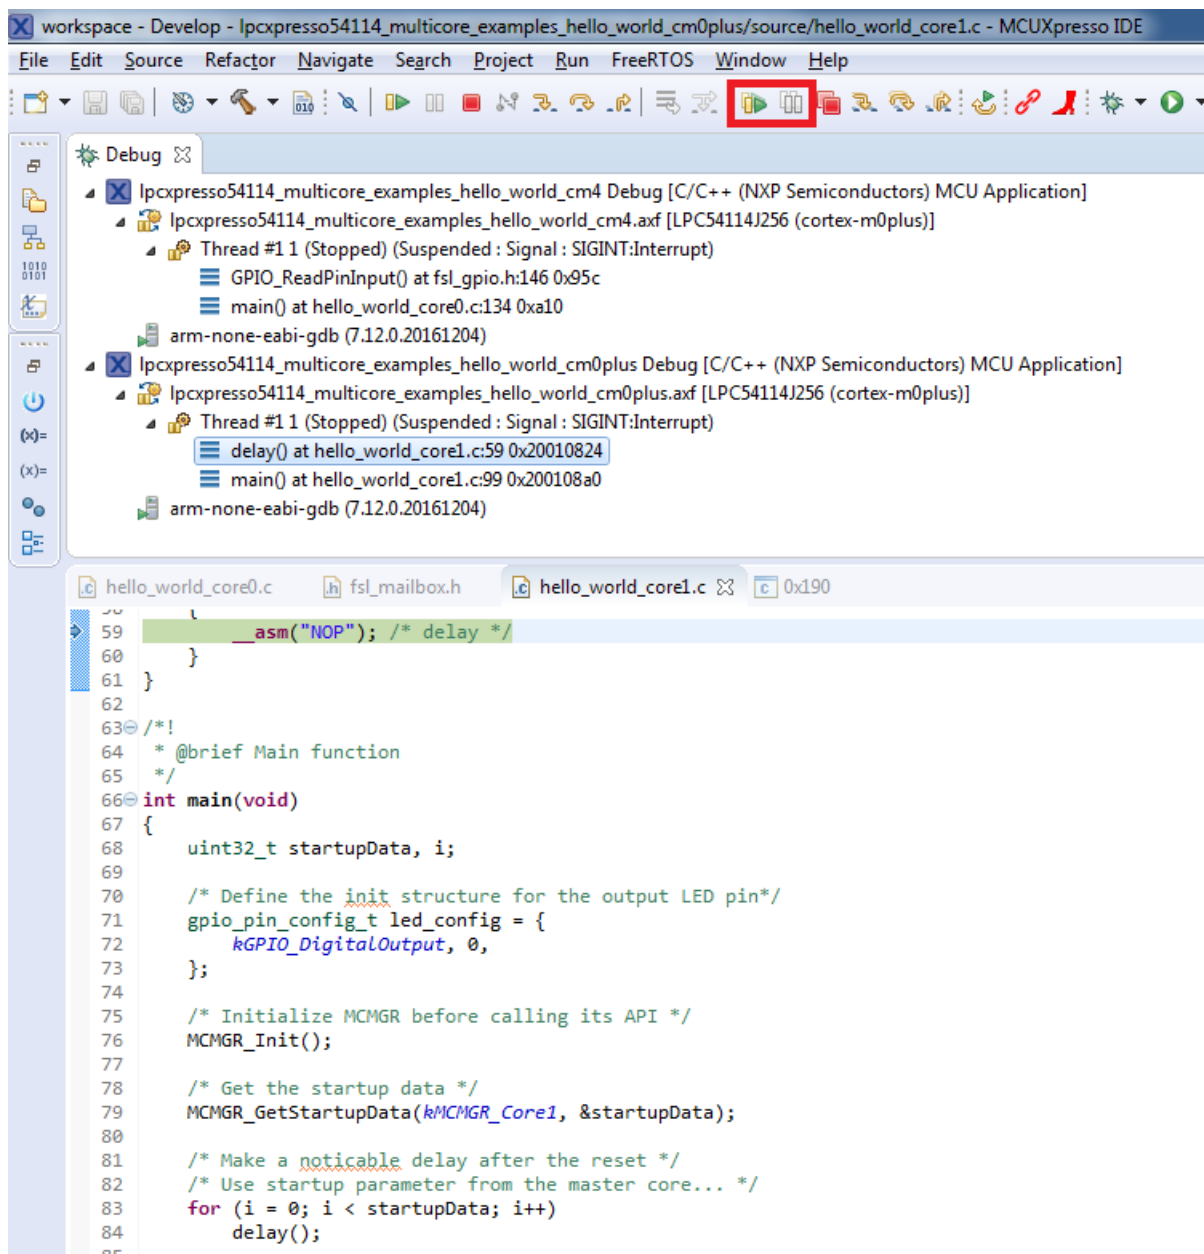


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the `hello_world` example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the `trustzone_examples/` folder and select `hello_world_s`. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

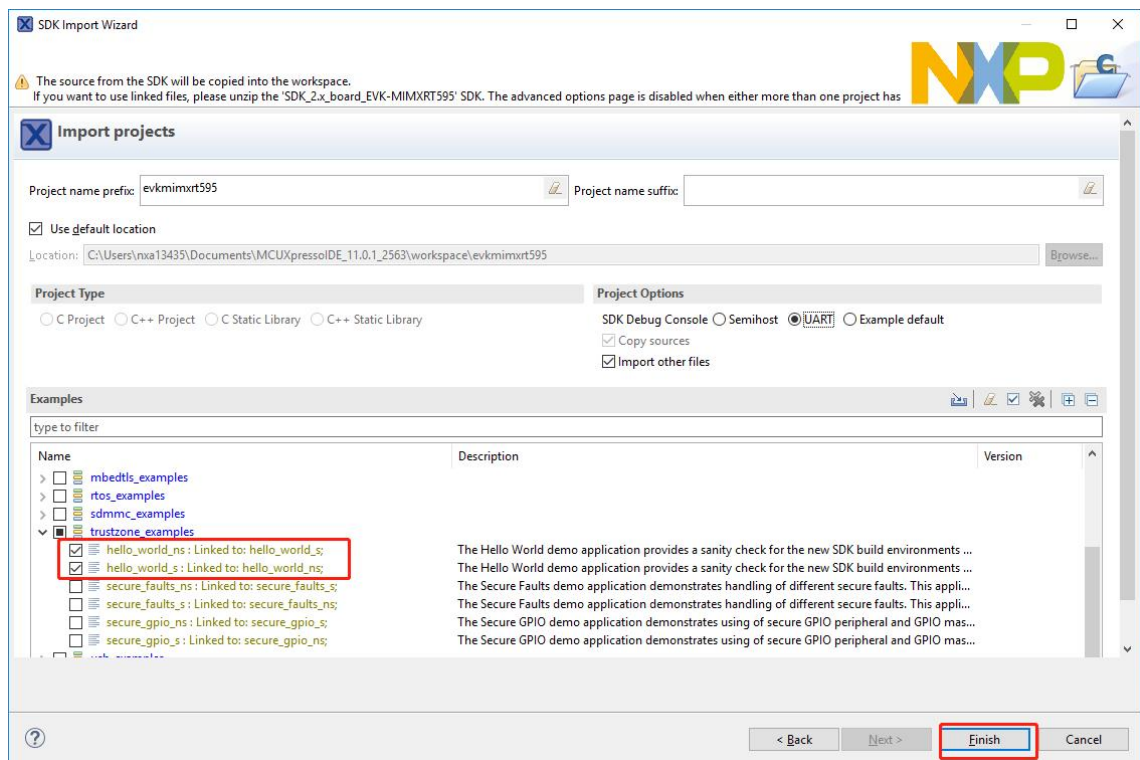


- Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

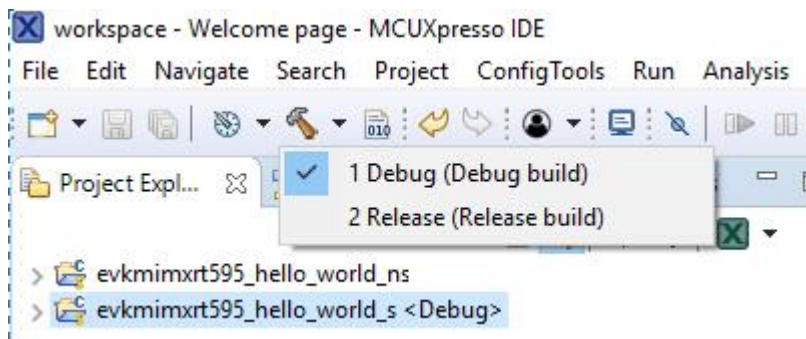


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

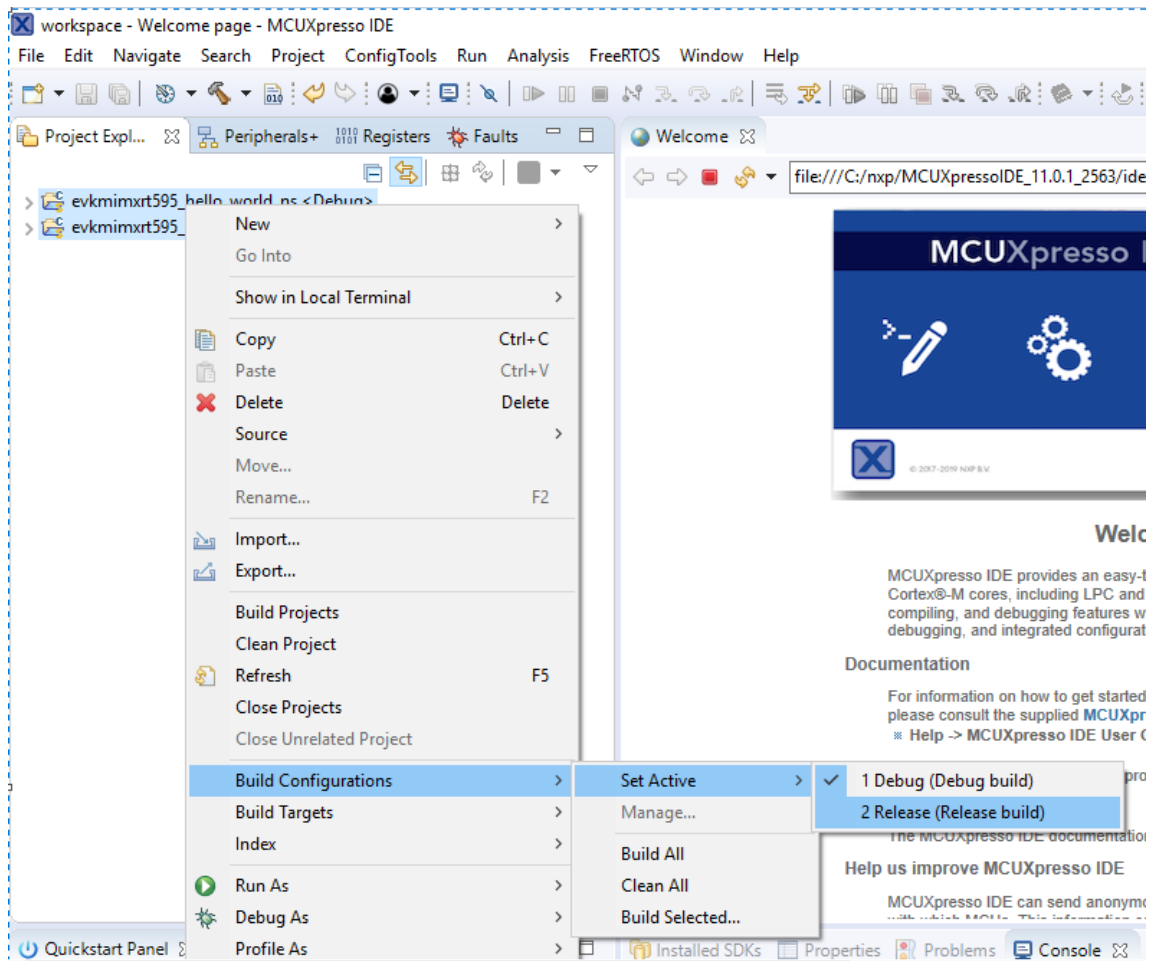

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring `<board_name>_hello_world_s` is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

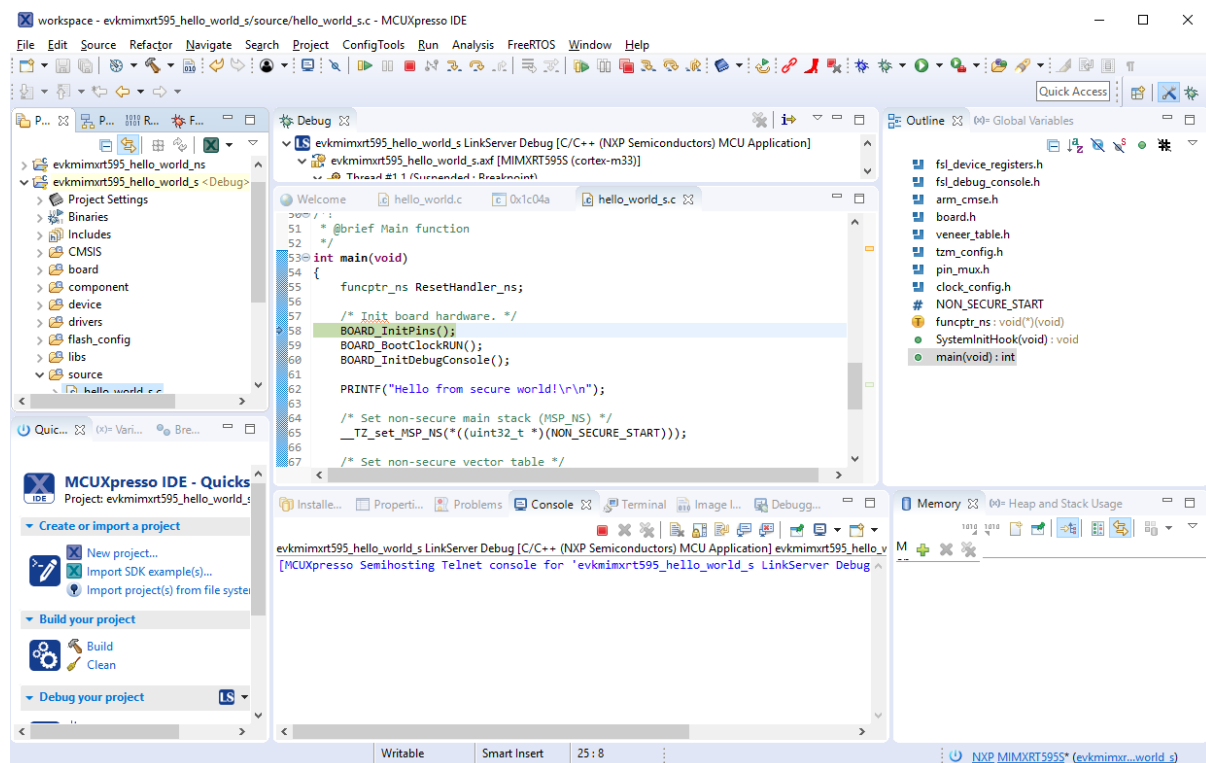

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

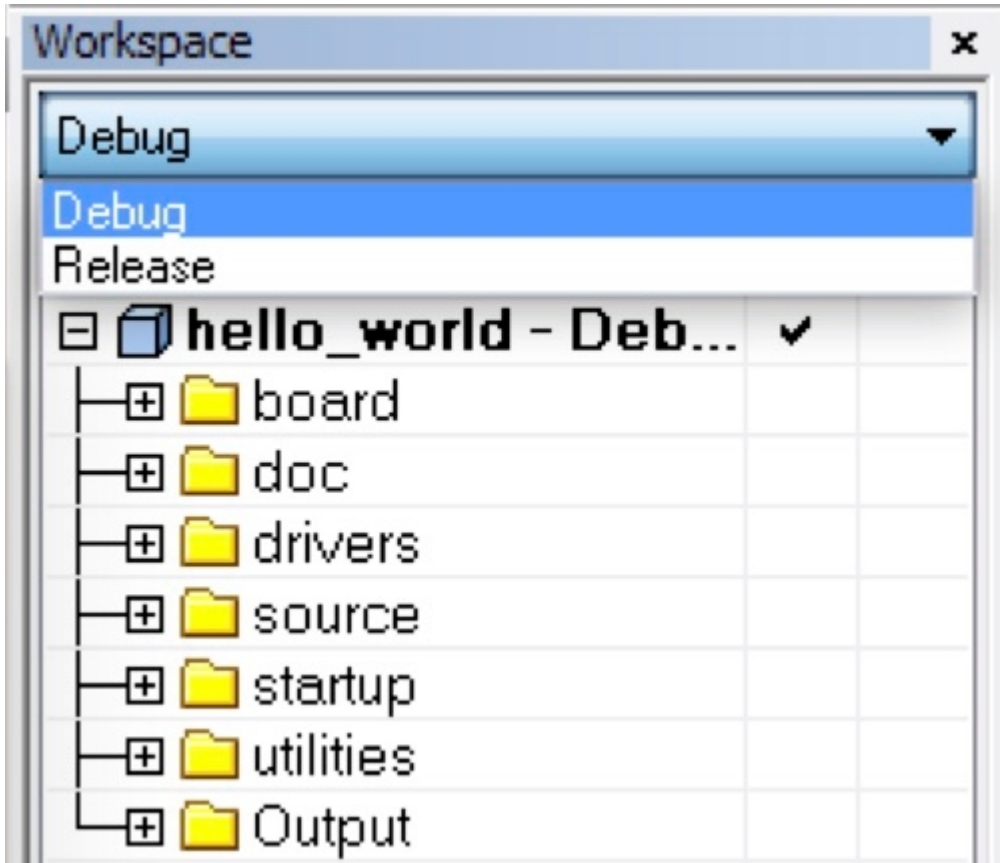


- To build the demo application, click **Make**, highlighted in red in following figure.

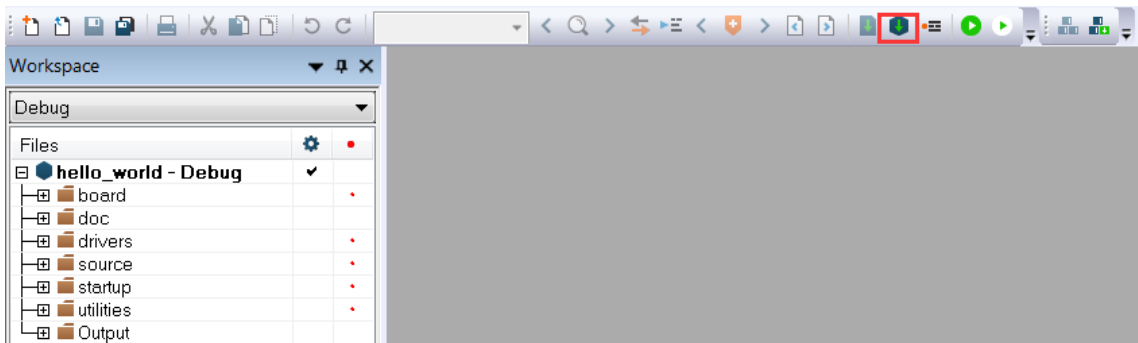

- The build completes without errors.

Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable.
- Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

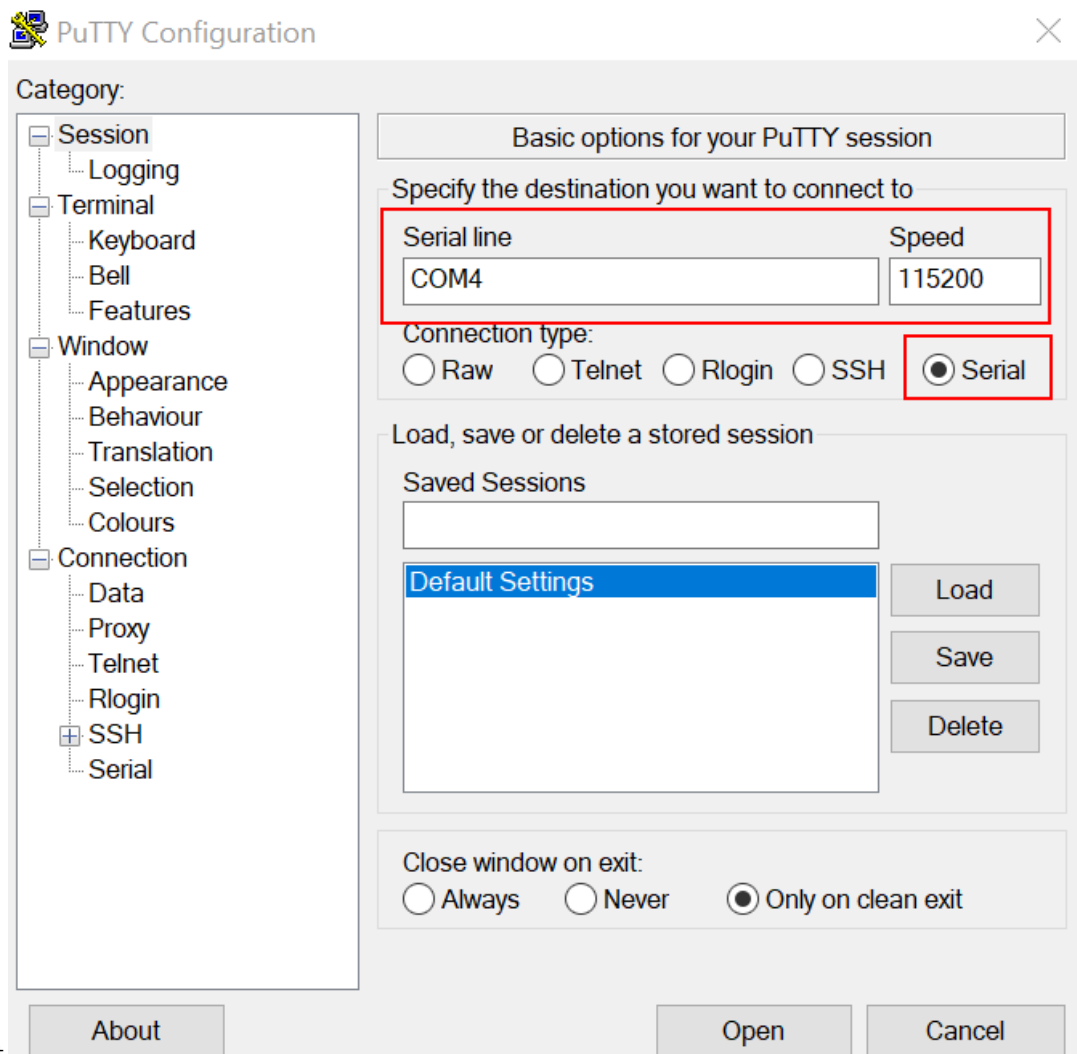


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the main() function.

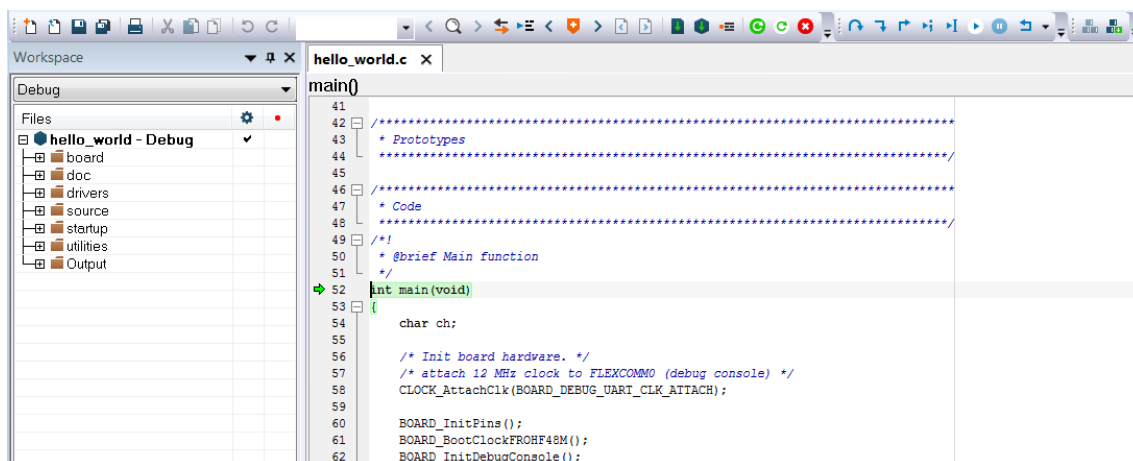

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
↔eww
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*` function.


Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

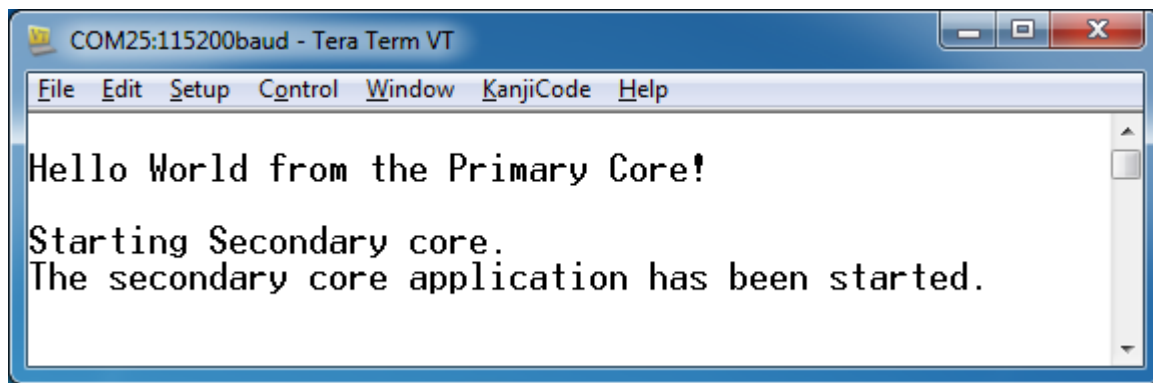

An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.



Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/
↪<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/
↪<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_
↪ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.
↪eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

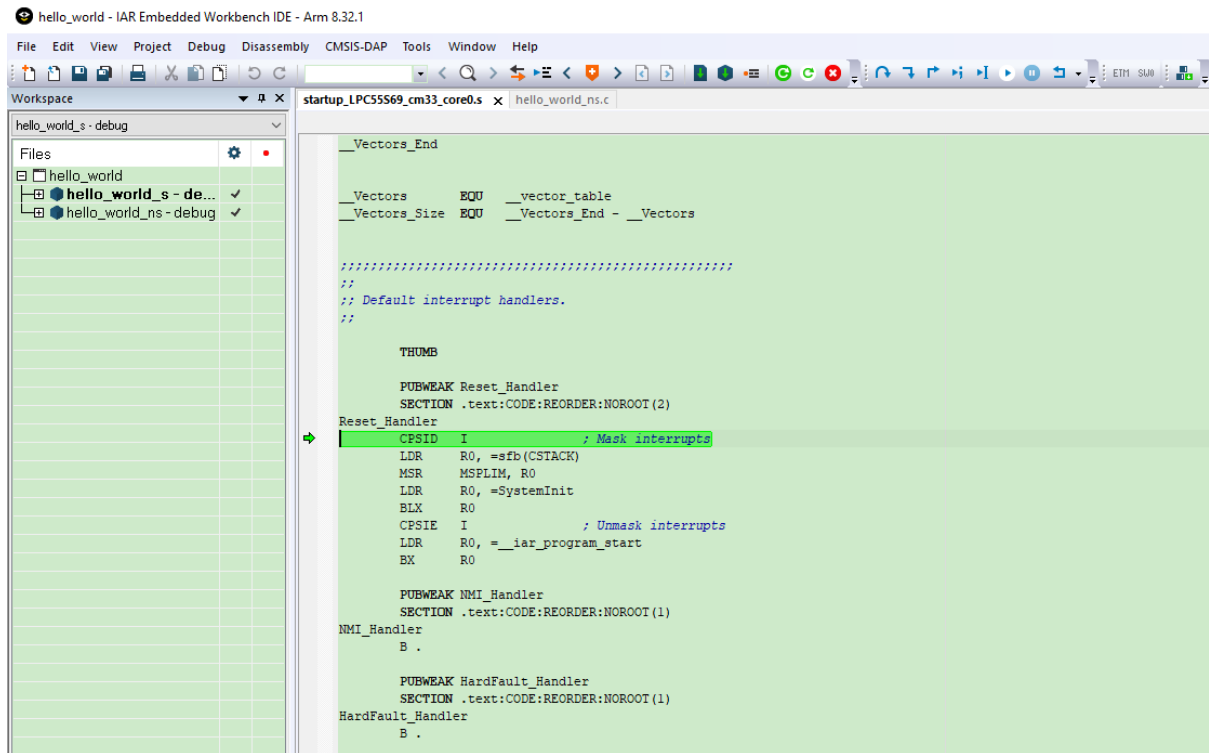


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

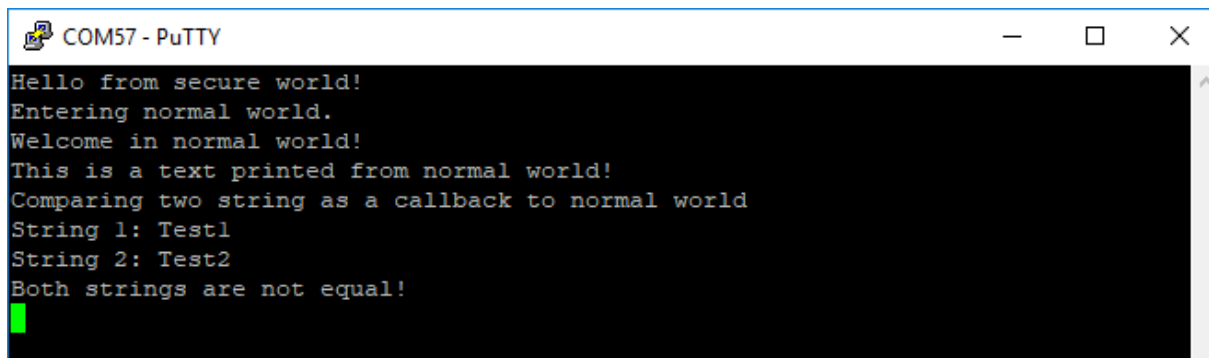


Note: If the application is running in RAM (debug/release build target), in **Options**>**Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the `_ns` download issue on i.MXRT500.

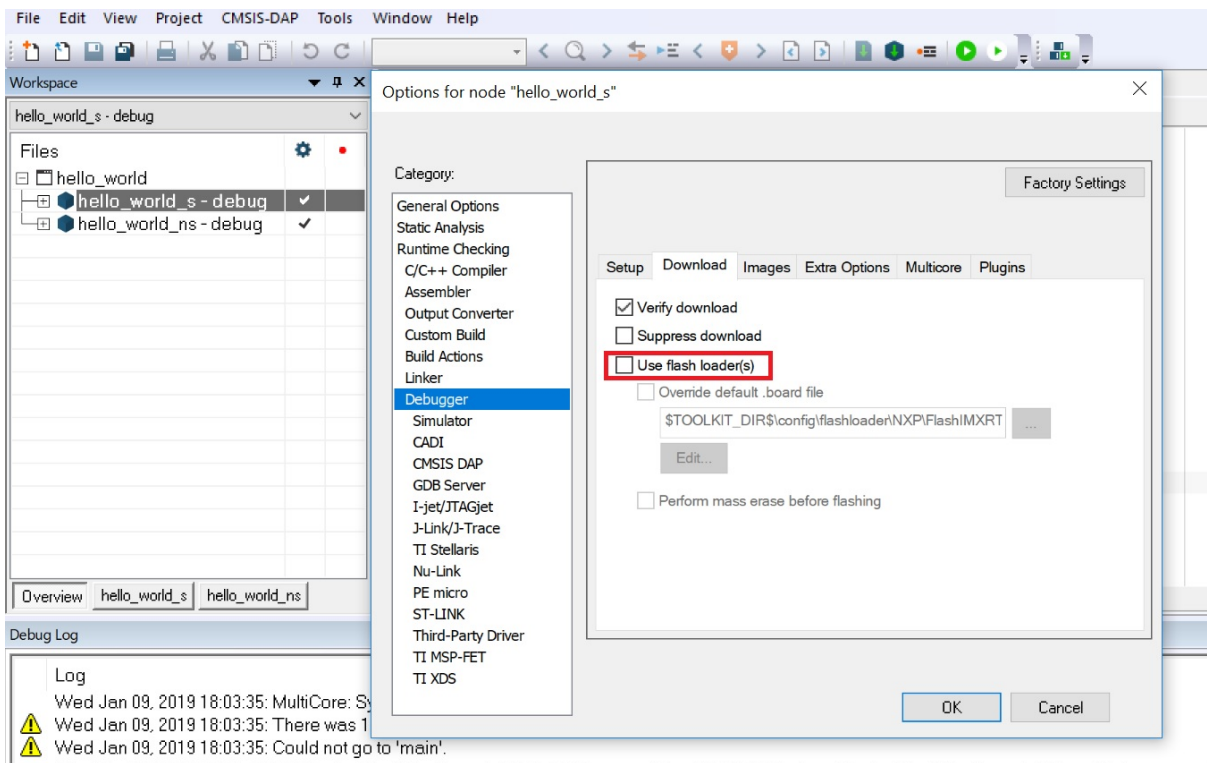

Run a demo using Keil MDK/µVision This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called µVision. In the IDE, select the **Pack Installer** icon.

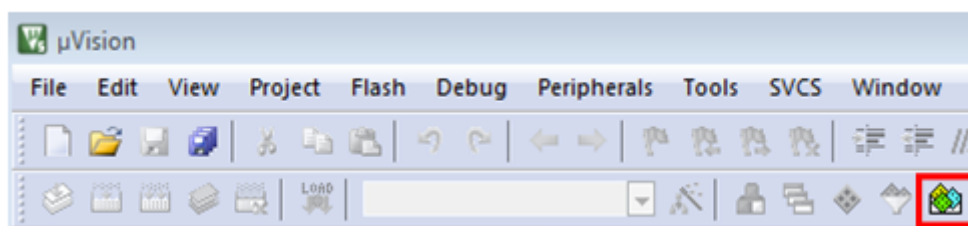

2. After the installation finishes, close the Pack Installer window and return to the µVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

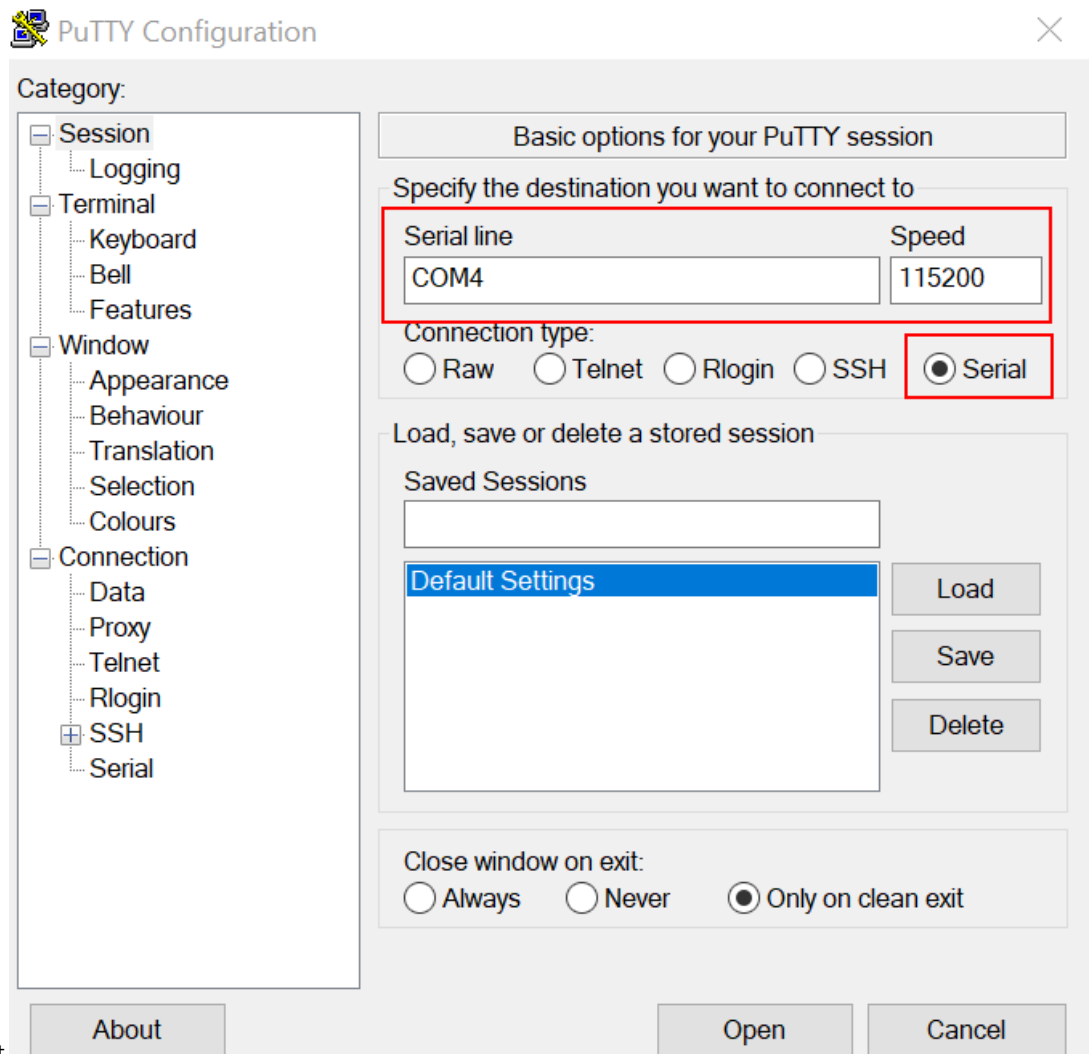


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

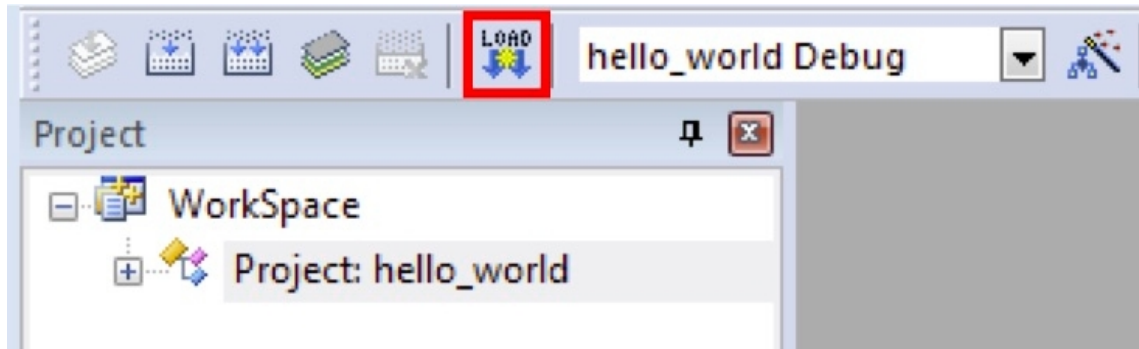

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

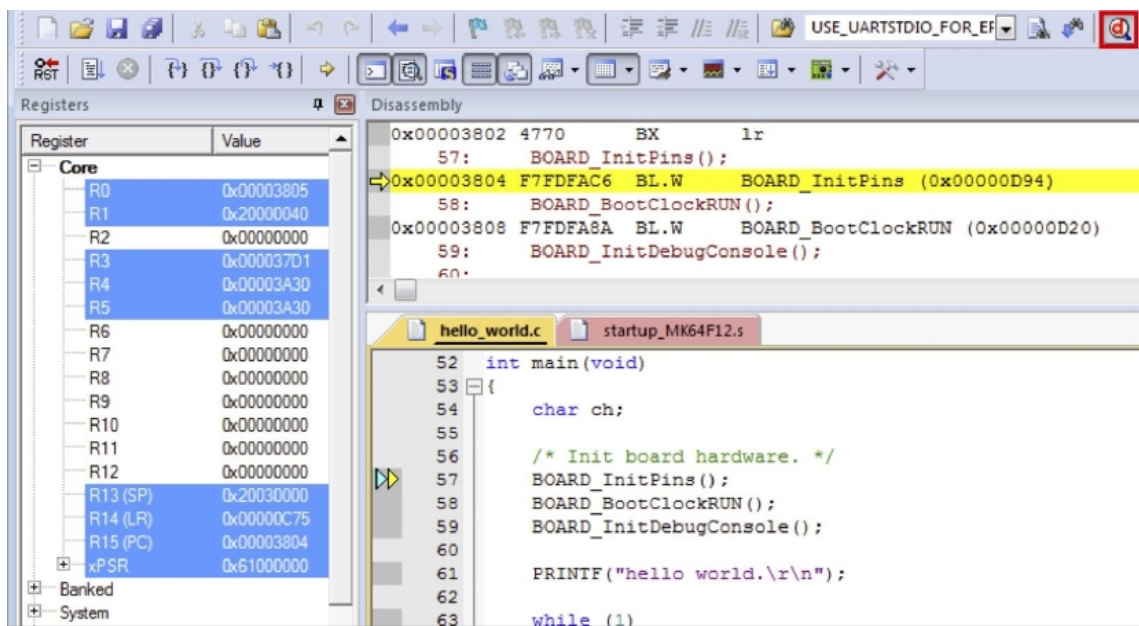

6. Run the code by clicking the **Run** button to start the application.

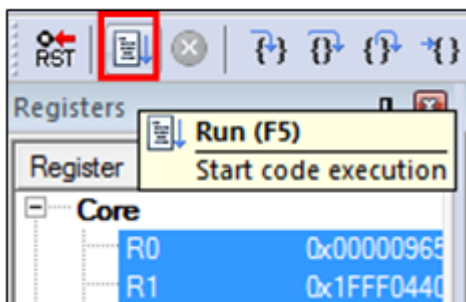

The `hello_world` application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/ μ Vision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
↪cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μ Vision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

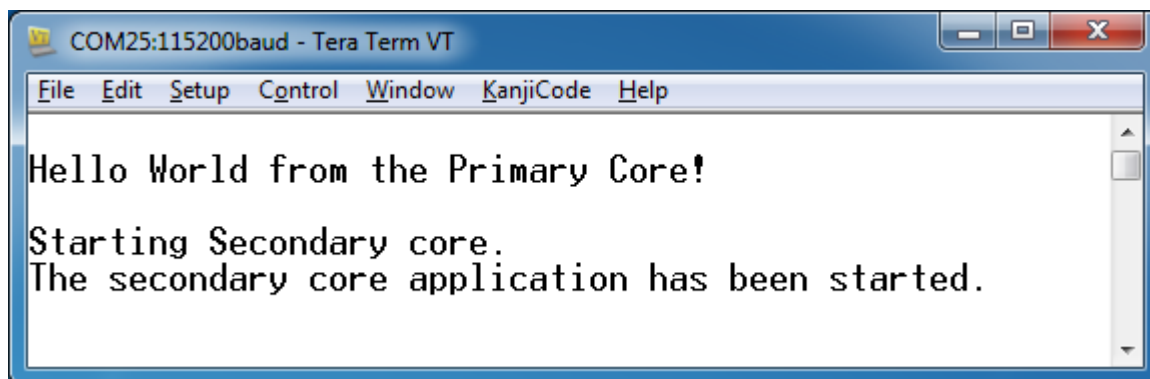

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

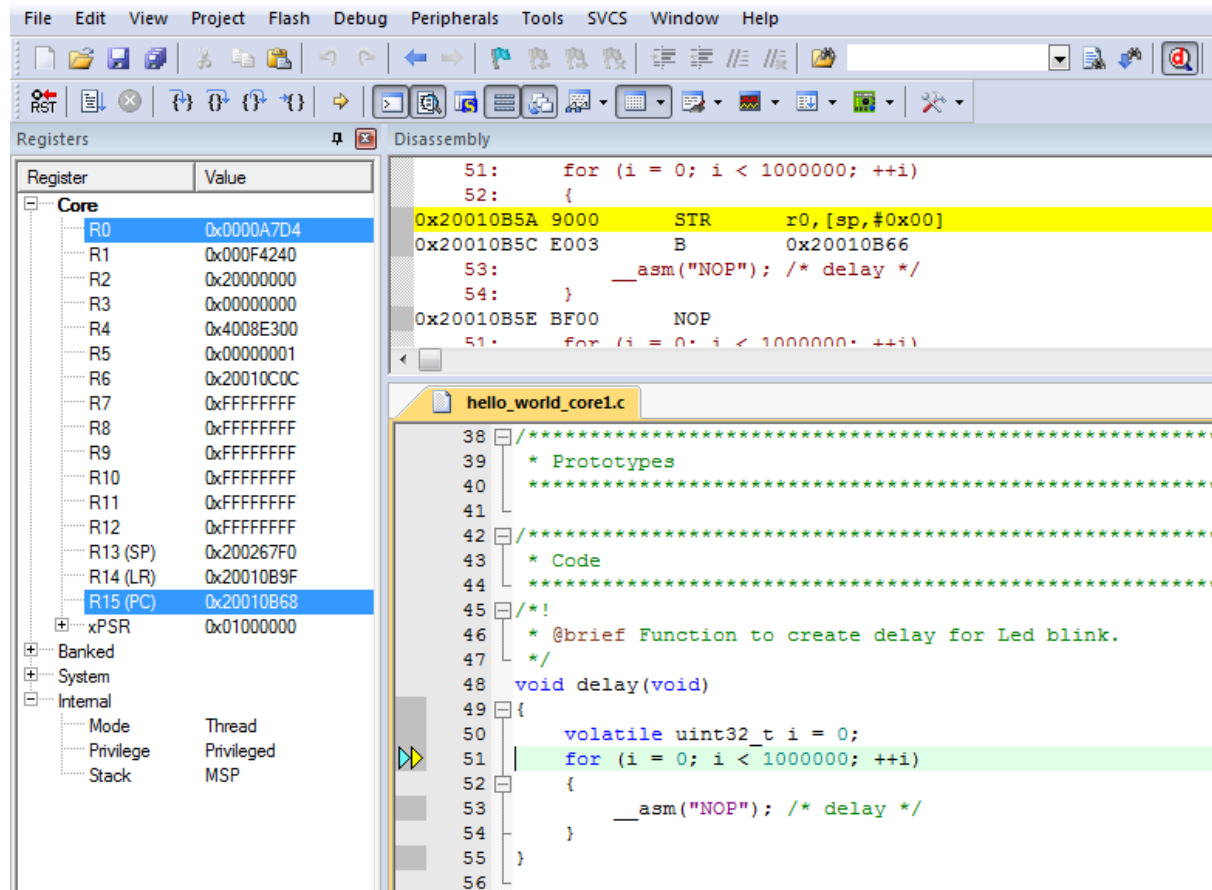

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
↪ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

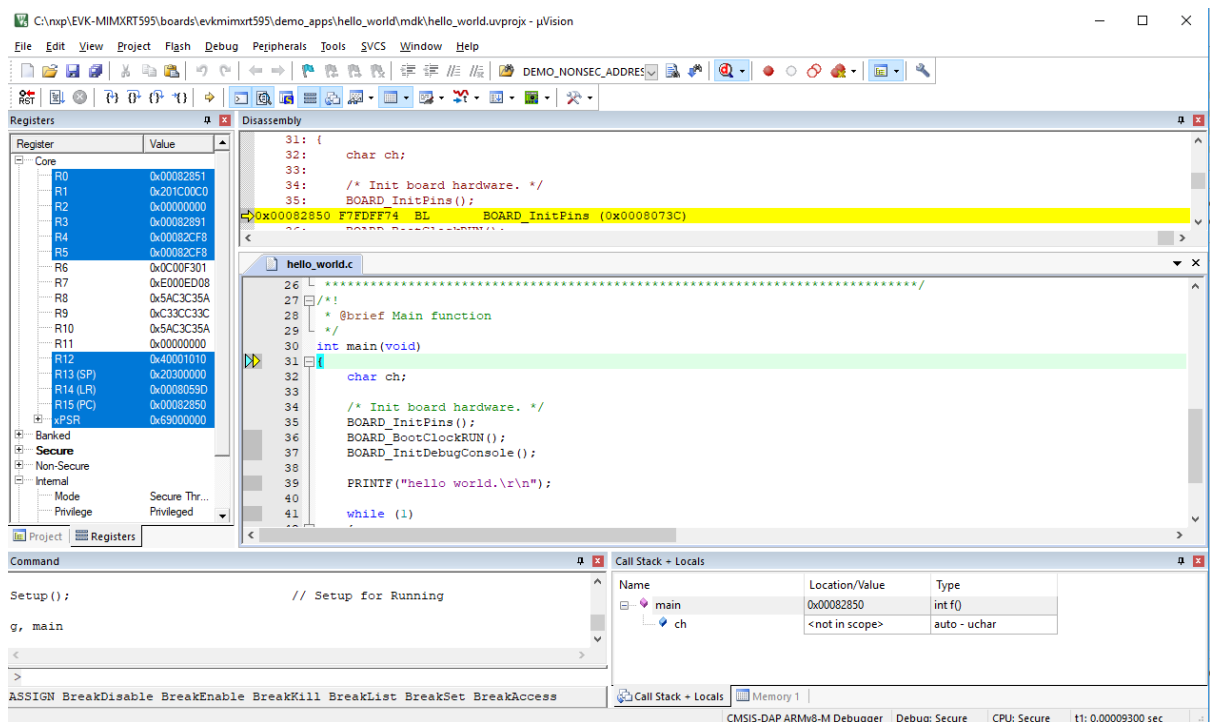

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

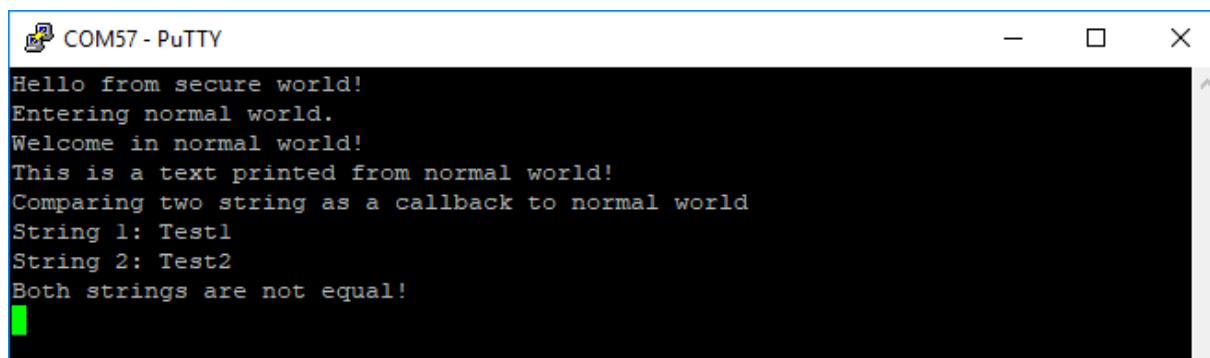






Run a demo using ARMGCC / VSCODE This section describes the steps to run an example application from the SDK archive using the ARMGCC / VSCODE toolchain.

Refer to the [running a demo using MCUXpresso VSC](#) section for detailed instructions on setting up and configuring your project in Visual Studio Code.

Refer to the [CLI](#) section for detailed instructions on building and running your project from the command line.

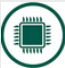MCUXpresso Config Tools MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK μ Vision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:

```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.


2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbed/DAPLink** interface:




2. **P&E Micro:**




3. **J-Link:**



4. **P&E Micro OSJTAG:**



5. **MRB-KW01:**



On-board Debugger This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.

- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFULink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFULink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/mbed bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.


- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.
- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

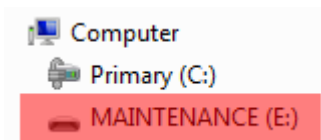

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA266	CMSIS-DAP	MCU-Link
FRDM-MCXA344	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXA366	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXE31B	CMSIS-DAP	MCU-Link
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override

the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then extern "C" should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

Repository-Layout SDK Package

Development Tools Installation This guide explains how to install the essential tools for development with the MCUXpresso SDK.

Quick Start: Automated Installation (Recommended) The **MCUXpresso Installer** is the fastest way to get started. It automatically installs all the basic tools you need.

1. **Download the MCUXpresso Installer** from: [Dependency-Installation](#)
2. **Run the installer** and select “**MCUXpresso SDK Developer**” from the menu
3. **Click Install** and let it handle everything automatically

Manual Installation If you prefer to install tools manually or need specific versions, follow these steps:

Essential Tools

Git - Version Control **What it does:** Manages code versions and downloads SDK repositories from GitHub.

Installation:

- Visit git-scm.com
- Download for your operating system
- Run installer with default settings
- **Important:** Make sure “Add Git to PATH” is selected during installation

Setup:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python - Scripting Environment **What it does:** Runs build scripts and SDK tools.

Installation:

- Install Python **3.10 or newer** from python.org
- **Important:** Check “Add Python to PATH” during installation

West - SDK Management Tool **What it does:** Manages SDK repositories and provides build commands. The west tool is developed by the Zephyr project for managing multiple repositories.

Installation:

```
pip install -U west
```

Minimum version: 1.2.0 or newer

Build System Tools

CMake - Build Configuration **What it does:** Configures how your projects are built.

Recommended version: 3.30.0 or newer

Installation:

- **Windows:** Download .msi installer from cmake.org/download
- **Linux:** Use package manager or download from cmake.org
- **macOS:** Use Homebrew (`brew install cmake`) or download from cmake.org

Ninja - Fast Build System **What it does:** Compiles your code quickly.

Minimum version: 1.12.1 or newer

Installation:

- **Windows:** Usually included, or download from ninja-build.org
- **Linux:** `sudo apt install ninja-build` or download binary
- **macOS:** `brew install ninja` or download binary

Ruby - IDE Project Generation (Optional) **What it does:** Generates project files for IDEs like IAR and Keil.

When needed: Only if you want to use traditional IDEs instead of VS Code.

Installation: Follow the Ruby environment setup guide

Compiler Toolchains Choose and install the compiler toolchain you want to use:

Toolchain	Best For	Download Link	Environment Variable
ARM GCC (Recommended)	Most users, free	ARM Toolchain GNU	ARMGCC_DIR
IAR EWARM	Professional development	IAR Systems	IAR_DIR
Keil MDK ARM Compiler	ARM ecosystem Advanced optimization	ARM Developer ARM Developer	MDK_DIR ARMCLANG_DIR

Setting Up Environment Variables After toolchain installation, set an environment variable so the build system locates it:

Windows:

```
# Example for ARM GCC installed in C:\armgcc
setx ARMGCC_DIR "C:\armgcc"
```

Linux/macOS:

```
# Add to ~/.bashrc or ~/.zshrc
export ARMGCC_DIR="/usr" # or your installation path
```

Verify Your Installation After installation, verify everything works by opening a terminal/command prompt and running these commands:

```
# Check each tool - you should see version numbers
git --version
python --version
west --version
cmake --version
ninja --version
arm-none-eabi-gcc --version # (if using ARM GCC)
```

Troubleshooting Installation Issues “Command not found” errors:

- The tool isn’t in your system PATH
- **Solution:** Add the installation directory to your PATH environment variable

Python/pip issues:

- Try using python3 and pip3 instead of python and pip
- On Windows, run the Command Prompt as an Administrator

Slow downloads:

- Add timeout option: `pip install -U west --default-timeout=1000`
- Use alternative mirror: `pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple`

Building Your First Project This guide explains how to build and run your first SDK example project using the west build system. This applies to both GitHub Repository SDK and Repository-Layout SDK Package.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development board connected via USB
- Build tools installed per [Installation Guide](#)

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list _project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:

```
west list _project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Process

Simple Build Build the hello_world example with default settings:

```
west build -b your_board examples/demo_apps/hello_world
```

The default toolchain is armgcc, and the build system will select the first debug target as default if no config is specified.

Specifying Configuration

```
# Release build
west build -b your_board examples/demo_apps/hello_world --config release
```

```
# Debug build (default)
west build -b your_board examples/demo_apps/hello_world --config debug
```

Alternative Toolchains

```
# IAR toolchain
west build -b your_board examples/demo_apps/hello_world --toolchain iar
```

```
# Other toolchains as supported by the example
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Flash an Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Start a debug session:

```
west debug -r linkserver
```

Common Build Options

Clean Build Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See the commands that get executed without running them:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device DEVICE_PART_NUMBER --config ↵  
↵release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b your_board examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Getting Help View the help information for west build:

```
west build -h
```

Check Supported Configurations To see available configuration options and board targets for an example, refer to the below command:

```
west list_project -p examples/demo_apps/hello_world
```

Next Steps

- Explore other examples in the SDK
- Learn about [Command Line Development](#) for advanced options
- Try [VS Code Development](#) for integrated development
- Refer [Workspace Structure](#) to understand the SDK layout

MCUXpresso for VS Code Development This guide covers using MCUXpresso for VS Code extension to build, debug, and develop SDK applications with an integrated development environment.

Prerequisites

- SDK workspace initialized (GitHub Repository SDK or Repository-Layout SDK Package)
- Development tools installed per [Installation Guide](#)
- Visual Studio Code installed
- MCUXpresso for VS Code extension installed


Extension Installation

Install MCUXpresso for VS Code The MCUXpresso for VS Code extension provides integrated development capabilities for MCUXpresso SDK projects. Refer to the [MCUXpresso for VS Code Wiki](#) for detailed installation and setup instructions.


SDK Import and Setup

Import Methods The SDK can be imported in several ways. The MCUXpresso for VS Code extension supports both GitHub Repository SDK and Repository-Layout SDK Package distributions.


Import GitHub Repository SDK Click **Import Repository** from the **QUICKSTART PANEL**

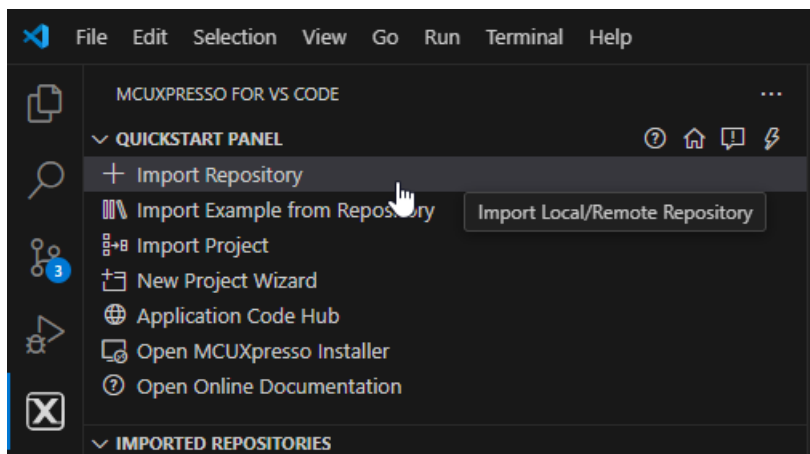

Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details. Select **Local** if you've already obtained the SDK according to [setting up the repo](#). Select your location and click **Import**.

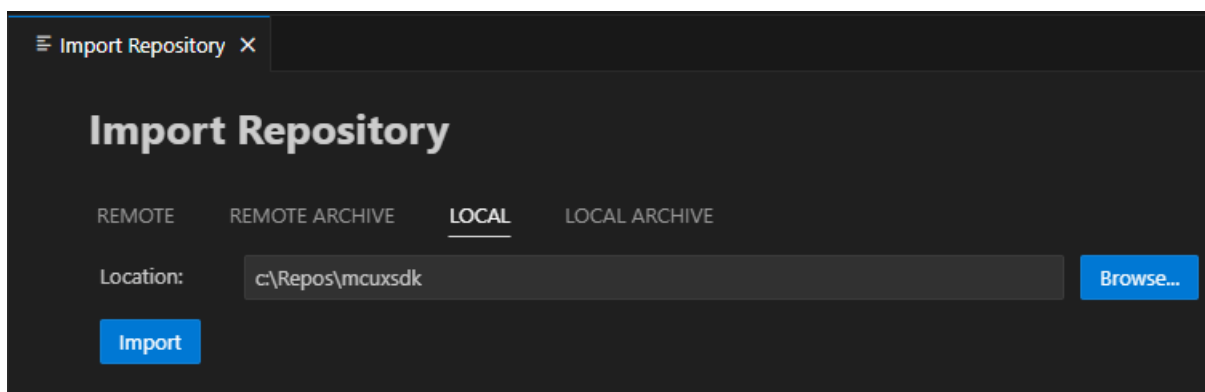


Import Repository-Layout SDK Package Click **Import Repository** from the **QUICKSTART**

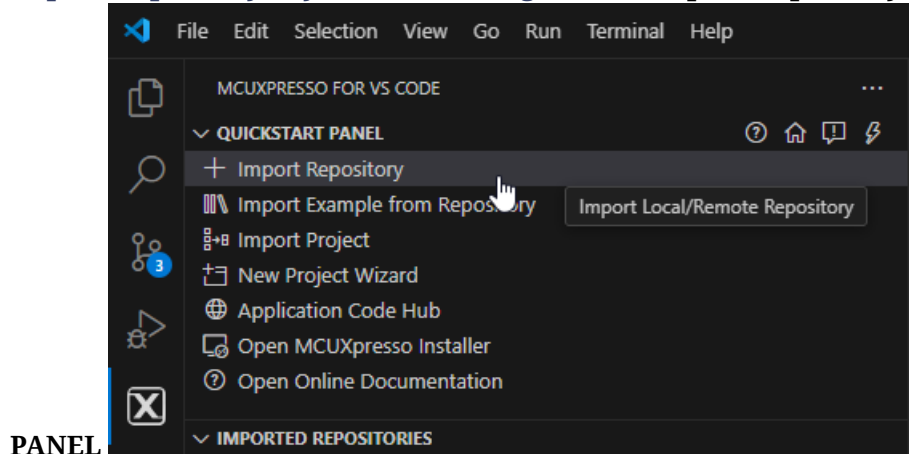


PANEL

Select **Local** if you've already unzipped the Repository-Layout SDK Package. Select your location and click **Import**.

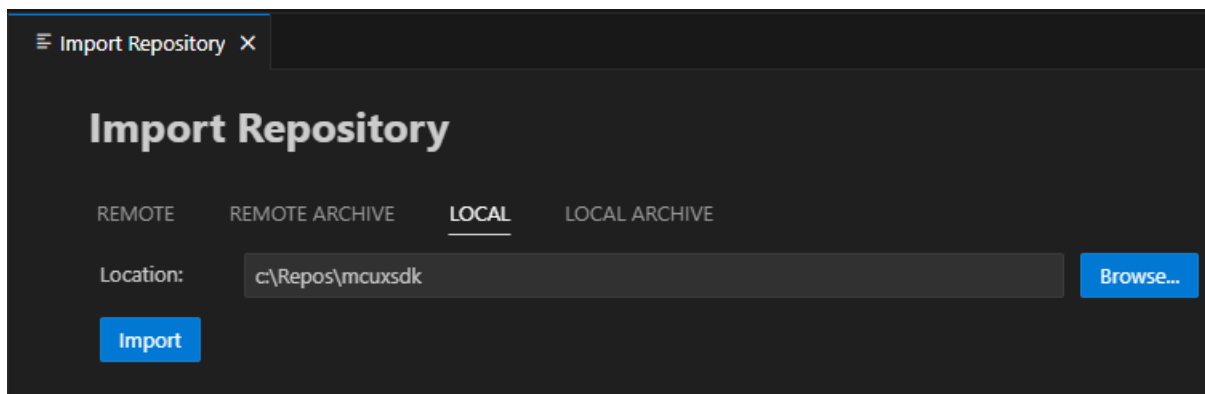


Else if the SDK is ZIP archive, select **Local Archive**, browse to the downloaded SDK ZIP file, fill the link of expect location, then click **Import**.

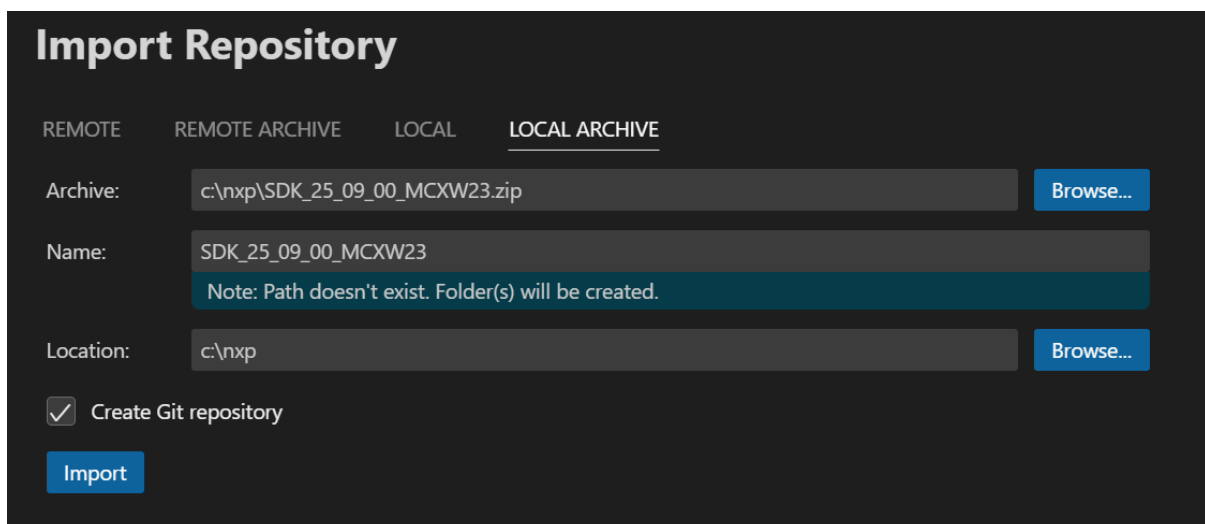

Building Example Applications

Import Example Project


1. Click **Import Example from Repository** from the **QUICKSTART PANEL**

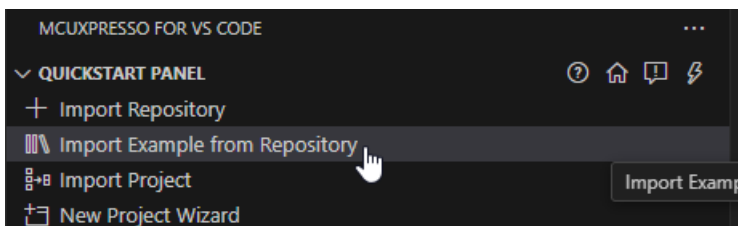

2. Configure project settings:

- **MCUXpresso SDK:** Select your imported SDK
- **Arm GNU Toolchain:** Choose toolchain
- **Board:** Select your target development board
- **Template:** Choose example category
- **Application:** Select specific example (e.g., hello_world)
- **App type:** Choose between Repository applications or Freestanding applications

3. Click **Import**

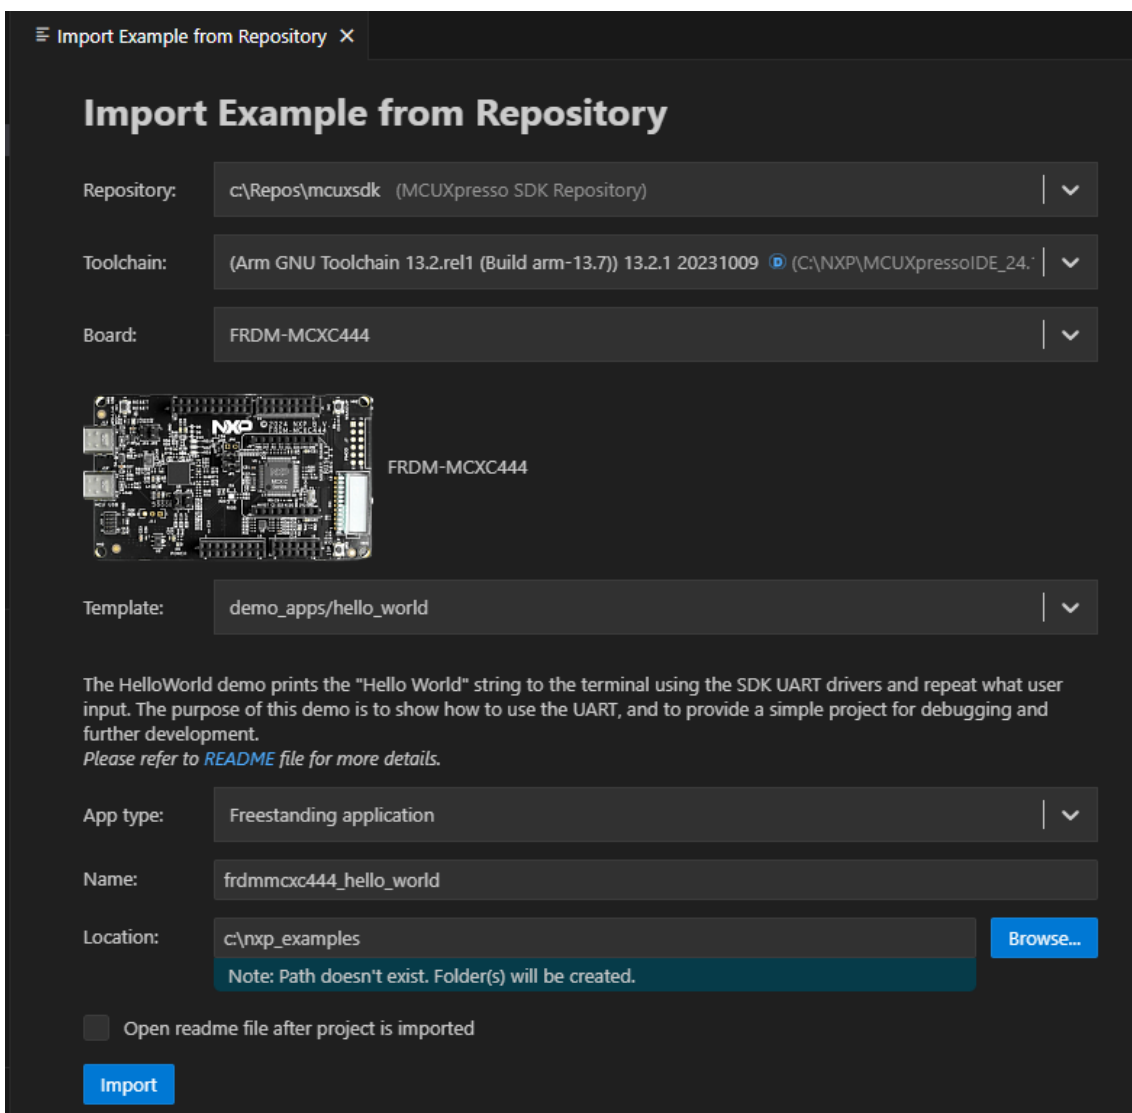

Application Types **Repository Applications:**

- Located inside the MCUXpresso SDK
- Integrated with SDK workspace

Freestanding Applications:


- Imported to user-defined location
- Independent of SDK location

Trust Confirmation VS Code will prompt you to confirm if the imported files are trusted. Click **Yes** to proceed.

Building Projects

Build Process

1. Navigate to **PROJECTS** view
2. Find your project
3. Click the **Build Project** icon

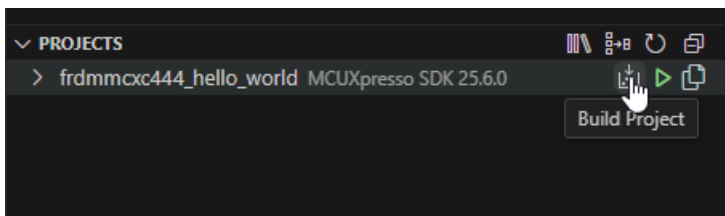


The integrated terminal will display build output at the bottom of the VS Code window.

Running and Debugging

Serial Monitor Setup


1. Open **Serial Monitor** from VS Code's integrated terminal

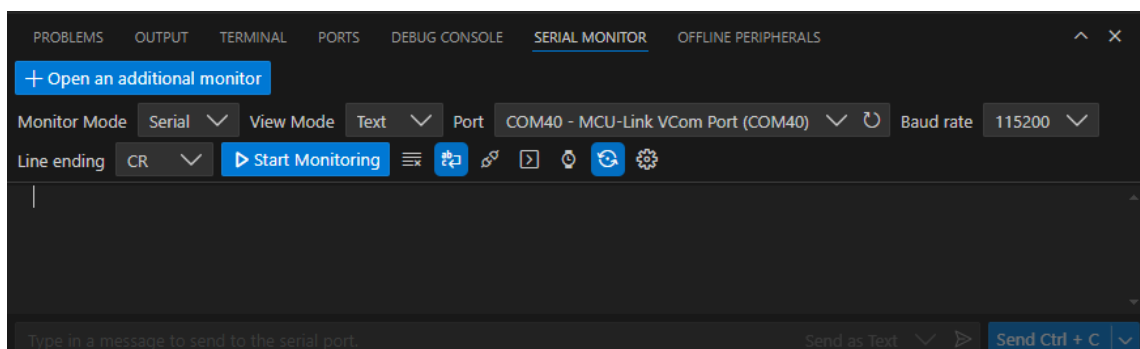

2. Configure serial settings:
 - **VCom Port:** Select port for your device
 - **Baud Rate:** Set to 115200

Debug Session

1. Navigate to **PROJECTS** view
2. Click the play button to initiate a debug session

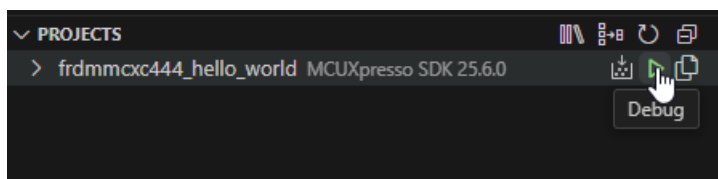

The debug session will begin with debug controls initially at the top of the interface.

Debug Controls Use the debug controls to manage execution:

- **Continue:** Resume code execution
- **Step controls:** Navigate through code


```

C hello_world.c X
frdmmxc444_hello_world > examples > demo_apps > hello_world > C hello_w
18  /*****
21
22  /*****
23  * Variables
24  *****/
25
26  /*****
27  * Code
28  *****/
29  /*!
30  * @brief Main function
31  */
32  int main(void)
33  {
34      char ch;
35
36      /* Init board hardware. */
37  BOARD_InitHardware();
38
39      PRINTF("hello world.\r\n");
40
41      while (1)
42      {
43          ch = GETCHAR();
44          PUTCHAR(ch);
45      }
46  }
47

```

- **Stop:** Terminate debug session

Monitor Output Observe application output in the **Serial Monitor** to verify correct operation.

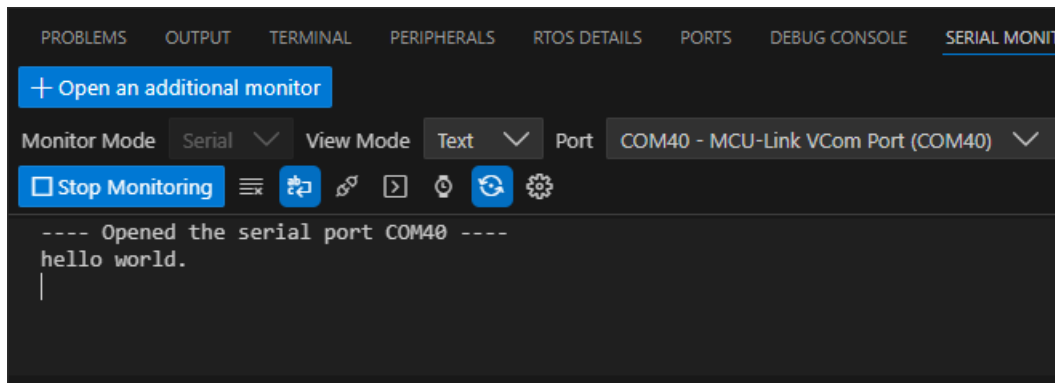

Debug Probe Support For comprehensive information on debug probe support and configuration, refer to the [MCUXpresso for VS Code Wiki DebugK section](#).

Project Configuration

Workspace Management The extension integrates with the MCUXpresso SDK workspace structure, providing access to:

- Example applications
- Board configurations
- Middleware components
- Build system integration

Multi-Project Support The PROJECTS view allows management of multiple imported projects within the same workspace.

Troubleshooting

Import Issues **SDK not detected:**

- Verify SDK workspace is properly initialized
- Ensure all required repositories are updated
- Check SDK manifest files are present

Project import failures:

- Confirm board support exists for selected example
- Verify toolchain installation
- Check example compatibility with selected board

Build Problems **Build failures:**

- Check integrated terminal for error messages
- Verify all dependencies are installed
- Ensure toolchain is properly configured

Debug Issues **Debug session fails:**

- Verify board connection via USB
- Check debug probe drivers are installed
- Confirm build completed successfully

Serial monitor problems:

- Verify correct VCom port selection
- Check baud rate configuration (115200)
- Ensure board drivers are installed

Integration with Command Line MCUXpresso for VS Code integrates with the underlying west build system, allowing seamless integration with command line workflows described in [Command Line Development](#).

Advanced Features

Project Types The extension supports both repository-based and freestanding project types, providing flexibility in project organization and SDK integration.

Build System Integration The extension leverages the MCUXpresso SDK build system, providing access to all build configurations and options available through command line tools.

Next Steps

- Explore additional examples in the SDK
- Review [Command Line Development](#) for advanced build options
- Refer [MCUXpresso for VS Code Wiki](#) for detailed documentation
- Learn about [SDK Architecture](#) for better understanding of the development environment

Command Line Development This guide covers developing with the MCUXpresso SDK using command line tools and the west build system. This workflow applies to both GitHub Repository SDK and Repository-Layout SDK Package distributions.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development tools installed per [Installation Guide](#)
- Target board connected via USB

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list _project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:

```
west list _project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Commands

Standard Build Process Build with default settings (armgcc toolchain, first debug config):

```
west build -b your_board examples/demo_apps/hello_world
```

Specifying Build Configuration

Release build

```
west build -b your_board examples/demo_apps/hello_world --config release
```

Debug build with specific toolchain

```
west build -b your_board examples/demo_apps/hello_world --toolchain iar --config debug
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config ↵  
↵ flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_ ↵  
↵ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Shield Support For boards with shields:

```
west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll - ↵  
↵ Dcore_id=cm33_core0
```

Advanced Build Options

Clean Builds Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See what commands would be executed:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device MK22F12810 --config release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Flashing and Debugging

Flash Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Session Start a debugging session:

```
west debug -r linkserver
```

IDE Project Generation Generate IDE project files for traditional IDEs:

```
# Generate IAR project
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug -p always -t guiproject
```

IDE project files are generated in `mcuxsdk/build/<toolchain>` folder.

Note: Ruby installation is required for IDE project generation. See [Installation Guide](#) for setup instructions.

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Toolchain Issues Verify environment variables are set correctly:

```
# Check ARM GCC
echo $ARMGCC_DIR
arm-none-eabi-gcc --version

# Check IAR (if using)
echo $IAR_DIR
```

Getting Help Display help information:

```
west build -h
west flash -h
west debug -h
```

Check Supported Configurations If unsure about supported options for an example:

```
west list _project -p examples/demo_apps/hello_world
```

Best Practices

Project Organization

- Keep custom projects outside the SDK tree
- Use version control for your application code
- Document any SDK modifications

Build Efficiency

- Use `-p` always for clean builds when troubleshooting
- Leverage `--dry-run` to understand build processes
- Use specific configs and toolchains to reduce build time

Development Workflow

1. Start with existing examples closest to your requirements
2. Copy and modify rather than building from scratch
3. Test with `hello_world` before moving to complex examples
4. Use configuration tools for pin muxing and clock setup

Next Steps

- Explore [VS Code Development](#) for integrated development experience
- Review [Workspace Structure](#) to understand SDK organization
- Refer build system documentation for advanced configurations

Workspace Structure After you initialize your SDK workspace, it creates a specific directory structure that organizes all SDK components. This structure is identical for both GitHub Repository SDK and Repository-Layout SDK Package.

Top-Level Organization

```
your-sdk-workspace/  
  manifests/      # West manifest repository  
  mcuxsdk/        # Main SDK content
```

The `mcuxsdk/` directory serves as your primary working directory and contains all the SDK components.

SDK Component Layout Based on the actual SDK structure, the main directories include:

Directory	Contents	Purpose
arch/	Architecture-specific files	ARM CMSIS, build configurations
cmake/	Build system modules	CMake configuration and build rules
compo	Software components	Reusable software libraries and utilities
devices/	Device support packages	MCU-specific headers, startup code, linker scripts
drivers/	Peripheral drivers	Hardware abstraction layer for MCU peripherals
examp	Sample applications	Demonstration code and reference implementations
middle	Optional software stacks	Networking, graphics, security, and other libraries
rtos/	Operating system support	FreeRTOS integration
scripts	Build and utility scripts	West extensions and development tools
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.	

Example Organization Examples follow a two-tier structure separating common code from board-specific implementations:

Common Example Files

```
examples/demo_apps/hello_world/
  CMakeLists.txt      # Build configuration
  example.yml         # Example metadata
  hello_world.c       # Application source code
  Kconfig             # Configuration options
  readme.md           # General documentation
```

Board-Specific Files

```
examples/_boards/your_board/demo_apps/hello_world/
  app.h               # Board specific application header
  example_board_readme.md # Board specific documentation
  hardware_init.c     # Board specific hardware initialization
  pin_mux.c           # Pin multiplexing configuration
  pin_mux.h           # Pin multiplexing header definitions
  hello_world.bin     # Pre-built binary for quick testing
  hello_world.mex     # MCUXpresso Config Tools project file
  prj.conf            # Board specific Kconfig configuration
  reconfig.cmake     # Board specific cmake configuration overrides
```

Device Support Structure Device support is organized hierarchically by MCU family:

```

devices/
  MCX/           # MCU portfolio
    MCXW/       # MCU family
      MCXW235/  # Specific device
        MCXW235.h # Device register definitions
      drivers/  # Device-specific drivers
      gcc/      # GNU toolchain files
      iar/      # IAR toolchain files
      mcuxpresso/ # MCUXpresso IDE files
      startup_MCXW235.c # Startup and vector table
      system_MCXW235.c # System initialization

```

Middleware Organization Middleware components are categorized by functionality and maintained in separate repositories. Based on the manifest files, common middleware categories include:

- **Connectivity:** USB, TCP/IP, industrial protocols
- **Security:** Cryptographic libraries, secure boot
- **Wireless:** Bluetooth, IEEE 802.15.4, Wi-Fi
- **Graphics:** Display drivers, UI frameworks
- **Audio:** Processing libraries, voice recognition
- **Machine Learning:** Inference engines, neural networks
- **Safety:** IEC60730B safety libraries
- **Motor Control:** Motor control and real-time control libraries

Documentation Structure SDK documentation is distributed across multiple locations:

- docs/ - Core SDK documentation and build infrastructure
- Component repositories - API documentation and integration guides
- Board directories - Hardware-specific setup instructions

For complete documentation, refer to the [online documentation](#).

Understanding Example Structure Each example has **two README files**:

1. General README: examples/demo_apps/hello_world/readme.md

- What the example does
- General functionality description
- Common usage information

2. Board-Specific README: examples/_boards/{board_name}/demo_apps/hello_world/example_board_readme.md

- Board-specific setup instructions
- Hardware connections required
- Board-specific behavior notes

Tip: Always check both readme files - start with the general one, then read the board-specific one for detailed setup.

1.3 Getting Started with MCUXpresso SDK GitHub

1.3.1 Getting Started with MCUXpresso SDK Repository

Welcome to the **GitHub Repository SDK Guide**. This documentation provides instructions for setting up and working with the MCUXpresso SDK distributed in a **multi-repository model**. The SDK is distributed across multiple GitHub repositories and managed using the **Zephyr West** tool, enabling modular development and streamlined workflows.

Overview

The GitHub Repository SDK approach offers:

- **Modular Structure:** Multiple repositories for flexibility and scalability.
- **Zephyr West Integration:** Simplified repository management and synchronization.
- **Cross-Platform Support:** Designed for MCUXpresso SDK development environments.

Benefits of the Multi-Repository Approach

- **Scalability:** Easily add or update components without impacting the entire SDK.
- **Collaboration:** Enables distributed development across teams and repositories.
- **Version Control:** Independent versioning for components ensures better stability.
- **Automation:** Zephyr West simplifies dependency handling and repository synchronization.

Setup and Configuration

Follow these steps to prepare your development environment:

GitHub Repository Setup This guide explains how to initialize your MCUXpresso SDK workspace from GitHub repositories using the west tool. The GitHub Repository SDK uses multiple repositories hosted on GitHub to provide modular, flexible development.

Prerequisites Verify the requirements:

System Requirements:

- Python 3.8 or later
- Git 2.25 or later
- CMake 3.20 or later
- Build tools for your target platform

Verification Commands:

```
python --version # Should show 3.8+
git --version # Should show 2.25+
cmake --version # Should show 3.20+
west --version # Should show west tool installation
```

Workspace Initialization The GitHub Repository SDK uses the Zephyr west tool to manage multiple repositories containing different SDK components.

Step 1: Initialize Workspace Create and initialize your SDK workspace from GitHub:

Get the latest SDK from main branch:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk
```

Get SDK at specific revision:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk --mr {revision}
```

Note: Replace {revision} with the desired release tag, such as v25.09.00

Step 2: Choose Your Repository Update Strategy Navigate to the SDK workspace:

```
cd mcuxpresso-sdk
```

The west tool manages multiple GitHub repositories containing different SDK components. You have two options for downloading:

Option A: Download All Repositories (Complete SDK) Download all SDK repositories for comprehensive development:

```
west update
```

This command downloads all the repositories defined in the manifest from GitHub. Initial download takes several minutes and requires ~7 GB of disk space.

Best for:

- Exploring the complete SDK
- Multi-board development projects
- Comprehensive middleware evaluation

Option B: Targeted Repository Download (Recommended) Download only repositories needed for your specific board or device to save time and disk space:

```
# For specific board development
west update_board --set board your_board_name

# For specific device family development
west update_board --set device your_device_name

# List available repositories before downloading
west update_board --set board your_board_name --list-repo
```

Best for:

- Single board development

- Faster setup and reduced disk usage
- Focused development workflows

Examples:

```
# Update only repositories for FRDM-MCXW23 board
west update_board --set board frdm-mcxw23

# Update only repositories for MCXW23 device family
west update_board --set device mcxw23
```

Step 3: Verify Installation Confirm successful setup:

```
# Verify workspace structure
ls -la
# Should show: manifests/ and mcuxsdk/ directories

# Test build system
west list_project -p examples/demo_apps/hello_world
# Should display available build configurations
```

Advanced Repository Management The `west update_board` command provides advanced repository management capabilities for optimized workspace setup with GitHub repositories.

Board-Specific Setup Update only repositories required for a specific board:

```
# Update only repositories for specific board, e.g., frdm-mcxw23
west update_board --set board frdm-mcxw23

# List available repositories for the board before updating
west update_board --set board frdm-mcxw23 --list-repo
```

Device-Specific Setup Update only repositories required for a specific device family:

```
# Update only repositories for specific device, e.g., MCXW235
west update_board --set device mcxw23

# List available repositories for the device family
west update_board --set device mcxw23 --list-repo
```

Custom Configuration For advanced users who want to create custom repository combinations:

```
# Use custom configuration file
west update_board --set custom path/to/custom-config.yml

# Generate custom configuration template
cp manifests/boards/custom.yml.template my-custom-config.yml
```

Benefits of Targeted Setup **Reduced Download Size**

- Download only components needed for your target board or device
- Significantly faster initial setup for focused development

- Typical reduction from 7 GB to 2GB

Optimized Workspace

- Cleaner workspace with relevant components only
- Reduced disk space usage
- Faster repository operations

Flexible Development

- Switch between different board configurations easily
- Maintain separate workspaces for different projects
- Include optional components as needed

Repository Information Before setting up your workspace, you can explore what repositories are available:

```
# Display repository information in console
west update_board --set board frdmxcw23 --list-repo

# Export repository information to YAML file for reference
west update_board --set board frdmxcw23 --list-repo -o board-repos.yml
```

This command lists all the available repositories with descriptions and outlines the included components in the workspace.

Package Generation (Optional) The `update_board` command can also generate ZIP packages for offline distribution:

```
# Generate board-specific SDK package
west update_board --set board frdmxcw23 -o frdmxcw23-sdk.zip
```

Note: Package generation is primarily intended for creating custom SDK distributions. For regular development, use the workspace update commands without the `-o` option.

Workspace Management

Updating Your Workspace Keep your SDK current with latest updates from GitHub:

For Complete SDK Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update all component repositories
cd ..
west update
```

For Targeted Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update board-specific repositories
cd ..
west update_board --set board your_board_name
```

Workspace Status Check workspace synchronization status:

```
# Show status of all repositories
west status

# Show detailed information about repositories
west list
```

Troubleshooting Network Issues:

- Use `west update --keep-descendants` for partial failures
- Configure Git credentials for private repositories
- Check firewall settings for Git protocol access

Permission Issues:

- Ensure write permissions in workspace directory
- Run commands without `sudo`/administrator privileges
- Verify Git SSH key configuration for authenticated access

Disk Space:

- Full SDK workspace requires approximately 7-8 GB
- Targeted workspace typically requires 1-2 GB
- Use board-specific setup to reduce workspace size

Repository Management Issues:

- Verify board/device names match available configurations
- Check that custom YAML files follow the correct template format
- Use `--list-repo` to verify available repositories before setup

Next Steps With your workspace initialized:

1. Review [Workspace Structure](#) to understand the layout
2. Build your first project with [First Build Guide](#)
3. Explore [Development Workflows MCUXpresso VSCode](#) or [Development Workflows Command Line](#) for the details on project setup and execution

For advanced repository management, see the [west tool documentation](#).

Explore SDK Structure and Content

Learn about the organization of the SDK and its components:

SDK Architecture Overview The MCUXpresso SDK uses a modular architecture where software components are distributed across multiple repositories hosted on GitHub and managed through the west tool. This approach provides flexibility, maintainability, and enables selective component inclusion.

Repository Organization Based on the manifest structure, the SDK consists of four main repository categories:

Manifest Repository The manifest repo (mcuxsdk-manifests) contains the west.yml manifest file that tracks all other repositories in the SDK.

Base Repositories Recorded in submanifests/base.yml and loaded in the root west.yml manifest file. These are the foundational repositories that build the SDK:

- **Devices:** MCU-specific support packages
- **Examples:** Demonstration applications and code samples
- **Boards:** Board support packages

Middleware Repositories Recorded in the submanifests/middleware subdirectory, categorized according to functionality:

- **Connectivity:** Networking stacks, USB, and communication protocols
- **Security:** Cryptographic libraries and secure boot components
- **Wireless:** Bluetooth, IEEE 802.15.4, and other wireless protocols
- **Graphics:** Display drivers and UI frameworks
- **Audio:** Audio processing and voice recognition libraries
- **Machine Learning:** AI inference engines and neural network libraries
- **Safety:** IEC60730B safety libraries
- **Motor Control:** Motor control and real-time control libraries

Internal Repositories Recorded in submanifests/internal.yml and grouped into the “bifrost” group. These are only visible to NXP internal developers and hosted on NXP internal git servers.

Repository Hosting Public repositories are hosted on GitHub under these organizations:

- [nxp-mcuxpresso](#)
- [NXP](#)
- [nxp-zephyr](#)

Internal repositories are hosted on NXP’s private Git infrastructure.

Benefits of This Architecture **Selective Integration:** Projects include only required components, reducing memory footprint and build complexity.

Independent Versioning: Each component maintains its own release cycle and version control.

Community Collaboration: Public repositories accept community contributions through standard Git workflows.

Scalable Maintenance: Component owners can update their repositories without affecting the entire SDK.

Workspace Management The west tool manages repository synchronization, version tracking, and workspace updates. All repositories are checked out under the mcuxsdk/ directory with their designated paths defined in the manifest files.

Development Workflows

Get started with building and running projects:

Using MCUXpresso Config Tools MCUXpresso Config tools provide a user-friendly way to configure hardware initialization of your projects. This guide explains the basic workflow with the MCUXpresso SDK west build system and the Config Tools.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- MCUXpresso Config Tools standalone installed (version 25.09 or above)
- MCUXpresso SDK Project that can be successfully built

Board Files MCUXpresso Config Tools generate source files for the board. These files include `pin_mux.c/h` and `clock_config.c/h`. The files contain initialization code functions that reflect the hardware configuration in the Config Tools. Within the SDK codebase, these files are specific for the board and either shared by multiple example projects or specific for one example. Open or import the configuration from the SDK project in the Config Tools and customize the settings to match the custom board or specific project use case and regenerate the code. See *User Guide for MCUXpresso Config Tools (Desktop)* (document [GSMCUXCTUG](#)) for details.

Note: When opening the configuration for SDK example projects, the board files may be shared across multiple examples. To ensure a separate copy of the board configuration files exists, create a freestanding project with copied board files.

Visual Studio Code To open the configuration in Visual Studio Code, use the context menu for the project to access Config Tools. See [MCUXpresso Extension Documentation](#) for details. Otherwise, use the manual workflow described in detail in the following section.

Manual Workflow Use the following steps:

1. Before using Config Tools, run the west command to get the project information for Config Tools from the SDK project files, for example:

```
west cfg_project_info -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_
->id=cm33_core0
```

This results in the creation of the project information json file that is searched by the config tools when the configuration is created. The parameters of the command should match the build parameters that will be used for the project.

2. Launch the MCUXpresso Config Tools and in the **Start development** wizard, select **Create a new configuration based on the existing IDE/Toolchain project**. Select the created “cfg_tools” subfolder as a project folder (for example: `...mcuxsdk/examples/demo_apps/hello_world/cfg_tools/`).

Updating the SDK West project **Note:** Updating project is supported with Config Tools V25.12 or newer only.

Changes in the Config tools generated source code modules may require adjustments to the toolchain project to ensure a successful build. These changes may mean, for example, adding the newly generated files, adding include paths, required drivers, or other SDK components.

This section describes how to manually resolve the changes needed in the project within the toolchain projects based on the SDK project managed by the West tool.

After the configuration in the Config Tools is finished, write updated files to the disk using the 'Update Code' command. The written files include a json file with the required changes for the toolchain project.

To resolve the changes in the project in the terminal, launch the west command that updates the project. For example:

```
west cfg_resolve -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_id=cm33_core0
```

This command updates the appropriate cmake and kconfig files to address the changes. After this, the application can be built.

Note: The `cfg_resolve` command supports additional arguments. Launch the `west cfg_resolve -h` command to get the list and description.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.60.4
- Keil MDK, version is 5.42
- MCUXpresso for VS Code v25.09
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices
FRDM-K32L3A6	K32L3A60VPJ1A

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

USB Host, Device, OTG Stack See the MCUXpresso SDK USB Stack User's Guide (document MCUXSDKUSBSUG) for more information.

TinyCBOR Concise Binary Object Representation (CBOR) Library

SDMMC stack The SDMMC software is integrated with MCUXpresso SDK to support SD/MMC/SDIO standard specification. This also includes a host adapter layer for bare-metal/RTOS applications.

PKCS#11 The PKCS#11 standard specifies an application programming interface (API), called "Cryptoki," for devices that hold cryptographic information and perform cryptographic functions. Cryptoki follows a simple object based approach, addressing the goals of technology independence (any kind of device) and resource sharing (multiple applications accessing multiple devices), presenting to applications a common, logical view of the device called a "cryptographic token".

Multicore Multicore Software Development Kit

mbedTLS mbedtls SSL/TLS library v2.x

llhttp HTTP parser llhttp

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

File systemFatfs The FatFs file system is integrated with the MCUXpresso SDK and can be used to access either the SD card or the USB memory stick when the SD card driver or the USB Mass Storage Device class implementation is used.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known issues

This section lists the known issues, limitations, and/or workarounds.

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

Build warning in freertos_tickless example

A build warning appears in the freertos_tickless example while working in the ArmGCC environment.

```
.. code-block:: none
  `c:\c\pkg\cmsis\core\include\core_cm0plus.h:854:52: warning: array subscript 14 is above array bounds_
  ↳ of 'volatile uint32_t[8]' {aka 'volatile long unsigned int[8]'} [-Warray-bounds]`.
```

Example freertos_lpspi fail before the console output

The example freertos_lpspi fails before the message “LPSPi master transfer completed successfully.” appears in the console output.

Console output:

```
***
FreeRTOS LPSPi example start.
This example use one lpspi instance as master and another as slave on a single board.
Master and slave are both use interrupt way.
Please make sure you make the correct line connection. Basically, the connection is:
LPSPi_master -- LPSPi_slave
```

(continues on next page)

(continued from previous page)

```

CLK -- CLK
PCS -- PCS
SOUT -- SIN
SIN -- SOUT  ``

```

The freertos_tickless cm0plus example does not complete successfully

The example starts correctly but does not perform as expected (Ticks do not printed on the console).

Examples: freertos_tickless

Affected toolchains: All

The freertos_lpuart example does not complete successfully

The example hangs after console output 'FreeRTOS LPUART driver example'.

Examples: freertos_lpuart

Affected toolchains: All

The example does not perform as expected (Ticks do not printed on the console or the application does not wake up from the sleep mode).

Examples: freertos_tickless

Affected toolchains: All

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version
-

CACHE LPCAC

[2.1.2]

- Improvements
 - Add memory barrier when enabling/disabling cache.

[2.1.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.1.

[2.1.0]

- Bug Fixes
 - Deleted L1CACHE_EnableCodeCacheWriteBuffer function because of no enable bit in register CPCR2.

[2.0.0]

- Initial version.
-

CACHE LPLMEM

[2.1.2]

- Improvements
 - Add memory barrier when enabling/disabling cache.

[2.1.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.4.

[2.1.0]

- Bug Fixes
 - Deleted L1CACHE_EnableCodeCacheWriteBuffer function because of no enable bit in register CPCR2.

[2.0.0]

- Initial version.
-

CAU3

[2.0.5]

- Improvements
 - Fix MISRA C-2012 issue.

[2.0.4]

- Improvements
 - Fix MISRA C-2012 issue.

[2.0.3]

- Improvements
 - Fix MISRA C-2012 issue.

[2.0.2]

- New Features
 - Added FSL_CAU3_USE_HW_SEMA compile time macro. When enabled, all CAU3 API functions lock hardware semaphore on function entry and release the hardware semaphore on function return.

[2.0.1]

- Improvements
 - Replaced static `cau3_make_mems_private()` with public `CAU3_MakeMemsPrivate()`.
 - Removed the `cau3_make_mems_private()` from `CAU3_Init` to allow loading multiple images.

[2.0.0]

- Initial version.
-

CLOCK

[2.2.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.1, rule 10.8, rule 14.4 and so on.

[2.2.0]

- New features
 - Moved `SDK_DelayAtLeastUs` function from clock driver to common driver.

[2.1.0]

- New features
 - Added new API `CLOCK_DelayAtLeastUs()` implemented by DWT to allow users to set delay in unit of microsecond.

[2.0.0]

- Initial version.
-

COMMON

[2.6.3]

- Bug Fixes
 - Fixed build issue of CMSIS PACK BSP example caused by CMSIS 6.1 issue.

[2.6.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule for implicit conversions in boolean contexts

[2.6.1]

- Improvements
 - Support Cortex M23.

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs `InitCriticalSectionMeasurementContext`, `DisableGlobalIRQEx` and `EnableGlobalIRQEx` so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irq's that mount under irqsteer interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with zephyr.

[2.4.0]

- New Features
 - Added EnableIRQWithPriority, IRQ_SetPriority, and IRQ_ClearPendingIRQ for ARM.
 - Added MSDK_EnableCpuCycleCounter, MSDK_GetCpuCycleCount for ARM.

[2.3.3]

- New Features
 - Added NETC into status group.

[2.3.2]

- Improvements
 - Make driver aarch64 compatible

[2.3.1]

- Bug Fixes
 - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef `__VECTOR_TABLE` to avoid duplicate definition in `cmsis_clang.h`

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of `SDK_DelayAtLeastUs` with DWT, use macro `SDK_DELAY_USE_DWT` to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include `RTE_Components.h` for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved `SDK_DelayAtLeastUs` function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
 - Added new feature macro switch “FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

CRC**[2.0.5]**

- Bug fix:
 - Fix CERT-C issue with boolean-to-unsigned integer conversion.

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

DAC

[2.1.3]

- Improvements
 - ‘dac_config_t’ already contains a member ‘enableOpampBuffer’, but it is not used. This update uses ‘enableOpampBuffer’ to control the configuration of GCR[BUF_EN].

[2.1.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.1.0]

- New Features
 - Added support for period trigger mode.
 - Added support for sync trigger between dac instances.
 - Added support for configuring DAC sync cycles.
 - Added support for internal reference current selection.
 - Enabled buffer mode manually for K4 series board.

[2.0.2]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.3 and rule 17.7.

[2.0.1]

- New Features
 - Added a control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

DMAMUX**[2.1.3]**

- Improvements
 - Wrap DMAMUX_GetInstance into FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL to avoid build issues.

[2.1.2]

- Bug Fixes
 - Add macro FSL_DMAMUX_CHANNEL_NUM to calculate correct DMAMUX channel number when input EDAM channel number.

[2.1.1]

- Improvements
 - Add macro FSL_FEATURE_DMAMUX_CHANNEL_NEEDS_ENDIAN_CONVERT and DMAMUX_CHANNEL_ENDIAN_CONVERTn to do channel endian convert.

[2.1.0]

- Improvements
 - Modify the type of parameter source from uint32_t to int32_t in the DMA-MUX_SetSource.

[2.0.5]

- Improvements
 - Added feature FSL_FEATURE_DMAMUX_CHCFG_REGISTER_WIDTH for the difference of CHCFG register width.

[2.0.4]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.0.3]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 10.4 and rule 10.3.

[2.0.2]

- New Features
 - Added an always-on enable feature to a DMA channel for ULP1 DMAMUX support.

[2.0.1]

- Bug Fixes
 - Fixed the build warning issue by changing the type of parameter source from uint8_t to uint32_t when setting DMA request source in DMAMUX_SetSourceChange.

[2.0.0]

- Initial version.
-

EDMA

[2.4.7]

- Bug Fixes
 - Fixed coverity MSG issues with CERT INT31-C compliance.

[2.4.6]

- Bug Fixes
 - Fixed the EDMA header index retrieval error caused by done bit calculation mistake issue.

[2.4.5]

- Bug Fixes
 - Fixed memory convert would convert NULL as zero address issue.

[2.4.4]

- Bug Fixes
 - Fixed comments by replacing STCD with TCD
 - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.
 - Fixed violations of MISRA C-2012 rule 10.8,5.6.

[2.4.3]

- Improvements
 - Added FSL_FEATURE_MEMORY_HAS_ADDRESS_OFFSET to convert the address between system mapped address and dma quick access address.
- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt for the non scatter gather case.

[2.4.2]

- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt by correct the initial value of the header.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.4.1]

- Bug Fixes
 - Added clear CITER and BITER registers in EDMA_AbortTransfer to make sure the TCD registers in a correct state for next calling of EDMA_SubmitTransfer.
 - Removed the clear DONE status for ESG not enabled case to avoid DONE bit cleared unexpectedly.

[2.4.0]

- Improvements
 - Added api EDMA_EnableContinuousChannelLinkMode to support continuous link mode.
 - Added apis EDMA_SetMajorOffsetConfig/EDMA_TcdSetMajorOffsetConfig to support major loop address offset feature.
 - Added api EDMA_EnableChannelMinorLoopMapping for minor loop offset feature.
 - Removed the redundant IRQ Handler in edma driver.

[2.3.2]

- Improvements
 - Fixed HIS ccm issue in function EDMA_PrepareTransferConfig.
 - Fixed violations of MISRA C-2012 rule 11.6, 10.7, 10.3, 18.1.
- Bug Fixes

- Added ACTIVE & BITER & CITER bitfields to determine the channel status to fixed the issue of the transfer request cannot submit by function EDMA_SubmitTransfer when channel is idle.

[2.3.1]

- Improvements
 - Added source/destination address alignment check.
 - Added driver IRQ handler support for multi DMA instance in one SOC.

[2.3.0]

- Improvements
 - Added new api EDMA_PrepareTransferConfig to allow different configurations of width and offset.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4, 10.1.
 - Fixed the Coverity issue regarding out-of-bounds write.

[2.2.0]

- Improvements
 - Added peripheral-to-peripheral support in EDMA driver.

[2.1.9]

- Bug Fixes
 - Fixed MISRA issue: Rule 10.7 and 10.8 in function EDMA_DisableChannelInterrupts and EDMA_SubmitTransfer.
 - Fixed MISRA issue: Rule 10.7 in function EDMA_EnableAsyncRequest.

[2.1.8]

- Bug Fixes
 - Fixed incorrect channel preemption base address used in EDMA_SetChannelPreemptionConfig API which causes incorrect configuration of the channel preemption register.

[2.1.7]

- Bug Fixes
 - Fixed incorrect transfer size setting.
 - * Added 8 bytes transfer configuration and feature for RT series;
 - * Added feature to support 16 bytes transfer for Kinetis.
 - Fixed the issue that EDMA_HandleIRQ would go to incorrect branch when TCD was not used and callback function not registered.

[2.1.6]

- Bug Fixes
 - Fixed KW3X MISRA Issue.
 - * Rule 14.4, 10.8, 10.4, 10.7, 10.1, 10.3, 13.5, and 13.2.
- Improvements
 - Cleared the IRQ handler unavailable for specific platform with macro `FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SHARED_OFFSET`.

[2.1.5]

- Improvements
 - Improved EDMA IRQ handler to support half interrupt feature.

[2.1.4]

- Bug Fixes
 - Cleared enabled request, status during `EDMA_Init` for the case that EDMA is halted before reinitialization.

[2.1.3]

- Bug Fixes
 - Added clear DONE bit in IRQ handler to avoid overwrite TCD issue.
 - Optimized above solution for the case that transfer request occurs in callback.

[2.1.2]

- Improvements
 - Added interface to get next TCD address.
 - Added interface to get the unused TCD number.

[2.1.1]

- Improvements
 - Added documentation for eDMA data flow when scatter/gather is implemented for the `EDMA_HandleIRQ` API.
 - Updated and corrected some related comments in the `EDMA_HandleIRQ` API and `edma_handle_t` struct.

[2.1.0]

- Improvements
 - Changed the `EDMA_GetRemainingBytes` API into `EDMA_GetRemainingMajorLoopCount` due to eDMA IP limitation (see API comments/note for further details).

[2.0.5]

- Improvements
 - Added pubweak DriverIRQHandler for K32H844P (16 channels shared).

[2.0.4]

- Improvements
 - Added support for SoCs with multiple eDMA instances.
 - Added pubweak DriverIRQHandler for KL28T DMA1 and MCIMX7U5_M4.

[2.0.3]

- Bug Fixes
 - Fixed the incorrect pubweak IRQHandler name issue, which caused re-definition build errors when client set his/her own IRQHandler, by changing the 32-channel IRQHandler name to DriverIRQHandler.

[2.0.2]

- Bug Fixes
 - Fixed incorrect minorLoopBytes type definition in `_edma_transfer_config` struct, and defined `minorLoopBytes` as `uint32_t` instead of `uint16_t`.

[2.0.1]

- Bug Fixes
 - Fixed the eDMA callback issue (which did not check valid status) in `EDMA_HandleIRQ` API.

[2.0.0]

- Initial version.
-

EWM

[2.0.4]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules: 10.1, 10.3.

[2.0.2]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules: 10.3, 10.4.

[2.0.1]

- Bug Fixes
 - Fixed the hard fault in EWM_Deinit.

[2.0.0]

- Initial version.
-

FLASH

[3.3.0]

- New Feature
 - Support for EEPROM Quick Write on devices with FTFC

[3.2.0]

- New Feature
 - Basic support for FTFC

[3.1.3]

- New Feature
 - Support 512KB flash for Kinetis E serials.

[3.1.2]

- Bug Fixes — Remove redundant comments.

[3.1.1]

- Bug Fixes — MISRA C-2012 issue fixed: rule 10.3

[3.1.0]

- New Feature
 - Support erase flash asynchronously.

[3.0.2]

- Bug Fixes — MISRA C-2012 issue fixed: rule 8.4, 17.7, 10.4, 16.1, 21.15, 11.3, 10.7 — building warning -Wnull-dereference on arm compiler v6

[3.0.1]

- New Features
 - Added support FlexNVM alias for (kw37/38/39).

[3.0.0]

- Improvements
 - Reorganized FTFx flash driver source file.
 - Extracted flash cache driver from FTFx driver.
 - Extracted flexnvm flash driver from FTFx driver.

[2.3.1]

- Bug Fixes
 - Unified Flash IFR design from K3.
 - New encoding rule for K3 flash size.

[2.3.0]

- New Features
 - Added support for device with LP flash (K3S/G).
 - Added flash prefetch speculation APIs.
- Improvements
 - Refined flash_cache_clear function.
 - Reorganized the member of flash_config_t struct.

[2.2.0]

- New Features
 - Supported FTFL device in FLASH_Swap API.
 - Supported various pflash start addresses.
 - Added support for KV58 in cache clear function.
 - Added support for device with secondary flash (KW40).
- Bug Fixes
 - Compiled execute-in-ram functions as PIC binary code for driver use.
 - Added missed flexram properties.
 - Fixed unaligned variable issue for execute-in-ram function code array.

[2.1.0]

- Improvements
 - Updated coding style to align with KSDK 2.0.
 - Different-alignment-size support for pflash and flexnvm.
 - Improved the implementation of execute-in-ram functions.

[2.0.0]

- Initial version
-

FLEXBUS

[2.1.1]

- Bug Fixes
- MISRA C-2012 issue fixed: rule 10.3, 10.4, and 14.4.

[2.1.0]

- Bug Fixes
 - Added secondary wait states (SWS), which enabled flag into configuration structure, and updated FLEXBUS_Init() function according to SWS.
 - Fixed MISRA issues regarding rule 10.1/10.4.

[2.0.2]

- Bug Fixes
 - Removed dissociated chip clearing operation while initializing the FLEXBUS module. Only the associated chip's register will be cleared.

[2.0.1]

- Bug Fixes
 - Corrected FLEXBUS_Deinit() function to disable clock.

[2.0.0]

- Initial version.
-

FLEXIO

[2.3.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.
 - Added more pin control functions.

[2.2.3]

- Improvements
 - Adapter the FLEXIO driver to platforms which don't have system level interrupt controller, such as NVIC.

[2.2.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.1]

- Improvements
 - Added doxygen index parameter comment in FLEXIO_SetClockMode.

[2.2.0]

- New Features
 - Added new APIs to support FlexIO pin register.

[2.1.0]

- Improvements
 - Added API FLEXIO_SetClockMode to set flexio channel counter and source clock.

[2.0.4]

- Bug Fixes
 - Fixed MISRA 8.4 issues.

[2.0.3]

- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.0.2]

- Improvements
 - Split FLEXIO component which combines all flexio/flexio_uart/flexio_i2c/flexio_i2s drivers into several components: FlexIO component, flexio_uart component, flexio_i2c_master component, and flexio_i2s component.
- Bug Fixes
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.0.1]

- Bug Fixes
 - Fixed the dozen mode configuration error in FLEXIO_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
-

FLEXIO_I2C

[2.6.2]

- Improvements
 - Added timeout for while loop in FLEXIO_I2C_MasterTransferBlocking().
- Bug Fixes
 - Fixed build issues related to I2C_RETRY_TIMES.

[2.6.1]

- Bug Fixes
 - Fixed coverity issues

[2.6.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_flexio_i2c_master.c.

[2.4.0]

- Improvements
 - Added delay of 1 clock cycle in FLEXIO_I2C_MasterTransferRunStateMachine to ensure that bus would be idle before next transfer if master is nacked.
 - Fixed issue that the restart setup time is less than the time in I2C spec by adding delay of 1 clock cycle before restart signal.

[2.3.0]

- Improvements
 - Used 3 timers instead of 2 to support transfer which is more than 14 bytes in single transfer.
 - Improved FLEXIO_I2C_MasterTransferGetCount so that the API can check whether the transfer is still in progress.
- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.2.0]

- New Features
 - Added timeout mechanism when waiting certain state in transfer API.
 - Added an API for checking bus pin status.
- Bug Fixes
 - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.
 - Added codes in FLEXIO_I2C_MasterTransferCreateHandle to clear pending NVIC IRQ, disable internal IRQs before enabling NVIC IRQ.
 - Modified code so that during master's nonblocking transfer the start and slave address are sent after interrupts being enabled, in order to avoid potential issue of sending the start and slave address twice.

[2.1.7]

- Bug Fixes
 - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking did not wait for STOP bit sent.
 - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
 - Fixed the issue that I2C master did not check whether bus was busy before transfer.

[2.1.6]

- Bug Fixes
 - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed the subaddress.

[2.1.5]

- Improvements
 - Unified component full name to FLEXIO I2C Driver.

[2.1.4]

- Bug Fixes
 - The following modifications support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.3]

- Improvements
 - Changed the prototype of FLEXIO_I2C_MasterInit to return kStatus_Success if initialized successfully or to return kStatus_InvalidArgument if “(srcClock_Hz / masterConfig->baudRate_Bps) / 2 - 1” exceeds 0xFFU.

[2.1.2]

- Bug Fixes
 - Fixed the FLEXIO I2C issue where the master could not receive data from I2C slave in high baudrate.
 - Fixed the FLEXIO I2C issue where the master could not receive NAK when master sent non-existent addr.
 - Fixed the FLEXIO I2C issue where the master could not get transfer count successfully.
 - Fixed the FLEXIO I2C issue where the master could not receive data successfully when sending data first.
 - Fixed the Dozen mode configuration error in FLEXIO_I2C_MasterInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
 - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking API called FLEXIO_I2C_MasterTransferCreateHandle, which lead to the s_flexioHandle/s_flexioIsr/s_flexioType variable being written. Then, if calling FLEXIO_I2C_MasterTransferBlocking API multiple times, the s_flexioHandle/s_flexioIsr/s_flexioType variable would not be written any more due to it being out of range. This lead to the following situation: NonBlocking transfer APIs could not work due to the fail of register IRQ.

[2.1.1]

- Bug Fixes
 - Implemented the FLEXIO_I2C_MasterTransferBlocking API which is defined in header file but has no implementation in the C file.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.

FLEXIO_I2S**[2.2.2]**

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 12.4.

[2.2.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.2.0]

- New Features
 - Added timeout mechanism when waiting certain state in transfer API.
- Bug Fixes
 - Fixed IAR Pa082 warnings.
 - Fixed violations of the MISRA C-2012 rules 10.4, 14.4, 11.8, 11.9, 10.1, 17.7, 11.6, 10.3, 10.7.

[2.1.6]

- Bug Fixes
 - Added reset flexio before flexio i2s init to make sure flexio status is normal.

[2.1.5]

- Bug Fixes
 - Fixed the issue that I2S driver used hard code for bitwidth setting.

[2.1.4]

- Improvements
 - Unified component's full name to FLEXIO I2S (DMA/EDMA) driver.

[2.1.3]

- Bug Fixes
 - The following modifications support FLEXIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.2]

- New Features
 - Added configure items for all pin polarity and data valid polarity.
 - Added default configure for pin polarity and data valid polarity.

[2.1.1]

- Bug Fixes
 - Fixed FlexIO I2S RX data read error and eDMA address error.
 - Fixed FlexIO I2S slave timer compare setting error.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
-

FLEXIO_I2S_EDMA

[2.1.9]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 12.4.

[2.1.8]

- Improvements
 - Applied EDMA ERRATA 51327.
-

FLEXIO_SPI

[2.4.3]

- Improvements
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.4.2]

- Bug Fixes
 - Fixed FLEXIO_SPI_MasterTransferBlocking and FLEXIO_SPI_MasterTransferNonBlocking issue in CS continuous mode, the CS might not be continuous.

[2.4.1]

- Bug Fixes
 - Fixed coverity issues

[2.4.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.3.5]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.4]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API

[2.3.3]

- Bugfixes
 - Fixed cs-continuous mode.

[2.3.2]

- Improvements
 - Changed FLEXIO_SPI_DUMMYDATA to 0x00.

[2.3.1]

- Bugfixes
 - Fixed IRQ SHIFTBUF overrun issue when one FLEXIO instance used as multiple SPIs.

[2.3.0]

- New Features
 - Supported FLEXIO_SPI slave transfer with continuous master CS signal and CPHA=0.
 - Supported FLEXIO_SPI master transfer with continuous CS signal.
 - Support 32 bit transfer width.
- Bug Fixes
 - Fixed wrong timer compare configuration for dma/edma transfer.
 - Fixed wrong byte order of rx data if transfer width is 16 bit, since the we use shifter buffer bit swapped/byte swapped register to read in received data, so the high byte should be read from the high bits of the register when MSB.

[2.2.1]

- Bug Fixes
 - Fixed bug in FLEXIO_SPI_MasterTransferAbortEDMA that when aborting EDMA transfer EDMA_AbortTransfer should be used rather than EDMA_StopTransfer.

[2.2.0]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed MISRA 10.4 issues.
 - Added codes in FLEXIO_SPI_MasterTransferCreateHandle and FLEXIO_SPI_SlaveTransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.1.3]

- Improvements
 - Unified component full name to FLEXIO SPI(DMA/EDMA) Driver.
- Bug Fixes
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.2]

- Bug Fixes
 - The following modification support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.1]

- Bug Fixes
 - Fixed bug where FLEXIO SPI transfer data is in 16 bit per frame mode with eDMA.
 - Fixed bug when FLEXIO SPI works in eDMA and interrupt mode with 16-bit per frame and Lsbfirst.
 - Fixed the Dozen mode configuration error in FLEXIO_SPI_MasterInit/FLEXIO_SPI_SlaveInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
- Improvements
 - Added #ifndef/#endif to allow users to change the default TX value at compile time.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
- Bug Fixes

- Fixed the error register address return for 16-bit data write in FLEXIO_SPI_GetTxDataRegisterAddress.
 - Provided independent IRQHandler/transfer APIs for Master and slave to fix the baudrate limit issue.
-

FLEXIO_UART

[2.6.4]

- Improvements
 - Make UART_RETRY_TIMES configurable by CONFIG_UART_RETRY_TIMES.

[2.6.3]

- Bug Fixes
 - Fixed coverity issues

[2.6.2]

- Bug Fixes
 - Fixed coverity issues

[2.6.1]

- Improvements
 - Improve baudrate calculation method, to support higher frequency FlexIO clock source.

[2.6.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
 - Added API FLEXIO_UART_FlushShifters to flush UART fifo.

[2.4.0]

- Improvements
 - Use separate data for TX and RX in flexio_uart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling FLEXIO_UART_TransferReceiveNonBlocking, the received data count returned by FLEXIO_UART_TransferGetReceiveCount is wrong.

[2.3.0]

- Improvements
 - Added check for baud rate's accuracy that returns kStatus_FLEXIO_UART_BaudrateNotSupport when the best achieved baud rate is not within 3% error of configured baud rate.
- Bug Fixes
 - Added codes in FLEXIO_UART_TransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.2.0]

- Improvements
 - Added timeout mechanism when waiting for certain states in transfer driver.
- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.1.6]

- Bug Fixes
 - Fixed IAR Pa082 warnings.
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.5]

- Improvements
 - Triggered user callback after all the data in ringbuffer were received in FLEXIO_UART_TransferReceiveNonBlocking.

[2.1.4]

- Improvements
 - Unified component full name to FLEXIO UART(DMA/EDMA) Driver.

[2.1.3]

- Bug Fixes
 - The following modifications support FLEXIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.2]

- Bug Fixes
 - Fixed the transfer count calculation issue in FLEXIO_UART_TransferGetReceiveCount, FLEXIO_UART_TransferGetSendCount, FLEXIO_UART_TransferGetReceiveCountDMA, FLEXIO_UART_TransferGetSendCountDMA, FLEXIO_UART_TransferGetReceiveCountEDMA and FLEXIO_UART_TransferGetSendCountEDMA.
 - Fixed the Dozen mode configuration error in FLEXIO_UART_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
 - Added code to report errors if the user sets a too-low-baudrate which FLEXIO cannot reach.
 - Disabled FLEXIO_UART receive interrupt instead of all NVICs when reading data from ring buffer. If ring buffer is used, receive nonblocking will disable all NVIC interrupts to protect the ring buffer. This had negative effects on other IPs using interrupt.

[2.1.1]

- Bug Fixes
 - Changed the API name FLEXIO_UART_StopRingBuffer to FLEXIO_UART_TransferStopRingBuffer to align with the definition in C file.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added txSize/rxSize in handle structure to record the transfer size.
- Bug Fixes
 - Added an error handle to handle the situation that data count is zero or data buffer is NULL.

FLEXIO_UART_EDMA

[2.3.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.3.0]

- Refer FLEXIO_UART driver change log to 2.3.0
-

GPIO

[2.8.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 Rule 10.1, 5.7.

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API GPIO_GetPinsDMARequestFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQS) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of `_PinXXX()` and `_PortXXX`.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “`_PinConfigure`” to “`GPIO_PinInit`”.
-

INTMUX

[2.0.4]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.4.

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 17.7 and 18.1.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, and 14.4.

[2.0.1]

- Improvements
 - Added weak function implementations of INTMUX1_x_DriverIRQHandler. x ranges from 0 to 7 to support 8 channels.

[2.0.0]

- Initial version.
-

LLWU

[2.0.5]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.
 - Fixed the issue that function LLWU_SetExternalWakeupPinMode() does not work on 32-bit width platforms.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3, 10.4, 10.6, 10.7, 11.3.
 - Fixed issue that LLWU_ClearExternalWakeupPinFlag may clear other filter flags by mistake on platforms with 32-bit LLWU registers.

[2.0.3]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 16.4.

[2.0.2]

- Improvements
 - Corrected driver function LLWU_SetResetPinMode parameter name.
- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, 10.8, 10.4, 10.3.

[2.0.1]

- Other Changes
 - Updates for KL8x.

[2.0.0]

- Initial version.
-

LPADC

[2.9.5]

- Improvements
 - Fix doxygen issue, grouping command should be balanced.

[2.9.4]

- Improvements
 - Update LPADC_GetDefaultConfig, change default conversionAverageMode value to: kLPADC_ConversionAverage128 for 3 bit width. kLPADC_ConversionAverage1024 for 4 bit width.

[2.9.3]

- Improvements
 - Add timeout for while loop code.

[2.9.2]

- Improvements
 - Fixed CERT-C issues.

[2.9.1]

- Bug Fixes
 - Fixed incorrect channel B FIFO selection logic.

[2.9.0]

- Bug Fixes
 - Add code to handle the case where GCC[GAIN_CAL] is a signed number.
 - Split LPADC_FinishAutoCalibration function into two functions.
 - Improved LPADC driver.

[2.8.4]

- Bug Fixes
 - Remove function 'LPADC_SetOffsetValue' assert statement, this statement may cause runtime errors in existing code.

[2.8.3]

- Bug Fixes
 - Fixed SDK lpadc driver examples compile issue, move condition 'commandId < ADC_CV_COUNT' to a more appropriate location.

[2.8.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 18.1, 10.3, 10.1 and 10.4.

[2.8.1]

- Bug Fixes
 - Fixed LPADC sample mode enum name mistake.

[2.8.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed function LPADC_GetConvResult() issue.
 - Fixed function LPADC_SetConvCommandConfig() bugs.

[2.7.2]

- Improvements
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.1]

- Improvements
 - Corrected descriptions of several functions.
 - Improved function LPADC_GetOffsetValue and LPADC_SetOffsetValue.
 - Revert changes of feature macros for lpadc.
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.8.
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.0]

- Improvements
 - Added supports of CFG2 register.
 - Removed some useless macros.

[2.6.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules.
 - Fixed LPADC driver code compile error issue.

[2.6.1]

- Improvements
 - Updated the use of macros in the driver code.

[2.6.0]

- Improvements
 - Added the API LPADC_SetOffset12BitValue() to configure 12bit ADC conversion offset trim value manually.
 - Added the API LPADC_SetOffset16BitValue() to configure 16bit ADC conversion offset trim value manually.
 - Added API to set offset calibration mode.
 - Added configuration of alternate channel.
 - Updated auto calibration API and added calibration value conversion API.
- New feature
 - Added API LPADC_EnableHardwareTriggerCommandSelection() to enable trigger commands controlled by ADC_ETC.
 - Updated LPADC_DoAutoCalibration() to allow doing something else before the ADC initialization to be totally complete. Enhance initialization duration time of the ADC.
 - Added two new APIs to get/set calibration value.

[2.5.2]

- Improvements
 - Added while loop, LPADC_GetConvResult() will return only when the FIFO will not be empty.

[2.5.1]

- Bug Fixes
 - Fixed some typos in Lpadc driver comments.

[2.5.0]

- Improvements
 - Added missing items to enable trigger interrupts.

[2.4.0]

- New features
 - Added APIs to get/clear trigger status flags.

[2.3.0]

- Improvements
 - Removed LPADC_MeasureTemperature() function for the LPADC supports different temperature sensor calculation equations.

[2.2.1]

- Improvements
 - Optimized LPADC_MeasureTemperature() function to support the specific series with flash solidified calibration value.
 - Clean doxygen warnings.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, rule 10.8 and rule 17.7.

[2.2.0]

- New Feature
 - Added API LPADC_MeasureTemperature() to get correct temperature from the internal sensor.
- Improvements
 - Separated lpadc_conversion_resolution_mode_t with related feature macro.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 10.3, 10.4, 10.6, 10.7 and 17.7.

[2.1.1]

- Improvements
 - Updated the gain calibration formula.
 - Used feature to segregate the new item kLPADC_TriggerPriorityPreemptSubsequently.

[2.1.0]

- New Features
 - Added the API LPADC_SetOffsetValue() to support configure offset trim value manually.
 - Added the API LPADC_DoOffsetCalibration() to do offset calibration independently.
- Improvements
 - Improved the usage of macros and removed invalid macros.

[2.0.2]

- Improvements
 - Added support for platforms with 2 FIFOs and different calibration measures.

[2.0.1]

- Bug Fixes
 - Ensured the API LPADC_SetConvCommandConfig configure related registers correctly.

[2.0.0]

- Initial version.
-

LPCMP

[2.3.2]

- Improvements
 - Fixed LPCMP CERT-C issues.

[2.3.1]

- Improvements
 - Update LPCMP driver to be compatible with platforms that do not support LPCMP nano power mode selection.

[2.3.0]

- New Feature
 - Added some new features for platforms which support
 - * Plus input source selection.
 - * Minus input source selection.
 - * CMP to DAC link.
- Improvements
 - Removed some new features for platforms which doesn't support
 - * Functional clock source selection.
 - * DAC high power mode selection.
 - * Round Robin clock source selection.
 - * Round Robin trigger source selection.
 - * Round Robin channel sample numbers setting.
 - * Round Robin channel sample time threshold setting.
 - * Round Robin internal trigger configuration.

[2.2.0]

- Improvements
 - Change `FSL_FEATURE_LPCMP_HAS_NO_CCR0_CMP_STOP_EN` to `FSL_FEATURE_LPCMP_HAS_CCR0_CMP_STOP_EN`.

[2.1.3]

- New Feature
 - Added new macro to handle the case where some instances do not have the CCR0 `CMP_STOP_EN` bit field.

[2.1.2]

- New Feature
 - Add macros to be compatible with some platforms that do not have the CCR0 `CMP_STOP_EN` bitfield.

[2.1.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.0]

- New Features:
 - Supported round robin mode and window mode feature.

[2.0.3]

- Bug Fixes:
 - Fixed the violation of MISRA-2012 rule 17.7.

[2.0.2]

- Bug Fixes:
 - The current API LPCMP_ClearStatusFlags has to check w1c bits.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

LPI2C

[2.6.3]

- Bug Fixes
 - Fixed static analysis identified issues.

[2.6.2]

- Improvements
 - Added timeout for while loop in LPI2C_TransferStateMachineSendCommand().

[2.6.1]

- Bug Fixes
 - Fixed coverity issues.

[2.6.0]

- New Feature
 - Added common IRQ handler entry LPI2C_DriverIRQHandler.

[2.5.7]

- Improvements
 - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
 - Fixed LPI2C_SlaveInit() - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
 - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
 - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
 - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
 - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
 - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
 - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
 - Before master transfer with transactional APIs, enable master function while disable slave function and vise versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file `fsl_lpi2c.c`.
- Bug Fixes
 - Fixed bug in `LPI2C_MasterInit` that the `MCFGR2`'s value set in `LPI2C_MasterSetBaudRate` may be overwritten by mistake.

[2.3.2]

- Improvements
 - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
 - Updated `LPI2C_GetCyclesForWidth` to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
 - Fixed bug in `LPI2C_SlaveTransferHandleIRQ` that when restart detect event happens the transfer structure should not be cleared.
 - Fixed bug in `LPI2C_RunTransferStateMachine`, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.
 - Fixed bug in slave filter doze enable, that when `FILTDZ` is set it means disable rather than enable.
 - Fixed bug in the usage of `LPI2C_GetCyclesForWidth`. First its return value cannot be used directly to configure the slave `FILTSDA`, `FILTSCL`, `DATAVD` or `CLKHOLD`, because the real cycle width for them should be `FILTSDA+3`, `FILTSCL+3`, `FILTSCL+DATAVD+3` and `CLKHOLD+3`. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
 - Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
 - Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features
 - Supported reading more than 256 bytes of data in one transfer as master.
 - Added API `LPI2C_GetInstance`.
- Bug Fixes
 - Fixed bug in `LPI2C_MasterTransferAbortEDMA`, `LPI2C_MasterTransferAbort` and `LPI2C_MasterTransferHandleIRQ` that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.

- Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
- Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be $2^{\text{prescaler}}$ rather than prescaler.
- Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
- Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes

- Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
- MISRA C-2012 issue fixed.
 - * Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes

- Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes

- Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the kLPI2C_MasterNackDetectFlag is expected, so master should not check and clear kLPI2C_MasterNackDetectFlag when remainingBytes is zero, in case FIFO is emptied when stop command has not been sent yet.
- Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes

- MISRA C-2012 issue fixed.
 - * Fixed rule 10.3, 14.4, 15.5.
- Fixed unaligned access issue in LPI2C_RunTransferStateMachine.
- Fixed uninitialized variable issue in LPI2C_MasterTransferHandleIRQ.
- Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
- Fixed MISRA issues.

- * Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
- Fixed the waitTimes variable not re-assignment issue for each byte read.
- New Features
 - Added the IRQHandler for LPI2C5 and LPI2C6 instances.
- Improvements
 - Updated the LPI2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.

[2.1.9]

- Bug Fixes
 - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
 - Fixed Coverity issue of operands did not affect the result in LPI2C_SlaveReceive and LPI2C_SlaveSend.
 - Removed STOP signal wait when NAK detected.
 - Cleared slave repeat start flag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
 - Fixed the transfer issue with LPI2C_MasterTransferNonBlocking, kLPI2C_TransferNoStopFlag, with the wait transfer done through callback in a way of not doing a blocking transfer.
 - Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
 - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
 - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
 - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.
 - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
 - Extended the Driver IRQ handler to support LPI2C4.
 - Changed to use ARRAY_SIZE(kLpi2cBases) instead of FEATURE COUNT to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
 - Fixed the LPI2C_MasterTransferEDMA receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.
 - Fixed the issue by enabling IntMajor interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in LPI2C_MasterEDMACallback API.

[2.1.3]

- Improvements
 - Added LPI2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
 - Added LPI2C_MasterTransferBlocking API.

[2.1.2]

- Bug Fixes
 - In LPI2C_SlaveTransferHandleIRQ, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes
 - Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccessful sending of the start flag, so the transfer could not start.
 - Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
 - API name changed:
 - * LPI2C_MasterTransferCreateHandle -> LPI2C_MasterCreateHandle.

- * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
- * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
- * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
- * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
- * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
- * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
- * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.
-

LPI2C_EDMA

[2.4.6]

- Bug Fixes
 - Fixed static analysis identified issues.

[2.4.5]

- Improvements
 - Added condition to IRQ handler to check whether the interrupt is enabled - kLPI2C_MasterTxReadyFlag.

[2.4.4]

- Improvements
 - Added support for 2KB data transfer

[2.4.3]

- Improvements
 - Added support for separated IRQ handlers.

[2.4.2]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.1]

- Refer LPI2C driver change log 2.0.0 to 2.4.1
-

LPIT

[2.1.3]

- Bug Fixes
 - Fixed doxygen generation warnings.

[2.1.2]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.1.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.0]

- Improvements
 - Add new function LPIT_SetTimerValue to set timeout period.

[2.0.2]

- Improvements
 - Improved LPIT_SetTimerPeriod implementation, configure timeout value with LPIT ticks minus 1 generate more correct interval.
 - Added timeout value configuration check for LPIT_SetTimerPeriod, at least input 3 ticks for calling LPIT_SetTimerPeriod.
- Bug Fixes
 - Fixed MISRA C-2012 rule 17.7 violations.

[2.0.1]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.

[2.0.0]

- Initial version.
-

LPSPI

[2.7.4]

- Bug Fixes
 - Clear WIDTH bits from the TCR register before writing a new value in LPSPI_MasterTransferBlocking().

[2.7.3]

- Improvements
 - Added timeout for while loop in LPSPi_MasterTransferWriteAllTxData().
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.7.2]

- Bug Fixes
 - Fixed coverity issues.

[2.7.1]

- Bug Fixes
 - Workaround for errata ERR050607
 - Workaround for errata ERR010655

[2.7.0]

- New Feature
 - Added common IRQ handler entry LPSPi_DriverIRQHandler.

[2.6.10]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
 - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API _lpspi_master_handle and _lpspi_slave_handle.

[2.6.6]

- Bug Fixes
 - Added LPSPi register init in LPSPi_MasterInit incase of LPSPi register exist.

[2.6.5]

- Improvements
 - Introduced FSL_FEATURE_LPSPi_HAS_NO_PCSCFG and FSL_FEATURE_LPSPi_HAS_NO_MULTI_WIDTH for conditional compile.
 - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
 - Added LPSPi6_DriverIRQHandler for LPSPi6 instance.

[2.6.3]

- Hot Fixes
 - Added macro switch in function LPSPi_Enable about ERRATA051472.

[2.6.2]

- Bug Fixes
 - Disabled lpspi before LPSPi_MasterSetBaudRate incase of LPSPi opened.

[2.6.1]

- Bug Fixes
 - Fixed return value while calling LPSPi_WaitTxFifoEmpty in function LPSPi_MasterTransferNonBlocking.

[2.6.0]

- Feature
 - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
 - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
 - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
 - Workaround for errata ERR050456 by resetting the entire module using LPSPiIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
 - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
 - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
 - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
 - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
 - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
 - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
 - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
 - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
 - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
 - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
 - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
 - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
 - Fixed bug in LPSPI_SetPCSContinuous when disabling PCS continuous mode.

[2.2.0]

- Bug Fixes
 - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continuous mode is not working.

[2.1.0]

- Improvements
 - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
 - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinuous to support changing PCS selection and PCS continuous mode.
- Bug Fixes
 - Fixed bug in non-blocking and EDMA transfer APIs that kStatus_InvalidArgument is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to kLPSPI_Busy by mistake causing following transfer can not start.
 - Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that LPSPI can not transfer large data using EDMA.
 - Fixed MISRA 17.7 issues.
 - Fixed variable overflow issue introduced by MISRA fix.
 - Fixed issue that rxFifoMaxBytes should be calculated according to transfer width rather than FIFO width.
 - Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
 - Fixed in LPSPI_MasterTransferBlocking that master rxfifo may overflow in stall condition.
 - Eliminated IAR Pa082 warnings.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
 - Removed LPSPI_Reset from LPSPI_MasterInit and LPSPI_SlaveInit, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
 - Added dummy data set up API to allow users to configure the dummy data to be transferred.
 - Enabled the 3-wire mode, SIN and SOUT pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
 - Fixed the bug that the clock source should be divided by the PRESCALE setting in LPSPI_MasterSetDelayTimes function.
 - Fixed the bug that LPSPI_MasterTransferBlocking function would hang in some corner cases.
- Optimization
 - Added #ifndef/#endif to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.
-

LPSPI_EDMA

[2.4.9]

- Improvements
 - Removed unused code from LPSPI_SeparateEdmaReadData().

[2.4.8]

- Improvements
 - Added timeout for while loop in EDMA_LpspiMasterCallback() and EDMA_LpspiSlaveCallback().

[2.4.7]

- Bug Fixes
 - Add macro LPSPI_ALIGN_TCD_SIZE_MASK to align an address to edma_tcd_t size.

[2.4.6]

- Improvements
 - Increased transmit FIFO watermark to ensure whole transmit FIFO will be used during data transfer.

[2.4.5]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.4.4]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.3]

- Improvements
 - Supported 32K bytes transmit in DMA, improve the max datasize in LPSPI_MasterTransferEDMALite.

[2.4.2]

- Improvements
 - Added callback status in EDMA_LpspiMasterCallback and EDMA_LpspiSlaveCallback to check transferDone.

[2.4.1]

- Improvements
 - Add the TXMSK wait after TCR setting.

[2.4.0]

- Improvements
 - Separated LPSPI_MasterTransferEDMA functions to LP-SPI_MasterTransferPrepareEDMA and LPSPI_MasterTransferEDMALite to optimize the process of transfer.
-

LPTMR**[2.2.1]**

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated lptmr_prescaler_clock_select_t, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART

[2.10.0]

- New Feature
 - Added support to configure RTS watermark.

[2.9.4]

- Improvements
 - Merged duplicate code.

[2.9.3]

- Improvements
 - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
 - Fixed coverity issues.

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit, LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
 - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
 - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.
 - Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.

- Deleted unused status flags `kLPUART_NoiseErrorInRxDataRegFlag` and `kLPUART_ParityErrorInRxDataRegFlag`, since firstly their function are the same as `kLPUART_NoiseErrorFlag` and `kLPUART_ParityErrorFlag`, secondly to obtain them one data word must be read out thus interfering with the receiving process.
- Fixed bug in `LPUART_GetStatusFlags` that the `STAT[LBKDIF]`, `STAT[MA1F]` and `STAT[MA2F]` should be soc specific.
- Fixed bug in `LPUART_ClearStatusFlags` that tx/rx FIFO is reset by mistake when clearing flags.
- Fixed bug in `LPUART_TransferHandleIRQ` that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
- Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
- Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
 - Added APIs `LPUART_GetRxFifoCount/LPUART_GetTxFifoCount` to get rx/tx FIFO data count.
 - Added APIs `LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark` to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
 - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified `LPUART_TransferHandleIRQ` so that `txState` will be set to idle only when all data has been sent out to bus.
 - Modified `LPUART_TransferGetSendCount` so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
 - Added check for `kLPUART_TransmissionCompleteFlag` in `LPUART_WriteBlocking`, `LPUART_TransferHandleIRQ`, `LPUART_TransferSendDMACallback` and `LPUART_SendEDMACallback` to ensure all the data would be sent out to bus.
 - Rounded up the calculated `sbr` value in `LPUART_SetBaudRate` and `LPUART_Init` to achieve more accurate baudrate setting. Changed `osr` from `uint32_t` to `uint8_t` since `osr`'s biggest value is 31.
 - Modified `LPUART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using `LPUART_EnableTxDMA` and `LPUART_EnableRxDMA`.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `LPUART_TransferNonBlocking` function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.

- Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in LPUART_RTOS_Init struct from rtos_lpuart_config to lpuart_rtos_config_t.
- Bug Fixes
 - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may have a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0
-

MMDVSQ

[2.0.4]

- Improvements
 - Fixed CERT-C issues.

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, and 14.4.

[2.0.2]

- Bug fix:
 - Fixed MMDVSQ_GetExecutionStatus function get execution status wrong.

[2.0.1]

- Other changes:
 - Changed name of MMDVSQ_GetDivideRemainder and MMDVSQ_GetDivideQuotient functions.

[2.0.0]

- Initial version.
-

MSCM

[2.0.0]

- Initial version.
-

MSMC

[2.1.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 3.1, 10.1, 10.4, 10.8, 14.4.

[2.1.0]

- Added new APIs with FEATURE macros support: SMC_GetStopEntryStatus()
SMC_ClearStopEntryStatus() SMC_SetForceBootOptionConfig()
SMC_SRAMEnableLowPowerMode() SMC_SRAMEnableDeepSleepMode()
- Updated APIs with FEATURE macros support: SMC_SetPowerModeStop()
SMC_SetPowerModeVlpr() SMC_SetPowerModeLls() SMC_SetPowerModeVlls()
SMC_ConfigureResetPinFilter()

[2.0.0]

- Initial version.
-

MU**[2.3.1]**

- Bug Fixes
 - Fixed FSL_FEATURE_MU_HAS_RESET_DEASSERT_INT macro use.

[2.3.0]

- New Features
 - Added MU_BUSY_POLL_COUNT parameter to prevent infinite polling loops in MU operations.
 - Added timeout mechanism to all polling loops in MU driver code.
 - Added new function MU_ReceiveMsgTimeout() to include timeout mechanism.
- Improvements
 - Updated function signatures to return status codes for better error handling:
 - * Changed MU_ResetBothSides to return status_t instead of void
 - * Updated MU_SendMsg to return status_t for timeout indication
 - * Updated MU_ReceiveMsg to use MU_TIMEOUT_VALUE (0xFFFFFFFF) as a special return value to indicate timeout
 - Enhanced documentation across all functions to clarify timeout behavior and return values.

[2.2.0]

- New Features
 - Added API MU_GetRxStatusFlags.

[2.1.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.2]

- Bug Fixes
 - Fixed issue that MU_GetInstance() is defined but never used.

[2.1.1]

- Bug Fixes
 - Fixed general interrupt comment typo.

[2.1.0]

- Improvements
 - Added new enum mu_msg_reg_index_t.

[2.0.7]

- Bug Fixes
 - Fixed MU_GetInterruptsPending bug that can not get general interrupt status.

[2.0.6]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 17.7.

[2.0.5]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 14.4, 15.5.

[2.0.4]

- Improvements
 - Improved for the platforms which don't support reset assert interrupt and get the other core power mode.

[2.0.3]

- Bug fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.

[2.0.2]

- Improvements
 - Added support for MIMX8MQx.

[2.0.1]

- Improvements
 - Added support for MCIMX7Ux_M4.

[2.0.0]

- Initial version.
-

PORT

[2.5.1]

- Bug Fixes
 - Fix CERT INT31-C issues.
 - Fixed the violations of MISRA C-2012 rules: 10.1.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4, 11.3, 11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.
-

RTC

[2.4.0]

- New features
 - Add support for RTC clock output.
 - Add support for RTC time seconds interrupt configuration.

[2.3.3]

- Bug Fixes
 - Fix RTC_GetDatetime function validating datetime issue.

[2.3.2]

- Improvements
 - Handle errata 010716: Disable the counter before setting alarm register and then reen-able the counter.

[2.3.1]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.3.0]

- Improvements
 - Added API RTC_EnableLPOClock to set 1kHz LPO clock.
 - Added API RTC_EnableCrystalClock to replace API RTC_SetClockSource.

[2.2.2]

- Improvements
 - Refine `_rtc_interrupt_enable` order.

[2.2.1]

- Bug Fixes
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of bit field mask checking.
 - Fixed the issue of hard code in `RTC_Init`.

[2.2.0]

- Bug Fixes
 - Fixed MISRA C-2012 issue.
 - * Fixed rule contain: rule-17.7, rule-14.4, rule-10.4, rule-10.7, rule-10.1, rule-10.3.
 - Fixed central repository code formatting issue.
- Improvements
 - Added an API for enabling wakeup pin.

[2.1.0]

- Improvements
 - Added feature macro check for many features.

[2.0.0]

- Initial version.
-

SAI**[2.4.10]**

- Improvements
 - Allow enabling/disabling implicit channel configuration.
 - Allow NULL FIFO watermark.
- Bug Fixes
 - Fix compilation warnings when asserts are disabled

[2.4.9]

- Added Errata ERR051421 workaround.

[2.4.8]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.4.7]

- Added conditional support for bit clock swap feature
- Added common IRQ handler entry SAI_DriverIRQHandler.

[2.4.6]

- Bug Fixes
 - Fixed the IAR build warning.

[2.4.5]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.4.4]

- Bug Fixes
 - Fixed enumeration sai_fifo_combine_t - add RX configuration.

[2.4.3]

- Bug Fixes
 - Fixed enumeration sai_fifo_combine_t value configuration issue.

[2.4.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.4.1]

- Bug Fixes
 - Fixed bitWidth incorrectly assigned issue.

[2.4.0]

- Improvements
 - Removed deprecated APIs.

[2.3.8]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.3.7]

- Improvements
 - Change feature “FSL_FEATURE_SAI_FIFO_COUNT” to “FSL_FEATURE_SAI_HAS_FIFO”.
 - Added feature “FSL_FEATURE_SAI_FIFO_COUNTn(x)” to align SAI fifo count function with IP in function

[2.3.6]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 5.6.

[2.3.5]

- Improvements
 - Make driver to be aarch64 compatible.

[2.3.4]

- Bug Fixes
 - Corrected the fifo combine feature macro used in driver.

[2.3.3]

- Bug Fixes
 - Added bit clock polarity configuration when sai act as slave.
 - Fixed out of bound access coverity issue.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.3.2]

- Bug Fixes
 - Corrected the frame sync configuration when sai act as slave.

[2.3.1]

- Bug Fixes
 - Corrected the peripheral name in function SAI0_DriverIRQHandler.
 - Fixed violations of MISRA C-2012 rule 17.7.

[2.3.0]

- Bug Fixes
 - Fixed the build error caused by the SOC has no fifo feature.

[2.2.3]

- Bug Fixes
 - Corrected the peripheral name in function SAI0_DriverIRQHandler.

[2.2.2]

- Bug Fixes
 - Fixed the issue of MISRA 2004 rule 9.3.
 - Fixed sign-compare warning.
 - Fixed the PA082 build warning.
 - Fixed sign-compare warning.
 - Fixed violations of MISRA C-2012 rule 10.3,17.7,10.4,8.4,10.7,10.8,14.4,17.7,11.6,10.1,10.6,8.4,14.3,16.4,18.2
 - Allow to reset Rx or Tx FIFO pointers only when Rx or Tx is disabled.
- Improvements
 - Added 24bit raw audio data width support in sai sdma driver.
 - Disabled the interrupt/DMA request in the SAI_Init to avoid generates unexpected sai FIFO requests.

[2.2.1]

- Improvements
 - Added mclk post divider support in function SAI_SetMasterClockDivider.
 - Removed useless configuration code in SAI_RxSetSerialDataConfig.
- Bug Fixes
 - Fixed the SAI SDMA driver build issue caused by the wrong structure member name used in the function SAI_TransferRxSetConfigSDMA/SAI_TransferTxSetConfigSDMA.
 - Fixed BAD BIT SHIFT OPERATION issue caused by the FSL_FEATURE_SAI_CHANNEL_COUNTn.
 - Applied ERR05144: not set FCONT = 1 when TMR > 0, otherwise the TX may not work.

[2.2.0]

- Improvements
 - Added new APIs for parameters collection and simplified user interfaces:
 - * SAI_Init
 - * SAI_SetMasterClockConfig
 - * SAI_TxSetBitClockRate
 - * SAI_TxSetSerialDataConfig
 - * SAI_TxSetFrameSyncConfig
 - * SAI_TxSetFifoConfig
 - * SAI_TxSetBitclockConfig
 - * SAI_TxSetConfig
 - * SAI_TxSetTransferConfig
 - * SAI_RxSetBitClockRate
 - * SAI_RxSetSerialDataConfig
 - * SAI_RxSetFrameSyncConfig
 - * SAI_RxSetFifoConfig

- * SAI_RxSetBitclockConfig
- * SAI_RXSetConfig
- * SAI_RxSetTransferConfig
- * SAI_GetClassicI2SConfig
- * SAI_GetLeftJustifiedConfig
- * SAI_GetRightJustifiedConfig
- * SAI_GetTDMConfig

[2.1.9]

- Improvements
 - Improved SAI driver comment for clock polarity.
 - Added enumeration for SAI for sample inputs on different edges.
 - Changed FSL_FEATURE_SAI_CHANNEL_COUNT to FSL_FEATURE_SAI_CHANNEL_COUNTn(base) for the difference between the different SAI instances.
- Added new APIs:
 - SAI_TxSetBitClockDirection
 - SAI_RxSetBitClockDirection
 - SAI_RxSetFrameSyncDirection
 - SAI_TxSetFrameSyncDirection

[2.1.8]

- Improvements
 - Added feature macro test for the sync mode2 and mode 3.
 - Added feature macro test for masterClockHz in sai_transfer_format_t.

[2.1.7]

- Improvements
 - Added feature macro test for the mclkSource member in sai_config_t.
 - Changed “FSL_FEATURE_SAI5_SAI6_SHARE_IRQ” to “FSL_FEATURE_SAI_SAI5_SAI6_SHARE_IRQ”.
 - Added #ifndef #endif check for SAI_XFER_QUEUE_SIZE to allow redefinition.
- Bug Fixes
 - Fixed build error caused by feature macro test for mclkSource.

[2.1.6]

- Improvements
 - Added feature macro test for mclkSourceClockHz check.
 - Added bit clock source name for general devices.
- Bug Fixes
 - Fixed incorrect channel numbers setting while calling RX/TX set format together.

[2.1.5]

- Bug Fixes
 - Corrected SAI3 driver IRQ handler name.
 - Added I2S4/5/6 IRQ handler.
 - Added base in handler structure to support different instances sharing one IRQ number.
- New Features
 - Updated SAI driver for MCR bit MICS.
 - Added 192 KHZ/384 KHZ in the sample rate enumeration.
 - Added multi FIFO interrupt/SDMA transfer support for TX/RX.
 - Added an API to read/write multi FIFO data in a blocking method.
 - Added bclk bypass support when bclk is same with mclk.

[2.1.4]

- New Features
 - Added an API to enable/disable auto FIFO error recovery in platforms that support this feature.
 - Added an API to set data packing feature in platforms which support this feature.

[2.1.3]

- New Features
 - Added feature to make I2S frame sync length configurable according to bitWidth.

[2.1.2]

- Bug Fixes
 - Added 24-bit support for SAI eDMA transfer. All data shall be 32 bits for send/receive, as eDMA cannot directly handle 3-Byte transfer.

[2.1.1]

- Improvements
 - Reduced code size while not using transactional API.

[2.1.0]

- Improvements
 - API name changes:
 - * SAI_GetSendRemainingBytes -> SAI_GetSentCount.
 - * SAI_GetReceiveRemainingBytes -> SAI_GetReceivedCount.
 - * All names of transactional APIs were added with “Transfer” prefix.
 - * All transactional APIs use base and handle as input parameter.
 - * Unified the parameter names.

- Bug Fixes
 - Fixed WLC bug while reading TCSR/RCSR registers.
 - Fixed MOE enable flow issue. Moved MOE enable after MICS settings in SAI_TxInit/SAI_RxInit.

[2.0.0]

- Initial version.
-

SAI_EDMA

[2.7.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.7.2]

- Improvements
 - Add macros `MCUX_SDK_SAI_EDMA_TX_ENABLE_INTERNAL` and `MCUX_SDK_SAI_EDMA_RX_ENABLE_INTERNAL` to let the user decide whether to enable SAI when calling `SAI_TransferSendEDMA/SAI_TransferReceiveEDMA`.

[2.7.1]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.7.0]

- Improvements
 - Updated api `SAI_TransferReceiveEDMA` to support voice channel block interleave transfer.
 - Updated api `SAI_TransferSendEDMA` to support voice channel block interleave transfer.
 - Added new api `SAI_TransferSetInterleaveType` to support channel interleave type configurations.

[2.6.0]

- Improvements
 - Removed deprecated APIs.

[2.5.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 20.7.

[2.5.0]

- Improvements
 - Added new api SAI_TransferSendLoopEDMA/SAI_TransferReceiveLoopEDMA to support loop transfer.
 - Added multi sai channel transfer support.

[2.4.0]

- Improvements
 - Added new api SAI_TransferGetValidTransferSlotsEDMA which can be used to get valid transfer slot count in the sai edma transfer queue.
 - Deprecated the api SAI_TransferRxSetFormatEDMA and SAI_TransferTxSetFormatEDMA.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3,10.4.

[2.3.2]

- Refer SAI driver change log 2.1.0 to 2.3.2
-

SEMA42

[2.1.1]

- Improvements
 - Updated SEMA42_TryLock function to avoid unsigned integer operations wrap issue.

[2.1.0]

- New Features
 - Added SEMA42_BUSY_POLL_COUNT parameter to prevent infinite polling loops in SEMA42 operations.
 - Added timeout mechanism to all polling loops in SEMA42 driver code.
- Improvements
 - Updated SEMA42_Lock function to return status_t instead of void for better error handling.
 - Enhanced documentation to clarify timeout behavior and return values.

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Improvements
 - Changed to implement SEMA42_Lock base on SEMA42_TryLock.

[2.0.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 17.7.

[2.0.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3, 10.4, 14.4, 18.1.

[2.0.0]

- Initial version.
-

SIM

[2.2.0]

- Improvements
 - Added API to trigger TRGMUX.

[2.1.3]

- Improvements
 - Updated function SIM_GetUniqueId to support different register names.

[2.1.2]

- Bug Fixes
 - Fixed SIM_GetUniqueId bug that could not get UIDH.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.4

[2.1.0]

- Improvements
 - Added new APIs: SIM_GetRfAddr() and SIM_EnableSystickClock().

[2.0.0]

- Initial version.
-

SPM

[2.3.0]

- Improvements
 - Added some missed APIs which are related to SPM features.

[2.2.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.3, rule 10.4 and so on.

[2.2.0]

- Bug Fix
 - Fix MDK 66-D warning (enumeration value out of int range) on kSPM_DcdcStableOKFlag.
- Other Changes
 - Remove the support for K3S.
 - Change register and mask names to support K32-L3.
- Optimization
 - Convert SPM_EnableVddxStepLock() and SPM_SetLowPowerReqOutPinConfig() to in-line functions.

[2.1.0]

- Bug Fix
 - Corrected spelling mistake of function name.

[2.0.0]

- Initial version.
-

TPM

[2.4.1]

- Improvements
 - Add Coverage Justification for uncovered code.

[2.4.0]

- New Feature
 - Added while loop timeout for MOD CnV CnSC and SC register write sequence.
 - Change the return type from void to status_t for following API:
 - * TPM_DisableChannel
 - * TPM_EnableChannel
 - * TPM_SetupOutputCompare
 - * TPM_SetTimerPeriod
 - * TPM_StopTimer

[2.3.6]

- Bug Fixes
 - Fixed CERT INT30-C INT31-C issue for TPM_SetupDualEdgeCapture.

[2.3.5]

- New Feature
 - Added IRQ handler entry for TPM2.

[2.3.4]

- New Feature
 - Added common IRQ handler entry TPM_DriverIRQHandler.

[2.3.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.2]

- Bug Fixes
 - Fixed ERR008085 TPM writing the TPMx_MOD or TPMx_CnV registers more than once may fail when the timer is disabled.

[2.3.1]

- Bug Fixes
 - Fixed compilation error when macro FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL is 1.

[2.3.0]

- Improvements
 - Create callback feature for TPM match and timer overflow interrupts.

[2.2.4]

- Improvements
 - Add feature macros(FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_EN, FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_SYNC).

[2.2.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.2.1]

- Bug Fixes
 - Fixed CCM issue by splitting function from TPM_SetupPwm() function to reduce function complexity.
 - Fixed violations of MISRA C-2012 rule 17.7.

[2.2.0]

- Improvements
 - Added TPM_SetChannelPolarity to support select channel input/output polarity.
 - Added TPM_EnableChannelExtTrigger to support enable external trigger input to be used by channel.
 - Added TPM_CalculateCounterClkDiv to help calculates the counter clock prescaler.
 - Added TPM_GetChannelValue to support get TPM channel value.
 - Added new TPM configuration.
 - * syncGlobalTimeBase
 - * extTriggerPolarity
 - * chnlPolarity
 - Added new PWM signal configuration.
 - * secPauseLevel
- Bug Fixes
 - Fixed TPM_SetupPwm can't configure 0% combined PWM issues.

[2.1.1]

- Improvements
 - Add feature macro for PWM pause level select feature.

[2.1.0]

- Improvements
 - Added TPM_EnableChannel and TPM_DisableChannel APIs.
 - Added new PWM signal configuration.
 - * pauseLevel - Support select output level when counter first enabled or paused.
 - * enableComplementary - Support enable/disable generate complementary PWM signal.
 - * deadTimeValue - Support deadtime insertion for each pair of channels in combined PWM mode.
- Bug Fixes
 - Fixed issues about channel MSnB:MSnA and ELSnB:ELSnA bit fields and CnV register change request acknowledgement. Writes to these bits are ignored when the interval between successive writes is less than the TPM clock period.

[2.0.8]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.4 ,10.7 and 14.4.

[2.0.7]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4 and 17.7.

[2.0.6]

- Bug Fixes
 - Fixed Out-of-bounds issue.

[2.0.5]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 10.6, 10.7

[2.0.4]

- Bug Fixes
 - Fixed ERR050050 in functions TPM_SetupPwm/TPM_UpdatePwmDutycycle. When TPM was configured in EPWM mode as PS = 0, the compare event was missed on the first reload/overflow after writing 1 to the CnV register.

[2.0.3]

- Bug Fixes
 - MISRA-2012 issue fixed.
 - * Fixed rules: rule-12.1, rule-17.7, rule-16.3, rule-14.4, rule-1.3, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-10.6, and rule-18.1.

[2.0.2]

- Bug Fixes
 - Fixed issues in functions TPM_SetupPwm/TPM_UpdateChnEdgeLevelSelect/TPM_SetupInputCapture/TPM_SetupOutputCompare/TPM_SetupDualEdgeCapture, wait acknowledgement when the channel is disabled.

[2.0.1]

- Bug Fixes
 - Fixed TPM_UpdateChnIEdgeLevelSelect ACK wait issue.
 - Fixed the issue that TPM_SetupdualEdgeCapture could not set FILTER register.
 - Fixed TPM_UpdateChnEdgeLevelSelect ACK wait issue.

[2.0.0]

- Initial version.
-

TRGMUX

[2.0.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.3, 10.8.

[2.0.0]

- Initial version.
-

TRNG

[2.0.19]

- New features:
 - Added support for MCXA and MCXL.

[2.0.18]

- Bug fix:
 - TRNG health checks now done in software on RT5xx and RT6xx.

[2.0.17]

- New features:
 - Add support for RT700.

[2.0.16]

- Improvements:
 - Added support for Dual oscillator mode.

[2.0.15]

- Other changes:
 - Changed TRNG_USER_CONFIG_DEFAULT_XXX values according to latest recommended by design team.

[2.0.14]

- New features:
 - Add support for RW610 and RW612.

[2.0.13]

- Bug fix:
 - After deepsleep it might return error, added clearing bits in TRNG_GetRandomData() and generating new entropy.
 - Modified reloading entropy in TRNG_GetRandomData(), for some data length it doesn't reloading entropy correctly.

[2.0.12]

- Bug fix:
 - For KW34A4_SERIES, KW35A4_SERIES, KW36A4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.

[2.0.11]

- Bug fix:
 - Add clearing pending errors in TRNG_Init().

[2.0.10]

- Bug Fix:
 - Fixed doxygen issues.

[2.0.9]

- Bug Fix:
 - Fix HIS_CCM metrics issues.

[2.0.8]

- Bug fix:
 - For K32L2A41A_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv4.

[2.0.7]

- Bug fix:
 - Fix MISRA 2004 issue rule 12.5.

[2.0.6]

- Bug fix:
 - For KW35Z4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.

[2.0.5]

- Improvements:
 - For FRQMIN, FRQMAX and OSCDIV, add possibility to use device specific preprocessor macro to define default value in TRNG user configuration structure.

[2.0.4]

- Bug Fix:
 - Fix MISRA-2012 issues.
 - * Rule 10.1, rule 10.3, rule 13.5, rule 16.1.

[2.0.3]

- Improvements:
 - update TRNG_Init to restart new entropy generation.

[2.0.2]

- Improvements:
 - fix MISRA issues
 - * Rule 14.4.

[2.0.1]

- New features:
 - Set default OSCDIV for Kinetis devices KL8x and KL28Z.
- Other changes:
 - Changed default OSCDIV for K81 to divide by 2.

[2.0.0]

- Initial version.
-

TSTMR

[2.1.0]

- New Features
 - Support configured clock frequency.
 - Add TSTMR_Init and TSTMR_init APIs.
- Improvements
 - Change TSTMR_DelayUs from static inline function to normal function.

[2.0.4]

- Bugfix
 - Fix MISRA C-2012 Rule 10.4 and 14.4 issues.

[2.0.3]

- Bugfix
 - Fix CERT INT30-C that Unsigned integer operation TSTMR_ReadTimeStamp(base) - startTime may wrap.

[2.0.2]

- Improvements
 - Support 24MHz clock source.
- Bugfix
 - Fix MISRA C-2012 Rule 10.4 issue.
 - Read of TSTMR HIGH must follow TSTMR LOW atomically: require masking interrupt around 2 LSB / MSB accesses.

[2.0.1]

- Bugfix
 - Restrict to read with 32-bit accesses only.
 - Restrict that TSTMR LOW read occurs first, followed by the TSTMR HIGH read.

[2.0.0]

- Initial version.
-

USDHC

[2.8.8]

- Bug Fixes
 - Fixed build issue with armgcc O3.

[2.8.7]

- Bug Fixes
 - Disabled CMD error check for standard tuning per RM.

[2.8.6]

- Bug Fixes
 - Invalidate cache after blocking read.

[2.8.5]

- Improvements
 - Enable the driver to be AARCH64 compatible.

[2.8.4]

- Improvements
 - Add feature macro FSL_FEATURE_USDHC_HAS_NO_VS18.

[2.8.3]

- Improvements
 - Improved api USDHC_EnableAutoTuningForCmdAndData to adapt to new bit field name for USDHC_VEND_SPEC2 register.

[2.8.2]

- Improvements
 - Added feature macro FSL_FEATURE_USDHC_HAS_NO_VOLTAGE_SELECT.

[2.8.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 11.9.

[2.8.0]

- Improvements
 - Fixed the mmc boot transfer failed issue which is caused by the Dma complete interrupt not enabled.
 - Marked api USDHC_AdjustDelayForManualTuning as deprecated and added new api USDHC_SetTuingDelay/USDHC_GetTuningDelayStatus.
 - Improved the manual tuning flow accroding to specification.
 - Added memory address conversion to support buffers which could only be accessed using alias address by non-core masters.
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.7.0]

- Improvements
 - Added api USDHC_TransferScatterGatherADMANonBlocking to support scatter gather transfer.
 - Added feature FSL_FEATURE_USDHC_REGISTER_HOST_CTRL_CAP_HAS_NO_RETUNING_TIME_COUNTER for re-tuning time counter field in HOST_CTRL_CAP register.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 11.9, 10.1, 10.3, 10.4, 8.4.

[2.6.0]

- Improvements
 - Added api USDHC_SetStandardTuningCounter to support adjust tuning counter of Standard tuning.

[2.5.1]

- Improvements
 - Used different status code for command and data interrupt callback.
 - Added cache line invalidate for receive buffer in driver IRQ handler to fix CM7 speculative access issue.

[2.5.0]

- Improvements
 - Added new api USDHC_SetStrobeDllOverride for HS400 strobe dll override mode delay taps configurations.
 - Corrected the STROBE DLL configurations sequence.

[2.4.0]

- Improvements
 - Added feature macro for read/write burst length.
 - * Disabled redundant interrupt per different transfer request.
 - * Disabled interrupt and reset command/data pointer in handle when transfer completes.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 11.9, 15.7, 4.7, 16.4, 10.1, 10.3, 10.4, 11.3, 14.4, 10.6, 17.7, 16.1, 16.3.
 - Fixed PA082 build warning.
 - Fixed logically dead code Coverity issue.

[2.3.0]

- Improvements
 - Added USDHC_SetDataConfig API to support manual tuning.
 - Removed the limitaion that source clock must be bigger than the target in function USDHC_SetSdClock by using source clock frequency as target directly.
 - Added peripheral reset in USDHC_Init function.
 - Added tuning reset support in function USDHC_Reset function.

[2.2.8]

- Bug Fixes
 - Fixed out-of bounds write in function USDHC_ReceiveCommandResponse.

[2.2.7]

- Improvements
 - Added API USDHC_GetEnabledInterruptStatusFlags and used in USDHC_TransferHandleIRQ.
 - Removed useless member interruptFlags in usdhc_handle_t.

[2.2.6]

- Improvements
 - Added address align check for ADMA descriptor table address.
 - Changed USDHC_ADMA1_DESCRIPTOR_MAX_LENGTH_PER_ENTRY to (65536-4096) to make sure the data address is 4KB align for a transfer which need more than one ADMA1 descriptor.

[2.2.5]

- Bug Fixes
 - Fixed MDK 66-D warning.

[2.2.4]

- Bug Fixes
 - Fixed issue that real clock frequency wss mismatched with target clock frequency, which was caused by an incorrect prescaler calculation.
- New Features
 - Added control macro to enable/disable the CLOCK code in current driver.

[2.2.3]

- Bug Fixes
 - Fixed issue where AMDA did not disable with DMAEN clear.
- Improvements
 - Improved set clock function to check the output frequency range.

- Dynamic set SDCLKFS during DDR enable or disable.

[2.2.2]

- Improvements
 - Improved read transfer cache maintain operation, combined clean, and invalidated them into one function.

[2.2.1]

- Bug Fixes
 - Disabled the invalidate cache operation for tuning.

[2.2.0]

- Improvements
 - Improved USDHC to support MMC boot feature.

[2.1.3]

- Bug Fixes
 - Fixed MISRA issue.

[2.1.2]

- Bug Fixes
 - Fixed Coverity issue.
 - Added base address and userData parameter for all callback functions.

[2.1.1]

- Improvements
 - Added cache maintain operation.
 - Added timeout status check for the DATA transfer which ignore error.
 - Added feature macro for SDR50/SDR104 mode.
 - Removed useless IRQ handler from different platforms.

[2.1.0]

- Improvements
 - Integrated tuning into transfer function.
 - Added strobe DLL feature.
 - Added enableAutoCommand23 in data structure.
 - Removed enable card clock function because the controller would handle the clock on/off.

[2.0.0]

- Initial version.
-

VREF

[2.1.3]

- Improvements
 - Add timeout for APIs with dfmea issues.

[2.1.2]

- Bug Fixes
 - Fixed the violation of MISRA-2012 rule 10.3.
 - Fixed MISRA C-2012 rule 10.3, rule 10.4 violation.

[2.1.1]

- Bug Fixes
 - MISRA-2012 issue fixed.
 - * Fixed rules containing: rule-10.4, rule-10.3, rule-10.1.

[2.1.0]

- Improvements
 - Added new functions to support L5K board: added VREF_SetTrim2V1Val() and VREF_GetTrim2V1Val() functions to supply 2V1 output mode.

[2.0.0]

- Initial version.
-

WDOG32

[2.2.1]

- Bug Fixes
 - Fix CERT INT31-C that the bool value shall be converted to unsigned int 0 or 1 then passed to registers.
 - Fix MISRA 2012 20.3 violation.

[2.2.0]

- Improvements
 - Added while loop timeout config value for WDOG32 reconfiguration and unlock sequence.
 - Change the return type of WDOG32_Init, WDOG32_Deinit and WDOG32_Unlock from void to status_t.

[2.1.0]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.4]

- Improvements
 - To ensure that the reconfiguration is inside 128 bus clocks unlock window, put all re-configuration APIs in quick access code section.

[2.0.3]

- Bug Fixes
 - Fixed the noncompliance issue of the reference document.
 - * Waited until for new configuration to take effect by checking the RCS bit field.
 - * Waited until for registers to be unlocked by checking the ULK bit field.
- Improvements
 - Added 128 bus clocks delay ensures a smooth transition before restarting the counter with the new configuration when there is no RCS status bit.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.
 - Fixed the issue of the inseparable process interrupted by other interrupt source.
 - * WDOG32_Refresh

[2.0.1]

- Bug Fixes
 - WDOG must be configured within its configuration time period.
 - * Added WDOG32_Init API to quick access section.
 - * Defined register variable in WDOG32_Init API.

[2.0.0]

- Initial version.
-

XRDC**[2.0.7]**

- Improvements
 - Handle errata ERR050593.

[2.0.6]

- Improvements
 - Supported platforms which don't have XRDC clock gate control.

[2.0.5]

- Bug Fixes
 - Fixed XRDC_GetAndClearFirstSpecificDomainError potential array over index issue.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 3.1, 10.1, 10.3, 10.4, 10.6, 10.7, 10.8, 11.3, 12.2, 14.4, 17.7, 20.7.

[2.0.3]

- Improvements
 - Added necessary driver supports for K32H844P.
 - Added new APIs concerning new features of Exclusive Access Lock and programmable domain access flags configurations.

[2.0.2]

- Bug Fixes
 - Fixed wrong assert of assignIndex input check in the xRDC driver.
- Improvements
 - Added master input CPU/non-CPU check in XRDC_SetNonProcessorDomainAssignment and XRDC_SetProcessorDomainAssignment API.
 - Added necessary assert checks for several config inputs.

[2.0.1]

- Improvements
 - Changed reserved bit fields in the structs into unnamed-identifier bit fields.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[K32L3A60](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 Multicore

[Multicore SDK](#)

1.7.2 FreeMASTER

[freemaster](#)

1.7.3 FreeRTOS

[FreeRTOS](#)

1.7.4 File systemFatfs

[FatFs](#)

Chapter 2

K32L3A60

2.1 CACHE: LPCAC CACHE Memory Controller

`static inline void L1CACHE_EnableCodeCache(void)`

Enables the processor code bus cache.

`static inline void L1CACHE_DisableCodeCache(void)`

Disables the processor code bus cache.

`static inline void L1CACHE_InvalidateCodeCache(void)`

Invalidates the processor code bus cache.

`void L1CACHE_InvalidateICacheByRange(uint32_t address, uint32_t size_byte)`

Invalidates L1 instrument cache by range.

Parameters

- `address` – The start address of the memory to be invalidated.
- `size_byte` – The memory size.

`static inline void L1CACHE_InvalidateDCacheByRange(uint32_t address, uint32_t size_byte)`

Invalidates L1 data cache by range.

Parameters

- `address` – The start address of the memory to be invalidated.
- `size_byte` – The memory size.

`static inline void L1CACHE_CleanDCacheByRange(uint32_t address, uint32_t size_byte)`

Cleans L1 data cache by range.

The cache is write through mode, so there is nothing to do with the cache flush/clean operation.

Parameters

- `address` – The start address of the memory to be cleaned.
- `size_byte` – The memory size.

`static inline void L1CACHE_CleanInvalidateDCacheByRange(uint32_t address, uint32_t size_byte)`

Cleans and Invalidates L1 data cache by range.

Parameters

- `address` – The start address of the memory to be clean and invalidated.

- `size_byte` – The memory size.

`static inline void ICACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)`

Invalidates instruction cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be invalidated.

`static inline void DCACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)`

Invalidates data cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be invalidated.

`static inline void DCACHE_CleanByRange(uint32_t address, uint32_t size_byte)`

Clean data cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be cleaned.

`static inline void DCACHE_CleanInvalidateByRange(uint32_t address, uint32_t size_byte)`

Cleans and Invalidates data cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be Cleaned and Invalidated.

`FSL_CACHE_DRIVER_VERSION`

cache driver version 2.1.2.

2.2 CACHE: LPLMEM CACHE Memory Controller

`static inline void L1CACHE_EnableCodeCache(void)`

Enables the processor code bus cache.

`static inline void L1CACHE_DisableCodeCache(void)`

Disables the processor code bus cache.

`static inline void L1CACHE_InvalidateCodeCache(void)`

Invalidates the processor code bus cache.

`void L1CACHE_InvalidateICacheByRange(uint32_t address, uint32_t size_byte)`

Invalidates L1 instrument cache by range.

Parameters

- `address` – The start address of the memory to be invalidated.
- `size_byte` – The memory size.

`static inline void L1CACHE_InvalidateDCacheByRange(uint32_t address, uint32_t size_byte)`

Invalidates L1 data cache by range.

Parameters

- `address` – The start address of the memory to be invalidated.

- `size_byte` – The memory size.

```
static inline void L1CACHE_CleanDCacheByRange(uint32_t address, uint32_t size_byte)
```

Cleans L1 data cache by range.

The cache is write through mode, so there is nothing to do with the cache flush/clean operation.

Parameters

- `address` – The start address of the memory to be cleaned.
- `size_byte` – The memory size.

```
static inline void L1CACHE_CleanInvalidateDCacheByRange(uint32_t address, uint32_t
size_byte)
```

Cleans and Invalidates L1 data cache by range.

Parameters

- `address` – The start address of the memory to be clean and invalidated.
- `size_byte` – The memory size.

```
static inline void ICACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)
```

Invalidates instruction cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be invalidated.

```
static inline void DCACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)
```

Invalidates data cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be invalidated.

```
static inline void DCACHE_CleanByRange(uint32_t address, uint32_t size_byte)
```

Clean data cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be cleaned.

```
static inline void DCACHE_CleanInvalidateByRange(uint32_t address, uint32_t size_byte)
```

Cleans and Invalidates data cache by range.

Parameters

- `address` – The physical address.
- `size_byte` – size of the memory to be Cleaned and Invalidated.

```
FSL_CACHE_DRIVER_VERSION
```

cache driver version 2.1.2.

2.3 CAU3

FSL_CAU3_DRIVER_VERSION

CAU3 driver version. Version 2.0.5.

Current version: 2.0.5

Change log:

- Version 2.0.0
 - Initial version
- Version 2.0.1
 - Replace static `cau3_make_mems_private()` with public `CAU3_MakeMemsPrivate()`.
 - Remove the `cau3_make_mems_private()` from `CAU3_Init` to allow loading multiple images.
- Version 2.0.2
 - Add `FSL_CAU3_USE_HW_SEMA` compile time macro. When enabled, all CAU3 API functions lock hw semaphore on function entry and release the hw semaphore on function return.
- Version 2.0.3
 - Fix MISRA C-2012 issue.
- Version 2.0.4
 - Fix MISRA C-2012 issue.
- Version 2.0.5
 - Fix MISRA-C 2012 issue.

enum __cau3_key_slot

Hardware semaphore usage by driver functions. This macro can be enabled for mutual exclusive calls to CAU3 APIs from multiple CPUs. Note this does not lock against calls from multiple threads on one CPU.

CAU3 key slot selection. Current CryptoCore firmware supports 4 key slots inside CryptoCore's Private DMEM.

Values:

enumerator `kCAU3_KeySlot0`

CAU3 key slot 0.

enumerator `kCAU3_KeySlotNone`

No key.

enumerator `kCAU3_KeySlot1`

CAU3 key slot 1.

enumerator `kCAU3_KeySlot2`

CAU3 key slot 2.

enumerator `kCAU3_KeySlot3`

CAU3 key slot 3.

enum __cau3_task_done

CAU3 task done selection.

Values:

enumerator `kCAU3_TaskDoneNull`

enumerator kCAU3_TaskDonePoll

Poll CAU3 status flag.

enumerator kCAU3_TaskDoneIrq

Start operation and return. CAU3 asserts interrupt request when done.

enumerator kCAU3_TaskDoneEvent

Call Wait-for-event opcode until CAU3 completes processing.

enumerator kCAU3_TaskDoneDmaRequest

Start operation and return. CAU3 asserts DMA request when done.

typedef enum *cau3_key_slot* cau3_key_slot_t

Hardware semaphore usage by driver functions. This macro can be enabled for mutual exclusive calls to CAU3 APIs from multiple CPUs. Note this does not lock against calls from multiple threads on one CPU.

CAU3 key slot selection. Current CryptoCore firmware supports 4 key slots inside CryptoCore's Private DMEM.

typedef enum *cau3_task_done* cau3_task_done_t

CAU3 task done selection.

typedef struct *cau3_handle* cau3_handle_t

Specify CAU3's key resource and signalling to be used for an operation.

void CAU3_Init(CAU3_Type *base)

Enables clock for CAU3 and loads image to memory.

Enable CAU3 clock and loads image to CryptoCore.

Parameters

- base – CAU3 base address

status_t CAU3_ForceError(CAU3_Type *base, *cau3_task_done_t* taskDone)

Execute a CAU3 null task to signal error termination.

Execute a null task to signal error termination. The CryptoCore task executes one instruction - a "stop with error".

Parameters

- base – CAU3 base address
- taskDone – indicates completion signal

Returns

status check from task completion

status_t CAU3_LoadSpecialKeyContext(CAU3_Type *base, *size_t* keySize, *cau3_key_slot_t* keySlot, *cau3_task_done_t* taskDone)

Load special hardware "key context" into the CAU3's data memory.

Load the special hardware key context into the private DMEM. This only includes the complete 256-bit key which is then specified with a size of [8,16,24,32] bytes (for DES or AES-[128,256]). It also loads the default IV value specified in NIST/RFC2294 IV=0xa6a6a6a6a6a6a6a6. This operation typically loads keySlot 0, which, by convention, is used for the system key encryption key.

See the GENERAL COMMENTS for more information on the keyContext structure.

NOTE: This function also performs an AES key expansion if a keySize > 8 is specified.

Parameters

- base – CAU3 base address

- `keySize` – is the logical key size in bytes [8,16,24,32]
- `keySlot` – is the destination key slot number [0-3]
- `taskDone` – indicates completion signal.

Returns

status check from task completion

```
status_t CAU3_ClearKeyContext(CAU3_Type *base, cau3_key_slot_t keySlot, cau3_task_done_t taskDone)
```

Invalidate a 64-byte “key context” in the CAU3’s private data memory.

Clears the key context in the private DMEM. There is support for four “key slots” with slot 0 typically used for the system key encryption key.

Parameters

- `base` – CAU3 base address
- `keySlot` – is the key slot number [0-3] to invalidate
- `taskDone` – indicates completion signal *

Returns

status check from task completion

```
status_t CAU3_LoadKeyInitVector(CAU3_Type *base, const uint8_t *iv, cau3_key_slot_t keySlot, cau3_task_done_t taskDone)
```

Load an initialization vector into a key context.

Loads a 16-byte initialization vector (iv) into the specified key slot. There is support for a maximum of 4 key slots. The function is used internally for loading AEAD_CHACHA20_POY1305 nonce. It can be also used for Alternative Initial Values for A[0] in RFC 3394.

Parameters

- `base` – CAU3 base address
- `iv` – The initialization vector, ALIGNED ON A 0-MOD-4 ADDRESS.
- `keySlot` – is the destination key context
- `taskDone` – indicates completion signal

Returns

status check from task completion

```
status_t CAU3_MakeMemsPrivate(CAU3_Type *base, cau3_task_done_t taskDone)
```

Make the CAU3’s local memories private.

Modify the CAU3’s internal configuration so the local memories are private and only accessible to the CAU3. This operation is typically performed after the `CAU_InitializeInstMemory()`, `CAU_InitializeDataMemory()`, and `CAU_InitializeReadOnlyDataMemory()` functions have been performed.

This configuration remains in effect until the next hardware reset.

Parameters

- `base` – CAU3 base address
- `taskDone` – indicates completion signal: CAU_[POLL, IRQ, EVENT, DMAREQ]

Return values

status – check from task completion: CAU_[OK, ERROR]

```
struct _cau3_handle
    #include <fsl_cau3.h> Specify CAU3's key resource and signalling to be used for an operation.
```

Public Members

cau3_task_done_t taskDone

Specify CAU3 task done signalling to Host CPU.

cau3_key_slot_t keySlot

For operations with key (such as AES encryption/decryption), specify CAU3 key slot.

2.4 CAU3 AES driver

```
status_t CAU3_AES_SetKey(CAU3_Type *base, cau3_handle_t *handle, const uint8_t *key, size_t
    keySize)
```

Load AES key into CAU3 key slot.

Load the key context into the private DMEM. This function also performs an AES key expansion. For CAU3 AES encryption/decryption/cmac, users only need to call one of CAU3_AES_SetKey and CAU3_LoadSpecialKeyContext.

CAU3_AES_SetKey

Parameters

- base – CAU3 peripheral base address.
- handle – Handle used for the request.
- key – 0-mod-4 aligned pointer to AES key.
- keySize – AES key size in bytes. Shall equal 16 or 32.

Returns

status from set key operation

```
status_t CAU3_AES_Encrypt(CAU3_Type *base, cau3_handle_t *handle, const uint8_t
    plaintext[16], uint8_t ciphertext[16])
```

Encrypts AES on one 128-bit block.

Encrypts AES. The source plaintext and destination ciphertext can overlap in system memory.

Parameters

- base – CAU3 peripheral base address
- handle – Handle used for this request.
- plaintext – Input plain text to encrypt
- ciphertext – **[out]** Output cipher text

Returns

Status from encrypt operation

```
status_t CAU3_AES_Decrypt(CAU3_Type *base, cau3_handle_t *handle, const uint8_t
    ciphertext[16], uint8_t plaintext[16])
```

Decrypts AES on one 128-bit block.

Decrypts AES. The source ciphertext and destination plaintext can overlap in system memory.

Parameters

- base – CAU3 peripheral base address
- handle – Handle used for this request.
- ciphertext – Input plain text to encrypt
- plaintext – **[out]** Output cipher text

Returns

Status from decrypt operation

status_t CAU3_AES_Cmac(CAU3_Type *base, *cau3_handle_t* *handle, const uint8_t *message, size_t size, uint8_t *mac)

Perform an AES-128 cipher-based authentication code (CMAC)

Performs an AES-128 cipher-based authentication code (CMAC) on a message. RFC 4493.

Parameters

- base – CAU3 peripheral base address
- handle – Handle used for this request.
- message – is source uint8_t array of data bytes, any alignment
- size – Number of bytes in the message.
- mac – is the output 16 bytes MAC, must be a 0-mod-4 aligned address

Returns

status check from task completion

status_t CAU3_AES_KeyExpansion(CAU3_Type *base, *cau3_key_slot_t* keySlot, *cau3_task_done_t* taskDone)

Perform an AES key expansion for specified key slot.

Performs an AES key expansion (aka schedule) on the specified key slot. It uses the keySize information in the context to determine whether the key expansion applies to a 128- or 256-bit AES key. This function is primarily intended to be called after key blob has been unwrapped by CAU3_KeyBlobUnwrap to destination key slot, so that the unwrapped key can be used for AES encryption.

Parameters

- base – CAU3 base address
- keySlot – is the key context
- taskDone – indicates completion signal

Returns

status check from task completion

CAU3_AES_BLOCK_SIZE

AES block size in bytes

2.5 CAU3 Blob driver

status_t CAU3_KeyBlobUnwrap(CAU3_Type *base, *cau3_key_slot_t* keySlot, const uint8_t *keyBlob, uint32_t numberOfBlocks, *cau3_key_slot_t* dstContext)

Perform an RFC3394 key blob unwrap.

Perform an RFC3394 unwrap of an AES encrypted key blob. The unwrapped key blob is loaded into the specified key slot [1-3]. The initial special hardware KEK contained in key slot 0 is typically used for the unwrapping operation. The destination context number must

be different than the keySlot used for unwrapping. Implements the algorithm at RFC 3394 to AES key unwrap. The current implementation allows to unwrap up to 512 bits, with the restriction of nblocks=2 or =4 or n=8(means it unwraps only 128bits, 256bits or two 256 bits keys (512)). It is allowed input key of 128 and 256bits only (passed using the keyslot). The function also assumes the CAU3_LoadSpecialKeyContext was called before. It returns error and clear the destination context in case parameters are not inside acceptable values. In case $n > 4$ && $n \neq 8$ it clears both destination contexts (the dstContext and the adjacent/next context) In case of $n=8$, the first unwrapped key will be stored in the dstContext slot, and the second key will be saved in the next context (E.g: if dstContext=1, then first key goes to slot 1 and second key to slot 2. If dstContext=3 then first key goes to slot 3 and second key goes to slot 1). Examples of n usage. E.g.: $n = 2$ means a unwrapped key of 128 bits ($2 * 64$) E.g.: $n = 4$ means a unwrapped key of 256 bits ($4 * 64$) E.g.: $n = 8$ means two unwrapped keys of 256 bits ($8 * 64$)

The function is blocking, it uses the polling task done signaling.

Parameters

- base – CAU3 peripheral base address
- keySlot – is the key used to unwrap the key blob [0-3]
- keyBlob – 0-mod-4 aligned pointer is the RFC3394 wrapped key blob.
- numberOfBlocks – is the unwrapped keyBlob length as multiple of 64-bit blocks
- dstContext – is the destination key context for unwrapped blob [0-3]

Return values

status – check from task completion

2.6 CAU3 CHACHA20_POLY1305 driver

```
status_t CAU3_CHACHA20_POLY1305_SetKey(CAU3_Type *base, cau3_handle_t *handle, const
uint8_t *key, size_t keySize)
```

Load 256-bit key into CAU3 key context (in key slot).

Load the key context into the private DMEM for CHACHA20_POLY1305 AEAD.

Parameters

- base – CAU3 peripheral base address.
- handle – Handle used for the request.
- key – 0-mod-4 aligned pointer to CHACHA20_POLY1305 256-bit key.
- keySize – Size of the key in bytes. Shall be 32.

Returns

status from set key operation

```
status_t CAU3_CHACHA20_POLY1305_Encrypt(CAU3_Type *base, cau3_handle_t *handle,
const uint8_t *plaintext, uint8_t *ciphertext,
size_t size, const uint8_t *aad, size_t aadLen,
const uint8_t *nonce, uint8_t *tag)
```

Perform ChaCha-Poly encryption/authentication.

Perform ChaCha encryption over a message of “n” bytes, and authentication over the encrypted data plus an additional authenticated data, returning encrypted data + a message digest.

Parameters

- `base` – CAU3 peripheral base address
- `handle` – Handle used for this request. The `keySlot` member specifies key context with key and IV.
- `plaintext` – The `uint8_t` source message to be encrypted, any alignment
- `ciphertext` – **[out]** is a pointer to the output encrypted message, any alignment
- `size` – The length of the plaintext and ciphertext in bytes
- `aad` – A pointer to the additional authenticated data, any alignment
- `aadLen` – Length of additional authenticated data in bytes
- `nonce` – 0-mod-4 aligned pointer to CHACHA20_POLY1305 96-bit nonce.
- `tag` – **[out]** A pointer to the 128-bit message digest output, any alignment

Returns

status check from task completion

```
status_t CAU3_CHACHA20_POLY1305_Decrypt(CAU3_Type *base, cau3_handle_t *handle,
                                       const uint8_t *ciphertext, uint8_t *plaintext,
                                       size_t size, const uint8_t *aad, size_t aadLen,
                                       const uint8_t *nonce, const uint8_t *tag)
```

Perform ChaCha-Poly decryption/authentication check.

Perform ChaCha decryption over a message of “n” bytes, and checks authentication over the encrypted data plus an additional authenticated data, returning decrypted data. IF the tag authentication fails, the task terminates with error and the output is forced to zero.

Parameters

- `base` – CAU3 peripheral base address
- `handle` – Handle used for this request. The `keySlot` member specifies key context with key and IV.
- `ciphertext` – The `uint8_t` source msg to be decrypted, any alignment
- `plaintext` – **[out]** A pointer to the output decrypted message, any alignment
- `size` – Length of the plaintext and ciphertext in bytes
- `aad` – A pointer to the additional authenticated data, any alignment
- `aadLen` – Length of additional authenticated data in bytes
- `nonce` – 0-mod-4 aligned pointer to CHACHA20_POLY1305 96-bit nonce.
- `tag` – A pointer to the 128-bit msg digest input to be checked, any alignment

Returns

status check from task completion

2.7 CAU3 TDES driver

```
status_t CAU3_TDES_CheckParity(CAU3_Type *base, cau3_key_slot_t keySlot)
```

Perform a 3DES key parity check.

Performs a 3DES key parity check on three 8-byte keys. The function is blocking.

Parameters

- `base` – CAU3 peripheral base address

- `keySlot` – defines the key context to be used in the parity check

Returns

status check from task completion

```
status_t CAU3_TDES_SetKey(CAU3_Type *base, cau3_handle_t *handle, const uint8_t *key,
                          size_t keySize)
```

Load DES key into CAU3 key slot.

Load the key context into the private DMEM.

Parameters

- `base` – CAU3 peripheral base address.
- `handle` – Handle used for the request.
- `key` – 0-mod-4 aligned pointer to 3DES key.
- `keySize` – 3DES key size in bytes. Shall equal 24.

Returns

status from set key operation

```
status_t CAU3_TDES_Encrypt(CAU3_Type *base, cau3_handle_t *handle, const uint8_t
                           *plaintext, uint8_t *ciphertext)
```

Perform a 3DES encryption.

Performs a 3DES “electronic code book” encryption on one 8-byte data block. The source plaintext and destination ciphertext can overlap in system memory. Supports both blocking and non-blocking task completion.

Parameters

- `base` – CAU3 peripheral base address.
- `handle` – Handle used for this request.
- `plaintext` – is source *uint8_t* array of data bytes, any alignment
- `ciphertext` – is destination *uint8_t* array of data byte, any alignment

Returns

status check from task completion

```
status_t CAU3_TDES_Decrypt(CAU3_Type *base, cau3_handle_t *handle, const uint8_t
                           *ciphertext, uint8_t *plaintext)
```

Perform a 3DES decryption.

Performs a 3DES “electronic code book” decryption on one 8-byte data block. The source ciphertext and destination plaintext can overlap in sysMemory. Supports both blocking and non-blocking task completion.

Parameters

- `base` – CAU3 peripheral base address.
- `handle` – Handle used for this request.
- `ciphertext` – is destination *uint8_t* array of data byte, any alignment
- `plaintext` – is source *uint8_t* array of data bytes, any alignment

Returns

status check from task completion

2.8 CAU3 HASH driver

enum `_cau3_hash_algo_t`

Supported cryptographic block cipher functions for HASH creation.

Values:

enumerator `kCAU3_Sha1`

`SHA_1`

enumerator `kCAU3_Sha256`

`SHA_256`

typedef enum `_cau3_hash_algo_t` `cau3_hash_algo_t`

Supported cryptographic block cipher functions for HASH creation.

typedef struct `_cau3_hash_ctx_t` `cau3_hash_ctx_t`

Storage type used to save hash context.

`status_t` `CAU3_HASH_Init(CAU3_Type *base, cau3_hash_ctx_t *ctx, cau3_hash_algo_t algo)`

Initialize HASH context.

This function initializes the HASH.

For blocking CAU3 HASH API, the HASH context contains all information required for context switch, such as running hash.

Parameters

- `base` – CAU3 peripheral base address
- `ctx` – **[out]** Output hash context
- `algo` – Underlying algorithm to use for hash computation.

Returns

Status of initialization

`status_t` `CAU3_HASH_Update(CAU3_Type *base, cau3_hash_ctx_t *ctx, const uint8_t *input, size_t inputSize)`

Add data to current HASH.

Add data to current HASH. This can be called repeatedly with an arbitrary amount of data to be hashed. The functions blocks. If it returns `kStatus_Success`, the running hash or mac has been updated (CAU3 has processed the input data), so the memory at input pointer can be released back to system. The context is updated with the running hash or mac and with all necessary information to support possible context switch.

Parameters

- `base` – CAU3 peripheral base address
- `ctx` – **[inout]** HASH context
- `input` – Input data
- `inputSize` – Size of input data in bytes

Returns

Status of the hash update operation

`status_t` `CAU3_HASH_Finish(CAU3_Type *base, cau3_hash_ctx_t *ctx, uint8_t *output, size_t *outputSize)`

Finalize hashing.

Outputs the final hash (computed by `CAU3_HASH_Update()`) and erases the context.

Parameters

- base – CAU3 peripheral base address
- ctx – **[inout]** Input hash context
- output – **[out]** Output hash data
- outputSize – **[out]** Output parameter storing the size of the output hash in bytes

Returns

Status of the hash finish operation

```
status_t CAU3_HASH(CAU3_Type *base, cau3_hash_algo_t algo, const uint8_t *input, size_t
inputSize, uint8_t *output, size_t *outputSize)
```

Create HASH on given data.

Perform the full SHA in one function call. The function is blocking.

Parameters

- base – CAU3 peripheral base address
- algo – Underlying algorithm to use for hash computation.
- input – Input data
- inputSize – Size of input data in bytes
- output – **[out]** Output hash data
- outputSize – **[out]** Output parameter storing the size of the output hash in bytes

Returns

Status of the one call hash operation.

CAU3_SHA_BLOCK_SIZE

CAU3 HASH Context size.

internal buffer block size

CAU3_HASH_BLOCK_SIZE

CAU3 hash block size

CAU3_HASH_CTX_SIZE

CAU3 HASH Context size.

```
struct _cau3_hash_ctx_t
```

#include <fsl_cau3.h> Storage type used to save hash context.

2.9 CAU3 PKHA driver

```
enum _cau3_pkha_timing_t
```

Use of timing equalized version of a PKHA function.

Values:

```
enumerator kCAU3_PKHA_NoTimingEqualized
```

Normal version of a PKHA operation

```
enumerator kCAU3_PKHA_TimingEqualized
```

Timing-equalized version of a PKHA operation

enum `_cau3_pkha_f2m_t`

Integer vs binary polynomial arithmetic selection.

Values:

enumerator `kCAU3_PKHA_IntegerArith`

Use integer arithmetic

enumerator `kCAU3_PKHA_F2mArith`

Use binary polynomial arithmetic

enum `_cau3_pkha_montgomery_form_t`

Montgomery or normal PKHA input format.

Values:

enumerator `kCAU3_PKHA_NormalValue`

PKHA number is normal integer

enumerator `kCAU3_PKHA_MontgomeryFormat`

PKHA number is in montgomery format

typedef struct `_cau3_pkha_ecc_point_t` `cau3_pkha_ecc_point_t`

PKHA ECC point structure

typedef enum `_cau3_pkha_timing_t` `cau3_pkha_timing_t`

Use of timing equalized version of a PKHA function.

typedef enum `_cau3_pkha_f2m_t` `cau3_pkha_f2m_t`

Integer vs binary polynomial arithmetic selection.

typedef enum `_cau3_pkha_montgomery_form_t` `cau3_pkha_montgomery_form_t`

Montgomery or normal PKHA input format.

int `CAU3_PKHA_CompareBigNum`(const uint8_t *a, size_t sizeA, const uint8_t *b, size_t sizeB)

`status_t` `CAU3_PKHA_NormalToMontgomery`(`CAU3_Type` *base, const uint8_t *N, size_t sizeN, uint8_t *A, size_t *sizeA, uint8_t *B, size_t *sizeB, uint8_t *R2, size_t *sizeR2, `cau3_pkha_timing_t` equalTime, `cau3_pkha_f2m_t` arithType)

Converts from integer to Montgomery format.

This function computes $R2 \bmod N$ and optionally converts A or B into Montgomery format of A or B.

Parameters

- base – CAU3 peripheral base address
- N – modulus
- sizeN – size of N in bytes
- A – **[inout]** The first input in non-Montgomery format. Output Montgomery format of the first input.
- sizeA – **[inout]** pointer to size variable. On input it holds size of input A in bytes. On output it holds size of Montgomery format of A in bytes.
- B – **[inout]** Second input in non-Montgomery format. Output Montgomery format of the second input.
- sizeB – **[inout]** pointer to size variable. On input it holds size of input B in bytes. On output it holds size of Montgomery format of B in bytes.
- R2 – **[out]** Output Montgomery factor $R2 \bmod N$.

- sizeR2 – **[out]** pointer to size variable. On output it holds size of Montgomery factor $R2 \bmod N$ in bytes.
- equalTime – Run the function time equalized or no timing equalization.
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_MontgomeryToNormal(CAU3_Type *base, const uint8_t *N, size_t sizeN,
                                       uint8_t *A, size_t *sizeA, uint8_t *B, size_t *sizeB,
                                       cau3_pkha_timing_t equalTime, cau3_pkha_f2m_t
                                       arithType)
```

Converts from Montgomery format to int.

This function converts Montgomery format of A or B into int A or B.

Parameters

- base – CAU3 peripheral base address
- N – modulus.
- sizeN – size of N modulus in bytes.
- A – **[inout]** Input first number in Montgomery format. Output is non-Montgomery format.
- sizeA – **[inout]** pointer to size variable. On input it holds size of the input A in bytes. On output it holds size of non-Montgomery A in bytes.
- B – **[inout]** Input first number in Montgomery format. Output is non-Montgomery format.
- sizeB – **[inout]** pointer to size variable. On input it holds size of the input B in bytes. On output it holds size of non-Montgomery B in bytes.
- equalTime – Run the function time equalized or no timing equalization.
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_ModAdd(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t
                          *B, size_t sizeB, const uint8_t *N, size_t sizeN, uint8_t *result,
                          size_t *resultSize, cau3_pkha_f2m_t arithType)
```

Performs modular addition - $(A + B) \bmod N$.

This function performs modular addition of $(A + B) \bmod N$, with either integer or binary polynomial (F2m) inputs. In the F2m form, this function is equivalent to a bitwise XOR and it is functionally the same as subtraction.

Parameters

- base – CAU3 peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- B – second addend (integer or binary polynomial)
- sizeB – Size of B in bytes
- N – modulus.
- sizeN – Size of N in bytes.
- result – **[out]** Output array to store result of operation

- `resultSize` – **[out]** Output size of operation in bytes
- `arithType` – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_ModSub1(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *B, size_t sizeB, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize)
```

Performs modular subtraction - $(A - B) \bmod N$.

This function performs modular subtraction of $(A - B) \bmod N$ with integer inputs.

Parameters

- `base` – CAU3 peripheral base address
- `A` – first addend (integer or binary polynomial)
- `sizeA` – Size of A in bytes
- `B` – second addend (integer or binary polynomial)
- `sizeB` – Size of B in bytes
- `N` – modulus
- `sizeN` – Size of N in bytes
- `result` – **[out]** Output array to store result of operation
- `resultSize` – **[out]** Output size of operation in bytes

Returns

Operation status.

```
status_t CAU3_PKHA_ModSub2(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *B, size_t sizeB, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize)
```

Performs modular subtraction - $(B - A) \bmod N$.

This function performs modular subtraction of $(B - A) \bmod N$, with integer inputs.

Parameters

- `base` – CAU3 peripheral base address
- `A` – first addend (integer or binary polynomial)
- `sizeA` – Size of A in bytes
- `B` – second addend (integer or binary polynomial)
- `sizeB` – Size of B in bytes
- `N` – modulus
- `sizeN` – Size of N in bytes
- `result` – **[out]** Output array to store result of operation
- `resultSize` – **[out]** Output size of operation in bytes

Returns

Operation status.

```
status_t CAU3_PKHA_ModMul(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *B, size_t sizeB, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize, cau3_pkha_f2m_t arithType, cau3_pkha_montgomery_form_t montIn, cau3_pkha_montgomery_form_t montOut, cau3_pkha_timing_t equalTime)
```

Performs modular multiplication - $(A \times B) \bmod N$.

This function performs modular multiplication with either integer or binary polynomial (F2m) inputs. It can optionally specify whether inputs and/or outputs will be in Montgomery form or not.

Parameters

- base – CAU3 peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- B – second addend (integer or binary polynomial)
- sizeB – Size of B in bytes
- N – modulus.
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)
- montIn – Format of inputs
- montOut – Format of output
- equalTime – Run the function time equalized or no timing equalization. This argument is ignored for F2m modular multiplication.

Returns

Operation status.

```
status_t CAU3_PKHA_ModExp(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *N, size_t sizeN, const uint8_t *E, size_t sizeE, uint8_t *result, size_t *resultSize, cau3_pkha_f2m_t arithType, cau3_pkha_montgomery_form_t montIn, cau3_pkha_timing_t equalTime)
```

Performs modular exponentiation - $(A^E) \bmod N$.

This function performs modular exponentiation with either integer or binary polynomial (F2m) inputs.

Parameters

- base – CAU3 peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- E – exponent
- sizeE – Size of E in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- montIn – Format of A input (normal or Montgomery)
- arithType – Type of arithmetic to perform (integer or F2m)

- equalTime – Run the function time equalized or no timing equalization.

Returns

Operation status.

```
status_t CAU3_PKHA_ModSqrt(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize)
```

Performs Modular Square Root.

This function performs modular square root with integer inputs. The modular square root function computes output result B, such that $(B \times B) \bmod N = \text{input } A$. If no such B result exists, the result will be set to 0 and the PKHA “prime” flag will be set. Input values A and B are limited to a maximum size of 128 bytes. Note that two such square root values may exist. This algorithm will find either one of them, if any exist. The second possible square root (B') can be found by calculating $B' = N - B$.

Parameters

- base – CAU3 peripheral base address
- A – input value, for which a square root is to be calculated
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes

Returns

Operation status.

```
status_t CAU3_PKHA_ModRed(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize, cau3_pkha_f2m_t arithType)
```

Performs modular reduction - $(A) \bmod N$.

This function performs modular reduction with either integer or binary polynomial (F2m) inputs.

Parameters

- base – CAU3 peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_ModInv(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize, cau3_pkha_f2m_t arithType)
```

Performs modular inversion - $(A^{-1}) \bmod N$.

This function performs modular inversion with either integer or binary polynomial (F2m) inputs.

Parameters

- base – CAU3 peripheral base address
- A – first addend (integer or binary polynomial)
- sizeA – Size of A in bytes
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_ModR2(CAU3_Type *base, const uint8_t *N, size_t sizeN, uint8_t *result,
                          size_t *resultSize, cau3_pkha_f2m_t arithType)
```

Computes integer Montgomery factor $R^2 \bmod N$.

This function computes a constant to assist in converting operands into the Montgomery residue system representation.

Parameters

- base – CAU3 peripheral base address
- N – modulus
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_ModRR(CAU3_Type *base, const uint8_t *P, size_t sizeP, size_t sizeE,
                          uint8_t *result, size_t *resultSize)
```

Performs Integer RERP mod P.

This function is used to compute a constant to assist in converting operands into the Montgomery residue system representation specifically for Chinese Remainder Theorem while performing RSA with a CRT implementation where a modulus $E=P \times Q$, and P and Q are prime numbers. Although labeled RERP mod P, this routine (function) can also compute RERQ mod Q.

Parameters

- base – CAU3 peripheral base address
- P – modulus P or Q of CRT, an odd integer
- sizeP – Size of P in bytes
- sizeE – Number of bytes of $E = P \times Q$ (this size must be given, though content of E itself is not used).
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes

Returns

Operation status.

```
status_t CAU3_PKHA_ModGcd(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *N, size_t sizeN, uint8_t *result, size_t *resultSize, cau3_pkha_f2m_t arithType)
```

Calculates the greatest common divisor - GCD (A, N).

This function calculates the greatest common divisor of two inputs with either integer or binary polynomial (F2m) inputs.

Parameters

- base – CAU3 peripheral base address
- A – first value (must be smaller than or equal to N)
- sizeA – Size of A in bytes
- N – second value (must be non-zero)
- sizeN – Size of N in bytes
- result – **[out]** Output array to store result of operation
- resultSize – **[out]** Output size of operation in bytes
- arithType – Type of arithmetic to perform (integer or F2m)

Returns

Operation status.

```
status_t CAU3_PKHA_PrimalityTest(CAU3_Type *base, const uint8_t *A, size_t sizeA, const uint8_t *B, size_t sizeB, const uint8_t *N, size_t sizeN, bool *res)
```

Executes Miller-Rabin primality test.

This function calculates whether or not a candidate prime number is likely to be a prime.

Parameters

- base – CAU3 peripheral base address
- A – initial random seed
- sizeA – Size of A in bytes
- B – number of trial runs
- sizeB – Size of B in bytes
- N – candidate prime integer
- sizeN – Size of N in bytes
- res – **[out]** True if the value is likely prime or false otherwise

Returns

Operation status.

```
status_t CAU3_PKHA_ECC_PointAdd(CAU3_Type *base, const cau3_pkha_ecc_point_t *A, const cau3_pkha_ecc_point_t *B, const uint8_t *N, const uint8_t *R2modN, const uint8_t *aCurveParam, const uint8_t *bCurveParam, size_t size, cau3_pkha_f2m_t arithType, cau3_pkha_ecc_point_t *result)
```

Adds elliptic curve points - A + B.

This function performs ECC point addition over a prime field (Fp) or binary field (F2m) using affine coordinates.

Parameters

- base – CAU3 peripheral base address
- A – Left-hand point
- B – Right-hand point
- N – Prime modulus of the field
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from CAU3_PKHA_ModR2() function).
- aCurveParam – A parameter from curve equation
- bCurveParam – B parameter from curve equation (constant)
- size – Size in bytes of curve points and parameters
- arithType – Type of arithmetic to perform (integer or F2m)
- result – **[out]** Result point

Returns

Operation status.

```
status_t CAU3_PKHA_ECC_PointDouble(CAU3_Type *base, const cau3_pkha_ecc_point_t *B,
                                     const uint8_t *N, const uint8_t *aCurveParam, const
                                     uint8_t *bCurveParam, size_t size, cau3_pkha_f2m_t
                                     arithType, cau3_pkha_ecc_point_t *result)
```

Doubles elliptic curve points - B + B.

This function performs ECC point doubling over a prime field (Fp) or binary field (F2m) using affine coordinates.

Parameters

- base – CAU3 peripheral base address
- B – Point to double
- N – Prime modulus of the field
- aCurveParam – A parameter from curve equation
- bCurveParam – B parameter from curve equation (constant)
- size – Size in bytes of curve points and parameters
- arithType – Type of arithmetic to perform (integer or F2m)
- result – **[out]** Result point

Returns

Operation status.

```
status_t CAU3_PKHA_ECC_PointMul(CAU3_Type *base, const cau3_pkha_ecc_point_t *A, const
                                   uint8_t *E, size_t sizeE, const uint8_t *N, const uint8_t
                                   *R2modN, const uint8_t *aCurveParam, const uint8_t
                                   *bCurveParam, size_t size, cau3_pkha_timing_t
                                   equalTime, cau3_pkha_f2m_t arithType,
                                   cau3_pkha_ecc_point_t *result)
```

Multiplies an elliptic curve point by a scalar - E x (A0, A1).

This function performs ECC point multiplication to multiply an ECC point by a scalar integer multiplier over a prime field (Fp) or a binary field (F2m).

Parameters

- base – CAU3 peripheral base address
- A – Point as multiplicand

- E – Scalar multiple
- sizeE – The size of E, in bytes
- N – Modulus, a prime number for the Fp field or Irreducible polynomial for F2m field.
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from CAU3_PKHA_ModR2() function).
- aCurveParam – A parameter from curve equation
- bCurveParam – B parameter from curve equation (C parameter for operation over F2m).
- size – Size in bytes of curve points and parameters
- equalTime – Run the function time equalized or no timing equalization.
- arithType – Type of arithmetic to perform (integer or F2m)
- result – **[out]** Result point

Returns

Operation status.

```
status_t CAU3_PKHA_ECM_PointMul(CAU3_Type *base, const uint8_t *E, size_t sizeE, const
                                uint8_t *inputCoordinate, const uint8_t *A24, const
                                uint8_t *N, const uint8_t *R2modN, size_t size,
                                cau3_pkha_timing_t equalTime, uint8_t
                                *outputCoordinate)
```

Computes scalar multiplication of a point on an elliptic curve in Montgomery form.

This function computes the scalar multiplication of a point on an elliptic curve in Montgomery form. The input and output are just the x coordinates of the points. The points on a curve are defined by the equation $E: B*y^2 = x^3 + A*x^2 + x \pmod p$. This function computes a point multiplication on a Montgomery curve, using Montgomery values, by means of a Montgomery ladder. At the end of the ladder, $P_2 = P_3 + P_1$, where P_1 is the input and P_3 is the result.

Parameters

- base – CAU3 peripheral base address
- E – Scalar multiplier, any integer
- sizeE – The size of E, in bytes
- inputCoordinate – Point as multiplicand, an input point's affine x coordinate
- A24 – elliptic curve a24 parameter, that is, $(A+2)/4$
- N – Modulus, a prime number.
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from CAU3_PKHA_ModR2() function).
- size – Size in bytes of curve points and parameters
- equalTime – Run the function time equalized or no timing equalization.
- outputCoordinate – **[out]** Resulting point's x affine coordinate.

Returns

Operation status.

```
status_t CAU3_PKHA_ECT_PointMul(CAU3_Type *base, const cau3_pkha_ecc_point_t *A, const
                                uint8_t *E, size_t sizeE, const uint8_t *N, const uint8_t
                                *R2modN, const uint8_t *aCurveParam, const uint8_t
                                *dCurveParam, size_t size, cau3_pkha_timing_t
                                equalTime, cau3_pkha_ecc_point_t *result)
```

Multiplies an Edwards-form elliptic curve point by a scalar - $E \times (A0, A1)$.

This function performs scalar multiplication of an Edwards-form elliptic curve point in affine coordinates. The points on a curve are defined by the equation $E: a \cdot X^2 + d^2 = 1 + D^2 \cdot X^2 \cdot Y^2 \pmod N$

Parameters

- base – CAU3 peripheral base address
- A – Point as multiplicand
- E – Scalar multiple
- sizeE – The size of E, in bytes
- N – Modulus, a prime number for the Fp field.
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from CAU3_PKHA_ModR2() function).
- aCurveParam – A parameter from curve equation
- dCurveParam – D parameter from curve equation.
- size – Size in bytes of curve points and parameters
- equalTime – Run the function time equalized or no timing equalization.
- result – **[out]** Result point

Returns

Operation status.

```
status_t CAU3_PKHA_ECT_PointAdd(CAU3_Type *base, const cau3_pkha_ecc_point_t *A, const
                                cau3_pkha_ecc_point_t *B, const uint8_t *N, const uint8_t
                                *R2modN, const uint8_t *aCurveParam, const uint8_t
                                *dCurveParam, size_t size, cau3_pkha_ecc_point_t
                                *result)
```

Adds an Edwards-form elliptic curve points - $A + B$.

This function performs Edwards-form elliptic curve point addition over a prime field (Fp) using affine coordinates. The points on a curve are defined by the equation $E: a \cdot X^2 + Y^2 = 1 + d^2 \cdot X^2 \cdot Y^2 \pmod N$

Parameters

- base – CAU3 peripheral base address
- A – Left-hand point
- B – Right-hand point
- N – Prime modulus of the field
- R2modN – NULL (the function computes R2modN internally) or pointer to pre-computed R2modN (obtained from CAU3_PKHA_ModR2() function).
- aCurveParam – A parameter from curve equation
- dCurveParam – D parameter from curve equation
- size – Size in bytes of curve points and parameters
- result – **[out]** Result point

Returns

Operation status.

```
struct _cau3_pkha_ecc_point_t
#include <fsl_cau3.h> PKHA ECC point structure
```

Public Members

uint8_t *X
X coordinate (affine)

uint8_t *Y
Y coordinate (affine)

2.10 Clock Driver

enum _clock_name

Clock name used to get clock frequency.

These clocks source would be generated from SCG module.

Values:

enumerator kCLOCK_CoreSysClk
Core 0/1 clock.

enumerator kCLOCK_SlowClk
SLOW_CLK with DIVSLOW.

enumerator kCLOCK_PlatClk
PLAT_CLK.

enumerator kCLOCK_SysClk
SYS_CLK.

enumerator kCLOCK_BusClk
BUS_CLK with DIVBUS.

enumerator kCLOCK_ExtClk
One clock selection of CLKOUT from main clock after DIVCORE and DIVEXT divider.

enumerator kCLOCK_ScgSysLpFllAsyncDiv1Clk
LPFLL_DIV1_CLK.

enumerator kCLOCK_ScgSysLpFllAsyncDiv2Clk
LPFLL_DIV1_CLK.

enumerator kCLOCK_ScgSysLpFllAsyncDiv3Clk
LPFLL_DIV1_CLK.

enumerator kCLOCK_ScgSircAsyncDiv1Clk
SIRCDIV1_CLK.

enumerator kCLOCK_ScgSircAsyncDiv2Clk
SIRCDIV2_CLK.

enumerator kCLOCK_ScgSircAsyncDiv3Clk
SIRCDIV3_CLK.

enumerator kCLOCK_ScgFircAsyncDiv1Clk
FIRCDIV1_CLK.

enumerator kCLOCK_ScgFircAsyncDiv2Clk
FIRCDIV2_CLK.

enumerator kCLOCK_ScgFircAsyncDiv3Clk
FIRCDIV3_CLK.

enumerator kCLOCK_ScgSircClk
SCG SIRC clock.

enumerator kCLOCK_ScgFircClk
SCG FIRC clock.

enumerator kCLOCK_RtcOscClk
RTC OSC clock.

enumerator kCLOCK_ScgLpFllClk
SCG Low-power FLL clock. (LPFLL)

enumerator kCLOCK_LpoClk
LPO clock

enumerator kCLOCK_Osc32kClk
External OSC 32K clock (OSC32KCLK)

enum _clock_ip_src

Clock source for peripherals that support various clock selections.

These options are for PCC->CLKCFG[PCS].

Values:

enumerator kCLOCK_IpSrcNoneOrExt
Clock is off or external clock is used.

enumerator kCLOCK_IpSrcSircAsync
Slow IRC async clock.

enumerator kCLOCK_IpSrcFircAsync
Fast IRC async clock.

enumerator kCLOCK_IpSrcLpFllAsync
System LPFLL async clock.

enum _clock_ip_name

Values:

enumerator kCLOCK_IpInvalid

enumerator kCLOCK_Mscm

enumerator kCLOCK_Syspm

enumerator kCLOCK_Max0

enumerator kCLOCK_Edma0

enumerator kCLOCK_Flexbus

enumerator kCLOCK_Xrdc0Mgr

enumerator kCLOCK_Xrdc0Pac

enumerator kCLOCK_Xrdc0Mrc

enumerator kCLOCK_Sema420

enumerator kCLOCK_Dmamux0

enumerator kCLOCK_Ewm0

enumerator kCLOCK_MuA

enumerator kCLOCK_Crc0
enumerator kCLOCK_Lpit0
enumerator kCLOCK_Tpm0
enumerator kCLOCK_Tpm1
enumerator kCLOCK_Tpm2
enumerator kCLOCK_Emvsim0
enumerator kCLOCK_Flexio0
enumerator kCLOCK_Lpi2c0
enumerator kCLOCK_Lpi2c1
enumerator kCLOCK_Lpi2c2
enumerator kCLOCK_Sai0
enumerator kCLOCK_Sdhc0
enumerator kCLOCK_Lpspi0
enumerator kCLOCK_Lpspi1
enumerator kCLOCK_Lpspi2
enumerator kCLOCK_Lpuart0
enumerator kCLOCK_Lpuart1
enumerator kCLOCK_Lpuart2
enumerator kCLOCK_Usb0
enumerator kCLOCK_PortA
enumerator kCLOCK_PortB
enumerator kCLOCK_PortC
enumerator kCLOCK_PortD
enumerator kCLOCK_Lpadc0
enumerator kCLOCK_Dac0
enumerator kCLOCK_Vref
enumerator kCLOCK_Atx
enumerator kCLOCK_Trace
enumerator kCLOCK_Edma1
enumerator kCLOCK_GpioE
enumerator kCLOCK_Xrdc0PacB
enumerator kCLOCK_Xrdc0MrcB
enumerator kCLOCK_Sema421

enumerator kCLOCK_Dmamux1

enumerator kCLOCK_Intmux0

enumerator kCLOCK_MuB

enumerator kCLOCK_Cau3

enumerator kCLOCK_Trng

enumerator kCLOCK_Lpit1

enumerator kCLOCK_Tpm3

enumerator kCLOCK_Lpi2c3

enumerator kCLOCK_Lpspi3

enumerator kCLOCK_Lpuart3

enumerator kCLOCK_PortE

enumerator kCLOCK_Ext0

enumerator kCLOCK_Ext1

enum _clock_usb_src

USB clock source definition.

Values:

enumerator kCLOCK_UsbSrcIrc48M

Use IRC48M.

enumerator kCLOCK_UsbSrcUnused

Used when the function does not care the clock source.

SCG status return codes.

Values:

enumerator kStatus_SCG_Busy

Clock is busy.

enumerator kStatus_SCG_InvalidSrc

Invalid source.

enum _scg_sys_clk

SCG system clock type.

Values:

enumerator kSCG_SysClkSlow

System slow clock.

enumerator kSCG_SysClkBus

Bus clock.

enumerator kSCG_SysClkExt

External clock.

enumerator kSCG_SysClkCore

Core clock.

enum `_scg_sys_clk_src`

SCG system clock source.

Values:

enumerator `kSCG_SysClkSrcSirc`
Slow IRC.

enumerator `kSCG_SysClkSrcFirc`
Fast IRC.

enumerator `kSCG_SysClkSrcRosc`
RTC OSC.

enumerator `kSCG_SysClkSrcLpFll`
Low power FLL.

enum `_scg_sys_clk_div`

SCG system clock divider value.

Values:

enumerator `kSCG_SysClkDivBy1`
Divided by 1.

enumerator `kSCG_SysClkDivBy2`
Divided by 2.

enumerator `kSCG_SysClkDivBy3`
Divided by 3.

enumerator `kSCG_SysClkDivBy4`
Divided by 4.

enumerator `kSCG_SysClkDivBy5`
Divided by 5.

enumerator `kSCG_SysClkDivBy6`
Divided by 6.

enumerator `kSCG_SysClkDivBy7`
Divided by 7.

enumerator `kSCG_SysClkDivBy8`
Divided by 8.

enumerator `kSCG_SysClkDivBy9`
Divided by 9.

enumerator `kSCG_SysClkDivBy10`
Divided by 10.

enumerator `kSCG_SysClkDivBy11`
Divided by 11.

enumerator `kSCG_SysClkDivBy12`
Divided by 12.

enumerator `kSCG_SysClkDivBy13`
Divided by 13.

enumerator `kSCG_SysClkDivBy14`
Divided by 14.

enumerator kSCG_SysClkDivBy15
Divided by 15.

enumerator kSCG_SysClkDivBy16
Divided by 16.

enum _clock_clkout_src
SCG clock out configuration (CLKOUTSEL).

Values:

enumerator kClockClkoutSelScgExt
SCG external clock.

enumerator kClockClkoutSelSirc
Slow IRC.

enumerator kClockClkoutSelFirc
Fast IRC.

enumerator kClockClkoutSelScgRtcOsc
SCG RTC OSC clock.

enumerator kClockClkoutSelLpFll
Low power FLL.

enum _scg_async_clk
SCG asynchronous clock type.

Values:

enumerator kSCG_AsyncDiv1Clk
The async clock by DIV1, e.g. SOSCDIV1_CLK, SIRCDIV1_CLK.

enumerator kSCG_AsyncDiv2Clk
The async clock by DIV2, e.g. SOSCDIV2_CLK, SIRCDIV2_CLK.

enumerator kSCG_AsyncDiv3Clk
The async clock by DIV3, e.g. SOSCDIV3_CLK, SIRCDIV3_CLK.

enum scg_async_clk_div
SCG asynchronous clock divider value.

Values:

enumerator kSCG_AsyncClkDisable
Clock output is disabled.

enumerator kSCG_AsyncClkDivBy1
Divided by 1.

enumerator kSCG_AsyncClkDivBy2
Divided by 2.

enumerator kSCG_AsyncClkDivBy4
Divided by 4.

enumerator kSCG_AsyncClkDivBy8
Divided by 8.

enumerator kSCG_AsyncClkDivBy16
Divided by 16.

enumerator kSCG_AsyncClkDivBy32
Divided by 32.

enumerator kSCG_AsyncClkDivBy64
Divided by 64.

enum _scg_sirc_range
SCG slow IRC clock frequency range.

Values:

enumerator kSCG_SircRangeLow
Slow IRC low range clock (2 MHz, 4 MHz for i.MX 7 ULP).

enumerator kSCG_SircRangeHigh
Slow IRC high range clock (8 MHz, 16 MHz for i.MX 7 ULP).

enum _scg_sirc_enable_mode
SIRC enable mode.

Values:

enumerator kSCG_SircEnable
Enable SIRC clock.

enumerator kSCG_SircEnableInStop
Enable SIRC in stop mode.

enumerator kSCG_SircEnableInLowPower
Enable SIRC in low power mode.

enum _scg_firc_trim_mode
SCG fast IRC trim mode.

Values:

enumerator kSCG_FircTrimNonUpdate
FIRC trim enable but not enable trim value update. In this mode, the trim value is fixed to the initialized value which is defined by trimCoar and trimFine in configure structure scg_firc_trim_config_t.

enumerator kSCG_FircTrimUpdate
FIRC trim enable and trim value update enable. In this mode, the trim value is auto update.

enum _scg_firc_trim_div
SCG fast IRC trim predivided value for system OSC.

Values:

enumerator kSCG_FircTrimDivBy1
Divided by 1.

enumerator kSCG_FircTrimDivBy128
Divided by 128.

enumerator kSCG_FircTrimDivBy256
Divided by 256.

enumerator kSCG_FircTrimDivBy512
Divided by 512.

enumerator kSCG_FircTrimDivBy1024
Divided by 1024.

enumerator kSCG_FircTrimDivBy2048
Divided by 2048.

enum _scg_firc_trim_src
SCG fast IRC trim source.

Values:

enumerator kSCG_FircTrimSrcSysOsc
System OSC.

enumerator kSCG_FircTrimSrcRtcOsc
RTC OSC (32.768 kHz).

enum _scg_firc_range
SCG fast IRC clock frequency range.

Values:

enumerator kSCG_FircRange48M
Fast IRC is trimmed to 48 MHz.

enumerator kSCG_FircRange52M
Fast IRC is trimmed to 52 MHz.

enumerator kSCG_FircRange56M
Fast IRC is trimmed to 56 MHz.

enumerator kSCG_FircRange60M
Fast IRC is trimmed to 60 MHz.

enum _scg_firc_enable_mode
FIRC enable mode.

Values:

enumerator kSCG_FircEnable
Enable FIRC clock.

enumerator kSCG_FircEnableInStop
Enable FIRC in stop mode.

enumerator kSCG_FircEnableInLowPower
Enable FIRC in low power mode.

enumerator kSCG_FircDisableRegulator
Disable regulator.

enum _scg_lpfll_enable_mode
LPFLL enable mode.

Values:

enumerator kSCG_LpFllEnable
Enable LPFLL clock.

enum _scg_lpfll_range
SCG LPFLL clock frequency range.

Values:

enumerator kSCG_LpFllRange48M
LPFLL is trimmed to 48MHz.

enumerator kSCG_LpFllRange72M
LPFLL is trimmed to 72MHz.

enumerator kSCG_LpFllRange96M
LPFLL is trimmed to 96MHz.

enumerator kSCG_LpFllRange120M
LPFLL is trimmed to 120MHz.

enum _scg_lpfl_trim_mode
SCG LPFLL trim mode.

Values:

enumerator kSCG_LpFllTrimNonUpdate
LPFLL trim is enabled but the trim value update is not enabled. In this mode, the trim value is fixed to the initialized value, which is defined by the trimValue in the structure scg_lpfl_trim_config_t.

enumerator kSCG_LpFllTrimUpdate
FIRC trim is enabled and trim value update is enabled. In this mode, the trim value is automatically updated.

enum _scg_lpfl_trim_src
SCG LPFLL trim source.

Values:

enumerator kSCG_LpFllTrimSrcSirc
SIRC.

enumerator kSCG_LpFllTrimSrcFirc
FIRC.

enumerator kSCG_LpFllTrimSrcSysOsc
System OSC.

enumerator kSCG_LpFllTrimSrcRtcOsc
RTC OSC (32.768 kHz).

enum _scg_lpfl_lock_mode
SCG LPFLL lock mode.

Values:

enumerator kSCG_LpFllLock1Lsb
Lock with 1 LSB.

enumerator kSCG_LpFllLock2Lsb
Lock with 2 LSB.

enum _scg_rosc_monitor_mode
SCG RTC OSC monitor mode.

Values:

enumerator kSCG_rtcOscMonitorDisable
Monitor disable.

enumerator kSCG_rtcOscMonitorInt
Interrupt when the RTC OSC error is detected.

enumerator kSCG_rtcOscMonitorReset
Reset when the RTC OSC error is detected.

```
typedef enum _clock_name clock_name_t
    Clock name used to get clock frequency.
    These clocks source would be generated from SCG module.
typedef enum _clock_ip_src clock_ip_src_t
    Clock source for peripherals that support various clock selections.
    These options are for PCC->CLKCFG[PCS].
typedef enum _clock_ip_name clock_ip_name_t
typedef enum _clock_usb_src clock_usb_src_t
    USB clock source definition.
typedef enum _scg_sys_clk scg_sys_clk_t
    SCG system clock type.
typedef enum _scg_sys_clk_src scg_sys_clk_src_t
    SCG system clock source.
typedef enum _scg_sys_clk_div scg_sys_clk_div_t
    SCG system clock divider value.
typedef struct _scg_sys_clk_config scg_sys_clk_config_t
    SCG system clock configuration.
typedef enum _clock_clkout_src clock_clkout_src_t
    SCG clock out configuration (CLKOUTSEL).
typedef enum _scg_async_clk scg_async_clk_t
    SCG asynchronous clock type.
typedef enum scg_async_clk_div scg_async_clk_div_t
    SCG asynchronous clock divider value.
typedef enum _scg_sirc_range scg_sirc_range_t
    SCG slow IRC clock frequency range.
typedef struct _scg_sirc_config scg_sirc_config_t
    SCG slow IRC clock configuration.
typedef enum _scg_firc_trim_mode scg_firc_trim_mode_t
    SCG fast IRC trim mode.
typedef enum _scg_firc_trim_div scg_firc_trim_div_t
    SCG fast IRC trim predivided value for system OSC.
typedef enum _scg_firc_trim_src scg_firc_trim_src_t
    SCG fast IRC trim source.
typedef struct _scg_firc_trim_config scg_firc_trim_config_t
    SCG fast IRC clock trim configuration.
typedef enum _scg_firc_range scg_firc_range_t
    SCG fast IRC clock frequency range.
typedef struct _scg_firc_config_t scg_firc_config_t
    SCG fast IRC clock configuration.
typedef enum _scg_lpfl_range scg_lpfl_range_t
    SCG LPFLL clock frequency range.
```

typedef enum *_scg_lpfl_trim_mode* scg_lpfl_trim_mode_t
SCG LPFLL trim mode.

typedef enum *_scg_lpfl_trim_src* scg_lpfl_trim_src_t
SCG LPFLL trim source.

typedef enum *_scg_lpfl_lock_mode* scg_lpfl_lock_mode_t
SCG LPFLL lock mode.

typedef struct *_scg_lpfl_trim_config* scg_lpfl_trim_config_t
SCG LPFLL clock trim configuration.

typedef struct *_scg_lpfl_config* scg_lpfl_config_t
SCG low power FLL configuration.

typedef enum *_scg_rosc_monitor_mode* scg_rosc_monitor_mode_t
SCG RTC OSC monitor mode.

typedef struct *_scg_rosc_config* scg_rosc_config_t
SCG RTC OSC configuration.

volatile uint32_t g_xtal0Freq
External XTAL0 (OSC0/SYSOSC) clock frequency.

The XTAL0/EXTAL0 (OSC0/SYSOSC) clock frequency in Hz. When the clock is set up, use the function `CLOCK_SetXtal0Freq` to set the value in the clock driver. For example, if XTAL0 is 8 MHz:

```
CLOCK_InitSysOsc(...);  
CLOCK_SetXtal0Freq(8000000);
```

This is important for the multicore platforms where only one core needs to set up the OSC0/SYSOSC using `CLOCK_InitSysOsc`. All other cores need to call the `CLOCK_SetXtal0Freq` to get a valid clock frequency.

volatile uint32_t g_xtal32Freq
External XTAL32/EXTAL32 clock frequency.

The XTAL32/EXTAL32 clock frequency in Hz. When the clock is set up, use the function `CLOCK_SetXtal32Freq` to set the value in the clock driver.

This is important for the multicore platforms where only one core needs to set up the clock. All other cores need to call the `CLOCK_SetXtal32Freq` to get a valid clock frequency.

static inline void `CLOCK_EnableClock(clock_ip_name_t name)`
Enable the clock for specific IP.

Parameters

- *name* – Which clock to enable, see enumeration `clock_ip_name_t`.

static inline void `CLOCK_DisableClock(clock_ip_name_t name)`
Disable the clock for specific IP.

Parameters

- *name* – Which clock to disable, see enumeration `clock_ip_name_t`.

static inline bool `CLOCK_IsEnabledByOtherCore(clock_ip_name_t name)`
Check whether the clock is already enabled and configured by any other core.

Parameters

- *name* – Which peripheral to check, see enumeration `clock_ip_name_t`.

Returns

True if clock is already enabled, otherwise false.

```
static inline void CLOCK_SetIpSrc(clock_ip_name_t name, clock_ip_src_t src)
```

Set the clock source for specific IP module.

Set the clock source for specific IP, not all modules need to set the clock source, should only use this function for the modules need source setting.

Parameters

- `name` – Which peripheral to check, see enumeration `clock_ip_name_t`.
- `src` – Clock source to set.

```
static inline void CLOCK_SetIpSrcDiv(clock_ip_name_t name, clock_ip_src_t src, uint8_t  
divValue, uint8_t fracValue)
```

Set the clock source and divider for specific IP module.

Set the clock source and divider for specific IP, not all modules need to set the clock source and divider, should only use this function for the modules need source and divider setting.

Divider output clock = Divider input clock x [(fracValue+1)/(divValue+1)].

Parameters

- `name` – Which peripheral to check, see enumeration `clock_ip_name_t`.
- `src` – Clock source to set.
- `divValue` – The divider value.
- `fracValue` – The fraction multiply value.

```
uint32_t CLOCK_GetFreq(clock_name_t clockName)
```

Gets the clock frequency for a specific clock name.

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in `clock_name_t`.

Parameters

- `clockName` – Clock names defined in `clock_name_t`

Returns

Clock frequency value in hertz

```
uint32_t CLOCK_GetCoreSysClkFreq(void)
```

Get the core clock or system clock frequency.

Returns

Clock frequency in Hz.

```
uint32_t CLOCK_GetPlatClkFreq(void)
```

Get the platform clock frequency.

Returns

Clock frequency in Hz.

```
uint32_t CLOCK_GetBusClkFreq(void)
```

Get the bus clock frequency.

Returns

Clock frequency in Hz.

```
uint32_t CLOCK_GetFlashClkFreq(void)
```

Get the flash clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetOsc32kClkFreq(void)

Get the OSC 32K clock frequency (OSC32KCLK).

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetExtClkFreq(void)

Get the external clock frequency (EXTCLK).

Returns

Clock frequency in Hz.

static inline uint32_t CLOCK_GetLpoClkFreq(void)

Get the LPO clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetIpFreq(*clock_ip_name_t* name)

Gets the functional clock frequency for a specific IP module.

This function gets the IP module's functional clock frequency based on PCC registers. It is only used for the IP modules which could select clock source by PCC[PCS].

Parameters

- name – Which peripheral to get, see enumeration *clock_ip_name_t*.

Returns

Clock frequency value in Hz

static inline void CLOCK_EnableRtcOsc(bool enable)

Enable the RTC Oscillator.

This function enables the Oscillator for RTC external crystal.

Parameters

- enable – Enable the Oscillator or not.

bool CLOCK_EnableUsbfs0Clock(*clock_usb_src_t* src, uint32_t freq)

Enable USB FS clock.

Parameters

- src – USB FS clock source.
- freq – The frequency specified by src.

Return values

- true – The clock is set successfully.
- false – The clock source is invalid to get proper USB FS clock.

static inline void CLOCK_DisableUsbfs0Clock(void)

Disable USB FS clock.

Disable USB FS clock.

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.2.1.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

MAX_CLOCKS

Clock ip name array for MAX.

EDMA_CLOCKS

Clock ip name array for EDMA.

FLEXBUS_CLOCKS

Clock ip name array for FLEXBUS.

FSL_CLOCK_XRDC_GATE_COUNT

XRDC clock gate number.

XRDC_CLOCKS

Clock ip name array for XRDC.

SEMA42_CLOCKS

Clock ip name array for SEMA42.

DMAMUX_CLOCKS

Clock ip name array for DMAMUX.

MU_CLOCKS

Clock ip name array for MU.

CRC_CLOCKS

Clock ip name array for CRC.

LPIT_CLOCKS

Clock ip name array for LPIT.

TPM_CLOCKS

Clock ip name array for TPM.

TRNG_CLOCKS

Clock ip name array for TRNG.

EMVSIM_CLOCKS

Clock ip name array for SMVSIM.

EWM_CLOCKS

Clock ip name array for EWM.

FLEXIO_CLOCKS

Clock ip name array for FLEXIO.

LPI2C_CLOCKS

Clock ip name array for LPI2C0.

SAI_CLOCKS

Clock ip name array for SAI.

USDHC_CLOCKS

Clock ip name array for SDHC.

LPSPI_CLOCKS

Clock ip name array for LPSPI.

LPUART_CLOCKS

Clock ip name array for LPUART.

USB_CLOCKS

Clock ip name array for USB.

PORT_CLOCKS

Clock ip name array for PORT.

LPADC_CLOCKS

Clock ip name array for LPADC.

LPDAC_CLOCKS

Clock ip name array for DAC.

INTMUX_CLOCKS

Clock ip name array for INTMUX.

EXT_CLOCKS

Clock ip name array for EXT.

VREF_CLOCKS

Clock ip name array for VREF.

FGPIO_CLOCKS

Clock ip name array for FGPIO.

kCLOCK_FlashClk

LPO_CLK_FREQ

MAKE_PCC_REGADDR(base, offset)

Peripheral clock name definition used for clock gate, clock source and clock divider setting. It is defined as the corresponding register address.

uint32_t CLOCK_GetSysClkFreq(*scg_sys_clk_t* type)

Gets the SCG system clock frequency.

This function gets the SCG system clock frequency. These clocks are used for core, platform, external, and bus clock domains.

Parameters

- type – Which type of clock to get, core clock or slow clock.

Returns

Clock frequency.

static inline void CLOCK_SetVlprModeSysClkConfig(const *scg_sys_clk_config_t* *config)

Sets the system clock configuration for VLPR mode.

This function sets the system clock configuration for VLPR mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_SetRunModeSysClkConfig(const *scg_sys_clk_config_t* *config)

Sets the system clock configuration for RUN mode.

This function sets the system clock configuration for RUN mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_SetHsruntimeModeSysClkConfig(const *scg_sys_clk_config_t* *config)

Sets the system clock configuration for HSRUN mode.

This function sets the system clock configuration for HSRUN mode.

Parameters

- config – Pointer to the configuration.

```
static inline void CLOCK_GetCurSysClkConfig(scg_sys_clk_config_t *config)
```

Gets the system clock configuration in the current power mode.

This function gets the system configuration in the current power mode.

Parameters

- *config* – Pointer to the configuration.

```
static inline void CLOCK_SetClkOutSel(clock_clkout_src_t setting)
```

Sets the clock out selection.

This function sets the clock out selection (CLKOUTSEL).

Parameters

- *setting* – The selection to set.

Returns

The current clock out selection.

```
status_t CLOCK_InitSirc(const scg_sirc_config_t *config)
```

Initializes the SCG slow IRC clock.

This function enables the SCG slow IRC clock according to the configuration.

Note: This function can't detect whether the system OSC has been enabled and used by an IP.

Parameters

- *config* – Pointer to the configuration structure.

Return values

- *kStatus_Success* – SIRC is initialized.
- *kStatus_SCG_Busy* – SIRC has been enabled and is used by system clock.
- *kStatus_ReadOnly* – SIRC control register is locked.

```
status_t CLOCK_DeinitSirc(void)
```

De-initializes the SCG slow IRC.

This function disables the SCG slow IRC.

Note: This function can't detect whether the SIRC is used by an IP.

Return values

- *kStatus_Success* – SIRC is deinitialized.
- *kStatus_SCG_Busy* – SIRC is used by system clock.
- *kStatus_ReadOnly* – SIRC control register is locked.

```
static inline void CLOCK_SetSircAsyncClkDiv(scg_async_clk_t asyncClk, scg_async_clk_div_t  
divider)
```

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- `asyncClk` – Which asynchronous clock to configure.
- `divider` – The divider value to set.

`uint32_t` `CLOCK_GetSircFreq(void)`
Gets the SCG SIRC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

`uint32_t` `CLOCK_GetSircAsyncFreq(scg_async_clk_t type)`
Gets the SCG asynchronous clock frequency from the SIRC.

Parameters

- `type` – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

`static inline bool` `CLOCK_IsSircValid(void)`
Checks whether the SIRC clock is valid.

Returns

True if clock is valid, false if not.

`status_t` `CLOCK_InitFirc(const scg_firc_config_t *config)`
Initializes the SCG fast IRC clock.

This function enables the SCG fast IRC clock according to the configuration.

Note: This function can't detect whether the FIRC has been enabled and used by an IP.

Parameters

- `config` – Pointer to the configuration structure.

Return values

- `kStatus_Success` – FIRC is initialized.
- `kStatus_SCG_Busy` – FIRC has been enabled and is used by the system clock.
- `kStatus_ReadOnly` – FIRC control register is locked.

`status_t` `CLOCK_DeinitFirc(void)`
De-initializes the SCG fast IRC.
This function disables the SCG fast IRC.

Note: This function can't detect whether the FIRC is used by an IP.

Return values

- `kStatus_Success` – FIRC is deinitialized.
- `kStatus_SCG_Busy` – FIRC is used by the system clock.
- `kStatus_ReadOnly` – FIRC control register is locked.

```
static inline void CLOCK_SetFircAsyncClkDiv(scg_async_clk_t asyncClk, scg_async_clk_div_t
                                             divider)
```

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- *asyncClk* – Which asynchronous clock to configure.
- *divider* – The divider value to set.

```
uint32_t CLOCK_GetFircFreq(void)
```

Gets the SCG FIRC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

```
uint32_t CLOCK_GetFircAsyncFreq(scg_async_clk_t type)
```

Gets the SCG asynchronous clock frequency from the FIRC.

Parameters

- *type* – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

```
static inline bool CLOCK_IsFircErr(void)
```

Checks whether the FIRC clock error occurs.

Returns

True if the error occurs, false if not.

```
static inline void CLOCK_ClearFircErr(void)
```

Clears the FIRC clock error.

```
static inline bool CLOCK_IsFircValid(void)
```

Checks whether the FIRC clock is valid.

Returns

True if clock is valid, false if not.

```
uint32_t CLOCK_GetRtcOscFreq(void)
```

Gets the SCG RTC OSC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

```
static inline bool CLOCK_IsRtcOscErr(void)
```

Checks whether the RTC OSC clock error occurs.

Returns

True if error occurs, false if not.

```
static inline void CLOCK_ClearRtcOscErr(void)
```

Clears the RTC OSC clock error.

```
static inline void CLOCK_SetRtcOscMonitorMode(scg_rosc_monitor_mode_t mode)
```

Sets the RTC OSC monitor mode.

This function sets the RTC OSC monitor mode. The mode can be disabled. It can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

static inline bool CLOCK_IsRtcOscValid(void)

Checks whether the RTC OSC clock is valid.

Returns

True if the clock is valid, false if not.

status_t CLOCK_InitLpFll(const scg_lpfll_config_t *config)

Initializes the SCG LPFLL clock.

This function enables the SCG LPFLL clock according to the configuration.

Note: This function can't detect whether the LPFLL has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – LPFLL is initialized.
- kStatus_SCG_Busy – LPFLL has been enabled and is used by the system clock.
- kStatus_ReadOnly – LPFLL control register is locked.

status_t CLOCK_DeinitLpFll(void)

De-initializes the SCG LPFLL.

This function disables the SCG LPFLL.

Note: This function can't detect whether the LPFLL is used by an IP.

Return values

- kStatus_Success – LPFLL is deinitialized.
- kStatus_SCG_Busy – LPFLL is used by the system clock.
- kStatus_ReadOnly – LPFLL control register is locked.

static inline void CLOCK_SetLpFllAsyncClkDiv(scg_async_clk_t asyncClk, scg_async_clk_div_t divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set.

uint32_t CLOCK_GetLpFllFreq(void)

Gets the SCG LPFLL clock frequency.

Returns

Clock frequency in Hz; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpFllAsyncFreq(*scg_async_clk_t* type)

Gets the SCG asynchronous clock frequency from the LPFLL.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency in Hz; If the clock is invalid, returns 0.

static inline bool CLOCK_IsLpFllValid(void)

Checks whether the LPFLL clock is valid.

Returns

True if the clock is valid, false if not.

static inline void CLOCK_SetXtal0Freq(uint32_t freq)

Sets the XTAL0 frequency based on board settings.

Parameters

- freq – The XTAL0/EXTAL0 input clock frequency in Hz.

static inline void CLOCK_SetXtal32Freq(uint32_t freq)

Sets the XTAL32 frequency based on board settings.

Parameters

- freq – The XTAL32/EXTAL32 input clock frequency in Hz.

uint32_t divSlow

Slow clock divider, see *scg_sys_clk_div_t*.

uint32_t divBus

Bus clock divider, see *scg_sys_clk_div_t*.

uint32_t divExt

External clock divider, see *scg_sys_clk_div_t*.

uint32_t __pad0__

Reserved.

uint32_t divCore

Core clock divider, see *scg_sys_clk_div_t*.

uint32_t __pad1__

Reserved.

uint32_t src

System clock source, see *scg_sys_clk_src_t*.

uint32_t __pad2__

reserved.

uint32_t enableMode

Enable mode, OR'ed value of *_scg_sirc_enable_mode*.

scg_async_clk_div_t div1

SIRCDIV1 value.

scg_async_clk_div_t div2

SIRCDIV2 value.

scg_async_clk_div_t div3
SIRCDIV3 value.

scg_sirc_range_t range
Slow IRC frequency range.

scg_firc_trim_mode_t trimMode
FIRC trim mode.

scg_firc_trim_src_t trimSrc
Trim source.

uint8_t trimCoar
Trim coarse value; Irrelevant if trimMode is kSCG_FircTrimUpdate.

uint8_t trimFine
Trim fine value; Irrelevant if trimMode is kSCG_FircTrimUpdate.

uint32_t enableMode
Enable mode, OR'ed value of *_scg_firc_enable_mode*.

scg_async_clk_div_t div1
FIRCDIV1 value.

scg_async_clk_div_t div2
FIRCDIV2 value.

scg_async_clk_div_t div3
FIRCDIV3 value.

scg_firc_range_t range
Fast IRC frequency range.

const *scg_firc_trim_config_t* *trimConfig
Pointer to the FIRC trim configuration; set NULL to disable trim.

scg_lpfl_trim_mode_t trimMode
Trim mode.

scg_lpfl_lock_mode_t lockMode
Lock mode; Irrelevant if the trimMode is kSCG_LpFlTrimNonUpdate.

scg_lpfl_trim_src_t trimSrc
Trim source.

uint8_t trimDiv
Trim predivideds value, which can be 0 ~ 31. [Trim source frequency / (trimDiv + 1)] must be 2 MHz or 32768 Hz.

uint8_t trimValue
Trim value; Irrelevant if trimMode is the kSCG_LpFlTrimUpdate.

uint8_t enableMode
Enable mode, OR'ed value of *_scg_lpfl_enable_mode*

scg_async_clk_div_t div1
LPFLLDIV1 value.

scg_async_clk_div_t div2
LPFLLDIV2 value.

scg_async_clk_div_t div3
LPFLLDIV3 value.

scg_lpfl_range_t range

LPFLL frequency range.

const *scg_lpfl_trim_config_t* *trimConfig

Trim configuration; set NULL to disable trim.

scg_rosc_monitor_mode_t monitorMode

Clock monitor mode selected.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

struct *_scg_sys_clk_config*

#include <fsl_clock.h> SCG system clock configuration.

struct *_scg_sirc_config*

#include <fsl_clock.h> SCG slow IRC clock configuration.

struct *_scg_firc_trim_config*

#include <fsl_clock.h> SCG fast IRC clock trim configuration.

struct *_scg_firc_config_t*

#include <fsl_clock.h> SCG fast IRC clock configuration.

struct *_scg_lpfl_trim_config*

#include <fsl_clock.h> SCG LPFLL clock trim configuration.

struct *_scg_lpfl_config*

#include <fsl_clock.h> SCG low power FLL configuration.

struct *_scg_rosc_config*

#include <fsl_clock.h> SCG RTC OSC configuration.

2.11 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.5.

Current version: 2.0.5

Change log:

- Version 2.0.5
 - Fix CERT-C issue with boolean-to-unsigned integer conversion.
- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues

- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum `_crc_bits`

CRC bit width.

Values:

enumerator `kCrcBits16`

Generate 16-bit CRC code

enumerator `kCrcBits32`

Generate 32-bit CRC code

enum `_crc_result`

CRC result type.

Values:

enumerator `kCrcFinalChecksum`

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator `kCrcIntermediateChecksum`

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for `CRC_Init()` to continue adding data to this checksum.

typedef enum `_crc_bits` `crc_bits_t`

CRC bit width.

typedef enum `_crc_result` `crc_result_t`

CRC result type.

typedef struct `_crc_config` `crc_config_t`

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void `CRC_Init(CRC_Type *base, const crc_config_t *config)`

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- `base` – CRC peripheral address.
- `config` – CRC module configuration structure.

static inline void `CRC_Deinit(CRC_Type *base)`

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- `base` – CRC peripheral address.

```
void CRC_GetDefaultConfig(crc_config_t *config)
```

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

```
void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)
```

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

```
uint32_t CRC_Get32bitResult(CRC_Type *base)
```

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

```
uint16_t CRC_Get16bitResult(CRC_Type *base)
```

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

```
CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT
```

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

```
struct _crc_config
```

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1_0000_0010_0001 = x^{12}+x^5+1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.12 DAC: Digital-to-Analog Converter Driver

void DAC_Init(LPDAC_Type *base, const *dac_config_t* *config)

Initialize the DAC module with common configuration.

The clock will be enabled in this function.

Parameters

- base – DAC peripheral base address.
- config – Pointer to configuration structure.

void DAC_GetDefaultConfig(*dac_config_t* *config)

Get the default settings for initialization's configuration.

This function initializes the user configuration structure to a default value. The default values are:

```
config->fifoWatermarkLevel = 0U;  
config->fifoTriggerMode = kDAC_FIFOTriggerByHardwareMode;  
config->fifoWorkMode = kDAC_FIFODisabled;  
config->enableLowPowerMode = false;  
config->referenceVoltageSource = kDAC_ReferenceVoltageSourceAlt1;
```

Parameters

- config – Pointer to configuration structure.

void DAC_Deinit(LPDAC_Type *base)

De-initialize the DAC module.

The clock will be disabled in this function.

Parameters

- base – DAC peripheral base address.

```
static inline void DAC_SetReset(LPDAC_Type *base, uint32_t mask)
```

Assert the reset control to part hardware.

This function is to assert the reset control to part hardware. Responding part hardware would remain reset until cleared by software.

Parameters

- `base` – DAC peripheral base address.
- `mask` – The reset control mask, see to `_dac_reset_control_t`.

```
static inline void DAC_ClearReset(LPDAC_Type *base, uint32_t mask)
```

Clear the reset control to part hardware.

This function is to clear the reset control to part hardware. Responding part hardware would work after the reset control is cleared by software.

Parameters

- `base` – DAC peripheral base address.
- `mask` – The reset control mask, see to `_dac_reset_control_t`.

```
static inline void DAC_Enable(LPDAC_Type *base, bool enable)
```

Enable the DAC hardware system or not.

This function is to start the Programmable Reference Generator operation or not.

Parameters

- `base` – DAC peripheral base address.
- `enable` – Assertion of indicated event.

```
static inline void DAC_EnableInterrupts(LPDAC_Type *base, uint32_t mask)
```

Enable the interrupts.

Parameters

- `base` – DAC peripheral base address.
- `mask` – Mask value of indicated interrupt events. See to `_dac_interrupt_enable`.

```
static inline void DAC_DisableInterrupts(LPDAC_Type *base, uint32_t mask)
```

Disable the interrupts.

Parameters

- `base` – DAC peripheral base address.
- `mask` – Mask value of indicated interrupt events. See to `_dac_interrupt_enable`.

```
static inline void DAC_EnableDMA(LPDAC_Type *base, uint32_t mask, bool enable)
```

Enable the DMA switchers or not.

Parameters

- `base` – DAC peripheral base address.
- `mask` – Mask value of indicated DMA request. See to `_dac_dma_enable`.
- `enable` – Enable the DMA or not.

```
static inline uint32_t DAC_GetStatusFlags(LPDAC_Type *base)
```

Get status flags of DAC module.

Parameters

- base – DAC peripheral base address.

Returns

Mask value of status flags. See to `_dac_status_flags`.

static inline void DAC_ClearStatusFlags(LPDAC_Type *base, uint32_t flags)

Clear status flags of DAC module.

Parameters

- base – DAC peripheral base address.
- flags – Mask value of status flags to be cleared. See to `_dac_status_flags`.

static inline void DAC_SetData(LPDAC_Type *base, uint32_t value)

Set data into the entry of FIFO buffer.

Parameters

- base – DAC peripheral base address.
- value – Setting value into FIFO buffer.

static inline uint32_t DAC_GetFIFOWritePointer(LPDAC_Type *base)

Get the value of the FIFO write pointer.

Parameters

- base – DAC peripheral base address.

Returns

Current value of the FIFO write pointer.

static inline uint32_t DAC_GetFIFOReadPointer(LPDAC_Type *base)

Get the value of the FIFO read pointer.

Parameters

- base – DAC peripheral base address.

Returns

Current value of the FIFO read pointer.

static inline void DAC_DoSoftwareTriggerFIFO(LPDAC_Type *base)

Do software trigger to FIFO when in software mode.

Parameters

- base – DAC peripheral base address.

FSL_DAC_DRIVER_VERSION

DAC driver version 2.1.3.

DAC reset control.

Values:

enumerator kDAC_ResetFIFO

Resets the FIFO pointers and flags.

enumerator kDAC_ResetLogic

Resets all DAC registers and internal logic.

DAC interrupts.

Values:

enumerator `kDAC_FIFOFullInterruptEnable`
 FIFO full interrupt enable.

enumerator `kDAC_FIFOEmptyInterruptEnable`
 FIFO empty interrupt enable.

enumerator `kDAC_FIFOWatermarkInterruptEnable`
 FIFO watermark interrupt enable.

enumerator `kDAC_SwingBackInterruptEnable`
 Swing back one cycle complete interrupt enable.

enumerator `kDAC_FIFOOverflowInterruptEnable`
 FIFO overflow interrupt enable.

enumerator `kDAC_FIFOUnderflowInterruptEnable`
 FIFO underflow interrupt enable.

DAC DMA switchers.

Values:

enumerator `kDAC_FIFOEmptyDMAEnable`
 FIFO empty DMA enable.

enumerator `kDAC_FIFOWatermarkDMAEnable`
 FIFO watermark DMA enable.

DAC status flags.

Values:

enumerator `kDAC_FIFOUnderflowFlag`

This flag means that there is a new trigger after the buffer is empty. The FIFO read pointer will not increase in this case and the data sent to DAC analog conversion will not be changed. This flag is cleared by writing a 1 to it.

enumerator `kDAC_FIFOOverflowFlag`

This flag indicates that data is intended to write into FIFO after the buffer is full. The writer pointer will not increase in this case. The extra data will not be written into the FIFO. This flag is cleared by writing a 1 to it.

enumerator `kDAC_FIFOSwingBackFlag`

This flag indicates that the DAC has completed one period of conversion in swing back mode. It means that the read pointer has increased to the top (write pointer) once and then decreased to zero once. For example, after three data is written to FIFO, the writer pointer is now 3. Then, if continually triggered, the read pointer will swing like: 0-1-2-1-0-1-2-, and so on. After the fourth trigger, the flag is set. This flag is cleared by writing a 1 to it.

enumerator `kDAC_FIFOWatermarkFlag`

This field is set if the remaining data in FIFO is less than or equal to the setting value of watermark. By writing data into FIFO by DMA or CPU, this flag is cleared automatically when the data in FIFO is more than the setting value of watermark.

enumerator `kDAC_FIFOEmptyFlag`
 FIFO empty flag.

enumerator `kDAC_FIFOFullFlag`
 FIFO full flag.

enum `_dac_fifo_trigger_mode`

DAC FIFO trigger mode.

Values:

enumerator `kDAC_FIFOTriggerByHardwareMode`

Buffer would be triggered by hardware.

enumerator `kDAC_FIFOTriggerBySoftwareMode`

Buffer would be triggered by software.

enum `_dac_fifo_work_mode`

DAC FIFO work mode.

Values:

enumerator `kDAC_FIFODisabled`

FIFO mode is disabled and buffer mode is enabled. Any data written to DATA[DATA] goes to buffer then goes to conversion.

enumerator `kDAC_FIFOWorkAsNormalMode`

FIFO mode is enabled. Data will be first read from FIFO to buffer then goes to conversion.

enumerator `kDAC_FIFOWorkAsSwingMode`

In swing mode, the read pointer swings between the writer pointer and zero. That is, the trigger increases the read pointer till reach the writer pointer and decreases the read pointer till zero, and so on. The FIFO empty/full/watermark flag will not update during swing back mode.

enum `_dac_reference_voltage_source`

DAC reference voltage source.

Values:

enumerator `kDAC_ReferenceVoltageSourceAlt1`

The DAC selects VREFH_INT as the reference voltage.

enumerator `kDAC_ReferenceVoltageSourceAlt2`

The DAC selects VREFH_EXT as the reference voltage.

typedef enum `_dac_fifo_trigger_mode` `dac_fifo_trigger_mode_t`

DAC FIFO trigger mode.

typedef enum `_dac_fifo_work_mode` `dac_fifo_work_mode_t`

DAC FIFO work mode.

typedef enum `_dac_reference_voltage_source` `dac_reference_voltage_source_t`

DAC reference voltage source.

typedef struct `_dac_config` `dac_config_t`

DAC configuration structure.

struct `_dac_config`

#include `<fsl_dac.h>` DAC configuration structure.

Public Members

uint32_t `fifoWatermarkLevel`

FIFO's watermark, the max value can be the hardware FIFO size.

dac_fifo_trigger_mode_t fifoTriggerMode

Select the trigger mode for FIFO.

dac_fifo_work_mode_t fifoWorkMode

Select the work mode for FIFO.

bool enableLowPowerMode

Enable the low power mode.

dac_reference_voltage_source_t referenceVoltageSource

Select the reference voltage source.

2.13 DMAMUX: Direct Memory Access Multiplexer Driver

void DMAMUX_Init(DMAMUX_Type *base)

Initializes the DMAMUX peripheral.

This function ungates the DMAMUX clock.

Parameters

- base – DMAMUX peripheral base address.

void DMAMUX_Deinit(DMAMUX_Type *base)

Deinitializes the DMAMUX peripheral.

This function gates the DMAMUX clock.

Parameters

- base – DMAMUX peripheral base address.

static inline void DMAMUX_EnableChannel(DMAMUX_Type *base, uint32_t channel)

Enables the DMAMUX channel.

This function enables the DMAMUX channel.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.

static inline void DMAMUX_DisableChannel(DMAMUX_Type *base, uint32_t channel)

Disables the DMAMUX channel.

This function disables the DMAMUX channel.

Note: The user must disable the DMAMUX channel before configuring it.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.

static inline void DMAMUX_SetSource(DMAMUX_Type *base, uint32_t channel, int32_t source)

Configures the DMAMUX channel source.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.

- `source` – Channel source, which is used to trigger the DMA transfer. User need to use the `dma_request_source_t` type as the input parameter.

```
static inline void DMAMUX_EnablePeriodTrigger(DMAMUX_Type *base, uint32_t channel)
```

Enables the DMAMUX period trigger.

This function enables the DMAMUX period trigger feature.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

```
static inline void DMAMUX_DisablePeriodTrigger(DMAMUX_Type *base, uint32_t channel)
```

Disables the DMAMUX period trigger.

This function disables the DMAMUX period trigger.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

```
static inline void DMAMUX_EnableAlwaysOn(DMAMUX_Type *base, uint32_t channel, bool enable)
```

Enables the DMA channel to be always ON.

This function enables the DMAMUX channel always ON feature.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.
- `enable` – Switcher of the always ON feature. “true” means enabled, “false” means disabled.

FSL_DMAMUX_DRIVER_VERSION

DMAMUX driver version 2.1.1.

2.14 eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

```
void EDMA_Init(DMA_Type *base, const edma_config_t *config)
```

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure. All emda enabled request will be cleared in this function.

Note: This function enables the minor loop map feature.

Parameters

- `base` – eDMA peripheral base address.
- `config` – A pointer to the configuration structure, see “`edma_config_t`”.

`void EDMA_Deinit(DMA_Type *base)`
 Deinitializes the eDMA peripheral.
 This function gates the eDMA clock.

Parameters

- `base` – eDMA peripheral base address.

`void EDMA_InstallTCD(DMA_Type *base, uint32_t channel, edma_tcd_t *tcd)`
 Push content of TCD structure into hardware TCD register.

Parameters

- `base` – EDMA peripheral base address.
- `channel` – EDMA channel number.
- `tcd` – Point to TCD structure.

`void EDMA_GetDefaultConfig(edma_config_t *config)`
 Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
config.enableContinuousLinkMode = false;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
```

Parameters

- `config` – A pointer to the eDMA configuration structure.

`static inline void EDMA_EnableContinuousChannelLinkMode(DMA_Type *base, bool enable)`
 Enable/Disable continuous channel link mode.

Note: Do not use continuous link mode with a channel linking to itself if there is only one minor loop iteration per service request, for example, if the channel's NBYTES value is the same as either the source or destination size. The same data transfer profile can be achieved by simply increasing the NBYTES value, which provides more efficient, faster processing.

Parameters

- `base` – EDMA peripheral base address.
- `enable` – true is enable, false is disable.

`static inline void EDMA_EnableMinorLoopMapping(DMA_Type *base, bool enable)`
 Enable/Disable minor loop mapping.

The `TCDn.word2` is redefined to include individual enable fields, an offset field, and the NBYTES field.

Parameters

- `base` – EDMA peripheral base address.
- `enable` – true is enable, false is disable.

```
void EDMA_ResetChannel(DMA_Type *base, uint32_t channel)
```

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_SetTransferConfig(DMA_Type *base, uint32_t channel, const edma_transfer_config_t *config, edma_tcd_t *nextTcd)
```

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_SetMinorOffsetConfig(DMA_Type *base, uint32_t channel, const edma_minor_offset_config_t *config)
```

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_SetChannelPreemptionConfig(DMA_Type *base, uint32_t channel, const
                                     edma_channel_preemption_config_t *config)
```

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

```
void EDMA_SetChannelLink(DMA_Type *base, uint32_t channel, edma_channel_link_type_t
                         linkType, uint32_t linkedChannel)
```

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- linkType – A channel link type, which can be one of the following:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
void EDMA_SetBandWidth(DMA_Type *base, uint32_t channel, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA_SetModulo(DMA_Type *base, uint32_t channel, edma_modulo_t srcModulo,
                   edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA_EnableAsyncRequest(DMA_Type *base, uint32_t channel, bool enable)
```

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

```
static inline void EDMA_EnableAutoStopRequest(DMA_Type *base, uint32_t channel, bool enable)
```

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

```
void EDMA_EnableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)
```

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_DisableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)
```

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined `edma_interrupt_enable_t` type.

```
void EDMA_SetMajorOffsetConfig(DMA_Type *base, uint32_t channel, int32_t sourceOffset,
                               int32_t destOffset)
```

Configures the eDMA channel TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `base` – eDMA peripheral base address.
- `channel` – edma channel number.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

```
void EDMA_TcdReset(edma_tcd_t *tcd)
```

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- `tcd` – Pointer to the TCD structure.

```
void EDMA_TcdSetTransferConfig(edma_tcd_t *tcd, const edma_transfer_config_t *config,
                               edma_tcd_t *nextTcd)
```

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the `nextTcd` is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the `EDMA_TcdReset`.

Parameters

- `tcd` – Pointer to the TCD structure.
- `config` – Pointer to eDMA transfer configuration structure.
- `nextTcd` – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA__TcdSetMinorOffsetConfig(edma_tcd_t *tcd, const edma_minor_offset_config_t
                                     *config)
```

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- *tcd* – A point to the TCD structure.
- *config* – A pointer to the minor offset configuration structure.

```
void EDMA__TcdSetChannelLink(edma_tcd_t *tcd, edma_channel_link_type_t linkType, uint32_t
                              linkedChannel)
```

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- *tcd* – Point to the TCD structure.
- *linkType* – Channel link type, it can be one of:
 - *kEDMA_LinkNone*
 - *kEDMA_MinorLink*
 - *kEDMA_MajorLink*
- *linkedChannel* – The linked channel number.

```
static inline void EDMA__TcdSetBandWidth(edma_tcd_t *tcd, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- *tcd* – A pointer to the TCD structure.
- *bandWidth* – A bandwidth setting, which can be one of the following:
 - *kEDMABandwidthStallNone*
 - *kEDMABandwidthStall4Cycle*
 - *kEDMABandwidthStall8Cycle*

```
void EDMA__TcdSetModulo(edma_tcd_t *tcd, edma_modulo_t srcModulo, edma_modulo_t
                        destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- `tcd` – A pointer to the TCD structure.
- `srcModulo` – A source modulo value.
- `destModulo` – A destination modulo value.

```
static inline void EDMA_TcdEnableAutoStopRequest(edma_tcd_t *tcd, bool enable)
```

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- `tcd` – A pointer to the TCD structure.
- `enable` – The command to enable (true) or disable (false).

```
void EDMA_TcdEnableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

Parameters

- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_TcdDisableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

Parameters

- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_TcdSetMajorOffsetConfig(edma_tcd_t *tcd, int32_t sourceOffset, int32_t destOffset)
```

Configures the eDMA TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `tcd` – A point to the TCD structure.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

```
static inline void EDMA_EnableChannelRequest(DMA_Type *base, uint32_t channel)
```

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

```
static inline void EDMA_DisableChannelRequest(DMA_Type *base, uint32_t channel)
```

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- `base` – eDMA peripheral base address.

- channel – eDMA channel number.

static inline void EDMA_TriggerChannelStart(DMA_Type *base, uint32_t channel)

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

uint32_t EDMA_GetRemainingMajorLoopCount(DMA_Type *base, uint32_t channel)

Gets the remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccurate.

- a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)
-

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

static inline uint32_t EDMA_GetErrorStatusFlags(DMA_Type *base)

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the `_edma_error_status_flags` type to decode the return variables.

uint32_t EDMA_GetChannelStatusFlags(DMA_Type *base, uint32_t channel)

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the `_edma_channel_status_flags` type to decode the return variables.

```
void EDMA_ClearChannelStatusFlags(DMA_Type *base, uint32_t channel, uint32_t mask)
```

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined `_edma_channel_status_flags` type.

```
void EDMA_CreateHandle(edma_handle_t *handle, DMA_Type *base, uint32_t channel)
```

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_InstallTCDMemory(edma_handle_t *handle, edma_tcd_t *tcdPool, uint32_t tcdSize)
```

Installs the TCDs memory pool into the eDMA handle.

This function is called after the `EDMA_CreateHandle` to use scatter/gather feature. This function shall only be used while users need to use scatter gather mode. Scatter gather mode enables EDMA to load a new transfer control block (tcd) in hardware, and automatically reconfigure that DMA channel for a new transfer. Users need to prepare tcd memory and also configure tcds using interface `EDMA_SubmitTransfer`.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

```
void EDMA_SetCallback(edma_handle_t *handle, edma_callback callback, void *userData)
```

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes. This function will be called every time one tcd finished transfer.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

```
void EDMA_PrepareTransferConfig(edma_transfer_config_t *config, void *srcAddr, uint32_t
                               srcWidth, int16_t srcOffset, void *destAddr, uint32_t
                               destWidth, int16_t destOffset, uint32_t bytesEachRequest,
                               uint32_t transferBytes)
```

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- `config` – The user configuration structure of type `edma_transfer_t`.
- `srcAddr` – eDMA transfer source address.
- `srcWidth` – eDMA transfer source address width(bytes).
- `srcOffset` – source address offset.
- `destAddr` – eDMA transfer destination address.
- `destWidth` – eDMA transfer destination address width(bytes).
- `destOffset` – destination address offset.
- `bytesEachRequest` – eDMA transfer bytes per channel request.
- `transferBytes` – eDMA transfer bytes to be transferred.

```
void EDMA_PrepareTransfer(edma_transfer_config_t *config, void *srcAddr, uint32_t srcWidth,  
                        void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest,  
                        uint32_t transferBytes, edma_transfer_type_t transferType)
```

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- `config` – The user configuration structure of type `edma_transfer_t`.
- `srcAddr` – eDMA transfer source address.
- `srcWidth` – eDMA transfer source address width(bytes).
- `destAddr` – eDMA transfer destination address.
- `destWidth` – eDMA transfer destination address width(bytes).
- `bytesEachRequest` – eDMA transfer bytes per channel request.
- `transferBytes` – eDMA transfer bytes to be transferred.
- `transferType` – eDMA transfer type.

```
status_t EDMA_SubmitTransfer(edma_handle_t *handle, const edma_transfer_config_t *config)
```

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function `EDMA_InstallTCMemory` before.

Parameters

- `handle` – eDMA handle pointer.
- `config` – Pointer to eDMA transfer configuration structure.

Return values

- `kStatus_EDMA_Success` – It means submit transfer request succeed.
- `kStatus_EDMA_QueueFull` – It means TCD queue is full. Submit transfer request is not allowed.
- `kStatus_EDMA_Busy` – It means the given channel is busy, need to submit request later.

`void EDMA_StartTransfer(edma_handle_t *handle)`

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- `handle` – eDMA handle pointer.

`void EDMA_StopTransfer(edma_handle_t *handle)`

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call `EDMA_StartTransfer()` again to resume the transfer.

Parameters

- `handle` – eDMA handle pointer.

`void EDMA_AbortTransfer(edma_handle_t *handle)`

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- `handle` – DMA handle pointer.

`static inline uint32_t EDMA_GetUnusedTCDNumber(edma_handle_t *handle)`

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- `handle` – DMA handle pointer.

Returns

The unused tcd slot number.

`static inline uint32_t EDMA_GetNextTCDAddress(edma_handle_t *handle)`

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- `handle` – DMA handle pointer.

Returns

The next TCD address.

`void EDMA_HandleIRQ(edma_handle_t *handle)`

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Note: For the case using TCD queue, when the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled).

For instance, when the time interrupt of TCD[0] happens, the TCD[1] has already been loaded into the eDMA engine. As sga and sga_index are calculated based on the DLAST_SGA bitfield lies in the TCD_CSR register, the sga_index in this case should be 2 (DLAST_SGA of TCD[1] stores the address of TCD[2]). Thus, the “tcdUsed” updated should be (tcdUsed - 2U) which indicates the number of TCDs can be loaded in the memory pool (because TCD[0] and TCD[1] have been loaded into the eDMA engine at this point already).

For the last two continuous ISRs in a scatter/gather process, they both load the last TCD (The last ISR does not load a new TCD) from the memory pool to the eDMA engine when major loop completes. Therefore, ensure that the header and tcdUsed updated are identical for them. tcdUsed are both 0 in this case as no TCD to be loaded.

See the “eDMA basic data flow” in the eDMA Functional description section of the Reference Manual for further details.

Parameters

- handle – eDMA handle pointer.

FSL_EDMA_DRIVER_VERSION

eDMA driver version

Version 2.4.7.

enum _edma_transfer_size

eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable

Disable modulo

enumerator kEDMA_Modulo2bytes

Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes
Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes
Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes
Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes
Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes
Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes
Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes

Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes

Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes

Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes

Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes

Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes

Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes

Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes

Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes

Circular buffer size is 2 G bytes.

enum _edma_bandwidth

Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone

No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle

eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle

eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type

Channel link type.

Values:

enumerator kEDMA_LinkNone

No channel link

enumerator kEDMA_MinorLink

Channel link after each minor loop

enumerator kEDMA_MajorLink

Channel link while major loop count exhausted

_edma_channel_status_flags eDMA channel status flags.

Values:

enumerator kEDMA_DoneFlag

DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag

eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag

eDMA interrupt flag, set while an interrupt occurred of this channel

`_edma_error_status_flags` eDMA channel error status flags.

Values:

enumerator kEDMA_DestinationBusErrorFlag

Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag

Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag

Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag

NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag

Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag

Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag

Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag

Source address not aligned with source size

enumerator kEDMA_ErrorChannelFlag

Error channel number of the cancelled channel number

enumerator kEDMA_ChannelPriorityErrorFlag

Channel priority is not unique.

enumerator kEDMA_TransferCanceledFlag

Transfer cancelled

enumerator kEDMA_ValidFlag

No error occurred, this bit is 0. Otherwise, it is 1.

enum `_edma_interrupt_enable`

eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable

Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable

Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable

Enable interrupt while major count to half value.

enum `_edma_transfer_type`

eDMA transfer type

Values:

enumerator `kEDMA_MemoryToMemory`
Transfer from memory to memory

enumerator `kEDMA_PeripheralToMemory`
Transfer from peripheral to memory

enumerator `kEDMA_MemoryToPeripheral`
Transfer from memory to peripheral

enumerator `kEDMA_PeripheralToPeripheral`
Transfer from Peripheral to peripheral

`_edma_transfer_status` eDMA transfer status

Values:

enumerator `kStatus_EDMA_QueueFull`
TCD queue is full.

enumerator `kStatus_EDMA_Busy`
Channel is busy and can't handle the transfer request.

typedef enum `_edma_transfer_size` `edma_transfer_size_t`
eDMA transfer configuration

typedef enum `_edma_modulo` `edma_modulo_t`
eDMA modulo configuration

typedef enum `_edma_bandwidth` `edma_bandwidth_t`
Bandwidth control.

typedef enum `_edma_channel_link_type` `edma_channel_link_type_t`
Channel link type.

typedef enum `_edma_interrupt_enable` `edma_interrupt_enable_t`
eDMA interrupt source

typedef enum `_edma_transfer_type` `edma_transfer_type_t`
eDMA transfer type

typedef struct `_edma_config` `edma_config_t`
eDMA global configuration structure.

typedef struct `_edma_transfer_config` `edma_transfer_config_t`
eDMA transfer configuration
This structure configures the source/destination transfer attribute.

typedef struct `_edma_channel_Preemption_config` `edma_channel_Preemption_config_t`
eDMA channel priority configuration

typedef struct `_edma_minor_offset_config` `edma_minor_offset_config_t`
eDMA minor offset configuration

typedef struct `_edma_tcd` `edma_tcd_t`
eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

```
typedef void (*edma_callback)(struct _edma_handle *handle, void *userData, bool transferDone,
uint32_t tcds)
```

Define callback function for eDMA.

This callback function is called in the EDMA interrupt handle. In normal mode, run into callback function means the transfer users need is done. In scatter gather mode, run into callback function means a transfer control block (tcd) is finished. Not all transfer finished, users can get the finished tcd numbers using interface EDMA_GetUnusedTCDNumber.

Param handle

EDMA handle pointer, users shall not touch the values inside.

Param userData

The callback user parameter pointer. Users can use this parameter to involve things users need to change in EDMA callback function.

Param transferDone

If the current loaded transfer done. In normal mode it means if all transfer done. In scatter gather mode, this parameter shows is the current transfer block in EDMA register is done. As the load of core is different, it will be different if the new tcd loaded into EDMA registers while this callback called. If true, it always means new tcd still not loaded into registers, while false means new tcd already loaded into registers.

Param tcds

How many tcds are done from the last callback. This parameter only used in scatter gather mode. It tells user how many tcds are finished between the last callback and this.

```
typedef struct _edma_handle edma_handle_t
```

eDMA transfer handle structure

```
DMA_DCHPRI_INDEX(channel)
```

Compute the offset unit from DCHPRI3.

```
struct _edma_config
```

#include <fsl_edma.h> eDMA global configuration structure.

Public Members

```
bool enableContinuousLinkMode
```

Enable (true) continuous link mode. Upon minor loop completion, the channel activates again if that channel has a minor loop channel link enabled and the link channel is itself.

```
bool enableHaltOnError
```

Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

```
bool enableRoundRobinArbitration
```

Enable (true) round robin channel arbitration method or fixed priority arbitration is used for channel selection

```
bool enableDebugMode
```

Enable(true) eDMA debug mode. When in debug mode, the eDMA stalls the start of a new channel. Executing channels are allowed to complete.

```
struct _edma_transfer_config
```

#include <fsl_edma.h> eDMA transfer configuration

This structure configures the source/destination transfer attribute.

Public Members

uint32_t srcAddr

Source data address.

uint32_t destAddr

Destination data address.

edma_transfer_size_t srcTransferSize

Source data transfer size.

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset applied to the current source address to form the next-state value as each source read is completed.

int16_t destOffset

Sign-extended offset applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

Bytes to transfer in a minor loop

uint32_t majorLoopCounts

Major loop iteration count.

struct _edma_channel_Preemption_config

#include <fsl_edma.h> eDMA channel priority configuration

Public Members

bool enableChannelPreemption

If true: a channel can be suspended by other channel with higher priority

bool enablePreemptAbility

If true: a channel can suspend other channel with low priority

uint8_t channelPriority

Channel priority

struct _edma_minor_offset_config

#include <fsl_edma.h> eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset

Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset

Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset

Offset for a minor loop mapping.

struct _edma_tcd

#include <fsl_edma.h> eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

Public Members

`__IO uint32_t SADDR`
SADDR register, used to save source address

`__IO uint16_t SOFF`
SOFF register, save offset bytes every transfer

`__IO uint16_t ATTR`
ATTR register, source/destination transfer size and modulo

`__IO uint32_t NBYTES`
Nbytes register, minor loop length in bytes

`__IO uint32_t SLAST`
SLAST register

`__IO uint32_t DADDR`
DADDR register, used for destination address

`__IO uint16_t DOFF`
DOFF register, used for destination offset

`__IO uint16_t CITER`
CITER register, current minor loop numbers, for unfinished minor loop.

`__IO uint32_t DLAST_SGA`
DLASTSGA register, next tcd address used in scatter-gather mode

`__IO uint16_t CSR`
CSR register, for TCD control status

`__IO uint16_t BITER`
BITER register, begin minor loop count.

`struct __edma_handle`
#include <fsl_edma.h> eDMA transfer handle structure

Public Members

edma_callback callback
Callback function for major count exhausted.

`void *userData`
Callback function parameter.

`DMA_Type *base`
eDMA peripheral base address.

*edma_tcd_t *tcdPool*
Pointer to memory stored TCDs.

`uint8_t channel`
eDMA channel number.

`volatile int8_t header`
The first TCD index. Should point to the next TCD to be loaded into the eDMA engine.

`volatile int8_t tail`
The last TCD index. Should point to the next TCD to be stored into the memory pool.

volatile int8_t tcdUsed

The number of used TCD slots. Should reflect the number of TCDs can be used/loaded in the memory.

volatile int8_t tcdSize

The total number of TCD slots in the queue.

uint8_t flags

The status of the current channel.

2.15 EWM: External Watchdog Monitor Driver

void EWM_Init(EWM_Type *base, const *ewm_config_t* *config)

Initializes the EWM peripheral.

This function is used to initialize the EWM. After calling, the EWM runs immediately according to the configuration. Note that, except for the interrupt enable control bit, other control bits and registers are write once after a CPU reset. Modifying them more than once generates a bus transfer error.

This is an example.

```
ewm_config_t config;
EWM_GetDefaultConfig(&config);
config.compareHighValue = 0xAAU;
EWM_Init(ewm_base,&config);
```

Parameters

- base – EWM peripheral base address
- config – The configuration of the EWM

void EWM_Deinit(EWM_Type *base)

Deinitializes the EWM peripheral.

This function is used to shut down the EWM.

Parameters

- base – EWM peripheral base address

void EWM_GetDefaultConfig(*ewm_config_t* *config)

Initializes the EWM configuration structure.

This function initializes the EWM configuration structure to default values. The default values are as follows.

```
ewmConfig->enableEwm = true;
ewmConfig->enableEwmInput = false;
ewmConfig->setInputAssertLogic = false;
ewmConfig->enableInterrupt = false;
ewmConfig->ewm_lpo_clock_source_t = kEWM_LpoClockSource0;
ewmConfig->prescaler = 0;
ewmConfig->compareLowValue = 0;
ewmConfig->compareHighValue = 0xFEU;
```

See also:

[ewm_config_t](#)

Parameters

- `config` – Pointer to the EWM configuration structure.

```
static inline void EWM_EnableInterrupts(EWM_Type *base, uint32_t mask)
```

Enables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- `base` – EWM peripheral base address
- `mask` – The interrupts to enable The parameter can be combination of the following source if defined
 - `kEWM_InterruptEnable`

```
static inline void EWM_DisableInterrupts(EWM_Type *base, uint32_t mask)
```

Disables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- `base` – EWM peripheral base address
- `mask` – The interrupts to disable The parameter can be combination of the following source if defined
 - `kEWM_InterruptEnable`

```
static inline uint32_t EWM_GetStatusFlags(EWM_Type *base)
```

Gets all status flags.

This function gets all status flags.

This is an example for getting the running flag.

```
uint32_t status;
status = EWM_GetStatusFlags(ewm_base) & kEWM_RunningFlag;
```

See also:

`_ewm_status_flags_t`

- True: a related status flag has been set.
- False: a related status flag is not set.

Parameters

- `base` – EWM peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

```
void EWM_Refresh(EWM_Type *base)
```

Services the EWM.

This function resets the EWM counter to zero.

Parameters

- `base` – EWM peripheral base address

FSL_EWM_DRIVER_VERSION

EWM driver version 2.0.4.

enum `_ewm_lpo_clock_source`

Describes EWM clock source.

Values:

enumerator `kEWM_LpoClockSource0`
EWM clock sourced from `lpo_clk[0]`

enumerator `kEWM_LpoClockSource1`
EWM clock sourced from `lpo_clk[1]`

enumerator `kEWM_LpoClockSource2`
EWM clock sourced from `lpo_clk[2]`

enumerator `kEWM_LpoClockSource3`
EWM clock sourced from `lpo_clk[3]`

enum `_ewm_interrupt_enable_t`

EWM interrupt configuration structure with default settings all disabled.

This structure contains the settings for all of EWM interrupt configurations.

Values:

enumerator `kEWM_InterruptEnable`
Enable the EWM to generate an interrupt

enum `_ewm_status_flags_t`

EWM status flags.

This structure contains the constants for the EWM status flags for use in the EWM functions.

Values:

enumerator `kEWM_RunningFlag`
Running flag, set when EWM is enabled

typedef enum `_ewm_lpo_clock_source` `ewm_lpo_clock_source_t`

Describes EWM clock source.

typedef struct `_ewm_config` `ewm_config_t`

Data structure for EWM configuration.

This structure is used to configure the EWM.

struct `_ewm_config`

#include <fsl_ewm.h> Data structure for EWM configuration.

This structure is used to configure the EWM.

Public Members

bool `enableEwm`
Enable EWM module

bool `enableEwmInput`
Enable EWM_in input

bool `setInputAssertLogic`
EWM_in signal assertion state

bool `enableInterrupt`
Enable EWM interrupt

ewm_lpo_clock_source_t clockSource
 Clock source select

uint8_t prescaler
 Clock prescaler value

uint8_t compareLowValue
 Compare low-register value

uint8_t compareHighValue
 Compare high-register value

2.16 FGPIO Driver

void FGPIO_PortInit(FGPIO_Type *base)

Initializes the FGPIO peripheral.

This function ungates the FGPIO clock.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)

void FGPIO_PinInit(FGPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a FGPIO pin used by the board.

To initialize the FGPIO driver, define a pin configuration, as either input or output, in the user file. Then, call the FGPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration:

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO port pin number
- config – FGPIO pin configuration pointer

static inline void FGPIO_PinWrite(FGPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple FGPIO pins to the logic 1 or 0.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO pin number

- output – FGPIOpin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void FGPIO_PortSet(FGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple FGPIO pins to the logic 1.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline void FGPIO_PortClear(FGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple FGPIO pins to the logic 0.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline void FGPIO_PortToggle(FGPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple FGPIO pins.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline uint32_t FGPIO_PinRead(FGPIO_Type *base, uint32_t pin)

Reads the current input value of the FGPIO port.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO pin number

Return values

FGPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

uint32_t FGPIO_PortGetInterruptFlags(FGPIO_Type *base)

Reads the FGPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level-sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)

Return values

The – current FGPIO port interrupt status flags, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

```
void FGPIO_PortClearInterruptFlags(FGPIO_Type *base, uint32_t mask)
```

Clears the multiple FGPIO pin interrupt status flag.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

2.17 C90TFS Flash Driver

2.18 FlexBus: External Bus Interface Driver

```
void FLEXBUS_Init(FB_Type *base, const flexbus_config_t *config)
```

Initializes and configures the FlexBus module.

This function enables the clock gate for FlexBus module. Only chip 0 is validated and set to known values. Other chips are disabled. Note that in this function, certain parameters, depending on external memories, must be set before using the FLEXBUS_Init() function. This example shows how to set up the `uart_state_t` and the `flexbus_config_t` parameters and how to call the FLEXBUS_Init function by passing in these parameters.

```
flexbus_config_t flexbusConfig;
FLEXBUS_GetDefaultConfig(&flexbusConfig);
flexbusConfig.waitStates = 2U;
flexbusConfig.chipBaseAddress = 0x60000000U;
flexbusConfig.chipBaseAddressMask = 7U;
FLEXBUS_Init(FB, &flexbusConfig);
```

Parameters

- base – FlexBus peripheral address.
- config – Pointer to the configuration structure

```
void FLEXBUS_Deinit(FB_Type *base)
```

De-initializes a FlexBus instance.

This function disables the clock gate of the FlexBus module clock.

Parameters

- base – FlexBus peripheral address.

```
void FLEXBUS_GetDefaultConfig(flexbus_config_t *config)
```

Initializes the FlexBus configuration structure.

This function initializes the FlexBus configuration structure to default value. The default values are.

```
fbConfig->chip = 0;
fbConfig->writeProtect = 0;
fbConfig->burstWrite = 0;
fbConfig->burstRead = 0;
fbConfig->byteEnableMode = 0;
fbConfig->autoAcknowledge = true;
fbConfig->extendTransferAddress = 0;
fbConfig->secondaryWaitStates = 0;
fbConfig->byteLaneShift = kFLEXBUS_NotShifted;
```

(continues on next page)

(continued from previous page)

```

fbConfig->writeAddressHold    = kFLEXBUS_Hold1Cycle;
fbConfig->readAddressHold     = kFLEXBUS_Hold1Or0Cycles;
fbConfig->addressSetup        = kFLEXBUS_FirstRisingEdge;
fbConfig->portSize             = kFLEXBUS_1Byte;
fbConfig->group1MultiplexControl = kFLEXBUS_MultiplexGroup1_FB_ALE;
fbConfig->group2MultiplexControl = kFLEXBUS_MultiplexGroup2_FB_CS4 ;
fbConfig->group3MultiplexControl = kFLEXBUS_MultiplexGroup3_FB_CS5;
fbConfig->group4MultiplexControl = kFLEXBUS_MultiplexGroup4_FB_TBST;
fbConfig->group5MultiplexControl = kFLEXBUS_MultiplexGroup5_FB_TA;

```

See also:

FLEXBUS_Init

Parameters

- config – Pointer to the initialization structure.

FSL_FLEXBUS_DRIVER_VERSION

Version 2.1.1.

enum _flexbus_port_size

Defines port size for FlexBus peripheral.

Values:

enumerator kFLEXBUS_4Bytes

32-bit port size

enumerator kFLEXBUS_1Byte

8-bit port size

enumerator kFLEXBUS_2Bytes

16-bit port size

enum _flexbus_write_address_hold

Defines number of cycles to hold address and attributes for FlexBus peripheral.

Values:

enumerator kFLEXBUS_Hold1Cycle

Hold address and attributes one cycles after FB_CS_n negates on writes

enumerator kFLEXBUS_Hold2Cycles

Hold address and attributes two cycles after FB_CS_n negates on writes

enumerator kFLEXBUS_Hold3Cycles

Hold address and attributes three cycles after FB_CS_n negates on writes

enumerator kFLEXBUS_Hold4Cycles

Hold address and attributes four cycles after FB_CS_n negates on writes

enum _flexbus_read_address_hold

Defines number of cycles to hold address and attributes for FlexBus peripheral.

Values:

enumerator kFLEXBUS_Hold1Or0Cycles

Hold address and attributes 1 or 0 cycles on reads

enumerator kFLEXBUS_Hold2Or1Cycles

Hold address and attributes 2 or 1 cycles on reads

enumerator kFLEXBUS_Hold3Or2Cycle
Hold address and attributes 3 or 2 cycles on reads

enumerator kFLEXBUS_Hold4Or3Cycle
Hold address and attributes 4 or 3 cycles on reads

enum _flexbus_address_setup
Address setup for FlexBus peripheral.

Values:

enumerator kFLEXBUS_FirstRisingEdge
Assert FB_CS_n on first rising clock edge after address is asserted

enumerator kFLEXBUS_SecondRisingEdge
Assert FB_CS_n on second rising clock edge after address is asserted

enumerator kFLEXBUS_ThirdRisingEdge
Assert FB_CS_n on third rising clock edge after address is asserted

enumerator kFLEXBUS_FourthRisingEdge
Assert FB_CS_n on fourth rising clock edge after address is asserted

enum _flexbus_bytelane_shift
Defines byte-lane shift for FlexBus peripheral.

Values:

enumerator kFLEXBUS_NotShifted
Not shifted. Data is left-justified on FB_AD

enumerator kFLEXBUS_Shifted
Shifted. Data is right justified on FB_AD

enum _flexbus_multiplex_group1_signal
Defines multiplex group1 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup1_FB_ALE
FB_ALE

enumerator kFLEXBUS_MultiplexGroup1_FB_CS1
FB_CS1

enumerator kFLEXBUS_MultiplexGroup1_FB_TS
FB_TS

enum _flexbus_multiplex_group2_signal
Defines multiplex group2 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup2_FB_CS4
FB_CS4

enumerator kFLEXBUS_MultiplexGroup2_FB_TSIZ0
FB_TSIZ0

enumerator kFLEXBUS_MultiplexGroup2_FB_BE_31_24
FB_BE_31_24

enum *flexbus_multiplex_group3_signal*

Defines multiplex group3 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup3_FB_CS5
FB_CS5

enumerator kFLEXBUS_MultiplexGroup3_FB_TSIZ1
FB_TSIZ1

enumerator kFLEXBUS_MultiplexGroup3_FB_BE_23_16
FB_BE_23_16

enum *flexbus_multiplex_group4_signal*

Defines multiplex group4 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup4_FB_TBST
FB_TBST

enumerator kFLEXBUS_MultiplexGroup4_FB_CS2
FB_CS2

enumerator kFLEXBUS_MultiplexGroup4_FB_BE_15_8
FB_BE_15_8

enum *flexbus_multiplex_group5_signal*

Defines multiplex group5 valid signals.

Values:

enumerator kFLEXBUS_MultiplexGroup5_FB_TA
FB_TA

enumerator kFLEXBUS_MultiplexGroup5_FB_CS3
FB_CS3

enumerator kFLEXBUS_MultiplexGroup5_FB_BE_7_0
FB_BE_7_0

typedef enum *flexbus_port_size* flexbus_port_size_t

Defines port size for FlexBus peripheral.

typedef enum *flexbus_write_address_hold* flexbus_write_address_hold_t

Defines number of cycles to hold address and attributes for FlexBus peripheral.

typedef enum *flexbus_read_address_hold* flexbus_read_address_hold_t

Defines number of cycles to hold address and attributes for FlexBus peripheral.

typedef enum *flexbus_address_setup* flexbus_address_setup_t

Address setup for FlexBus peripheral.

typedef enum *flexbus_bytelane_shift* flexbus_bytelane_shift_t

Defines byte-lane shift for FlexBus peripheral.

typedef enum *flexbus_multiplex_group1_signal* flexbus_multiplex_group1_t

Defines multiplex group1 valid signals.

typedef enum *flexbus_multiplex_group2_signal* flexbus_multiplex_group2_t

Defines multiplex group2 valid signals.

typedef enum *_flexbus_multiplex_group3_signal* flexbus__multiplex_group3_t
 Defines multiplex group3 valid signals.

typedef enum *_flexbus_multiplex_group4_signal* flexbus__multiplex_group4_t
 Defines multiplex group4 valid signals.

typedef enum *_flexbus_multiplex_group5_signal* flexbus__multiplex_group5_t
 Defines multiplex group5 valid signals.

typedef struct *_flexbus_config* flexbus__config_t
 Configuration structure that the user needs to set.

struct *_flexbus_config*
#include <fsl_flexbus.h> Configuration structure that the user needs to set.

Public Members

uint8_t chip
 Chip FlexBus for validation

uint8_t waitStates
 Value of wait states

uint8_t secondaryWaitStates
 Value of secondary wait states

uint32_t chipBaseAddress
 Chip base address for using FlexBus

uint32_t chipBaseAddressMask
 Chip base address mask

bool writeProtect
 Write protected

bool burstWrite
 Burst-Write enable

bool burstRead
 Burst-Read enable

bool byteEnableMode
 Byte-enable mode support

bool autoAcknowledge
 Auto acknowledge setting

bool extendTransferAddress
 Extend transfer start/extend address latch enable

bool secondaryWaitStatesEnable
 Enable secondary wait states

flexbus_port_size_t portSize
 Port size of transfer

flexbus_bytelane_shift_t byteLaneShift
 Byte-lane shift enable

flexbus_write_address_hold_t writeAddressHold
 Write address hold or deselect option

flexbus_read_address_hold_t readAddressHold

Read address hold or deselect option

flexbus_address_setup_t addressSetup

Address setup setting

flexbus_multiplex_group1_t group1MultiplexControl

FlexBus Signal Group 1 Multiplex control

flexbus_multiplex_group2_t group2MultiplexControl

FlexBus Signal Group 2 Multiplex control

flexbus_multiplex_group3_t group3MultiplexControl

FlexBus Signal Group 3 Multiplex control

flexbus_multiplex_group4_t group4MultiplexControl

FlexBus Signal Group 4 Multiplex control

flexbus_multiplex_group5_t group5MultiplexControl

FlexBus Signal Group 5 Multiplex control

2.19 FlexIO: FlexIO Driver

2.20 FlexIO Driver

void FLEXIO_GetDefaultConfig(*flexio_config_t* *userConfig)

Gets the default configuration to configure the FlexIO module. The configuration can be used directly to call the FLEXIO_Configure().

Example:

```
flexio_config_t config;
FLEXIO_GetDefaultConfig(&config);
```

Parameters

- userConfig – pointer to flexio_config_t structure

void FLEXIO_Init(FLEXIO_Type *base, const *flexio_config_t* *userConfig)

Configures the FlexIO with a FlexIO configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_GetDefaultConfig().

Example

```
flexio_config_t config = {
    .enableFlexio = true,
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false
};
FLEXIO_Configure(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- userConfig – pointer to flexio_config_t structure

```
void FLEXIO_Deinit(FLEXIO_Type *base)
```

Gates the FlexIO clock. Call this API to stop the FlexIO clock.

Note: After calling this API, call the FLEXIO_Init to use the FlexIO module.

Parameters

- base – FlexIO peripheral base address

```
uint32_t FLEXIO_GetInstance(FLEXIO_Type *base)
```

Get instance number for FLEXIO module.

Parameters

- base – FLEXIO peripheral base address.

```
void FLEXIO_Reset(FLEXIO_Type *base)
```

Resets the FlexIO module.

Parameters

- base – FlexIO peripheral base address

```
static inline void FLEXIO_Enable(FLEXIO_Type *base, bool enable)
```

Enables the FlexIO module operation.

Parameters

- base – FlexIO peripheral base address
- enable – true to enable, false to disable.

```
static inline uint32_t FLEXIO_ReadPinInput(FLEXIO_Type *base)
```

Reads the input data on each of the FlexIO pins.

Parameters

- base – FlexIO peripheral base address

Returns

FlexIO pin input data

```
static inline uint8_t FLEXIO_GetShifterState(FLEXIO_Type *base)
```

Gets the current state pointer for state mode use.

Parameters

- base – FlexIO peripheral base address

Returns

current State pointer

```
void FLEXIO_SetShifterConfig(FLEXIO_Type *base, uint8_t index, const flexio_shifter_config_t *shifterConfig)
```

Configures the shifter with the shifter configuration. The configuration structure covers both the SHIFTCTL and SHIFTCFG registers. To configure the shifter to the proper mode, select which timer controls the shifter to shift, whether to generate start bit/stop bit, and the polarity of start bit and stop bit.

Example

```
flexio_shifter_config_t config = {
    .timerSelect = 0,
    .timerPolarity = kFLEXIO_ShifterTimerPolarityOnPositive,
    .pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
```

(continues on next page)

(continued from previous page)

```
.pinPolarity = kFLEXIO_PinActiveLow,
.shifterMode = kFLEXIO_ShifterModeTransmit,
.inputSource = kFLEXIO_ShifterInputFromPin,
.shifterStop = kFLEXIO_ShifterStopBitHigh,
.shifterStart = kFLEXIO_ShifterStartBitLow
};
FLEXIO_SetShifterConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Shifter index
- shifterConfig – Pointer to flexio_shifter_config_t structure

```
void FLEXIO_SetTimerConfig(FLEXIO_Type *base, uint8_t index, const flexio_timer_config_t
                          *timerConfig)
```

Configures the timer with the timer configuration. The configuration structure covers both the TIMCTL and TIMCFG registers. To configure the timer to the proper mode, select trigger source for timer and the timer pin output and the timing for timer.

Example

```
flexio_timer_config_t config = {
.triggerSelect = FLEXIO_TIMER_TRIGGER_SEL_SHIFThnSTAT(0),
.triggerPolarity = kFLEXIO_TimerTriggerPolarityActiveLow,
.triggerSource = kFLEXIO_TimerTriggerSourceInternal,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinSelect = 0,
.pinPolarity = kFLEXIO_PinActiveHigh,
.timerMode = kFLEXIO_TimerModeDual8BitBaudBit,
.timerOutput = kFLEXIO_TimerOutputZeroNotAffectedByReset,
.timerDecrement = kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput,
.timerReset = kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput,
.timerDisable = kFLEXIO_TimerDisableOnTimerCompare,
.timerEnable = kFLEXIO_TimerEnableOnTriggerHigh,
.timerStop = kFLEXIO_TimerStopBitEnableOnTimerDisable,
.timerStart = kFLEXIO_TimerStartBitEnabled
};
FLEXIO_SetTimerConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Timer index
- timerConfig – Pointer to the flexio_timer_config_t structure

```
static inline void FLEXIO_SetClockMode(FLEXIO_Type *base, uint8_t index,
                                       flexio_timer_decrement_source_t clocksource)
```

This function set the value of the prescaler on flexio channels.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- index – Timer index
- clocksource – Set clock value

```
static inline void FLEXIO_EnableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Enables the shifter status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline void FLEXIO_DisableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Disables the shifter status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline void FLEXIO_EnableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Enables the shifter error interrupt. The interrupt generates when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline void FLEXIO_DisableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Disables the shifter error interrupt. The interrupt won't generate when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

static inline void FLEXIO_EnableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
Enables the timer status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

static inline void FLEXIO_DisableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
Disables the timer status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

static inline uint32_t FLEXIO_GetShifterStatusFlags(FLEXIO_Type *base)
Gets the shifter status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter status flags

static inline void FLEXIO_ClearShifterStatusFlags(FLEXIO_Type *base, uint32_t mask)
Clears the shifter status flags.

Note: For clearing multiple shifter status flags, for example, two shifter status flags, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

static inline uint32_t FLEXIO_GetShifterErrorFlags(FLEXIO_Type *base)
Gets the shifter error flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter error flags

static inline void FLEXIO_ClearShifterErrorFlags(FLEXIO_Type *base, uint32_t mask)

Clears the shifter error flags.

Note: For clearing multiple shifter error flags, for example, two shifter error flags, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

static inline uint32_t FLEXIO_GetTimerStatusFlags(FLEXIO_Type *base)

Gets the timer status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Timer status flags

static inline void FLEXIO_ClearTimerStatusFlags(FLEXIO_Type *base, uint32_t mask)

Clears the timer status flags.

Note: For clearing multiple timer status flags, for example, two timer status flags, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

static inline void FLEXIO_EnableShifterStatusDMA(FLEXIO_Type *base, uint32_t mask, bool enable)

Enables/disables the shifter status DMA. The DMA request generates when the corresponding SSF is set.

Note: For multiple shifter status DMA enables, for example, calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$
- enable – True to enable, false to disable.

uint32_t FLEXIO_GetShifterBufferAddress(FLEXIO_Type *base, flexio_shifter_buffer_type_t type, uint8_t index)

Gets the shifter buffer address for the DMA transfer usage.

Parameters

- base – FlexIO peripheral base address
- type – Shifter type of flexio_shifter_buffer_type_t

- index – Shifter index

Returns

Corresponding shifter buffer index

`status_t FLEXIO_RegisterHandleIRQ(void *base, void *handle, flexio_isr_t isr)`

Registers the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- handle – Pointer to the handler for FlexIO simulated peripheral.
- isr – FlexIO simulated peripheral interrupt handler.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`status_t FLEXIO_UnregisterHandleIRQ(void *base)`

Unregisters the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`static inline void FLEXIO_ClearPortOutput(FLEXIO_Type *base, uint32_t mask)`

Sets the output level of the multiple FLEXIO pins to the logic 0.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

`static inline void FLEXIO_SetPortOutput(FLEXIO_Type *base, uint32_t mask)`

Sets the output level of the multiple FLEXIO pins to the logic 1.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

`static inline void FLEXIO_TogglePortOutput(FLEXIO_Type *base, uint32_t mask)`

Reverses the current output logic of the multiple FLEXIO pins.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

`static inline void FLEXIO_PinWrite(FLEXIO_Type *base, uint32_t pin, uint8_t output)`

Sets the output level of the FLEXIO pins to the logic 1 or 0.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.
- output – FLEXIO pin output logic level.

- 0: corresponding pin output low-logic level.
- 1: corresponding pin output high-logic level.

static inline void FLEXIO_EnablePinOutput(FLEXIO_Type *base, uint32_t pin)

Enables the FLEXIO output pin function.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

static inline uint32_t FLEXIO_PinRead(FLEXIO_Type *base, uint32_t pin)

Reads the current input value of the FLEXIO pin.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

static inline uint32_t FLEXIO_GetPinStatus(FLEXIO_Type *base, uint32_t pin)

Gets the FLEXIO input pin status.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input status

- 0: corresponding pin input capture no status.
- 1: corresponding pin input capture rising or falling edge.

static inline void FLEXIO_SetPinLevel(FLEXIO_Type *base, uint8_t pin, bool level)

Sets the FLEXIO output pin level.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.
- level – FlexIO output pin level to set, can be either 0 or 1.

static inline bool FLEXIO_GetPinOverride(const FLEXIO_Type *const base, uint8_t pin)

Gets the enabled status of a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.

Return values

FlexIO – port enabled status

- 0: corresponding output pin is in disabled state.
- 1: corresponding output pin is in enabled state.

static inline void FLEXIO_ConfigPinOverride(FLEXIO_Type *base, uint8_t pin, bool enabled)
Enables or disables a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – Flexio pin number.
- enabled – Enable or disable the FlexIO pin.

static inline void FLEXIO_ClearPortStatus(FLEXIO_Type *base, uint32_t mask)
Clears the multiple FLEXIO input pins status.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

FSL_FLEXIO_DRIVER_VERSION
FlexIO driver version.

enum _flexio_timer_trigger_polarity
Define time of timer trigger polarity.

Values:

enumerator kFLEXIO_TimerTriggerPolarityActiveHigh
Active high.

enumerator kFLEXIO_TimerTriggerPolarityActiveLow
Active low.

enum _flexio_timer_trigger_source
Define type of timer trigger source.

Values:

enumerator kFLEXIO_TimerTriggerSourceExternal
External trigger selected.

enumerator kFLEXIO_TimerTriggerSourceInternal
Internal trigger selected.

enum _flexio_pin_config
Define type of timer/shifter pin configuration.

Values:

enumerator kFLEXIO_PinConfigOutputDisabled
Pin output disabled.

enumerator kFLEXIO_PinConfigOpenDrainOrBidirection
Pin open drain or bidirectional output enable.

enumerator kFLEXIO_PinConfigBidirectionOutputData
Pin bidirectional output data.

enumerator kFLEXIO_PinConfigOutput
Pin output.

enum _flexio_pin_polarity
Definition of pin polarity.

Values:

enumerator kFLEXIO_PinActiveHigh
Active high.

enumerator kFLEXIO_PinActiveLow
Active low.

enum _flexio_timer_mode
Define type of timer work mode.

Values:

enumerator kFLEXIO_TimerModeDisabled
Timer Disabled.

enumerator kFLEXIO_TimerModeDual8BitBaudBit
Dual 8-bit counters baud/bit mode.

enumerator kFLEXIO_TimerModeDual8BitPWM
Dual 8-bit counters PWM mode.

enumerator kFLEXIO_TimerModeSingle16Bit
Single 16-bit counter mode.

enumerator kFLEXIO_TimerModeDual8BitPWMLow
Dual 8-bit counters PWM Low mode.

enum _flexio_timer_output
Define type of timer initial output or timer reset condition.

Values:

enumerator kFLEXIO_TimerOutputOneNotAffectedByReset
Logic one when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputZeroNotAffectedByReset
Logic zero when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputOneAffectedByReset
Logic one when enabled and on timer reset.

enumerator kFLEXIO_TimerOutputZeroAffectedByReset
Logic zero when enabled and on timer reset.

enum _flexio_timer_decrement_source
Define type of timer decrement.

Values:

enumerator kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput
Decrement counter on FlexIO clock, Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTimerOutput
Decrement counter on Trigger input (both edges), Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnPinInputShiftPinInput
Decrement counter on Pin input (both edges), Shift clock equals Pin input.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTriggerInput
Decrement counter on Trigger input (both edges), Shift clock equals Trigger input.

enum _flexio_timer_reset_condition
Define type of timer reset condition.

Values:

enumerator kFLEXIO_TimerResetNever

Timer never reset.

enumerator kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput

Timer reset on Timer Pin equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerTriggerEqualToTimerOutput

Timer reset on Timer Trigger equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerPinRisingEdge

Timer reset on Timer Pin rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerRisingEdge

Timer reset on Trigger rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerBothEdge

Timer reset on Trigger rising or falling edge.

enum _flexio_timer_disable_condition

Define type of timer disable condition.

Values:

enumerator kFLEXIO_TimerDisableNever

Timer never disabled.

enumerator kFLEXIO_TimerDisableOnPreTimerDisable

Timer disabled on Timer N-1 disable.

enumerator kFLEXIO_TimerDisableOnTimerCompare

Timer disabled on Timer compare.

enumerator kFLEXIO_TimerDisableOnTimerCompareTriggerLow

Timer disabled on Timer compare and Trigger Low.

enumerator kFLEXIO_TimerDisableOnPinBothEdge

Timer disabled on Pin rising or falling edge.

enumerator kFLEXIO_TimerDisableOnPinBothEdgeTriggerHigh

Timer disabled on Pin rising or falling edge provided Trigger is high.

enumerator kFLEXIO_TimerDisableOnTriggerFallingEdge

Timer disabled on Trigger falling edge.

enum _flexio_timer_enable_condition

Define type of timer enable condition.

Values:

enumerator kFLEXIO_TimerEnabledAlways

Timer always enabled.

enumerator kFLEXIO_TimerEnableOnPrevTimerEnable

Timer enabled on Timer N-1 enable.

enumerator kFLEXIO_TimerEnableOnTriggerHigh

Timer enabled on Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerHighPinHigh

Timer enabled on Trigger high and Pin high.

enumerator kFLEXIO_TimerEnableOnPinRisingEdge

Timer enabled on Pin rising edge.

enumerator kFLEXIO_TimerEnableOnPinRisingEdgeTriggerHigh
Timer enabled on Pin rising edge and Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerRisingEdge
Timer enabled on Trigger rising edge.

enumerator kFLEXIO_TimerEnableOnTriggerBothEdge
Timer enabled on Trigger rising or falling edge.

enum _flexio_timer_stop_bit_condition
Define type of timer stop bit generate condition.

Values:

enumerator kFLEXIO_TimerStopBitDisabled
Stop bit disabled.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompare
Stop bit is enabled on timer compare.

enumerator kFLEXIO_TimerStopBitEnableOnTimerDisable
Stop bit is enabled on timer disable.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompareDisable
Stop bit is enabled on timer compare and timer disable.

enum _flexio_timer_start_bit_condition
Define type of timer start bit generate condition.

Values:

enumerator kFLEXIO_TimerStartBitDisabled
Start bit disabled.

enumerator kFLEXIO_TimerStartBitEnabled
Start bit enabled.

enum _flexio_timer_output_state
FlexIO as PWM channel output state.

Values:

enumerator kFLEXIO_PwmLow
The output state of PWM channel is low

enumerator kFLEXIO_PwmHigh
The output state of PWM channel is high

enum _flexio_shifter_timer_polarity
Define type of timer polarity for shifter control.

Values:

enumerator kFLEXIO_ShifterTimerPolarityOnPositive
Shift on positive edge of shift clock.

enumerator kFLEXIO_ShifterTimerPolarityOnNegative
Shift on negative edge of shift clock.

enum _flexio_shifter_mode
Define type of shifter working mode.

Values:

enumerator kFLEXIO__ShifterDisabled

Shifter is disabled.

enumerator kFLEXIO__ShifterModeReceive

Receive mode.

enumerator kFLEXIO__ShifterModeTransmit

Transmit mode.

enumerator kFLEXIO__ShifterModeMatchStore

Match store mode.

enumerator kFLEXIO__ShifterModeMatchContinuous

Match continuous mode.

enumerator kFLEXIO__ShifterModeState

SHIFTBUF contents are used for storing programmable state attributes.

enumerator kFLEXIO__ShifterModeLogic

SHIFTBUF contents are used for implementing programmable logic look up table.

enum _flexio_shifter_input_source

Define type of shifter input source.

Values:

enumerator kFLEXIO__ShifterInputFromPin

Shifter input from pin.

enumerator kFLEXIO__ShifterInputFromNextShifterOutput

Shifter input from Shifter N+1.

enum _flexio_shifter_stop_bit

Define of STOP bit configuration.

Values:

enumerator kFLEXIO__ShifterStopBitDisable

Disable shifter stop bit.

enumerator kFLEXIO__ShifterStopBitLow

Set shifter stop bit to logic low level.

enumerator kFLEXIO__ShifterStopBitHigh

Set shifter stop bit to logic high level.

enum _flexio_shifter_start_bit

Define type of START bit configuration.

Values:

enumerator kFLEXIO__ShifterStartBitDisabledLoadDataOnEnable

Disable shifter start bit, transmitter loads data on enable.

enumerator kFLEXIO__ShifterStartBitDisabledLoadDataOnShift

Disable shifter start bit, transmitter loads data on first shift.

enumerator kFLEXIO__ShifterStartBitLow

Set shifter start bit to logic low level.

enumerator kFLEXIO__ShifterStartBitHigh

Set shifter start bit to logic high level.

enum `_flexio_shifter_buffer_type`

Define FlexIO shifter buffer type.

Values:

enumerator `kFLEXIO_ShifterBuffer`

Shifter Buffer N Register.

enumerator `kFLEXIO_ShifterBufferBitSwapped`

Shifter Buffer N Bit Byte Swapped Register.

enumerator `kFLEXIO_ShifterBufferByteSwapped`

Shifter Buffer N Byte Swapped Register.

enumerator `kFLEXIO_ShifterBufferBitByteSwapped`

Shifter Buffer N Bit Swapped Register.

enumerator `kFLEXIO_ShifterBufferNibbleByteSwapped`

Shifter Buffer N Nibble Byte Swapped Register.

enumerator `kFLEXIO_ShifterBufferHalfWordSwapped`

Shifter Buffer N Half Word Swapped Register.

enumerator `kFLEXIO_ShifterBufferNibbleSwapped`

Shifter Buffer N Nibble Swapped Register.

enum `_flexio_gpio_direction`

FLEXIO gpio direction definition.

Values:

enumerator `kFLEXIO_DigitalInput`

Set current pin as digital input

enumerator `kFLEXIO_DigitalOutput`

Set current pin as digital output

enum `_flexio_pin_input_config`

FLEXIO gpio input config.

Values:

enumerator `kFLEXIO_InputInterruptDisabled`

Interrupt request is disabled.

enumerator `kFLEXIO_InputInterruptEnable`

Interrupt request is enable.

enumerator `kFLEXIO_FlagRisingEdgeEnable`

Input pin flag on rising edge.

enumerator `kFLEXIO_FlagFallingEdgeEnable`

Input pin flag on falling edge.

typedef enum `_flexio_timer_trigger_polarity` `flexio_timer_trigger_polarity_t`

Define time of timer trigger polarity.

typedef enum `_flexio_timer_trigger_source` `flexio_timer_trigger_source_t`

Define type of timer trigger source.

typedef enum `_flexio_pin_config` `flexio_pin_config_t`

Define type of timer/shifter pin configuration.

typedef enum *_flexio_pin_polarity* flexio_pin_polarity_t

Definition of pin polarity.

typedef enum *_flexio_timer_mode* flexio_timer_mode_t

Define type of timer work mode.

typedef enum *_flexio_timer_output* flexio_timer_output_t

Define type of timer initial output or timer reset condition.

typedef enum *_flexio_timer_decrement_source* flexio_timer_decrement_source_t

Define type of timer decrement.

typedef enum *_flexio_timer_reset_condition* flexio_timer_reset_condition_t

Define type of timer reset condition.

typedef enum *_flexio_timer_disable_condition* flexio_timer_disable_condition_t

Define type of timer disable condition.

typedef enum *_flexio_timer_enable_condition* flexio_timer_enable_condition_t

Define type of timer enable condition.

typedef enum *_flexio_timer_stop_bit_condition* flexio_timer_stop_bit_condition_t

Define type of timer stop bit generate condition.

typedef enum *_flexio_timer_start_bit_condition* flexio_timer_start_bit_condition_t

Define type of timer start bit generate condition.

typedef enum *_flexio_timer_output_state* flexio_timer_output_state_t

FlexIO as PWM channel output state.

typedef enum *_flexio_shifter_timer_polarity* flexio_shifter_timer_polarity_t

Define type of timer polarity for shifter control.

typedef enum *_flexio_shifter_mode* flexio_shifter_mode_t

Define type of shifter working mode.

typedef enum *_flexio_shifter_input_source* flexio_shifter_input_source_t

Define type of shifter input source.

typedef enum *_flexio_shifter_stop_bit* flexio_shifter_stop_bit_t

Define of STOP bit configuration.

typedef enum *_flexio_shifter_start_bit* flexio_shifter_start_bit_t

Define type of START bit configuration.

typedef enum *_flexio_shifter_buffer_type* flexio_shifter_buffer_type_t

Define FlexIO shifter buffer type.

typedef struct *_flexio_config* flexio_config_t

Define FlexIO user configuration structure.

typedef struct *_flexio_timer_config* flexio_timer_config_t

Define FlexIO timer configuration structure.

typedef struct *_flexio_shifter_config* flexio_shifter_config_t

Define FlexIO shifter configuration structure.

typedef enum *_flexio_gpio_direction* flexio_gpio_direction_t

FLEXIO gpio direction definition.

typedef enum *_flexio_pin_input_config* flexio_pin_input_config_t

FLEXIO gpio input config.

```
typedef struct flexio_gpio_config flexio_gpio_config_t
```

The FLEXIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use `inputConfig` param. If configured as an output pin, use `outputLogic`.

```
typedef void (*flexio_isr_t)(void *base, void *handle)
```

typedef for FlexIO simulated driver interrupt handler.

```
FLEXIO_Type *const s_flexioBases[]
```

Pointers to flexio bases for each instance.

```
const clock_ip_name_t s_flexioClocks[]
```

Pointers to flexio clocks for each instance.

```
void FLEXIO_SetPinConfig(FLEXIO_Type *base, uint32_t pin, flexio_gpio_config_t *config)
```

Configure a FLEXIO pin used by the board.

To Config the FLEXIO PIN, define a pin configuration, as either input or output, in the user file. Then, call the `FLEXIO_SetPinConfig()` function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
flexio_gpio_config_t config =
{
    kFLEXIO_DigitalInput,
    0U,
    kFLEXIO_FlagRisingEdgeEnable | kFLEXIO_InputInterruptEnable,
}
Define a digital output pin configuration,
flexio_gpio_config_t config =
{
    kFLEXIO_DigitalOutput,
    0U,
    0U
}
```

Parameters

- `base` – FlexIO peripheral base address
- `pin` – FLEXIO pin number.
- `config` – FLEXIO pin configuration pointer.

```
FLEXIO_TIMER_TRIGGER_SEL_PININPUT(x)
```

Calculate FlexIO timer trigger.

```
FLEXIO_TIMER_TRIGGER_SEL_SHIFTnSTAT(x)
```

```
FLEXIO_TIMER_TRIGGER_SEL_TIMn(x)
```

```
struct flexio_config
```

`#include <fsl_flexio.h>` Define FlexIO user configuration structure.

Public Members

```
bool enableFlexio
```

Enable/disable FlexIO module

`bool enableInDoze`
Enable/disable FlexIO operation in doze mode

`bool enableInDebug`
Enable/disable FlexIO operation in debug mode

`bool enableFastAccess`
Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

`struct _flexio_timer_config`
#include <fsl_flexio.h> Define FlexIO timer configuration structure.

Public Members

`uint32_t triggerSelect`
The internal trigger selection number using MACROs.

`flexio_timer_trigger_polarity_t triggerPolarity`
Trigger Polarity.

`flexio_timer_trigger_source_t triggerSource`
Trigger Source, internal (see 'trgsel') or external.

`flexio_pin_config_t pinConfig`
Timer Pin Configuration.

`uint32_t pinSelect`
Timer Pin number Select.

`flexio_pin_polarity_t pinPolarity`
Timer Pin Polarity.

`flexio_timer_mode_t timerMode`
Timer work Mode.

`flexio_timer_output_t timerOutput`
Configures the initial state of the Timer Output and whether it is affected by the Timer reset.

`flexio_timer_decrement_source_t timerDecrement`
Configures the source of the Timer decrement and the source of the Shift clock.

`flexio_timer_reset_condition_t timerReset`
Configures the condition that causes the timer counter (and optionally the timer output) to be reset.

`flexio_timer_disable_condition_t timerDisable`
Configures the condition that causes the Timer to be disabled and stop decrementing.

`flexio_timer_enable_condition_t timerEnable`
Configures the condition that causes the Timer to be enabled and start decrementing.

`flexio_timer_stop_bit_condition_t timerStop`
Timer STOP Bit generation.

`flexio_timer_start_bit_condition_t timerStart`
Timer STRAT Bit generation.

`uint32_t timerCompare`
Value for Timer Compare N Register.

```
struct _flexio_shifter_config
    #include <fsl_flexio.h> Define FlexIO shifter configuration structure.
```

Public Members

```
uint32_t timerSelect
    Selects which Timer is used for controlling the logic/shift register and generating the
    Shift clock.

flexio_shifter_timer_polarity_t timerPolarity
    Timer Polarity.

flexio_pin_config_t pinConfig
    Shifter Pin Configuration.

uint32_t pinSelect
    Shifter Pin number Select.

flexio_pin_polarity_t pinPolarity
    Shifter Pin Polarity.

flexio_shifter_mode_t shifterMode
    Configures the mode of the Shifter.

uint32_t parallelWidth
    Configures the parallel width when using parallel mode.

flexio_shifter_input_source_t inputSource
    Selects the input source for the shifter.

flexio_shifter_stop_bit_t shifterStop
    Shifter STOP bit.

flexio_shifter_start_bit_t shifterStart
    Shifter START bit.
```

```
struct _flexio_gpio_config
    #include <fsl_flexio.h> The FLEXIO pin configuration structure.
```

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use inputConfig param. If configured as an output pin, use outputLogic.

Public Members

```
flexio_gpio_direction_t pinDirection
    FLEXIO pin direction, input or output

uint8_t outputLogic
    Set a default output logic, which has no use in input

uint8_t inputConfig
    Set an input config
```

2.21 FlexIO eDMA I2S Driver

```
void FLEXIO_I2S_TransferTxCreateHandleEDMA(FLEXIO_I2S_Type *base,  
                                           flexio_i2s_edma_handle_t *handle,  
                                           flexio_i2s_edma_callback_t callback, void  
                                           *userData, edma_handle_t *dmaHandle)
```

Initializes the FlexIO I2S eDMA handle.

This function initializes the FlexIO I2S master DMA handle which can be used for other FlexIO I2S master transactional APIs. Usually, for a specified FlexIO I2S instance, call this API once to get the initialized handle.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S eDMA handle pointer.
- callback – FlexIO I2S eDMA callback function called while finished a block.
- userData – User parameter for callback.
- dmaHandle – eDMA handle for FlexIO I2S. This handle is a static value allocated by users.

```
void FLEXIO_I2S_TransferRxCreateHandleEDMA(FLEXIO_I2S_Type *base,  
                                           flexio_i2s_edma_handle_t *handle,  
                                           flexio_i2s_edma_callback_t callback, void  
                                           *userData, edma_handle_t *dmaHandle)
```

Initializes the FlexIO I2S Rx eDMA handle.

This function initializes the FlexIO I2S slave DMA handle which can be used for other FlexIO I2S master transactional APIs. Usually, for a specified FlexIO I2S instance, call this API once to get the initialized handle.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S eDMA handle pointer.
- callback – FlexIO I2S eDMA callback function called while finished a block.
- userData – User parameter for callback.
- dmaHandle – eDMA handle for FlexIO I2S. This handle is a static value allocated by users.

```
void FLEXIO_I2S_TransferSetFormatEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t  
                                       *handle, flexio_i2s_format_t *format, uint32_t  
                                       srcClock_Hz)
```

Configures the FlexIO I2S Tx audio format.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred. This function also sets the eDMA parameter according to format.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S eDMA handle pointer
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – FlexIO I2S clock source frequency in Hz, it should be 0 while in slave mode.

```
status_t FLEXIO_I2S_TransferSendEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t
                                     *handle, flexio_i2s_transfer_t *xfer)
```

Performs a non-blocking FlexIO I2S transfer using DMA.

Note: This interface returned immediately after transfer initiates. Users should call FLEXIO_I2S_GetTransferStatus to poll the transfer status and check whether the FlexIO I2S transfer is finished.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a FlexIO I2S eDMA send successfully.
- kStatus_InvalidArgument – The input arguments is invalid.
- kStatus_TxBusy – FlexIO I2S is busy sending data.

```
status_t FLEXIO_I2S_TransferReceiveEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t
                                         *handle, flexio_i2s_transfer_t *xfer)
```

Performs a non-blocking FlexIO I2S receive using eDMA.

Note: This interface returned immediately after transfer initiates. Users should call FLEXIO_I2S_GetReceiveRemainingBytes to poll the transfer status and check whether the FlexIO I2S transfer is finished.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a FlexIO I2S eDMA receive successfully.
- kStatus_InvalidArgument – The input arguments is invalid.
- kStatus_RxBusy – FlexIO I2S is busy receiving data.

```
void FLEXIO_I2S_TransferAbortSendEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t
                                       *handle)
```

Aborts a FlexIO I2S transfer using eDMA.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.

```
void FLEXIO_I2S_TransferAbortReceiveEDMA(FLEXIO_I2S_Type *base,
                                          flexio_i2s_edma_handle_t *handle)
```

Aborts a FlexIO I2S receive using eDMA.

Parameters

- base – FlexIO I2S peripheral base address.

- handle – FlexIO I2S DMA handle pointer.

status_t FLEXIO_I2S_TransferGetSendCountEDMA(*FLEXIO_I2S_Type* *base,
flexio_i2s_edma_handle_t *handle, size_t
*count)

Gets the remaining bytes to be sent.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- count – Bytes sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

status_t FLEXIO_I2S_TransferGetReceiveCountEDMA(*FLEXIO_I2S_Type* *base,
flexio_i2s_edma_handle_t *handle, size_t
*count)

Get the remaining bytes to be received.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- count – Bytes received.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

FSL_FLEXIO_I2S_EDMA_DRIVER_VERSION

FlexIO I2S EDMA driver version 2.1.9.

typedef struct flexio_i2s_edma_handle flexio_i2s_edma_handle_t

typedef void (*flexio_i2s_edma_callback_t)(*FLEXIO_I2S_Type* *base, flexio_i2s_edma_handle_t
*handle, *status_t* status, void *userData)

FlexIO I2S eDMA transfer callback function for finish and error.

struct flexio_i2s_edma_handle

#include <fsl_flexio_i2s_edma.h> FlexIO I2S DMA transfer handle, users should not touch the
content of the handle.

Public Members

edma_handle_t *dmaHandle

DMA handler for FlexIO I2S send

uint8_t bytesPerFrame

Bytes in a frame

uint8_t nbytes

eDMA minor byte transfer count initially configured.

`uint32_t state`
 Internal state for FlexIO I2S eDMA transfer

`flexio_i2s_edma_callback_t callback`
 Callback for users while transfer finish or error occurred

`void *userData`
 User callback parameter

`edma_tcd_t tcd[(4U) + 1U]`
 TCD pool for eDMA transfer.

`flexio_i2s_transfer_t queue[(4U)]`
 Transfer queue storing queued transfer.

`size_t transferSize[(4U)]`
 Data bytes need to transfer

`volatile uint8_t queueUser`
 Index for user to queue transfer.

`volatile uint8_t queueDriver`
 Index for driver to get the transfer data and size

2.22 FlexIO eDMA SPI Driver

`status_t FLEXIO_SPI_MasterTransferCreateHandleEDMA(FLEXIO_SPI_Type *base, flexio_spi_master_edma_handle_t *handle, flexio_spi_master_edma_transfer_callback_t callback, void *userData, edma_handle_t *txHandle, edma_handle_t *rxHandle)`

Initializes the FlexIO SPI master eDMA handle.

This function initializes the FlexIO SPI master eDMA handle which can be used for other FlexIO SPI master transactional APIs. For a specified FlexIO SPI instance, call this API once to get the initialized handle.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to `flexio_spi_master_edma_handle_t` structure to store the transfer state.
- `callback` – SPI callback, NULL means no callback.
- `userData` – callback function parameter.
- `txHandle` – User requested eDMA handle for FlexIO SPI RX eDMA transfer.
- `rxHandle` – User requested eDMA handle for FlexIO SPI TX eDMA transfer.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO SPI eDMA type/handle table out of range.

```
status_t FLEXIO_SPI_MasterTransferEDMA(FLEXIO_SPI_Type *base,  
                                       flexio_spi_master_edma_handle_t *handle,  
                                       flexio_spi_transfer_t *xfer)
```

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_MasterGetTransferCountEDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_edma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

```
void FLEXIO_SPI_MasterTransferAbortEDMA(FLEXIO_SPI_Type *base,  
                                         flexio_spi_master_edma_handle_t *handle)
```

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.

```
status_t FLEXIO_SPI_MasterTransferGetCountEDMA(FLEXIO_SPI_Type *base,  
                                               flexio_spi_master_edma_handle_t *handle,  
                                               size_t *count)
```

Gets the number of bytes transferred so far using FlexIO SPI master eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

```
static inline void FLEXIO_SPI_SlaveTransferCreateHandleEDMA(FLEXIO_SPI_Type *base,  
                                                           flexio_spi_slave_edma_handle_t  
                                                           *handle,  
                                                           flexio_spi_slave_edma_transfer_callback_t  
                                                           callback, void *userData,  
                                                           edma_handle_t *txHandle,  
                                                           edma_handle_t *rxHandle)
```

Initializes the FlexIO SPI slave eDMA handle.

This function initializes the FlexIO SPI slave eDMA handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.

- `handle` – Pointer to `flexio_spi_slave_edma_handle_t` structure to store the transfer state.
- `callback` – SPI callback, NULL means no callback.
- `userData` – callback function parameter.
- `txHandle` – User requested eDMA handle for FlexIO SPI TX eDMA transfer.
- `rxHandle` – User requested eDMA handle for FlexIO SPI RX eDMA transfer.

```
status_t FLEXIO_SPI_SlaveTransferEDMA(FLEXIO_SPI_Type *base,
                                     flexio_spi_slave_edma_handle_t *handle,
                                     flexio_spi_transfer_t *xfer)
```

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call `FLEXIO_SPI_SlaveGetTransferCountEDMA` to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to `flexio_spi_slave_edma_handle_t` structure to store the transfer state.
- `xfer` – Pointer to FlexIO SPI transfer structure.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – FlexIO SPI is not idle, is running another transfer.

```
static inline void FLEXIO_SPI_SlaveTransferAbortEDMA(FLEXIO_SPI_Type *base,
                                                    flexio_spi_slave_edma_handle_t
                                                    *handle)
```

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to `flexio_spi_slave_edma_handle_t` structure to store the transfer state.

```
static inline status_t FLEXIO_SPI_SlaveTransferGetCountEDMA(FLEXIO_SPI_Type *base,
                                                           flexio_spi_slave_edma_handle_t
                                                           *handle, size_t *count)
```

Gets the number of bytes transferred so far using FlexIO SPI slave eDMA.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – FlexIO SPI eDMA handle pointer.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

```
FSL_FLEXIO_SPI_EDMA_DRIVER_VERSION
```

FlexIO SPI EDMA driver version.

```
typedef struct flexio_spi_master_edma_handle flexio_spi_master_edma_handle_t
    typedef for flexio_spi_master_edma_handle_t in advance.
```

```
typedef flexio_spi_master_edma_handle_t flexio_spi_slave_edma_handle_t
    Slave handle is the same with master handle.
```

```
typedef void (*flexio_spi_master_edma_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_master_edma_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI master callback for finished transmit.

```
typedef void (*flexio_spi_slave_edma_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_slave_edma_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI slave callback for finished transmit.

```
struct flexio_spi_master_edma_handle
```

```
#include <fsl_flexio_spi_edma.h> FlexIO SPI eDMA transfer handle, users should not touch
the content of the handle.
```

Public Members

```
size_t transferSize
```

Total bytes to be transferred.

```
uint8_t nbytes
```

eDMA minor byte transfer count initially configured.

```
bool txInProgress
```

Send transfer in progress

```
bool rxInProgress
```

Receive transfer in progress

```
edma_handle_t *txHandle
```

DMA handler for SPI send

```
edma_handle_t *rxHandle
```

DMA handler for SPI receive

```
flexio_spi_master_edma_transfer_callback_t callback
```

Callback for SPI DMA transfer

```
void *userData
```

User Data for SPI DMA callback

2.23 FlexIO eDMA UART Driver

```
status_t FLEXIO_UART_TransferCreateHandleEDMA(FLEXIO_UART_Type *base,
flexio_uart_edma_handle_t *handle,
flexio_uart_edma_transfer_callback_t
callback, void *userData, edma_handle_t
*txEdmaHandle, edma_handle_t
*rxEdmaHandle)
```

Initializes the UART handle which is used in transactional functions.

Parameters

- base – Pointer to `FLEXIO_UART_Type`.
- handle – Pointer to `flexio_uart_edma_handle_t` structure.

- callback – The callback function.
- userData – The parameter of the callback function.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO SPI eDMA type/handle table out of range.

```
status_t FLEXIO_UART_TransferSendEDMA(FLEXIO_UART_Type *base,
                                       flexio_uart_edma_handle_t *handle,
                                       flexio_uart_transfer_t *xfer)
```

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent out, the send callback function is called.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – UART handle pointer.
- xfer – UART eDMA transfer structure, see *flexio_uart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXIO_UART_TxBusy – Previous transfer on going.

```
status_t FLEXIO_UART_TransferReceiveEDMA(FLEXIO_UART_Type *base,
                                          flexio_uart_edma_handle_t *handle,
                                          flexio_uart_transfer_t *xfer)
```

Receives data using eDMA.

This function receives data using eDMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure
- xfer – UART eDMA transfer structure, see *flexio_uart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_UART_RxBusy – Previous transfer on going.

```
void FLEXIO_UART_TransferAbortSendEDMA(FLEXIO_UART_Type *base,
                                       flexio_uart_edma_handle_t *handle)
```

Aborts the sent data which using eDMA.

This function aborts sent data which using eDMA.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure

```
void FLEXIO_UART_TransferAbortReceiveEDMA(FLEXIO_UART_Type *base,  
                                           flexio_uart_edma_handle_t *handle)
```

Aborts the receive data which using eDMA.

This function aborts the receive data which using eDMA.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure

```
status_t FLEXIO_UART_TransferGetSendCountEDMA(FLEXIO_UART_Type *base,  
                                              flexio_uart_edma_handle_t *handle,  
                                              size_t *count)
```

Gets the number of bytes sent out.

This function gets the number of bytes sent out.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
status_t FLEXIO_UART_TransferGetReceiveCountEDMA(FLEXIO_UART_Type *base,  
                                                flexio_uart_edma_handle_t *handle,  
                                                size_t *count)
```

Gets the number of bytes received.

This function gets the number of bytes received.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
FSL_FLEXIO_UART_EDMA_DRIVER_VERSION
```

FlexIO UART EDMA driver version.

```
typedef struct flexio_uart_edma_handle flexio_uart_edma_handle_t
```

```
typedef void (*flexio_uart_edma_transfer_callback_t)(FLEXIO_UART_Type *base,  
flexio_uart_edma_handle_t *handle, status_t status, void *userData)
```

UART transfer callback function.

```
struct flexio_uart_edma_handle
```

```
#include <fsl_flexio_uart_edma.h> UART eDMA handle.
```

Public Members

flexio_uart_edma_transfer_callback_t callback

Callback function.

*void *userData*

UART callback function parameter.

size_t txDataSizeAll

Total bytes to be sent.

size_t rxDataSizeAll

Total bytes to be received.

*edma_handle_t *txEdmaHandle*

The eDMA TX channel used.

*edma_handle_t *rxEdmaHandle*

The eDMA RX channel used.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

2.24 FlexIO I2C Master Driver

status_t FLEXIO_I2C_CheckForBusyBus(*FLEXIO_I2C_Type *base*)

Make sure the bus isn't already pulled down.

Check the FLEXIO pin status to see whether either of SDA and SCL pin is pulled down.

Parameters

- *base* – Pointer to *FLEXIO_I2C_Type* structure..

Return values

- *kStatus_Success* –
- *kStatus_FLEXIO_I2C_Busy* –

status_t FLEXIO_I2C_MasterInit(*FLEXIO_I2C_Type *base*, *flexio_i2c_master_config_t *masterConfig*, *uint32_t srcClock_Hz*)

Ungates the FlexIO clock, resets the FlexIO module, and configures the FlexIO I2C hardware configuration.

Example

```

FLEXIO_I2C_Type base = {
    .flexioBase = FLEXIO,
    .SDAPinIndex = 0,
    .SCLPinIndex = 1,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_i2c_master_config_t config = {
    .enableInDoze = false,

```

(continues on next page)

(continued from previous page)

```
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 100000
};
FLEXIO_I2C_MasterInit(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- masterConfig – Pointer to flexio_i2c_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Initialization successful
- kStatus_InvalidArgument – The source clock exceed upper range limitation

```
void FLEXIO_I2C_MasterDeinit(FLEXIO_I2C_Type *base)
```

De-initializes the FlexIO I2C master peripheral. Calling this API Resets the FlexIO I2C master shifer and timer config, module can't work unless the FLEXIO_I2C_MasterInit is called.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.

```
void FLEXIO_I2C_MasterGetDefaultConfig(flexio_i2c_master_config_t *masterConfig)
```

Gets the default configuration to configure the FlexIO module. The configuration can be used directly for calling the FLEXIO_I2C_MasterInit().

Example:

```
flexio_i2c_master_config_t config;
FLEXIO_I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – Pointer to flexio_i2c_master_config_t structure.

```
static inline void FLEXIO_I2C_MasterEnable(FLEXIO_I2C_Type *base, bool enable)
```

Enables/disables the FlexIO module operation.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – Pass true to enable module, false does not have any effect.

```
uint32_t FLEXIO_I2C_MasterGetStatusFlags(FLEXIO_I2C_Type *base)
```

Gets the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure

Returns

Status flag, use status flag to AND `_flexio_i2c_master_status_flags` can get the related status.

```
void FLEXIO_I2C_MasterClearStatusFlags(FLEXIO_I2C_Type *base, uint32_t mask)
```

Clears the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

- mask – Status flag. The parameter can be any combination of the following values:
 - kFLEXIO_I2C_RxFullFlag
 - kFLEXIO_I2C_ReceiveNakFlag

void FLEXIO_I2C_MasterEnableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Enables the FlexIO i2c master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source. Currently only one interrupt request source:
 - kFLEXIO_I2C_TransferCompleteInterruptEnable

void FLEXIO_I2C_MasterDisableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Disables the FlexIO I2C master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source.

void FLEXIO_I2C_MasterSetBaudRate(*FLEXIO_I2C_Type* *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the FlexIO I2C master transfer baudrate.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- baudRate_Bps – the baud rate value in HZ
- srcClock_Hz – source clock in HZ

void FLEXIO_I2C_MasterStart(*FLEXIO_I2C_Type* *base, uint8_t address, *flexio_i2c_direction_t* direction)

Sends START + 7-bit address to the bus.

Note: This API should be called when the transfer configuration is ready to send a START signal and 7-bit address to the bus. This is a non-blocking API, which returns directly after the address is put into the data register but the address transfer is not finished on the bus. Ensure that the kFLEXIO_I2C_RxFullFlag status is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- address – 7-bit address.
- direction – transfer direction. This parameter is one of the values in *flexio_i2c_direction_t*:
 - kFLEXIO_I2C_Write: Transmit
 - kFLEXIO_I2C_Read: Receive

void FLEXIO_I2C_MasterStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterRepeatedStart(*FLEXIO_I2C_Type* *base)

Sends the repeated start signal on the bus.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.

void FLEXIO_I2C_MasterAbortStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal when transfer is still on-going.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.

void FLEXIO_I2C_MasterEnableAck(*FLEXIO_I2C_Type* *base, bool enable)

Configures the sent ACK/NAK for the following byte.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.
- enable – True to configure send ACK, false configure to send NAK.

status_t FLEXIO_I2C_MasterSetTransferCount(*FLEXIO_I2C_Type* *base, *uint16_t* count)

Sets the number of bytes to be transferred from a start signal to a stop signal.

Note: Call this API before a transfer begins because the timer generates a number of clocks according to the number of bytes that need to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.
- count – Number of bytes need to be transferred from a start signal to a re-start/stop signal

Return values

- *kStatus_Success* – Successfully configured the count.
- *kStatus_InvalidArgument* – Input argument is invalid.

static inline void FLEXIO_I2C_MasterWriteByte(*FLEXIO_I2C_Type* *base, *uint32_t* data)

Writes one byte of data to the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the *TxEEmptyFlag* is asserted before calling this API.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.
- data – a byte of data.

static inline *uint8_t* FLEXIO_I2C_MasterReadByte(*FLEXIO_I2C_Type* *base)

Reads one byte of data from the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the data is ready in the register.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

Returns

data byte read.

status_t FLEXIO_I2C_MasterWriteBlocking(*FLEXIO_I2C_Type* *base, const uint8_t *txBuff, uint8_t txSize)

Sends a buffer of data in bytes.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- txBuff – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Nak – Receive NAK during writing data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterReadBlocking(*FLEXIO_I2C_Type* *base, uint8_t *rxBuff, uint8_t rxSize)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- rxBuff – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterTransferBlocking(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_transfer_t* *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to receiving NAK.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.
- xfer – pointer to flexio_i2c_master_transfer_t structure.

Returns

status of status_t.

```
status_t FLEXIO_I2C_MasterTransferCreateHandle(FLEXIO_I2C_Type *base,  
                                              flexio_i2c_master_handle_t *handle,  
                                              flexio_i2c_master_transfer_callback_t  
                                              callback, void *userData)
```

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure to store the transfer state.
- callback – Pointer to user callback function.
- userData – User param passed to the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/isr table out of range.

```
status_t FLEXIO_I2C_MasterTransferNonBlocking(FLEXIO_I2C_Type *base,  
                                              flexio_i2c_master_handle_t *handle,  
                                              flexio_i2c_master_transfer_t *xfer)
```

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: The API returns immediately after the transfer initiates. Call FLEXIO_I2C_MasterTransferGetCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_FLEXIO_I2C_Busy, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state
- xfer – pointer to flexio_i2c_master_transfer_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_FLEXIO_I2C_Busy – FlexIO I2C is not idle, is running another transfer.

```
status_t FLEXIO_I2C_MasterTransferGetCount(FLEXIO_I2C_Type *base,  
                                           flexio_i2c_master_handle_t *handle, size_t  
                                           *count)
```

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.

- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.
- `kStatus_Success` – Successfully return the count.

```
void FLEXIO_I2C_MasterTransferAbort(FLEXIO_I2C_Type *base, flexio_i2c_master_handle_t *handle)
```

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- `base` – Pointer to `FLEXIO_I2C_Type` structure
- `handle` – Pointer to `flexio_i2c_master_handle_t` structure which stores the transfer state

```
void FLEXIO_I2C_MasterTransferHandleIRQ(void *i2cType, void *i2cHandle)
```

Master interrupt handler.

Parameters

- `i2cType` – Pointer to `FLEXIO_I2C_Type` structure
- `i2cHandle` – Pointer to `flexio_i2c_master_transfer_t` structure

```
FSL_FLEXIO_I2C_MASTER_DRIVER_VERSION
```

FlexIO I2C transfer status.

Values:

```
enumerator kStatus_FLEXIO_I2C_Busy
```

I2C is busy doing transfer.

```
enumerator kStatus_FLEXIO_I2C_Idle
```

I2C is busy doing transfer.

```
enumerator kStatus_FLEXIO_I2C_Nak
```

NAK received during transfer.

```
enumerator kStatus_FLEXIO_I2C_Timeout
```

Timeout polling status flags.

```
enum _flexio_i2c_master_interrupt
```

Define FlexIO I2C master interrupt mask.

Values:

```
enumerator kFLEXIO_I2C_TxEmptyInterruptEnable
```

Tx buffer empty interrupt enable.

```
enumerator kFLEXIO_I2C_RxFullInterruptEnable
```

Rx buffer full interrupt enable.

```
enum _flexio_i2c_master_status_flags
```

Define FlexIO I2C master status mask.

Values:

enumerator kFLEXIO_I2C_TxEmptyFlag

Tx shifter empty flag.

enumerator kFLEXIO_I2C_RxFullFlag

Rx shifter full/Transfer complete flag.

enumerator kFLEXIO_I2C_ReceiveNakFlag

Receive NAK flag.

enum *_flexio_i2c_direction*

Direction of master transfer.

Values:

enumerator kFLEXIO_I2C_Write

Master send to slave.

enumerator kFLEXIO_I2C_Read

Master receive from slave.

typedef enum *_flexio_i2c_direction* flexio_i2c_direction_t

Direction of master transfer.

typedef struct *_flexio_i2c_type* FLEXIO_I2C_Type

Define FlexIO I2C master access structure typedef.

typedef struct *_flexio_i2c_master_config* flexio_i2c_master_config_t

Define FlexIO I2C master user configuration structure.

typedef struct *_flexio_i2c_master_transfer* flexio_i2c_master_transfer_t

Define FlexIO I2C master transfer structure.

typedef struct *_flexio_i2c_master_handle* flexio_i2c_master_handle_t

FlexIO I2C master handle typedef.

typedef void (*flexio_i2c_master_transfer_callback_t)(FLEXIO_I2C_Type *base, flexio_i2c_master_handle_t *handle, status_t status, void *userData)

FlexIO I2C master transfer callback typedef.

I2C_RETRY_TIMES

Retry times for waiting flag.

struct *_flexio_i2c_type*

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master access structure typedef.

Public Members

FLEXIO_Type *flexioBase

FlexIO base pointer.

uint8_t SDAPinIndex

Pin select for I2C SDA.

uint8_t SCLPinIndex

Pin select for I2C SCL.

uint8_t shifterIndex[2]

Shifter index used in FlexIO I2C.

uint8_t timerIndex[3]

Timer index used in FlexIO I2C.

uint32_t baudrate

Master transfer baudrate, used to calculate delay time.

struct _flexio_i2c_master_config

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master user configuration structure.

Public Members

bool enableMaster

Enables the FlexIO I2C peripheral at initialization time.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

struct _flexio_i2c_master_transfer

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master transfer structure.

Public Members

uint32_t flags

Transfer flag which controls the transfer, reserved for FlexIO I2C.

uint8_t slaveAddress

7-bit slave address.

flexio_i2c_direction_t direction

Transfer direction, read or write.

uint32_t subaddress

Sub address. Transferred MSB first.

uint8_t subaddressSize

Size of sub address.

uint8_t volatile *data

Transfer buffer.

volatile size_t dataSize

Transfer size.

struct _flexio_i2c_master_handle

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master handle structure.

Public Members

flexio_i2c_master_transfer_t transfer

FlexIO I2C master transfer copy.

size_t transferSize

Total bytes to be transferred.

uint8_t state

Transfer state maintained during transfer.

flexio_i2c_master_transfer_callback_t completionCallback

Callback function called at transfer event. Callback function called at transfer event.

void *userData

Callback parameter passed to callback function.

bool needRestart

Whether master needs to send re-start signal.

2.25 FlexIO I2S Driver

void FLEXIO_I2S_Init(*FLEXIO_I2S_Type* *base, const *flexio_i2s_config_t* *config)

Initializes the FlexIO I2S.

This API configures FlexIO pins and shifter to I2S and configures the FlexIO I2S with a configuration structure. The configuration structure can be filled by the user, or be set with default values by FLEXIO_I2S_GetDefaultConfig().

Note: This API should be called at the beginning of the application to use the FlexIO I2S driver. Otherwise, any access to the FlexIO I2S module can cause hard fault because the clock is not enabled.

Parameters

- base – FlexIO I2S base pointer
- config – FlexIO I2S configure structure.

void FLEXIO_I2S_GetDefaultConfig(*flexio_i2s_config_t* *config)

Sets the FlexIO I2S configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in FLEXIO_I2S_Init(). Users may use the initialized structure unchanged in FLEXIO_I2S_Init() or modify some fields of the structure before calling FLEXIO_I2S_Init().

Parameters

- config – pointer to master configuration structure

void FLEXIO_I2S_Deinit(*FLEXIO_I2S_Type* *base)

De-initializes the FlexIO I2S.

Calling this API resets the FlexIO I2S shifter and timer config. After calling this API, call the FLEXIO_I2S_Init to use the FlexIO I2S module.

Parameters

- base – FlexIO I2S base pointer

static inline void FLEXIO_I2S_Enable(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S module operation.

Parameters

- base – Pointer to FLEXIO_I2S_Type

- enable – True to enable, false dose not have any effect.

```
uint32_t FLEXIO_I2S_GetStatusFlags(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S status flags.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

Status flag, which are ORed by the enumerators in the *_flexio_i2s_status_flags*.

```
void FLEXIO_I2S_EnableInterrupts(FLEXIO_I2S_Type *base, uint32_t mask)
```

Enables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- mask – interrupt source

```
void FLEXIO_I2S_DisableInterrupts(FLEXIO_I2S_Type *base, uint32_t mask)
```

Disables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – pointer to *FLEXIO_I2S_Type* structure
- mask – interrupt source

```
static inline void FLEXIO_I2S_TxEnableDMA(FLEXIO_I2S_Type *base, bool enable)
```

Enables/disables the FlexIO I2S Tx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

```
static inline void FLEXIO_I2S_RxEnableDMA(FLEXIO_I2S_Type *base, bool enable)
```

Enables/disables the FlexIO I2S Rx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

```
static inline uint32_t FLEXIO_I2S_TxGetDataRegisterAddress(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S send data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

FlexIO i2s send data register address.

```
static inline uint32_t FLEXIO_I2S_RxGetDataRegisterAddress(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S receive data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

FlexIO I2S receive data register address.

```
void FLEXIO_I2S_MasterSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_format_t *format,
                                uint32_t srcClock_Hz)
```

Configures the FlexIO I2S audio format in master mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – I2S master clock source frequency in Hz.

```
void FLEXIO_I2S_SlaveSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_format_t *format)
```

Configures the FlexIO I2S audio format in slave mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- format – Pointer to FlexIO I2S audio data format structure.

```
status_t FLEXIO_I2S_WriteBlocking(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint8_t *txData,
                                   size_t size)
```

Sends data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- txData – Pointer to the data to be written.
- size – Bytes to be written.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

```
static inline void FLEXIO_I2S_WriteData(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint32_t
                                         data)
```

Writes data into a data register.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- data – Data to be written.

```
status_t FLEXIO_I2S_ReadBlocking(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint8_t *rxData,
                                size_t size)
```

Receives a piece of data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- rxData – Pointer to the data to be read.
- size – Bytes to be read.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

```
static inline uint32_t FLEXIO_I2S_ReadData(FLEXIO_I2S_Type *base)
```

Reads a data from the data register.

Parameters

- base – FlexIO I2S base pointer

Returns

Data read from data register.

```
void FLEXIO_I2S_TransferTxCreateHandle(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,
                                       flexio_i2s_callback_t callback, void *userData)
```

Initializes the FlexIO I2S handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- handle – Pointer to flexio_i2s_handle_t structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

```
void FLEXIO_I2S_TransferSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,
                                  flexio_i2s_format_t *format, uint32_t srcClock_Hz)
```

Configures the FlexIO I2S audio format.

Audio format can be changed at run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – FlexIO I2S handle pointer.
- format – Pointer to audio data format structure.
- srcClock_Hz – FlexIO I2S bit clock source frequency in Hz. This parameter should be 0 while in slave mode.

```
void FLEXIO_I2S_TransferRxCreateHandle(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,  
                                       flexio_i2s_callback_t callback, void *userData)
```

Initializes the FlexIO I2S receive handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure.
- handle – Pointer to *flexio_i2s_handle_t* structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

```
status_t FLEXIO_I2S_TransferSendNonBlocking(FLEXIO_I2S_Type *base, flexio_i2s_handle_t  
                                             *handle, flexio_i2s_transfer_t *xfer)
```

Performs an interrupt non-blocking send transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call *FLEXIO_I2S_GetRemainingBytes* to poll the transfer status and check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure.
- handle – Pointer to *flexio_i2s_handle_t* structure which stores the transfer state
- xfer – Pointer to *flexio_i2s_transfer_t* structure

Return values

- *kStatus_Success* – Successfully start the data transmission.
- *kStatus_FLEXIO_I2S_TxBusy* – Previous transmission still not finished, data not all written to TX register yet.
- *kStatus_InvalidArgument* – The input parameter is invalid.

```
status_t FLEXIO_I2S_TransferReceiveNonBlocking(FLEXIO_I2S_Type *base, flexio_i2s_handle_t  
                                               *handle, flexio_i2s_transfer_t *xfer)
```

Performs an interrupt non-blocking receive transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call *FLEXIO_I2S_GetRemainingBytes* to poll the transfer status to check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure.
- handle – Pointer to *flexio_i2s_handle_t* structure which stores the transfer state
- xfer – Pointer to *flexio_i2s_transfer_t* structure

Return values

- *kStatus_Success* – Successfully start the data receive.

- `kStatus_FLEXIO_I2S_RxBusy` – Previous receive still not finished.
- `kStatus_InvalidArgument` – The input parameter is invalid.

`void FLEXIO_I2S_TransferAbortSend(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle)`

Aborts the current send.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure.
- `handle` – Pointer to `flexio_i2s_handle_t` structure which stores the transfer state

`void FLEXIO_I2S_TransferAbortReceive(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle)`

Aborts the current receive.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure.
- `handle` – Pointer to `flexio_i2s_handle_t` structure which stores the transfer state

`status_t FLEXIO_I2S_TransferGetSendCount(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle, size_t *count)`

Gets the remaining bytes to be sent.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure.
- `handle` – Pointer to `flexio_i2s_handle_t` structure which stores the transfer state
- `count` – Bytes sent.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`status_t FLEXIO_I2S_TransferGetReceiveCount(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle, size_t *count)`

Gets the remaining bytes to be received.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure.
- `handle` – Pointer to `flexio_i2s_handle_t` structure which stores the transfer state
- `count` – Bytes recieved.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

Returns

count Bytes received.

void FLEXIO_I2S_TransferTxHandleIRQ(void *i2sBase, void *i2sHandle)

Tx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure

void FLEXIO_I2S_TransferRxHandleIRQ(void *i2sBase, void *i2sHandle)

Rx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure.

FSL_FLEXIO_I2S_DRIVER_VERSION

FlexIO I2S driver version 2.2.2.

FlexIO I2S transfer status.

Values:

enumerator kStatus_FLEXIO_I2S_Idle

FlexIO I2S is in idle state

enumerator kStatus_FLEXIO_I2S_TxBusy

FlexIO I2S Tx is busy

enumerator kStatus_FLEXIO_I2S_RxBusy

FlexIO I2S Rx is busy

enumerator kStatus_FLEXIO_I2S_Error

FlexIO I2S error occurred

enumerator kStatus_FLEXIO_I2S_QueueFull

FlexIO I2S transfer queue is full.

enumerator kStatus_FLEXIO_I2S_Timeout

FlexIO I2S timeout polling status flags.

enum _flexio_i2s_master_slave

Master or slave mode.

Values:

enumerator kFLEXIO_I2S_Master

Master mode

enumerator kFLEXIO_I2S_Slave

Slave mode

_flexio_i2s_interrupt_enable Define FlexIO FlexIO I2S interrupt mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_I2S_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

`_flexio_i2s_status_flags` Define FlexIO FlexIO I2S status mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_I2S_RxDataRegFullFlag
Receive buffer full flag.

enum `_flexio_i2s_sample_rate`
Audio sample rate.

Values:

enumerator kFLEXIO_I2S_SampleRate8KHz
Sample rate 8000Hz

enumerator kFLEXIO_I2S_SampleRate11025Hz
Sample rate 11025Hz

enumerator kFLEXIO_I2S_SampleRate12KHz
Sample rate 12000Hz

enumerator kFLEXIO_I2S_SampleRate16KHz
Sample rate 16000Hz

enumerator kFLEXIO_I2S_SampleRate22050Hz
Sample rate 22050Hz

enumerator kFLEXIO_I2S_SampleRate24KHz
Sample rate 24000Hz

enumerator kFLEXIO_I2S_SampleRate32KHz
Sample rate 32000Hz

enumerator kFLEXIO_I2S_SampleRate44100Hz
Sample rate 44100Hz

enumerator kFLEXIO_I2S_SampleRate48KHz
Sample rate 48000Hz

enumerator kFLEXIO_I2S_SampleRate96KHz
Sample rate 96000Hz

enum `_flexio_i2s_word_width`
Audio word width.

Values:

enumerator kFLEXIO_I2S_WordWidth8bits
Audio data width 8 bits

enumerator kFLEXIO_I2S_WordWidth16bits
Audio data width 16 bits

```
enumerator kFLEXIO_I2S_WordWidth24bits
    Audio data width 24 bits
enumerator kFLEXIO_I2S_WordWidth32bits
    Audio data width 32 bits
typedef struct _flexio_i2s_type FLEXIO_I2S_Type
    Define FlexIO I2S access structure typedef.
typedef enum _flexio_i2s_master_slave flexio_i2s_master_slave_t
    Master or slave mode.
typedef struct _flexio_i2s_config flexio_i2s_config_t
    FlexIO I2S configure structure.
typedef struct _flexio_i2s_format flexio_i2s_format_t
    FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.
typedef enum _flexio_i2s_sample_rate flexio_i2s_sample_rate_t
    Audio sample rate.
typedef enum _flexio_i2s_word_width flexio_i2s_word_width_t
    Audio word width.
typedef struct _flexio_i2s_transfer flexio_i2s_transfer_t
    Define FlexIO I2S transfer structure.
typedef struct _flexio_i2s_handle flexio_i2s_handle_t
typedef void (*flexio_i2s_callback_t)(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,
status_t status, void *userData)
    FlexIO I2S xfer callback prototype.
I2S_RETRY_TIMES
    Retry times for waiting flag.
FLEXIO_I2S_XFER_QUEUE_SIZE
    FlexIO I2S transfer queue size, user can refine it according to use case.
struct _flexio_i2s_type
    #include <fsl_flexio_i2s.h> Define FlexIO I2S access structure typedef.
```

Public Members

```
FLEXIO_Type *flexioBase
    FlexIO base pointer
uint8_t txPinIndex
    Tx data pin index in FlexIO pins
uint8_t rxPinIndex
    Rx data pin index
uint8_t bclkPinIndex
    Bit clock pin index
uint8_t fsPinIndex
    Frame sync pin index
uint8_t txShifterIndex
    Tx data shifter index
```

uint8_t rxShifterIndex
Rx data shifter index

uint8_t bclkTimerIndex
Bit clock timer index

uint8_t fsTimerIndex
Frame sync timer index

struct _flexio_i2s_config
#include <fsl_flexio_i2s.h> FlexIO I2S configure structure.

Public Members

bool enableI2S
Enable FlexIO I2S

flexio_i2s_master_slave_t masterSlave
Master or slave

flexio_pin_polarity_t txPinPolarity
Tx data pin polarity, active high or low

flexio_pin_polarity_t rxPinPolarity
Rx data pin polarity

flexio_pin_polarity_t bclkPinPolarity
Bit clock pin polarity

flexio_pin_polarity_t fsPinPolarity
Frame sync pin polarity

flexio_shifter_timer_polarity_t txTimerPolarity
Tx data valid on bclk rising or falling edge

flexio_shifter_timer_polarity_t rxTimerPolarity
Rx data valid on bclk rising or falling edge

struct _flexio_i2s_format
#include <fsl_flexio_i2s.h> FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

Public Members

uint8_t bitWidth
Bit width of audio data, always 8/16/24/32 bits

uint32_t sampleRate_Hz
Sample rate of the audio data

struct _flexio_i2s_transfer
#include <fsl_flexio_i2s.h> Define FlexIO I2S transfer structure.

Public Members

uint8_t *data
Data buffer start pointer

size_t dataSize
Bytes to be transferred.

struct flexio_i2s_handle
#include <fsl_flexio_i2s.h> Define FlexIO I2S handle structure.

Public Members

uint32_t state
Internal state

flexio_i2s_callback_t callback
Callback function called at transfer event

void *userData
Callback parameter passed to callback function

uint8_t bitWidth
Bit width for transfer, 8/16/24/32bits

flexio_i2s_transfer_t queue[(4U)]
Transfer queue storing queued transfer

size_t transferSize[(4U)]
Data bytes need to transfer

volatile uint8_t queueUser
Index for user to queue transfer

volatile uint8_t queueDriver
Index for driver to get the transfer data and size

2.26 FlexIO SPI Driver

void FLEXIO_SPI_MasterInit(*FLEXIO_SPI_Type* *base, *flexio_spi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI master hardware, and configures the FlexIO SPI with FlexIO SPI master configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_MasterGetDefaultConfig().

Example

```
FLEXIO_SPI_Type spiDev = {
    .flexioBase = FLEXIO,
    .SDOPinIndex = 0,
    .SDIPinIndex = 1,
    .SCKPinIndex = 2,
    .CSnPinIndex = 3,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_spi_master_config_t config = {
    .enableMaster = true,
    .enableInDoze = false,
    .enableInDebug = true,
```

(continues on next page)

(continued from previous page)

```
.enableFastAccess = false,
.baudRate_Bps = 500000,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_MasterInit(&spiDev, &config, srcClock_Hz);
```

Note: 1.FlexIO SPI master only support CPOL = 0, which means clock inactive low. 2.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI master communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by $2*2=4$. If FlexIO SPI master communicates with FlexIO SPI slave, the maximum baud rate is FlexIO clock frequency divided by $(1.5+2.5)*2=8$.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- masterConfig – Pointer to the flexio_spi_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

```
void FLEXIO_SPI_MasterDeinit(FLEXIO_SPI_Type *base)
```

Resets the FlexIO SPI timer and shifter config.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

```
void FLEXIO_SPI_MasterGetDefaultConfig(flexio_spi_master_config_t *masterConfig)
```

Gets the default configuration to configure the FlexIO SPI master. The configuration can be used directly by calling the FLEXIO_SPI_MasterConfigure(). Example:

```
flexio_spi_master_config_t masterConfig;
FLEXIO_SPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – Pointer to the flexio_spi_master_config_t structure.

```
void FLEXIO_SPI_SlaveInit(FLEXIO_SPI_Type *base, flexio_spi_slave_config_t *slaveConfig)
```

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI slave hardware configuration, and configures the FlexIO SPI with FlexIO SPI slave configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_SlaveGetDefaultConfig().

Note: 1.Only one timer is needed in the FlexIO SPI slave. As a result, the second timer index is ignored. 2.FlexIO SPI slave only support CPOL = 0, which means clock inactive low. 3.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI slave communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by $3*2=6$. If FlexIO SPI slave communicates with FlexIO SPI master, the maximum baud rate is FlexIO clock frequency divided by $(1.5+2.5)*2=8$. Example

```
FLEXIO_SPI_Type spiDev = {
.flexioBase = FLEXIO,
.SDOPinIndex = 0,
```

(continues on next page)

(continued from previous page)

```
.SDIPinIndex = 1,
.SCKPinIndex = 2,
.CSnPinIndex = 3,
.shifterIndex = {0,1},
.timerIndex = {0}
};
flexio_spi_slave_config_t config = {
.enableSlave = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_SlaveInit(&spiDev, &config);
```

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

```
void FLEXIO_SPI_SlaveDeinit(FLEXIO_SPI_Type *base)
```

Gates the FlexIO clock.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

```
void FLEXIO_SPI_SlaveGetDefaultConfig(flexio_spi_slave_config_t *slaveConfig)
```

Gets the default configuration to configure the FlexIO SPI slave. The configuration can be used directly for calling the FLEXIO_SPI_SlaveConfigure(). Example:

```
flexio_spi_slave_config_t slaveConfig;
FLEXIO_SPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

```
uint32_t FLEXIO_SPI_GetStatusFlags(FLEXIO_SPI_Type *base)
```

Gets FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

Returns

status flag; Use the status flag to AND the following flag mask and get the status.

- kFLEXIO_SPI_TxEmptyFlag
- kFLEXIO_SPI_RxEmptyFlag

```
void FLEXIO_SPI_ClearStatusFlags(FLEXIO_SPI_Type *base, uint32_t mask)
```

Clears FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

- mask – status flag The parameter can be any combination of the following values:
 - kFLEXIO_SPI_TxEmptyFlag
 - kFLEXIO_SPI_RxEmptyFlag

```
void FLEXIO_SPI_EnableInterrupts(FLEXIO_SPI_Type *base, uint32_t mask)
```

Enables the FlexIO SPI interrupt.

This function enables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- mask – interrupt source. The parameter can be any combination of the following values:
 - kFLEXIO_SPI_RxFullInterruptEnable
 - kFLEXIO_SPI_TxEmptyInterruptEnable

```
void FLEXIO_SPI_DisableInterrupts(FLEXIO_SPI_Type *base, uint32_t mask)
```

Disables the FlexIO SPI interrupt.

This function disables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- mask – interrupt source The parameter can be any combination of the following values:
 - kFLEXIO_SPI_RxFullInterruptEnable
 - kFLEXIO_SPI_TxEmptyInterruptEnable

```
void FLEXIO_SPI_EnableDMA(FLEXIO_SPI_Type *base, uint32_t mask, bool enable)
```

Enables/disables the FlexIO SPI transmit DMA. This function enables/disables the FlexIO SPI Tx DMA, which means that asserting the kFLEXIO_SPI_TxEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- mask – SPI DMA source.
- enable – True means enable DMA, false means disable DMA.

```
static inline uint32_t FLEXIO_SPI_GetTxDataRegisterAddress(FLEXIO_SPI_Type *base,  
                                                         flexio_spi_shift_direction_t  
                                                         direction)
```

Gets the FlexIO SPI transmit data register address for MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.

Returns

FlexIO SPI transmit data register address.

```
static inline uint32_t FLEXIO_SPI_GetRxDataRegisterAddress(FLEXIO_SPI_Type *base,  
                                                         flexio_spi_shift_direction_t  
                                                         direction)
```

Gets the FlexIO SPI receive data register address for the MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.

Returns

FlexIO SPI receive data register address.

```
static inline void FLEXIO_SPI_Enable(FLEXIO_SPI_Type *base, bool enable)
```

Enables/disables the FlexIO SPI module operation.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type*.
- enable – True to enable, false does not have any effect.

```
void FLEXIO_SPI_MasterSetBaudRate(FLEXIO_SPI_Type *base, uint32_t baudRate_Bps,  
                                  uint32_t srcClockHz)
```

Sets baud rate for the FlexIO SPI transfer, which is only used for the master.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- baudRate_Bps – Baud Rate needed in Hz.
- srcClockHz – SPI source clock frequency in Hz.

```
static inline void FLEXIO_SPI_WriteData(FLEXIO_SPI_Type *base, flexio_spi_shift_direction_t  
                                       direction, uint32_t data)
```

Writes one byte of data, which is sent using the MSB method.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.
- data – 8/16/32 bit data.

```
static inline uint32_t FLEXIO_SPI_ReadData(FLEXIO_SPI_Type *base,  
                                           flexio_spi_shift_direction_t direction)
```

Reads 8 bit/16 bit data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.

- direction – Shift direction of MSB first or LSB first.

Returns

8 bit/16 bit data received.

status_t FLEXIO_SPI_WriteBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, const uint8_t *buffer, size_t size)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The data bytes to send.
- size – The number of data bytes to send.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_ReadBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, uint8_t *buffer, size_t size)

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The buffer to store the received bytes.
- size – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_MasterTransferBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_transfer_t* *xfer)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – pointer to FLEXIO_SPI_Type structure
- xfer – FlexIO SPI transfer structure, see flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully create the handle.

- `kStatus_FLEXIO_SPI_Timeout` – The transfer timed out and was aborted.

`void FLEXIO_SPI_FlushShifters(FLEXIO_SPI_Type *base)`

Flush tx/rx shifters.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.

`status_t FLEXIO_SPI_MasterTransferCreateHandle(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle,
flexio_spi_master_transfer_callback_t
callback, void *userData)`

Initializes the FlexIO SPI Master handle, which is used in transactional functions.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_master_handle_t` structure to store the transfer state.
- `callback` – The callback function.
- `userData` – The parameter of the callback function.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`status_t FLEXIO_SPI_MasterTransferNonBlocking(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle,
flexio_spi_transfer_t *xfer)`

Master transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_master_handle_t` structure to store the transfer state.
- `xfer` – FlexIO SPI transfer structure. See `flexio_spi_transfer_t`.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – SPI is not idle, is running another transfer.

`void FLEXIO_SPI_MasterTransferAbort(FLEXIO_SPI_Type *base, flexio_spi_master_handle_t
*handle)`

Aborts the master data transfer, which used IRQ.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_master_handle_t` structure to store the transfer state.

```
status_t FLEXIO_SPI_MasterTransferGetCount(FLEXIO_SPI_Type *base,
                                           flexio_spi_master_handle_t *handle, size_t
                                           *count)
```

Gets the data transfer status which used IRQ.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- handle – Pointer to the *flexio_spi_master_handle_t* structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- *kStatus_InvalidArgument* – count is Invalid.
- *kStatus_Success* – Successfully return the count.

```
void FLEXIO_SPI_MasterTransferHandleIRQ(void *spiType, void *spiHandle)
```

FlexIO SPI master IRQ handler function.

Parameters

- spiType – Pointer to the *FLEXIO_SPI_Type* structure.
- spiHandle – Pointer to the *flexio_spi_master_handle_t* structure to store the transfer state.

```
status_t FLEXIO_SPI_SlaveTransferCreateHandle(FLEXIO_SPI_Type *base,
                                              flexio_spi_slave_handle_t *handle,
                                              flexio_spi_slave_transfer_callback_t callback,
                                              void *userData)
```

Initializes the FlexIO SPI Slave handle, which is used in transactional functions.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- handle – Pointer to the *flexio_spi_slave_handle_t* structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- *kStatus_Success* – Successfully create the handle.
- *kStatus_OutOfRange* – The FlexIO type/handle/ISR table out of range.

```
status_t FLEXIO_SPI_SlaveTransferNonBlocking(FLEXIO_SPI_Type *base,
                                             flexio_spi_slave_handle_t *handle,
                                             flexio_spi_transfer_t *xfer)
```

Slave transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- handle – Pointer to the *flexio_spi_slave_handle_t* structure to store the transfer state.
- base – Pointer to the *FLEXIO_SPI_Type* structure.
- xfer – FlexIO SPI transfer structure. See *flexio_spi_transfer_t*.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – SPI is not idle; it is running another transfer.

```
static inline void FLEXIO_SPI_SlaveTransferAbort(FLEXIO_SPI_Type *base,  
                                               flexio_spi_slave_handle_t *handle)
```

Aborts the slave data transfer which used IRQ, share same API with master.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.

```
static inline status_t FLEXIO_SPI_SlaveTransferGetCount(FLEXIO_SPI_Type *base,  
                                                    flexio_spi_slave_handle_t *handle,  
                                                    size_t *count)
```

Gets the data transfer status which used IRQ, share same API with master.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – `count` is Invalid.
- `kStatus_Success` – Successfully return the count.

```
void FLEXIO_SPI_SlaveTransferHandleIRQ(void *spiType, void *spiHandle)
```

FlexIO SPI slave IRQ handler function.

Parameters

- `spiType` – Pointer to the `FLEXIO_SPI_Type` structure.
- `spiHandle` – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.

```
FSL_FLEXIO_SPI_DRIVER_VERSION
```

FlexIO SPI driver version.

Error codes for the FlexIO SPI driver.

Values:

```
enumerator kStatus_FLEXIO_SPI_Busy  
FlexIO SPI is busy.
```

```
enumerator kStatus_FLEXIO_SPI_Idle  
SPI is idle
```

```
enumerator kStatus_FLEXIO_SPI_Error  
FlexIO SPI error.
```

```
enumerator kStatus_FLEXIO_SPI_Timeout  
FlexIO SPI timeout polling status flags.
```

enum `_flexio_spi_clock_phase`

FlexIO SPI clock phase configuration.

Values:

enumerator `kFLEXIO_SPI_ClockPhaseFirstEdge`

First edge on SPSCCK occurs at the middle of the first cycle of a data transfer.

enumerator `kFLEXIO_SPI_ClockPhaseSecondEdge`

First edge on SPSCCK occurs at the start of the first cycle of a data transfer.

enum `_flexio_spi_shift_direction`

FlexIO SPI data shifter direction options.

Values:

enumerator `kFLEXIO_SPI_MsbFirst`

Data transfers start with most significant bit.

enumerator `kFLEXIO_SPI_LsbFirst`

Data transfers start with least significant bit.

enum `_flexio_spi_data_bitcount_mode`

FlexIO SPI data length mode options.

Values:

enumerator `kFLEXIO_SPI_8BitMode`

8-bit data transmission mode.

enumerator `kFLEXIO_SPI_16BitMode`

16-bit data transmission mode.

enumerator `kFLEXIO_SPI_32BitMode`

32-bit data transmission mode.

enum `_flexio_spi_interrupt_enable`

Define FlexIO SPI interrupt mask.

Values:

enumerator `kFLEXIO_SPI_TxEmptyInterruptEnable`

Transmit buffer empty interrupt enable.

enumerator `kFLEXIO_SPI_RxFullInterruptEnable`

Receive buffer full interrupt enable.

enum `_flexio_spi_status_flags`

Define FlexIO SPI status mask.

Values:

enumerator `kFLEXIO_SPI_TxBufferEmptyFlag`

Transmit buffer empty flag.

enumerator `kFLEXIO_SPI_RxBufferFullFlag`

Receive buffer full flag.

enum `_flexio_spi_dma_enable`

Define FlexIO SPI DMA mask.

Values:

enumerator `kFLEXIO_SPI_TxDmaEnable`

Tx DMA request source

enumerator kFLEXIO_SPI_RxDmaEnable
Rx DMA request source

enumerator kFLEXIO_SPI_DmaAllEnable
All DMA request source

enum *flexio_spi_transfer_flags*
Define FlexIO SPI transfer flags.

Note: Use kFLEXIO_SPI_csContinuous and one of the other flags to OR together to form the transfer flag.

Values:

enumerator kFLEXIO_SPI_8bitMsb
FlexIO SPI 8-bit MSB first

enumerator kFLEXIO_SPI_8bitLsb
FlexIO SPI 8-bit LSB first

enumerator kFLEXIO_SPI_16bitMsb
FlexIO SPI 16-bit MSB first

enumerator kFLEXIO_SPI_16bitLsb
FlexIO SPI 16-bit LSB first

enumerator kFLEXIO_SPI_32bitMsb
FlexIO SPI 32-bit MSB first

enumerator kFLEXIO_SPI_32bitLsb
FlexIO SPI 32-bit LSB first

enumerator kFLEXIO_SPI_csContinuous
Enable the CS signal continuous mode

typedef enum *flexio_spi_clock_phase* flexio_spi_clock_phase_t
FlexIO SPI clock phase configuration.

typedef enum *flexio_spi_shift_direction* flexio_spi_shift_direction_t
FlexIO SPI data shifter direction options.

typedef enum *flexio_spi_data_bitcount_mode* flexio_spi_data_bitcount_mode_t
FlexIO SPI data length mode options.

typedef struct *flexio_spi_type* FLEXIO_SPI_Type
Define FlexIO SPI access structure typedef.

typedef struct *flexio_spi_master_config* flexio_spi_master_config_t
Define FlexIO SPI master configuration structure.

typedef struct *flexio_spi_slave_config* flexio_spi_slave_config_t
Define FlexIO SPI slave configuration structure.

typedef struct *flexio_spi_transfer* flexio_spi_transfer_t
Define FlexIO SPI transfer structure.

typedef struct *flexio_spi_master_handle* flexio_spi_master_handle_t
typedef for flexio_spi_master_handle_t in advance.

typedef *flexio_spi_master_handle_t* flexio_spi_slave_handle_t
Slave handle is the same with master handle.

```
typedef void (*flexio_spi_master_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI master callback for finished transmit.

```
typedef void (*flexio_spi_slave_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_slave_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI slave callback for finished transmit.

```
FLEXIO_SPI_DUMMYDATA
```

FlexIO SPI dummy transfer data, the data is sent while txData is NULL.

```
SPI_RETRY_TIMES
```

Retry times for waiting flag.

```
FLEXIO_SPI_XFER_DATA_FORMAT(flag)
```

Get the transfer data format of width and bit order.

```
struct _flexio_spi_type
```

#include <fsl_flexio_spi.h> Define FlexIO SPI access structure typedef.

Public Members

```
FLEXIO_Type *flexioBase
```

FlexIO base pointer.

```
uint8_t SDOPinIndex
```

Pin select for data output. To set SDO pin in Hi-Z state, user needs to mux the pin as GPIO input and disable all pull up/down in application.

```
uint8_t SDIPinIndex
```

Pin select for data input.

```
uint8_t SCKPinIndex
```

Pin select for clock.

```
uint8_t CSnPinIndex
```

Pin select for enable.

```
uint8_t shifterIndex[2]
```

Shifter index used in FlexIO SPI.

```
uint8_t timerIndex[2]
```

Timer index used in FlexIO SPI.

```
struct _flexio_spi_master_config
```

#include <fsl_flexio_spi.h> Define FlexIO SPI master configuration structure.

Public Members

```
bool enableMaster
```

Enable/disable FlexIO SPI master after configuration.

```
bool enableInDoze
```

Enable/disable FlexIO operation in doze mode.

```
bool enableInDebug
```

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct *_flexio_spi_slave_config*

#include <fsl_flexio_spi.h> Define FlexIO SPI slave configuration structure.

Public Members

bool enableSlave

Enable/disable FlexIO SPI slave after configuration.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct *_flexio_spi_transfer*

#include <fsl_flexio_spi.h> Define FlexIO SPI transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

size_t dataSize

Transfer bytes.

uint8_t flags

FlexIO SPI control flag, MSB first or LSB first.

struct *_flexio_spi_master_handle*

#include <fsl_flexio_spi.h> Define FlexIO SPI handle structure.

Public Members

`const uint8_t *txData`
Transfer buffer.

`uint8_t *rxData`
Receive buffer.

`size_t transferSize`
Total bytes to be transferred.

`volatile size_t txRemainingBytes`
Send data remaining in bytes.

`volatile size_t rxRemainingBytes`
Receive data remaining in bytes.

`volatile uint32_t state`
FlexIO SPI internal state.

`uint8_t bytePerFrame`
SPI mode, 2bytes or 1byte in a frame

`flexio_spi_shift_direction_t direction`
Shift direction.

`flexio_spi_master_transfer_callback_t callback`
FlexIO SPI callback.

`void *userData`
Callback parameter.

`bool isCsContinuous`
Is current transfer using CS continuous mode.

`uint32_t timer1Cfg`
TIMER1 TIMCFG register value backup.

2.27 FlexIO UART Driver

`status_t FLEXIO_UART_Init(FLEXIO_UART_Type *base, const flexio_uart_config_t *userConfig, uint32_t srcClock_Hz)`

Ungates the FlexIO clock, resets the FlexIO module, configures FlexIO UART hardware, and configures the FlexIO UART with FlexIO UART configuration. The configuration structure can be filled by the user or be set with default values by `FLEXIO_UART_GetDefaultConfig()`.

Example

```
FLEXIO_UART_Type base = {
    .flexioBase = FLEXIO,
    .TxPinIndex = 0,
    .RxPinIndex = 1,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_uart_config_t config = {
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false,
    .baudRate_Bps = 115200U,
```

(continues on next page)

(continued from previous page)

```
.bitCountPerChar = 8
};
FLEXIO_UART_Init(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- userConfig – Pointer to the flexio_uart_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Configuration success.
- kStatus_FLEXIO_UART_BaudrateNotSupport – Baudrate is not supported for current clock source frequency.

```
void FLEXIO_UART_Deinit(FLEXIO_UART_Type *base)
```

Resets the FlexIO UART shifter and timer config.

Note: After calling this API, call the FLEXIO_UART_Init to use the FlexIO UART module.

Parameters

- base – Pointer to FLEXIO_UART_Type structure

```
void FLEXIO_UART_GetDefaultConfig(flexio_uart_config_t *userConfig)
```

Gets the default configuration to configure the FlexIO UART. The configuration can be used directly for calling the FLEXIO_UART_Init(). Example:

```
flexio_uart_config_t config;
FLEXIO_UART_GetDefaultConfig(&userConfig);
```

Parameters

- userConfig – Pointer to the flexio_uart_config_t structure.

```
uint32_t FLEXIO_UART_GetStatusFlags(FLEXIO_UART_Type *base)
```

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART status flags.

```
void FLEXIO_UART_ClearStatusFlags(FLEXIO_UART_Type *base, uint32_t mask)
```

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
 - kFLEXIO_UART_TxDataRegEmptyFlag
 - kFLEXIO_UART_RxEmptyFlag

– kFLEXIO_UART_RxOverRunFlag

```
void FLEXIO_UART_EnableInterrupts(FLEXIO_UART_Type *base, uint32_t mask)
```

Enables the FlexIO UART interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Interrupt source.

```
void FLEXIO_UART_DisableInterrupts(FLEXIO_UART_Type *base, uint32_t mask)
```

Disables the FlexIO UART interrupt.

This function disables the FlexIO UART interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Interrupt source.

```
static inline uint32_t FLEXIO_UART_GetTxDataRegisterAddress(FLEXIO_UART_Type *base)
```

Gets the FlexIO UART transmit data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

Returns

FlexIO UART transmit data register address.

```
static inline uint32_t FLEXIO_UART_GetRxDataRegisterAddress(FLEXIO_UART_Type *base)
```

Gets the FlexIO UART receive data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

Returns

FlexIO UART receive data register address.

```
static inline void FLEXIO_UART_EnableTxDMA(FLEXIO_UART_Type *base, bool enable)
```

Enables/disables the FlexIO UART transmit DMA. This function enables/disables the FlexIO UART Tx DMA, which means asserting the kFLEXIO_UART_TxDataRegEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- enable – True to enable, false to disable.

```
static inline void FLEXIO_UART_EnableRxDMA(FLEXIO_UART_Type *base, bool enable)
```

Enables/disables the FlexIO UART receive DMA. This function enables/disables the FlexIO UART Rx DMA, which means asserting kFLEXIO_UART_RxDataRegFullFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- enable – True to enable, false to disable.

```
static inline void FLEXIO_UART_Enable(FLEXIO_UART_Type *base, bool enable)
```

Enables/disables the FlexIO UART module operation.

Parameters

- base – Pointer to the *FLEXIO_UART_Type*.
- enable – True to enable, false does not have any effect.

```
static inline void FLEXIO_UART_WriteByte(FLEXIO_UART_Type *base, const uint8_t *buffer)
```

Writes one byte of data.

Note: This is a non-blocking API, which returns directly after the data is put into the data register. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- buffer – The data bytes to send.

```
static inline void FLEXIO_UART_ReadByte(FLEXIO_UART_Type *base, uint8_t *buffer)
```

Reads one byte of data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- buffer – The buffer to store the received bytes.

```
status_t FLEXIO_UART_WriteBlocking(FLEXIO_UART_Type *base, const uint8_t *txData, size_t txSize)
```

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- txData – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

```
status_t FLEXIO_UART_ReadBlocking(FLEXIO_UART_Type *base, uint8_t *rxData, size_t rxSize)
```

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- rxData – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t FLEXIO_UART_TransferCreateHandle(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_callback_t* callback, void *userData)

Initializes the UART handle.

This function initializes the FlexIO UART handle, which can be used for other FlexIO UART transactional APIs. Call this API once to get the initialized handle.

The UART driver supports the “background” receiving, which means that users can set up a RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the FLEXIO_UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – to FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

void FLEXIO_UART_TransferStartRingBuffer(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *uint8_t* *ringBuffer, *size_t* ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn’t call the UART_ReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, only 31 bytes are used for saving data.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – Size of the ring buffer.

```
void FLEXIO_UART_TransferStopRingBuffer(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle)
```

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.

```
status_t FLEXIO_UART_TransferSendNonBlocking(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, flexio_uart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in ISR, the FlexIO UART driver calls the callback function and passes the *kStatus_FLEXIO_UART_TxIdle* as status parameter.

Note: The *kStatus_FLEXIO_UART_TxIdle* is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.
- xfer – FlexIO UART transfer structure. See *flexio_uart_transfer_t*.

Return values

- *kStatus_Success* – Successfully starts the data transmission.
- *kStatus_UART_TxBusy* – Previous transmission still not finished, data not written to the TX register.

```
void FLEXIO_UART_TransferAbortSend(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle)
```

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. Get the *remainBytes* to find out how many bytes are still not sent out.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.

```
status_t FLEXIO_UART_TransferGetSendCount(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, size_t *count)
```

Gets the number of bytes sent.

This function gets the number of bytes sent driven by interrupt.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `count` – Number of bytes sent so far by the non-blocking transaction.

Return values

- `kStatus_NoTransferInProgress` – transfer has finished or no transfer in progress.
- `kStatus_Success` – Successfully return the count.

```
status_t FLEXIO_UART_TransferReceiveNonBlocking(FLEXIO_UART_Type *base,
                                               flexio_uart_handle_t *handle,
                                               flexio_uart_transfer_t *xfer, size_t
                                               *receivedBytes)
```

Receives a buffer of data using the interrupt method.

This function receives data using the interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in ring buffer is not enough to read, the receive request is saved by the UART driver. When new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter `kStatus_UART_RxIdle`. For example, if the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer, the 5 bytes are copied to `xfer->data`. This function returns with the parameter `receivedBytes` set to 5. For the last 5 bytes, newly arrived data is saved from the `xfer->data[5]`. When 5 bytes are received, the UART driver notifies upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `xfer` – UART transfer structure. See `flexio_uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_FLEXIO_UART_RxBusy` – Previous receive request is not finished.

```
void FLEXIO_UART_TransferAbortReceive(FLEXIO_UART_Type *base, flexio_uart_handle_t
                                       *handle)
```

Aborts the receive data which was using IRQ.

This function aborts the receive data which was using IRQ.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.

`status_t FLEXIO_UART_TransferGetReceiveCount(FLEXIO_UART_Type *base,
flexio_uart_handle_t *handle, size_t *count)`

Gets the number of bytes received.

This function gets the number of bytes received driven by interrupt.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `count` – Number of bytes received so far by the non-blocking transaction.

Return values

- `kStatus_NoTransferInProgress` – transfer has finished or no transfer in progress.
- `kStatus_Success` – Successfully return the count.

`void FLEXIO_UART_TransferHandleIRQ(void *uartType, void *uartHandle)`

FlexIO UART IRQ handler function.

This function processes the FlexIO UART transmit and receives the IRQ request.

Parameters

- `uartType` – Pointer to the `FLEXIO_UART_Type` structure.
- `uartHandle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.

`void FLEXIO_UART_FlushShifters(FLEXIO_UART_Type *base)`

Flush tx/rx shifters.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.

`FSL_FLEXIO_UART_DRIVER_VERSION`

FlexIO UART driver version.

Error codes for the UART driver.

Values:

enumerator `kStatus_FLEXIO_UART_TxBusy`

Transmitter is busy.

enumerator `kStatus_FLEXIO_UART_RxBusy`

Receiver is busy.

enumerator `kStatus_FLEXIO_UART_TxIdle`

UART transmitter is idle.

enumerator `kStatus_FLEXIO_UART_RxIdle`

UART receiver is idle.

enumerator `kStatus_FLEXIO_UART_ERROR`

ERROR happens on UART.

enumerator `kStatus_FLEXIO_UART_RxRingBufferOverrun`

UART RX software ring buffer overrun.

enumerator `kStatus_FLEXIO_UART_RxHardwareOverrun`
 UART RX receiver overrun.

enumerator `kStatus_FLEXIO_UART_Timeout`
 UART times out.

enumerator `kStatus_FLEXIO_UART_BaudrateNotSupport`
 Baudrate is not supported in current clock source

enum `_flexio_uart_bit_count_per_char`
 FlexIO UART bit count per char.
Values:

enumerator `kFLEXIO_UART_7BitsPerChar`
 7-bit data characters

enumerator `kFLEXIO_UART_8BitsPerChar`
 8-bit data characters

enumerator `kFLEXIO_UART_9BitsPerChar`
 9-bit data characters

enum `_flexio_uart_interrupt_enable`
 Define FlexIO UART interrupt mask.
Values:

enumerator `kFLEXIO_UART_TxDataRegEmptyInterruptEnable`
 Transmit buffer empty interrupt enable.

enumerator `kFLEXIO_UART_RxDataRegFullInterruptEnable`
 Receive buffer full interrupt enable.

enum `_flexio_uart_status_flags`
 Define FlexIO UART status mask.
Values:

enumerator `kFLEXIO_UART_TxDataRegEmptyFlag`
 Transmit buffer empty flag.

enumerator `kFLEXIO_UART_RxDataRegFullFlag`
 Receive buffer full flag.

enumerator `kFLEXIO_UART_RxOverRunFlag`
 Receive buffer over run flag.

typedef enum `_flexio_uart_bit_count_per_char` `flexio_uart_bit_count_per_char_t`
 FlexIO UART bit count per char.

typedef struct `_flexio_uart_type` `FLEXIO_UART_Type`
 Define FlexIO UART access structure typedef.

typedef struct `_flexio_uart_config` `flexio_uart_config_t`
 Define FlexIO UART user configuration structure.

typedef struct `_flexio_uart_transfer` `flexio_uart_transfer_t`
 Define FlexIO UART transfer structure.

typedef struct `_flexio_uart_handle` `flexio_uart_handle_t`

```
typedef void (*flexio_uart_transfer_callback_t)(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, status_t status, void *userData)
```

FlexIO UART transfer callback function.

```
UART_RETRY_TIMES
```

Retry times for waiting flag.

```
struct _flexio_uart_type
```

#include <fsl_flexio_uart.h> Define FlexIO UART access structure typedef.

Public Members

```
FLEXIO_Type *flexioBase
```

FlexIO base pointer.

```
uint8_t TxPinIndex
```

Pin select for UART_Tx.

```
uint8_t RxPinIndex
```

Pin select for UART_Rx.

```
uint8_t shifterIndex[2]
```

Shifter index used in FlexIO UART.

```
uint8_t timerIndex[2]
```

Timer index used in FlexIO UART.

```
struct _flexio_uart_config
```

#include <fsl_flexio_uart.h> Define FlexIO UART user configuration structure.

Public Members

```
bool enableUart
```

Enable/disable FlexIO UART TX & RX.

```
bool enableInDoze
```

Enable/disable FlexIO operation in doze mode

```
bool enableInDebug
```

Enable/disable FlexIO operation in debug mode

```
bool enableFastAccess
```

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

```
uint32_t baudRate_Bps
```

Baud rate in Bps.

```
flexio_uart_bit_count_per_char_t bitCountPerChar
```

number of bits, 7/8/9 -bit

```
struct _flexio_uart_transfer
```

#include <fsl_flexio_uart.h> Define FlexIO UART transfer structure.

Public Members

```
size_t dataSize
```

Transfer size

```
struct _flexio_uart_handle
    #include <fsl_flexio_uart.h> Define FLEXIO UART handle structure.
```

Public Members

```
const uint8_t *volatile txData
    Address of remaining data to send.
volatile size_t txDataSize
    Size of the remaining data to send.
uint8_t *volatile rxData
    Address of remaining data to receive.
volatile size_t rxDataSize
    Size of the remaining data to receive.
size_t txDataSizeAll
    Total bytes to be sent.
size_t rxDataSizeAll
    Total bytes to be received.
uint8_t *rxRingBuffer
    Start address of the receiver ring buffer.
size_t rxRingBufferSize
    Size of the ring buffer.
volatile uint16_t rxRingBufferHead
    Index for the driver to store received data into ring buffer.
volatile uint16_t rxRingBufferTail
    Index for the user to get data from the ring buffer.
flexio_uart_transfer_callback_t callback
    Callback function.
void *userData
    UART callback function parameter.
volatile uint8_t txState
    TX transfer state.
volatile uint8_t rxState
    RX transfer state
union __unnamed64__
```

Public Members

```
uint8_t *data
    The buffer of data to be transfer.
uint8_t *rxData
    The buffer to receive data.
const uint8_t *txData
    The buffer of data to be sent.
```

2.28 ftfx adapter

2.29 Ftfx CACHE Driver

enum `_ftfx_cache_ram_func_constants`

Constants for execute-in-RAM flash function.

Values:

enumerator `kFTFX_CACHE_RamFuncMaxSizeInWords`

The maximum size of execute-in-RAM function.

typedef struct `_flash_prefetch_speculation_status` `ftfx_prefetch_speculation_status_t`

FTFx prefetch speculation status.

typedef struct `_ftfx_cache_config` `ftfx_cache_config_t`

FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

`status_t` `FTFX_CACHE_Init(ftfx_cache_config_t *config)`

Initializes the global FTFx cache structure members.

This function checks and initializes the Flash module for the other FTFx cache APIs.

Parameters

- `config` – Pointer to the storage for the driver runtime state.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t` `FTFX_CACHE_ClearCachePrefetchSpeculation(ftfx_cache_config_t *config, bool isPreProcess)`

Process the cache/prefetch/speculation to the flash.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `isPreProcess` – The possible option used to control flash cache/prefetch/speculation

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t` `FTFX_CACHE_PflashSetPrefetchSpeculation(ftfx_prefetch_speculation_status_t *speculationStatus)`

Sets the PFlash prefetch speculation to the intended speculation status.

Parameters

- `speculationStatus` – The expected protect status to set to the PFlash protection register. Each bit is

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidSpeculationOption` – An invalid speculation option argument is provided.

```
status_t FTFx_CACHE_PflashGetPrefetchSpeculation(ftfx_prefetch_speculation_status_t
                                                *speculationStatus)
```

Gets the PFlash prefetch speculation status.

Parameters

- `speculationStatus` – Speculation status returned by the PFlash IP.

Return values

`kStatus_FTFx_Success` – API was executed successfully.

```
struct _flash_prefetch_speculation_status
#include <fsl_ftfx_cache.h> FTFx prefetch speculation status.
```

Public Members

```
bool instructionOff
```

Instruction speculation.

```
bool dataOff
```

Data speculation.

```
union function_bit_operation_ptr_t
```

```
#include <fsl_ftfx_cache.h>
```

Public Members

```
uint32_t commadAddr
```

```
void (*callFlashCommand)(volatile uint32_t *base, uint32_t bitMask, uint32_t bitShift,
uint32_t bitValue)
```

```
struct _ftfx_cache_config
```

```
#include <fsl_ftfx_cache.h> FTFx cache driver state information.
```

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

```
uint8_t flashMemoryIndex
```

0 - primary flash; 1 - secondary flash

```
function_bit_operation_ptr_t bitOperFuncAddr
```

A buffer point to the flash execute-in-RAM function.

2.30 ftfx controller

FTFx driver status codes.

Values:

enumerator kStatus_FTFx_Success

API is executed successfully

enumerator kStatus_FTFx_InvalidArgument

Invalid argument

enumerator kStatus_FTFx_SizeError

Error size

enumerator kStatus_FTFx_AlignmentError

Parameter is not aligned with the specified baseline

enumerator kStatus_FTFx_AddressError

Address is out of range

enumerator kStatus_FTFx_AccessError

Invalid instruction codes and out-of bound addresses

enumerator kStatus_FTFx_ProtectionViolation

The program/erase operation is requested to execute on protected areas

enumerator kStatus_FTFx_CommandFailure

Run-time error during command execution.

enumerator kStatus_FTFx_UnknownProperty

Unknown property.

enumerator kStatus_FTFx_EraseKeyError

API erase key is invalid.

enumerator kStatus_FTFx_RegionExecuteOnly

The current region is execute-only.

enumerator kStatus_FTFx_ExecuteInRamFunctionNotReady

Execute-in-RAM function is not available.

enumerator kStatus_FTFx_PartitionStatusUpdateFailure

Failed to update partition status.

enumerator kStatus_FTFx_SetFlexramAsEepromError

Failed to set FlexRAM as EEPROM.

enumerator kStatus_FTFx_RecoverFlexramAsRamError

Failed to recover FlexRAM as RAM.

enumerator kStatus_FTFx_SetFlexramAsRamError

Failed to set FlexRAM as RAM.

enumerator kStatus_FTFx_RecoverFlexramAsEepromError

Failed to recover FlexRAM as EEPROM.

enumerator kStatus_FTFx_CommandNotSupported

Flash API is not supported.

enumerator kStatus_FTFx_SwapSystemNotInUninitialized

Swap system is not in an uninitialized state.

enumerator kStatus_FTFx_SwapIndicatorAddressError

The swap indicator address is invalid.

enumerator kStatus_FTFx_ReadOnlyProperty

The flash property is read-only.

enumerator kStatus_FTFx_InvalidPropertyValue

The flash property value is out of range.

enumerator kStatus_FTFx_InvalidSpeculationOption

The option of flash prefetch speculation is invalid.

enumerator kStatus_FTFx_CommandOperationInProgress

The option of flash command is processing.

enum _ftfx_driver_api_keys

Enumeration for FTFx driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFTFx_ApiEraseKey

Key value used to validate all FTFx erase APIs.

void FTFx_API_Init(*ftfx_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

status_t FTFx_API_UpdateFlexnvmPartitionStatus(*ftfx_config_t* *config)

Updates FlexNVM memory partition status according to data flash 0 IFR.

This function updates FlexNVM memory partition status.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FTFx_CMD_Erase(*ftfx_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the flash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.

- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_EraseSectorNonBlocking(ftfx_config_t *config, uint32_t start, uint32_t key)`

Erases the flash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address.

Parameters

- `config` – The pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t FTFx_CMD_EraseAll(ftfx_config_t *config, uint32_t key)`

Erases entire flash.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllUnsecure(ftfx_config_t *config, uint32_t key)`

Erases the entire flash, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllExecuteOnlySegments(ftfx_config_t *config, uint32_t key)`

Erases all program flash execute-only segments defined by the FXACC registers.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_Program(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramOnce(ftfx_config_t *config, uint32_t index, const uint8_t *src, uint32_t lengthInBytes)`

Programs Program Once Field through parameters.

This function programs the Program Once Field with the desired data for a given flash area as determined by the index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating which area of the Program Once Field to be programmed.
- `src` – A pointer to the source buffer of data that is to be programmed into the Program Once Field.

- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramSection(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

status_t FTFx_CMD_ProgramPartition(*ftfx_config_t* *config, *ftfx_partition_flexram_load_opt_t* option, *uint32_t* eepromDataSizeCode, *uint32_t* flexnvmPartitionCode, *uint8_t* CSEcKeySize, *uint8_t* CFE)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- config – Pointer to storage for the driver runtime state.
- option – The option used to set FlexRAM load behavior during reset.
- eepromDataSizeCode – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- flexnvmPartitionCode – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – Invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.

status_t FTFx_CMD_ReadOnce(*ftfx_config_t* *config, *uint32_t* index, *uint8_t* *dst, *uint32_t* lengthInBytes)

Reads the Program Once Field through parameters.

This function reads the read once feild with given index and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- index – The index indicating the area of program once field to be read.
- dst – A pointer to the destination buffer of data that is used to store data to be read.
- lengthInBytes – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.

- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ReadResource(ftfx_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyErase(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAll(ftfx_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAllExecuteOnlySegments(ftfx_config_t *config, ftfx_margin_value_t margin)`

Verifies whether the program flash execute-only segments have been erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyProgram(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_REG_GetSecurityState(ftfx_config_t *config, ftfx_security_state_t *state)`

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t FTFx_CMD_SecurityBypass(ftfx_config_t *config, const uint8_t *backdoorKey)`

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_SetFlexramFunction(ftfx_config_t *config, ftfx_flexram_func_opt_t option)`

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_SwapControl(ftfx_config_t *config, uint32_t address, ftfx_swap_control_opt_t option, ftfx_swap_state_config_t *returnInfo)`

Configures the Swap function or checks the swap state of the Flash module.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `address` – Address used to configure the flash Swap function.

- `option` – The possible option used to configure Flash Swap function or check the flash Swap status
- `returnInfo` – A pointer to the data which is used to return the information of flash Swap.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`enum _ftfx_partition_flexram_load_option`

Enumeration for the FlexRAM load during reset option.

Values:

enumerator `kFTFx_PartitionFlexramLoadOptLoadedWithValidEepromData`
FlexRAM is loaded with valid EEPROM data during reset sequence.

enumerator `kFTFx_PartitionFlexramLoadOptNotLoaded`
FlexRAM is not loaded during reset sequence.

`enum _ftfx_read_resource_opt`

Enumeration for the two possible options of flash read resource command.

Values:

enumerator `kFTFx_ResourceOptionFlashIfr`
Select code for Program flash 0 IFR, Program flash swap 0 IFR, Data flash 0 IFR

enumerator `kFTFx_ResourceOptionVersionId`
Select code for the version ID

`enum _ftfx_margin_value`

Enumeration for supported FTFx margin levels.

Values:

enumerator `kFTFx_MarginValueNormal`
Use the ‘normal’ read level for 1s.

enumerator `kFTFx_MarginValueUser`
Apply the ‘User’ margin to the normal read-1 level.

enumerator `kFTFx_MarginValueFactory`
Apply the ‘Factory’ margin to the normal read-1 level.

enumerator kFTFX_MarginValueInvalid

Not real margin level, Used to determine the range of valid margin level.

enum _ftfx_security_state

Enumeration for the three possible FTFx security states.

Values:

enumerator kFTFX_SecurityStateNotSecure

Flash is not secure.

enumerator kFTFX_SecurityStateBackdoorEnabled

Flash backdoor is enabled.

enumerator kFTFX_SecurityStateBackdoorDisabled

Flash backdoor is disabled.

enum _ftfx_flexram_function_option

Enumeration for the two possible options of set FlexRAM function command.

Values:

enumerator kFTFX_FlexramFuncOptAvailableAsRam

An option used to make FlexRAM available as RAM

enumerator kFTFX_FlexramFuncOptEepromQuickWriteRecovery

An option used to complete interrupted EEPROM quick write process

enumerator kFTFX_FlexramFuncOptEepromQuickWriteStatus

An option used to make EEPROM quick write status query

enumerator kFTFX_FlexramFuncOptAvailableForEepromQuickWrite

An option used to make FlexRAM available for EEPROM in Quick Write mode

enumerator kFTFX_FlexramFuncOptAvailableForEeprom

An option used to make FlexRAM available for EEPROM

enum _flash_acceleration_ram_property

Enumeration for acceleration ram property.

Values:

enumerator kFLASH_AccelerationRamSize

enum _ftfx_swap_control_option

Enumeration for the possible options of Swap control commands.

Values:

enumerator kFTFX_SwapControlOptionInitializeSystem

An option used to initialize the Swap system

enumerator kFTFX_SwapControlOptionSetInUpdateState

An option used to set the Swap in an update state

enumerator kFTFX_SwapControlOptionSetInCompleteState

An option used to set the Swap in a complete state

enumerator kFTFX_SwapControlOptionReportStatus

An option used to report the Swap status

enumerator kFTFX_SwapControlOptionDisableSystem

An option used to disable the Swap status

enum `_ftfx_swap_state`

Enumeration for the possible flash Swap status.

Values:

enumerator `kFTFxF_SwapStateUninitialized`
Flash Swap system is in an uninitialized state.

enumerator `kFTFxF_SwapStateReady`
Flash Swap system is in a ready state.

enumerator `kFTFxF_SwapStateUpdate`
Flash Swap system is in an update state.

enumerator `kFTFxF_SwapStateUpdateErased`
Flash Swap system is in an updateErased state.

enumerator `kFTFxF_SwapStateComplete`
Flash Swap system is in a complete state.

enumerator `kFTFxF_SwapStateDisabled`
Flash Swap system is in a disabled state.

enum `_ftfx_swap_block_status`

Enumeration for the possible flash Swap block status.

Values:

enumerator `kFTFxF_SwapBlockStatusLowerHalfProgramBlocksAtZero`
Swap block status is that lower half program block at zero.

enumerator `kFTFxF_SwapBlockStatusUpperHalfProgramBlocksAtZero`
Swap block status is that upper half program block at zero.

enum `_ftfx_memory_type`

Enumeration for FTFx memory type.

Values:

enumerator `kFTFxF_MemTypePflash`

enumerator `kFTFxF_MemTypeFlexnvm`

typedef enum `_ftfx_partition_flexram_load_option` `ftfx_partition_flexram_load_opt_t`

Enumeration for the FlexRAM load during reset option.

typedef enum `_ftfx_read_resource_opt` `ftfx_read_resource_opt_t`

Enumeration for the two possible options of flash read resource command.

typedef enum `_ftfx_margin_value` `ftfx_margin_value_t`

Enumeration for supported FTFx margin levels.

typedef enum `_ftfx_security_state` `ftfx_security_state_t`

Enumeration for the three possible FTFx security states.

typedef enum `_ftfx_flexram_function_option` `ftfx_flexram_func_opt_t`

Enumeration for the two possible options of set FlexRAM function command.

typedef enum `_ftfx_swap_control_option` `ftfx_swap_control_opt_t`

Enumeration for the possible options of Swap control commands.

typedef enum `_ftfx_swap_state` `ftfx_swap_state_t`

Enumeration for the possible flash Swap status.

```
typedef enum _ftfx_swap_block_status ftfx_swap_block_status_t
```

Enumeration for the possible flash Swap block status.

```
typedef struct _ftfx_swap_state_config ftfx_swap_state_config_t
```

Flash Swap information.

```
typedef struct _ftfx_special_mem ftfx_spec_mem_t
```

ftfx special memory access information.

```
typedef struct _ftfx_mem_descriptor ftfx_mem_desc_t
```

Flash memory descriptor.

```
typedef struct _ftfx_ops_config ftfx_ops_config_t
```

Active FTFx information for the current operation.

```
typedef struct _ftfx_ifr_descriptor ftfx_ifr_desc_t
```

Flash IFR memory descriptor.

```
typedef struct _ftfx_config ftfx_config_t
```

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

```
struct _ftfx_swap_state_config
```

#include <fsl_ftfx_controller.h> Flash Swap information.

Public Members

ftfx_swap_state_t flashSwapState

The current Swap system status.

ftfx_swap_block_status_t currentSwapBlockStatus

The current Swap block status.

ftfx_swap_block_status_t nextSwapBlockStatus

The next Swap block status.

```
struct _ftfx_special_mem
```

#include <fsl_ftfx_controller.h> ftfx special memory access information.

Public Members

uint32_t base

Base address of flash special memory.

uint32_t size

size of flash special memory.

uint32_t count

flash special memory count.

```
struct _ftfx_mem_descriptor
```

#include <fsl_ftfx_controller.h> Flash memory descriptor.

Public Members

uint32_t blockBase

A base address of the flash block

uint32_t aliasBlockBase

A base address of the alias flash block

uint32_t totalSize

The size of the flash block.

uint32_t sectorSize

The size in bytes of a sector of flash.

uint32_t blockCount

A number of flash blocks.

struct _ftfx_ops_config

#include <fsl_ftfx_controller.h> Active FTFx information for the current operation.

Public Members

uint32_t convertedAddress

A converted address for the current flash type.

struct _ftfx_ifr_descriptor

#include <fsl_ftfx_controller.h> Flash IFR memory descriptor.

union function_ptr_t

#include <fsl_ftfx_controller.h>

Public Members

uint32_t commadAddr

void (*callFlashCommand)(volatile uint8_t *FTMRx_fstat)

struct _ftfx_config

#include <fsl_ftfx_controller.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

uint32_t flexramBlockBase

The base address of the FlexRAM/acceleration RAM

uint32_t flexramTotalSize

The size of the FlexRAM/acceleration RAM

uint16_t eepromTotalSize

The size of EEPROM area which was partitioned from FlexRAM

function_ptr_t runCmdFuncAddr

An buffer point to the flash execute-in-RAM function.

struct __unnamed11__

Public Members

uint8_t type

Type of flash block.

uint8_t index

Index of flash block.

struct feature

struct addrAligment

struct feature

struct resRange

Public Members

uint8_t versionIdStart

Version ID start address

uint32_t pflashIfrStart

Program Flash 0 IFR start address

uint32_t dflashIfrStart

Data Flash 0 IFR start address

uint32_t pflashSwapIfrStart

Program Flash Swap IFR start address

struct idxInfo

2.31 ftfx feature

FTF_x_DRIVER_IS_FLASH_RESIDENT

Flash driver location.

Used for the flash resident application.

FTF_x_DRIVER_IS_EXPORTED

Flash Driver Export option.

Used for the MCUXpresso SDK application.

FTF_x_FLASH1_HAS_PROT_CONTROL

Indicates whether the secondary flash has its own protection register in flash module.

FTF_x_FLASH1_HAS_XACC_CONTROL

Indicates whether the secondary flash has its own Execute-Only access register in flash module.

FTF_x_DRIVER_HAS_FLASH1_SUPPORT

Indicates whether the secondary flash is supported in the Flash driver.

FTF_x_FLASH_COUNT

FTF_x_FLASH1_IS_INDEPENDENT_BLOCK

2.32 Ftftx FLASH Driver

status_t FLASH_Init(*flash_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLASH_Erase(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the appropriate number of flash sectors based on the desired start address and length were erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FLASH_EraseSectorNonBlocking(*flash_config_t* *config, uint32_t start, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address, and it is executed asynchronously.

NOTE: This function can only erase one flash sector at a time, and the other commands can be executed after the previous command has been completed.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.

status_t FLASH_EraseAll(*flash_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- config – Pointer to the storage for the driver runtime state.
- key – A value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the all pflash and flexnvm were erased successfully, the swap and eeprom have been reset to unconfigured state.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_EraseKeyError – API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLASH_EraseAllUnsecure(*flash_config_t* *config, uint32_t key)

Erases the entire flexnvm, including protected sectors.

Parameters

- config – Pointer to the storage for the driver runtime state.

- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protected sectors of flash were reset to unprotected status.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t` FLASH_Program(*flash_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data were programmed successfully into flash based on desired start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

status_t FLASH_ProgramOnce(*flash_config_t* *config, uint32_t index, uint8_t *src, uint32_t lengthInBytes)

Program the Program-Once-Field through parameters.

This function Program the Program-once-feild with given index and length.

Parameters

- *config* – A pointer to the storage for the driver runtime state.
- *index* – The index indicating the area of program once field to be read.
- *src* – A pointer to the source buffer of data that is used to store data to be write.
- *lengthInBytes* – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- *kStatus_FTFx_Success* – API was executed successfully; The index indicating the area of program once field was programed successfully.
- *kStatus_FTFx_InvalidArgument* – An invalid argument is provided.
- *kStatus_FTFx_ExecuteInRamFunctionNotReady* – Execute-in-RAM function is not available.
- *kStatus_FTFx_AccessError* – Invalid instruction codes and out-of bounds addresses.
- *kStatus_FTFx_ProtectionViolation* – The program/erase operation is requested to execute on protected areas.
- *kStatus_FTFx_CommandFailure* – Run-time error during the command execution.

status_t FLASH_ProgramSection(*flash_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- *config* – A pointer to the storage for the driver runtime state.
- *start* – The start address of the desired flash memory to be programmed. Must be word-aligned.
- *src* – A pointer to the source buffer of data that is to be programmed into the flash.
- *lengthInBytes* – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- *kStatus_FTFx_Success* – API was executed successfully; the desired data have been programed successfully into flash based on start address and length.
- *kStatus_FTFx_InvalidArgument* – An invalid argument is provided.
- *kStatus_FTFx_AlignmentError* – Parameter is not aligned with specified baseline.
- *kStatus_FTFx_AddressError* – Address is out of range.

- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t` FLASH_ReadResource(*flash_config_t* *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, *ftfx_read_resource_opt_t* option)

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_ReadOnce(*flash_config_t* *config, uint32_t index, uint8_t *dst, uint32_t lengthInBytes)

Reads the Program Once Field through parameters.

This function reads the read once feild with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been successfully read from Program flash0 IFR map and Program Once field based on index and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_VerifyErase(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, *ftfx_margin_value_t* margin)

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region has been erased.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.

- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_VerifyEraseAll(flash_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; all program flash and flexnvm were in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_VerifyProgram(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified FLASH region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.

- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_GetSecurityState(*flash_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flash was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLASH_SecurityBypass(*flash_config_t* *config, `const uint8_t` *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_SetFlexramFunction(*flash_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_Swap(*flash_config_t* *config, uint32_t address, bool isSetEnable)

Swaps the lower half flash with the higher half flash.

Parameters

- config – A pointer to the storage for the driver runtime state.
- address – Address used to configure the flash swap function
- isSetEnable – The possible option used to configure the Flash Swap function or check the flash Swap status.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the lower half flash and higher half flash have been swapped.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_SwapSystemNotInUninitialized` – Swap system is not in an uninitialized state.

`status_t` FLASH_IsProtected(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, *flash_prot_state_t* *protection_state)

Returns the protection state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash protect status for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.

- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words) to be checked. Must be word-aligned.
- `protection_state` – A pointer to the value returned for the current protection status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protection state of specified FLASH region was stored to `protection_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t` FLASH_IsExecuteOnly(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, *flash_xacc_state_t* *access_state)

Returns the access state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash access status for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be checked. Must be word-aligned.
- `access_state` – A pointer to the value returned for the current access status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the executeOnly state of specified FLASH region was stored to `access_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned to the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t` FLASH_PflashSetProtection(*flash_config_t* *config, *pflash_prot_status_t* *protectStatus)

Sets the PFlash Protection to the intended protection status.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the PFlash protection register. Each bit is corresponding to protection of 1/32(64) of the total PFlash. The least significant bit is corresponding to the lowest address area of PFlash. The most significant bit is corresponding to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region is protected.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLASH_PflashGetProtection(*flash_config_t* *config, *pflash_prot_status_t* *protectStatus)

Gets the PFlash protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – Protect status returned by the PFlash IP. Each bit is corresponding to the protection of 1/32(64) of the total PFlash. The least significant bit corresponds to the lowest address area of the PFlash. The most significant bit corresponds to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the Protection state was stored to `protectStatus`;
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLASH_GetProperty(*flash_config_t* *config, *flash_property_tag_t* whichProperty, *uint32_t* *value)

Returns the desired flash property.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `whichProperty` – The desired property from the list of properties in enum `flash_property_tag_t`
- `value` – A pointer to the value returned for the desired flash property.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the flash property was stored to `value`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_UnknownProperty` – An unknown property tag.

`status_t` FLASH_GetCommandState(*void*)

Get previous command status.

This function is used to obtain the execution status of the previous command.

Return values

- `kStatus_FTFx_Success` – The previous command is executed successfully.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.

- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`FSL_FLASH_DRIVER_VERSION`

Flash driver version for SDK.

Version 3.3.0.

`FSL_FLASH_DRIVER_VERSION_ROM`

Flash driver version for ROM.

Version 3.0.0.

`enum_flash_protection_state`

Enumeration for the three possible flash protection levels.

Values:

enumerator `kFLASH_ProtectionStateUnprotected`

Flash region is not protected.

enumerator `kFLASH_ProtectionStateProtected`

Flash region is protected.

enumerator `kFLASH_ProtectionStateMixed`

Flash is mixed with protected and unprotected region.

`enum_flash_execute_only_access_state`

Enumeration for the three possible flash execute access levels.

Values:

enumerator `kFLASH_AccessStateUnLimited`

Flash region is unlimited.

enumerator `kFLASH_AccessStateExecuteOnly`

Flash region is execute only.

enumerator `kFLASH_AccessStateMixed`

Flash is mixed with unlimited and execute only region.

`enum_flash_property_tag`

Enumeration for various flash properties.

Values:

enumerator `kFLASH_PropertyPflash0SectorSize`

Pflash sector size property.

enumerator `kFLASH_PropertyPflash0TotalSize`

Pflash total size property.

enumerator `kFLASH_PropertyPflash0BlockSize`

Pflash block size property.

enumerator `kFLASH_PropertyPflash0BlockCount`

Pflash block count property.

enumerator `kFLASH_PropertyPflash0BlockBaseAddr`

Pflash block base address property.

enumerator `kFLASH_PropertyPflash0FacSupport`

Pflash fac support property.

enumerator `kFLASH_PropertyPflash0AccessSegmentSize`
Pflash access segment size property.

enumerator `kFLASH_PropertyPflash0AccessSegmentCount`
Pflash access segment count property.

enumerator `kFLASH_PropertyPflash1SectorSize`
Pflash sector size property.

enumerator `kFLASH_PropertyPflash1TotalSize`
Pflash total size property.

enumerator `kFLASH_PropertyPflash1BlockSize`
Pflash block size property.

enumerator `kFLASH_PropertyPflash1BlockCount`
Pflash block count property.

enumerator `kFLASH_PropertyPflash1BlockBaseAddr`
Pflash block base address property.

enumerator `kFLASH_PropertyPflash1FacSupport`
Pflash fac support property.

enumerator `kFLASH_PropertyPflash1AccessSegmentSize`
Pflash access segment size property.

enumerator `kFLASH_PropertyPflash1AccessSegmentCount`
Pflash access segment count property.

enumerator `kFLASH_PropertyFlexRamBlockBaseAddr`
FlexRam block base address property.

enumerator `kFLASH_PropertyFlexRamTotalSize`
FlexRam total size property.

typedef enum `_flash_protection_state` `flash_prot_state_t`
Enumeration for the three possible flash protection levels.

typedef union `_pflash_protection_status` `pflash_prot_status_t`
PFlash protection status.

typedef enum `_flash_execute_only_access_state` `flash_xacc_state_t`
Enumeration for the three possible flash execute access levels.

typedef enum `_flash_property_tag` `flash_property_tag_t`
Enumeration for various flash properties.

typedef struct `_flash_config` `flash_config_t`
Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

`kStatus_FLASH_Success`

`kFLASH_ApiEraseKey`

union `_pflash_protection_status`
`#include <fsl_ftfx_flash.h>` PFlash protection status.

Public Members

uint32_t protl
PROT[31:0].

uint32_t proth
PROT[63:32].

uint8_t protsl
PROTS[7:0].

uint8_t protsh
PROTS[15:8].

uint8_t reserved[2]

struct _flash_config

#include <fsl_ftfx_flash.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

2.33 Fftx FLEXNVM Driver

status_t FLEXNVM_Init(*flexnvm_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLEXNVM_DflashErase(*flexnvm_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the appropriate number of data flash sectors based on the desired start address and length were erased successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_EraseAll(*flexnvm_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the entire flexnvm has been erased successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t` FLEXNVM_EraseAllUnsecure(*flexnvm_config_t* *config, uint32_t key)

Erases the entire flexnvm, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the flexnvm is not in security state.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t` FLEXNVM_DflashProgram(*flexnvm_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified data flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_DflashProgramSection(*flexnvm_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified data flash area.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t` FLEXNVM_ProgramPartition(*flexnvm_config_t* *config,
ftfx_partition_flexram_load_opt_t option, uint32_t
 eepromDataSizeCode, uint32_t flexnvmPartitionCode)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_ProgramPartition_CSE(*flexnvm_config_t* *config, *ftfx_partition_flexram_load_opt_t* option, `uint32_t` eepromDataSizeCode, `uint32_t` flexnvmPartitionCode, `uint8_t` CSEcKeySize, `uint8_t` SFE)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM. This is the CSE enabled version for IP's like FTFC.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.
- `CSEcKeySize` – CSEc/SHE key size, see RM for details and possible values
- `SFE` – Security Flag Extension (SFE), see RM for details and possible values

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_ReadResource(*flexnvm_config_t* *config, `uint32_t` start, `uint8_t` *dst, `uint32_t` lengthInBytes, *ftfx_read_resource_opt_t* option)

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.

- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_DflashVerifyErase(*flexnvm_config_t* *config, uint32_t start, uint32_t lengthInBytes, *ftfx_margin_value_t* margin)

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified data flash region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_VerifyEraseAll(*flexnvm_config_t* *config, *ftfx_margin_value_t* margin)

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the entire flexnvm region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_DflashVerifyProgram(*flexnvm_config_t* *config, `uint32_t` start, `uint32_t` lengthInBytes, `const uint8_t` *expectedData, *ftfx_margin_value_t* margin, `uint32_t` *failedAddress, `uint32_t` *failedData)

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into specified data flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_GetSecurityState(*flexnvm_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flexnvm was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLEXNVM_SecurityBypass(*flexnvm_config_t* *config, `const uint8_t` *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

status_t FLEXNVM_SetFlexramFunction(*flexnvm_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- config – A pointer to the storage for the driver runtime state.
- option – The option used to set the work mode of FlexRAM.

Return values

- kStatus_FTFx_Success – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FLEXNVM_DflashSetProtection(*flexnvm_config_t* *config, *uint8_t* protectStatus)

Sets the DFlash protection to the intended protection status.

Parameters

- config – A pointer to the storage for the driver runtime state.
- protectStatus – The expected protect status to set to the DFlash protection register. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- kStatus_FTFx_Success – API was executed successfully; the specified DFlash region is protected.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_CommandNotSupported – Flash API is not supported.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.

status_t FLEXNVM_DflashGetProtection(*flexnvm_config_t* *config, *uint8_t* *protectStatus)

Gets the DFlash protection status.

Parameters

- config – A pointer to the storage for the driver runtime state.
- protectStatus – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash, and so on. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

`status_t` FLEXNVM_EepromSetProtection(*flexnvm_config_t* *config, `uint8_t` protectStatus)

Sets the EEPROM protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the EEPROM protection register. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of EEPROM, and so on. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_EepromGetProtection(*flexnvm_config_t* *config, `uint8_t` *protectStatus)

Gets the EEPROM protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of the EEPROM. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

`status_t` FLEXNVM_GetProperty(*flexnvm_config_t* *config, *flexnvm_property_tag_t* whichProperty, `uint32_t` *value)

Returns the desired flexnvm property.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `whichProperty` – The desired property from the list of properties in enum `flexnvm_property_tag_t`
- `value` – A pointer to the value returned for the desired flexnvm property.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_UnknownProperty` – An unknown property tag.

`enum _flexnvm_property_tag`

Enumeration for various flexnvm properties.

Values:

enumerator `kFLEXNVM_PropertyDflashSectorSize`
Dflash sector size property.

enumerator `kFLEXNVM_PropertyDflashTotalSize`
Dflash total size property.

enumerator `kFLEXNVM_PropertyDflashBlockSize`
Dflash block size property.

enumerator `kFLEXNVM_PropertyDflashBlockCount`
Dflash block count property.

enumerator `kFLEXNVM_PropertyDflashBlockBaseAddr`
Dflash block base address property.

enumerator `kFLEXNVM_PropertyAliasDflashBlockBaseAddr`
Dflash block base address Alias property.

enumerator `kFLEXNVM_PropertyFlexRamBlockBaseAddr`
FlexRam block base address property.

enumerator `kFLEXNVM_PropertyFlexRamTotalSize`
FlexRam total size property.

enumerator `kFLEXNVM_PropertyEepromTotalSize`
EEPROM total size property.

`typedef enum _flexnvm_property_tag flexnvm_property_tag_t`

Enumeration for various flexnvm properties.

`typedef struct _flexnvm_config flexnvm_config_t`

Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

`status_t FLEXNVM_EepromWrite(flexnvm_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs the EEPROM with data at locations passed in through parameters.

This function programs the emulated EEPROM with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified eeprom region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsEepromError` – Failed to set flexram as eeprom.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_RecoverFlexramAsRamError` – Failed to recover the FlexRAM as RAM.

`struct _flexnvm_config`

`#include <fsl_ftfx_flexnvm.h>` Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

2.34 ftfx utilities

`ALIGN_DOWN(x, a)`

Alignment(down) utility.

`ALIGN_UP(x, a)`

Alignment(up) utility.

`MAKE_VERSION(major, minor, bugfix)`

Constructs the version number for drivers.

`MAKE_STATUS(group, code)`

Constructs a status code value from a group and a code number.

`FOUR_CHAR_CODE(a, b, c, d)`

Constructs the four character code for the Flash driver API key.

`B1P4(b)`

bytes2word utility.

`B1P3(b)`

`B1P2(b)`

`B1P1(b)`

`B2P3(b)`

`B2P2(b)`

`B2P1(b)`

`B3P2(b)`

`B3P1(b)`

`BYTE2WORD_1_3(x, y)`

`BYTE2WORD_2_2(x, y)`

`BYTE2WORD_3_1(x, y)`

BYTE2WORD_1_1_2(x, y, z)

BYTE2WORD_1_2_1(x, y, z)

BYTE2WORD_2_1_1(x, y, z)

BYTE2WORD_1_1_1_1(x, y, z, w)

2.35 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW

User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW

User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW

User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureR

User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureN

User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO_IgnoreAttributeCheck

Ignores the attribute check

typedef enum _gpio_pin_direction gpio_pin_direction_t

GPIO direction definition.

typedef enum _gpio_checker_attribute gpio_checker_attribute_t

GPIO checker attribute.

```
typedef struct gpio_pin_config gpio_pin_config_t
```

The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

```
GPIO_FIT_REG(value)
```

```
struct gpio_pin_config
```

`#include <fsl_gpio.h>` The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

```
gpio_pin_direction_t pinDirection
```

GPIO direction, input or output

```
uint8_t outputLogic
```

Set a default output logic, which has no use in input

2.36 GPIO Driver

```
void GPIO_PortInit(GPIO_Type *base)
```

Initializes the GPIO peripheral.

This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

```
void GPIO_PortDenit(GPIO_Type *base)
```

Denitalizes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

```
void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const gpio_pin_config_t *config)
```

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

```
static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)
```

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

```
static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)
```

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)
```

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)
```

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)
```

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
uint32_t GPIO_PortGetInterruptFlags(GPIO_Type *base)
```

Reads the GPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains

set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

Return values

The – current GPIO port interrupt status flag, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

```
void GPIO_PortClearInterruptFlags(GPIO_Type *base, uint32_t mask)
```

Clears multiple GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
void GPIO_CheckAttributeBytes(GPIO_Type *base, gpio_checker_attribute_t attribute)
```

The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register is organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.37 INTMUX: Interrupt Multiplexer Driver

```
void INTMUX_Init(INTMUX_Type *base)
```

Initializes the INTMUX module.

This function enables the clock gate for the specified INTMUX. It then resets all channels, so that no interrupt sources are routed and the logic mode is set to default of kINTMUX_ChannelLogicOR. Finally, the NVIC vectors for all the INTMUX output channels are enabled.

Parameters

- base – INTMUX peripheral base address.

```
void INTMUX_Deinit(INTMUX_Type *base)
```

Deinitializes an INTMUX instance for operation.

The clock gate for the specified INTMUX is disabled and the NVIC vectors for all channels are disabled.

Parameters

- base – INTMUX peripheral base address.

```
static inline void INTMUX_ResetChannel(INTMUX_Type *base, uint32_t channel)
```

Resets an INTMUX channel.

Sets all register values in the specified channel to their reset value. This function disables all interrupt sources for the channel.

Parameters

- base – INTMUX peripheral base address.

- channel – The INTMUX channel number.

```
static inline void INTMUX_SetChannelMode(INTMUX_Type *base, uint32_t channel,  
                                       intmux_channel_logic_mode_t logic)
```

Sets the logic mode for an INTMUX channel.

INTMUX channels can be configured to use one of the two logic modes that control how pending interrupt sources on the channel trigger the output interrupt.

- kINTMUX_ChannelLogicOR means any source pending triggers the output interrupt.
- kINTMUX_ChannelLogicAND means all selected sources on the channel must be pending before the channel output interrupt triggers.

Parameters

- base – INTMUX peripheral base address.
- channel – The INTMUX channel number.
- logic – The INTMUX channel logic mode.

```
static inline void INTMUX_EnableInterrupt(INTMUX_Type *base, uint32_t channel, IRQn_Type  
                                         irq)
```

Enables an interrupt source on an INTMUX channel.

Parameters

- base – INTMUX peripheral base address.
- channel – Index of the INTMUX channel on which the specified interrupt is enabled.
- irq – Interrupt to route to the specified INTMUX channel. The interrupt must be an INTMUX source.

```
static inline void INTMUX_DisableInterrupt(INTMUX_Type *base, uint32_t channel, IRQn_Type  
                                          irq)
```

Disables an interrupt source on an INTMUX channel.

Parameters

- base – INTMUX peripheral base address.
- channel – Index of the INTMUX channel on which the specified interrupt is disabled.
- irq – Interrupt number. The interrupt must be an INTMUX source.

```
static inline uint32_t INTMUX_GetChannelPendingSources(INTMUX_Type *base, uint32_t  
                                                       channel)
```

Gets INTMUX pending interrupt sources for a specific channel.

Parameters

- base – INTMUX peripheral base address.
- channel – The INTMUX channel number.

Returns

The mask of pending interrupt bits. Bit[n] set means INTMUX source n is pending.

FSL_INTMUX_DRIVER_VERSION

```
enum _intmux_channel_logic_mode  
    INTMUX channel logic mode.
```

Values:

```

enumerator kINTMUX_ChannelLogicOR
    Logic OR all enabled interrupt inputs
enumerator kINTMUX_ChannelLogicAND
    Logic AND all enabled interrupt inputs
typedef enum _intmux_channel_logic_mode intmux_channel_logic_mode_t
    INTMUX channel logic mode.

```

2.38 Common Driver

```

FSL_COMMON_DRIVER_VERSION
    common driver version.
DEBUG_CONSOLE_DEVICE_TYPE_NONE
    No debug console.
DEBUG_CONSOLE_DEVICE_TYPE_UART
    Debug console based on UART.
DEBUG_CONSOLE_DEVICE_TYPE_LPUART
    Debug console based on LPUART.
DEBUG_CONSOLE_DEVICE_TYPE_LPSCI
    Debug console based on LPSCI.
DEBUG_CONSOLE_DEVICE_TYPE_USBCDC
    Debug console based on USBCDC.
DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM
    Debug console based on FLEXCOMM.
DEBUG_CONSOLE_DEVICE_TYPE_IUART
    Debug console based on i.MX UART.
DEBUG_CONSOLE_DEVICE_TYPE_VUSART
    Debug console based on LPC_VUSART.
DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART
    Debug console based on LPC_USART.
DEBUG_CONSOLE_DEVICE_TYPE_SWO
    Debug console based on SWO.
DEBUG_CONSOLE_DEVICE_TYPE_QSCI
    Debug console based on QSCI.
MIN(a, b)
    Computes the minimum of a and b.
MAX(a, b)
    Computes the maximum of a and b.
UINT16_MAX
    Max value of uint16_t type.
UINT32_MAX
    Max value of uint32_t type.

```

SDK_ATOMIC_LOCAL_ADD(addr, val)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_ALIGN(var, alignbytes)

Macro to define a variable with alignbytes alignment

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value (rounded up)

SDK_SIZEALIGN_UP(var, alignbytes)

Macro to change a value to a given size aligned value (rounded up), the wrapper of SDK_SIZEALIGN

SDK_SIZEALIGN_DOWN(var, alignbytes)

Macro to change a value to a given size aligned value (rounded down)

SDK_IS_ALIGNED(var, alignbytes)

Macro to check if a value is aligned to a given size

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(*var*, *alignbytes*)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(*var*)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(*var*, *alignbytes*)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_CACHE_LINE_SECTION(*var*)

Define a variable *var*, which is cache line size aligned and be placed in CacheLineData section.

AT_CACHE_LINE_SECTION_INIT(*var*)

Define a variable *var* with initial value, which is cache line size aligned and be placed in CacheLineData.init section.

AT_QUICKACCESS_SECTION_CODE(*func*)

Place function in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA(*var*)

Place data in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA_ALIGN(*var*, *alignbytes*)

Place data in a section which can be accessed quickly by core, and the variable address is set to align with *alignbytes*.

MCUX_RAMFUNC

Function attribute to place function in RAM. For example, to place function *my_func* in ram, use like:

```
MCUX_RAMFUNC my_func
```

RAMFUNCTION_SECTION_CODE(*func*)

Place function in ram.

enum *_status_groups*

Status group numbers.

Values:

enumerator *kStatusGroup_Generic*

Group number for generic status codes.

enumerator *kStatusGroup_FLASH*

Group number for FLASH status codes.

enumerator *kStatusGroup_LPSPI*

Group number for LPSPI status codes.

enumerator *kStatusGroup_FLEXIO_SPI*

Group number for FLEXIO SPI status codes.

enumerator *kStatusGroup_DSPI*

Group number for DSPI status codes.

enumerator *kStatusGroup_FLEXIO_UART*

Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C
Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C
Group number for LPI2C status codes.

enumerator kStatusGroup_UART
Group number for UART status codes.

enumerator kStatusGroup_I2C
Group number for UART status codes.

enumerator kStatusGroup_LPSCI
Group number for LPSCI status codes.

enumerator kStatusGroup_LPUART
Group number for LPUART status codes.

enumerator kStatusGroup_SPI
Group number for SPI status code.

enumerator kStatusGroup_XRDC
Group number for XRDC status code.

enumerator kStatusGroup_SEMA42
Group number for SEMA42 status code.

enumerator kStatusGroup_SDHC
Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

- enumerator `kStatusGroup_OTP`
Group number for OTP status codes.
- enumerator `kStatusGroup_MCAN`
Group number for MCAN status codes.
- enumerator `kStatusGroup_CAAM`
Group number for CAAM status codes.
- enumerator `kStatusGroup_ECSPi`
Group number for ECSPi status codes.
- enumerator `kStatusGroup_USDHC`
Group number for USDHC status codes.
- enumerator `kStatusGroup_LPC_I2C`
Group number for LPC_I2C status codes.
- enumerator `kStatusGroup_DCP`
Group number for DCP status codes.
- enumerator `kStatusGroup_MSCAN`
Group number for MSCAN status codes.
- enumerator `kStatusGroup_ESAI`
Group number for ESAI status codes.
- enumerator `kStatusGroup_FLEXSPi`
Group number for FLEXSPi status codes.
- enumerator `kStatusGroup_MMDC`
Group number for MMDC status codes.
- enumerator `kStatusGroup_PDM`
Group number for MIC status codes.
- enumerator `kStatusGroup_SDMA`
Group number for SDMA status codes.
- enumerator `kStatusGroup_ICS`
Group number for ICS status codes.
- enumerator `kStatusGroup_SPDIF`
Group number for SPDIF status codes.
- enumerator `kStatusGroup_LPC_MINISPI`
Group number for LPC_MINISPI status codes.
- enumerator `kStatusGroup_HASHCRYPT`
Group number for Hashcrypt status codes
- enumerator `kStatusGroup_LPC_SPI_SSP`
Group number for LPC_SPI_SSP status codes.
- enumerator `kStatusGroup_I3C`
Group number for I3C status codes
- enumerator `kStatusGroup_LPC_I2C_1`
Group number for LPC_I2C_1 status codes.
- enumerator `kStatusGroup_NOTIFIER`
Group number for NOTIFIER status codes.

- enumerator `kStatusGroup_DebugConsole`
Group number for debug console status codes.
- enumerator `kStatusGroup_SEMC`
Group number for SEMC status codes.
- enumerator `kStatusGroup_ApplicationRangeStart`
Starting number for application groups.
- enumerator `kStatusGroup_IAP`
Group number for IAP status codes
- enumerator `kStatusGroup_SFA`
Group number for SFA status codes
- enumerator `kStatusGroup_SPC`
Group number for SPC status codes.
- enumerator `kStatusGroup_PUF`
Group number for PUF status codes.
- enumerator `kStatusGroup_TOUCH_PANEL`
Group number for touch panel status codes
- enumerator `kStatusGroup_VBAT`
Group number for VBAT status codes
- enumerator `kStatusGroup_XSPI`
Group number for XSPI status codes
- enumerator `kStatusGroup_PNGDEC`
Group number for PNGDEC status codes
- enumerator `kStatusGroup_JPEGDEC`
Group number for JPEGDEC status codes
- enumerator `kStatusGroup_AUDMIX`
Group number for AUDMIX status codes
- enumerator `kStatusGroup_HAL_GPIO`
Group number for HAL GPIO status codes.
- enumerator `kStatusGroup_HAL_UART`
Group number for HAL UART status codes.
- enumerator `kStatusGroup_HAL_TIMER`
Group number for HAL TIMER status codes.
- enumerator `kStatusGroup_HAL_SPI`
Group number for HAL SPI status codes.
- enumerator `kStatusGroup_HAL_I2C`
Group number for HAL I2C status codes.
- enumerator `kStatusGroup_HAL_FLASH`
Group number for HAL FLASH status codes.
- enumerator `kStatusGroup_HAL_PWM`
Group number for HAL PWM status codes.
- enumerator `kStatusGroup_HAL_RNG`
Group number for HAL RNG status codes.

- enumerator `kStatusGroup_HAL_I2S`
Group number for HAL I2S status codes.
- enumerator `kStatusGroup_HAL_ADC_SENSOR`
Group number for HAL ADC SENSOR status codes.
- enumerator `kStatusGroup_TIMERMANAGER`
Group number for TiMER MANAGER status codes.
- enumerator `kStatusGroup_SERIALMANAGER`
Group number for SERIAL MANAGER status codes.
- enumerator `kStatusGroup_LED`
Group number for LED status codes.
- enumerator `kStatusGroup_BUTTON`
Group number for BUTTON status codes.
- enumerator `kStatusGroup_EXTERN_EEPROM`
Group number for EXTERN EEPROM status codes.
- enumerator `kStatusGroup_SHELL`
Group number for SHELL status codes.
- enumerator `kStatusGroup_MEM_MANAGER`
Group number for MEM MANAGER status codes.
- enumerator `kStatusGroup_LIST`
Group number for List status codes.
- enumerator `kStatusGroup_OSA`
Group number for OSA status codes.
- enumerator `kStatusGroup_COMMON_TASK`
Group number for Common task status codes.
- enumerator `kStatusGroup_MSG`
Group number for messaging status codes.
- enumerator `kStatusGroup_SDK_OCOTP`
Group number for OCOTP status codes.
- enumerator `kStatusGroup_SDK_FLEXSPINOR`
Group number for FLEXSPINOR status codes.
- enumerator `kStatusGroup_CODEC`
Group number for codec status codes.
- enumerator `kStatusGroup_ASRC`
Group number for codec status ASRC.
- enumerator `kStatusGroup_OTFAD`
Group number for codec status codes.
- enumerator `kStatusGroup_SDIOSLV`
Group number for SDIOSLV status codes.
- enumerator `kStatusGroup_MECC`
Group number for MECC status codes.
- enumerator `kStatusGroup_ENET_QOS`
Group number for ENET_QOS status codes.

- enumerator `kStatusGroup_LOG`
Group number for LOG status codes.
- enumerator `kStatusGroup_I3CBUS`
Group number for I3CBUS status codes.
- enumerator `kStatusGroup_QSCI`
Group number for QSCI status codes.
- enumerator `kStatusGroup_ELEMU`
Group number for ELEMU status codes.
- enumerator `kStatusGroup_QUEUEDSPI`
Group number for QSPI status codes.
- enumerator `kStatusGroup_POWER_MANAGER`
Group number for POWER_MANAGER status codes.
- enumerator `kStatusGroup_IPED`
Group number for IPED status codes.
- enumerator `kStatusGroup_ELS_PKC`
Group number for ELS PKC status codes.
- enumerator `kStatusGroup_CSS_PKC`
Group number for CSS PKC status codes.
- enumerator `kStatusGroup_HOSTIF`
Group number for HOSTIF status codes.
- enumerator `kStatusGroup_CLIF`
Group number for CLIF status codes.
- enumerator `kStatusGroup_BMA`
Group number for BMA status codes.
- enumerator `kStatusGroup_NETC`
Group number for NETC status codes.
- enumerator `kStatusGroup_ELE`
Group number for ELE status codes.
- enumerator `kStatusGroup_GLIKEY`
Group number for GLIKEY status codes.
- enumerator `kStatusGroup_AON_POWER`
Group number for AON_POWER status codes.
- enumerator `kStatusGroup_AON_COMMON`
Group number for AON_COMMON status codes.
- enumerator `kStatusGroup_ENDAT3`
Group number for ENDAT3 status codes.
- enumerator `kStatusGroup_HIPERFACE`
Group number for HIPERFACE status codes.
- enumerator `kStatusGroup_NPX`
Group number for NPX status codes.
- enumerator `kStatusGroup_ELA_CSEC`
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT

Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT

Group number for A-format status codes.

enumerator kStatusGroup_LPC_QSPI

Group number for LPC QSPI status codes.

Generic status return codes.

Values:

enumerator kStatus_Success

Generic status for Success.

enumerator kStatus_Fail

Generic status for Fail.

enumerator kStatus_ReadOnly

Generic status for read only failure.

enumerator kStatus_OutOfRange

Generic status for out of range access.

enumerator kStatus_InvalidArgument

Generic status for invalid argument check.

enumerator kStatus_Timeout

Generic status for timeout.

enumerator kStatus_NoTransferInProgress

Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

```
void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)
```

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- `delayTime_us` – Delay time in unit of microsecond.
- `coreClock_Hz` – Core clock frequency with Hz.

```
static inline status_t EnableIRQ(IRQn_Type interrupt)
```

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ number.

Return values

- `kStatus_Success` – Interrupt enabled successfully
- `kStatus_Fail` – Failed to enable the interrupt

```
static inline status_t DisableIRQ(IRQn_Type interrupt)
```

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ number.

Return values

- `kStatus_Success` – Interrupt disabled successfully
- `kStatus_Fail` – Failed to disable the interrupt

```
static inline status_t EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)
```

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ to Enable.
- `priNum` – Priority number set to interrupt controller register.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ to set.
- `priNum` – Priority number set to interrupt controller register.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

static inline *status_t* IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The flag which IRQ to clear.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the `EnableGlobalIRQ()`.

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the `EnableGlobalIRQ()` and `DisableGlobalIRQ()` in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

```
static inline bool __SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t
newValue)
```

```
static inline uint32_t __SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)
```

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused	Major Version	Minor Version	Bug Fix
31 25 24	17 16	9 8	0

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING();” need to be added at the end of each case section which misses “break;”statement.

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)

Convert the register address to the one used in non-secure mode.

MSDK_HAS_DWT_CYCCNT

The chip supports DWT CYCCNT or not.

MSDK_INVALID_IRQ_HANDLER

Invalid IRQ handler address.

2.39 Lin_lpuart_driver

FSL_LIN_LPUART_DRIVER_VERSION

LIN LPUART driver version.

enum lin_lpuart_stop_bit_count

Values:

enumerator kLPUART_OneStopBit

One stop bit

enumerator kLPUART_TwoStopBit

Two stop bits

enum _lin_lpuart_flags

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start bit

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2

enumerator kLPUART_NoiseErrorInRxDataRegFlag

NOISY bit, sets if noise detected in current data word

enumerator kLPUART_ParityErrorInRxDataRegFlag

PARITY bit, sets if noise detected in current data word

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred

enumerator kLPUART_RxFifoUnderflowFlag
RXUF bit, sets if receive buffer underflow occurred

enum _lin_lpuart_interrupt_enable

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect.

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge.

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty.

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete.

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full.

enumerator kLPUART_IdleLineInterruptEnable
Idle line.

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun.

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag.

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag.

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag.

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow.

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow.

enum _lin_lpuart_status

Values:

enumerator kStatus_LPUART_TxBusy
TX busy

enumerator kStatus_LPUART_RxBusy
RX busy

enumerator kStatus_LPUART_TxIdle
LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle
LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge
TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge
RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun

LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError

LPUART noise error.

enumerator kStatus_LPUART_FramingError

LPUART framing error.

enumerator kStatus_LPUART_ParityError

LPUART parity error.

enum lin_lpuart_bit_count_per_char_t

Values:

enumerator LPUART_8_BITS_PER_CHAR

8-bit data characters

enumerator LPUART_9_BITS_PER_CHAR

9-bit data characters

enumerator LPUART_10_BITS_PER_CHAR

10-bit data characters

typedef enum *lin_lpuart_stop_bit_count* lin_lpuart_stop_bit_count_t

static inline bool LIN_LPUART_GetRxDataPolarity(const LPUART_Type *base)

static inline void LIN_LPUART_SetRxDataPolarity(LPUART_Type *base, bool polarity)

static inline void LIN_LPUART_WriteByte(LPUART_Type *base, uint8_t data)

static inline void LIN_LPUART_ReadByte(const LPUART_Type *base, uint8_t *readData)

status_t LIN_LPUART_CalculateBaudRate(LPUART_Type *base, uint32_t baudRate_Bps,
uint32_t srcClock_Hz, uint32_t *osr, uint16_t *sbr)

Calculates the best osr and sbr value for configured baudrate.

Parameters

- base – LPUART peripheral base address
- baudRate_Bps – user configuration structure of type #lin_user_config_t
- srcClock_Hz – pointer to the LIN_LPUART driver state structure
- osr – pointer to osr value
- sbr – pointer to sbr value

Returns

An error code or lin_status_t

```
void LIN_LPUART_SetBaudRate(LPUART_Type *base, uint32_t *osr, uint16_t *sbr)
```

Configure baudrate according to osr and sbr value.

Parameters

- base – LPUART peripheral base address
- osr – pointer to osr value
- sbr – pointer to sbr value

```
lin_status_t LIN_LPUART_Init(LPUART_Type *base, lin_user_config_t *linUserConfig,
                             lin_state_t *linCurrentState, uint32_t linSourceClockFreq)
```

Initializes an LIN_LPUART instance for LIN Network.

The caller provides memory for the driver state structures during initialization. The user must select the LIN_LPUART clock source in the application to initialize the LIN_LPUART. This function initializes a LPUART instance for operation. This function will initialize the run-time state structure to keep track of the on-going transfers, initialize the module to user defined settings and default settings, set break field length to be 13 bit times minimum, enable the break detect interrupt, Rx complete interrupt, frame error detect interrupt, and enable the LPUART module transmitter and receiver

Parameters

- base – LPUART peripheral base address
- linUserConfig – user configuration structure of type #lin_user_config_t
- linCurrentState – pointer to the LIN_LPUART driver state structure
- linSourceClockFreq – LIN source clock frequency in Hz

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_Deinit(LPUART_Type *base)
```

Shuts down the LIN_LPUART by disabling interrupts and transmitter/receiver.

Parameters

- base – LPUART peripheral base address

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_SendFrameDataBlocking(LPUART_Type *base, const uint8_t *txBuff,
                                               uint8_t txSize, uint32_t timeoutMSec)
```

Sends Frame data out through the LIN_LPUART module using blocking method. This function will calculate the checksum byte and send it with the frame data. Blocking means that the function does not return until the transmission is complete.

Parameters

- base – LPUART peripheral base address
- txBuff – source buffer containing 8-bit data chars to send
- txSize – the number of bytes to send
- timeoutMSec – timeout value in milli seconds

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_SendFrameData(LPUART_Type *base, const uint8_t *txBuff, uint8_t
                                       txSize)
```

Sends frame data out through the LIN_LPUART module using non-blocking method. This enables an a-sync method for transmitting data. Non-blocking means that the function returns immediately. The application has to get the transmit status to know when the transmit is complete. This function will calculate the checksum byte and send it with the frame data.

Parameters

- base – LPUART peripheral base address
- txBuff – source buffer containing 8-bit data chars to send
- txSize – the number of bytes to send

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetTransmitStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking transmission. While sending frame data using non-blocking method, users can use this function to get status of that transmission. This function returns `LIN_TX_BUSY` while sending, or `LIN_TIMEOUT` if timeout has occurred, or return `LIN_SUCCESS` when the transmission is complete. The `bytesRemaining` shows number of bytes that still needed to transmit.

Parameters

- base – LPUART peripheral base address
- bytesRemaining – Number of bytes still needed to transmit

Returns

`lin_status_t LIN_TX_BUSY`, `LIN_SUCCESS` or `LIN_TIMEOUT`

`lin_status_t LIN_LPUART_RecvFrmDataBlocking(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize, uint32_t timeoutMSec)`

Receives frame data through the LIN_LPUART module using blocking method. This function will check the checksum byte. If the checksum is correct, it will receive the frame data. Blocking means that the function does not return until the reception is complete.

Parameters

- base – LPUART peripheral base address
- rxBuff – buffer containing 8-bit received data
- rxSize – the number of bytes to receive
- timeoutMSec – timeout value in milli seconds

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_RecvFrmData(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize)`

Receives frame data through the LIN_LPUART module using non-blocking method. This function will check the checksum byte. If the checksum is correct, it will receive it with the frame data. Non-blocking means that the function returns immediately. The application has to get the receive status to know when the reception is complete.

Parameters

- base – LPUART peripheral base address
- rxBuff – buffer containing 8-bit received data
- rxSize – the number of bytes to receive

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_AbortTransferData(LPUART_Type *base)`

Aborts an on-going non-blocking transmission/reception. While performing a non-blocking transferring data, users can call this function to terminate immediately the transferring.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetReceiveStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking reception. While receiving frame data using non-blocking method, users can use this function to get status of that receiving. This function returns the current event ID, `LIN_RX_BUSY` while receiving and return `LIN_SUCCESS`, or timeout (`LIN_TIMEOUT`) when the reception is complete. The `bytesRemaining` shows number of bytes that still needed to receive.

Parameters

- `base` – LPUART peripheral base address
- `bytesRemaining` – Number of bytes still needed to receive

Returns

`lin_status_t` `LIN_RX_BUSY`, `LIN_TIMEOUT` or `LIN_SUCCESS`

`lin_status_t LIN_LPUART_GoToSleepMode(LPUART_Type *base)`

This function puts current node to sleep mode. This function changes current node state to `LIN_NODE_STATE_SLEEP_MODE`.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GotoIdleState(LPUART_Type *base)`

Puts current LIN node to Idle state. This function changes current node state to `LIN_NODE_STATE_IDLE`.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_SendWakeupSignal(LPUART_Type *base)`

Sends a wakeup signal through the LIN_LPUART interface.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_MasterSendHeader(LPUART_Type *base, uint8_t id)`

Sends frame header out through the LIN_LPUART module using a non-blocking method. This function sends LIN Break field, sync field then the ID with correct parity.

Parameters

- `base` – LPUART peripheral base address
- `id` – Frame Identifier

Returns

An error code or `lin_status_t`

`lin_status_t` LIN_LPUART_EnableIRQ(LPUART_Type *base)

Enables LIN_LPUART hardware interrupts.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t` LIN_LPUART_DisableIRQ(LPUART_Type *base)

Disables LIN_LPUART hardware interrupts.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t` LIN_LPUART_AutoBaudCapture(uint32_t instance)

This function capture bits time to detect break char, calculate baudrate from sync bits and enable transceiver if autobaud successful. This function should only be used in Slave. The timer should be in mode input capture of both rising and falling edges. The timer input capture pin should be externally connected to RXD pin.

Parameters

- instance – LPUART instance

Returns

`lin_status_t`

`void` LIN_LPUART_IRQHandler(LPUART_Type *base)

LIN_LPUART RX TX interrupt handler.

Parameters

- base – LPUART peripheral base address

LIN_LPUART_TRANSMISSION_COMPLETE_TIMEOUT

Max loops to wait for LPUART transmission complete.

When de-initializing the LIN LPUART module, the program shall wait for the previous transmission to complete. This parameter defines how many loops to check completion before return error. If defined as 0, driver will wait forever until completion.

AUTOBAUD_BAUDRATE_TOLERANCE

BIT_RATE_TOLERANCE_UNSYNC

BIT_DURATION_MAX_19200

BIT_DURATION_MIN_19200

BIT_DURATION_MAX_14400

BIT_DURATION_MIN_14400

BIT_DURATION_MAX_9600

BIT_DURATION_MIN_9600

BIT_DURATION_MAX_4800

BIT_DURATION_MIN_4800
 BIT_DURATION_MAX_2400
 BIT_DURATION_MIN_2400
 TWO_BIT_DURATION_MAX_19200
 TWO_BIT_DURATION_MIN_19200
 TWO_BIT_DURATION_MAX_14400
 TWO_BIT_DURATION_MIN_14400
 TWO_BIT_DURATION_MAX_9600
 TWO_BIT_DURATION_MIN_9600
 TWO_BIT_DURATION_MAX_4800
 TWO_BIT_DURATION_MIN_4800
 TWO_BIT_DURATION_MAX_2400
 TWO_BIT_DURATION_MIN_2400
 AUTOBAUD_BREAK_TIME_MIN

2.40 LLWU: Low-Leakage Wakeup Unit Driver

static inline void LLWU_GetVersionId(LLWU_Type *base, llwu_version_id_t *versionId)

Gets the LLWU version ID.

This function gets the LLWU version ID, including the major version number, the minor version number, and the feature specification number.

Parameters

- base – LLWU peripheral base address.
- versionId – A pointer to the version ID structure.

static inline void LLWU_GetParam(LLWU_Type *base, llwu_param_t *param)

Gets the LLWU parameter.

This function gets the LLWU parameter, including a wakeup pin number, a module number, a DMA number, and a pin filter number.

Parameters

- base – LLWU peripheral base address.
- param – A pointer to the LLWU parameter structure.

void LLWU_SetExternalWakeupPinMode(LLWU_Type *base, uint32_t pinIndex, llwu_external_pin_mode_t pinMode)

Sets the external input pin source mode.

This function sets the external input pin source mode that is used as a wake up source.

Parameters

- base – LLWU peripheral base address.
- pinIndex – A pin index to be enabled as an external wakeup source starting from 1.

- `pinMode` – A pin configuration mode defined in the `llwu_external_pin_modes_t`.

`bool LLWU_GetExternalWakeupPinFlag(LLWU_Type *base, uint32_t pinIndex)`

Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

Parameters

- `base` – LLWU peripheral base address.
- `pinIndex` – A pin index, which starts from 1.

Returns

True if the specific pin is a wakeup source.

`void LLWU_ClearExternalWakeupPinFlag(LLWU_Type *base, uint32_t pinIndex)`

Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

Parameters

- `base` – LLWU peripheral base address.
- `pinIndex` – A pin index, which starts from 1.

`static inline void LLWU_EnableInternalModuleInterruptWakup(LLWU_Type *base, uint32_t moduleIndex, bool enable)`

Enables/disables the internal module source.

This function enables/disables the internal module source mode that is used as a wake up source.

Parameters

- `base` – LLWU peripheral base address.
- `moduleIndex` – A module index to be enabled as an internal wakeup source starting from 1.
- `enable` – An enable or a disable setting

`static inline void LLWU_EnableInternalModuleDmaRequestWakup(LLWU_Type *base, uint32_t moduleIndex, bool enable)`

Enables/disables the internal module DMA wakeup source.

This function enables/disables the internal DMA that is used as a wake up source.

Parameters

- `base` – LLWU peripheral base address.
- `moduleIndex` – An internal module index which is used as a DMA request source, starting from 1.
- `enable` – Enable or disable the DMA request source

`void LLWU_SetPinFilterMode(LLWU_Type *base, uint32_t filterIndex, llwu_external_pin_filter_mode_t filterMode)`

Sets the pin filter configuration.

This function sets the pin filter configuration.

Parameters

- `base` – LLWU peripheral base address.

- filterIndex – A pin filter index used to enable/disable the digital filter, starting from 1.
- filterMode – A filter mode configuration

bool LLWU_GetPinFilterFlag(LLWU_Type *base, uint32_t filterIndex)

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – LLWU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

void LLWU_ClearPinFilterFlag(LLWU_Type *base, uint32_t filterIndex)

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – LLWU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

void LLWU_SetResetPinMode(LLWU_Type *base, bool pinEnable, bool pinFilterEnable)

Sets the reset pin mode.

This function determines how the reset pin is used as a low leakage mode exit source.

Parameters

- base – LLWU peripheral base address.
- pinEnable – Enable reset the pin filter
- pinFilterEnable – Specify whether the pin filter is enabled in Low-Leakage power mode.

FSL_LLWU_DRIVER_VERSION

LLWU driver version.

enum _llwu_external_pin_mode

External input pin control modes.

Values:

enumerator kLLWU_ExternalPinDisable

Pin disabled as a wakeup input.

enumerator kLLWU_ExternalPinRisingEdge

Pin enabled with the rising edge detection.

enumerator kLLWU_ExternalPinFallingEdge

Pin enabled with the falling edge detection.

enumerator kLLWU_ExternalPinAnyEdge

Pin enabled with any change detection.

enum _llwu_pin_filter_mode

Digital filter control modes.

Values:

enumerator `kLLWU_PinFilterDisable`
Filter disabled.

enumerator `kLLWU_PinFilterRisingEdge`
Filter positive edge detection.

enumerator `kLLWU_PinFilterFallingEdge`
Filter negative edge detection.

enumerator `kLLWU_PinFilterAnyEdge`
Filter any edge detection.

typedef enum `_llwu_external_pin_mode` `llwu_external_pin_mode_t`
External input pin control modes.

typedef enum `_llwu_pin_filter_mode` `llwu_pin_filter_mode_t`
Digital filter control modes.

typedef struct `_llwu_version_id` `llwu_version_id_t`
IP version ID definition.

typedef struct `_llwu_param` `llwu_param_t`
IP parameter definition.

typedef struct `_llwu_external_pin_filter_mode` `llwu_external_pin_filter_mode_t`
An external input pin filter control structure.

`LLWU_REG_VAL(x)`

struct `_llwu_version_id`
#include <fsl_llwu.h> IP version ID definition.

Public Members

`uint16_t` `feature`
A feature specification number.

`uint8_t` `minor`
The minor version number.

`uint8_t` `major`
The major version number.

struct `_llwu_param`
#include <fsl_llwu.h> IP parameter definition.

Public Members

`uint8_t` `filters`
A number of the pin filter.

`uint8_t` `dmas`
A number of the wakeup DMA.

`uint8_t` `modules`
A number of the wakeup module.

`uint8_t` `pins`
A number of the wake up pin.

struct `_llwu_external_pin_filter_mode`
#include <fsl_llwu.h> An external input pin filter control structure.

Public Members

uint32_t pinIndex

A pin number

llwu_pin_filter_mode_t filterMode

Filter mode

2.41 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

enum _lpadc_status_flags

Define hardware flags of the module.

Values:

enumerator kLPADC_ResultFIFO0OverflowFlag

Indicates that more data has been written to the Result FIFO 0 than it can hold.

enumerator kLPADC_ResultFIFO0ReadyFlag

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator kLPADC_TriggerExceptionFlag

Indicates that a trigger exception event has occurred.

enumerator kLPADC_TriggerCompletionFlag

Indicates that a trigger completion event has occurred.

enumerator kLPADC_CalibrationReadyFlag

Indicates that the calibration process is done.

enumerator kLPADC_ActiveFlag

Indicates that the ADC is in active state.

enumerator kLPADC_ResultFIFOOverflowFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowFlag as instead.

enumerator kLPADC_ResultFIFOReadyFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0ReadyFlag as instead.

enum _lpadc_interrupt_enable

Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_ResultFIFO0OverflowInterruptEnable

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator kLPADC_FIFO0WatermarkInterruptEnable

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator kLPADC_ResultFIFOOverflowInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowInterruptEnable as instead.

enumerator kLPADC_FIFOWatermarkInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_FIFO0WatermarkInterruptEnable as instead.

enumerator kLPADC_TriggerExceptionInterruptEnable

Configures ADC to generate trigger exception interrupt.

enumerator kLPADC_Trigger0CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kLPADC_Trigger1CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kLPADC_Trigger2CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kLPADC_Trigger3CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 3 completion.

enumerator kLPADC_Trigger4CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 4 completion.

enumerator kLPADC_Trigger5CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 5 completion.

enumerator kLPADC_Trigger6CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 6 completion.

enumerator kLPADC_Trigger7CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 7 completion.

enumerator kLPADC_Trigger8CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 8 completion.

enumerator kLPADC_Trigger9CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 9 completion.

enumerator kLPADC_Trigger10CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 10 completion.

enumerator kLPADC_Trigger11CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 11 completion.

enumerator kLPADC_Trigger12CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 12 completion.

enumerator kLPADC_Trigger13CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 13 completion.

enumerator kLPADC_Trigger14CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 14 completion.

enumerator kLPADC_Trigger15CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 15 completion.

enum _lpadc_trigger_status_flags

The enumerator of lpadc trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_Trigger0InterruptedFlag
Trigger 0 is interrupted by a high priority exception.

enumerator kLPADC_Trigger1InterruptedFlag
Trigger 1 is interrupted by a high priority exception.

enumerator kLPADC_Trigger2InterruptedFlag
Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag
Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag
Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag
Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag
Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag
Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag
Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag
Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag
Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag
Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag
Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag
Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag
Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag
Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag
Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag
Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag
Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag
Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag
Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag

Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag

Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag

Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag

Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag

Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag

Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag

Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag

Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag

Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag

Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag

Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum _lpadc_sample_scale_mode

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC_SamplePartScale

Use divided input voltage signal. (For scale select, please refer to the reference manual).

enumerator kLPADC_SampleFullScale

Full scale (Factor of 1).

enum _lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC_SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC_SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC_SampleChannelDiffBothSideAB
Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDiffBothSideBA
Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC_SampleChannelDiffBothSide
Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDualSingleEndBothSide
Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum _lpadc_hardware_average_mode
Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC_HardwareAverageCount1
Single conversion.

enumerator kLPADC_HardwareAverageCount2
2 conversions averaged.

enumerator kLPADC_HardwareAverageCount4
4 conversions averaged.

enumerator kLPADC_HardwareAverageCount8
8 conversions averaged.

enumerator kLPADC_HardwareAverageCount16
16 conversions averaged.

enumerator kLPADC_HardwareAverageCount32
32 conversions averaged.

enumerator kLPADC_HardwareAverageCount64
64 conversions averaged.

enumerator kLPADC_HardwareAverageCount128
128 conversions averaged.

enum _lpadc_sample_time_mode
Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC_SampleTimeADCK3
3 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK5
5 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK7
7 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK11
11 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK19
19 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK35
35 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK67
69 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK131
131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC_HardwareCompareDisabled
Compare disabled.

enumerator kLPADC_HardwareCompareStoreOnTrue
Compare enabled. Store on true.

enumerator kLPADC_HardwareCompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum _lpadc_conversion_resolution_mode

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

Values:

enumerator kLPADC_ConversionResolutionStandard
Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator kLPADC_ConversionResolutionHigh
High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum _lpadc_conversion_average_mode

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

Values:

enumerator kLPADC_ConversionAverage1
Single conversion.

enumerator kLPADC_ConversionAverage2
2 conversions averaged.

enumerator kLPADC_ConversionAverage4
4 conversions averaged.

enumerator kLPADC_ConversionAverage8
8 conversions averaged.

enumerator kLPADC_ConversionAverage16
16 conversions averaged.

enumerator kLPADC_ConversionAverage32
32 conversions averaged.

enumerator kLPADC_ConversionAverage64
64 conversions averaged.

enumerator kLPADC_ConversionAverage128
128 conversions averaged.

enumerator kLPADC_ConversionAverageMax

enum _lpadc_reference_voltage_mode

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

Values:

enumerator kLPADC_ReferenceVoltageAlt1
Option 1 setting.

enumerator kLPADC_ReferenceVoltageAlt2
Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3
Option 3 setting.

enum _lpadc_power_level_mode

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1
Lowest power setting.

enumerator kLPADC_PowerLevelAlt2
Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3

...

enumerator kLPADC_PowerLevelAlt4
Highest power setting.

enum `_lpadc_offset_calibration_mode`

Define enumeration of offset calibration mode.

Values:

enumerator `kLPADC_OffsetCalibration12bitMode`
12 bit offset calibration mode.

enumerator `kLPADC_OffsetCalibration16bitMode`
16 bit offset calibration mode.

enum `_lpadc_trigger_priority_policy`

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: `kLPADC_TriggerPriorityPreemptSubsequently` is not available on some devices, mainly depends on the size of `TPRCTRL` field in `CFG` register.

Values:

enumerator `kLPADC_ConvPreemptImmediatelyNotAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator `kLPADC_ConvPreemptSoftlyNotAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator `kLPADC_ConvPreemptImmediatelyAutoRestarted`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kLPADC_ConvPreemptSoftlyAutoRestarted`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kLPADC_ConvPreemptImmediatelyAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator `kLPADC_ConvPreemptSoftlyAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator `kLPADC_TriggerPriorityPreemptImmediately`

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator `kLPADC_TriggerPriorityPreemptSoftly`

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator `kLPADC_TriggerPriorityExceptionDisabled`

High priority trigger exception disabled.

typedef enum `_lpadc_sample_scale_mode` `lpadc_sample_scale_mode_t`

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum `_lpadc_sample_channel_mode` `lpadc_sample_channel_mode_t`

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

typedef enum `_lpadc_hardware_average_mode` `lpadc_hardware_average_mode_t`

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

typedef enum `_lpadc_sample_time_mode` `lpadc_sample_time_mode_t`

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

typedef enum `_lpadc_hardware_compare_mode` `lpadc_hardware_compare_mode_t`

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum `_lpadc_conversion_resolution_mode` `lpadc_conversion_resolution_mode_t`

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to `lpadc_sample_channel_mode_t`

typedef enum *lpadc_conversion_average_mode* lpadc_conversion_average_mode_t

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

typedef enum *lpadc_reference_voltage_mode* lpadc_reference_voltage_source_t

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

typedef enum *lpadc_power_level_mode* lpadc_power_level_mode_t

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

typedef enum *lpadc_offset_calibration_mode* lpadc_offset_calibration_mode_t

Define enumeration of offset calibration mode.

typedef enum *lpadc_trigger_priority_policy* lpadc_trigger_priority_policy_t

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

typedef struct *lpadc_calibration_value* lpadc_calibration_value_t

A structure of calibration value.

LPADC_CONVERSION_COMPLETE_TIMEOUT

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

LPADC_CALIBRATION_READY_TIMEOUT

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

LPADC_GAIN_CAL_READY_TIMEOUT

Max loops to wait for LPADC gain calibration GAIN_CAL ready.

Before doing calibration, driver will wait for the gain calibration GAIN_CAL ready. This parameter defines how many loops to check the gain calibration GAIN_CAL ready. If defined as 0, driver will wait forever until ready.

ADC_OFSTRIM_OFSTRIM_MAX

ADC_OFSTRIM_OFSTRIM_SIGN

```
LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)
```

Define the MACRO function to get command status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

```
LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)
```

Define the MACRO function to get trigger status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

```
void LPADC_Init(ADC_Type *base, const lpadc_config_t *config)
```

Initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.
- config – Pointer to configuration structure. See “lpadc_config_t”.

```
void LPADC_GetDefaultConfig(lpadc_config_t *config)
```

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode      = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay          = 0x80;
config->referenceVoltageSource = kLPADC_ReferenceVoltageAlt1;
config->powerLevelMode        = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy  = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause       = false;
config->convPauseDelay        = 0U;
config->FIFOWatermark         = 0U;
```

Parameters

- config – Pointer to configuration structure.

```
void LPADC_Deinit(ADC_Type *base)
```

De-initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.

```
static inline void LPADC_Enable(ADC_Type *base, bool enable)
```

Switch on/off the LPADC module.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the module.

```
static inline void LPADC_DoResetFIFO(ADC_Type *base)
```

Do reset the conversion FIFO.

Parameters

- base – LPADC peripheral base address.

```
static inline void LPADC_DoResetConfig(ADC_Type *base)
```

Do reset the module’s configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- base – LPADC peripheral base address.

static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)

Get status flags.

Parameters

- base – LPADC peripheral base address.

Returns

status flags' mask. See to `_lpadc_status_flags`.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)

Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to `_lpadc_status_flags`.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns

The OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)

Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

```
static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)
```

Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns

The count of result kept in conversion FIFO.

```
bool LPADC_GetConvResult(ADC_Type *base, lpadc_conv_result_t *result)
```

Get the result in conversion FIFO.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns

Status whether FIFO entry is valid.

```
void LPADC_GetConvResultBlocking(ADC_Type *base, lpadc_conv_result_t *result)
```

Get the result in conversion FIFO using blocking method.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

```
void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const  
lpadc_conv_trigger_config_t *config)
```

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- config – Pointer to configuration structure. See to `lpadc_conv_trigger_config_t`.

```
void LPADC_GetDefaultConvTriggerConfig(lpadc_conv_trigger_config_t *config)
```

Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId    = 0U;  
config->delayPower         = 0U;  
config->priority           = 0U;  
config->channelAFIFOSelect = 0U;  
config->channelBFIFOSelect = 0U;  
config->enableHardwareTrigger = false;
```

Parameters

- config – Pointer to configuration structure.

```
static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)
    Do software trigger to conversion command.
```

Parameters

- base – LPADC peripheral base address.
- triggerIdMask – Mask value for software trigger indexes, which count from zero.

```
void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const
    lpadc_conv_command_config_t *config)
```

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.
- commandId – ID for command in command buffer. Typically, the available value range is 1 - 15.
- config – Pointer to configuration structure. See to `lpadc_conv_command_config_t`.

```
void LPADC_GetDefaultConvCommandConfig(lpadc_conv_command_config_t *config)
```

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode      = kLPADC_SampleFullScale;
config->channelBScaleMode    = kLPADC_SampleFullScale;
config->sampleChannelMode    = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber        = 0U;
config->channelBNumber       = 0U;
config->chainedNextCommandNumber = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount            = 0U;
config->hardwareAverageMode   = kLPADC_HardwareAverageCount1;
config->sampleTimeMode       = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode   = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh = 0U;
config->hardwareCompareValueLow  = 0U;
config->conversionResolutionMode = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger     = false;
config->enableChannelB       = false;
```

Parameters

- config – Pointer to configuration structure.

```
void LPADC_EnableCalibration(ADC_Type *base, bool enable)
```

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6-bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

```
static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)
```

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- base – LPADC peripheral base address.
- value – Setting offset value.

```
status_t LPADC_DoAutoCalibration(ADC_Type *base)
```

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional API including:

- LPADC_EnableCalibration(...)
- LPADC_SetOffsetValue(...)
- LPADC_SetConvCommandConfig(...)
- LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

```
static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)
```

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- base – LPADC peripheral base address.
- value – Offset trim value, is a 10-bit signed value between -512 and 511.

```
static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)
```

Get trim value of offset.

Parameters

- base – LPADC peripheral base address.
- pValue – Pointer to the variable in type of int16_t to store offset value.

static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)

Enable the offset calibration function.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base,
lpadc_offset_calibration_mode_t mode)

Set offset calibration mode.

Parameters

- base – LPADC peripheral base address.
- mode – set offset calibration mode.see to lpadc_offset_calibration_mode_t .

status_t LPADC_DoOffsetCalibration(ADC_Type *base)

Do offset calibration.

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_PrepareAutoCalibration(ADC_Type *base)

Prepare auto calibration, LPADC_FinishAutoCalibration has to be called before using the LPADC. LPADC_DoAutoCalibration has been split in two API to avoid to be stuck too long in the function.

Parameters

- base – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, lpadc_calibration_value_t
*ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to `lpadc_calibration_value_t` structure, this memory block should be always powered on even in low power modes.

```
status_t LPADC_SetCalibrationValue(ADC_Type *base, const lpadc_calibration_value_t
                                *ptrCalibrationValue)
```

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to `lpadc_calibration_value_t` structure which contains ADC's calibration value.

Return values

- `kStatus_Success` – Successfully configured.
- `kStatus_Timeout` – Timeout occurs while waiting completion.

FSL_LPADC_DRIVER_VERSION
LPADC driver version 2.9.5.

```
struct lpadc_config_t
```

```
#include <fsl_lpadc.h> LPADC global configuration.
```

This structure would used to keep the settings for initialization.

Public Members

```
bool enableInternalClock
```

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

```
bool enableVref1LowVoltage
```

If voltage reference option1 input is below 1.8V, it should be “true”. If voltage reference option1 input is above 1.8V, it should be “false”.

```
bool enableInDozeMode
```

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

```
lpadc_conversion_average_mode_t conversionAverageMode
```

Auto-Calibration Averages.

```
bool enableAnalogPreliminary
```

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

```
uint32_t powerUpDelay
```

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits

to stabilize. The startup delay count of (powerUpDelay * 4) ADCK cycles must result in a longer delay than the analog startup time.

lpadc_reference_voltage_source_t referenceVoltageSource

Selects the voltage reference high used for conversions.

lpadc_power_level_mode_t powerLevelMode

Power Configuration Selection.

lpadc_trigger_priority_policy_t triggerPriorityPolicy

Control how higher priority triggers are handled, see to *lpadc_trigger_priority_policy_t*.

bool enableConvPause

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

uint32_t convPauseDelay

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (convPauseDelay*4) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

uint32_t FIFOWatermark

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

struct lpadc_conv_command_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion command.

Public Members

lpadc_sample_scale_mode_t sampleScaleMode

Sample scale mode.

lpadc_sample_scale_mode_t channelBScaleMode

Alternate channel B Scale mode.

lpadc_sample_channel_mode_t sampleChannelMode

Channel sample mode.

uint32_t channelNumber

Channel number; select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number; select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the “loopCount” field selects the number of times the selected channel is converted consecutively; when enabled, the “loopCount” field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct lpadc_conv_trigger_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is $2^{\text{delayPower}}$ ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. The software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource

Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex

Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource

Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue

Data result.

struct _lpadc_calibration_value

#include <fsl_lpadc.h> A structure of calibration value.

2.42 LPCMP: Low Power Analog Comparator Driver

void LPCMP_Init(LPCMP_Type *base, const *lpcmp_config_t* *config)

Initialize the LPCMP.

This function initializes the LPCMP module. The operations included are:

- Enabling the clock for LPCMP module.
- Configuring the comparator.
- Enabling the LPCMP module. Note: For some devices, multiple LPCMP instance share the same clock gate. In this case, to enable the clock for any instance enables all the LPCMPs. Check the chip reference manual for the clock assignment of the LPCMP.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_config_t” structure.

void LPCMP_Deinit(LPCMP_Type *base)

De-initializes the LPCMP module.

This function de-initializes the LPCMP module. The operations included are:

- Disabling the LPCMP module.
- Disabling the clock for LPCMP module.

This function disables the clock for the LPCMP. Note: For some devices, multiple LPCMP instance shares the same clock gate. In this case, before disabling the clock for the LPCMP, ensure that all the LPCMP instances are not used.

Parameters

- base – LPCMP peripheral base address.

void LPCMP_GetDefaultConfig(*lpcmp_config_t* *config)

Gets an available pre-defined settings for the comparator’s configuration.

This function initializes the comparator configuration structure to these default values:

```
config->enableStopMode    = false;
config->enableOutputPin   = false;
config->enableCmpToDacLink = false;
config->useUnfilteredOutput = false;
config->enableInvertOutput = false;
config->hysteresisMode     = kLPCMP_HysteresisLevel0;
config->powerMode          = kLPCMP_LowSpeedPowerMode;
config->functionalSourceClock = kLPCMP_FunctionalClockSource0;
```

(continues on next page)

(continued from previous page)

```

config->plusInputSrc    = kLPCMP_PlusInputSrcMux;
config->minusInputSrc   = kLPCMP_MinusInputSrcMux;

```

Parameters

- config – Pointer to “lpcmp_config_t” structure.

```
static inline void LPCMP_Enable(LPCMP_Type *base, bool enable)
```

Enable/Disable LPCMP module.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable the module, and “false” means disable the module.

```
void LPCMP_SetInputChannels(LPCMP_Type *base, uint32_t positiveChannel, uint32_t
                             negativeChannel)
```

Select the input channels for LPCMP. This function determines which input is selected for the negative and positive mux.

Parameters

- base – LPCMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

```
static inline void LPCMP_EnableDMA(LPCMP_Type *base, bool enable)
```

Enables/disables the DMA request for rising/falling events. Normally, the LPCMP generates a CPU interrupt if there is a rising/falling event. When DMA support is enabled and the rising/falling interrupt is enabled, the rising/falling event forces a DMA transfer request rather than a CPU interrupt instead.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable DMA support, and “false” means disable DMA support.

```
void LPCMP_SetFilterConfig(LPCMP_Type *base, const lpcmp_filter_config_t *config)
```

Configures the filter.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_filter_config_t” structure.

```
void LPCMP_SetDACConfig(LPCMP_Type *base, const lpcmp_dac_config_t *config)
```

Configure the internal DAC module.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_dac_config_t” structure. If config is “NULL”, disable internal DAC.

```
static inline void LPCMP_EnableInterrupts(LPCMP_Type *base, uint32_t mask)
```

Enable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

```
static inline void LPCMP_DisableInterrupts(LPCMP_Type *base, uint32_t mask)
```

Disable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

```
static inline uint32_t LPCMP_GetStatusFlags(LPCMP_Type *base)
```

Get the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.

Returns

Mask value for the asserted flags. See “_lpcmp_status_flags”.

```
static inline void LPCMP_ClearStatusFlags(LPCMP_Type *base, uint32_t mask)
```

Clear the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for the flags. See “_lpcmp_status_flags”.

```
static inline void LPCMP_EnableWindowMode(LPCMP_Type *base, bool enable)
```

Enable/Disable window mode. When any windowed mode is active, COUTA is clocked by the bus clock whenever WINDOW = 1. The last latched value is held when WINDOW = 0. The optionally inverted comparator output COUT_RAW is sampled on every bus clock when WINDOW=1 to generate COUTA.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable window mode, and “false” means disable window mode.

```
void LPCMP_SetWindowControl(LPCMP_Type *base, const lpcmp_window_control_config_t *config)
```

Configure the window control, users can use this API to implement operations on the window, such as inverting the window signal, setting the window closing event (only valid in windowing mode), and setting the COUTA signal after the window is closed (only valid in windowing mode).

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_window_control_config_t” structure.

```
void LPCMP_SetRoundRobinConfig(LPCMP_Type *base, const lpcmp_roundrobin_config_t *config)
```

Configure the roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_roundrobin_config_t” structure.

static inline void LPCMP_EnableRoundRobinMode(LPCMP_Type *base, bool enable)
Enable/Disable roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin mode, and “false” means disable roundrobin mode.

void LPCMP_SetRoundRobinInternalTimer(LPCMP_Type *base, uint32_t value)
brief Configure the roundrobin internal timer reload value.

param base LPCMP peripheral base address. param value RoundRobin internal timer reload value, allowed range:0x0UL-0xFFFFFFFFUL.

static inline void LPCMP_EnableRoundRobinInternalTimer(LPCMP_Type *base, bool enable)
Enable/Disable roundrobin internal timer, note that this function is only valid when using the internal trigger source.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin internal timer, and “false” means disable roundrobin internal timer.

static inline void LPCMP_SetPreSetValue(LPCMP_Type *base, uint8_t mask)

Set preset value for all channels, users can set all channels’ preset vaule through this API, for example, if the mask set to 0x03U means channel0 and channel2’s preset value set to 1U and other channels’ preset value set to 0U.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetComparisonResult(LPCMP_Type *base)

Get comparison results for all channels, users can get all channels’ comparison results through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels’ comparison result.

static inline void LPCMP_ClearInputChangedFlags(LPCMP_Type *base, uint8_t mask)

Clear input changed flags for single channel or multiple channels, users can clear input changed flag of a single channel or multiple channels through this API, for example, if the mask set to 0x03U means clear channel0 and channel2’s input changed flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetInputChangedFlags(LPCMP_Type *base)

Get input changed flags for all channels, Users can get all channels’ input changed flags through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' changed flag.

FSL_LPCMP_DRIVER_VERSION

LPCMP driver version 2.3.2.

enum _lpcmp_status_flags

LPCMP status flags mask.

Values:

enumerator kLPCMP_OutputRisingEventFlag

Rising-edge on the comparison output has occurred.

enumerator kLPCMP_OutputFallingEventFlag

Falling-edge on the comparison output has occurred.

enumerator kLPCMP_OutputRoundRobinEventFlag

Detects when any channel's last comparison result is different from the pre-set value in trigger mode.

enumerator kLPCMP_OutputAssertEventFlag

Return the current value of the analog comparator output. The flag does not support W1C.

enum _lpcmp_interrupt_enable

LPCMP interrupt enable/disable mask.

Values:

enumerator kLPCMP_OutputRisingInterruptEnable

Comparator interrupt enable rising.

enumerator kLPCMP_OutputFallingInterruptEnable

Comparator interrupt enable falling.

enumerator kLPCMP_RoundRobinInterruptEnable

Comparator round robin mode interrupt occurred when the comparison result changes for a given channel.

enum _lpcmp_hysteresis_mode

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

Values:

enumerator kLPCMP_HysteresisLevel0

The hard block output has level 0 hysteresis internally.

enumerator kLPCMP_HysteresisLevel1

The hard block output has level 1 hysteresis internally.

enumerator kLPCMP_HysteresisLevel2

The hard block output has level 2 hysteresis internally.

enumerator kLPCMP_HysteresisLevel3

The hard block output has level 3 hysteresis internally.

enum _lpcmp_power_mode

LPCMP nano mode.

Values:

enumerator kLPCMP_LowSpeedPowerMode
Low speed comparison mode is selected.

enumerator kLPCMP_HighSpeedPowerMode
High speed comparison mode is selected.

enumerator kLPCMP_NanoPowerMode
Nano power comparator is enabled.

enum _lpcmp_dac_reference_voltage_source
Internal DAC reference voltage source.

Values:

enumerator kLPCMP_VrefSourceVin1
vrefh_int is selected as resistor ladder network supply reference Vin.

enumerator kLPCMP_VrefSourceVin2
vrefh_ext is selected as resistor ladder network supply reference Vin.

enum _lpcmp_functional_source_clock
LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

Values:

enumerator kLPCMP_FunctionalClockSource0
Select functional mode clock source0.

enumerator kLPCMP_FunctionalClockSource1
Select functional mode clock source1.

enumerator kLPCMP_FunctionalClockSource2
Select functional mode clock source2.

enumerator kLPCMP_FunctionalClockSource3
Select functional mode clock source3.

enum _lpcmp_couta_signal
Set the COUTA signal value when the window is closed.

Values:

enumerator kLPCMP_COUTASignalNoSet
NO set the COUTA signal value when the window is closed.

enumerator kLPCMP_COUTASignalLow
Set COUTA signal low(0) when the window is closed.

enumerator kLPCMP_COUTASignalHigh
Set COUTA signal high(1) when the window is closed.

enum _lpcmp_close_window_event
Set COUT event, which can close the active window in window mode.

Values:

enumerator kLPCMP_CloseWindowEventNoSet
No Set COUT event, which can close the active window in window mode.

enumerator kLPCMP_CloseWindowEventRisingEdge
Set rising edge COUT signal as COUT event.

enumerator `kLPCMP_CloseWindowEventFallingEdge`
Set falling edge COUT signal as COUT event.

enumerator `kLPCMP_CloseWindowEventBothEdge`
Set both rising and falling edge COUT signal as COUT event.

enum `_lpcmp_roundrobin_fixedmuxport`
LPCMP round robin mode fixed mux port.

Values:

enumerator `kLPCMP_FixedPlusMuxPort`
Fixed plus mux port.

enumerator `kLPCMP_FixedMinusMuxPort`
Fixed minus mux port.

enum `_lpcmp_roundrobin_clock_source`
LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

Values:

enumerator `kLPCMP_RoundRobinClockSource0`
Select roundrobin mode clock source0.

enumerator `kLPCMP_RoundRobinClockSource1`
Select roundrobin mode clock source1.

enumerator `kLPCMP_RoundRobinClockSource2`
Select roundrobin mode clock source2.

enumerator `kLPCMP_RoundRobinClockSource3`
Select roundrobin mode clock source3.

enum `_lpcmp_roundrobin_trigger_source`
LPCMP round robin mode trigger source.

Values:

enumerator `kLPCMP_TriggerSourceExternally`
Select external trigger source.

enumerator `kLPCMP_TriggerSourceInternally`
Select internal trigger source.

typedef enum `_lpcmp_hysteresis_mode` `lpcmp_hysteresis_mode_t`
LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

typedef enum `_lpcmp_power_mode` `lpcmp_power_mode_t`
LPCMP nano mode.

typedef enum `_lpcmp_dac_reference_voltage_source` `lpcmp_dac_reference_voltage_source_t`
Internal DAC reference voltage source.

typedef enum `_lpcmp_functional_source_clock` `lpcmp_functional_source_clock_t`
LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

```
typedef enum _lpcmp_couta_signal lpcmp_couta_signal_t
```

Set the COUTA signal value when the window is closed.

```
typedef enum _lpcmp_close_window_event lpcmp_close_window_event_t
```

Set COUT event, which can close the active window in window mode.

```
typedef enum _lpcmp_roundrobin_fixedmuxport lpcmp_roundrobin_fixedmuxport_t
```

LPCMP round robin mode fixed mux port.

```
typedef enum _lpcmp_roundrobin_clock_source lpcmp_roundrobin_clock_source_t
```

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

```
typedef enum _lpcmp_roundrobin_trigger_source lpcmp_roundrobin_trigger_source_t
```

LPCMP round robin mode trigger source.

```
typedef struct _lpcmp_filter_config lpcmp_filter_config_t
```

Configure the filter.

```
typedef struct _lpcmp_dac_config lpcmp_dac_config_t
```

configure the internal DAC.

```
typedef struct _lpcmp_config lpcmp_config_t
```

Configures the comparator.

```
typedef struct _lpcmp_window_control_config lpcmp_window_control_config_t
```

Configure the window mode control.

```
typedef struct _lpcmp_roundrobin_config lpcmp_roundrobin_config_t
```

Configure the round robin mode.

```
LPCMP_CCR1_COUTA_CFG_MASK
```

```
LPCMP_CCR1_COUTA_CFG_SHIFT
```

```
LPCMP_CCR1_COUTA_CFG(x)
```

```
LPCMP_CCR1_EVT_SEL_CFG_MASK
```

```
LPCMP_CCR1_EVT_SEL_CFG_SHIFT
```

```
LPCMP_CCR1_EVT_SEL_CFG(x)
```

```
struct _lpcmp_filter_config
```

#include <fsl_lpcmp.h> Configure the filter.

Public Members

```
bool enableSample
```

Decide whether to use the external SAMPLE as a sampling clock input.

```
uint8_t filterSampleCount
```

Filter Sample Count. Available range is 1-7; 0 disables the filter.

```
uint8_t filterSamplePeriod
```

Filter Sample Period. The divider to the bus clock. Available range is 0-255. The sampling clock must be at least 4 times slower than the system clock to the comparator. So if enableSample is “false”, filterSamplePeriod should be set greater than 4.

```
struct _lpcmp_dac_config
```

#include <fsl_lpcmp.h> configure the internal DAC.

Public Members

`bool enableLowPowerMode`

Decide whether to enable DAC low power mode.

`lpcmp_dac_reference_voltage_source_t referenceVoltageSource`

Internal DAC supply voltage reference source.

`uint8_t DACValue`

Value for the DAC Output Voltage. Different devices has different available range, for specific values, please refer to the reference manual.

`struct _lpcmp_config`

`#include <fsl_lpcmp.h>` Configures the comparator.

Public Members

`bool enableStopMode`

Decide whether to enable the comparator when in STOP modes.

`bool enableOutputPin`

Decide whether to enable the comparator is available in selected pin.

`bool useUnfilteredOutput`

Decide whether to use unfiltered output.

`bool enableInvertOutput`

Decide whether to inverts the comparator output.

`lpcmp_hysteresis_mode_t hysteresisMode`

LPCMP hysteresis mode.

`lpcmp_power_mode_t powerMode`

LPCMP power mode.

`lpcmp_functional_source_clock_t functionalSourceClock`

Select LPCMP functional mode clock source.

`struct _lpcmp_window_control_config`

`#include <fsl_lpcmp.h>` Configure the window mode control.

Public Members

`bool enableInvertWindowSignal`

True: enable invert window signal, False: disable invert window signal.

`lpcmp_couta_signal_t COUTASignal`

Decide whether to define the COUTA signal value when the window is closed.

`lpcmp_close_window_event_t closeWindowEvent`

Decide whether to select COUT event signal edge defines a COUT event to close window.

`struct _lpcmp_roundrobin_config`

`#include <fsl_lpcmp.h>` Configure the round robin mode.

Public Members

`uint8_t` `initDelayModules`

Comparator and DAC initialization delay modulus, See Reference Manual and DataSheet for specific value.

`uint8_t` `sampleClockNumbers`

Specify the number of the round robin clock cycles(0~3) to wait after scanning the active channel before sampling the channel's comparison result.

`uint8_t` `channelSampleNumbers`

Specify the number of samples for one channel, note that `channelSampleNumbers` must not smaller than `sampleTimeThreshhold`.

`uint8_t` `sampleTimeThreshhold`

Specify that for one channel, when (`sampleTimeThreshhold + 1`) sample results are "1",the final result is "1", otherwise the final result is "0", note that the `sampleTimeThreshhold` must not be larger than `channelSampleNumbers`.

`lpcmp_roundrobin_clock_source_t` `roundrobinClockSource`

Decide which clock source to choose in round robin mode.

`lpcmp_roundrobin_trigger_source_t` `roundrobinTriggerSource`

Decide which trigger source to choose in round robin mode.

`lpcmp_roundrobin_fixedmuxport_t` `fixedMuxPort`

Decide which mux port to choose as fixed channel in round robin mode.

`uint8_t` `fixedChannel`

Indicate which channel of the fixed mux port is used in round robin mode.

`uint8_t` `checkerChannelMask`

Indicate which channel of the non-fixed mux port to check its voltage value in round robin mode, for example, if `checkerChannelMask` set to `0x11U` means select channel 0 and channel 4 as checker channel.

2.43 LPI2C: Low Power Inter-Integrated Circuit Driver

`void` `LPI2C_DriverIRQHandler`(`uint32_t` `instance`)

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- `instance` – LPI2C instance.

`FSL_LPI2C_DRIVER_VERSION`

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator `kStatus_LPI2C_Busy`

The master is already performing a transfer.

enumerator `kStatus_LPI2C_Idle`

The slave driver is idle.

enumerator `kStatus_LPI2C_Nak`

The slave device sent a NAK in response to a byte.

enumerator `kStatus_LPI2C_FifoError`

FIFO under run or overrun.

enumerator `kStatus_LPI2C_BitError`

Transferred bit was not seen on the bus.

enumerator `kStatus_LPI2C_ArbitrationLost`

Arbitration lost error.

enumerator `kStatus_LPI2C_PinLowTimeout`

SCL or SDA were held low longer than the timeout.

enumerator `kStatus_LPI2C_NoTransferInProgress`

Attempt to abort a transfer when one is not in progress.

enumerator `kStatus_LPI2C_DmaRequestFail`

DMA request failed.

enumerator `kStatus_LPI2C_Timeout`

Timeout polling status flags.

`IRQn_Type` `const kLpi2cIrqs[]`

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

`lpi2c_master_isr_t s_lpi2cMasterIsr`

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

`void *s_lpi2cMasterHandle[]`

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

`uint32_t` `LPI2C_GetInstance(LPI2C_Type *base)`

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

`I2C_RETRY_TIMES`

Retry times for waiting flag.

2.44 LPI2C Master Driver

`void` `LPI2C_MasterGetDefaultConfig(lpi2c_master_config_t *masterConfig)`

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```

masterConfig->enableMaster      = true;
masterConfig->debugEnable       = false;
masterConfig->ignoreAck         = false;
masterConfig->pinConfig         = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz       = 100000U;
masterConfig->busIdleTimeout_ns = 0;
masterConfig->pinLowTimeout_ns  = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable = false;
masterConfig->hostRequest.source  = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity = kLPI2C_HostRequestPinActiveHigh;

```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with `LPI2C_MasterInit()`.

Parameters

- `masterConfig` – **[out]** User provided configuration structure for default values. Refer to `lpi2c_master_config_t`.

```
void LPI2C_MasterInit(LPI2C_Type *base, const lpi2c_master_config_t *masterConfig, uint32_t
    sourceClock_Hz)
```

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- `base` – The LPI2C peripheral base address.
- `masterConfig` – User provided peripheral configuration. Use `LPI2C_MasterGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

```
void LPI2C_MasterDeinit(LPI2C_Type *base)
```

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

```
void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const lpi2c_data_match_config_t
    *matchConfig)
```

Configures LPI2C master data match feature.

Parameters

- `base` – The LPI2C peripheral base address.
- `matchConfig` – Settings for the data match feature.

```
status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)
```

Convert provided flags to status code, and clear any errors if present.

Parameters

- `base` – The LPI2C peripheral base address.
- `status` – Current status flags value that will be checked.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_PinLowTimeout` –
- `kStatus_LPI2C_ArbitrationLost` –
- `kStatus_LPI2C_Nak` –
- `kStatus_LPI2C_FifoError` –

`status_t` `LPI2C_CheckForBusyBus(LPI2C_Type *base)`

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_Busy` –

`static inline void` `LPI2C_MasterReset(LPI2C_Type *base)`

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

`static inline void` `LPI2C_MasterEnable(LPI2C_Type *base, bool enable)`

Enables or disables the LPI2C module as master.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as master.

`static inline uint32_t` `LPI2C_MasterGetStatusFlags(LPI2C_Type *base)`

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_master_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

Attempts to clear other flags has no effect.

See also:

`_lpi2c_master_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_master_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_MasterGetStatusFlags()`.

```
static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to enable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Disables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to disable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)
```

Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)
```

Enables or disables LPI2C master DMA requests.

Parameters

- *base* – The LPI2C peripheral base address.
- *enableTx* – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- *enableRx* – Enable flag for receive DMA request. Pass true for enable, false for disable.

```
static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- *base* – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

```
static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master receive data register address for DMA transfer.

Parameters

- *base* – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

```
static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)
```

Sets the watermarks for LPI2C master FIFOs.

Parameters

- *base* – The LPI2C peripheral base address.
- *txWords* – Transmit FIFO watermark value in words. The `kLPI2C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO is equal or less than *txWords*. Writing a value equal or greater than the FIFO size is truncated.
- *rxWords* – Receive FIFO watermark value in words. The `kLPI2C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO is greater than *rxWords*. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- *base* – The LPI2C peripheral base address.
- *txCount* – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- *rxCount* – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

```
void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t
                             baudRate_Hz)
```

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- `base` – The LPI2C peripheral base address.
- `sourceClock_Hz` – LPI2C functional clock frequency in Hertz.
- `baudRate_Hz` – Requested bus frequency in Hertz.

```
static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, lpi2c_direction_t dir)
```

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the `address` parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- `base` – The LPI2C peripheral base address.
- `address` – 7-bit slave device address, in bits [6:0].
- `dir` – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
static inline status_t LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address,
                                                  lpi2c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `LPI2C_MasterStart()`, it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- `base` – The LPI2C peripheral base address.
- `address` – 7-bit slave device address, in bits [6:0].
- `dir` – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

`status_t` LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)

Performs a polling send transfer on the I2C bus.

Sends up to `txSize` number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns `kStatus_LPI2C_Nak`.

Parameters

- `base` – The LPI2C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was sent successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or over run.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t` LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.

- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterStop(LPI2C_Type *base)`

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` – The STOP signal was successfully sent on the bus and the transaction terminated.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, lpi2c_master_transfer_t *transfer)`

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `transfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, lpi2c_master_handle_t *handle, lpi2c_master_transfer_callback_t callback, void *userData)`

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_MasterTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C master driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

`status_t` LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_LPI2C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

`status_t` LPI2C_MasterTransferGetCount(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, `size_t` *count)

Returns number of bytes transferred so far.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.
- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_Success` –
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void` LPI2C_MasterTransferAbort(LPI2C_Type *base, *lpi2c_master_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

```
void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)
```

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- lpi2cMasterHandle – Pointer to the LPI2C master driver handle.

```
enum _lpi2c_master_flags
```

LPI2C master peripheral flags.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

```
enumerator kLPI2C_MasterTxReadyFlag
```

Transmit data flag

```
enumerator kLPI2C_MasterRxReadyFlag
```

Receive data flag

```
enumerator kLPI2C_MasterEndOfPacketFlag
```

End Packet flag

```
enumerator kLPI2C_MasterStopDetectFlag
```

Stop detect flag

```
enumerator kLPI2C_MasterNackDetectFlag
```

NACK detect flag

```
enumerator kLPI2C_MasterArbitrationLostFlag
```

Arbitration lost flag

```
enumerator kLPI2C_MasterFifoErrFlag
```

FIFO error flag

```
enumerator kLPI2C_MasterPinLowTimeoutFlag
```

Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag

Data match flag

enumerator kLPI2C_MasterBusyFlag

Master busy flag

enumerator kLPI2C_MasterBusBusyFlag

Bus busy flag

enumerator kLPI2C_MasterClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags

Errors to check for.

enum _lpi2c_direction

Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write

Master transmit.

enumerator kLPI2C_Read

Master receive.

enum _lpi2c_master_pin_config

LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain

LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly

LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull

LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull

LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave

LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave

LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave

LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput

LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source

LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin
Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger
Select the input trigger as the host request input

enum _lpi2c_host_request_polarity
LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow
Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh
Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode
LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled
LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1
LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1
LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1
LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1
LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1
LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1
LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum _lpi2c_master_transfer_flags
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_lpi2c_master_transfer::flags` field.

Values:

enumerator kLPI2C_TransferDefaultFlag
Transfer starts with a start signal, stops with a stop signal.

enumerator kLPI2C_TransferNoStartFlag
Don't send a start condition, address, and sub address

enumerator kLPI2C_TransferRepeatedStartFlag
Send a repeated start condition

enumerator kLPI2C_TransferNoStopFlag
Don't send a stop condition.

```
typedef enum _lpi2c_direction lpi2c_direction_t
```

Direction of master and slave transfers.

```
typedef enum _lpi2c_master_pin_config lpi2c_master_pin_config_t
```

LPI2C pin configuration.

```
typedef enum _lpi2c_host_request_source lpi2c_host_request_source_t
```

LPI2C master host request selection.

```
typedef enum _lpi2c_host_request_polarity lpi2c_host_request_polarity_t
```

LPI2C master host request pin polarity configuration.

```
typedef struct _lpi2c_master_config lpi2c_master_config_t
```

Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

```
typedef enum _lpi2c_data_match_config_mode lpi2c_data_match_config_mode_t
```

LPI2C master data match configuration modes.

```
typedef struct _lpi2c_match_config lpi2c_data_match_config_t
```

LPI2C master data match configuration structure.

```
typedef struct _lpi2c_master_transfer lpi2c_master_transfer_t
```

LPI2C master descriptor of the transfer.

```
typedef struct _lpi2c_master_handle lpi2c_master_handle_t
```

LPI2C master handle of the transfer.

```
typedef void (*lpi2c_master_transfer_callback_t)(LPI2C_Type *base, lpi2c_master_handle_t *handle, status_t completionStatus, void *userData)
```

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to `LPI2C_MasterTransferCreateHandle()`.

Param base

The LPI2C peripheral base address.

Param handle

Pointer to the LPI2C master driver handle.

Param completionStatus

Either `kStatus_Success` or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)
```

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
struct _lpi2c_master_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members**bool** enableMaster

Whether to enable master mode.

bool enableDoze

Whether master is enabled in doze mode.

bool debugEnable

Enable transfers to continue when halted in debug mode.

bool ignoreAck

Whether to ignore ACK/NACK.

lpi2c_master_pin_config_t pinConfig

The pin configuration option.

uint32_t baudRate_Hz

Desired baud rate in Hertz.

uint32_t busIdleTimeout_ns

Bus idle timeout in nanoseconds. Set to 0 to disable.

uint32_t pinLowTimeout_ns

Pin low timeout in nanoseconds. Set to 0 to disable.

uint8_t sdaGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

uint8_t sclGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

struct *_lpi2c_master_config* hostRequest

Host request options.

struct *_lpi2c_match_config**#include <fsl_lpi2c.h>* LPI2C master data match configuration structure.**Public Members***lpi2c_data_match_config_mode_t* matchMode

Data match configuration setting.

bool rxDataMatchOnly

When set to true, received data is ignored until a successful match.

uint32_t match0

Match value 0.

uint32_t match1

Match value 1.

struct *_lpi2c_master_transfer**#include <fsl_lpi2c.h>* Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the `LPI2C_MasterTransferNonBlocking()` API.

Public Members

uint32_t flags

Bit mask of options for the transfer. See enumeration `_lpi2c_master_transfer_flags` for available options. Set to 0 or `kLPI2C_TransferDefaultFlag` for normal transfers.

uint16_t slaveAddress

The 7-bit slave address.

lpi2c_direction_t direction

Either `kLPI2C_Read` or `kLPI2C_Write`.

uint32_t subaddress

Sub address. Transferred MSB first.

size_t subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data

Pointer to data to transfer.

size_t dataSize

Number of bytes to transfer.

struct `_lpi2c_master_handle`

#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint16_t remainingBytes

Remaining byte count in current state.

uint8_t *buf

Buffer pointer for current state.

uint16_t commandBuffer[6]

LPI2C command sequence. When all 6 command words are used: `Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]`

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

struct `hostRequest`

Public Members

bool enable

Enable host request.

lpi2c_host_request_source_t source

Host request source.

lpi2c_host_request_polarity_t polarity

Host request pin polarity.

2.45 LPI2C Master DMA Driver

```
void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
    edma_handle_t *rxDmaHandle, edma_handle_t
    *txDmaHandle, lpi2c_master_edma_transfer_callback_t
    callback, void *userData)
```

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbortEDMA() API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- rxDmaHandle – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- txDmaHandle – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

```
status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
    lpi2c_master_transfer_t *transfer)
```

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

```
status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, lpi2c_master_edma_handle_t
                                         *handle, size_t *count)
```

Returns number of bytes transferred so far.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to the LPI2C master driver handle.
- *count* – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- *kStatus_Success* –
- *kStatus_NoTransferInProgress* – There is not a DMA transaction currently in progress.

```
status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, lpi2c_master_edma_handle_t
                                       *handle)
```

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to the LPI2C master driver handle.

Return values

- *kStatus_Success* – A transaction was successfully aborted.
- *kStatus_LPI2C_Idle* – There is not a DMA transaction currently in progress.

```
typedef struct _lpi2c_master_edma_handle lpi2c_master_edma_handle_t
LPI2C master EDMA handle of the transfer.
```

```
typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base,
lpi2c_master_edma_handle_t *handle, status_t completionStatus, void *userData)
```

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to `LPI2C_MasterCreateEDMAHandle()`.

Param base

The LPI2C peripheral base address.

Param handle

Handle associated with the completed transfer.

Param completionStatus

Either `kStatus_Success` or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
struct _lpi2c_master_edma_handle
    #include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.
```

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base
LPI2C base pointer.

bool isBusy
Transfer state machine current state.

uint8_t nbytes
eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]
LPI2C command sequence. When all 10 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] + receive&Size[4 words]

***lpi2c_master_transfer_t* transfer**
Copy of the current transfer info.

***lpi2c_master_edma_transfer_callback_t* completionCallback**
Callback function pointer.

void *userData
Application data passed to callback.

***edma_handle_t* *rx**
Handle for receive DMA channel.

***edma_handle_t* *tx**
Handle for transmit DMA channel.

***edma_tcd_t* tcds[3]**
Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.46 LPI2C Slave Driver

```
void LPI2C_SlaveGetDefaultConfig(lpi2c_slave_config_t *slaveConfig)
    Provides a default configuration for the LPI2C slave peripheral.
```

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave      = true;
slaveConfig->address0         = 0U;
slaveConfig->address1         = 0U;
slaveConfig->addressMatchMode = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable = true;
slaveConfig->filterEnable     = true;
slaveConfig->enableGeneralCall = false;
slaveConfig->sclStall.enableAck = false;
slaveConfig->sclStall.enableTx  = true;
slaveConfig->sclStall.enableRx  = true;
```

(continues on next page)

(continued from previous page)

```

slaveConfig->sciStall.enableAddress = true;
slaveConfig->ignoreAck             = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns = 0;
slaveConfig->sciGlitchFilterWidth_ns = 0;
slaveConfig->dataValidDelay_ns      = 0;
slaveConfig->clockHoldTime_ns       = 0;

```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with `LPI2C_SlaveInit()`. Be sure to override at least the `address0` member of the configuration structure with the desired slave address.

Parameters

- `slaveConfig` – **[out]** User provided configuration structure that is set to default values. Refer to `lpi2c_slave_config_t`.

```
void LPI2C_SlaveInit(LPI2C_Type *base, const lpi2c_slave_config_t *slaveConfig, uint32_t
                    sourceClock_Hz)
```

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- `base` – The LPI2C peripheral base address.
- `slaveConfig` – User provided peripheral configuration. Use `LPI2C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

```
void LPI2C_SlaveDeinit(LPI2C_Type *base)
```

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveReset(LPI2C_Type *base)
```

Performs a software reset of the LPI2C slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as slave.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as slave.

```
static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)
```

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:`_lpi2c_slave_flags`**Parameters**

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

Attempts to clear other flags has no effect.

See also:`_lpi2c_slave_flags`.**Parameters**

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_SlaveGetStatusFlags()`.

```
static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.**Parameters**

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to enable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Disables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.**Parameters**

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to disable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)
```

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)
```

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

```
static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

```
static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)
```

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the `kLPI2C_SlaveTransmitAckFlag` is asserted. This only happens if you enable the `sclStall.enableAck` field of the `lpi2c_slave_config_t` configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.
- ackOrNack – Pass true for an ACK or false for a NAK.

```
static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)
```

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- base – The LPI2C peripheral base address.
- enable – True will enable ACKSTALL, false will disable ACKSTALL.

```
static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)
```

Returns the slave address sent by the I2C master.

This function should only be called if the `kLPI2C_SlaveAddressValidFlag` is asserted.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

```
status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)
```

Performs a polling send transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.
- `actualTxSize` – **[out]**

Returns

Error or success status returned by API.

```
status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)
```

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.
- `actualRxSize` – **[out]**

Returns

Error or success status returned by API.

```
void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, lpi2c_slave_handle_t *handle,
                                     lpi2c_slave_transfer_callback_t callback, void *userData)
```

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_SlaveTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C slave driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

```
status_t LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, lpi2c_slave_handle_t *handle,
                                       uint32_t eventMask)
```

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of *lpi2c_slave_transfer_event_t* enumerators for the events you wish to receive. The *kLPI2C_SlaveTransmitEvent* and *kLPI2C_SlaveReceiveEvent* events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the *kLPI2C_SlaveAllEvents* constant is provided as a convenient way to enable all events.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.
- *eventMask* – Bit mask formed by OR'ing together *lpi2c_slave_transfer_event_t* enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and *kLPI2C_SlaveAllEvents* to enable all events.

Return values

- *kStatus_Success* – Slave transfers were successfully started.
- *kStatus_LPI2C_Busy* – Slave transfers have already been started on this handle.

```
status_t LPI2C_SlaveTransferGetCount(LPI2C_Type *base, lpi2c_slave_handle_t *handle, size_t
                                     *count)
```

Gets the slave transfer status during a non-blocking transfer.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to *i2c_slave_handle_t* structure.
- *count* – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- *kStatus_Success* –
- *kStatus_NoTransferInProgress* –

```
void LPI2C_SlaveTransferAbort(LPI2C_Type *base, lpi2c_slave_handle_t *handle)
```

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- *base* – The LPI2C peripheral base address.

- `handle` – Pointer to `lpi2c_slave_handle_t` structure which stores the transfer state.

`void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, lpi2c_slave_handle_t *handle)`

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to `lpi2c_slave_handle_t` structure which stores the transfer state.

`enum _lpi2c_slave_flags`

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator `kLPI2C_SlaveTxReadyFlag`

Transmit data flag

enumerator `kLPI2C_SlaveRxReadyFlag`

Receive data flag

enumerator `kLPI2C_SlaveAddressValidFlag`

Address valid flag

enumerator `kLPI2C_SlaveTransmitAckFlag`

Transmit ACK flag

enumerator `kLPI2C_SlaveRepeatedStartDetectFlag`

Repeated start detect flag

enumerator `kLPI2C_SlaveStopDetectFlag`

Stop detect flag

enumerator `kLPI2C_SlaveBitErrFlag`

Bit error flag

enumerator `kLPI2C_SlaveFifoErrFlag`

FIFO error flag

enumerator `kLPI2C_SlaveAddressMatch0Flag`

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag
Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag
General call flag

enumerator kLPI2C_SlaveBusyFlag
Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag
Bus busy flag

enumerator kLPI2C_SlaveClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags
IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags
Errors to check for.

enum _lpi2c_slave_address_match
LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0
Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1
Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1
Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event
Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `LPI2C_SlaveTransferNonBlocking()` in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent
Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent
Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent
Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent
Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent
A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

```
typedef enum _lpi2c_slave_address_match lpi2c_slave_address_match_t
```

LPI2C slave address match options.

```
typedef struct _lpi2c_slave_config lpi2c_slave_config_t
```

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

```
typedef enum _lpi2c_slave_transfer_event lpi2c_slave_transfer_event_t
```

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

```
typedef struct _lpi2c_slave_transfer lpi2c_slave_transfer_t
```

LPI2C slave transfer structure.

```
typedef struct _lpi2c_slave_handle lpi2c_slave_handle_t
```

LPI2C slave handle structure.

```
typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, lpi2c_slave_transfer_t *transfer, void *userData)
```

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the LPI2C_SlaveSetCallback() function after you have created a handle.

Param base

Base address for the LPI2C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

```
struct _lpi2c_slave_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableSlave

Enable slave mode.

uint8_t address0

Slave's 7-bit address.

uint8_t address1

Alternate slave 7-bit address.

lpi2c_slave_address_match_t addressMatchMode

Address matching options.

bool filterDozeEnable

Enable digital glitch filter in doze mode.

bool filterEnable

Enable digital glitch filter.

bool enableGeneralCall

Enable general call address matching.

struct *_lpi2c_slave_config* sclStall

SCL stall enable options.

bool ignoreAck

Continue transfers after a NACK is detected.

bool enableReceivedAddressRead

Enable reading the address received address as the first byte of data.

uint32_t sdaGlitchFilterWidth_ns

Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t sclGlitchFilterWidth_ns

Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t dataValidDelay_ns

Width in nanoseconds of the data valid delay.

uint32_t clockHoldTime_ns

Width in nanoseconds of the clock hold time.

struct *_lpi2c_slave_transfer*

#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t event

Reason the callback is being invoked.

uint8_t receivedAddress

Matching address send by master.

uint8_t *data

Transfer buffer

size_t dataSize

Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct *_lpi2c_slave_handle*

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.47 LPIT: Low-Power Interrupt Timer

void LPIT_Init(LPIT_Type *base, const *lpit_config_t* *config)

Ungates the LPIT clock and configures the peripheral for a basic operation.

This function issues a software reset to reset all channels and registers except the Module Control register.

Note: This API should be called at the beginning of the application using the LPIT driver.

Parameters

- base – LPIT peripheral base address.
- config – Pointer to the user configuration structure.

void LPIT_Deinit(LPIT_Type *base)

Disables the module and gates the LPIT clock.

Parameters

- base – LPIT peripheral base address.

void LPIT_GetDefaultConfig(*lpit_config_t* *config)

Fills in the LPIT configuration structure with default settings.

The default values are:

```
config->enableRunInDebug = false;
config->enableRunInDoze = false;
```

Parameters

- config – Pointer to the user configuration structure.

status_t LPIT_SetupChannel(LPIT_Type *base, *lpit_chnl_t* channel, const *lpit_chnl_params_t* *chnlSetup)

Sets up an LPIT channel based on the user's preference.

This function sets up the operation mode to one of the options available in the enumeration *lpit_timer_modes_t*. It sets the trigger source as either internal or external, trigger selection and the timers behaviour when a timeout occurs. It also chains the timer if a prior timer if requested by the user.

Parameters

- base – LPIT peripheral base address.
- channel – Channel that is being configured.
- chnlSetup – Configuration parameters.

static inline void LPIT_EnableInterrupts(LPIT_Type *base, uint32_t mask)

Enables the selected PIT interrupts.

Parameters

- base – LPIT peripheral base address.
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *lpit_interrupt_enable_t*

```
static inline void LPIT_DisableInterrupts(LPIT_Type *base, uint32_t mask)
```

Disables the selected PIT interrupts.

Parameters

- base – LPIT peripheral base address.
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `lpit_interrupt_enable_t`

```
static inline uint32_t LPIT_GetEnabledInterrupts(LPIT_Type *base)
```

Gets the enabled LPIT interrupts.

Parameters

- base – LPIT peripheral base address.

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lpit_interrupt_enable_t`

```
static inline uint32_t LPIT_GetStatusFlags(LPIT_Type *base)
```

Gets the LPIT status flags.

Parameters

- base – LPIT peripheral base address.

Returns

The status flags. This is the logical OR of members of the enumeration `lpit_status_flags_t`

```
static inline void LPIT_ClearStatusFlags(LPIT_Type *base, uint32_t mask)
```

Clears the LPIT status flags.

Parameters

- base – LPIT peripheral base address.
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lpit_status_flags_t`

```
static inline void LPIT_SetTimerPeriod(LPIT_Type *base, lpit_chnl_t channel, uint32_t ticks)
```

Sets the timer period in units of count.

Timers begin counting down from the value set by this function until it reaches 0, at which point it generates an interrupt and loads this register value again. Writing a new value to this register does not restart the timer. Instead, the value is loaded after the timer expires.

Note: User can call the utility macros provided in `fsl_common.h` to convert to ticks.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.
- ticks – Timer period in units of ticks.

```
static inline void LPIT_SetTimerValue(LPIT_Type *base, lpit_chnl_t channel, uint32_t ticks)
```

Sets the timer period in units of count.

In the Dual 16-bit Periodic Counter mode, the counter will load and then the lower 16-bits will decrement down to zero, which will assert the output pre-trigger. The upper 16-bits will then decrement down to zero, which will negate the output pre-trigger and set the timer interrupt flag.

Note: Set TVAL register to 0 or 1 is invalid in compare mode.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.
- ticks – Timer period in units of ticks.

static inline uint32_t LPIT_GetCurrentTimerCount(LPIT_Type *base, *lpit_chnl_t* channel)

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in `fsl_common.h` to convert ticks to microseconds or milliseconds.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

Returns

Current timer counting value in ticks.

static inline void LPIT_StartTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Starts the timer counting.

After calling this function, timers load the period value and count down to 0. When the timer reaches 0, it generates a trigger pulse and sets the timeout interrupt flag.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

static inline void LPIT_StopTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Stops the timer counting.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

FSL_LPIT_DRIVER_VERSION

Version 2.1.3

enum *_lpit_chnl*

List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

Values:

enumerator kLPIT_Chnl_0

LPIT channel number 0

enumerator kLPIT_Chnl_1
LPIT channel number 1

enumerator kLPIT_Chnl_2
LPIT channel number 2

enumerator kLPIT_Chnl_3
LPIT channel number 3

enum _lpit_timer_modes

Mode options available for the LPIT timer.

Values:

enumerator kLPIT_PeriodicCounter
Use the all 32-bits, counter loads and decrements to zero

enumerator kLPIT_DualPeriodicCounter
Counter loads, lower 16-bits decrement to zero, then upper 16-bits decrement

enumerator kLPIT_TriggerAccumulator
Counter loads on first trigger and decrements on each trigger

enumerator kLPIT_InputCapture
Counter loads with 0xFFFFFFFF, decrements to zero. It stores the inverse of the current value when a input trigger is detected

enum _lpit_trigger_select

Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

Values:

enumerator kLPIT_Trigger_TimerChn0
Channel 0 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn1
Channel 1 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn2
Channel 2 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn3
Channel 3 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn4
Channel 4 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn5
Channel 5 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn6
Channel 6 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn7
Channel 7 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn8
Channel 8 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn9
Channel 9 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn10
Channel 10 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn11
Channel 11 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn12
Channel 12 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn13
Channel 13 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn14
Channel 14 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn15
Channel 15 is selected as a trigger source

enum _lpit_trigger_source
Trigger source options available.

Values:

enumerator kLPIT_TriggerSource_External
Use external trigger input

enumerator kLPIT_TriggerSource_Internal
Use internal trigger

enum _lpit_interrupt_enable
List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerInterruptEnable
Channel 0 Timer interrupt

enumerator kLPIT_Channel1TimerInterruptEnable
Channel 1 Timer interrupt

enumerator kLPIT_Channel2TimerInterruptEnable
Channel 2 Timer interrupt

enumerator kLPIT_Channel3TimerInterruptEnable
Channel 3 Timer interrupt

enum _lpit_status_flags
List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerFlag
Channel 0 Timer interrupt flag

enumerator kLPIT_Channel1TimerFlag
Channel 1 Timer interrupt flag

enumerator `kLPIT_Channel2TimerFlag`
Channel 2 Timer interrupt flag

enumerator `kLPIT_Channel3TimerFlag`
Channel 3 Timer interrupt flag

typedef enum `_lpit_chnl` `lpit_chnl_t`
List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

typedef enum `_lpit_timer_modes` `lpit_timer_modes_t`
Mode options available for the LPIT timer.

typedef enum `_lpit_trigger_select` `lpit_trigger_select_t`
Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

typedef enum `_lpit_trigger_source` `lpit_trigger_source_t`
Trigger source options available.

typedef enum `_lpit_interrupt_enable` `lpit_interrupt_enable_t`
List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef enum `_lpit_status_flags` `lpit_status_flags_t`
List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef struct `_lpit_chnl_params` `lpit_chnl_params_t`
Structure to configure the channel timer.

typedef struct `_lpit_config` `lpit_config_t`
LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the `LPIT_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

static void `LPIT_ResetStateDelay(void)`
Short wait for LPIT state reset.

After clear or set `LPIT_EN`, there should be delay longer than 4 LPIT functional clock.

static inline void `LPIT_Reset(LPIT_Type *base)`
Performs a software reset on the LPIT module.

This resets all channels and registers except the Module Control Register.

Parameters

- `base` – LPIT peripheral base address.

LPIT_RESET_STATE_DELAY

Delay used in LPIT_Reset.

The macro value should be larger than $4 * \text{core clock} / \text{LPIT peripheral clock}$.

struct `_lpit_chnl_params`

#include <fsl_lpit.h> Structure to configure the channel timer.

Public Members

bool chainChannel

true: Timer chained to previous timer; false: Timer not chained

lpit_timer_modes_t timerMode

Timers mode of operation.

lpit_trigger_select_t triggerSelect

Trigger selection for the timer

lpit_trigger_source_t triggerSource

Decides if we use external or internal trigger.

bool enableReloadOnTrigger

true: Timer reloads when a trigger is detected; false: No effect

bool enableStopOnTimeout

true: Timer will stop after timeout; false: does not stop after timeout

bool enableStartOnTrigger

true: Timer starts when a trigger is detected; false: decrement immediately

struct `_lpit_config`

#include <fsl_lpit.h> LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

bool enableRunInDebug

true: Timers run in debug mode; false: Timers stop in debug mode

bool enableRunInDoze

true: Timers run in doze mode; false: Timers stop in doze mode

2.48 LPSPI: Low Power Serial Peripheral Interface

2.49 LPSPI Peripheral driver

void LPSPI_MasterInit(LPSPI_Type *base, const *lpspi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure `lpspi_master_config_t`.
- srcClock_Hz – Module source input clock in Hertz

void LPSPI_MasterGetDefaultConfig(*lpspi_master_config_t* *masterConfig)

Sets the `lpspi_master_config_t` structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to `lpspi_master_config_t` structure

void LPSPI_SlaveInit(LPSPI_Type *base, const *lpspi_slave_config_t* *slaveConfig)

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure `lpspi_slave_config_t`.

void LPSPI_SlaveGetDefaultConfig(*lpspi_slave_config_t* *slaveConfig)

Sets the `lpspi_slave_config_t` structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to `lpspi_slave_config_t` structure.

void LPSPI_Deinit(LPSPI_Type *base)

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

void LPSPI_Reset(LPSPI_Type *base)

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)
Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)
Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)
Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)
Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)
Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)
Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)
Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the `_lpspi_flags`. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag|kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type `_lpspi_flags`.

```
static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)
```

```
static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

```
static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

```
bool LPSPI_CheckTransferArgument(LPSPI_Type *base, lpspi_transfer_t *transfer, bool isEdma)
```

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns

Return true for right and false for wrong.

```
static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, lpspi_master_slave_mode_t mode)
```

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type `lpspi_master_slave_mode_t`.

```
static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, lpspi_which_pcs_t select)
```

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.
- select – LPSPI Peripheral Chip Select (PCS) configuration.

```
static inline void LPSPI_SetPCSContinuous(LPSPI_Type *base, bool IsContinuous)
```

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinuous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

```
static inline bool LPSPI_IsMaster(LPSPI_Type *base)
```

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

```
static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)
```

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

```
static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)
```

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.
- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)
```

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFG1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum `_lpspi_pcs_polarity`.

```
static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)
```

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame

size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPI in slave mode, although the command register does not update until after the LPSPI is enabled. After it is enabled, the transmit command register should only be changed if the LPSPI is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

```
uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t  
                                srcClock_Hz, uint32_t *tcrPrescaleValue)
```

Sets the LPSPI baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale tcrPrescaleValue parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.
- tcrPrescaleValue – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPI is not configured for master mode or if the LPSPI module is not disabled.

```
void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, lpspi_delay_type_t  
                                whichDelay)
```

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.

- `scaler` – The 8-bit delay value 0x00 to 0xFF (255).
- `whichDelay` – The desired delay to configure, must be of type `lpspi_delay_type_t`.

```
uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec,
                                   lpspi_delay_type_t whichDelay, uint32_t srcClock_Hz)
```

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the `delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler)`.

Parameters

- `base` – LPSPI peripheral address.
- `delayTimeInNanoSec` – The desired delay value in nano-seconds.
- `whichDelay` – The desired delay to configuration, which must be of type `lpspi_delay_type_t`.
- `srcClock_Hz` – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

```
static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)
```

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- `base` – LPSPI peripheral address.
- `data` – The data word to be sent.

```
static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)
```

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- `base` – LPSPI peripheral address.

Returns

The data read from the data buffer.

```
void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- *base* – LPSPI peripheral address.
- *dummyData* – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

```
void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, lpspi_master_handle_t *handle,  
                                     lpspi_master_transfer_callback_t callback, void  
                                     *userData)
```

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- *base* – LPSPI peripheral address.
- *handle* – LPSPI handle pointer to *lpspi_master_handle_t*.
- *callback* – DSPI callback.
- *userData* – callback function parameter.

```
status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, lpspi_transfer_t *transfer)
```

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- *base* – LPSPI peripheral address.
- *transfer* – pointer to *lpspi_transfer_t* structure.

Returns

status of *status_t*.

```
status_t LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, lpspi_master_handle_t *handle,  
                                         lpspi_transfer_t *transfer)
```

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- *base* – LPSPI peripheral address.
- *handle* – pointer to *lpspi_master_handle_t* structure which stores the transfer state.

- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, `size_t` *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

`void` LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

`void` LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

`void` LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *lpspi_slave_transfer_callback_t* callback, `void` *userData)

Initializes the LPSPI slave handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to `lpspi_slave_handle_t`.
- callback – DSPI callback.
- userData – callback function parameter.

`status_t` LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_SlaveTransferGetCount(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, size_t *count)

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

void LPSPI_SlaveTransferAbort(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)

Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns

true for the tx FIFO is ready, false is not.

void LPSPI_DriverIRQHandler(uint32_t instance)

LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

FSL_LPSPI_DRIVER_VERSION

LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator kStatus_LPSPI_Busy

LPSPI transfer is busy.

enumerator kStatus_LPSPI_Error

LPSPI driver error.

enumerator kStatus_LPSPI_Idle

LPSPI is idle.

enumerator kStatus_LPSPI_OutOfRange

LPSPI transfer out Of range.

enumerator kStatus_LPSPI_Timeout

LPSPI timeout polling status flags.

enum _lpspi_flags

LPSPI status flags in SPIx_SR register.

Values:

enumerator kLPSPI_TxDataRequestFlag

Transmit data flag

enumerator kLPSPI_RxDataReadyFlag

Receive data flag

enumerator kLPSPI_WordCompleteFlag

Word Complete flag

enumerator kLPSPI_FrameCompleteFlag

Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag

Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag

Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag

Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag

Data Match flag

enumerator kLPSPI_ModuleBusyFlag

Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable
LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable
LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable
Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable
Receive data DMA enable

enum _lpspi_master_slave_mode
LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master
LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave
LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config
LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0
PCS[0]

enumerator kLPSPI_Pcs1
PCS[1]

enumerator kLPSPI_Pcs2
PCS[2]

enumerator kLPSPI_Pcs3
PCS[3]

enum _lpspi_pcs_polarity_config
LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh
PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow
PCS Active Low (idles high)

enum _lpspi_pcs_polarity
LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow
Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow
Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow
Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow
Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow
Pcs0 to Pcs5 Active Low (idles high).

enum _lpspi_clock_polarity
LPSPI clock polarity configuration.

Values:

enumerator kLPSPI_ClockPolarityActiveHigh
CPOL=0. Active-high LPSPI clock (idles low)

enumerator kLPSPI_ClockPolarityActiveLow
CPOL=1. Active-low LPSPI clock (idles high)

enum _lpspi_clock_phase
LPSPI clock phase configuration.

Values:

enumerator kLPSPI_ClockPhaseFirstEdge
CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator kLPSPI_ClockPhaseSecondEdge
CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum `_lpspi_shift_direction`

LPSPI data shifter direction options.

Values:

enumerator `kLPSPI_MsbFirst`

Data transfers start with most significant bit.

enumerator `kLPSPI_LsbFirst`

Data transfers start with least significant bit.

enum `_lpspi_host_request_select`

LPSPI Host Request select configuration.

Values:

enumerator `kLPSPI_HostReqExtPin`

Host Request is an ext pin.

enumerator `kLPSPI_HostReqInternalTrigger`

Host Request is an internal trigger.

enum `_lpspi_match_config`

LPSPI Match configuration options.

Values:

enumerator `kLPSI_MatchDisabled`

LPSPI Match Disabled.

enumerator `kLPSI_1stWordEqualsM0orM1`

LPSPI Match Enabled.

enumerator `kLPSI_AnyWordEqualsM0orM1`

LPSPI Match Enabled.

enumerator `kLPSI_1stWordEqualsM0and2ndWordEqualsM1`

LPSPI Match Enabled.

enumerator `kLPSI_AnyWordEqualsM0andNxtWordEqualsM1`

LPSPI Match Enabled.

enumerator `kLPSI_1stWordAndM1EqualsM0andM1`

LPSPI Match Enabled.

enumerator `kLPSI_AnyWordAndM1EqualsM0andM1`

LPSPI Match Enabled.

enum `_lpspi_pin_config`

LPSPI pin (SDO and SDI) configuration.

Values:

enumerator `kLPSPI_SdiInSdoOut`

LPSPI SDI input, SDO output.

enumerator `kLPSPI_SdiInSdiOut`

LPSPI SDI input, SDI output.

enumerator `kLPSPI_SdoInSdoOut`

LPSPI SDO input, SDO output.

enumerator `kLPSPI_SdoInSdiOut`

LPSPI SDO input, SDI output.

enum `_lpspi_data_out_config`

LPSPI data output configuration.

Values:

enumerator `kLpspiDataOutRetained`

Data out retains last value when chip select is de-asserted

enumerator `kLpspiDataOutTristate`

Data out is tristated when chip select is de-asserted

enum `_lpspi_transfer_width`

LPSPI transfer width configuration.

Values:

enumerator `kLPSPI_SingleBitXfer`

1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator `kLPSPI_TwoBitXfer`

2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator `kLPSPI_FourBitXfer`

4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum `_lpspi_delay_type`

LPSPI delay type selection.

Values:

enumerator `kLPSPI_PcsToSck`

PCS-to-SCK delay.

enumerator `kLPSPI_LastSckToPcs`

Last SCK edge to PCS delay.

enumerator `kLPSPI_BetweenTransfer`

Delay between transfers.

enum `_lpspi_transfer_config_flag_for_master`

Use this enumeration for LPSPi master transfer configFlags.

Values:

enumerator `kLPSPI_MasterPcs0`

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS0 signal

enumerator `kLPSPI_MasterPcs1`

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS1 signal

enumerator `kLPSPI_MasterPcs2`

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS2 signal

enumerator `kLPSPI_MasterPcs3`

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS3 signal

enumerator `kLPSPI_MasterPcsContinuous`

Is PCS signal continuous

enumerator `kLPSPI_MasterByteSwap`

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set `lpspi_shift_direction_t` to MSB).

- i. If you set `bitPerFrame = 8` , no matter the `kLPSPI_MasterByteSwap` you flag is used or not, the waveform is 1 2 3 4 5 6 7 8.

- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPI_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_MasterByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPI_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_MasterByteSwap flag.

enum `_lpspi_transfer_config_flag_for_slave`

Use this enumeration for LPSPI slave transfer configFlags.

Values:

enumerator `kLPSPI_SlavePcs0`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS0 signal

enumerator `kLPSPI_SlavePcs1`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS1 signal

enumerator `kLPSPI_SlavePcs2`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS2 signal

enumerator `kLPSPI_SlavePcs3`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS3 signal

enumerator `kLPSPI_SlaveByteSwap`

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set `lpspi_shift_direction_t` to MSB).

- i. If you set bitPerFrame = 8 , no matter the `kLPSPI_SlaveByteSwap` flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the `kLPSPI_SlaveByteSwap` flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the `kLPSPI_SlaveByteSwap` flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the `kLPSPI_SlaveByteSwap` flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the `kLPSPI_SlaveByteSwap` flag.

enum `_lpspi_transfer_state`

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator `kLPSPI_Idle`

Nothing in the transmitter/receiver.

enumerator `kLPSPI_Busy`

Transfer queue is not finished.

enumerator `kLPSPI_Error`

Transfer error.

typedef enum `_lpspi_master_slave_mode` `lpspi_master_slave_mode_t`

LPSPI master or slave mode configuration.

typedef enum `_lpspi_which_pcs_config` `lpspi_which_pcs_t`

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum `_lpspi_pcs_polarity_config` `lpspi_pcs_polarity_config_t`

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

```
typedef enum _lpspi_clock_polarity lpspi_clock_polarity_t
    LPSPI clock polarity configuration.
typedef enum _lpspi_clock_phase lpspi_clock_phase_t
    LPSPI clock phase configuration.
typedef enum _lpspi_shift_direction lpspi_shift_direction_t
    LPSPI data shifter direction options.
typedef enum _lpspi_host_request_select lpspi_host_request_select_t
    LPSPI Host Request select configuration.
typedef enum _lpspi_match_config lpspi_match_config_t
    LPSPI Match configuration options.
typedef enum _lpspi_pin_config lpspi_pin_config_t
    LPSPI pin (SDO and SDI) configuration.
typedef enum _lpspi_data_out_config lpspi_data_out_config_t
    LPSPI data output configuration.
typedef enum _lpspi_transfer_width lpspi_transfer_width_t
    LPSPI transfer width configuration.
typedef enum _lpspi_delay_type lpspi_delay_type_t
    LPSPI delay type selection.
typedef struct _lpspi_master_config lpspi_master_config_t
    LPSPI master configuration structure.
typedef struct _lpspi_slave_config lpspi_slave_config_t
    LPSPI slave configuration structure.
typedef struct _lpspi_master_handle lpspi_master_handle_t
    Forward declaration of the _lpspi_master_handle typedefs.
typedef struct _lpspi_slave_handle lpspi_slave_handle_t
    Forward declaration of the _lpspi_slave_handle typedefs.
typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, lpspi_master_handle_t
*handle, status_t status, void *userData)
    Master completion callback function pointer type.
    Param base
        LPSPI peripheral address.
    Param handle
        Pointer to the handle for the LPSPI master.
    Param status
        Success or error code describing whether the transfer is completed.
    Param userData
        Arbitrary pointer-dataSized value passed from the application.
typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, lpspi_slave_handle_t *handle,
status_t status, void *userData)
    Slave completion callback function pointer type.
    Param base
        LPSPI peripheral address.
    Param handle
        Pointer to the handle for the LPSPI slave.
```

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

`typedef struct lpspi_transfer lpspi_transfer_t`

LPSPI master/slave transfer structure.

`volatile uint8_t g_lpspiDummyData[]`

Global variable for dummy data value setting.

`LPSPI_DUMMY_DATA`

LPSPI dummy data if no Tx data.

Dummy data used for tx if there is not txData.

`SPI_RETRY_TIMES`

Retry times for waiting flag.

`LPSPI_MASTER_PCS_SHIFT`

LPSPI master PCS shift macro , internal used.

`LPSPI_MASTER_PCS_MASK`

LPSPI master PCS shift macro , internal used.

`LPSPI_SLAVE_PCS_SHIFT`

LPSPI slave PCS shift macro , internal used.

`LPSPI_SLAVE_PCS_MASK`

LPSPI slave PCS shift macro , internal used.

`struct lpspi_master_config`

`#include <fsl_lpspi.h>` LPSPI master configuration structure.

Public Members

`uint32_t baudRate`

Baud Rate for LPSPI.

`uint32_t bitsPerFrame`

Bits per frame, minimum 8, maximum 4096.

`lpspi_clock_polarity_t cpol`

Clock polarity.

`lpspi_clock_phase_t cpha`

Clock phase.

`lpspi_shift_direction_t direction`

MSB or LSB data shift direction.

`uint32_t pcsToSckDelayInNanoSec`

PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`uint32_t lastSckToPcsDelayInNanoSec`

Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec

After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (PCS).

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

bool enableInputDelay

Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

struct __lpspi_slave_config

#include <fsl_lpspi.h> LPSPI slave configuration structure.

Public Members

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct __lpspi_transfer

#include <fsl_lpspi.h> LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize
Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from `_lpspi_transfer_config_flag_for_master` if the transfer is used for master or `_lpspi_transfer_config_flag_for_slave` enumeration if the transfer is used for slave.

struct `_lpspi_master_handle`

#include <fsl_lpspi.h> LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous

Is PCS continuous in transfer.

volatile bool writeTcrInIsr

A flag that whether should write TCR in ISR.

volatile bool isByteSwap

A flag that whether should byte swap.

volatile bool isTxMask

A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame

Number of bytes in each frame

volatile uint16_t frameSize

Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

volatile uint8_t bytesEachWrite

Bytes for each write TDR.

volatile uint8_t bytesEachRead

Bytes for each read RDR.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t txRemainingByteCount

Number of bytes remaining to send.

volatile size_t rxRemainingByteCount

Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes

Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes

Read RDR register remaining times.

uint32_t totalByteCount
 Number of transfer bytes

uint32_t txBuffIfNull
 Used if the txData is NULL.

volatile uint8_t state
 LPSPI transfer state , `_lpspi_transfer_state`.

lpspi_master_transfer_callback_t callback
 Completion callback.

void *userData
 Callback user data.

struct `_lpspi_slave_handle`
#include <fsl_lpspi.h> LPSPI slave transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap
 A flag that whether should byte swap.

volatile uint8_t fifoSize
 FIFO dataSize.

volatile uint8_t rxWatermark
 Rx watermark.

volatile uint8_t bytesEachWrite
 Bytes for each write TDR.

volatile uint8_t bytesEachRead
 Bytes for each read RDR.

const uint8_t *volatile txData
 Send buffer.

uint8_t *volatile rxData
 Receive buffer.

volatile size_t txRemainingByteCount
 Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
 Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
 Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
 Read RDR register remaining times.

uint32_t totalByteCount
 Number of transfer bytes

volatile uint8_t state
 LPSPI transfer state , `_lpspi_transfer_state`.

volatile uint32_t errorCount
 Error count for slave transfer.

lpspi_slave_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

2.50 LPSPI eDMA Driver

FSL_LPSPI_EDMA_DRIVER_VERSION
LPSPI EDMA driver version.

DMA_MAX_TRANSFER_COUNT
DMA max transfer size.

typedef struct *lpspi_master_edma_handle* lpspi_master_edma_handle_t
Forward declaration of the *lpspi_master_edma_handle* typedefs.

typedef struct *lpspi_slave_edma_handle* lpspi_slave_edma_handle_t
Forward declaration of the *lpspi_slave_edma_handle* typedefs.

typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base,
lpspi_master_edma_handle_t *handle, *status_t* status, void *userData)
Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPI_Type *base,
lpspi_slave_edma_handle_t *handle, *status_t* status, void *userData)
Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI slave.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

void LPSPI_MasterTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t*
*handle, *lpspi_master_edma_transfer_callback_t*
callback, void *userData, *edma_handle_t*
*edmaRxRegToRxDataHandle, *edma_handle_t*
*edmaTxDataToTxRegHandle)

Initializes the LPSPI master eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that the LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for `edmaRxRegToRxDataHandle` and Tx DMAMUX source for `edmaTxDataToTxRegHandle`. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for `edmaRxRegToRxDataHandle`.

Parameters

- `base` – LPSPI peripheral base address.
- `handle` – LPSPI handle pointer to `lpspi_master_edma_handle_t`.
- `callback` – LPSPI callback.
- `userData` – callback function parameter.
- `edmaRxRegToRxDataHandle` – `edmaRxRegToRxDataHandle` pointer to `edma_handle_t`.
- `edmaTxDataToTxRegHandle` – `edmaTxDataToTxRegHandle` pointer to `edma_handle_t`.

`status_t` LPSPI_MasterTransferEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- `base` – LPSPI peripheral base address.
- `handle` – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- `transfer` – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, `uint32_t` configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- `base` – LPSPI peripheral base address.
- `handle` – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- `configFlags` – transfer configuration flags. `_lpspi_transfer_config_flag_for_master`.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.

Returns

Indicates whether LPSPI master transfer was successful or not.

status_t LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to *lpspi_master_edma_handle_t* structure which stores the transfer state.
- transfer – pointer to *lpspi_transfer_t* structure, config field is not used.

Return values

- kStatus_Success – Execution successfully.
- kStatus_LPSPI_Busy – The LPSPI device is busy.
- kStatus_InvalidArgument – The transfer structure is invalid.

Returns

Indicates whether LPSPI master transfer was successful or not.

void LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to *lpspi_master_edma_handle_t* structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *size_t* *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to *lpspi_master_edma_handle_t* structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns

status of *status_t*.

```
void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t
                                         *handle, lpspi_slave_edma_transfer_callback_t
                                         callback, void *userData, edma_handle_t
                                         *edmaRxRegToRxDataHandle, edma_handle_t
                                         *edmaTxDataToTxRegHandle)
```

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for *edmaRxRegToRxDataHandle* and Tx DMAMUX source for *edmaTxDataToTxRegHandle*. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for *edmaRxRegToRxDataHandle*.

Parameters

- *base* – LPSPI peripheral base address.
- *handle* – LPSPI handle pointer to *lpspi_slave_edma_handle_t*.
- *callback* – LPSPI callback.
- *userData* – callback function parameter.
- *edmaRxRegToRxDataHandle* – *edmaRxRegToRxDataHandle* pointer to *edma_handle_t*.
- *edmaTxDataToTxRegHandle* – *edmaTxDataToTxRegHandle* pointer to *edma_handle_t*.

```
status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle,
                                  lpspi_transfer_t *transfer)
```

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of *bytesPerFrame* if *bytesPerFrame* is less than or equal to 4. For *bytesPerFrame* greater than 4: The transfer data size should be equal to *bytesPerFrame* if the *bytesPerFrame* is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of *bytesPerFrame*.

Parameters

- *base* – LPSPI peripheral base address.
- *handle* – pointer to *lpspi_slave_edma_handle_t* structure which stores the transfer state.
- *transfer* – pointer to *lpspi_transfer_t* structure.

Returns

status of *status_t*.

```
void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle)
LPSPI slave aborts a transfer which is using eDMA.
```

This function aborts a transfer which is using eDMA.

Parameters

- *base* – LPSPI peripheral base address.

- `handle` – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.

`status_t` LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, `size_t` *count)

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- `base` – LPSPI peripheral base address.
- `handle` – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- `count` – Number of bytes transferred so far by the eDMA transaction.

Returns

status of `status_t`.

`struct _lpspi_master_edma_handle`

#include <fsl_lpspi_edma.h> LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

`volatile bool` `isPcsContinuous`

Is PCS continuous in transfer.

`volatile bool` `isByteSwap`

A flag that whether should byte swap.

`volatile uint8_t` `fifoSize`

FIFO dataSize.

`volatile uint8_t` `rxWatermark`

Rx watermark.

`volatile uint8_t` `bytesEachWrite`

Bytes for each write TDR.

`volatile uint8_t` `bytesEachRead`

Bytes for each read RDR.

`volatile uint8_t` `bytesLastRead`

Bytes for last read RDR.

`volatile bool` `isThereExtraRxBytes`

Is there extra RX byte.

`const uint8_t *volatile` `txData`

Send buffer.

`uint8_t *volatile` `rxData`

Receive buffer.

`volatile size_t` `txRemainingByteCount`

Number of bytes remaining to send.

`volatile size_t` `rxRemainingByteCount`

Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
Read RDR register remaining times.

uint32_t totalByteCount
Number of transfer bytes

edma_tcd_t *lastTimeTCD
Pointer to the lastTime TCD

bool isMultiDMATransmit
Is there multi DMA transmit

volatile uint8_t dmaTransmitTime
DMA Transfer times.

uint32_t lastTimeDataBytes
DMA transmit last Time data Bytes

uint32_t dataBytesEveryTime
Bytes in a time for DMA transfer, default is DMA_MAX_TRANSFER_COUNT

edma_transfer_config_t transferConfigRx
Config of DMA rx channel.

edma_transfer_config_t transferConfigTx
Config of DMA tx channel.

uint32_t txBuffIfNull
Used if there is not txData for DMA purpose.

uint32_t rxBuffIfNull
Used if there is not rxData for DMA purpose.

uint32_t transmitCommand
Used to write TCR for DMA purpose.

volatile uint8_t state
LPSPI transfer state , *_lpspi_transfer_state*.

uint8_t nbytes
eDMA minor byte transfer count initially configured.

lpspi_master_edma_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
edma_handle_t handle point used for TxData to TxReg buff

edma_tcd_t lpspiSoftwareTCD[3]
SoftwareTCD, internal used

struct *_lpspi_slave_edma_handle*
#include <fsl_lpspi_edma.h> LPSPI slave eDMA transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap

A flag that whether should byte swap.

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

volatile uint8_t bytesEachWrite

Bytes for each write TDR.

volatile uint8_t bytesEachRead

Bytes for each read RDR.

volatile uint8_t bytesLastRead

Bytes for last read RDR.

volatile bool isThereExtraRxBytes

Is there extra RX byte.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t txRemainingByteCount

Number of bytes remaining to send.

volatile size_t rxRemainingByteCount

Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes

Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes

Read RDR register remaining times.

uint32_t totalByteCount

Number of transfer bytes

uint32_t txBuffIfNull

Used if there is not txData for DMA purpose.

uint32_t rxBuffIfNull

Used if there is not rxData for DMA purpose.

volatile uint8_t state

LPSPi transfer state.

uint32_t errorCount

Error count for slave transfer.

lpspi_slave_edma_transfer_callback_t callback

Completion callback.

```
void *userData
    Callback user data.
edma_handle_t *edmaRxRegToRxDataHandle
    edma_handle_t handle point used for RxReg to RxData buff
edma_handle_t *edmaTxDataToTxRegHandle
    edma_handle_t handle point used for TxData to TxReg
edma_tcd_t lpspiSoftwareTCD[2]
    SoftwareTCD, internal used
```

2.51 LPTMR: Low-Power Timer

```
void LPTMR_Init(LPTMR_Type *base, const lptmr_config_t *config)
    Ungates the LPTMR clock and configures the peripheral for a basic operation.
```

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

```
void LPTMR_Deinit(LPTMR_Type *base)
    Gates the LPTMR clock.
```

Parameters

- base – LPTMR peripheral base address

```
void LPTMR_GetDefaultConfig(lptmr_config_t *config)
    Fills in the LPTMR configuration structure with default settings.
```

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

```
static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)
    Enables the selected LPTMR interrupts.
```

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)
Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)
Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)
Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)
Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)
Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the `fsl_common.h` to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)
Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

```
static inline void LPTMR_StopTimer(LPTMR_Type *base)
```

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

```
FSL_LPTMR_DRIVER_VERSION
```

Driver Version

```
enum _lptmr_pin_select
```

LPTMR pin selection used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinSelectInput_0
```

Pulse counter input 0 is selected

```
enumerator kLPTMR_PinSelectInput_1
```

Pulse counter input 1 is selected

```
enumerator kLPTMR_PinSelectInput_2
```

Pulse counter input 2 is selected

```
enumerator kLPTMR_PinSelectInput_3
```

Pulse counter input 3 is selected

```
enum _lptmr_pin_polarity
```

LPTMR pin polarity used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinPolarityActiveHigh
```

Pulse Counter input source is active-high

```
enumerator kLPTMR_PinPolarityActiveLow
```

Pulse Counter input source is active-low

```
enum _lptmr_timer_mode
```

LPTMR timer mode selection.

Values:

```
enumerator kLPTMR_TimerModeTimeCounter
```

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter
Pulse Counter mode

enum _lptmr_prescaler_glitch_value
LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0
Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1
Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2
Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3
Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4
Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5
Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6
Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7
Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8
Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum `_lptmr_interrupt_enable`

List of the LPTMR interrupts.

Values:

enumerator `kLPTMR_TimerInterruptEnable`
Timer interrupt enable

enum `_lptmr_status_flags`

List of the LPTMR status flags.

Values:

enumerator `kLPTMR_TimerCompareFlag`
Timer compare flag

typedef enum `_lptmr_pin_select` `lptmr_pin_select_t`

LPTMR pin selection used in pulse counter mode.

typedef enum `_lptmr_pin_polarity` `lptmr_pin_polarity_t`

LPTMR pin polarity used in pulse counter mode.

typedef enum `_lptmr_timer_mode` `lptmr_timer_mode_t`

LPTMR timer mode selection.

typedef enum `_lptmr_prescaler_glitch_value` `lptmr_prescaler_glitch_value_t`

LPTMR prescaler/glitch filter values.

typedef enum `_lptmr_prescaler_clock_select` `lptmr_prescaler_clock_select_t`

LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

typedef enum `_lptmr_interrupt_enable` `lptmr_interrupt_enable_t`

List of the LPTMR interrupts.

typedef enum `_lptmr_status_flags` `lptmr_status_flags_t`

List of the LPTMR status flags.

typedef struct `_lptmr_config` `lptmr_config_t`

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

static inline void `LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)`

Enable or disable timer DMA request.

Parameters

- `base` – base LPTMR peripheral base address
- `enable` – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

struct `_lptmr_config`

`#include <fsl_lptmr.h>` LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

lptmr_timer_mode_t timerMode

Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource

LPTMR clock source

lptmr_prescaler_glitch_value_t value

Prescaler or glitch filter value

2.52 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.53 LPUART Driver

static inline void LPUART_SoftwareReset(LPUART_Type *base)

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- base – LPUART peripheral base address.

status_t LPUART_Init(LPUART_Type *base, const *lpuart_config_t* *config, uint32_t srcClock_Hz)

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the LPUART_GetDefaultConfig() function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
```

(continues on next page)

(continued from previous page)

```
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- config – Pointer to a user-defined configuration structure.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – LPUART initialize succeed

```
status_t LPUART_Deinit(LPUART_Type *base)
```

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

Return values

- kStatus_Success – Deinit is success.
- kStatus_LPUART_Timeout – Timeout during deinit.

```
void LPUART_GetDefaultConfig(lpuart_config_t *config)
```

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: lpuartConfig->baudRate_Bps = 115200U; lpuartConfig->parityMode = kLPUART_ParityDisabled; lpuartConfig->dataBitsCount = kLPUART_EightDataBits; lpuartConfig->isMsb = false; lpuartConfig->stopBitCount = kLPUART_OneStopBit; lpuartConfig->txFifoWatermark = 0; lpuartConfig->rxFifoWatermark = 1; lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit; lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1; lpuartConfig->enableTx = false; lpuartConfig->enableRx = false;

Parameters

- config – Pointer to a configuration structure.

```
status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t
srcClock_Hz)
```

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not supported in the current clock source.
- `kStatus_Success` – Set baudrate succeeded.

```
void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)
```

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- `base` – LPUART peripheral base address.
- `address1` – LPUART slave address1.
- `address2` – LPUART slave address2.

```
static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)
```

Enable the LPUART match address feature.

Parameters

- `base` – LPUART peripheral base address.
- `match1` – true to enable match address1, false to disable.
- `match2` – true to enable match address2, false to disable.

```
static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the rx FIFO watermark.

Parameters

- `base` – LPUART peripheral base address.
- `water` – Rx FIFO watermark.

```
static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

static inline void LPUART_TransferEnable16Bit(*lpuart_handle_t* *handle, bool enable)

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in *lpuart_handle_t*.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

uint32_t LPUART_GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators *_lpuart_flags*. To check for a specific status, compare the return value with enumerators in the *_lpuart_flags*. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the *_lpuart_flags*.

status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: *kLPUART_TxDataRegEmptyFlag*, *kLPUART_TransmissionCompleteFlag*, *kLPUART_RxDataRegFullFlag*, *kLPUART_RxActiveFlag*, *kLPUART_NoiseErrorFlag*, *kLPUART_ParityErrorFlag*, *kLPUART_TxFifoEmptyFlag*, *kLPUART_RxFifoEmptyFlag* Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the *_lpuart_status_flag_t* to do the OR operation and get the mask.

Return values

- *kStatus_LPUART_FlagCannotClearManually* – The flag can't be cleared by this function but it is cleared automatically by hardware.
- *kStatus_Success* – Status in the mask are cleared.

Returns

0 succeed, others failed.

void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the *_lpuart_interrupt_enable*. This examples shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

```
void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)
```

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

```
uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)
```

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

```
static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)
```

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

```
static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, STAT[TDRE], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
uint32_t LPUART_GetInstance(LPUART_Type *base)
```

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

```
static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)
```

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

```
static inline uint8_t LPUART_ReadByte(LPUART_Type *base)
```

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

```
static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

```
void LPUART_SendAddress(LPUART_Type *base, uint8_t address)
```

Transmit an address frame in 9-bit data mode.

Parameters

- base – LPUART peripheral base address.
- address – LPUART slave address.

```
status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)
```

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

```
status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)
```

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t` LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`status_t` LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.

- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

```
void LPUART__TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle,  
                                lpuart_transfer_callback_t callback, void *userData)
```

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `LPUART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing `NULL` as `ringBuffer`.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `callback` – Callback function.
- `userData` – User data.

```
status_t LPUART__TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,  
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the `kStatus_LPUART_TxIdle` as `status` parameter.

Note: The `kStatus_LPUART_TxIdle` is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the `kLPUART_TransmissionCompleteFlag` to ensure that the transmit is finished.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `lpuart_transfer_t`.

Return values

- `kStatus_Success` – Successfully start the data transmission.
- `kStatus_LPUART_TxBusy` – Previous transmission still not finished, data not all written to the TX register.
- `kStatus_InvalidArgument` – Invalid argument.

```
void LPUART__TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t  
                                    *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the `UART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if `ringBufferSize` is 32, then only 31 bytes are used for saving data.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `ringBuffer` – Start address of ring buffer for background receiving. Pass `NULL` to disable the ring buffer.
- `ringBufferSize` – size of the ring buffer.

`void LPUART_TransferStopRingBuffer(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, lpuart_handle_t *handle)`

Get the length of received data in RX ring buffer.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

`void LPUART_TransferAbortSend(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the `remainBtyes` to find out how many bytes are not sent out.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t LPUART_TransferGetSendCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- `base` – LPUART peripheral base address.

- `handle` – LPUART handle pointer.
- `count` – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t` LPUART_TransferReceiveNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer, `size_t` *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to `xfer->data`, which returns with the parameter `receivedBytes` set to 5. For the remaining 5 bytes, the newly arrived data is saved from `xfer->data[5]`. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void` LPUART_TransferAbortReceive(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t` LPUART_TransferGetReceiveCount(LPUART_Type *base, *lpuart_handle_t* *handle, `uint32_t` *count)

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – LPUART peripheral base address.

- `handle` – LPUART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)`
LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- `base` – LPUART peripheral base address.
- `irqHandle` – LPUART handle pointer.

`void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)`
LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- `base` – LPUART peripheral base address.
- `irqHandle` – LPUART handle pointer.

`void LPUART_DriverIRQHandler(uint32_t instance)`
LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- `instance` – LPUART instance.

`FSL_LPUART_DRIVER_VERSION`
LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator `kStatus_LPUART_TxBusy`
TX busy

enumerator `kStatus_LPUART_RxBusy`
RX busy

enumerator `kStatus_LPUART_TxIdle`
LPUART transmitter is idle.

enumerator `kStatus_LPUART_RxIdle`
LPUART receiver is idle.

enumerator `kStatus_LPUART_TxWatermarkTooLarge`
TX FIFO watermark too large

enumerator `kStatus_LPUART_RxWatermarkTooLarge`
RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun

LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError

LPUART noise error.

enumerator kStatus_LPUART_FramingError

LPUART framing error.

enumerator kStatus_LPUART_ParityError

LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport

Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected

IDLE flag.

enumerator kStatus_LPUART_Timeout

LPUART times out.

enum _lpuart_parity_mode

LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled

Parity disabled

enumerator kLPUART_ParityEven

Parity enabled, type even, bit setting: PE | PT = 10

enumerator kLPUART_ParityOdd

Parity enabled, type odd, bit setting: PE | PT = 11

enum _lpuart_data_bits

LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits

Eight data bit

enumerator kLPUART_SevenDataBits

Seven data bit

enum _lpuart_stop_bit_count

LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit

One stop bit

enumerator kLPUART_TwoStopBit

Two stop bits

enum _lpuart_transmit_cts_source

LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin

CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult

CTS resource is the match result.

enum _lpuart_transmit_cts_config

LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart

CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle

CTS input is sampled when the transmitter is idle

enum _lpuart_idle_type_select

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum _lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128
the number of idle characters.

enum _lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable
Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable
Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag
Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator `kLPUART_TransmissionCompleteFlag`
 Transmission complete flag, sets when transmission activity complete. bit 22

enumerator `kLPUART_RxDataRegFullFlag`
 Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator `kLPUART_IdleLineFlag`
 Idle line detect flag, sets when idle line detected. bit 20

enumerator `kLPUART_RxOverrunFlag`
 Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator `kLPUART_NoiseErrorFlag`
 Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator `kLPUART_FramingErrorFlag`
 Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator `kLPUART_ParityErrorFlag`
 If parity enabled, sets upon parity error detection. bit 16

enumerator `kLPUART_LinBreakFlag`
 LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator `kLPUART_RxActiveEdgeFlag`
 Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator `kLPUART_RxActiveFlag`
 Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator `kLPUART_DataMatch1Flag`
 The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator `kLPUART_DataMatch2Flag`
 The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator `kLPUART_TxFifoEmptyFlag`
 TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator `kLPUART_RxFifoEmptyFlag`
 RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator `kLPUART_TxFifoOverflowFlag`
 TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator `kLPUART_RxFifoUnderflowFlag`
 RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator `kLPUART_AllClearFlags`

enumerator `kLPUART_AllFlags`

typedef enum `_lpuart_parity_mode` `lpuart_parity_mode_t`
 LPUART parity mode.

typedef enum `_lpuart_data_bits` `lpuart_data_bits_t`
 LPUART data bits count.

typedef enum `_lpuart_stop_bit_count` `lpuart_stop_bit_count_t`
 LPUART stop bit count.

```
typedef enum _lpuart_transmit_cts_source lpuart_transmit_cts_source_t
    LPUART transmit CTS source.

typedef enum _lpuart_transmit_cts_config lpuart_transmit_cts_config_t
    LPUART transmit CTS configure.

typedef enum _lpuart_idle_type_select lpuart_idle_type_select_t
    LPUART idle flag type defines when the receiver starts counting.

typedef enum _lpuart_idle_config lpuart_idle_config_t
    LPUART idle detected configuration. This structure defines the number of idle characters
    that must be received before the IDLE flag is set.

typedef struct _lpuart_config lpuart_config_t
    LPUART configuration structure.

typedef struct _lpuart_transfer lpuart_transfer_t
    LPUART transfer structure.

typedef struct _lpuart_handle lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle,
status_t status, void *userData)
    LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES
    Retry times for waiting flag.

struct _lpuart_config
    #include <fsl_lpuart.h> LPUART configuration structure.
```

Public Members

```
uint32_t baudRate_Bps
    LPUART baud rate

lpuart_parity_mode_t parityMode
    Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount
    Data bits count, eight (default), seven

bool isMsb
    Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount
    Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark
    TX FIFO watermark

uint8_t rxFifoWatermark
    RX FIFO watermark
```

bool enableRxRTS
RX RTS enable

bool enableTxCTS
TX CTS enable

lpuart_transmit_cts_source_t txCtsSource
TX CTS source

lpuart_transmit_cts_config_t txCtsConfig
TX CTS configure

lpuart_idle_type_select_t rxIdleType
RX IDLE type.

lpuart_idle_config_t rxIdleConfig
RX IDLE configuration.

bool enableTx
Enable TX

bool enableRx
Enable RX

struct *_lpuart_transfer*
#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize
The byte count to be transfer.

struct *_lpuart_handle*
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize
Size of the remaining data to send.

size_t txDataSizeAll
Size of the data to send out.

volatile size_t rxDataSize
Size of the remaining data to receive.

size_t rxDataSizeAll
Size of the data to receive.

size_t rxRingBufferSize
Size of the ring buffer.

volatile uint16_t rxRingBufferHead
Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail
Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback
Callback function.

void *userData
LPUART callback function parameter.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state.

bool isSevenDataBits
Seven data bits flag.

bool is16bitData
16bit data bits flag, only used for 9bit or 10bit data

union __unnamed23__

Public Members

uint8_t *data
The buffer of data to be transfer.

uint8_t *rxData
The buffer to receive data.

uint16_t *rxData16
The buffer to receive data.

const uint8_t *txData
The buffer of data to be sent.

const uint16_t *txData16
The buffer of data to be sent.

union __unnamed25__

Public Members

const uint8_t *volatile txData
Address of remaining data to send.

const uint16_t *volatile txData16
Address of remaining data to send.

union __unnamed27__

Public Members

uint8_t *volatile rxData
Address of remaining data to receive.

uint16_t *volatile rxData16
Address of remaining data to receive.

union __unnamed29__

Public Members

uint8_t *rxRingBuffer

Start address of the receiver ring buffer.

uint16_t *rxRingBuffer16

Start address of the receiver ring buffer.

2.54 LPUART eDMA Driver

```
void LPUART_TransferCreateHandleEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
                                     lpuart_edma_transfer_callback_t callback, void
                                     *userData, edma_handle_t *txEdmaHandle,
                                     edma_handle_t *rxEdmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- callback – Callback function.
- userData – User data.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

```
status_t LPUART_SendEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
                        lpuart_transfer_t *xfer)
```

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See lpuart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

```
status_t LPUART_ReceiveEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
                            lpuart_transfer_t *xfer)
```

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.
- xfer – LPUART eDMA transfer structure, see `lpuart_transfer_t`.

Return values

- `kStatus_Success` – if succeed, others fail.
- `kStatus_LPUART_RxBusy` – Previous transfer ongoing.
- `kStatus_InvalidArgument` – Invalid argument.

`void LPUART_TransferAbortSendEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle)`
Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.

`void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle)`
Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.

`status_t LPUART_TransferGetSendCountEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle, uint32_t *count)`

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`status_t LPUART_TransferGetReceiveCountEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle, uint32_t *count)`

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)`
LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- `base` – LPUART peripheral base address.
- `lpuartEdmaHandle` – LPUART handle pointer.

`FSL_LPUART_EDMA_DRIVER_VERSION`

LPUART EDMA driver version.

`typedef struct _lpuart_edma_handle lpuart_edma_handle_t`

`typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, lpuart_edma_handle_t *handle, status_t status, void *userData)`

LPUART transfer callback function.

`struct _lpuart_edma_handle`

`#include <fsl_lpuart_edma.h>` LPUART eDMA handle.

Public Members

`lpuart_edma_transfer_callback_t` callback

Callback function.

`void *userData`

LPUART callback function parameter.

`size_t rxDataSizeAll`

Size of the data to receive.

`size_t txDataSizeAll`

Size of the data to send out.

`edma_handle_t *txEdmaHandle`

The eDMA TX channel used.

`edma_handle_t *rxEdmaHandle`

The eDMA RX channel used.

`uint8_t nbytes`

eDMA minor byte transfer count initially configured.

`volatile uint8_t txState`

TX transfer state.

`volatile uint8_t rxState`

RX transfer state

2.55 MMDVQS: Memory-Mapped Divide and Square Root

```
int32_t MMDVQS_GetDivideRemainder(MMDVQS_Type *base, int32_t dividend, int32_t divisor,  
                                bool isUnsigned)
```

Performs the MMDVQS division operation and returns the remainder.

Parameters

- base – MMDVQS peripheral address
- dividend – Dividend value
- divisor – Divisor value
- isUnsigned – Mode of unsigned divide
 - true unsigned divide
 - false signed divide

```
int32_t MMDVQS_GetDivideQuotient(MMDVQS_Type *base, int32_t dividend, int32_t divisor,  
                                bool isUnsigned)
```

Performs the MMDVQS division operation and returns the quotient.

Parameters

- base – MMDVQS peripheral address
- dividend – Dividend value
- divisor – Divisor value
- isUnsigned – Mode of unsigned divide
 - true unsigned divide
 - false signed divide

```
uint16_t MMDVQS_Sqrt(MMDVQS_Type *base, uint32_t radicand)
```

Performs the MMDVQS square root operation.

This function performs the MMDVQS square root operation and returns the square root result of a given radicand value.

Parameters

- base – MMDVQS peripheral address
- radicand – Radicand value

```
static inline mmdvsq_execution_status_t MMDVQS_GetExecutionStatus(MMDVQS_Type *base)
```

Gets the MMDVQS execution status.

This function checks the current MMDVQS execution status of the combined CSR[BUSY, DIV, Sqrt] indicators.

Parameters

- base – MMDVQS peripheral address

Returns

Current MMDVQS execution status

```
static inline void MMDVQS_SetFastStartConfig(MMDVQS_Type *base,  
                                             mmdvsq_fast_start_select_t mode)
```

Configures MMDVQS fast start mode.

This function sets the MMDVQS division fast start. The MMDVQS supports two mechanisms for initiating a division operation. The default mechanism is a “fast start” where a write to

the DSOR register begins the division. Alternatively, the start mechanism can begin after a write to the CSR register with CSR[SRT] set.

Parameters

- `base` – MMDVSQ peripheral address
- `mode` – Mode of Divide-Fast-Start
 - `kMmdvsqDivideFastStart = 0`
 - `kMmdvsqDivideNormalStart = 1`

```
static inline void MMDVSQ_SetDivideByZeroConfig(MMDVSQ_Type *base, bool isDivByZero)
```

Configures the MMDVSQ divide-by-zero mode.

This function configures the MMDVSQ response to divide-by-zero calculations. If both CSR[DZ] and CSR[DZE] are set, then a subsequent read of the RES register is error-terminated to signal the processor of the attempted divide-by-zero. Otherwise, the register contents are returned.

Parameters

- `base` – MMDVSQ peripheral address
- `isDivByZero` – Mode of Divide-By-Zero
 - `kMmdvsqDivideByZeroDis = 0`
 - `kMmdvsqDivideByZeroEn = 1`

```
FSL_MMSVSQ_DRIVER_VERSION
```

Version 2.0.4.

```
enum _mmdvsq_execution_status
```

MMDVSQ execution status.

Values:

```
enumerator kMMDVSQ_IdleSquareRoot
```

MMDVSQ is idle; the last calculation was a square root

```
enumerator kMMDVSQ_IdleDivide
```

MMDVSQ is idle; the last calculation was division

```
enumerator kMMDVSQ_BusySquareRoot
```

MMDVSQ is busy processing a square root calculation

```
enumerator kMMDVSQ_BusyDivide
```

MMDVSQ is busy processing a division calculation

```
enum _mmdvsq_fast_start_select
```

MMDVSQ divide fast start select.

Values:

```
enumerator kMMDVSQ_EnableFastStart
```

Division operation is initiated by a write to the DSOR register

```
enumerator kMMDVSQ_DisableFastStart
```

Division operation is initiated by a write to CSR[SRT] = 1; normal start instead fast start

```
typedef enum _mmdvsq_execution_status mmdvsq_execution_status_t
```

MMDVSQ execution status.

```
typedef enum _mmdvsq_fast_start_select mmdvsq_fast_start_select_t
```

MMDVSQ divide fast start select.

2.56 MSCM: Miscellaneous System Control

FSL_MSCM_DRIVER_VERSION

MSCM driver version 2.0.0.

```
typedef struct _mscm_uid mscm_uid_t
```

```
static inline void MSCM_GetUID(MSCM_Type *base, mscm_uid_t *uid)
```

Get MSCM UID.

Parameters

- base – MSCM peripheral base address.
- uid – Pointer to an uid struct.

```
static inline void MSCM_SetSecureIrqParameter(MSCM_Type *base, const uint32_t parameter)
```

Set MSCM Secure Irq.

Parameters

- base – MSCM peripheral base address.
- parameter – Value to be write to SECURE_IRQ.

```
static inline uint32_t MSCM_GetSecureIrq(MSCM_Type *base)
```

Get MSCM Secure Irq.

Parameters

- base – MSCM peripheral base address.

Returns

MSCM Secure Irq.

FSL_COMPONENT_ID

```
struct _mscm_uid
```

```
#include <fsl_mscm.h>
```

2.57 MSMC: Multicore System Mode Controller

```
static inline void SMC_SetPowerModeProtection(SMC_Type *base, uint8_t allowedModes)
```

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes in the specified chip family. The available power modes are defined in the `smc_power_mode_protection_t`. This should be done at an early system level initialization stage. See the reference manual for details. This register can only write once after the power reset.

The allowed modes are passed as bit map, for example, to allow LLS and VLLS, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeLls | kSMC_AllowPowerModeVlls)`. To allow all modes, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeAll)`.

Parameters

- base – SMC peripheral base address.
- allowedModes – Bitmap of the allowed power modes.

```
static inline smc_power_state_t SMC_GetPowerModeState(SMC_Type *base)
```

Gets the current power mode status.

This function returns the current power mode stat. Once application switches the power mode, it should always check the stat to check whether it runs into the specified mode or not. An application should check this mode before switching to a different mode. The system requires that only certain modes can switch to other specific modes. See the reference manual for details and the *smc_power_state_t* for information about the power stat.

Parameters

- *base* – SMC peripheral base address.

Returns

Current power mode status.

```
static inline void SMC_PreEnterStopModes(void)
```

Prepare to enter stop modes.

This function should be called before entering STOP/VLPS/LLS/VLLS modes.

```
static inline void SMC_PostExitStopModes(void)
```

Recovering after wake up from stop modes.

This function should be called after wake up from STOP/VLPS/LLS/VLLS modes. It is used together with *SMC_PreEnterStopModes*.

```
static inline void SMC_PreEnterWaitModes(void)
```

Prepare to enter wait modes.

This function should be called before entering WAIT/VLPW modes..

```
static inline void SMC_PostExitWaitModes(void)
```

Recovering after wake up from stop modes.

This function should be called after wake up from WAIT/VLPW modes. It is used together with *SMC_PreEnterWaitModes*.

```
status_t SMC_SetPowerModeRun(SMC_Type *base)
```

Configure the system to RUN power mode.

Parameters

- *base* – SMC peripheral base address.

Returns

SMC configuration error code.

```
status_t SMC_SetPowerModeHsruntime(SMC_Type *base)
```

Configure the system to HSRUN power mode.

Parameters

- *base* – SMC peripheral base address.

Returns

SMC configuration error code.

```
status_t SMC_SetPowerModeWait(SMC_Type *base)
```

Configure the system to WAIT power mode.

Parameters

- *base* – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeStop(SMC_Type *base, *smc_partial_stop_option_t* option)

Configure the system to Stop power mode.

Parameters

- base – SMC peripheral base address.
- option – Partial Stop mode option.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpr(SMC_Type *base)

Configure the system to VLPR power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpw(SMC_Type *base)

Configure the system to VLPW power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlps(SMC_Type *base)

Configure the system to VLPS power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeLls(SMC_Type *base)

Configure the system to LLS power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlls0(SMC_Type *base)

Configure the system to VLLS0 power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlls2(SMC_Type *base)

Configure the system to VLLS2 power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

```
static inline uint32_t SMC_GetPreviousResetSources(SMC_Type *base)
```

Gets the reset source status which caused a previous reset.

This function gets the current reset source status. Use source masks defined in the `smc_reset_source_t` to get the desired source status.

Example: To get all reset source statuses.

```
resetStatus = SMC_GetPreviousResetSources(SMC0) & kSMC_SourceAll;
```

Example: To test whether the MCU is reset using Watchdog.

```
uint32_t resetStatus;

resetStatus = SMC_GetPreviousResetSources(SMC0) & kSMC_SourceWdog;
```

Example: To test multiple reset sources.

```
uint32_t resetStatus;

resetStatus = SMC_GetPreviousResetSources(SMC0) & (kSMC_SourceWdog | kSMC_SourcePin);
```

Parameters

- `base` – SMC peripheral base address.

Returns

All reset source status bit map.

```
static inline uint32_t SMC_GetStickyResetSources(SMC_Type *base)
```

Gets the sticky reset source status.

This function gets the current reset source status that has not been cleared by software for some specific source.

Example: To get all reset source statuses.

```
uint32_t resetStatus;

resetStatus = SMC_GetStickyResetSources(SMC0) & kSMC_SourceAll;
```

Example, To test whether the MCU is reset using Watchdog.

```
uint32_t resetStatus;

resetStatus = SMC_GetStickyResetSources(SMC0) & kSMC_SourceWdog;
```

Example To test multiple reset sources.

```
uint32_t resetStatus;

resetStatus = SMC_GetStickyResetSources(SMC0) & (kSMC_SourceWdog | kSMC_SourcePin);
```

Parameters

- `base` – SMC peripheral base address.

Returns

All reset source status bit map.

```
static inline void SMC_ClearStickyResetSources(SMC_Type *base, uint32_t sourceMasks)
```

Clears the sticky reset source status.

This function clears the sticky system reset flags indicated by source masks.

Example: Clears multiple reset sources.

```
SMC_ClearStickyResetSources(SMC0, (kSMC_SourceWdog | kSMC_SourcePin));
```

Parameters

- base – SMC peripheral base address.
- sourceMasks – reset source status bit map

```
void SMC_ConfigureResetPinFilter(SMC_Type *base, const smc_reset_pin_filter_config_t *config)
```

Configures the reset pin filter.

This function sets the reset pin filter including the enablement/disablement and filter width.

Parameters

- base – SMC peripheral base address.
- config – Pointer to the configuration structure.

```
static inline void SMC_SetSystemResetInterruptConfig(SMC_Type *base, uint32_t intMask)
```

Sets the system reset interrupt configuration.

For a graceful shut down, the MSMC supports delaying the assertion of the system reset for a period of time when the reset interrupt is generated. This function can be used to enable the interrupt. The interrupts are passed in as bit mask. See `smc_interrupt_enable_t` for details. For example, to delay a reset after the WDOG timeout or PIN reset occurs, configure as follows: `SMC_SetSystemResetInterruptConfig(SMC0, (kSMC_IntWdog | kSMC_IntPin));`

Parameters

- base – SMC peripheral base address.
- intMask – Bit mask of the system reset interrupts to enable. See `smc_interrupt_enable_t` for details.

```
static inline uint32_t SMC_GetResetInterruptSourcesStatus(SMC_Type *base)
```

Gets the source status of the system reset interrupt.

This function gets the source status of the reset interrupt. Use source masks defined in the `smc_interrupt_enable_t` to get the desired source status.

Example: To get all reset interrupt source statuses.

```
uint32_t interruptStatus;  
interruptStatus = SMC_GetResetInterruptSourcesStatus(SMC0) & kSMC_IntAll;
```

Example: To test whether the reset interrupt of Watchdog is pending.

```
uint32_t interruptStatus;  
interruptStatus = SMC_GetResetInterruptSourcesStatus(SMC0) & kSMC_IntWdog;
```

Example: To test multiple reset interrupt sources.

```
uint32_t interruptStatus;  
interruptStatus = SMC_GetResetInterruptSourcesStatus(SMC0) & (kSMC_IntWdog | kSMC_IntPin);
```

Parameters

- base – SMC peripheral base address.

Returns

All reset interrupt source status bit map.

```
static inline void SMC_ClearResetInterruptSourcesStatus(SMC_Type *base, uint32_t intMask)
```

Clears the source status of the system reset interrupt.

This function clears the source status of the reset interrupt. Use source masks defined in the `smc_interrupt_enable_t` to get the desired source status.

Example: To clear all reset interrupt source statuses.

```
uint32_t interruptStatus;

MMC_ClearResetInterruptSourcesStatus(SMC0, kSMC_IntAll);
```

Example, To clear the reset interrupt of Watchdog.

```
uint32_t interruptStatus;

SMC_ClearResetInterruptSourcesStatus(SMC0, kSMC_IntWdog);
```

Example, To clear multiple reset interrupt sources status.

```
uint32_t interruptStatus;

SMC_ClearResetInterruptSourcesStatus(SMC0, (kSMC_IntWdog | kSMC_IntPin));
```

Parameters

- `base` – SMC peripheral base address.
- `intMask` – All reset interrupt source status bit map to clear.

```
static inline void SMC_SetCoreSoftwareResetConfig(SMC_Type *base, uint32_t intMask)
```

Sets the core software reset feature configuration.

The MSMC supports delaying the assertion of the system reset for a period of time while a core software reset is generated. This allows software to recover without resetting the entire system. This function can be used to enable/disable the core software reset feature. The interrupts are passed in as bit mask. See `smc_interrupt_enable_t` for details. For example, to delay a system after the WDOG timeout or PIN core software reset occurs, configure as follows: `SMC_SetCoreSoftwareResetConfig(SMC0, (kSMC_IntWdog | kSMC_IntPin));`

Parameters

- `base` – SMC peripheral base address.
- `intMask` – Bit mask of the core software reset to enable. See `smc_interrupt_enable_t` for details.

```
static inline uint32_t SMC_GetBootOptionConfig(SMC_Type *base)
```

Gets the boot option configuration.

This function gets the boot option configuration of MSMC.

Parameters

- `base` – SMC peripheral base address.

Returns

The boot option configuration. 1 means boot option enabled. 0 means not.

```
FSL_MSMC_DRIVER_VERSION
```

MSMC driver version.

```
enum _smc_power_mode_protection
```

Power Modes Protection.

Values:

enumerator kSMC_AllowPowerModeVlls
Allow Very-Low-Leakage Stop Mode.

enumerator kSMC_AllowPowerModeLls
Allow Low-Leakage Stop Mode.

enumerator kSMC_AllowPowerModeVlp
Allow Very-Low-Power Mode.

enumerator kSMC_AllowPowerModeHsrn
Allow High Speed Run mode.

enumerator kSMC_AllowPowerModeAll
Allow all power mode.

enum _smc_power_state
Power Modes in PMSTAT.

Values:

enumerator kSMC_PowerStateRun
0000_0001 - Current power mode is RUN

enumerator kSMC_PowerStateStop
0000_0010 - Current power mode is any STOP mode

enumerator kSMC_PowerStateVlpr
0000_0100 - Current power mode is VLPR

enumerator kSMC_PowerStateHsrn
1000_0000 - Current power mode is HSRUN

enum _smc_power_stop_entry_status
Power Stop Entry Status in PMSTAT.

Values:

enumerator kSMC_PowerStopEntryAlt0
Indicates a Stop mode entry since this field was last cleared.

enumerator kSMC_PowerStopEntryAlt1
Indicates the system bus masters acknowledged the Stop mode entry.

enumerator kSMC_PowerStopEntryAlt2
Indicates the system clock peripherals acknowledged the Stop mode entry.

enumerator kSMC_PowerStopEntryAlt3
Indicates the bus clock peripherals acknowledged the Stop mode entry.

enumerator kSMC_PowerStopEntryAlt4
Indicates the slow clock peripherals acknowledged the Stop mode entry.

enumerator kSMC_PowerStopEntryAlt5
Indicates Stop mode entry completed.

enum _smc_run_mode
Run mode definition.

Values:

enumerator kSMC_RunNormal
normal RUN mode.

enumerator kSMC_RunVlpr
Very-Low-Power RUN mode.

enumerator kSMC_Hsrun
High Speed Run mode (HSRUN).

enum _smc_stop_mode
Stop mode definition.

Values:

enumerator kSMC_StopNormal
Normal STOP mode.

enumerator kSMC_StopVlps
Very-Low-Power STOP mode.

enumerator kSMC_StopLls
Low-Leakage Stop mode.

enumerator kSMC_StopVlls2
Very-Low-Leakage Stop mode, VLPS2/3.

enumerator kSMC_StopVlls0
Very-Low-Leakage Stop mode, VLPS0/1.

enum _smc_partial_stop_mode
Partial STOP option.

Values:

enumerator kSMC_PartialStop
STOP - Normal Stop mode

enumerator kSMC_PartialStop1
Partial Stop with both system and bus clocks disabled

enumerator kSMC_PartialStop2
Partial Stop with system clock disabled and bus clock enabled

enumerator kSMC_PartialStop3
Partial Stop with system clock enabled and bus clock disabled

SMC configuration status.

Values:

enumerator kStatus_SMC_StopAbort
Entering Stop mode is abort

enum _smc_reset_source
System Reset Source Name definitions.

Values:

enumerator kSMC_SourceWakeup
Very low-leakage wakeup reset

enumerator kSMC_SourcePor
Power on reset

enumerator kSMC_SourceLvd
Low-voltage detect reset

enumerator kSMC_SourceHvd
High-voltage detect reset

enumerator kSMC_SourceWarm
Warm reset. Warm Reset flag will assert if any of the system reset sources in this register assert (SRS[31:8])

enumerator kSMC_SourceFatal
Fatal reset

enumerator kSMC_SourceCore
Software reset that only reset the core, NOT a sticky system reset source.

enumerator kSMC_SourcePin
RESET_B pin reset.

enumerator kSMC_SourceMdm
MDM reset.

enumerator kSMC_SourceRstAck
Reset Controller timeout reset.

enumerator kSMC_SourceStopAck
Stop timeout reset

enumerator kSMC_SourceScg
SCG loss of lock or loss of clock

enumerator kSMC_SourceWdog
Watchdog reset

enumerator kSMC_SourceSoftware
Software reset

enumerator kSMC_SourceLockup
Lockup reset. Core lockup or exception.

enumerator kSMC_SourceJtag
JTAG system reset

enumerator kSMC_SourceVbat
Vbat reset

enumerator kSMC_SourceSecVio
Security violation reset

enumerator kSMC_SourceTamper
Tamper reset

enumerator kSMC_SourceCore0
Core0 System Reset.

enumerator kSMC_SourceCore1
Core1 System Reset.

enumerator kSMC_SourceAll
All system reset sources

enum _smc_interrupt_enable
System reset interrupt enable bit definitions.

Values:

enumerator kSMC_IntNone
No interrupt enabled.

```

enumerator kSMC_IntPin
    Pin reset interrupt.
enumerator kSMC_IntMdm
    MDM reset interrupt.
enumerator kSMC_IntStopAck
    Stop timeout reset interrupt.
enumerator kSMC_IntWdog
    Watchdog interrupt.
enumerator kSMC_IntSoftware
    Software reset interrupts.
enumerator kSMC_IntLockup
    Lock up interrupt.
enumerator kSMC_IntVbat
enumerator kSMC_IntCore0
enumerator kSMC_IntCore1
    Core 0 interrupts.
enumerator kSMC_IntAll
    Core 1 interrupts. All system reset interrupts.
typedef enum _smc_power_mode_protection smc_power_mode_protection_t
    Power Modes Protection.
typedef enum _smc_power_state smc_power_state_t
    Power Modes in PMSTAT.
typedef enum _smc_power_stop_entry_status smc_power_stop_entry_status_t
    Power Stop Entry Status in PMSTAT.
typedef enum _smc_run_mode smc_run_mode_t
    Run mode definition.
typedef enum _smc_stop_mode smc_stop_mode_t
    Stop mode definition.
typedef enum _smc_partial_stop_mode smc_partial_stop_option_t
    Partial STOP option.
typedef enum _smc_reset_source smc_reset_source_t
    System Reset Source Name definitions.
typedef enum _smc_interrupt_enable smc_interrupt_enable_t
    System reset interrupt enable bit definitions.
typedef struct _smc_reset_pin_filter_config smc_reset_pin_filter_config_t
    Reset pin filter configuration.
struct _smc_reset_pin_filter_config
    #include <fsl_msmc.h> Reset pin filter configuration.

```

Public Members

`uint8_t` `slowClockFilterCount`

Reset pin bus clock filter width from 1 to 32 slow clock cycles.

`bool` `enableFilter`

Reset pin filter enable/disable.

2.58 MU: Messaging Unit

`void` `MU_Init`(`MU_Type` *base)

Initializes the MU module.

This function enables the MU clock only.

Parameters

- `base` – MU peripheral base address.

`void` `MU_Deinit`(`MU_Type` *base)

De-initializes the MU module.

This function disables the MU clock only.

Parameters

- `base` – MU peripheral base address.

`static inline void` `MU_SendMsgNonBlocking`(`MU_Type` *base, `uint32_t` regIndex, `uint32_t` msg)

Writes a message to the TX register.

This function writes a message to the specific TX register. It does not check whether the TX register is empty or not. The upper layer should make sure the TX register is empty before calling this function. This function can be used in ISR for better performance.

```
while (!(kMU_Tx0EmptyFlag & MU_GetStatusFlags(base))) { } Wait for TX0 register empty.  
MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG_VAL); Write message to the TX0 register.
```

Parameters

- `base` – MU peripheral base address.
- `regIndex` – TX register index, see `mu_msg_reg_index_t`.
- `msg` – Message to send.

`status_t` `MU_SendMsg`(`MU_Type` *base, `uint32_t` regIndex, `uint32_t` msg)

Blocks to send a message.

This function waits until the TX register is empty and sends the message. If `MU_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and returns `kStatus_Timeout`.

Parameters

- `base` – MU peripheral base address.
- `regIndex` – MU message register, see `mu_msg_reg_index_t`.
- `msg` – Message to send.

Return values

- `kStatus_Success` – Message sent successfully.

- `kStatus_Timeout` – Timeout occurred while waiting for TX register to be empty.

Returns

`status_t`

`static inline uint32_t MU_ReceiveMsgNonBlocking(MU_Type *base, uint32_t regIndex)`

Reads a message from the RX register.

This function reads a message from the specific RX register. It does not check whether the RX register is full or not. The upper layer should make sure the RX register is full before calling this function. This function can be used in ISR for better performance.

```
uint32_t msg;
while (!(kMU_Rx0FullFlag & MU_GetStatusFlags(base)))
{
} Wait for the RX0 register full.

msg = MU_ReceiveMsgNonBlocking(base, kMU_MsgReg0); Read message from RX0 register.
```

Parameters

- `base` – MU peripheral base address.
- `regIndex` – RX register index, see `mu_msg_reg_index_t`.

Returns

The received message.

`status_t MU_ReceiveMsgTimeout(MU_Type *base, uint32_t regIndex, uint32_t *readValue)`

Blocks to receive a message with timeout protection.

This function waits until the RX register is full and receives the message. If `MU_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and return `kStatus_Timeout`.

This function provides the same blocking behavior as `MU_ReceiveMsg()` but with additional timeout protection to prevent system hangs if the other core becomes unresponsive or if hardware issues occur.

Note: Both `MU_ReceiveMsg()` and `MU_ReceiveMsgTimeout()` are blocking functions. The difference is that this function includes timeout protection while `MU_ReceiveMsg()` waits indefinitely.

Parameters

- `base` – MU peripheral base address.
- `regIndex` – RX register index, see `mu_msg_reg_index_t`.
- `readValue` – Pointer to store the received message.

Return values

- `kStatus_Success` – Message received successfully.
- `kStatus_InvalidArgument` – Invalid `readValue` pointer.
- `kStatus_Timeout` – Timeout occurred while waiting for RX register to be full.

Returns

`status_t`

uint32_t MU_ReceiveMsg(MU_Type *base, uint32_t regIndex)

Blocks to receive a message (infinite wait, no timeout protection).

This function waits until the RX register is full and receives the message. This function will wait indefinitely until a message is received.

Note: Both MU_ReceiveMsg() and MU_ReceiveMsgTimeout() are blocking functions. The difference is that MU_ReceiveMsgTimeout() includes timeout protection while this function waits indefinitely.

Warning: This function does not include timeout protection and may cause system hangs if the other core becomes unresponsive. For applications requiring timeout protection, use MU_ReceiveMsgTimeout() instead.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.

Returns

The received message.

static inline void MU_SetFlagsNonBlocking(MU_Type *base, uint32_t flags)

Sets the 3-bit MU flags reflect on the other MU side.

This function sets the 3-bit MU flags directly. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. The upper layer should make sure the status flag kMU_FlagsUpdatingFlag is cleared before calling this function.

```
while (kMU_FlagsUpdatingFlag & MU_GetStatusFlags(base))
{
} Wait for previous MU flags updating.
```

```
MU_SetFlagsNonBlocking(base, 0U); Set the mU flags.
```

Parameters

- base – MU peripheral base address.
- flags – The 3-bit MU flags to set.

status_t MU_SetFlags(MU_Type *base, uint32_t flags)

Blocks setting the 3-bit MU flags reflect on the other MU side.

This function blocks setting the 3-bit MU flags. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. This function waits for the MU status flag kMU_FlagsUpdatingFlag cleared and sets the 3-bit MU flags.

If MU_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

Parameters

- base – MU peripheral base address.

- flags – The 3-bit MU flags to set.

Return values

- kStatus_Success – Flags were set successfully.
- kStatus_Timeout – Timeout occurred while waiting for flags to update.

Returns

status_t

```
static inline uint32_t MU_GetFlags(MU_Type *base)
```

Gets the current value of the 3-bit MU flags set by the other side.

This function gets the current 3-bit MU flags on the current side.

Parameters

- base – MU peripheral base address.

Returns

flags Current value of the 3-bit flags.

```
static inline uint32_t MU_GetStatusFlags(MU_Type *base)
```

Gets the MU status flags.

This function returns the bit mask of the MU status flags. See `_mu_status_flags`.

```
uint32_t flags;
flags = MU_GetStatusFlags(base); Get all status flags.
if (kMU_Tx0EmptyFlag & flags)
{
    The TX0 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG0_VAL);
}
if (kMU_Tx1EmptyFlag & flags)
{
    The TX1 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg1, MSG1_VAL);
}
```

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU status flags, see `_mu_status_flags`.

```
static inline uint32_t MU_GetRxStatusFlags(MU_Type *base)
```

Return the RX status flags.

This function return the RX status flags. Note: RFn bits of SR[27-24](mu status register) are mapped in reverse numerical order: RF0 -> SR[27] RF1 -> SR[26] RF2 -> SR[25] RF3 -> SR[24]

```
status_reg = MU_GetRxStatusFlags(base);
```

Parameters

- base – MU peripheral base address.

Returns

MU RX status

```
static inline uint32_t MU_GetInterruptsPending(MU_Type *base)
```

Gets the MU IRQ pending status of enabled interrupts.

This function returns the bit mask of the pending MU IRQs of enabled interrupts. Only these flags are checked. kMU_Tx0EmptyFlag kMU_Tx1EmptyFlag kMU_Tx2EmptyFlag kMU_Tx3EmptyFlag kMU_Rx0FullFlag kMU_Rx1FullFlag kMU_Rx2FullFlag kMU_Rx3FullFlag kMU_GenInt0Flag kMU_GenInt1Flag kMU_GenInt2Flag kMU_GenInt3Flag

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU IRQs pending.

```
static inline void MU_ClearStatusFlags(MU_Type *base, uint32_t mask)
```

Clears the specific MU status flags.

This function clears the specific MU status flags. The flags to clear should be passed in as bit mask. See `_mu_status_flags`.

```
Clear general interrupt 0 and general interrupt 1 pending flags.
MU_ClearStatusFlags(base, kMU_GenInt0Flag | kMU_GenInt1Flag);
```

Parameters

- base – MU peripheral base address.
- mask – Bit mask of the MU status flags. See `_mu_status_flags`. The following flags are cleared by hardware, this function could not clear them.
 - kMU_Tx0EmptyFlag
 - kMU_Tx1EmptyFlag
 - kMU_Tx2EmptyFlag
 - kMU_Tx3EmptyFlag
 - kMU_Rx0FullFlag
 - kMU_Rx1FullFlag
 - kMU_Rx2FullFlag
 - kMU_Rx3FullFlag
 - kMU_EventPendingFlag
 - kMU_FlagsUpdatingFlag
 - kMU_OtherSideInResetFlag

```
static inline void MU_EnableInterrupts(MU_Type *base, uint32_t mask)
```

Enables the specific MU interrupts.

This function enables the specific MU interrupts. The interrupts to enable should be passed in as bit mask. See `_mu_interrupt_enable`.

```
Enable general interrupt 0 and TX0 empty interrupt.
MU_EnableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);
```

Parameters

- base – MU peripheral base address.
- mask – Bit mask of the MU interrupts. See `_mu_interrupt_enable`.

```
static inline void MU_DisableInterrupts(MU_Type *base, uint32_t mask)
```

Disables the specific MU interrupts.

This function disables the specific MU interrupts. The interrupts to disable should be passed in as bit mask. See `_mu_interrupt_enable`.

```
Disable general interrupt 0 and TX0 empty interrupt.
MU_DisableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);
```

Parameters

- `base` – MU peripheral base address.
- `mask` – Bit mask of the MU interrupts. See `_mu_interrupt_enable`.

```
status_t MU_TriggerInterrupts(MU_Type *base, uint32_t mask)
```

Triggers interrupts to the other core.

This function triggers the specific interrupts to the other core. The interrupts to trigger are passed in as bit mask. See `_mu_interrupt_trigger`. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
if (kStatus_Success != MU_TriggerInterrupts(base, kMU_GenInt0InterruptTrigger | kMU_
↔ GenInt2InterruptTrigger))
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

Parameters

- `base` – MU peripheral base address.
- `mask` – Bit mask of the interrupts to trigger. See `_mu_interrupt_trigger`.

Return values

- `kStatus_Success` – Interrupts have been triggered successfully.
- `kStatus_Fail` – Previous interrupts have not been accepted.

```
static inline void MU_MaskHardwareReset(MU_Type *base, bool mask)
```

Mask hardware reset by the other core.

The other core could call `MU_HardwareResetOtherCore()` to reset current core. To mask the reset, call this function and pass in true.

Parameters

- `base` – MU peripheral base address.
- `mask` – Pass true to mask the hardware reset, pass false to unmask it.

```
FSL_MU_DRIVER_VERSION
```

MU driver version.

```
enum _mu_status_flags
```

MU status flags.

Values:

```
enumerator kMU_Tx0EmptyFlag
    TX0 empty.
```

enumerator kMU_Tx1EmptyFlag

TX1 empty.

enumerator kMU_Tx2EmptyFlag

TX2 empty.

enumerator kMU_Tx3EmptyFlag

TX3 empty.

enumerator kMU_Rx0FullFlag

RX0 full.

enumerator kMU_Rx1FullFlag

RX1 full.

enumerator kMU_Rx2FullFlag

RX2 full.

enumerator kMU_Rx3FullFlag

RX3 full.

enumerator kMU_GenInt0Flag

General purpose interrupt 0 pending.

enumerator kMU_GenInt1Flag

General purpose interrupt 1 pending.

enumerator kMU_GenInt2Flag

General purpose interrupt 2 pending.

enumerator kMU_GenInt3Flag

General purpose interrupt 3 pending.

enumerator kMU_EventPendingFlag

MU event pending.

enumerator kMU_FlagsUpdatingFlag

MU flags update is on-going.

enumerator kMU_ResetAssertInterruptFlag

The other core reset assert interrupt pending.

enumerator kMU_ResetDeassertInterruptFlag

The other core reset de-assert interrupt pending.

enumerator kMU_OtherSideInResetFlag

The other side is in reset.

enumerator kMU_MuResetInterruptFlag

The other side initializes MU reset.

enumerator kMU_HardwareResetInterruptFlag

Current side has been hardware reset by the other side.

enum _mu_interrupt_enable

MU interrupt source to enable.

Values:

enumerator kMU_Tx0EmptyInterruptEnable

TX0 empty.

enumerator kMU_Tx1EmptyInterruptEnable
TX1 empty.

enumerator kMU_Tx2EmptyInterruptEnable
TX2 empty.

enumerator kMU_Tx3EmptyInterruptEnable
TX3 empty.

enumerator kMU_Rx0FullInterruptEnable
RX0 full.

enumerator kMU_Rx1FullInterruptEnable
RX1 full.

enumerator kMU_Rx2FullInterruptEnable
RX2 full.

enumerator kMU_Rx3FullInterruptEnable
RX3 full.

enumerator kMU_GenInt0InterruptEnable
General purpose interrupt 0.

enumerator kMU_GenInt1InterruptEnable
General purpose interrupt 1.

enumerator kMU_GenInt2InterruptEnable
General purpose interrupt 2.

enumerator kMU_GenInt3InterruptEnable
General purpose interrupt 3.

enumerator kMU_ResetAssertInterruptEnable
The other core reset assert interrupt.

enumerator kMU_ResetDeassertInterruptEnable
The other core reset de-assert interrupt.

enumerator kMU_MuResetInterruptEnable
The other side initializes MU reset. The interrupt is ORed with the general purpose interrupt 3. The general purpose interrupt 3 is issued when the other side set the MU reset and this interrupt is enabled.

enumerator kMU_HardwareResetInterruptEnable
Current side has been hardware reset by the other side.

enum _mu_interrupt_trigger
MU interrupt that could be triggered to the other core.

Values:

enumerator kMU_GenInt0InterruptTrigger
General purpose interrupt 0.

enumerator kMU_GenInt1InterruptTrigger
General purpose interrupt 1.

enumerator kMU_GenInt2InterruptTrigger
General purpose interrupt 2.

enumerator kMU_GenInt3InterruptTrigger
General purpose interrupt 3.

enum `_mu_msg_reg_index`

MU message register.

Values:

enumerator `kMU_MsgReg0`

enumerator `kMU_MsgReg1`

enumerator `kMU_MsgReg2`

enumerator `kMU_MsgReg3`

typedef enum `_mu_msg_reg_index` `mu_msg_reg_index_t`

MU message register.

`MU_CR_NMI_MASK`

`MU_BUSY_POLL_COUNT`

Maximum polling iterations for MU waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the MU code before timing out and returning an error.

It applies to all waiting loops in MU driver, such as waiting for TX register to be empty or waiting for RX register to be full.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if a core becomes unresponsive.

`MU_GET_CORE_FLAG(flags)`

`MU_GET_STAT_FLAG(flags)`

`MU_GET_TX_FLAG(flags)`

`MU_GET_RX_FLAG(flags)`

`MU_GET_GI_FLAG(flags)`

2.59 PORT: Port Control and Interrupts

```
static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const port_pin_config_t *config)
```

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const
                                             port_pin_config_t *config)
```

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask,
                                                       port_interrupt_t config)
```

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.
 - kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kPORT_InterruptLogicZero : Interrupt when logic zero.
 - kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - kPORT_InterruptEitherEdge : Interrupt on either edge.
 - kPORT_InterruptLogicOne : Interrupt when logic one.

- `kPORT_ActiveHighTriggerOutputEnable` : Enable active high-trigger output (if the trigger states exit).
- `kPORT_ActiveLowTriggerOutputEnable` : Enable active low-trigger output (if the trigger states exit).

static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, *port_mux_t* mux)

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the `PORT_SetPinsConfig`, because the `PORT_SetPinsConfig` need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : `kPORT_PinDisabledOrAnalog`). This function is recommended to use to reset the pin mux

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `mux` – pin muxing slot selection.
 - `kPORT_PinDisabledOrAnalog`: Pin disabled or work in analog function.
 - `kPORT_MuxAsGpio` : Set as GPIO.
 - `kPORT_MuxAlt2` : chip-specific.
 - `kPORT_MuxAlt3` : chip-specific.
 - `kPORT_MuxAlt4` : chip-specific.
 - `kPORT_MuxAlt5` : chip-specific.
 - `kPORT_MuxAlt6` : chip-specific.
 - `kPORT_MuxAlt7` : chip-specific.

static inline void PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `mask` – PORT pin number macro.
- `enable` – PORT digital filter configuration.

static inline void PORT_SetDigitalFilterConfig(PORT_Type *base, const
port_digital_filter_config_t *config)

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `config` – PORT digital filter configuration structure.

static inline void PORT_SetPinInterruptConfig(PORT_Type *base, uint32_t pin, *port_interrupt_t*
config)

Configures the port pin interrupt/DMA request.

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.

- config – PORT pin interrupt configuration.
 - kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kPORT_InterruptLogicZero : Interrupt when logic zero.
 - kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - kPORT_InterruptEitherEdge : Interrupt on either edge.
 - kPORT_InterruptLogicOne : Interrupt when logic one.
 - kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline uint32_t PORT_GetPinsInterruptFlags(PORT_Type *base)
Reads the whole port status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – PORT peripheral base pointer.

Returns

Current port interrupt status flags, for example, 0x00010001 means the pin 0 and 16 have the interrupt.

static inline void PORT_ClearPinsInterruptFlags(PORT_Type *base, uint32_t mask)
Clears the multiple pin interrupt status flag.

Parameters

- base – PORT peripheral base pointer.

- mask – PORT pin number macro.

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum _port_pull

Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable

Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown

Internal pull-down resistor is enabled.

enumerator kPORT_PullUp

Internal pull-up resistor is enabled.

enum _port_slew_rate

Slew rate selection.

Values:

enumerator kPORT_FastSlewRate

Fast slew rate is configured.

enumerator kPORT_SlowSlewRate

Slow slew rate is configured.

enum _port_open_drain_enable

Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable

Open drain output is disabled.

enumerator kPORT_OpenDrainEnable

Open drain output is enabled.

enum _port_passive_filter_enable

Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable

Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable

Passive input filter is enabled.

enum _port_drive_strength

Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength

Low-drive strength is configured.

enumerator kPORT_HighDriveStrength

High-drive strength is configured.

enum `_port_lock_register`

Unlock/lock the pin control register field[15:0].

Values:

enumerator `kPORT_UnlockRegister`

Pin Control Register fields [15:0] are not locked.

enumerator `kPORT_LockRegister`

Pin Control Register fields [15:0] are locked.

enum `_port_mux`

Pin mux selection.

Values:

enumerator `kPORT_PinDisabledOrAnalog`

Corresponding pin is disabled, but is used as an analog pin.

enumerator `kPORT_MuxAsGpio`

Corresponding pin is configured as GPIO.

enumerator `kPORT_MuxAlt0`

Chip-specific

enumerator `kPORT_MuxAlt1`

Chip-specific

enumerator `kPORT_MuxAlt2`

Chip-specific

enumerator `kPORT_MuxAlt3`

Chip-specific

enumerator `kPORT_MuxAlt4`

Chip-specific

enumerator `kPORT_MuxAlt5`

Chip-specific

enumerator `kPORT_MuxAlt6`

Chip-specific

enumerator `kPORT_MuxAlt7`

Chip-specific

enumerator `kPORT_MuxAlt8`

Chip-specific

enumerator `kPORT_MuxAlt9`

Chip-specific

enumerator `kPORT_MuxAlt10`

Chip-specific

enumerator `kPORT_MuxAlt11`

Chip-specific

enumerator `kPORT_MuxAlt12`

Chip-specific

enumerator `kPORT_MuxAlt13`

Chip-specific

enumerator kPORT_MuxAlt14

Chip-specific

enumerator kPORT_MuxAlt15

Chip-specific

enum __port_interrupt

Configures the interrupt generation condition.

Values:

enumerator kPORT_InterruptOrDMADisabled

Interrupt/DMA request is disabled.

enumerator kPORT_DMARisingEdge

DMA request on rising edge.

enumerator kPORT_DMAFallingEdge

DMA request on falling edge.

enumerator kPORT_DMAEitherEdge

DMA request on either edge.

enumerator kPORT_FlagRisingEdge

Flag sets on rising edge.

enumerator kPORT_FlagFallingEdge

Flag sets on falling edge.

enumerator kPORT_FlagEitherEdge

Flag sets on either edge.

enumerator kPORT_InterruptLogicZero

Interrupt when logic zero.

enumerator kPORT_InterruptRisingEdge

Interrupt on rising edge.

enumerator kPORT_InterruptFallingEdge

Interrupt on falling edge.

enumerator kPORT_InterruptEitherEdge

Interrupt on either edge.

enumerator kPORT_InterruptLogicOne

Interrupt when logic one.

enumerator kPORT_ActiveHighTriggerOutputEnable

Enable active high-trigger output.

enumerator kPORT_ActiveLowTriggerOutputEnable

Enable active low-trigger output.

enum __port_digital_filter_clock_source

Digital filter clock source selection.

Values:

enumerator kPORT_BusClock

Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock

Digital filters are clocked by the 1 kHz LPO clock.

```
typedef enum _port_mux port_mux_t
    Pin mux selection.

typedef enum _port_interrupt port_interrupt_t
    Configures the interrupt generation condition.

typedef enum _port_digital_filter_clock_source port_digital_filter_clock_source_t
    Digital filter clock source selection.

typedef struct _port_digital_filter_config port_digital_filter_config_t
    PORT digital filter feature configuration definition.

typedef struct _port_pin_config port_pin_config_t
    PORT pin configuration structure.

FSL_COMPONENT_ID

struct _port_digital_filter_config
    #include <fsl_port.h> PORT digital filter feature configuration definition.
```

Public Members

```
uint32_t digitalFilterWidth
    Set digital filter width

port_digital_filter_clock_source_t clockSource
    Set digital filter clockSource

struct _port_pin_config
    #include <fsl_port.h> PORT pin configuration structure.
```

Public Members

```
uint16_t pullSelect
    No-pull/pull-down/pull-up select

uint16_t slewRate
    Fast/slow slew rate Configure

uint16_t passiveFilterEnable
    Passive filter enable/disable

uint16_t openDrainEnable
    Open drain enable/disable

uint16_t driveStrength
    Fast/slow drive strength configure

uint16_t lockRegister
    Lock/unlock the PCR field[15:0]
```

2.60 RTC: Real Time Clock

void RTC_Init(RTC_Type *base, const *rtc_config_t* *config)

Ungates the RTC clock and configures the peripheral for basic operation.

This function issues a software reset if the timer invalid flag is set.

Note: This API should be called at the beginning of the application using the RTC driver.

Parameters

- base – RTC peripheral base address
- config – Pointer to the user's RTC configuration structure.

static inline void RTC_Deinit(RTC_Type *base)

Stops the timer and gate the RTC clock.

Parameters

- base – RTC peripheral base address

void RTC_GetDefaultConfig(*rtc_config_t* *config)

Fills in the RTC config struct with the default settings.

The default values are as follows.

```
config->clockOutput = false;
config->wakeupSelect = false;
config->updateMode = false;
config->supervisorAccess = false;
config->compensationInterval = 0;
config->compensationTime = 0;
```

Parameters

- config – Pointer to the user's RTC configuration structure.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the RTC date and time according to the given time structure.

The RTC counter must be stopped prior to calling this function because writes to the RTC seconds register fail if the RTC counter is running.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

Returns

kStatus_Success: Success in setting the time and starting the RTC
kStatus_InvalidArgument: Error because the datetime format is incorrect

void RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Gets the RTC time and stores it in the given time structure.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

status_t RTC_SetAlarm(RTC_Type *base, const *rtc_datetime_t* *alarmTime)

Sets the RTC alarm time.

The function checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error.

Parameters

- base – RTC peripheral base address
- alarmTime – Pointer to the structure where the alarm time is stored.

Returns

kStatus_Success: success in setting the RTC alarm
 kStatus_InvalidArgument: Error because the alarm datetime format is incorrect
 kStatus_Fail: Error because the alarm time has already passed

void RTC_GetAlarm(RTC_Type *base, *rtc_datetime_t* *datetime)

Returns the RTC alarm time.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the alarm date and time details are stored.

void RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *rtc_interrupt_enable_t*

void RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *rtc_interrupt_enable_t*

uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration *rtc_interrupt_enable_t*

uint32_t RTC_GetStatusFlags(RTC_Type *base)

Gets the RTC status flags.

Parameters

- base – RTC peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration *rtc_status_flags_t*

void RTC_ClearStatusFlags(RTC_Type *base, uint32_t mask)

Clears the RTC status flags.

Parameters

- base – RTC peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `rtc_status_flags_t`

static inline void RTC_EnableLPOClock(RTC_Type *base, bool enable)

Enable/Disable RTC 1kHz LPO clock.

Note: After setting this bit, RTC prescaler increments using the LPO 1kHz clock and not the RTC 32kHz crystal clock.

Parameters

- base – RTC peripheral base address
- enable – Enable/Disable RTC 1kHz LPO clock

static inline void RTC_StartTimer(RTC_Type *base)

Starts the RTC time counter.

After calling this function, the timer counter increments once a second provided SR[TOF] or SR[TIF] are not set.

Parameters

- base – RTC peripheral base address

static inline void RTC_StopTimer(RTC_Type *base)

Stops the RTC time counter.

RTC's seconds register can be written to only when the timer is stopped.

Parameters

- base – RTC peripheral base address

void RTC_GetMonotonicCounter(RTC_Type *base, uint64_t *counter)

Reads the values of the Monotonic Counter High and Monotonic Counter Low and returns them as a single value.

Parameters

- base – RTC peripheral base address
- counter – Pointer to variable where the value is stored.

void RTC_SetMonotonicCounter(RTC_Type *base, uint64_t counter)

Writes values Monotonic Counter High and Monotonic Counter Low by decomposing the given single value. The Monotonic Overflow Flag in RTC_SR is cleared due to the API.

Parameters

- base – RTC peripheral base address
- counter – Counter value

status_t RTC_IncrementMonotonicCounter(RTC_Type *base)

Increments the Monotonic Counter by one.

Increments the Monotonic Counter (registers RTC_MCLR and RTC_MCHR accordingly) by setting the monotonic counter enable (MER[MCE]) and then writing to the RTC_MCLR register. A write to the monotonic counter low that causes it to overflow also increments the monotonic counter high.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success: success
kStatus_Fail: error occurred, either time invalid or monotonic overflow flag was found

FSL_RTC_DRIVER_VERSION

Version 2.4.0

enum _rtc_interrupt_enable

List of RTC interrupts.

Values:

enumerator kRTC_TimeInvalidInterruptEnable

Time invalid interrupt.

enumerator kRTC_TimeOverflowInterruptEnable

Time overflow interrupt.

enumerator kRTC_AlarmInterruptEnable

Alarm interrupt.

enumerator kRTC_MonotonicOverflowInterruptEnable

Monotonic Overflow Interrupt Enable

enumerator kRTC_SecondsInterruptEnable

Seconds interrupt.

enumerator kRTC_TestModeInterruptEnable

enumerator kRTC_FlashSecurityInterruptEnable

enumerator kRTC_TamperPinInterruptEnable

enumerator kRTC_SecurityModuleInterruptEnable

enumerator kRTC_LossOfClockInterruptEnable

enum _rtc_status_flags

List of RTC flags.

Values:

enumerator kRTC_TimeInvalidFlag

Time invalid flag

enumerator kRTC_TimeOverflowFlag

Time overflow flag

enumerator kRTC_AlarmFlag

Alarm flag

enumerator kRTC_MonotonicOverflowFlag

Monotonic Overflow Flag

enumerator kRTC_TamperInterruptDetectFlag

Tamper interrupt detect flag

enumerator `kRTC_TestModeFlag`
enumerator `kRTC_FlashSecurityFlag`
enumerator `kRTC_TamperPinFlag`
enumerator `kRTC_SecurityTamperFlag`
enumerator `kRTC_LossOfClockTamperFlag`

enum `_rtc_osc_cap_load`

List of RTC Oscillator capacitor load settings.

Values:

enumerator `kRTC_Capacitor_2p`
2 pF capacitor load
enumerator `kRTC_Capacitor_4p`
4 pF capacitor load
enumerator `kRTC_Capacitor_8p`
8 pF capacitor load
enumerator `kRTC_Capacitor_16p`
16 pF capacitor load

enum `_rtc_timer_seconds_interrupt_frequency`

List of RTC Timer Seconds Interrupt Frequencies.

Values:

enumerator `kRTC_TimerSecondsFrequency1Hz`
Timer seconds frequency is 1Hz
enumerator `kRTC_TimerSecondsFrequency2Hz`
Timer seconds frequency is 2Hz
enumerator `kRTC_TimerSecondsFrequency4Hz`
Timer seconds frequency is 4Hz
enumerator `kRTC_TimerSecondsFrequency8Hz`
Timer seconds frequency is 8Hz
enumerator `kRTC_TimerSecondsFrequency16Hz`
Timer seconds frequency is 16Hz
enumerator `kRTC_TimerSecondsFrequency32Hz`
Timer seconds frequency is 32Hz
enumerator `kRTC_TimerSecondsFrequency64Hz`
Timer seconds frequency is 64Hz
enumerator `kRTC_TimerSecondsFrequency128Hz`
Timer seconds frequency is 128Hz

typedef enum `_rtc_interrupt_enable` `rtc_interrupt_enable_t`

List of RTC interrupts.

typedef enum `_rtc_status_flags` `rtc_status_flags_t`

List of RTC flags.

typedef enum `_rtc_osc_cap_load` `rtc_osc_cap_load_t`

List of RTC Oscillator capacitor load settings.

```
typedef enum _rtc_timer_seconds_interrupt_frequency rtc_timer_seconds_interrupt_frequency_t
```

List of RTC Timer Seconds Interrupt Frequencies.

```
typedef struct _rtc_datetime rtc_datetime_t
```

Structure is used to hold the date and time.

```
typedef struct _rtc_pin_config rtc_pin_config_t
```

RTC pin config structure.

```
typedef struct _rtc_config rtc_config_t
```

RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the `RTC_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

```
static inline uint32_t RTC_GetTamperTimeSeconds(RTC_Type *base)
```

Get the RTC tamper time seconds.

Parameters

- `base` – RTC peripheral base address

```
static inline void RTC_SetOscCapLoad(RTC_Type *base, uint32_t capLoad)
```

This function sets the specified capacitor configuration for the RTC oscillator.

Parameters

- `base` – RTC peripheral base address
- `capLoad` – Oscillator loads to enable. This is a logical OR of members of the enumeration `rtc_osc_cap_load_t`

```
static inline void RTC_Reset(RTC_Type *base)
```

Performs a software reset on the RTC module.

This resets all RTC registers except for the SWR bit and the `RTC_WAR` and `RTC_RAR` registers. The SWR bit is cleared by software explicitly clearing it.

Parameters

- `base` – RTC peripheral base address

```
static inline void RTC_EnableWakeUpPin(RTC_Type *base, bool enable)
```

Enables or disables the RTC Wakeup Pin Operation.

This function enable or disable RTC Wakeup Pin. The wakeup pin is optional and not available on all devices.

Parameters

- `base` – `RTC_Type` base pointer.
- `enable` – true to enable, false to disable.

```
static inline void RTC_EnableClockOutput(RTC_Type *base, bool enable)
```

Enables or disables the RTC 32 kHz clock output.

This function enables or disables the RTC 32 kHz clock output.

Parameters

- `base` – `RTC_Type` base pointer.
- `enable` – true to enable, false to disable.

```
void RTC_SetTimerSecondsInterruptFrequency(RTC_Type *base,  
                                           rtc_timer_seconds_interrupt_frequency_t freq)
```

Sets the RTC timer seconds interrupt frequency.

This function sets the RTC timer seconds interrupt frequency.

Parameters

- base – RTC peripheral base address
- freq – The timer seconds interrupt frequency. This is a member of the enumeration `rtc_timer_seconds_interrupt_frequency_t`

```
struct _rtc_datetime
```

#include <fsl_rtc.h> Structure is used to hold the date and time.

Public Members

```
uint16_t year
```

Range from 1970 to 2099.

```
uint8_t month
```

Range from 1 to 12.

```
uint8_t day
```

Range from 1 to 31 (depending on month).

```
uint8_t hour
```

Range from 0 to 23.

```
uint8_t minute
```

Range from 0 to 59.

```
uint8_t second
```

Range from 0 to 59.

```
struct _rtc_pin_config
```

#include <fsl_rtc.h> RTC pin config structure.

Public Members

```
bool inputLogic
```

true: Tamper pin input data is logic one. false: Tamper pin input data is logic zero.

```
bool pinActiveLow
```

true: Tamper pin is active low. false: Tamper pin is active high.

```
bool filterEnable
```

true: Input filter is enabled on the tamper pin. false: Input filter is disabled on the tamper pin.

```
bool pullSelectNegate
```

true: Tamper pin pull resistor direction will negate the tamper pin. false: Tamper pin pull resistor direction will assert the tamper pin.

```
bool pullEnable
```

true: Pull resistor is enabled on tamper pin. false: Pull resistor is disabled on tamper pin.

struct `_rtc_config`

#include <fsl_rtc.h> RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the `RTC_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool `clockOutput`

true: The 32 kHz clock is not output to other peripherals; false: The 32 kHz clock is output to other peripherals

bool `wakeupSelect`

true: Wakeup pin outputs the 32 KHz clock; false: Wakeup pin used to wakeup the chip

bool `updateMode`

true: Registers can be written even when locked under certain conditions, false: No writes allowed when registers are locked

bool `supervisorAccess`

true: Non-supervisor accesses are allowed; false: Non-supervisor accesses are not supported

uint32_t `compensationInterval`

Compensation interval that is written to the CIR field in RTC TCR Register

uint32_t `compensationTime`

Compensation time that is written to the TCR field in RTC TCR Register

2.61 SAI: Serial Audio Interface

2.62 SAI Driver

void `SAI_Init(I2S_Type *base)`

Initializes the SAI peripheral.

This API gates the SAI clock. The SAI module can't operate unless `SAI_Init` is called to enable the clock.

Parameters

- `base` – SAI base pointer.

void `SAI_Deinit(I2S_Type *base)`

De-initializes the SAI peripheral.

This API gates the SAI clock. The SAI module can't operate unless `SAI_TxInit` or `SAI_RxInit` is called to enable the clock.

Parameters

- `base` – SAI base pointer.

void SAI_TxReset(I2S_Type *base)

Resets the SAI Tx.

This function enables the software reset and FIFO reset of SAI Tx. After reset, clear the reset bit.

Parameters

- base – SAI base pointer

void SAI_RxReset(I2S_Type *base)

Resets the SAI Rx.

This function enables the software reset and FIFO reset of SAI Rx. After reset, clear the reset bit.

Parameters

- base – SAI base pointer

void SAI_TxEnable(I2S_Type *base, bool enable)

Enables/disables the SAI Tx.

Parameters

- base – SAI base pointer.
- enable – True means enable SAI Tx, false means disable.

void SAI_RxEnable(I2S_Type *base, bool enable)

Enables/disables the SAI Rx.

Parameters

- base – SAI base pointer.
- enable – True means enable SAI Rx, false means disable.

static inline void SAI_TxSetBitClockDirection(I2S_Type *base, sai_master_slave_t masterSlave)

Set Rx bit clock direction.

Select bit clock direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

static inline void SAI_RxSetBitClockDirection(I2S_Type *base, sai_master_slave_t masterSlave)

Set Rx bit clock direction.

Select bit clock direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

static inline void SAI_RxSetFrameSyncDirection(I2S_Type *base, sai_master_slave_t masterSlave)

Set Rx frame sync direction.

Select frame sync direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

```
static inline void SAI_TxSetFrameSyncDirection(I2S_Type *base, sai_master_slave_t masterSlave)
    Set Tx frame sync direction.
```

Select frame sync direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

```
void SAI_TxSetBitClockRate(I2S_Type *base, uint32_t sourceClockHz, uint32_t sampleRate,
    uint32_t bitWidth, uint32_t channelNumbers)
```

Transmitter bit clock rate configurations.

Parameters

- base – SAI base pointer.
- sourceClockHz – Bit clock source frequency.
- sampleRate – Audio data sample rate.
- bitWidth – Audio data bitWidth.
- channelNumbers – Audio channel numbers.

```
void SAI_RxSetBitClockRate(I2S_Type *base, uint32_t sourceClockHz, uint32_t sampleRate,
    uint32_t bitWidth, uint32_t channelNumbers)
```

Receiver bit clock rate configurations.

Parameters

- base – SAI base pointer.
- sourceClockHz – Bit clock source frequency.
- sampleRate – Audio data sample rate.
- bitWidth – Audio data bitWidth.
- channelNumbers – Audio channel numbers.

```
void SAI_TxSetBitclockConfig(I2S_Type *base, sai_master_slave_t masterSlave, sai_bit_clock_t
    *config)
```

Transmitter Bit clock configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – bit clock other configurations, can be NULL in slave mode.

```
void SAI_RxSetBitclockConfig(I2S_Type *base, sai_master_slave_t masterSlave, sai_bit_clock_t
    *config)
```

Receiver Bit clock configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – bit clock other configurations, can be NULL in slave mode.

```
void SAI_SetMasterClockConfig(I2S_Type *base, sai_master_clock_t *config)
```

Master clock configurations.

Parameters

- base – SAI base pointer.
- config – master clock configurations.

void SAI_TxSetFifoConfig(I2S_Type *base, *sai_fifo_t* *config)
SAI transmitter fifo configurations.

Parameters

- base – SAI base pointer.
- config – fifo configurations.

void SAI_RxSetFifoConfig(I2S_Type *base, *sai_fifo_t* *config)
SAI receiver fifo configurations.

Parameters

- base – SAI base pointer.
- config – fifo configurations.

void SAI_TxSetFrameSyncConfig(I2S_Type *base, *sai_master_slave_t* masterSlave,
sai_frame_sync_t *config)

SAI transmitter Frame sync configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – frame sync configurations, can be NULL in slave mode.

void SAI_RxSetFrameSyncConfig(I2S_Type *base, *sai_master_slave_t* masterSlave,
sai_frame_sync_t *config)

SAI receiver Frame sync configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – frame sync configurations, can be NULL in slave mode.

void SAI_TxSetSerialDataConfig(I2S_Type *base, *sai_serial_data_t* *config)
SAI transmitter Serial data configurations.

Parameters

- base – SAI base pointer.
- config – serial data configurations.

void SAI_RxSetSerialDataConfig(I2S_Type *base, *sai_serial_data_t* *config)
SAI receiver Serial data configurations.

Parameters

- base – SAI base pointer.
- config – serial data configurations.

void SAI_TxSetConfig(I2S_Type *base, *sai_transceiver_t* *config)
SAI transmitter configurations.

Parameters

- base – SAI base pointer.
- config – transmitter configurations.

```
void SAI_RxSetConfig(I2S_Type *base, sai_transceiver_t *config)
```

SAI receiver configurations.

Parameters

- base – SAI base pointer.
- config – receiver configurations.

```
void SAI_GetClassicI2SConfig(sai_transceiver_t *config, sai_word_width_t bitWidth,
                             sai_mono_stereo_t mode, uint32_t saiChannelMask)
```

Get classic I2S mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetLeftJustifiedConfig(sai_transceiver_t *config, sai_word_width_t bitWidth,
                                 sai_mono_stereo_t mode, uint32_t saiChannelMask)
```

Get left justified mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetRightJustifiedConfig(sai_transceiver_t *config, sai_word_width_t bitWidth,
                                  sai_mono_stereo_t mode, uint32_t saiChannelMask)
```

Get right justified mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetTDMConfig(sai_transceiver_t *config, sai_frame_sync_len_t frameSyncWidth,
                      sai_word_width_t bitWidth, uint32_t dataWordNum, uint32_t
                      saiChannelMask)
```

Get TDM mode configurations.

Parameters

- config – transceiver configurations.
- frameSyncWidth – length of frame sync.
- bitWidth – audio data word width.
- dataWordNum – word number in one frame.
- saiChannelMask – mask value of the channel to be enable.

```
void SAI_GetDSPConfig(sai_transceiver_t *config, sai_frame_sync_len_t frameSyncWidth,  
                    sai_word_width_t bitWidth, sai_mono_stereo_t mode, uint32_t  
                    saiChannelMask)
```

Get DSP mode configurations.

DSP/PCM MODE B configuration flow for TX. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth, kSAI_Stereo, channelMask)  
SAI_TxSetConfig(base, config)
```

Note: DSP mode is also called PCM mode which support MODE A and MODE B, DSP/PCM MODE A configuration flow. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth, kSAI_Stereo, channelMask)  
config->frameSync.frameSyncEarly = true;  
SAI_TxSetConfig(base, config)
```

Parameters

- config – transceiver configurations.
- frameSyncWidth – length of frame sync.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to enable.

```
static inline uint32_t SAI_TxGetStatusFlag(I2S_Type *base)
```

Gets the SAI Tx status flag state.

Parameters

- base – SAI base pointer

Returns

SAI Tx status flag value. Use the Status Mask to get the status value needed.

```
static inline void SAI_TxClearStatusFlags(I2S_Type *base, uint32_t mask)
```

Clears the SAI Tx status flag state.

Parameters

- base – SAI base pointer
- mask – State mask. It can be a combination of the following source if defined:
 - kSAI_WordStartFlag
 - kSAI_SyncErrorFlag
 - kSAI_FIFOErrorFlag

```
static inline uint32_t SAI_RxGetStatusFlag(I2S_Type *base)
```

Gets the SAI Tx status flag state.

Parameters

- base – SAI base pointer

Returns

SAI Rx status flag value. Use the Status Mask to get the status value needed.

```
static inline void SAI_RxClearStatusFlags(I2S_Type *base, uint32_t mask)
```

Clears the SAI Rx status flag state.

Parameters

- base – SAI base pointer
- mask – State mask. It can be a combination of the following sources if defined.
 - kSAI_WordStartFlag
 - kSAI_SyncErrorFlag
 - kSAI_FIFOErrorFlag

```
void SAI_TxSoftwareReset(I2S_Type *base, sai_reset_type_t resetType)
```

Do software reset or FIFO reset .

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Tx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like TCR1~TCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

- base – SAI base pointer
- resetType – Reset type, FIFO reset or software reset

```
void SAI_RxSoftwareReset(I2S_Type *base, sai_reset_type_t resetType)
```

Do software reset or FIFO reset .

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Rx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like RCR1~RCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

- base – SAI base pointer
- resetType – Reset type, FIFO reset or software reset

```
void SAI_TxSetChannelFIFOMask(I2S_Type *base, uint8_t mask)
```

Set the Tx channel FIFO enable mask.

Parameters

- base – SAI base pointer
- mask – Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

```
void SAI_RxSetChannelFIFOMask(I2S_Type *base, uint8_t mask)
```

Set the Rx channel FIFO enable mask.

Parameters

- base – SAI base pointer
- mask – Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

void SAI_TxSetDataOrder(I2S_Type *base, sai_data_order_t order)

Set the Tx data order.

Parameters

- base – SAI base pointer
- order – Data order MSB or LSB

void SAI_RxSetDataOrder(I2S_Type *base, sai_data_order_t order)

Set the Rx data order.

Parameters

- base – SAI base pointer
- order – Data order MSB or LSB

void SAI_TxSetBitClockPolarity(I2S_Type *base, sai_clock_polarity_t polarity)

Set the Tx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_RxSetBitClockPolarity(I2S_Type *base, sai_clock_polarity_t polarity)

Set the Rx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_TxSetFrameSyncPolarity(I2S_Type *base, sai_clock_polarity_t polarity)

Set the Tx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_RxSetFrameSyncPolarity(I2S_Type *base, sai_clock_polarity_t polarity)

Set the Rx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_TxSetFIFOPacking(I2S_Type *base, sai_fifo_packing_t pack)

Set Tx FIFO packing feature.

Parameters

- base – SAI base pointer.
- pack – FIFO pack type. It is element of sai_fifo_packing_t.

void SAI_RxSetFIFOPacking(I2S_Type *base, sai_fifo_packing_t pack)

Set Rx FIFO packing feature.

Parameters

- base – SAI base pointer.
- pack – FIFO pack type. It is element of sai_fifo_packing_t.

```
static inline void SAI_TxSetFIFOErrorContinue(I2S_Type *base, bool isEnabled)
```

Set Tx FIFO error continue.

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in TCSR register.

Parameters

- base – SAI base pointer.
- isEnabled – Is FIFO error continue enabled, true means enable, false means disable.

```
static inline void SAI_RxSetFIFOErrorContinue(I2S_Type *base, bool isEnabled)
```

Set Rx FIFO error continue.

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in RCSR register.

Parameters

- base – SAI base pointer.
- isEnabled – Is FIFO error continue enabled, true means enable, false means disable.

```
static inline void SAI_TxEnableInterrupts(I2S_Type *base, uint32_t mask)
```

Enables the SAI Tx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

```
static inline void SAI_RxEnableInterrupts(I2S_Type *base, uint32_t mask)
```

Enables the SAI Rx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

```
static inline void SAI_TxDisableInterrupts(I2S_Type *base, uint32_t mask)
```

Disables the SAI Tx interrupt requests.

Parameters

- base – SAI base pointer

- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

static inline void SAI_RxDisableInterrupts(I2S_Type *base, uint32_t mask)

Disables the SAI Rx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
 - kSAI_WordStartInterruptEnable
 - kSAI_SyncErrorInterruptEnable
 - kSAI_FIFOWarningInterruptEnable
 - kSAI_FIFORequestInterruptEnable
 - kSAI_FIFOErrorInterruptEnable

static inline void SAI_TxEnableDMA(I2S_Type *base, uint32_t mask, bool enable)

Enables/disables the SAI Tx DMA requests.

Parameters

- base – SAI base pointer
- mask – DMA source The parameter can be combination of the following sources if defined.
 - kSAI_FIFOWarningDMAEnable
 - kSAI_FIFORequestDMAEnable
- enable – True means enable DMA, false means disable DMA.

static inline void SAI_RxEnableDMA(I2S_Type *base, uint32_t mask, bool enable)

Enables/disables the SAI Rx DMA requests.

Parameters

- base – SAI base pointer
- mask – DMA source The parameter can be a combination of the following sources if defined.
 - kSAI_FIFOWarningDMAEnable
 - kSAI_FIFORequestDMAEnable
- enable – True means enable DMA, false means disable DMA.

static inline uintptr_t SAI_TxGetDataRegisterAddress(I2S_Type *base, uint32_t channel)

Gets the SAI Tx data register address.

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

- base – SAI base pointer.

- channel – Which data channel used.

Returns

data register address.

```
static inline uintptr_t SAI_RxGetDataRegisterAddress(I2S_Type *base, uint32_t channel)
```

Gets the SAI Rx data register address.

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

- base – SAI base pointer.
- channel – Which data channel used.

Returns

data register address.

```
void SAI_WriteBlocking(I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer,  
                      uint32_t size)
```

Sends data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be written.
- size – Bytes to be written.

```
void SAI_WriteMultiChannelBlocking(I2S_Type *base, uint32_t channel, uint32_t channelMask,  
                                  uint32_t bitWidth, uint8_t *buffer, uint32_t size)
```

Sends data to multi channel using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- channelMask – channel mask.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be written.
- size – Bytes to be written.

```
static inline void SAI_WriteData(I2S_Type *base, uint32_t channel, uint32_t data)
```

Writes data into SAI FIFO.

Parameters

- base – SAI base pointer.
- channel – Data channel used.

- data – Data needs to be written.

```
void SAI_ReadBlocking(I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer,  
                    uint32_t size)
```

Receives data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be read.
- size – Bytes to be read.

```
void SAI_ReadMultiChannelBlocking(I2S_Type *base, uint32_t channel, uint32_t channelMask,  
                                 uint32_t bitWidth, uint8_t *buffer, uint32_t size)
```

Receives multi channel data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- channelMask – channel mask.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be read.
- size – Bytes to be read.

```
static inline uint32_t SAI_ReadData(I2S_Type *base, uint32_t channel)
```

Reads data from the SAI FIFO.

Parameters

- base – SAI base pointer.
- channel – Data channel used.

Returns

Data in SAI FIFO.

```
void SAI_TransferTxCreateHandle(I2S_Type *base, sai_handle_t *handle, sai_transfer_callback_t  
                              callback, void *userData)
```

Initializes the SAI Tx handle.

This function initializes the Tx handle for the SAI Tx transactional APIs. Call this function once to get the handle initialized.

Parameters

- base – SAI base pointer
- handle – SAI handle pointer.
- callback – Pointer to the user callback function.

- `userData` – User parameter passed to the callback function

```
void SAI_TransferRxCreateHandle(I2S_Type *base, sai_handle_t *handle, sai_transfer_callback_t
                               callback, void *userData)
```

Initializes the SAI Rx handle.

This function initializes the Rx handle for the SAI Rx transactional APIs. Call this function once to get the handle initialized.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI handle pointer.
- `callback` – Pointer to the user callback function.
- `userData` – User parameter passed to the callback function.

```
void SAI_TransferTxSetConfig(I2S_Type *base, sai_handle_t *handle, sai_transceiver_t *config)
SAI transmitter transfer configurations.
```

This function initializes the Tx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI handle pointer.
- `config` – transmitter configurations.

```
void SAI_TransferRxSetConfig(I2S_Type *base, sai_handle_t *handle, sai_transceiver_t *config)
SAI receiver transfer configurations.
```

This function initializes the Rx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI handle pointer.
- `config` – receiver configurations.

```
status_t SAI_TransferSendNonBlocking(I2S_Type *base, sai_handle_t *handle, sai_transfer_t
                                     *xfer)
```

Performs an interrupt non-blocking send transfer on SAI.

Note: This API returns immediately after the transfer initiates. Call the `SAI_TxGetTransferStatusIRQ` to poll the transfer status and check whether the transfer is finished. If the return status is not `kStatus_SAI_Busy`, the transfer is finished.

Parameters

- `base` – SAI base pointer.
- `handle` – Pointer to the `sai_handle_t` structure which stores the transfer state.
- `xfer` – Pointer to the `sai_transfer_t` structure.

Return values

- `kStatus_Success` – Successfully started the data receive.

- `kStatus_SAI_TxBusy` – Previous receive still not finished.
- `kStatus_InvalidArgument` – The input parameter is invalid.

`status_t` SAI_TransferReceiveNonBlocking(I2S_Type *base, *sai_handle_t* *handle, *sai_transfer_t* *xfer)

Performs an interrupt non-blocking receive transfer on SAI.

Note: This API returns immediately after the transfer initiates. Call the `SAI_RxGetTransferStatusIRQ` to poll the transfer status and check whether the transfer is finished. If the return status is not `kStatus_SAI_Busy`, the transfer is finished.

Parameters

- `base` – SAI base pointer
- `handle` – Pointer to the `sai_handle_t` structure which stores the transfer state.
- `xfer` – Pointer to the `sai_transfer_t` structure.

Return values

- `kStatus_Success` – Successfully started the data receive.
- `kStatus_SAI_RxBusy` – Previous receive still not finished.
- `kStatus_InvalidArgument` – The input parameter is invalid.

`status_t` SAI_TransferGetSendCount(I2S_Type *base, *sai_handle_t* *handle, `size_t` *count)

Gets a set byte count.

Parameters

- `base` – SAI base pointer.
- `handle` – Pointer to the `sai_handle_t` structure which stores the transfer state.
- `count` – Bytes count sent.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`status_t` SAI_TransferGetReceiveCount(I2S_Type *base, *sai_handle_t* *handle, `size_t` *count)

Gets a received byte count.

Parameters

- `base` – SAI base pointer.
- `handle` – Pointer to the `sai_handle_t` structure which stores the transfer state.
- `count` – Bytes count received.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

void SAI_TransferAbortSend(I2S_Type *base, sai_handle_t *handle)

Aborts the current send.

Note: This API can be called any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure which stores the transfer state.

void SAI_TransferAbortReceive(I2S_Type *base, sai_handle_t *handle)

Aborts the current IRQ receive.

Note: This API can be called when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – SAI base pointer
- handle – Pointer to the sai_handle_t structure which stores the transfer state.

void SAI_TransferTerminateSend(I2S_Type *base, sai_handle_t *handle)

Terminate all SAI send.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortSend.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTerminateReceive(I2S_Type *base, sai_handle_t *handle)

Terminate all SAI receive.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortReceive.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTxHandleIRQ(I2S_Type *base, sai_handle_t *handle)

Tx interrupt handler.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure.

void SAI_TransferRxHandleIRQ(I2S_Type *base, sai_handle_t *handle)

Tx interrupt handler.

Parameters

- base – SAI base pointer.

- handle – Pointer to the sai_handle_t structure.

void SAI_DriverIRQHandler(uint32_t instance)

SAI driver IRQ handler common entry.

This function provides the common IRQ request entry for SAI.

Parameters

- instance – SAI instance.

FSL_SAI_DRIVER_VERSION

Version 2.4.10

_sai_status_t, SAI return status.

Values:

enumerator kStatus_SAI_TxBusy

SAI Tx is busy.

enumerator kStatus_SAI_RxBusy

SAI Rx is busy.

enumerator kStatus_SAI_TxError

SAI Tx FIFO error.

enumerator kStatus_SAI_RxError

SAI Rx FIFO error.

enumerator kStatus_SAI_QueueFull

SAI transfer queue is full.

enumerator kStatus_SAI_TxIdle

SAI Tx is idle

enumerator kStatus_SAI_RxIdle

SAI Rx is idle

_sai_channel_mask, sai channel mask value, actual channel numbers is depend soc specific

Values:

enumerator kSAI_Channel0Mask

channel 0 mask value

enumerator kSAI_Channel1Mask

channel 1 mask value

enumerator kSAI_Channel2Mask

channel 2 mask value

enumerator kSAI_Channel3Mask

channel 3 mask value

enumerator kSAI_Channel4Mask

channel 4 mask value

enumerator kSAI_Channel5Mask

channel 5 mask value

enumerator kSAI_Channel6Mask

channel 6 mask value

enumerator kSAI_Channel7Mask
channel 7 mask value

enum _sai_protocol

Define the SAI bus type.

Values:

enumerator kSAI_BusLeftJustified
Uses left justified format.

enumerator kSAI_BusRightJustified
Uses right justified format.

enumerator kSAI_BusI2S
Uses I2S format.

enumerator kSAI_BusPCMA
Uses I2S PCM A format.

enumerator kSAI_BusPCMB
Uses I2S PCM B format.

enum _sai_master_slave

Master or slave mode.

Values:

enumerator kSAI_Master
Master mode include bclk and frame sync

enumerator kSAI_Slave
Slave mode include bclk and frame sync

enumerator kSAI_Bclk_Master_FrameSync_Slave
bclk in master mode, frame sync in slave mode

enumerator kSAI_Bclk_Slave_FrameSync_Master
bclk in slave mode, frame sync in master mode

enum _sai_mono_stereo

Mono or stereo audio format.

Values:

enumerator kSAI_Stereo
Stereo sound.

enumerator kSAI_MonoRight
Only Right channel have sound.

enumerator kSAI_MonoLeft
Only left channel have sound.

enum _sai_data_order

SAI data order, MSB or LSB.

Values:

enumerator kSAI_DataLSB
LSB bit transferred first

enumerator kSAI_DataMSB
MSB bit transferred first

enum `_sai_clock_polarity`

SAI clock polarity, active high or low.

Values:

enumerator `kSAI_PolarityActiveHigh`

Drive outputs on rising edge

enumerator `kSAI_PolarityActiveLow`

Drive outputs on falling edge

enumerator `kSAI_SampleOnFallingEdge`

Sample inputs on falling edge

enumerator `kSAI_SampleOnRisingEdge`

Sample inputs on rising edge

enum `_sai_sync_mode`

Synchronous or asynchronous mode.

Values:

enumerator `kSAI_ModeAsync`

Asynchronous mode

enumerator `kSAI_ModeSync`

Synchronous mode (with receiver or transmit)

enumerator `kSAI_ModeSyncWithOtherTx`

Synchronous with another SAI transmit

enumerator `kSAI_ModeSyncWithOtherRx`

Synchronous with another SAI receiver

enum `_sai_bclk_source`

Bit clock source.

Values:

enumerator `kSAI_BclkSourceBusclk`

Bit clock using bus clock

enumerator `kSAI_BclkSourceMclkOption1`

Bit clock MCLK option 1

enumerator `kSAI_BclkSourceMclkOption2`

Bit clock MCLK option2

enumerator `kSAI_BclkSourceMclkOption3`

Bit clock MCLK option3

enumerator `kSAI_BclkSourceMclkDiv`

Bit clock using master clock divider

enumerator `kSAI_BclkSourceOtherSai0`

Bit clock from other SAI device

enumerator `kSAI_BclkSourceOtherSai1`

Bit clock from other SAI device

`_sai_interrupt_enable_t`, The SAI interrupt enable flag

Values:

enumerator kSAI_WordStartInterruptEnable
Word start flag, means the first word in a frame detected

enumerator kSAI_SyncErrorInterruptEnable
Sync error flag, means the sync error is detected

enumerator kSAI_FIFOWarningInterruptEnable
FIFO warning flag, means the FIFO is empty

enumerator kSAI_FIFOErrorInterruptEnable
FIFO error flag

enumerator kSAI_FIFORequestInterruptEnable
FIFO request, means reached watermark

_sai_dma_enable_t, The DMA request sources

Values:

enumerator kSAI_FIFOWarningDMAEnable
FIFO warning caused by the DMA request

enumerator kSAI_FIFORequestDMAEnable
FIFO request caused by the DMA request

_sai_flags, The SAI status flag

Values:

enumerator kSAI_WordStartFlag
Word start flag, means the first word in a frame detected

enumerator kSAI_SyncErrorFlag
Sync error flag, means the sync error is detected

enumerator kSAI_FIFOErrorFlag
FIFO error flag

enumerator kSAI_FIFORequestFlag
FIFO request flag.

enumerator kSAI_FIFOWarningFlag
FIFO warning flag

enum _sai_reset_type

The reset type.

Values:

enumerator kSAI_ResetTypeSoftware
Software reset, reset the logic state

enumerator kSAI_ResetTypeFIFO
FIFO reset, reset the FIFO read and write pointer

enumerator kSAI_ResetAll
All reset.

enum _sai_fifo_packing

The SAI packing mode The mode includes 8 bit and 16 bit packing.

Values:

enumerator kSAI_FifoPackingDisabled
Packing disabled

enumerator kSAI_FifoPacking8bit
8 bit packing enabled

enumerator kSAI_FifoPacking16bit
16bit packing enabled

enum _sai_sample_rate
Audio sample rate.

Values:

enumerator kSAI_SampleRate8KHz
Sample rate 8000 Hz

enumerator kSAI_SampleRate11025Hz
Sample rate 11025 Hz

enumerator kSAI_SampleRate12KHz
Sample rate 12000 Hz

enumerator kSAI_SampleRate16KHz
Sample rate 16000 Hz

enumerator kSAI_SampleRate22050Hz
Sample rate 22050 Hz

enumerator kSAI_SampleRate24KHz
Sample rate 24000 Hz

enumerator kSAI_SampleRate32KHz
Sample rate 32000 Hz

enumerator kSAI_SampleRate44100Hz
Sample rate 44100 Hz

enumerator kSAI_SampleRate48KHz
Sample rate 48000 Hz

enumerator kSAI_SampleRate96KHz
Sample rate 96000 Hz

enumerator kSAI_SampleRate192KHz
Sample rate 192000 Hz

enumerator kSAI_SampleRate384KHz
Sample rate 384000 Hz

enum _sai_word_width
Audio word width.

Values:

enumerator kSAI_WordWidth8bits
Audio data width 8 bits

enumerator kSAI_WordWidth16bits
Audio data width 16 bits

enumerator kSAI_WordWidth24bits
Audio data width 24 bits

enumerator kSAI_WordWidth32bits
Audio data width 32 bits

enum _sai_data_pin_state
sai data pin state definition

Values:

enumerator kSAI_DataPinStateTriState
transmit data pins are tri-stated when slots are masked or channels are disabled

enumerator kSAI_DataPinStateOutputZero
transmit data pins are never tri-stated and will output zero when slots are masked or channel disabled

enum _sai_fifo_combine
sai fifo combine mode definition

Values:

enumerator kSAI_FifoCombineDisabled
sai TX/RX fifo combine mode disabled

enumerator kSAI_FifoCombineModeEnabledOnRead
sai TX fifo combine mode enabled on FIFO reads

enumerator kSAI_FifoCombineModeEnabledOnWrite
sai TX fifo combine mode enabled on FIFO write

enumerator kSAI_RxFifoCombineModeEnabledOnWrite
sai RX fifo combine mode enabled on FIFO write

enumerator kSAI_RXFifoCombineModeEnabledOnRead
sai RX fifo combine mode enabled on FIFO reads

enumerator kSAI_FifoCombineModeEnabledOnReadWrite
sai TX/RX fifo combined mode enabled on FIFO read/writes

enum _sai_transceiver_type
sai transceiver type

Values:

enumerator kSAI_Transmitter
sai transmitter

enumerator kSAI_Receiver
sai receiver

enum _sai_frame_sync_len
sai frame sync len

Values:

enumerator kSAI_FrameSyncLenOneBitClk
1 bit clock frame sync len for DSP mode

enumerator kSAI_FrameSyncLenPerWordWidth
Frame sync length decided by word width

typedef enum _sai_protocol sai_protocol_t
Define the SAI bus type.

```
typedef enum _sai_master_slave sai_master_slave_t
    Master or slave mode.
typedef enum _sai_mono_stereo sai_mono_stereo_t
    Mono or stereo audio format.
typedef enum _sai_data_order sai_data_order_t
    SAI data order, MSB or LSB.
typedef enum _sai_clock_polarity sai_clock_polarity_t
    SAI clock polarity, active high or low.
typedef enum _sai_sync_mode sai_sync_mode_t
    Synchronous or asynchronous mode.
typedef enum _sai_bclk_source sai_bclk_source_t
    Bit clock source.
typedef enum _sai_reset_type sai_reset_type_t
    The reset type.
typedef enum _sai_fifo_packing sai_fifo_packing_t
    The SAI packing mode The mode includes 8 bit and 16 bit packing.
typedef struct _sai_config sai_config_t
    SAI user configuration structure.
typedef enum _sai_sample_rate sai_sample_rate_t
    Audio sample rate.
typedef enum _sai_word_width sai_word_width_t
    Audio word width.
typedef enum _sai_data_pin_state sai_data_pin_state_t
    sai data pin state definition
typedef enum _sai_fifo_combine sai_fifo_combine_t
    sai fifo combine mode definition
typedef enum _sai_transceiver_type sai_transceiver_type_t
    sai transceiver type
typedef enum _sai_frame_sync_len sai_frame_sync_len_t
    sai frame sync len
typedef struct _sai_transfer_format sai_transfer_format_t
    sai transfer format
typedef struct _sai_master_clock sai_master_clock_t
    master clock configurations
typedef struct _sai_fifo sai_fifo_t
    sai fifo configurations
typedef struct _sai_bit_clock sai_bit_clock_t
    sai bit clock configurations
typedef struct _sai_frame_sync sai_frame_sync_t
    sai frame sync configurations
typedef struct _sai_serial_data sai_serial_data_t
    sai serial data configurations
```

```
typedef struct _sai_transceiver sai_transceiver_t
    sai_transceiver_configurations
```

```
typedef struct _sai_transfer sai_transfer_t
    SAI transfer structure.
```

```
typedef struct _sai_handle sai_handle_t
```

```
typedef void (*sai_transfer_callback_t)(I2S_Type *base, sai_handle_t *handle, status_t status,
void *userData)
```

SAI transfer callback prototype.

```
MCUX_SDK_SAI_ALLOW_NULL_FIFO_WATERMARK
```

Used to control whether SAI_RxSetFifoConfig()/SAI_TxSetFifoConfig() allows a NULL FIFO watermark.

If this macro is set to 0 then SAI_RxSetFifoConfig()/SAI_TxSetFifoConfig() will set the watermark to half of the FIFO's depth if passed a NULL watermark.

```
MCUX_SDK_SAI_DISABLE_IMPLICIT_CHAN_CONFIG
```

Disable implicit channel data configuration within SAI_TxSetConfig()/SAI_RxSetConfig().

Use this macro to control whether SAI_RxSetConfig()/SAI_TxSetConfig() will attempt to implicitly configure the channel data. By channel data we mean the startChannel, channelMask, endChannel, and channelNums fields from the *sai_transceiver_t* structure. By default, SAI_TxSetConfig()/SAI_RxSetConfig() will attempt to compute these fields, which may not be desired in cases where the user wants to set them before the call to said functions.

```
SAI_XFER_QUEUE_SIZE
```

SAI transfer queue size, user can refine it according to use case.

```
FSL_SAI_HAS_FIFO_EXTEND_FEATURE
```

sai fifo feature

```
struct _sai_config
```

```
#include <fsl_sai.h> SAI user configuration structure.
```

Public Members

```
sai_protocol_t protocol
```

Audio bus protocol in SAI

```
sai_sync_mode_t syncMode
```

SAI sync mode, control Tx/Rx clock sync

```
bool mclkOutputEnable
```

Master clock output enable, true means master clock divider enabled

```
sai_bclk_source_t bclkSource
```

Bit Clock source

```
sai_master_slave_t masterSlave
```

Master or slave

```
struct _sai_transfer_format
```

```
#include <fsl_sai.h> sai transfer format
```

Public Members

uint32_t sampleRate_Hz

Sample rate of audio data

uint32_t bitWidth

Data length of audio data, usually 8/16/24/32 bits

sai_mono_stereo_t stereo

Mono or stereo

uint32_t masterClockHz

Master clock frequency in Hz

uint8_t watermark

Watermark value

uint8_t channel

Transfer start channel

uint8_t channelMask

enabled channel mask value, reference *_sai_channel_mask*

uint8_t endChannel

end channel number

uint8_t channelNums

Total enabled channel numbers

sai_protocol_t protocol

Which audio protocol used

bool isFrameSyncCompact

True means Frame sync length is configurable according to bitWidth, false means frame sync length is 64 times of bit clock.

struct *_sai_master_clock*

#include <fsl_sai.h> master clock configurations

Public Members

bool mclkOutputEnable

master clock output enable

uint32_t mclkHz

target mclk frequency

uint32_t mclkSourceClkHz

mclk source frequency

struct *_sai_fifo*

#include <fsl_sai.h> sai fifo configurations

Public Members

bool fifoContinueOnError

fifo continues when error occur

sai_fifo_combine_t fifoCombine

fifo combine mode

sai_fifo_packing_t fifoPacking
 fifo packing mode

uint8_t fifoWatermark
 fifo watermark

struct *_sai_bit_clock*
#include <fsl_sai.h> sai bit clock configurations

Public Members

bool bclkInputDelay
 bit clock actually used by the transmitter is delayed by the pad output delay, this has effect of decreasing the data input setup time, but increasing the data output valid time
 .

sai_clock_polarity_t bclkPolarity
 bit clock polarity

sai_bclk_source_t bclkSource
 bit Clock source

struct *_sai_frame_sync*
#include <fsl_sai.h> sai frame sync configurations

Public Members

uint8_t frameSyncWidth
 frame sync width in number of bit clocks

bool frameSyncEarly
 TRUE is frame sync assert one bit before the first bit of frame FALSE is frame sync assert with the first bit of the frame

bool frameSyncGenerateOnDemand
 internal frame sync is generated when FIFO waring flag is clear

sai_clock_polarity_t frameSyncPolarity
 frame sync polarity

struct *_sai_serial_data*
#include <fsl_sai.h> sai serial data configurations

Public Members

sai_data_pin_state_t dataMode
 sai data pin state when slots masked or channel disabled

sai_data_order_t dataOrder
 configure whether the LSB or MSB is transmitted first

uint8_t dataWord0Length
 configure the number of bits in the first word in each frame

uint8_t dataWordNLength
 configure the number of bits in the each word in each frame, except the first word

`uint8_t dataWordLength`
used to record the data length for dma transfer

`uint8_t dataFirstBitShifted`
Configure the bit index for the first bit transmitted for each word in the frame

`uint8_t dataWordNum`
configure the number of words in each frame

`uint32_t dataMaskedWord`
configure whether the transmit word is masked

`struct _sai_transceiver`
`#include <fsl_sai.h>` sai transceiver configurations

Public Members

`sai_serial_data_t serialData`
serial data configurations

`sai_frame_sync_t frameSync`
ws configurations

`sai_bit_clock_t bitClock`
bit clock configurations

`sai_fifo_t fifo`
fifo configurations

`sai_master_slave_t masterSlave`
transceiver is master or slave

`sai_sync_mode_t syncMode`
transceiver sync mode

`uint8_t startChannel`
Transfer start channel

`uint8_t channelMask`
enabled channel mask value, reference `_sai_channel_mask`

`uint8_t endChannel`
end channel number

`uint8_t channelNums`
Total enabled channel numbers

`struct _sai_transfer`
`#include <fsl_sai.h>` SAI transfer structure.

Public Members

`uint8_t *data`
Data start address to transfer.

`size_t dataSize`
Transfer size.

`struct _sai_handle`
`#include <fsl_sai.h>` SAI handle structure.

Public Members

`I2S_Type *base`
base address

`uint32_t state`
Transfer status

`sai_transfer_callback_t callback`
Callback function called at transfer event

`void *userData`
Callback parameter passed to callback function

`uint8_t bitWidth`
Bit width for transfer, 8/16/24/32 bits

`uint8_t channel`
Transfer start channel

`uint8_t channelMask`
enabled channel mask value, refernece `_sai_channel_mask`

`uint8_t endChannel`
end channel number

`uint8_t channelNums`
Total enabled channel numbers

`sai_transfer_t saiQueue[(4U)]`
Transfer queue storing queued transfer

`size_t transferSize[(4U)]`
Data bytes need to transfer

`volatile uint8_t queueUser`
Index for user to queue transfer

`volatile uint8_t queueDriver`
Index for driver to get the transfer data and size

`uint8_t watermark`
Watermark value

2.63 SAI EDMA Driver

```
void SAI_TransferTxCreateHandleEDMA(I2S_Type *base, sai_edma_handle_t *handle,
    sai_edma_callback_t callback, void *userData,
    edma_handle_t *txDmaHandle)
```

Initializes the SAI eDMA handle.

This function initializes the SAI master DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.
- `callback` – Pointer to user callback function.

- `userData` – User parameter passed to the callback function.
- `txDmaHandle` – eDMA handle pointer, this handle shall be static allocated by users.

```
void SAI_TransferRxCreateHandleEDMA(I2S_Type *base, sai_edma_handle_t *handle,  
                                   sai_edma_callback_t callback, void *userData,  
                                   edma_handle_t *rxDmaHandle)
```

Initializes the SAI Rx eDMA handle.

This function initializes the SAI slave DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.
- `callback` – Pointer to user callback function.
- `userData` – User parameter passed to the callback function.
- `rxDmaHandle` – eDMA handle pointer, this handle shall be static allocated by users.

```
void SAI_TransferSetInterleaveType(sai_edma_handle_t *handle, sai_edma_interleave_t  
                                  interleaveType)
```

Initializes the SAI interleave type.

This function initializes the SAI DMA handle member `interleaveType`, it shall be called only when application would like to use type `kSAI_EDMAInterleavePerChannelBlock`, since the default `interleaveType` is `kSAI_EDMAInterleavePerChannelSample` always

Parameters

- `handle` – SAI eDMA handle pointer.
- `interleaveType` – Multi channel interleave type.

```
void SAI_TransferTxSetConfigEDMA(I2S_Type *base, sai_edma_handle_t *handle,  
                                 sai_transceiver_t *saiConfig)
```

Configures the SAI Tx.

Note: SAI eDMA supports data transfer in a multiple SAI channels if the FIFO Combine feature is supported. To activate the multi-channel transfer enable SAI channels by filling the `channelMask` of `sai_transceiver_t` with the corresponding values of `_sai_channel_mask` enum, enable the FIFO Combine mode by assigning `kSAI_FifoCombineModeEnabledOnWrite` to the `fifoCombine` member of `sai_fifo_combine_t` which is a member of `sai_transceiver_t`. This is an example of multi-channel data transfer configuration step.

```
sai_transceiver_t config;  
SAI_GetClassicI2SConfig(&config, kSAI_WordWidth16bits, kSAI_Stereo, kSAI_Channel0Mask|kSAI_  
↔Channel1Mask);  
config.fifo.fifoCombine = kSAI_FifoCombineModeEnabledOnWrite;  
SAI_TransferTxSetConfigEDMA(I2S0, &edmaHandle, &config);
```

Parameters

- `base` – SAI base pointer.
- `handle` – SAI eDMA handle pointer.

- saiConfig – sai configurations.

```
void SAI_TransferRxSetConfigEDMA(I2S_Type *base, sai_edma_handle_t *handle,
                                sai_transceiver_t *saiConfig)
```

Configures the SAI Rx.

Note: SAI eDMA supports data transfer in a multiple SAI channels if the FIFO Combine feature is supported. To activate the multi-channel transfer enable SAI channels by filling the channelMask of sai_transceiver_t with the corresponding values of _sai_channel_mask enum, enable the FIFO Combine mode by assigning kSAI_FifoCombineModeEnabledOnRead to the fifoCombine member of sai_fifo_combine_t which is a member of sai_transceiver_t. This is an example of multi-channel data transfer configuration step.

```
sai_transceiver_t config;
SAI_GetClassicI2SConfig(&config, kSAI_WordWidth16bits, kSAI_Stereo, kSAI_Channel0Mask|kSAI_
->Channel1Mask);
config.fifo.fifoCombine = kSAI_FifoCombineModeEnabledOnRead;
SAI_TransferRxSetConfigEDMA(I2S0, &edmaHandle, &config);
```

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- saiConfig – sai configurations.

```
status_t SAI_TransferSendEDMA(I2S_Type *base, sai_edma_handle_t *handle, sai_transfer_t
                              *xfer)
```

Performs a non-blocking SAI transfer using DMA.

This function support multi channel transfer,

- for the sai IP support fifo combine mode, application should enable the fifo combine mode, no limitation on channel numbers
- for the sai IP not support fifo combine mode, sai edma provide another solution which using EDMA modulo feature, but support 2 or 4 channels only.

Note: This interface returns immediately after the transfer initiates. Call SAI_GetTransferStatus to poll the transfer status and check whether the SAI transfer is finished.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure.

Return values

- kStatus_Success – Start a SAI eDMA send successfully.
- kStatus_InvalidArgument – The input argument is invalid.
- kStatus_TxBusy – SAI is busy sending data.

status_t SAI_TransferReceiveEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer)

Performs a non-blocking SAI receive using eDMA.

This function support multi channel transfer,

- a. for the sai IP support fifo combine mode, application should enable the fifo combine mode, no limitation on channel numbers
- b. for the sai IP not support fifo combine mode, sai edma provide another solution which using EDMA modulo feature, but support 2 or 4 channels only.

Note: This interface returns immediately after the transfer initiates. Call the SAI_GetReceiveRemainingBytes to poll the transfer status and check whether the SAI transfer is finished.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a SAI eDMA receive successfully.
- kStatus_InvalidArgument – The input argument is invalid.
- kStatus_RxBusy – SAI is busy receiving data.

status_t SAI_TransferSendLoopEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer, *uint32_t* loopTransferCount)

Performs a non-blocking SAI loop transfer using eDMA.

Once the loop transfer start, application can use function SAI_TransferAbortSendEDMA to stop the loop transfer.

Note: This function support loop transfer only,such as A->B->...->A, application must be aware of that the more counts of the loop transfer, then more tcd memory required, as the function use the tcd pool in *sai_edma_handle_t*, so application could redefine the SAI_XFER_QUEUE_SIZE to determine the proper TCD pool size. This function support one sai channel only.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure, should be a array with elements counts >=1(loopTransferCount).
- loopTransferCount – the counts of xfer array.

Return values

- kStatus_Success – Start a SAI eDMA send successfully.
- kStatus_InvalidArgument – The input argument is invalid.

```
status_t SAI_TransferReceiveLoopEDMA(I2S_Type *base, sai_edma_handle_t *handle,
                                     sai_transfer_t *xfer, uint32_t loopTransferCount)
```

Performs a non-blocking SAI loop transfer using eDMA.

Once the loop transfer start, application can use function SAI_TransferAbortReceiveEDMA to stop the loop transfer.

Note: This function support loop transfer only, such as A->B->...->A, application must be aware of that the more counts of the loop transfer, then more tcd memory required, as the function use the tcd pool in sai_edma_handle_t, so application could redefine the SAI_XFER_QUEUE_SIZE to determine the proper TCD pool size. This function support one sai channel only.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure, should be a array with elements counts >=1(loopTransferCount).
- loopTransferCount – the counts of xfer array.

Return values

- kStatus_Success – Start a SAI eDMA receive successfully.
- kStatus_InvalidArgument – The input argument is invalid.

```
void SAI_TransferTerminateSendEDMA(I2S_Type *base, sai_edma_handle_t *handle)
```

Terminate all SAI send.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortSendEDMA.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

```
void SAI_TransferTerminateReceiveEDMA(I2S_Type *base, sai_edma_handle_t *handle)
```

Terminate all SAI receive.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortReceiveEDMA.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

```
void SAI_TransferAbortSendEDMA(I2S_Type *base, sai_edma_handle_t *handle)
```

Aborts a SAI transfer using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call SAI_TransferTerminateSendEDMA.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

```
void SAI_TransferAbortReceiveEDMA(I2S_Type *base, sai_edma_handle_t *handle)
```

Aborts a SAI receive using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call SAI_TransferTerminateReceiveEDMA.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.

```
status_t SAI_TransferGetSendCountEDMA(I2S_Type *base, sai_edma_handle_t *handle, size_t *count)
```

Gets byte count sent by SAI.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- count – Bytes count sent by SAI.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

```
status_t SAI_TransferGetReceiveCountEDMA(I2S_Type *base, sai_edma_handle_t *handle, size_t *count)
```

Gets byte count received by SAI.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.
- count – Bytes count received by SAI.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

```
uint32_t SAI_TransferGetValidTransferSlotsEDMA(I2S_Type *base, sai_edma_handle_t *handle)
```

Gets valid transfer slot.

This function can be used to query the valid transfer request slot that the application can submit. It should be called in the critical section, that means the application could call it in the corresponding callback function or disable IRQ before calling it in the application, otherwise, the returned value may not correct.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.

Return values

valid – slot count that application submit.

FSL_SAI_EDMA_DRIVER_VERSION

Version 2.7.3

```
enum _sai_edma_interleave
    sai_interleave_type
```

Values:

```
enumerator kSAI_EDMAInterleavePerChannelSample
```

```
enumerator kSAI_EDMAInterleavePerChannelBlock
```

```
typedef struct sai_edma_handle sai_edma_handle_t
```

```
typedef void (*sai_edma_callback_t)(I2S_Type *base, sai_edma_handle_t *handle, status_t
status, void *userData)
```

SAI eDMA transfer callback function for finish and error.

```
typedef enum _sai_edma_interleave sai_edma_interleave_t
    sai_interleave_type
```

```
MCUX_SDK_SAI_EDMA_RX_ENABLE_INTERNAL
```

the SAI enable position When calling SAI_TransferReceiveEDMA

```
MCUX_SDK_SAI_EDMA_TX_ENABLE_INTERNAL
```

the SAI enable position When calling SAI_TransferSendEDMA

```
struct sai_edma_handle
```

#include <fsl_sai_edma.h> SAI DMA transfer handle, users should not touch the content of the handle.

Public Members

```
edma_handle_t *dmaHandle
```

DMA handler for SAI send

```
uint8_t nbytes
```

eDMA minor byte transfer count initially configured.

```
uint8_t bytesPerFrame
```

Bytes in a frame

```
uint8_t channelMask
```

Enabled channel mask value, reference *_sai_channel_mask*

```
uint8_t channelNums
```

total enabled channel nums

```
uint8_t channel
```

Which data channel

```
uint8_t count
```

The transfer data count in a DMA request

```
uint32_t state
```

Internal state for SAI eDMA transfer

```
sai_edma_callback_t callback
```

Callback for users while transfer finish or error occurs

```
void *userData
```

User callback parameter

```
uint8_t tcd[((4U) + 1U) * sizeof(edma_tcd_t)]
```

TCD pool for eDMA transfer.

sai_transfer_t saiQueue[(4U)]
Transfer queue storing queued transfer.

size_t transferSize[(4U)]
Data bytes need to transfer

sai_edma_interleave_t interleaveType
Transfer interleave type

volatile uint8_t queueUser
Index for user to queue transfer.

volatile uint8_t queueDriver
Index for driver to get the transfer data and size

2.64 SEMA42: Hardware Semaphores Driver

FSL_SEMA42_DRIVER_VERSION
SEMA42 driver version.

SEMA42 status return codes.

Values:

enumerator kStatus_SEMA42_Busy
SEMA42 gate has been locked by other processor.

enumerator kStatus_SEMA42_Reseting
SEMA42 gate reseting is ongoing.

enum _sema42_gate_status
SEMA42 gate lock status.

Values:

enumerator kSEMA42_Unlocked
The gate is unlocked.

enumerator kSEMA42_LockedByProc0
The gate is locked by processor 0.

enumerator kSEMA42_LockedByProc1
The gate is locked by processor 1.

enumerator kSEMA42_LockedByProc2
The gate is locked by processor 2.

enumerator kSEMA42_LockedByProc3
The gate is locked by processor 3.

enumerator kSEMA42_LockedByProc4
The gate is locked by processor 4.

enumerator kSEMA42_LockedByProc5
The gate is locked by processor 5.

enumerator kSEMA42_LockedByProc6
The gate is locked by processor 6.

enumerator kSEMA42_LockedByProc7
The gate is locked by processor 7.

enumerator kSEMA42_LockedByProc8
The gate is locked by processor 8.

enumerator kSEMA42_LockedByProc9
The gate is locked by processor 9.

enumerator kSEMA42_LockedByProc10
The gate is locked by processor 10.

enumerator kSEMA42_LockedByProc11
The gate is locked by processor 11.

enumerator kSEMA42_LockedByProc12
The gate is locked by processor 12.

enumerator kSEMA42_LockedByProc13
The gate is locked by processor 13.

enumerator kSEMA42_LockedByProc14
The gate is locked by processor 14.

typedef enum *_sema42_gate_status* sema42_gate_status_t
SEMA42 gate lock status.

void SEMA42_Init(SEMA42_Type *base)
Initializes the SEMA42 module.

This function initializes the SEMA42 module. It only enables the clock but does not reset the gates because the module might be used by other processors at the same time. To reset the gates, call either SEMA42_ResetGate or SEMA42_ResetAllGates function.

Parameters

- base – SEMA42 peripheral base address.

void SEMA42_Deinit(SEMA42_Type *base)
De-initializes the SEMA42 module.

This function de-initializes the SEMA42 module. It only disables the clock.

Parameters

- base – SEMA42 peripheral base address.

status_t SEMA42_TryLock(SEMA42_Type *base, uint8_t gateNum, uint8_t procNum)

Tries to lock the SEMA42 gate.

This function tries to lock the specific SEMA42 gate. If the gate has been locked by another processor, this function returns an error code.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to lock.
- procNum – Current processor number.

Return values

- kStatus_Success – Lock the sema42 gate successfully.
- kStatus_SEMA42_Busy – Sema42 gate has been locked by another processor.

status_t SEMA42_Lock(SEMA42_Type *base, uint8_t gateNum, uint8_t procNum)

Locks the SEMA42 gate.

This function locks the specific SEMA42 gate. If the gate has been locked by other processors, this function waits until it is unlocked and then lock it.

If SEMA42_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to lock.
- procNum – Current processor number.

Return values

- kStatus_Success – The gate was successfully locked.
- kStatus_Timeout – Timeout occurred while waiting for the gate to be unlocked.

Returns

status_t

static inline void SEMA42_Unlock(SEMA42_Type *base, uint8_t gateNum)

Unlocks the SEMA42 gate.

This function unlocks the specific SEMA42 gate. It only writes unlock value to the SEMA42 gate register. However, it does not check whether the SEMA42 gate is locked by the current processor or not. As a result, if the SEMA42 gate is not locked by the current processor, this function has no effect.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to unlock.

static inline *sema42_gate_status_t* SEMA42_GetGateStatus(SEMA42_Type *base, uint8_t gateNum)

Gets the status of the SEMA42 gate.

This function checks the lock status of a specific SEMA42 gate.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number.

Returns

status Current status.

status_t SEMA42_ResetGate(SEMA42_Type *base, uint8_t gateNum)

Resets the SEMA42 gate to an unlocked status.

This function resets a SEMA42 gate to an unlocked status.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number.

Return values

- kStatus_Success – SEMA42 gate is reset successfully.
- kStatus_SEMA42_Reseting – Some other reset process is ongoing.

static inline *status_t* SEMA42_ResetAllGates(SEMA42_Type *base)

Resets all SEMA42 gates to an unlocked status.

This function resets all SEMA42 gate to an unlocked status.

Parameters

- base – SEMA42 peripheral base address.

Return values

- kStatus_Success – SEMA42 is reset successfully.
- kStatus_SEMA42_Reseting – Some other reset process is ongoing.

SEMA42_GATE_NUM_RESET_ALL

The number to reset all SEMA42 gates.

SEMA42_GATE_n(base, n)

SEMA42 gate n register address.

The SEMA42 gates are sorted in the order 3, 2, 1, 0, 7, 6, 5, 4, ... not in the order 0, 1, 2, 3, 4, 5, 6, 7, ... The macro SEMA42_GATE_n gets the SEMA42 gate based on the gate index.

The input gate index is XOR'ed with 3U: $0 \wedge 3 = 3$ $1 \wedge 3 = 2$ $2 \wedge 3 = 1$ $3 \wedge 3 = 0$ $4 \wedge 3 = 7$ $5 \wedge 3 = 6$ $6 \wedge 3 = 5$ $7 \wedge 3 = 4$...

SEMA42_BUSY_POLL_COUNT

Maximum polling iterations for SEMA42 waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the SEMA42 driver code before timing out and returning an error.

It applies to all waiting loops in SEMA42 driver, such as waiting for a gate to be unlocked, waiting for a reset to complete, or waiting for a resource to become available.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if hardware doesn't respond or if a resource is never released.

2.65 SIM: System Integration Module Driver

FSL_SIM_DRIVER_VERSION

Driver version.

enum _sim_usb_volt_reg_enable_mode

USB voltage regulator enable setting.

Values:

enumerator kSIM_UsbVoltRegEnable

Enable voltage regulator.

enumerator kSIM_UsbVoltRegEnableInLowPower

Enable voltage regulator in VLPR/VLPW modes.

enumerator kSIM_UsbVoltRegEnableInStop

Enable voltage regulator in STOP/VLPS/LLS/VLLS modes.

enumerator kSIM_UsbVoltRegEnableInAllModes

Enable voltage regulator in all power modes.

enum `_sim_flash_mode`
Flash enable mode.

Values:

enumerator `kSIM_FlashDisableInWait`
Disable flash in wait mode.

enumerator `kSIM_FlashDisable`
Disable flash in normal mode.

typedef struct `_sim_uid` `sim_uid_t`
Unique ID.

typedef struct `_sim_rf_addr` `sim_rf_addr_t`
RF Mac Address.

void `SIM_SetUsbVoltRegulatorEnableMode`(uint32_t mask)
Sets the USB voltage regulator setting.

This function configures whether the USB voltage regulator is enabled in normal RUN mode, STOP/VLPS/LLS/VLLS modes, and VLPR/VLPW modes. The configurations are passed in as mask value of `_sim_usb_volt_reg_enable_mode`. For example, to enable USB voltage regulator in RUN/VLPR/VLPW modes and disable in STOP/VLPS/LLS/VLLS mode, use:

```
SIM_SetUsbVoltRegulatorEnableMode(kSIM_UsbVoltRegEnable  
kSIM_UsbVoltRegEnableInLowPower);
```

Parameters

- mask – USB voltage regulator enable setting.

void `SIM_GetUniqueId`(`sim_uid_t` *uid)
Gets the unique identification register value.

Parameters

- uid – Pointer to the structure to save the UID value.

static inline void `SIM_SetFlashMode`(uint8_t mode)
Sets the flash enable mode.

Parameters

- mode – The mode to set; see `_sim_flash_mode` for mode details.

void `SIM_GetRfAddr`(`sim_rf_addr_t` *info)
Gets the RF address register value.

Parameters

- info – Pointer to the structure to save the RF address value.

static inline void `SIM_EnableSystickClock`(bool enable)
Enable the Systick clock or not.
The Systick clock is enabled by default.

Parameters

- enable – The switcher for Systick clock.

struct `_sim_uid`
#include <fsl_sim.h> Unique ID.

Public Members

uint32_t H

UIDH.

uint32_t M

SIM_UIDM.

uint32_t L

UIDL.

struct _sim_rf_addr

#include <fsl_sim.h> RF Mac Address.**Public Members**

uint32_t rfAddrL

RFADDRL.

uint32_t rfAddrH

RFADDRH.

2.66 Smart Card

FSL_SMARTCARD_DRIVER_VERSION

Smart card driver version 2.3.0.

Smart card Error codes.

Values:

enumerator kStatus_SMARTCARD_Success

Transfer ends successfully

enumerator kStatus_SMARTCARD_TxBusy

Transmit in progress

enumerator kStatus_SMARTCARD_RxBusy

Receiving in progress

enumerator kStatus_SMARTCARD_NoTransferInProgress

No transfer in progress

enumerator kStatus_SMARTCARD_Timeout

Transfer ends with time-out

enumerator kStatus_SMARTCARD_Initialized

Smart card driver is already initialized

enumerator kStatus_SMARTCARD_PhyInitialized

Smart card PHY drive is already initialized

enumerator kStatus_SMARTCARD_CardNotActivated

Smart card is not activated

enumerator kStatus_SMARTCARD_InvalidInput

Function called with invalid input arguments

enumerator kStatus_SMARTCARD_OtherError
Some other error occur

enum _smartcard_control

Control codes for the Smart card protocol timers and misc.

Values:

enumerator kSMARTCARD_EnableADT

enumerator kSMARTCARD_DisableADT

enumerator kSMARTCARD_EnableGTV

enumerator kSMARTCARD_DisableGTV

enumerator kSMARTCARD_ResetWWT

enumerator kSMARTCARD_EnableWWT

enumerator kSMARTCARD_DisableWWT

enumerator kSMARTCARD_ResetCWT

enumerator kSMARTCARD_EnableCWT

enumerator kSMARTCARD_DisableCWT

enumerator kSMARTCARD_ResetBWT

enumerator kSMARTCARD_EnableBWT

enumerator kSMARTCARD_DisableBWT

enumerator kSMARTCARD_EnableInitDetect

enumerator kSMARTCARD_EnableAnack

enumerator kSMARTCARD_DisableAnack

enumerator kSMARTCARD_ConfigureBaudrate

enumerator kSMARTCARD_SetupATRMode

enumerator kSMARTCARD_SetupT0Mode

enumerator kSMARTCARD_SetupT1Mode

enumerator kSMARTCARD_EnableReceiverMode

enumerator kSMARTCARD_DisableReceiverMode

enumerator kSMARTCARD_EnableTransmitterMode

enumerator kSMARTCARD_DisableTransmitterMode

enumerator kSMARTCARD_ResetWaitTimeMultiplier

enum _smartcard_card_voltage_class

Defines Smart card interface voltage class values.

Values:

enumerator kSMARTCARD_VoltageClassUnknown

enumerator kSMARTCARD_VoltageClassA5_0V

enumerator kSMARTCARD_VoltageClassB3_3V

enumerator kSMARTCARD_VoltageClassC1_8V

enum _smartcard_transfer_state

Defines Smart card I/O transfer states.

Values:

enumerator kSMARTCARD_IdleState

enumerator kSMARTCARD_WaitingForTSSState

enumerator kSMARTCARD_InvalidTSDetectedState

enumerator kSMARTCARD_ReceivingState

enumerator kSMARTCARD_TransmittingState

enum _smartcard_reset_type

Defines Smart card reset types.

Values:

enumerator kSMARTCARD_ColdReset

enumerator kSMARTCARD_WarmReset

enumerator kSMARTCARD_NoColdReset

enumerator kSMARTCARD_NoWarmReset

enum _smartcard_transport_type

Defines Smart card transport protocol types.

Values:

enumerator kSMARTCARD_T0Transport

enumerator kSMARTCARD_T1Transport

enum _smartcard_parity_type

Defines Smart card data parity types.

Values:

enumerator kSMARTCARD_EvenParity

enumerator kSMARTCARD_OddParity

enum _smartcard_card_convention

Defines data Convention format.

Values:

enumerator kSMARTCARD_DirectConvention

enumerator kSMARTCARD_InverseConvention

enum _smartcard_interface_control

Defines Smart card interface IC control types.

Values:

enumerator kSMARTCARD_InterfaceSetVcc

enumerator kSMARTCARD_InterfaceSetClockToResetDelay

enumerator kSMARTCARD_InterfaceReadStatus

enum *_smartcard_direction*

Defines transfer direction.

Values:

enumerator kSMARTCARD_Receive

enumerator kSMARTCARD_Transmit

typedef enum *_smartcard_control* smartcard_control_t

Control codes for the Smart card protocol timers and misc.

typedef enum *_smartcard_card_voltage_class* smartcard_card_voltage_class_t

Defines Smart card interface voltage class values.

typedef enum *_smartcard_transfer_state* smartcard_transfer_state_t

Defines Smart card I/O transfer states.

typedef enum *_smartcard_reset_type* smartcard_reset_type_t

Defines Smart card reset types.

typedef enum *_smartcard_transport_type* smartcard_transport_type_t

Defines Smart card transport protocol types.

typedef enum *_smartcard_parity_type* smartcard_parity_type_t

Defines Smart card data parity types.

typedef enum *_smartcard_card_convention* smartcard_card_convention_t

Defines data Convention format.

typedef enum *_smartcard_interface_control* smartcard_interface_control_t

Defines Smart card interface IC control types.

typedef enum *_smartcard_direction* smartcard_direction_t

Defines transfer direction.

typedef void (*smartcard_interface_callback_t)(void *smartcardContext, void *param)

Smart card interface interrupt callback function type.

typedef void (*smartcard_transfer_callback_t)(void *smartcardContext, void *param)

Smart card transfer interrupt callback function type.

typedef void (*smartcard_time_delay_t)(uint32_t us)

Time Delay function used to passive waiting using RTOS [us].

typedef struct *_smartcard_card_params* smartcard_card_params_t

Defines card-specific parameters for Smart card driver.

typedef struct *_smartcard_timers_state* smartcard_timers_state_t

Smart card defines the state of the EMV timers in the Smart card driver.

typedef struct *_smartcard_interface_config* smartcard_interface_config_t

Defines user specified configuration of Smart card interface.

typedef struct *_smartcard_xfer* smartcard_xfer_t

Defines user transfer structure used to initialize transfer.

typedef struct *_smartcard_context* smartcard_context_t

Runtime state of the Smart card driver.

SMARTCARD_INIT_DELAY_CLOCK_CYCLES

Smart card global define which specify number of clock cycles until initial 'TS' character has to be received.

SMARTCARD_EMV_ATR_DURATION_ETU

Smart card global define which specify number of clock cycles during which ATR string has to be received.

SMARTCARD_TS_DIRECT_CONVENTION

Smart card specification initial TS character definition of direct convention.

SMARTCARD_TS_INVERSE_CONVENTION

Smart card specification initial TS character definition of inverse convention.

struct _smartcard_card_params

#include <fsl_smartcard.h> Defines card-specific parameters for Smart card driver.

Public Members

uint16_t Fi

4 bits Fi - clock rate conversion integer

uint8_t fMax

Maximum Smart card frequency in MHz

uint8_t WI

8 bits WI - work wait time integer

uint8_t Di

4 bits DI - baud rate divisor

uint8_t BWI

4 bits BWI - block wait time integer

uint8_t CWI

4 bits CWI - character wait time integer

uint8_t BGI

4 bits BGI - block guard time integer

uint8_t GTN

8 bits GTN - extended guard time integer

uint8_t IFSC

Indicates IFSC value of the card

uint8_t modeNegotiable

Indicates if the card acts in negotiable or a specific mode.

uint8_t currentD

4 bits DI - current baud rate divisor

uint8_t status

Indicates smart card status

bool t0Indicated

Indicates ff T=0 indicated in TD1 byte

bool t1Indicated

Indicates if T=1 indicated in TD2 byte

bool atrComplete

Indicates whether the ATR received from the card was complete or not

bool atrValid

Indicates whether the ATR received from the card was valid or not

bool present

Indicates if a smart card is present

bool active

Indicates if the smart card is activated

bool faulty

Indicates whether smart card/interface is faulty

smartcard_card_convention_t convention

Card convention, kSMARTCARD_DirectConvention for direct convention, kSMARTCARD_InverseConvention for inverse convention

struct _smartcard_timers_state

#include <fsl_smartcard.h> Smart card defines the state of the EMV timers in the Smart card driver.

Public Members

volatile bool adtExpired

Indicates whether ADT timer expired

volatile bool wwtExpired

Indicates whether WWT timer expired

volatile bool cwtExpired

Indicates whether CWT timer expired

volatile bool bwtExpired

Indicates whether BWT timer expired

volatile bool initCharTimerExpired

Indicates whether reception timer for initialization character (TS) after the RST has expired

struct _smartcard_interface_config

#include <fsl_smartcard.h> Defines user specified configuration of Smart card interface.

Public Members

uint32_t smartCardClock

Smart card interface clock [Hz]

uint32_t clockToResetDelay

Indicates clock to RST apply delay [smart card clock cycles]

uint8_t clockModule

Smart card clock module number

uint8_t clockModuleChannel

Smart card clock module channel number

uint8_t clockModuleSourceClock

Smart card clock module source clock [e.g., BusClk]

```

smartcard_card_voltage_class_t vcc
    Smart card voltage class
uint8_t controlPort
    Smart card PHY control port instance
uint8_t controlPin
    Smart card PHY control pin instance
uint8_t irqPort
    Smart card PHY Interrupt port instance
uint8_t irqPin
    Smart card PHY Interrupt pin instance
uint8_t resetPort
    Smart card reset port instance
uint8_t resetPin
    Smart card reset pin instance
uint8_t vsel0Port
    Smart card PHY Vsel0 control port instance
uint8_t vsel0Pin
    Smart card PHY Vsel0 control pin instance
uint8_t vsel1Port
    Smart card PHY Vsel1 control port instance
uint8_t vsel1Pin
    Smart card PHY Vsel1 control pin instance
uint8_t dataPort
    Smart card PHY data port instance
uint8_t dataPin
    Smart card PHY data pin instance
uint8_t dataPinMux
    Smart card PHY data pin mux option
uint8_t tsTimerId
    Numerical identifier of the External HW timer for Initial character detection
struct _smartcard_xfer
    #include <fsl_smartcard.h> Defines user transfer structure used to initialize transfer.

```

Public Members

```

smartcard_direction_t direction
    Direction of communication. (RX/TX)
uint8_t *buff
    The buffer of data.
size_t size
    The number of transferred units.
struct _smartcard_context
    #include <fsl_smartcard.h> Runtime state of the Smart card driver.

```

Public Members

void *base

Smart card module base address

smartcard_direction_t direction

Direction of communication. (RX/TX)

uint8_t *xBuff

The buffer of data being transferred.

volatile size_t xSize

The number of bytes to be transferred.

volatile bool xIsBusy

True if there is an active transfer.

uint8_t txFifoEntryCount

Number of data word entries in transmit FIFO.

uint8_t rxFifoThreshold

The max value of the receiver FIFO threshold.

smartcard_interface_callback_t interfaceCallback

Callback to invoke after interface IC raised interrupt.

smartcard_transfer_callback_t transferCallback

Callback to invoke after transfer event occur.

void *interfaceCallbackParam

Interface callback parameter pointer.

void *transferCallbackParam

Transfer callback parameter pointer.

smartcard_time_delay_t timeDelay

Function which handles time delay defined by user or RTOS.

smartcard_reset_type_t resetType

Indicates whether a Cold reset or Warm reset was requested.

smartcard_transport_type_t tType

Indicates current transfer protocol (T0 or T1)

volatile *smartcard_transfer_state_t* transferState

Indicates the current transfer state

smartcard_timers_state_t timersState

Indicates the state of different protocol timers used in driver

smartcard_card_params_t cardParams

Smart card parameters(ATR and current) and interface slots states(ATR and current)

uint8_t IFSD

Indicates the terminal IFSD

smartcard_parity_type_t parity

Indicates current parity even/odd

volatile bool rxtCrossed

Indicates whether RXT thresholds has been crossed

`volatile bool txtCrossed`
Indicates whether TXT thresholds has been crossed

`volatile bool wtxRequested`
Indicates whether WTX has been requested or not

`volatile bool parityError`
Indicates whether a parity error has been detected

`uint8_t statusBytes[2]`
Used to store Status bytes SW1, SW2 of the last executed card command response

`smartcard_interface_config_t interfaceConfig`
Smart card interface configuration structure

`bool abortTransfer`
Used to abort transfer.

2.67 Smart Card EMVSIM Driver

`void SMARTCARD_EMVSIM_GetDefaultConfig(smartcard_card_params_t *cardParams)`
Fills in the `smartcard_card_params` structure with default values according to the EMV 4.3 specification.

Parameters

- `cardParams` – The configuration structure of type `smartcard_interface_config_t`. Function fill in members: `Fi = 372`; `Di = 1`; `currentD = 1`; `WI = 0x0A`; `GTN = 0x00`; with default values.

`status_t SMARTCARD_EMVSIM_Init(EMVSIM_Type *base, smartcard_context_t *context, uint32_t srcClock_Hz)`

Initializes an EMVSIM peripheral for the Smart card/ISO-7816 operation.

This function un-gates the EMVSIM clock, initializes the module to EMV default settings, configures the IRQ, enables the module-level interrupt to the core and, initializes the driver context.

Parameters

- `base` – The EMVSIM peripheral base address.
- `context` – A pointer to the smart card driver context structure.
- `srcClock_Hz` – Smart card clock generation module source clock.

Returns

An error code or `kStatus_SMARTCARD_Success`.

`void SMARTCARD_EMVSIM_Deinit(EMVSIM_Type *base)`

This function disables the EMVSIM interrupts, disables the transmitter and receiver, flushes the FIFOs, and gates EMVSIM clock in SIM.

Parameters

- `base` – The EMVSIM module base address.

`int32_t SMARTCARD_EMVSIM_GetTransferRemainingBytes(EMVSIM_Type *base, smartcard_context_t *context)`

Returns whether the previous EMVSIM transfer has finished.

When performing an async transfer, call this function to ascertain the context of the current transfer: in progress (or busy) or complete (success). If the transfer is still in progress, the user can obtain the number of words that have not been transferred.

Parameters

- `base` – The EMVSIM module base address.
- `context` – A pointer to a smart card driver context structure.

Returns

The number of bytes not transferred.

`status_t SMARTCARD_EMVSIM_AbortTransfer(EMVSIM_Type *base, smartcard_context_t *context)`

Terminates an asynchronous EMVSIM transfer early.

During an async EMVSIM transfer, the user can terminate the transfer early if the transfer is still in progress.

Parameters

- `base` – The EMVSIM peripheral address.
- `context` – A pointer to a smart card driver context structure.

Return values

- `kStatus_SMARTCARD_Success` – The transmit abort was successful.
- `kStatus_SMARTCARD_NoTransmitInProgress` – No transmission is currently in progress.

`status_t SMARTCARD_EMVSIM_TransferNonBlocking(EMVSIM_Type *base, smartcard_context_t *context, smartcard_xfer_t *xfer)`

Transfer data using interrupts.

A non-blocking (also known as asynchronous) function means that the function returns immediately after initiating the transfer function. The application has to get the transfer status to see when the transfer is complete. In other words, after calling the non-blocking (asynchronous) transfer function, the application must get the transfer status to check if the transmit is completed or not.

Parameters

- `base` – The EMVSIM peripheral base address.
- `context` – A pointer to a smart card driver context structure.
- `xfer` – A pointer to the smart card transfer structure where the linked buffers and sizes are stored.

Returns

An error code or `kStatus_SMARTCARD_Success`.

`status_t SMARTCARD_EMVSIM_Control(EMVSIM_Type *base, smartcard_context_t *context, smartcard_control_t control, uint32_t param)`

Controls the EMVSIM module per different user request.

return `kStatus_SMARTCARD_Success` in success. return `kStatus_SMARTCARD_OtherError` in case of error.

Parameters

- `base` – The EMVSIM peripheral base address.
- `context` – A pointer to a smart card driver context structure.
- `control` – Control type.
- `param` – Integer value of specific to control command.

void SMARTCARD_EMVSIM_IRQHandler(EMVSIM_Type *base, smartcard_context_t *context)
 Handles EMVSIM module interrupts.

Parameters

- base – The EMVSIM peripheral base address.
- context – A pointer to a smart card driver context structure.

enum _emvsim_gpc_clock_select

General Purpose Counter clock selections.

Values:

enumerator kEMVSIM_GPCClockDisable
 Disabled

enumerator kEMVSIM_GPCCardClock
 Card clock

enumerator kEMVSIM_GPCRxClock
 Receive clock

enumerator kEMVSIM_GPCTxClock
 Transmit ETU clock

enum _presence_detect_edge

EMVSIM card presence detection edge control.

Values:

enumerator kEMVSIM_DetectOnFallingEdge
 Presence detected on the falling edge

enumerator kEMVSIM_DetectOnRisingEdge
 Presence detected on the rising edge

enum _presence_detect_status

EMVSIM card presence detection status.

Values:

enumerator kEMVSIM_DetectPinIsLow
 Presence detected pin is logic low

enumerator kEMVSIM_DetectPinIsHigh
 Presence detected pin is logic high

typedef enum _emvsim_gpc_clock_select emvsim_gpc_clock_select_t

General Purpose Counter clock selections.

typedef enum _presence_detect_edge emvsim_presence_detect_edge_t

EMVSIM card presence detection edge control.

typedef enum _presence_detect_status emvsim_presence_detect_status_t

EMVSIM card presence detection status.

SMARTCARD_EMV_RX_NACK_THRESHOLD

EMV RX NACK interrupt generation threshold.

SMARTCARD_EMV_TX_NACK_THRESHOLD

EMV TX NACK interrupt generation threshold.

SMARTCARD_WWT_ADJUSTMENT

Smart card Word Wait Timer adjustment value.

SMARTCARD_CWT_ADJUSTMENT

Smart card Character Wait Timer adjustment value.

2.68 Smart Card PHY Driver

void SMARTCARD_PHY_GetDefaultConfig(*smartcard_interface_config_t* *config)

Fills in the configuration structure with default values.

Parameters

- *config* – The Smart card user configuration structure which contains configuration structure of type *smartcard_interface_config_t*. Function fill in members: *clockToResetDelay* = 42000, *vcc* = *kSmartcardVoltageClassB3_3V*, with default values.

status_t SMARTCARD_PHY_Init(void *base, *smartcard_interface_config_t* const *config, uint32_t srcClock_Hz)

Initializes a Smart card interface instance.

Parameters

- *base* – The Smart card peripheral base address.
- *config* – The user configuration structure of type *smartcard_interface_config_t*. Call the function SMARTCARD_PHY_GetDefaultConfig() to fill the configuration structure.
- *srcClock_Hz* – Smart card clock generation module source clock.

Return values

kStatus_SMARTCARD_Success – or *kStatus_SMARTCARD_OtherError* in case of error.

void SMARTCARD_PHY_Deinit(void *base, *smartcard_interface_config_t* const *config)

De-initializes a Smart card interface, stops the Smart card clock, and disables the VCC.

Parameters

- *base* – The Smart card peripheral module base address.
- *config* – The user configuration structure of type *smartcard_interface_config_t*.

status_t SMARTCARD_PHY_Activate(void *base, *smartcard_context_t* *context, *smartcard_reset_type_t* resetType)

Activates the Smart card IC.

Parameters

- *base* – The Smart card peripheral module base address.
- *context* – A pointer to a Smart card driver context structure.
- *resetType* – type of reset to be performed, possible values = *kSmartcardColdReset*, *kSmartcardWarmReset*

Return values

kStatus_SMARTCARD_Success – or *kStatus_SMARTCARD_OtherError* in case of error.

status_t SMARTCARD_PHY_Deactivate(void *base, *smartcard_context_t* *context)

De-activates the Smart card IC.

Parameters

- `base` – The Smart card peripheral module base address.
- `context` – A pointer to a Smart card driver context structure.

Return values

`kStatus_SMARTCARD_Success` – or `kStatus_SMARTCARD_OtherError` in case of error.

```
status_t SMARTCARD_PHY_Control(void *base, smartcard_context_t *context,  
                               smartcard_interface_control_t control, uint32_t param)
```

Controls the Smart card interface IC.

Parameters

- `base` – The Smart card peripheral module base address.
- `context` – A pointer to a Smart card driver context structure.
- `control` – A interface command type.
- `param` – Integer value specific to control type

Return values

`kStatus_SMARTCARD_Success` – or `kStatus_SMARTCARD_OtherError` in case of error.

`SMARTCARD_ATR_DURATION_ADJUSTMENT`

Smart card definition which specifies the adjustment number of clock cycles during which an ATR string has to be received.

`SMARTCARD_INIT_DELAY_CLOCK_CYCLES_ADJUSTMENT`

Smart card definition which specifies the adjustment number of clock cycles until an initial 'TS' character has to be received.

2.69 Smart Card PHY EMVSIM Driver

2.70 Smart Card PHY TDA8035 Driver

2.71 SPM: System Power Manager

```
static inline void SPM_GetVersionId(SPM_Type *base, spm_version_id_t *versionId)
```

Gets the SPM version ID.

This function gets the SPM version ID, including major version number, minor version number, and a feature specification number.

Parameters

- `base` – SPM peripheral base address.
- `versionId` – Pointer to version ID structure.

```
void SPM_GetRegulatorStatus(SPM_Type *base, spm_regulator_status_t *info)
```

Gets the regulators Status.

Parameters

- `base` – SPM peripheral base address.
- `info` – Pointer to status structure, see to `spm_regulator_status_t`.

```
static inline void SPM_EnableRegulatorInRunMode(SPM_Type *base, bool enable, uint32_t ldoMask)
```

Controls which regulators are enabled in RUN and HSRUN modes.

This function controls which regulator (CORE LDO, AUX LDO, and DCDC) are enabled in RUN and HSRUN modes. It sets the SPM_RCTRL register. Note that the RCTRL bits are reset solely on a POR/LVD only event.

Parameters

- base – SPM peripheral base address.
- enable – Enable or disable the LDOs list in ldoMask.
- ldoMask – Mask value of LDO list. See to `_spm_ldo_regulator`.

```
static inline void SPM_EnableRegulatorInLowPowerMode(SPM_Type *base, bool enable, uint32_t ldoMask)
```

Controls which regulators are enabled in low power modes.

This function controls which regulator (CORE LDO, AUX LDO, and DCDC) are enabled in low power modes. It sets the SPM_LPCTRL register. Note that the SPM_LPCTRL bits are reset solely on a POR/LVD only event.

Parameters

- base – SPM peripheral base address.
- enable – Enable or disable the LDOs list in ldoMask.
- ldoMask – Mask value of LDO list.

```
static inline void SPM_SetCoreLdoRunModeConfig(SPM_Type *base, uint32_t configMask)
```

Configures the CORE LDO working in run modes.

Parameters

- base – SPM peripheral base address.
- configMask – Mask value of configuration items. See to `_spm_core_ldo_run_mode_config`.

```
static inline void SPM_SetCoreLdoLowPowerModeConfig(SPM_Type *base, uint32_t configMask)
```

Configures the CORE LDO working in low power modes.

Parameters

- base – SPM peripheral base address.
- configMask – Mask value of configuration items. See to `_spm_core_ldo_low_power_mode_config`.

```
static inline bool SPM_GetCoreLdoInRunRegulationFlag(SPM_Type *base)
```

Check if the CORE LDO is in run regulation.

Parameters

- base – SPM peripheral base address.

Return values

- true – Regulator is in run regulation.
- false – Regulator is in stop regulation or in transition to/from it.

```
static inline void SPM_ForceCoreLdoOffset(SPM_Type *base, bool enable)
    Force the Core LDO to an offset voltage level.
```

Note: Please make sure Core LDO Aux LDO and DCDC regulator both have been enabled before invoking this function.

Parameters

- `base` – SPM peripheral base address.
- `enable` – Enable/Disable Core Ldo voltage offset. `true` - Apply Core LDO offset. `false` - Don't apply Core LDO offset.

```
static inline bool SPM_GetPeriphIOIsolationFlag(SPM_Type *base)
    Gets the acknowledge Peripherals and I/O pads isolation flag.
```

This function reads the Acknowledge Isolation setting that indicates whether certain peripherals and the I/O pads are in a latched state as a result of having been in the VLLS mode.

Parameters

- `base` – SPM peripheral base address.

Returns

ACK isolation 0 - Peripherals and I/O pads are in a normal run state. 1 - Certain peripherals and I/O pads are in an isolated and latched state.

```
static inline void SPM_ClearPeriphIOIsolationFlag(SPM_Type *base)
    Acknowledges the isolation flag to Peripherals and I/O pads.
```

This function clears the ACK Isolation flag. Writing one to this setting when it is set releases the I/O pads and certain peripherals to their normal run mode state.

Parameters

- `base` – SPM peripheral base address.

```
void SPM_SetLowVoltDetectConfig(SPM_Type *base, const spm_low_volt_detect_config_t *config)
    Configures the low-voltage detect setting.
```

This function configures the low-voltage detect setting, including the trip point voltage setting, enables or disables the interrupt, enables or disables the system reset.

Parameters

- `base` – SPM peripheral base address.
- `config` – Pointer to low-voltage detect configuration structure, see to `spm_low_volt_detect_config_t`.

```
static inline bool SPM_GetVddLowVoltDetectFlag(SPM_Type *base)
    Gets VDD Low-voltage Detect Flag status.
```

Parameters

- `base` – SPM peripheral base address.

Returns

Current low-voltage detect flag

- `true`: Low-voltage detected
- `false`: Low-voltage not detected

```
static inline void SPM_ClearVddLowVoltDetectFlag(SPM_Type *base)
```

Acknowledges clearing the Low-voltage Detect flag.

This function acknowledges the low-voltage detection errors.

Parameters

- base – SPM peripheral base address.

```
static inline bool SPM_GetCoreLowVoltDetectFlag(SPM_Type *base)
```

Gets the COREVdds Low-voltage Detect Flag status.

This function reads the current LVDF status. If it returns 1, a low-voltage event is detected.

Parameters

- base – SPM peripheral base address.

Returns

Current low-voltage detect flag

- true: Low-voltage detected
- false: Low-voltage not detected

```
static inline void SPM_ClearCoreLowVoltDetectFlag(SPM_Type *base)
```

Acknowledges clearing the CORE VDD Low-voltage Detect flag.

This function acknowledges the CORE VDD low-voltage detection errors.

Parameters

- base – SPM peripheral base address.

```
void SPM_SetLowVoltWarningConfig(SPM_Type *base, const spm_low_volt_warning_config_t *config)
```

Configures the low-voltage warning setting.

This function configures the low-voltage warning setting, including the trip point voltage setting and enabling or disabling the interrupt.

Parameters

- base – SPM peripheral base address.
- config – Pointer to Low-voltage warning configuration structure, see to *spm_low_volt_warning_config_t*.

```
static inline bool SPM_GetVddLowVoltWarningFlag(SPM_Type *base)
```

Gets Vdd Low-voltage Warning Flag status.

This function polls the current LVWF status. When 1 is returned, it indicates a low-voltage warning event. LVWF is set when V Supply transitions below the trip point or after reset and V Supply is already below the V LVW.

Parameters

- base – SPM peripheral base address.

Returns

Current LVWF status

- true: Low-voltage Warning Flag is set.
- false: the Low-voltage Warning does not happen.

```
static inline void SPM_ClearLowVoltWarningFlag(SPM_Type *base)
```

Acknowledges the Low-voltage Warning flag.

This function acknowledges the low voltage warning errors (write 1 to clear LVWF).

Parameters

- base – SPM peripheral base address.

```
void SPM_SetHighVoltDetectConfig(SPM_Type *base, const spm_high_volt_detect_config_t
                                *config)
```

Configures the high-voltage detect setting.

This function configures the high-voltage detect setting, including the trip point voltage setting, enabling or disabling the interrupt, enabling or disabling the system reset.

Parameters

- base – SPM peripheral base address.
- config – High-voltage detect configuration structure, see to *spm_high_volt_detect_config_t*.

```
static inline bool SPM_GetHighVoltDetectFlag(SPM_Type *base)
```

Gets the High-voltage Detect Flag status.

This function reads the current HVDF status. If it returns 1, a low voltage event is detected.

Parameters

- base – SPM peripheral base address.

Returns

Current high-voltage detect flag

- true: High-voltage detected
- false: High-voltage not detected

```
static inline void SPM_ClearHighVoltDetectFlag(SPM_Type *base)
```

Acknowledges clearing the High-voltage Detect flag.

This function acknowledges the high-voltage detection errors (write 1 to clear HVDF).

Parameters

- base – SPM peripheral base address.

```
void SPM_SetAuxLdoConfig(SPM_Type *base, const spm_aux_ldo_config_t *config)
```

Configures the AUX LDO.

Parameters

- base – SPM peripheral base address.
- config – Pointer to configuration structure, see to *spm_rf_ldo_config_t*.

```
static inline void SPM_ForceAuxLdoOffset(SPM_Type *base, bool enable)
```

Force auxiliary regulator voltage to an offset level.

Note: Please make sure DCDC has been enabled before invoking this function.

Parameters

- base – SPM peripheral base address.
- enable – Enable/Disable AUX Ldo voltage offset. true - Force auxiliary regulator voltage to an offset level. false - Do not force auxiliary regulator voltage to an offset level.

```
void SPM_SetDcdcBattMonitor(SPM_Type *base, uint32_t batAdcVal)
```

Sets DCDC battery monitor with its ADC value.

For better accuracy, software would call this function to set the battery voltage value into DCDC measured by ADC.

Parameters

- *base* – SPM peripheral base address.
- *batAdcVal* – ADC measured battery value with an 8mV LSB resolution. Value 0 would disable the battery monitor.

```
static inline void SPM_SetDcdcVbatAdcMeasure(SPM_Type *base, spm_dcdc_vbat_adc_divider_t divider)
```

Sets DCDC VBAT voltage divider.

The divided VBAT output is input to an ADC channel which allows the battery voltage to be measured.

Parameters

- *base* – SPM peripheral base address.
- *divider* – Setting divider, see to *spm_dcdc_vbat_adc_divider_t*.

```
static inline void SPM_EnablePowerDownCmpOffset(SPM_Type *base, bool enable)
```

Power down output range comparator.

Parameters

- *base* – SPM peripheral base address.
- *enable* – Power down the CMP or not.

```
static inline uint32_t SPM_GetDcdcStatusFlags(SPM_Type *base)
```

Get the status flags of DCDC module.

Parameters

- *base* – SPM peripheral base address.

Returns

Mask value of flags. See to *_spm_dcdc_flags*.

```
void SPM_SetDcdcLoopControlConfig(SPM_Type *base, const spm_dcdc_loop_control_config_t *config)
```

Set DCDC loop control config.

Parameters

- *base* – SPM peripheral base address.
- *config* – The Pointer to the structure *spm_dcdc_loop_control_config_t*.

```
static inline void SPM_EnableVddxStepLock(SPM_Type *base, bool enable)
```

Disable stepping for VDD1P8 and VDD1P2.

Must lock the step for VDD1P8 and VDD1P2 before enteing low power modes.

Parameters

- *base* – SPM peripheral base address.
- *enable* – Enable the lock or not to VDDx stepping.

```
static inline void SPM_SetDcdcDriveStrength(SPM_Type *base, spm_dcdc_drive_strength_t strength)
```

Set the DCDC drive strength.

Do set the DCDC drive strength according to actual loading. The related register bits are:

- DCDC3[DCDC_MINPWR_HALF_FETS]
- DCDC3[DCDC_MINPWR_DOUBLE_FETS]
- DCDC3[DCDC_MINPWR_EXTRA_DOUBLE_FETS] The more FETs are enabled, the more drive strength DCDC would provide.

Parameters

- *base* – SPM peripheral base address.
- *strength* – Selection of setting, see to *spm_dcdc_drive_strength_t*

```
static inline void SPM_SplitDcdcClockFreq(SPM_Type *base, bool enable)
```

Split the frequency of DCDC's clock to min the power of DCDC.

Note: The function can only be invoked in continuous mode.

Parameters

- *base* – SPM peripheral base address.
- *enable* – Split the DCDC clock frequency. true - Set DCDC clock to half frequency for the continuous mode. false - Do not set DCDC clock to half frequency for the continuous mode.

```
void SPM_BypassDcdcBattMonitor(SPM_Type *base, bool enable, uint32_t value)
```

Bypasses the ADC measure value.

Forces DCDC to bypass the adc measuring state and loads the user-defined value in this function.

Parameters

- *base* – SPM peripheral base address.
- *enable* – Enable the bypass or not.
- *value* – User-setting value to be available instead of ADC measured value.

```
void SPM_SetDcdcIntegratorConfig(SPM_Type *base, const spm_dcdc_integrator_config_t *config)
```

Configure the DCDC integrator value.

Integrator value can be loaded in pulsed mode. Software can program this value according to battery voltage and VDDCORE output target value before goes to the pulsed mode.

```
spm_dcdc_integrator_config_t SpmDcdcIntegratorConfigStruct =
{
    .vddCoreValue = 1.25f,
    .vBatValue    = 3.34f
};
```

Parameters

- *base* – SPM peripheral base address.

- `config` – Pointer to configuration structure, see to `spm_dcdc_integrator_config_t`. Passing NULL would clear all user-defined setting and use hardware default setting.

static inline void SPC_BypassDcdcAdcMeasure(SPM_Type *base, bool bypass)

Bypass the ADC measure or not.

Note: If forced to bypass the ADC measure, please invoke `SPM_SetDcdcIntegratorConfig()` function to select the integrator value.

Parameters

- `base` – SPM peripheral base address.
- `bypass` – Bypass or not bypass the ADC measure true - Force DCDC to bypass the ADC measuring state. false - Don't force DCDC to bypass the ADC measuring state.

static inline void SPM_SetDcdcVdd1p2ValueHsrn(SPM_Type *base, uint32_t trimCode)

Sets the target value of VDD1P2 in buck HSRUN mode.

Sets target value of VDD1P2 in buck HSRUN mode. 25 mV each step from 0x00 to 0x0F. This value is automatically selected on entry into HSRUN. On exit from HSRUN, DCDC VDD1P2 trim values will default back to values set by `DCDC_VDD1P2CTRL_TRG_BUCK` register, which is operated with the API of `SPM_SetDcdcVdd1p2ValueBuck()`.

Parameters

- `base` – SPM peripheral base address.
- `trimCode` – Setting value of VDD1P2 in buck HSRUN mode. Please refer to the reference manual for details.

static inline void SPM_SetDcdcVdd1p2ValueBuck(SPM_Type *base, uint32_t trimCode)

Sets the target value of VDD1P2 in buck mode.

Sets the target value of VDD1P2 in buck mode, 25 mV each step from 0x00 to 0x0F.

Parameters

- `base` – SPM peripheral base address.
- `trimCode` – Setting value of VDD1P2 in buck mode. Please refer to the reference manual for details.

static inline void SPM_SetDcdcVdd1p8Value(SPM_Type *base, uint32_t trimCode)

Sets the target value of VDD1P8.

Sets the target value of VDD1P8 in buck mode, 25 mV each step from 0x00 to 0x3F.

Parameters

- `base` – SPM peripheral base address.
- `trimCode` – Setting the trimCode of VDD1P8 output. Please refer to the reference manual for details.

static inline void SPM_SetLowPowerReqOutPinConfig(SPM_Type *base, const
spm_low_power_req_out_pin_config_t
*config)

brief Configures the low power request output pin.

param base SPM peripheral base address. param config Pointer to the configuration structure, see to `spm_low_power_req_out_pin_config_t`.

FSL_SPM_DRIVER_VERSION

SPM driver version.

Version 2.3.0.

enum _spm_mcu_low_power_mode_status

Status of last MCU STOP Mode Power Configuration.

Values:

enumerator kSPM_McuLowPowerModeReserved
Reserved.

enumerator kSPM_McuLowPowerModeSTOP
Last Low Power mode is STOP.

enumerator kSPM_McuLowPowerModeVLPS
Last Low Power mode is VLPS.

enumerator kSPM_McuLowPowerModeLLS
Last Low Power mode is LLS.

enumerator kSPM_McuLowPowerModeVLLS23
Last Low Power mode is VLLS23.

enumerator kSPM_McuLowPowerModeVLLS01
Last Low Power mode is VLLS01.

enum _spm_ldo_regulator

define the mask code for LDO regulators.

These mask can be combined with 'or' as a parameter to any function.

Values:

enumerator kSPM_CoreLdo
Mask code for CORE LDO.

enumerator kSPM_AuxLdo
Mask code for AUX LDO.

enumerator kSPM_DcdcLdo
Mask code for DCDC LDO.

enum _spm_core_ldo_run_mode_config

Configure the CORE LDO in run modes.

Values:

enumerator kSPM_CoreLdoRunModeEnableRtcPowerMonitor
RTC power monitor enabled in run modes.

enumerator kSPM_CoreLdoRunModeEnableUsbPowerMonitor
USB power monitor enabled in run modes.

enumerator kSPM_CoreLdoRunModeEnableVddioPowerMonitor
VDDIO power monitor enabled in run modes.

enum _spm_core_ldo_low_power_mode_config

Configure the CORE LDO in low power modes.

Values:

enumerator kSPM_CoreLdoLowPowerModeEnableRtcPowerMonitor
RTC power monitor enabled in LP modes.

enumerator kSPM_CoreLdoLowPowerModeEnableUsbPowerMonitor
USB power monitor enabled in LP modes.

enumerator kSPM_CoreLdoLowPowerModeEnableVddioPowerMonitor
VDDIO power monitor enabled in LP modes.

enumerator kSPM_CoreLdoLowPowerModeEnableAllReference
Enable all reference (bandgap, WELL BIAS, 1k clk and LP 25na) in VLLS0/1.

enumerator kSPM_CoreLdoLowPowerModeEnableHighDrive
Enable high driver in low power.

enumerator kSPM_CoreLdoLowPowerModeEnableLVD
Enable level voltage detect in low power modes.

enumerator kSPM_CoreLdoLowPowerModeEnablePOR
POR brownout remains enabled in VLLS0/1 mode.

enumerator kSPM_CoreLdoLowPowerModeEnableLPO
LPO remains enabled in VLLS0/1 modes.

enumerator kSPM_CoreLdoLowPowerModeEnableBandgapBufferHightDrive
Enable the high drive for Bandgap Buffer.

enumerator kSPM_CoreLdoLowPowerModeEnableBandgapBuffer
Enable Bandgap Buffer.

enumerator kSPM_CoreLdoLowPowerModeEnableBandgapInVLPx
Enable Bandgap in STOP/VLPx/LLS and VLLSx mode.

enumerator kSPM_CoreLdoLowPowerModeRemainInHighPower
Core LDO remains in high power state in VLP/Stop modes.

enum _spm_low_volt_detect_volt_select
Low-voltage Detect Voltage Select.

Values:

enumerator kSPM_LowVoltDetectLowTrip
Low-trip point selected (VLVD = VLVDL)

enumerator kSPM_LowVoltDetectHighTrip
High-trip point selected (VLVD = VLVDH)

enum _spm_low_volt_warning_volt_select
Low-voltage Warning Voltage Select.

Values:

enumerator kSPM_LowVoltWarningLowTrip
Low-trip point selected (VLVW = VLVW1)

enumerator kSPM_LowVoltWarningMID1Trip
Mid1-trip point selected (VLVW = VLVW2)

enumerator kSPM_LowVoltWarningMID2Trip
Mid2-trip point selected (VLVW = VLVW3)

enumerator kSPM_LowVoltWarningHighTrip
High-trip point selected (VLVW = VLVW4)

enum _spm_high_volt_detect_volt_select
High-voltage Detect Voltage Select.

Values:

enumerator kSPM_HighVoltDetectLowTrip
Low-trip point selected (VHVD = VHVDL)

enumerator kSPM_HighVoltDetectHighTrip
High-trip point selected (VHVD = VHVDH)

enum _spm_aux_ldo_low_power_mode
Defines the AUX LDO low power behavior when in low power modes.

Values:

enumerator kSPM_AuxLdoEnterLowPowerInLowPowerModes
AUX LDO regulator enters low power state in VLP/Stop modes.

enumerator kSPM_AuxLdoRemainInHighPowerInLowPowerModes
AUX LDO regulator remains in high power state in VLP/Stop modes.

enum _spm_aux_ldo_io_soft_start_duration
Selects the soft start duration delay for the IO 1.8 full power regulator.

Values:

enumerator kSPM_AuxLdoSoftStartDuration110us
110 us.

enumerator kSPM_AuxLdoSoftStartDuration95us
95 us.

enumerator kSPM_AuxLdoSoftStartDuration60us
60 us.

enumerator kSPM_AuxLdoSoftStartDuration48us
48 us.

enumerator kSPM_AuxLdoSoftStartDuration38us
38 us.

enumerator kSPM_AuxLdoSoftStartDuration30us
30 us.

enumerator kSPM_AuxLdoSoftStartDuration24us
24 us.

enumerator kSPM_AuxLdoSoftStartDuration17us
17 us.

enum _spm_aux_io_regulator_volt_select
IO Regulator Voltage Select.

Values:

enumerator kSPM_AuxIoRegulatorVoltLevel1p8
Regulate to 1.8V.

enumerator kSPM_AuxIoRegulatorVoltLevel1p5
Regulate to 1.5V.

enum _spm_dcdc_vbat_adc_divider
Defines the selection of DCDC vbat voltage divider for ADC measure.

Values:

enumerator kSPM_DcdcVbatAdcOff
OFF.

enumerator kSPM_DcdcVbatAdcDivider1
VBAT.

enumerator kSPM_DcdcVbatAdcDivider2
VBAT /2.

enumerator kSPM_DcdcVbatAdcDivider4
VBAT /4.

enum _spm_low_power_req_out_pin_pol
Defines the selection of low power request pin out pin polarity.

Values:

enumerator kSPM_LowPowerReqOutPinHighTruePol
High true polarity.

enumerator kSPM_LowPowerReqOutPinLowTruePol
Low true polarity.

enum _spm_dcdc_drive_strength
Defines the selection of DCDC driver strength.
The more FETs are enabled, the more drive strength DCDC would provide.

Values:

enumerator kSPM_DcdcDriveStrengthWithNormal
No additional FET setting.

enumerator kSPM_DcdcDriveStrengthWithHalfFETs
Half FETs.

enumerator kSPM_DcdcDriveStrengthWithDoubleFETs
Double FETs.

enumerator kSPM_DcdcDriveStrengthWithExtraDoubleFETs
Extra Double FETs.

enumerator kSPM_DcdcDriveStrengthWithHalfAndDoubleFETs
Half + Double FETs.

enumerator kSPM_DcdcDriveStrengthWithHalfAndExtraDoubleFETs
Half + Extra Double FETs.

enumerator kSPM_DcdcDriveStrengthWithDoubleAndExtraDoubleFETs
Double + Extra Double FETs.

enumerator kSPM_DcdcDriveStrengthWithAllFETs
Half + Double + Extra Double FETs.

enum _spm_dcdc_flags
DCDC flags.

Values:

enumerator kSPM_DcdcStableOKFlag
Status flag to indicate DCDC lock.

enumerator kSPM_DcdcClockFaultFlag
Asserts if DCDC detect a clk fault. Will cause a system lvd reset to assert.

typedef struct _spm_version_id spm_version_id_t
IP version ID definition.

`typedef enum _spm_mcu_low_power_mode_status` `spm_mcu_low_power_mode_status_t`
 Status of last MCU STOP Mode Power Configuration.

`typedef struct _spm_regulator_status` `spm_regulator_status_t`
 Keep the regulator status information.

`typedef enum _spm_low_volt_detect_volt_select` `spm_low_volt_detect_volt_select_t`
 Low-voltage Detect Voltage Select.

`typedef struct _spm_low_volt_detect_config` `spm_low_volt_detect_config_t`
 Low-voltage Detect Configuration Structure.

This structure reuses the configuration structure from legacy PMC module.

`typedef enum _spm_low_volt_warning_volt_select` `spm_low_volt_warning_volt_select_t`
 Low-voltage Warning Voltage Select.

`typedef struct _spm_low_volt_warning_config` `spm_low_volt_warning_config_t`
 Low-voltage Warning Configuration Structure.

`typedef enum _spm_high_volt_detect_volt_select` `spm_high_volt_detect_volt_select_t`
 High-voltage Detect Voltage Select.

`typedef struct _spm_high_volt_detect_config` `spm_high_volt_detect_config_t`
 High-voltage Detect Configuration Structure.

This structure reuses the configuration structure from legacy PMC module.

`typedef enum _spm_aux_ldo_low_power_mode` `spm_aux_ldo_low_power_mode_t`
 Defines the AUX LDO low power behavior when in low power modes.

`typedef enum _spm_aux_ldo_io_soft_start_duration` `spm_aux_ldo_io_soft_start_duration_t`
 Selects the soft start duration delay for the IO 1.8 full power regulator.

`typedef enum _spm_aux_io_regulator_volt_select` `spm_aux_io_regulator_volt_select_t`
 IO Regulator Voltage Select.

`typedef struct _spm_aux_ldo_config` `spm_aux_ldo_config_t`
 Aux LDO configuration structure.

`typedef struct _spm_dcdc_integrator_value_config` `spm_dcdc_integrator_config_t`
 Configuration for setting DCDC integrator value.

`typedef enum _spm_dcdc_vbat_adc_divider` `spm_dcdc_vbat_adc_divider_t`
 Defines the selection of DCDC vbat voltage divider for ADC measure.

`typedef enum _spm_low_power_req_out_pin_pol` `spm_low_power_req_out_pin_pol_t`
 Defines the selection of low power request pin out pin polarity.

`typedef struct _spm_low_power_req_out_pin_config` `spm_low_power_req_out_pin_config_t`
 Configuration structure of low power request out pin.

`typedef enum _spm_dcdc_drive_strength` `spm_dcdc_drive_strength_t`
 Defines the selection of DCDC driver strength.

The more FETs are enabled, the more drive strength DCDC would provide.

`typedef struct _spm_dcdc_loop_control_config` `spm_dcdc_loop_control_config_t`
 Loop control configuration.

`struct _spm_version_id`
`#include <fsl_spm.h>` IP version ID definition.

Public Members

uint16_t feature
Feature set number.

uint8_t minor
Minor version number.

uint8_t major
Major version number.

struct _spm_regulator_status
#include <fsl_spm.h> Keep the regulator status information.

Public Members

spm_mcu_low_power_mode_status_t mcuLowPowerModeStatus
Status of last MCU STOP Mode Power Configuration.

bool isDcdcLdoOn
DCDC LDO regulator enabled.

bool isAuxLdoOn
Aux LDO regulator enabled.

bool isCoreLdoOn
Core LDO regulator enabled.

struct _spm_low_volt_detect_config
#include <fsl_spm.h> Low-voltage Detect Configuration Structure.
This structure reuses the configuration structure from legacy PMC module.

Public Members

bool enableIntOnVddLowVolt
Enable interrupt when VDD Low-voltage detect.

bool enableResetOnVddLowVolt
Enable forcing an MCU reset when VDD Low-voltage detect.

spm_low_volt_detect_volt_select_t vddLowVoltDetectSelect
Low-voltage detect trip point voltage selection.

bool enableIntOnCoreLowVolt
Enable interrupt when Core Low-voltage detect.

bool enableResetOnCoreLowVolt
Enable forcing an MCU reset when Core Low-voltage detect.

struct _spm_low_volt_warning_config
#include <fsl_spm.h> Low-voltage Warning Configuration Structure.

Public Members

bool enableIntOnVddLowVolt
Enable interrupt when low-voltage warning

spm_low_volt_warning_volt_select_t vddLowVoltDetectSelect
Low-voltage warning trip point voltage selection

struct *_spm_high_volt_detect_config*

#include <fsl_spm.h> High-voltage Detect Configuration Structure.

This structure reuses the configuration structure from legacy PMC module.

Public Members

bool enableIntOnVddHighVolt

Enable interrupt when high-voltage detect

bool enableResetOnVddHighVolt

Enable system reset when high-voltage detect

spm_high_volt_detect_volt_select_t vddHighVoltDetectSelect

High-voltage detect trip point voltage selection

struct *_spm_aux_ldo_config*

#include <fsl_spm.h> Aux LDO configuration structure.

Public Members

spm_aux_ldo_low_power_mode_t lowPowerMode

AUX LDO low power behaviour when in low power modes.

spm_aux_ldo_io_soft_start_duration_t ioSoftStartDuration

Selects the soft start duration delay for the IO 1.8 full power regulator.

spm_aux_io_regulator_volt_select_t ioRegulatorVolt

IO Regulator Voltage Select.

struct *_spm_dcdc_integrator_value_config*

#include <fsl_spm.h> Configuration for setting DCDC integrator value.

Public Members

double vddCoreValue

VDD_CORE output voltage value.

double vBatValue

Battery input voltage value, or the Vdd_dcdcin voltage value.

struct *_spm_low_power_req_out_pin_config*

#include <fsl_spm.h> Configuration structure of low power request out pin.

Public Members

spm_low_power_req_out_pin_pol_t pinOutPol

ow power request pin out pin polarity.

bool pinOutEnable

Low Power request output pin is enabled or not.

struct *_spm_dcdc_loop_control_config*

#include <fsl_spm.h> Loop control configuration.

Public Members

bool enableCommonHysteresis

Enable hysteresis in switching converter differential mode analog comparators. This feature improves transient supply ripple and efficiency.

bool enableDifferentialHysteresis

Enable hysteresis in switching converter common mode analog comparators. This feature improves transient supply ripple and efficiency.

bool invertHysteresisSign

Invert the sign of the hysteresis in DC-DC analog comparators. Should be enabled when in Pulsed mode.

2.72 TPM: Timer PWM Module

uint32_t TPM_GetInstance(TPM_Type *base)

Gets the instance from the base address.

Parameters

- base – TPM peripheral base address

Returns

The TPM instance

void TPM_Init(TPM_Type *base, const *tpm_config_t* *config)

Ungates the TPM clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the TPM driver.

Parameters

- base – TPM peripheral base address
- config – Pointer to user's TPM config structure.

void TPM_Deinit(TPM_Type *base)

Stops the counter and gates the TPM clock.

Parameters

- base – TPM peripheral base address

void TPM_GetDefaultConfig(*tpm_config_t* *config)

Fill in the TPM config struct with the default settings.

The default values are:

```
config->prescale = kTPM_Prescale_Divide_1;
config->useGlobalTimeBase = false;
config->syncGlobalTimeBase = false;
config->dozeEnable = false;
config->dbgMode = false;
config->enableReloadOnTrigger = false;
config->enableStopOnOverflow = false;
config->enableStartOnTrigger = false;
#if FSL_FEATURE_TPM_HAS_PAUSE_COUNTER_ON_TRIGGER
config->enablePauseOnTrigger = false;
#endif
```

(continues on next page)

(continued from previous page)

```

config->triggerSelect = kTPM_Trigger_Select_0;
#if FSL_FEATURE_TPM_HAS_EXTERNAL_TRIGGER_SELECTION
config->triggerSource = kTPM_TriggerSource_External;
config->extTriggerPolarity = kTPM_ExtTrigger_Active_High;
#endif
#if defined(FSL_FEATURE_TPM_HAS_POL) && FSL_FEATURE_TPM_HAS_POL
config->chnlPolarity = 0U;
#endif

```

Parameters

- config – Pointer to user's TPM config structure.

tpm_clock_prescale_t TPM_CalculateCounterClkDiv(TPM_Type *base, uint32_t counterPeriod_Hz, uint32_t srcClock_Hz)

Calculates the counter clock prescaler.

This function calculates the values for SC[PS].

return Calculated clock prescaler value.

Parameters

- base – TPM peripheral base address
- counterPeriod_Hz – The desired frequency in Hz which corresponding to the time when the counter reaches the mod value
- srcClock_Hz – TPM counter clock in Hz

static inline void TPM_Reset(TPM_Type *base)

Performs a software reset on the TPM module.

Reset all internal logic and registers, except the Global Register. Remains set until cleared by software.

Note: TPM software reset is available on certain SoC's only

Parameters

- base – TPM peripheral base address

status_t TPM_SetupPwm(TPM_Type *base, const *tpm_chnl_pwm_signal_param_t* *chnlParams, uint8_t numOfChnls, *tpm_pwm_mode_t* mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Configures the PWM signal parameters.

User calls this function to configure the PWM signals period, mode, dutycycle and edge. Use this function to configure all the TPM channels that will be used to output a PWM signal

Parameters

- base – TPM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)
- numOfChnls – Number of channels to configure, this should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration *tpm_pwm_mode_t*

- `pwmFreq_Hz` – PWM signal frequency in Hz
- `srcClock_Hz` – TPM counter clock in Hz

Returns

`kStatus_Success` PWM setup successful
`kStatus_Error` PWM setup failed
`kStatus_Timeout` PWM setup timeout when write register `CnV` or `MOD`

```
status_t TPM_UpdatePwmDutyCycle(TPM_Type *base, tpm_chnl_t chnlNumber,  
                                tpm_pwm_mode_t currentPwmMode, uint8_t  
                                dutyCyclePercent)
```

Update the duty cycle of an active PWM signal.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number. In combined mode, this represents the channel pair number
- `currentPwmMode` – The current PWM mode set during PWM setup
- `dutyCyclePercent` – New PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

Returns

`kStatus_Success` if the PWM setup was successful, `kStatus_Error` on failure

```
void TPM_UpdateChnlEdgeLevelSelect(TPM_Type *base, tpm_chnl_t chnlNumber, uint8_t level)
```

Update the edge level selection for a channel.

Note: When the TPM has PWM pause level select feature (FSL_FEATURE_TPM_HAS_PAUSE_LEVEL_SELECT = 1), the PWM output cannot be turned off by selecting the output level. In this case, must use `TPM_DisableChannel` API to close the PWM output.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number
- `level` – The level to be set to the `ELSnB:ELSnA` field; valid values are 00, 01, 10, 11. See the appropriate SoC reference manual for details about this field.

```
static inline uint8_t TPM_GetChannelControlBits(TPM_Type *base, tpm_chnl_t chnlNumber)
```

Get the channel control bits value (mode, edge and level bit fields).

This function disable the channel by clear all mode and level control bits.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number

Returns

The control bits value. This is the logical OR of members of the enumeration `tpm_chnl_control_bit_mask_t`.

```
static inline status_t TPM_DisableChannel(TPM_Type *base, tpm_chnl_t chnlNumber)
```

Disable the channel.

This function disable the channel by clear all mode and level control bits.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns

kStatus_Success PWM setup successful
kStatus_Timeout PWM setup timeout
when write register CnSC

```
static inline status_t TPM_EnableChannel(TPM_Type *base, tpm_chnl_t chnlNumber, uint8_t control)
```

Enable the channel according to mode and level configs.

This function enable the channel output according to input mode/level config parameters.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- control – The control bits value. This is the logical OR of members of the enumeration *tpm_chnl_control_bit_mask_t*.

Returns

kStatus_Success PWM setup successful
kStatus_Timeout PWM setup timeout
when write register CnSC

```
void TPM_SetupInputCapture(TPM_Type *base, tpm_chnl_t chnlNumber, tpm_input_capture_edge_t captureMode)
```

Enables capturing an input signal on the channel using the function parameters.

When the edge specified in the captureMode argument occurs on the channel, the TPM counter is captured into the CnV register. The user has to read the CnV register separately to get this value.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- captureMode – Specifies which edge to capture

```
status_t TPM_SetupOutputCompare(TPM_Type *base, tpm_chnl_t chnlNumber, tpm_output_compare_mode_t compareMode, uint32_t compareValue)
```

Configures the TPM to generate timed pulses.

When the TPM counter matches the value of compareVal argument (this is written into CnV reg), the channel output is changed based on what is specified in the compareMode argument.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- compareMode – Action to take on the channel output when the compare condition is met
- compareValue – Value to be programmed in the CnV register.

Returns

kStatus_Success PWM setup successful
kStatus_Timeout PWM setup timeout
when write register CnV

```
void TPM_SetupDualEdgeCapture(TPM_Type *base, tpm_chnl_t chnlPairNumber, const
                             tpm_dual_edge_capture_param_t *edgeParam, uint32_t
                             filterValue)
```

Configures the dual edge capture mode of the TPM.

This function allows to measure a pulse width of the signal on the input of channel of a channel pair. The filter function is disabled if the filterVal argument passed is zero.

Parameters

- base – TPM peripheral base address
- chnlPairNumber – The TPM channel pair number; options are 0, 1, 2, 3
- edgeParam – Sets up the dual edge capture function
- filterValue – Filter value, specify 0 to disable filter.

```
void TPM_SetupQuadDecode(TPM_Type *base, const tpm_phase_params_t *phaseAParams,
                        const tpm_phase_params_t *phaseBParams,
                        tpm_quad_decode_mode_t quadMode)
```

Configures the parameters and activates the quadrature decode mode.

Parameters

- base – TPM peripheral base address
- phaseAParams – Phase A configuration parameters
- phaseBParams – Phase B configuration parameters
- quadMode – Selects encoding mode used in quadrature decoder mode

```
static inline void TPM_SetChannelPolarity(TPM_Type *base, tpm_chnl_t chnlNumber, bool
                                         enable)
```

Set the input and output polarity of each of the channels.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- enable – true: Set the channel polarity to active high; false: Set the channel polarity to active low;

```
static inline void TPM_EnableChannelExtTrigger(TPM_Type *base, tpm_chnl_t chnlNumber, bool
                                              enable)
```

Enable external trigger input to be used by channel.

In input capture mode, configures the trigger input that is used by the channel to capture the counter value. In output compare or PWM mode, configures the trigger input used to modulate the channel output. When modulating the output, the output is forced to the channel initial value whenever the trigger is not asserted.

Note: No matter how many external trigger sources there are, only input trigger 0 and 1 are used. The even numbered channels share the input trigger 0 and the odd numbered channels share the second input trigger 1.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

- `enable` – true: Configures trigger input 0 or 1 to be used by channel; false: Trigger input has no effect on the channel

`void TPM_EnableInterrupts(TPM_Type *base, uint32_t mask)`

Enables the selected TPM interrupts.

Parameters

- `base` – TPM peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `tpm_interrupt_enable_t`

`void TPM_DisableInterrupts(TPM_Type *base, uint32_t mask)`

Disables the selected TPM interrupts.

Parameters

- `base` – TPM peripheral base address
- `mask` – The interrupts to disable. This is a logical OR of members of the enumeration `tpm_interrupt_enable_t`

`uint32_t TPM_GetEnabledInterrupts(TPM_Type *base)`

Gets the enabled TPM interrupts.

Parameters

- `base` – TPM peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `tpm_interrupt_enable_t`

`void TPM_RegisterCallBack(TPM_Type *base, tpm_callback_t callback)`

Register callback.

If channel or overflow interrupt is enabled by the user, then a callback can be registered which will be invoked when the interrupt is triggered.

Parameters

- `base` – TPM peripheral base address
- `callback` – Callback function

`void TPM_DriverIRQHandler(uint32_t instance)`

TPM driver IRQ handler common entry.

This function provides the common IRQ request entry for TPM.

Parameters

- `instance` – TPM instance.

`static inline uint32_t TPM_GetChannelValue(TPM_Type *base, tpm_chnl_t chnlNumber)`

Gets the TPM channel value.

Note: The TPM channel value contain the captured TPM counter value for the input modes or the match value for the output modes.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number

Returns

The channel CnV register value.

```
static inline uint32_t TPM_GetStatusFlags(TPM_Type *base)
```

Gets the TPM status flags.

Parameters

- `base` – TPM peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `tpm_status_flags_t`

```
static inline void TPM_ClearStatusFlags(TPM_Type *base, uint32_t mask)
```

Clears the TPM status flags.

Parameters

- `base` – TPM peripheral base address
- `mask` – The status flags to clear. This is a logical OR of members of the enumeration `tpm_status_flags_t`

```
static inline status_t TPM_SetTimerPeriod(TPM_Type *base, uint32_t ticks)
```

Sets the timer period in units of ticks.

Timers counts from 0 until it equals the count value set here. The count value is written to the MOD register.

Note:

- This API allows the user to use the TPM module as a timer. Do not mix usage of this API with TPM's PWM setup API's.
 - Call the utility macros provided in the `fsl_common.h` to convert usec or msec to ticks.
-

Parameters

- `base` – TPM peripheral base address
- `ticks` – A timer period in units of ticks, which should be equal or greater than 1.

Returns

`kStatus_Success` PWM setup successful
`kStatus_Timeout` PWM setup timeout when write register CnSC

```
static inline uint32_t TPM_GetCurrentTimerCount(TPM_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- `base` – TPM peripheral base address

Returns

The current counter value in ticks

```
static inline void TPM_StartTimer(TPM_Type *base, tpm_clock_source_t clockSource)
```

Starts the TPM counter.

Parameters

- base – TPM peripheral base address
- clockSource – TPM clock source; once clock source is set the counter will start running

```
static inline status_t TPM_StopTimer(TPM_Type *base)
```

Stops the TPM counter.

Parameters

- base – TPM peripheral base address

Returns

kStatus_Success PWM setup successful
kStatus_Timeout PWM setup timeout
when write register CnSC

```
FSL_TPM_DRIVER_VERSION
```

TPM driver version 2.4.0.

```
enum _tpm_chnl
```

List of TPM channels.

Note: Actual number of available channels is SoC dependent

Values:

```
enumerator kTPM_Chnl_0  
    TPM channel number 0
```

```
enumerator kTPM_Chnl_1  
    TPM channel number 1
```

```
enumerator kTPM_Chnl_2  
    TPM channel number 2
```

```
enumerator kTPM_Chnl_3  
    TPM channel number 3
```

```
enumerator kTPM_Chnl_4  
    TPM channel number 4
```

```
enumerator kTPM_Chnl_5  
    TPM channel number 5
```

```
enumerator kTPM_Chnl_6  
    TPM channel number 6
```

```
enumerator kTPM_Chnl_7  
    TPM channel number 7
```

```
enum _tpm_pwm_mode
```

TPM PWM operation modes.

Values:

```
enumerator kTPM_EdgeAlignedPwm  
    Edge aligned PWM
```

enumerator kTPM_CenterAlignedPwm
Center aligned PWM

enumerator kTPM_CombinedPwm
Combined PWM (Edge-aligned, center-aligned, or asymmetrical PWMs can be obtained in combined mode using different software configurations)

enum _tpm_pwm_level_select
TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

Values:

enumerator kTPM_HighTrue
High true pulses

enumerator kTPM_LowTrue
Low true pulses

enum _tpm_pwm_pause_level_select
TPM PWM output when first enabled or paused: set or clear.

Values:

enumerator kTPM_ClearOnPause
Clear Output when counter first enabled or paused.

enumerator kTPM_SetOnPause
Set Output when counter first enabled or paused.

enum _tpm_chnl_control_bit_mask
List of TPM channel modes and level control bit mask.

Values:

enumerator kTPM_ChnlELSnAMask
Channel ELSA bit mask.

enumerator kTPM_ChnlELSnBMask
Channel EL SB bit mask.

enumerator kTPM_ChnlMSAMask
Channel MSA bit mask.

enumerator kTPM_ChnlMSBMask
Channel MSB bit mask.

enum _tpm_trigger_select
Trigger sources available.
This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

Values:

enumerator kTPM_Trigger_Select_0
enumerator kTPM_Trigger_Select_1
enumerator kTPM_Trigger_Select_2
enumerator kTPM_Trigger_Select_3
enumerator kTPM_Trigger_Select_4
enumerator kTPM_Trigger_Select_5
enumerator kTPM_Trigger_Select_6
enumerator kTPM_Trigger_Select_7
enumerator kTPM_Trigger_Select_8
enumerator kTPM_Trigger_Select_9
enumerator kTPM_Trigger_Select_10
enumerator kTPM_Trigger_Select_11
enumerator kTPM_Trigger_Select_12
enumerator kTPM_Trigger_Select_13
enumerator kTPM_Trigger_Select_14
enumerator kTPM_Trigger_Select_15

enum _tpm_trigger_source

Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal trigger.

Values:

enumerator kTPM_TriggerSource_External

Use external trigger input

enumerator kTPM_TriggerSource_Internal

Use internal trigger (channel pin input capture)

enum _tpm_ext_trigger_polarity

External trigger source polarity.

Note: Selects the polarity of the external trigger source.

Values:

enumerator kTPM_ExtTrigger_Active_High

External trigger input is active high

enumerator kTPM_ExtTrigger_Active_Low

External trigger input is active low

enum `_tpm_output_compare_mode`

TPM output compare modes.

Values:

enumerator `kTPM_NoOutputSignal`

No channel output when counter reaches CnV

enumerator `kTPM_ToggleOnMatch`

Toggle output

enumerator `kTPM_ClearOnMatch`

Clear output

enumerator `kTPM_SetOnMatch`

Set output

enumerator `kTPM_HighPulseOutput`

Pulse output high

enumerator `kTPM_LowPulseOutput`

Pulse output low

enum `_tpm_input_capture_edge`

TPM input capture edge.

Values:

enumerator `kTPM_RisingEdge`

Capture on rising edge only

enumerator `kTPM_FallingEdge`

Capture on falling edge only

enumerator `kTPM_RiseAndFallEdge`

Capture on rising or falling edge

enum `_tpm_quad_decode_mode`

TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

Values:

enumerator `kTPM_QuadPhaseEncode`

Phase A and Phase B encoding mode

enumerator `kTPM_QuadCountAndDir`

Count and direction encoding mode

enum `_tpm_phase_polarity`

TPM quadrature phase polarities.

Values:

enumerator `kTPM_QuadPhaseNormal`

Phase input signal is not inverted

enumerator `kTPM_QuadPhaseInvert`

Phase input signal is inverted

enum `_tpm_clock_source`

TPM clock source selection.

Values:

enumerator `kTPM_SystemClock`
System clock

enumerator `kTPM_ExternalClock`
External TPM_EXTCLK pin clock

enumerator `kTPM_ExternalInputTriggerClock`
Selected external input trigger clock

enum `_tpm_clock_prescale`

TPM prescale value selection for the clock source.

Values:

enumerator `kTPM_Prescale_Divide_1`
Divide by 1

enumerator `kTPM_Prescale_Divide_2`
Divide by 2

enumerator `kTPM_Prescale_Divide_4`
Divide by 4

enumerator `kTPM_Prescale_Divide_8`
Divide by 8

enumerator `kTPM_Prescale_Divide_16`
Divide by 16

enumerator `kTPM_Prescale_Divide_32`
Divide by 32

enumerator `kTPM_Prescale_Divide_64`
Divide by 64

enumerator `kTPM_Prescale_Divide_128`
Divide by 128

enum `_tpm_interrupt_enable`

List of TPM interrupts.

Values:

enumerator `kTPM_Chnl0InterruptEnable`
Channel 0 interrupt.

enumerator `kTPM_Chnl1InterruptEnable`
Channel 1 interrupt.

enumerator `kTPM_Chnl2InterruptEnable`
Channel 2 interrupt.

enumerator `kTPM_Chnl3InterruptEnable`
Channel 3 interrupt.

enumerator `kTPM_Chnl4InterruptEnable`
Channel 4 interrupt.

enumerator kTPM_Chnl5InterruptEnable
Channel 5 interrupt.

enumerator kTPM_Chnl6InterruptEnable
Channel 6 interrupt.

enumerator kTPM_Chnl7InterruptEnable
Channel 7 interrupt.

enumerator kTPM_TimeOverflowInterruptEnable
Time overflow interrupt.

enum _tpm_status_flags
List of TPM flags.

Values:

enumerator kTPM_Chnl0Flag
Channel 0 flag

enumerator kTPM_Chnl1Flag
Channel 1 flag

enumerator kTPM_Chnl2Flag
Channel 2 flag

enumerator kTPM_Chnl3Flag
Channel 3 flag

enumerator kTPM_Chnl4Flag
Channel 4 flag

enumerator kTPM_Chnl5Flag
Channel 5 flag

enumerator kTPM_Chnl6Flag
Channel 6 flag

enumerator kTPM_Chnl7Flag
Channel 7 flag

enumerator kTPM_TimeOverflowFlag
Time overflow flag

typedef enum _tpm_chnl tpm_chnl_t
List of TPM channels.

Note: Actual number of available channels is SoC dependent

typedef enum _tpm_pwm_mode tpm_pwm_mode_t
TPM PWM operation modes.

typedef enum _tpm_pwm_level_select tpm_pwm_level_select_t
TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

typedef enum *_tpm_pwm_pause_level_select* tpm_pwm_pause_level_select_t
TPM PWM output when first enabled or paused: set or clear.

typedef enum *_tpm_chnl_control_bit_mask* tpm_chnl_control_bit_mask_t
List of TPM channel modes and level control bit mask.

typedef struct *_tpm_chnl_pwm_signal_param* tpm_chnl_pwm_signal_param_t
Options to configure a TPM channel's PWM signal.

typedef enum *_tpm_trigger_select* tpm_trigger_select_t
Trigger sources available.
This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

typedef enum *_tpm_trigger_source* tpm_trigger_source_t
Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal trigger.

typedef enum *_tpm_ext_trigger_polarity* tpm_ext_trigger_polarity_t
External trigger source polarity.

Note: Selects the polarity of the external trigger source.

typedef enum *_tpm_output_compare_mode* tpm_output_compare_mode_t
TPM output compare modes.

typedef enum *_tpm_input_capture_edge* tpm_input_capture_edge_t
TPM input capture edge.

typedef struct *_tpm_dual_edge_capture_param* tpm_dual_edge_capture_param_t
TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_quad_decode_mode* tpm_quad_decode_mode_t
TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_phase_polarity* tpm_phase_polarity_t
TPM quadrature phase polarities.

typedef struct *_tpm_phase_param* tpm_phase_params_t
TPM quadrature decode phase parameters.

typedef enum *_tpm_clock_source* tpm_clock_source_t
TPM clock source selection.

typedef enum *_tpm_clock_prescale* tpm_clock_prescale_t

TPM prescale value selection for the clock source.

typedef struct *_tpm_config* tpm_config_t

TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the TPM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

typedef enum *_tpm_interrupt_enable* tpm_interrupt_enable_t

List of TPM interrupts.

typedef enum *_tpm_status_flags* tpm_status_flags_t

List of TPM flags.

typedef void (*tpm_callback_t)(TPM_Type *base)

TPM callback function pointer.

Param base

TPM peripheral base address.

TPM_TIMEOUT

Max loops to wait for writing register.

When writing MOD CnV CnSC and SC register, driver will wait until register is updated. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

TPM_MAX_COUNTER_VALUE(x)

Help macro to get the max counter value.

struct *_tpm_chnl_pwm_signal_param*

#include <fsl_tpm.h> Options to configure a TPM channel's PWM signal.

Public Members

tpm_chnl_t chnlNumber

TPM channel to configure. In combined mode (available in some SoC's), this represents the channel pair number

tpm_pwm_pause_level_select_t pauseLevel

PWM output level when counter first enabled or paused

tpm_pwm_level_select_t level

PWM output active level select

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=always active signal (100% duty cycle)

uint8_t firstEdgeDelayPercent

Used only in combined PWM mode to generate asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure, leave as 0. Should be specified as percentage of the PWM period, (dutyCyclePercent + firstEdgeDelayPercent) value should be not greater than 100.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

tpm_pwm_pause_level_select_t secPauseLevel

Used only in combined PWM mode. Define the second channel output level when counter first enabled or paused

uint8_t deadTimeValue[2]

The dead time value for channel n and n+1 in combined complementary PWM mode. Deadtime insertion is disabled when this value is zero, otherwise deadtime insertion for channel n/n+1 is configured as (deadTimeValue * 4) clock cycles. deadTimeValue's available range is 0 ~ 15.

struct *_tpm_dual_edge_capture_param*

#include <fsl_tpm.h> TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

Public Members

bool enableSwap

true: Use channel n+1 input, channel n input is ignored; false: Use channel n input, channel n+1 input is ignored

tpm_input_capture_edge_t currChanEdgeMode

Input capture edge select for channel n

tpm_input_capture_edge_t nextChanEdgeMode

Input capture edge select for channel n+1

struct *_tpm_phase_param*

#include <fsl_tpm.h> TPM quadrature decode phase parameters.

Public Members

uint32_t phaseFilterVal

Filter value, filter is disabled when the value is zero

tpm_phase_polarity_t phasePolarity

Phase polarity

struct *_tpm_config*

#include <fsl_tpm.h> TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the `TPM_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

tpm_clock_prescale_t prescale

Select TPM clock prescale value

bool useGlobalTimeBase

true: The TPM channels use an external global time base (the local counter still use for generate overflow interrupt and DMA request); false: All TPM channels use the local counter as their timebase

`bool syncGlobalTimeBase`

true: The TPM counter is synchronized to the global time base; false: disabled

`tpm_trigger_select_t triggerSelect`

Input trigger to use for controlling the counter operation

`tpm_trigger_source_t triggerSource`

Decides if we use external or internal trigger.

`tpm_ext_trigger_polarity_t extTriggerPolarity`

when using external trigger source, need selects the polarity of it.

`bool enableDoze`

true: TPM counter is paused in doze mode; false: TPM counter continues in doze mode

`bool enableDebugMode`

true: TPM counter continues in debug mode; false: TPM counter is paused in debug mode

`bool enableReloadOnTrigger`

true: TPM counter is reloaded on trigger; false: TPM counter not reloaded

`bool enableStopOnOverflow`

true: TPM counter stops after overflow; false: TPM counter continues running after overflow

`bool enableStartOnTrigger`

true: TPM counter only starts when a trigger is detected; false: TPM counter starts immediately

`bool enablePauseOnTrigger`

true: TPM counter will pause while trigger remains asserted; false: TPM counter continues running

`uint8_t chnlPolarity`

Defines the input/output polarity of the channels in POL register

2.73 TRGMUX: Trigger Mux Driver

`static inline void TRGMUX_LockRegister(TRGMUX_Type *base, uint32_t index)`

Sets the flag of the register which is used to mark writeable.

The function sets the flag of the register which is used to mark writeable. Example:

```
TRGMUX_LockRegister(TRGMUX0,kTRGMUX_Trgmux0Dmamux0);
```

Parameters

- `base` – TRGMUX peripheral base address.
- `index` – The index of the TRGMUX register, see the enum `trgmux_device_t` defined in `<SOC>.h`.

`status_t TRGMUX_SetTriggerSource(TRGMUX_Type *base, uint32_t index, trgmux_trigger_input_t input, uint32_t trigger_src)`

Configures the trigger source of the appointed peripheral.

The function configures the trigger source of the appointed peripheral. Example:

```
TRGMUX_SetTriggerSource(TRGMUX0, kTRGMUX_Trgmux0Dmamux0, kTRGMUX_TriggerInput0,
↪ kTRGMUX_SourcePortPin);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum `trgmux_device_t` defined in `<SOC>.h`.
- input – The MUX select for peripheral trigger input
- trigger_src – The trigger inputs for various peripherals. See the enum `trgmux_source_t` defined in `<SOC>.h`.

Return values

- `kStatus_Success` – Configured successfully.
- `kStatus_TRGMUX_Locked` – Configuration failed because the register is locked.

`FSL_TRGMUX_DRIVER_VERSION`

TRGMUX driver version.

TRGMUX configure status.

Values:

enumerator `kStatus_TRGMUX_Locked`
Configure failed for register is locked

enum `_trgmux_trigger_input`

Defines the MUX select for peripheral trigger input.

Values:

enumerator `kTRGMUX_TriggerInput0`
The MUX select for peripheral trigger input 0

enumerator `kTRGMUX_TriggerInput1`
The MUX select for peripheral trigger input 1

enumerator `kTRGMUX_TriggerInput2`
The MUX select for peripheral trigger input 2

enumerator `kTRGMUX_TriggerInput3`
The MUX select for peripheral trigger input 3

typedef enum `_trgmux_trigger_input` `trgmux_trigger_input_t`

Defines the MUX select for peripheral trigger input.

2.74 TRNG: True Random Number Generator

`FSL_TRNG_DRIVER_VERSION`

TRNG driver version 2.0.19.

Current version: 2.0.19

Change log:

- version 2.0.19

- Added support for MCXA and MCXL.
- version 2.0.18
 - TRNG health checks now done in software on RT5xx and RT6xx.
- version 2.0.17
 - Added support for RT700.
- version 2.0.16
 - Added support for Dual oscillator mode.
- version 2.0.15
 - Changed TRNG_USER_CONFIG_DEFAULT_XXX values according to latest recommended by design team.
- version 2.0.14
 - add support for RW610 and RW612
- version 2.0.13
 - After deepsleep it might return error, added clearing bits in TRNG_GetRandomData() and generating new entropy.
 - Modified reloading entropy in TRNG_GetRandomData(), for some data length it doesn't reloading entropy correctly.
- version 2.0.12
 - For KW34A4_SERIES, KW35A4_SERIES, KW36A4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.
- version 2.0.11
 - Add clearing pending errors in TRNG_Init().
- version 2.0.10
 - Fixed doxygen issues.
- version 2.0.9
 - Fix HIS_CCM metrics issues.
- version 2.0.8
 - For K32L2A41A_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv4.
- version 2.0.7
 - Fix MISRA 2004 issue rule 12.5.
- version 2.0.6
 - For KW35Z4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.
- version 2.0.5
 - Add possibility to define default TRNG configuration by device specific preprocessor macros for FRQMIN, FRQMAX and OSCDIV.
- version 2.0.4
 - Fix MISRA-2012 issues.
- Version 2.0.3
 - update TRNG_Init to restart entropy generation

- Version 2.0.2
 - fix MISRA issues
- Version 2.0.1
 - add support for KL8x and KL28Z
 - update default OSCDIV for K81 to divide by 2

enum `_trng_sample_mode`

TRNG sample mode. Used by `trng_config_t`.

Values:

enumerator `kTRNG_SampleModeVonNeumann`

Use von Neumann data in both Entropy shifter and Statistical Checker.

enumerator `kTRNG_SampleModeRaw`

Use raw data into both Entropy shifter and Statistical Checker.

enumerator `kTRNG_SampleModeVonNeumannRaw`

Use von Neumann data in Entropy shifter. Use raw data into Statistical Checker.

enum `_trng_clock_mode`

TRNG clock mode. Used by `trng_config_t`.

Values:

enumerator `kTRNG_ClockModeRingOscillator`

Ring oscillator is used to operate the TRNG (default).

enumerator `kTRNG_ClockModeSystem`

System clock is used to operate the TRNG. This is for test use only, and indeterminate results may occur.

enum `_trng_ring_osc_div`

TRNG ring oscillator divide. Used by `trng_config_t`.

Values:

enumerator `kTRNG_RingOscDiv0`

Ring oscillator with no divide

enumerator `kTRNG_RingOscDiv2`

Ring oscillator divided-by-2.

enumerator `kTRNG_RingOscDiv4`

Ring oscillator divided-by-4.

enumerator `kTRNG_RingOscDiv8`

Ring oscillator divided-by-8.

typedef enum `_trng_sample_mode` `trng_sample_mode_t`

TRNG sample mode. Used by `trng_config_t`.

typedef enum `_trng_clock_mode` `trng_clock_mode_t`

TRNG clock mode. Used by `trng_config_t`.

typedef enum `_trng_ring_osc_div` `trng_ring_osc_div_t`

TRNG ring oscillator divide. Used by `trng_config_t`.

typedef struct `_trng_statistical_check_limit` `trng_statistical_check_limit_t`

Data structure for definition of statistical check limits. Used by `trng_config_t`.

```
typedef struct trng_user_config trng_config_t
```

Data structure for the TRNG initialization.

This structure initializes the TRNG by calling the TRNG_Init() function. It contains all TRNG configurations.

```
status_t TRNG_GetDefaultConfig(trng_config_t *userConfig)
```

Initializes the user configuration structure to default values.

This function initializes the configuration structure to default values. The default values are platform dependent.

Parameters

- userConfig – User configuration structure.

Returns

If successful, returns the kStatus_TRNG_Success. Otherwise, it returns an error.

```
status_t TRNG_Init(TRNG_Type *base, const trng_config_t *userConfig)
```

Initializes the TRNG.

This function initializes the TRNG. When called, the TRNG entropy generation starts immediately.

Parameters

- base – TRNG base address
- userConfig – Pointer to the initialization configuration structure.

Returns

If successful, returns the kStatus_TRNG_Success. Otherwise, it returns an error.

```
void TRNG_Deinit(TRNG_Type *base)
```

Shuts down the TRNG.

This function shuts down the TRNG.

Parameters

- base – TRNG base address.

```
status_t TRNG_GetRandomData(TRNG_Type *base, void *data, size_t dataSize)
```

Gets random data.

This function gets random data from the TRNG.

Parameters

- base – TRNG base address.
- data – Pointer address used to store random data.
- dataSize – Size of the buffer pointed by the data parameter.

Returns

random data

```
struct trng_statistical_check_limit
```

#include <fsl_trng.h> Data structure for definition of statistical check limits. Used by trng_config_t.

Public Members

uint32_t maximum
Maximum limit.

int32_t minimum
Minimum limit.

struct _trng_user_config

#include <fsl_trng.h> Data structure for the TRNG initialization.

This structure initializes the TRNG by calling the TRNG_Init() function. It contains all TRNG configurations.

Public Members

bool lock
Disable programmability of TRNG registers.

trng_clock_mode_t clockMode
Clock mode used to operate TRNG.

trng_ring_osc_div_t ringOscDiv
Ring oscillator divide used by TRNG.

trng_sample_mode_t sampleMode
Sample mode of the TRNG ring oscillator.

uint16_t entropyDelay
Entropy Delay. Defines the length (in system clocks) of each Entropy sample taken.

uint16_t sampleSize
Sample Size. Defines the total number of Entropy samples that will be taken during Entropy generation.

uint16_t sparseBitLimit
Sparse Bit Limit which defines the maximum number of consecutive samples that may be discarded before an error is generated. This limit is used only for during von Neumann sampling (enabled by TRNG_HAL_SetSampleMode()). Samples are discarded if two consecutive raw samples are both 0 or both 1. If this discarding occurs for a long period of time, it indicates that there is insufficient Entropy.

uint8_t retryCount
Retry count. It defines the number of times a statistical check may fails during the TRNG Entropy Generation before generating an error.

uint8_t longRunMaxLimit
Largest allowable number of consecutive samples of all 1, or all 0, that is allowed during the Entropy generation.

trng_statistical_check_limit_t monobitLimit
Maximum and minimum limits for statistical check of number of ones/zero detected during entropy generation.

trng_statistical_check_limit_t runBit1Limit
Maximum and minimum limits for statistical check of number of runs of length 1 detected during entropy generation.

trng_statistical_check_limit_t runBit2Limit
Maximum and minimum limits for statistical check of number of runs of length 2 detected during entropy generation.

trng_statistical_check_limit_t runBit3Limit

Maximum and minimum limits for statistical check of number of runs of length 3 detected during entropy generation.

trng_statistical_check_limit_t runBit4Limit

Maximum and minimum limits for statistical check of number of runs of length 4 detected during entropy generation.

trng_statistical_check_limit_t runBit5Limit

Maximum and minimum limits for statistical check of number of runs of length 5 detected during entropy generation.

trng_statistical_check_limit_t runBit6PlusLimit

Maximum and minimum limits for statistical check of number of runs of length 6 or more detected during entropy generation.

trng_statistical_check_limit_t pokerLimit

Maximum and minimum limits for statistical check of “Poker Test”.

trng_statistical_check_limit_t frequencyCountLimit

Maximum and minimum limits for statistical check of entropy sample frequency count.

2.75 TSTMR: Timestamp Timer Driver

void TSTMR_Init(TSTMR_Type *base)

Init TSTMR.

This function initializes the TSTMR module.

Parameters

- base – TSTMR peripheral base address.

void TSTMR_Deinit(TSTMR_Type *base)

Deinit TSTMR.

This function deinitializes the TSTMR module.

Parameters

- base – TSTMR peripheral base address.

FSL_TSTMR_DRIVER_VERSION

Version 2.1.0

static inline uint64_t TSTMR_ReadTimeStamp(TSTMR_Type *base)

Reads the time stamp.

This function reads the low and high registers and returns the 56-bit free running counter value. This can be read by software at any time to determine the software ticks. TSTMR registers can be read with 32-bit accesses only. The TSTMR LOW read should occur first, followed by the TSTMR HIGH read.

Parameters

- base – TSTMR peripheral base address.

Returns

The 56-bit time stamp value.

`void TSTMR_DelayUs(TSTMR_Type *base, uint64_t delayInUs)`

Delays for a specified number of microseconds.

This function repeatedly reads the timestamp register and waits for the user-specified delay value.

Parameters

- `base` – TSTMR peripheral base address.
- `delayInUs` – Delay value in microseconds.

2.76 USDHC: Ultra Secured Digital Host Controller Driver

`void USDHC_Init(USDHC_Type *base, const usdhc_config_t *config)`

USDHC module initialization function.

Configures the USDHC according to the user configuration.

Example:

```
usdhc_config_t config;
config.cardDetectDat3 = false;
config.endianMode = kUSDHC_EndianModeLittle;
config.dmaMode = kUSDHC_DmaModeAdma2;
config.readWatermarkLevel = 128U;
config.writeWatermarkLevel = 128U;
USDHC_Init(USDHC, &config);
```

Parameters

- `base` – USDHC peripheral base address.
- `config` – USDHC configuration information.

Return values

`kStatus_Success` – Operate successfully.

`void USDHC_Deinit(USDHC_Type *base)`

Deinitializes the USDHC.

Parameters

- `base` – USDHC peripheral base address.

`bool USDHC_Reset(USDHC_Type *base, uint32_t mask, uint32_t timeout)`

Resets the USDHC.

Parameters

- `base` – USDHC peripheral base address.
- `mask` – The reset type mask(`_usdhc_reset`).
- `timeout` – Timeout for reset.

Return values

- `true` – Reset successfully.
- `false` – Reset failed.

`status_t USDHC_SetAdmaTableConfig(USDHC_Type *base, usdhc_adma_config_t *dmaConfig, usdhc_data_t *dataConfig, uint32_t flags)`

Sets the DMA descriptor table configuration. A high level DMA descriptor configuration function.

Parameters

- base – USDHC peripheral base address.
- dmaConfig – ADMA configuration
- dataConfig – Data descriptor
- flags – ADAM descriptor flag, used to indicate to create multiple or single descriptor, please refer to enum `_usdhc_adma_flag`.

Return values

- `kStatus_OutOfRange` – ADMA descriptor table length isn't enough to describe data.
- `kStatus_Success` – Operate successfully.

`status_t` USDHC_SetInternalDmaConfig(USDHC_Type *base, *usdhc_adma_config_t* *dmaConfig, const uint32_t *dataAddr, bool enAutoCmd23)

Internal DMA configuration. This function is used to config the USDHC DMA related registers.

Parameters

- base – USDHC peripheral base address.
- dmaConfig – ADMA configuration.
- dataAddr – Transfer data address, a simple DMA parameter, if ADMA is used, leave it to NULL.
- enAutoCmd23 – Flag to indicate Auto CMD23 is enable or not, a simple DMA parameter, if ADMA is used, leave it to false.

Return values

- `kStatus_OutOfRange` – ADMA descriptor table length isn't enough to describe data.
- `kStatus_Success` – Operate successfully.

`status_t` USDHC_SetADMA2Descriptor(uint32_t *admaTable, uint32_t admaTableWords, const uint32_t *dataBufferAddr, uint32_t dataBytes, uint32_t flags)

Sets the ADMA2 descriptor table configuration.

Parameters

- admaTable – ADMA table address.
- admaTableWords – ADMA table length.
- dataBufferAddr – Data buffer address.
- dataBytes – Data Data length.
- flags – ADAM descriptor flag, used to indicate to create multiple or single descriptor, please refer to enum `_usdhc_adma_flag`.

Return values

- `kStatus_OutOfRange` – ADMA descriptor table length isn't enough to describe data.
- `kStatus_Success` – Operate successfully.

`status_t` USDHC_SetADMA1Descriptor(uint32_t *admaTable, uint32_t admaTableWords, const uint32_t *dataBufferAddr, uint32_t dataBytes, uint32_t flags)

Sets the ADMA1 descriptor table configuration.

Parameters

- `admaTable` – ADMA table address.
- `admaTableWords` – ADMA table length.
- `dataBufferAddr` – Data buffer address.
- `dataBytes` – Data length.
- `flags` – ADAM descriptor flag, used to indicate to create multiple or single descriptor, please refer to enum `_usdhc_adma_flag`.

Return values

- `kStatus_OutOfRange` – ADMA descriptor table length isn't enough to describe data.
- `kStatus_Success` – Operate successfully.

```
static inline void USDHC_EnableInternalDMA(USDHC_Type *base, bool enable)
```

Enables internal DMA.

Parameters

- `base` – USDHC peripheral base address.
- `enable` – enable or disable flag

```
static inline void USDHC_EnableInterruptStatus(USDHC_Type *base, uint32_t mask)
```

Enables the interrupt status.

Parameters

- `base` – USDHC peripheral base address.
- `mask` – Interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline void USDHC_DisableInterruptStatus(USDHC_Type *base, uint32_t mask)
```

Disables the interrupt status.

Parameters

- `base` – USDHC peripheral base address.
- `mask` – The interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline void USDHC_EnableInterruptSignal(USDHC_Type *base, uint32_t mask)
```

Enables the interrupt signal corresponding to the interrupt status flag.

Parameters

- `base` – USDHC peripheral base address.
- `mask` – The interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline void USDHC_DisableInterruptSignal(USDHC_Type *base, uint32_t mask)
```

Disables the interrupt signal corresponding to the interrupt status flag.

Parameters

- `base` – USDHC peripheral base address.
- `mask` – The interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline uint32_t USDHC_GetEnabledInterruptStatusFlags(USDHC_Type *base)
```

Gets the enabled interrupt status.

Parameters

- `base` – USDHC peripheral base address.

Returns

Current interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline uint32_t USDHC_GetInterruptStatusFlags(USDHC_Type *base)
```

Gets the current interrupt status.

Parameters

- `base` – USDHC peripheral base address.

Returns

Current interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline void USDHC_ClearInterruptStatusFlags(USDHC_Type *base, uint32_t mask)
```

Clears a specified interrupt status. write 1 clears.

Parameters

- `base` – USDHC peripheral base address.
- `mask` – The interrupt status flags mask(`_usdhc_interrupt_status_flag`).

```
static inline uint32_t USDHC_GetAutoCommand12ErrorStatusFlags(USDHC_Type *base)
```

Gets the status of auto command 12 error.

Parameters

- `base` – USDHC peripheral base address.

Returns

Auto command 12 error status flags mask(`_usdhc_auto_command12_error_status_flag`).

```
static inline uint32_t USDHC_GetAdmaErrorStatusFlags(USDHC_Type *base)
```

Gets the status of the ADMA error.

Parameters

- `base` – USDHC peripheral base address.

Returns

ADMA error status flags mask(`_usdhc_adma_error_status_flag`).

```
static inline uint32_t USDHC_GetPresentStatusFlags(USDHC_Type *base)
```

Gets a present status.

This function gets the present USDHC's status except for an interrupt status and an error status.

Parameters

- `base` – USDHC peripheral base address.

Returns

Present USDHC's status flags mask(`_usdhc_present_status_flag`).

```
void USDHC_GetCapability(USDHC_Type *base, usdhc_capability_t *capability)
```

Gets the capability information.

Parameters

- `base` – USDHC peripheral base address.
- `capability` – Structure to save capability information.

```
static inline void USDHC_ForceClockOn(USDHC_Type *base, bool enable)
```

Forces the card clock on.

Parameters

- `base` – USDHC peripheral base address.

- `enable` – enable/disable flag

`uint32_t USDHC_SetSdClock(USDHC_Type *base, uint32_t srcClock_Hz, uint32_t busClock_Hz)`

Sets the SD bus clock frequency.

Parameters

- `base` – USDHC peripheral base address.
- `srcClock_Hz` – USDHC source clock frequency united in Hz.
- `busClock_Hz` – SD bus clock frequency united in Hz.

Returns

The nearest frequency of `busClock_Hz` configured for SD bus.

`bool USDHC_SetCardActive(USDHC_Type *base, uint32_t timeout)`

Sends 80 clocks to the card to set it to the active state.

This function must be called each time the card is inserted to ensure that the card can receive the command correctly.

Parameters

- `base` – USDHC peripheral base address.
- `timeout` – Timeout to initialize card.

Return values

- `true` – Set card active successfully.
- `false` – Set card active failed.

`static inline void USDHC_AssertHardwareReset(USDHC_Type *base, bool high)`

Triggers a hardware reset.

Parameters

- `base` – USDHC peripheral base address.
- `high` – 1 or 0 level

`static inline void USDHC_SetDataBusWidth(USDHC_Type *base, usdhc_data_bus_width_t width)`

Sets the data transfer width.

Parameters

- `base` – USDHC peripheral base address.
- `width` – Data transfer width.

`static inline void USDHC_WriteData(USDHC_Type *base, uint32_t data)`

Fills the data port.

This function is used to implement the data transfer by Data Port instead of DMA.

Parameters

- `base` – USDHC peripheral base address.
- `data` – The data about to be sent.

`static inline uint32_t USDHC_ReadData(USDHC_Type *base)`

Retrieves the data from the data port.

This function is used to implement the data transfer by Data Port instead of DMA.

Parameters

- `base` – USDHC peripheral base address.

Returns

The data has been read.

```
void USDHC_SendCommand(USDHC_Type *base, usdhc_command_t *command)
```

Sends command function.

Parameters

- base – USDHC peripheral base address.
- command – configuration

```
static inline void USDHC_EnableWakeupEvent(USDHC_Type *base, uint32_t mask, bool enable)
```

Enables or disables a wakeup event in low-power mode.

Parameters

- base – USDHC peripheral base address.
- mask – Wakeup events mask(_usdhc_wakeup_event).
- enable – True to enable, false to disable.

```
static inline void USDHC_CardDetectByData3(USDHC_Type *base, bool enable)
```

Detects card insert status.

Parameters

- base – USDHC peripheral base address.
- enable – enable/disable flag

```
static inline bool USDHC_DetectCardInsert(USDHC_Type *base)
```

Detects card insert status.

Parameters

- base – USDHC peripheral base address.

```
static inline void USDHC_EnableSdioControl(USDHC_Type *base, uint32_t mask, bool enable)
```

Enables or disables the SDIO card control.

Parameters

- base – USDHC peripheral base address.
- mask – SDIO card control flags mask(_usdhc_sdio_control_flag).
- enable – True to enable, false to disable.

```
static inline void USDHC_SetContinueRequest(USDHC_Type *base)
```

Restarts a transaction which has stopped at the block GAP for the SDIO card.

Parameters

- base – USDHC peripheral base address.

```
static inline void USDHC_RequestStopAtBlockGap(USDHC_Type *base, bool enable)
```

Request stop at block gap function.

Parameters

- base – USDHC peripheral base address.
- enable – True to stop at block gap, false to normal transfer.

```
void USDHC_SetMmcBootConfig(USDHC_Type *base, const usdhc_boot_config_t *config)
```

Configures the MMC boot feature.

Example:

```

usdhc_boot_config_t config;
config.ackTimeoutCount = 4;
config.bootMode = kUSDHC_BootModeNormal;
config.blockCount = 5;
config.enableBootAck = true;
config.enableBoot = true;
config.enableAutoStopAtBlockGap = true;
USDHC_SetMmcBootConfig(USDHC, &config);

```

Parameters

- base – USDHC peripheral base address.
- config – The MMC boot configuration information.

```
static inline void USDHC_EnableMmcBoot(USDHC_Type *base, bool enable)
```

Enables or disables the mmc boot mode.

Parameters

- base – USDHC peripheral base address.
- enable – True to enable, false to disable.

```
static inline void USDHC_SetForceEvent(USDHC_Type *base, uint32_t mask)
```

Forces generating events according to the given mask.

Parameters

- base – USDHC peripheral base address.
- mask – The force events bit position (`_usdhc_force_event`).

```
static inline bool USDHC_RequestTuningForSDR50(USDHC_Type *base)
```

Checks the SDR50 mode request tuning bit. When this bit set, application shall perform tuning for SDR50 mode.

Parameters

- base – USDHC peripheral base address.

```
static inline bool USDHC_RequestReTuning(USDHC_Type *base)
```

Checks the request re-tuning bit. When this bit is set, user should do manual tuning or standard tuning function.

Parameters

- base – USDHC peripheral base address.

```
static inline void USDHC_EnableAutoTuning(USDHC_Type *base, bool enable)
```

The SDR104 mode auto tuning enable and disable. This function should be called after tuning function execute pass, auto tuning will handle by hardware.

Parameters

- base – USDHC peripheral base address.
- enable – enable/disable flag

```
void USDHC_EnableAutoTuningForCmdAndData(USDHC_Type *base)
```

The auto tuning enable for CMD/DATA line.

Parameters

- base – USDHC peripheral base address.

void USDHC_EnableManualTuning(USDHC_Type *base, bool enable)

Manual tuning trigger or abort. User should handle the tuning cmd and find the boundary of the delay then calculate a average value which will be configured to the **CLK_TUNE_CTRL_STATUS** This function should be called before function **USDHC_AdjustDelayForManualTuning**.

Parameters

- base – USDHC peripheral base address.
- enable – tuning enable flag

static inline uint32_t USDHC_GetTuningDelayStatus(USDHC_Type *base)

Get the tuning delay cell setting.

Parameters

- base – USDHC peripheral base address.

Return values

CLK – Tuning Control and Status register value.

status_t USDHC_SetTuningDelay(USDHC_Type *base, uint32_t preDelay, uint32_t outDelay, uint32_t postDelay)

The tuning delay cell setting.

Parameters

- base – USDHC peripheral base address.
- preDelay – Set the number of delay cells on the feedback clock between the feedback clock and CLK_PRE.
- outDelay – Set the number of delay cells on the feedback clock between CLK_PRE and CLK_OUT.
- postDelay – Set the number of delay cells on the feedback clock between CLK_OUT and CLK_POST.

Return values

- kStatus_Fail – config the delay setting fail
- kStatus_Success – config the delay setting success

status_t USDHC_AdjustDelayForManualTuning(USDHC_Type *base, uint32_t delay)

Adjusts delay for manual tuning.

Deprecated:

Do not use this function. It has been superseded by **USDHC_SetTuningDelay**

Parameters

- base – USDHC peripheral base address.
- delay – setting configuration

Return values

- kStatus_Fail – config the delay setting fail
- kStatus_Success – config the delay setting success

static inline void USDHC_SetStandardTuningCounter(USDHC_Type *base, uint8_t counter)

set tuning counter tuning.

Parameters

- base – USDHC peripheral base address.
- counter – tuning counter

Return values

- kStatus_Fail – config the delay setting fail
- kStatus_Success – config the delay setting success

```
void USDHC_EnableStandardTuning(USDHC_Type *base, uint32_t tuningStartTap, uint32_t step,
                                bool enable)
```

The enable standard tuning function. The standard tuning window and tuning counter using the default config tuning cmd is sent by the software, user need to check whether the tuning result can be used for SDR50, SDR104, and HS200 mode tuning.

Parameters

- base – USDHC peripheral base address.
- tuningStartTap – start tap
- step – tuning step
- enable – enable/disable flag

```
static inline uint32_t USDHC_GetExecuteStdTuningStatus(USDHC_Type *base)
```

Gets execute STD tuning status.

Parameters

- base – USDHC peripheral base address.

```
static inline uint32_t USDHC_CheckStdTuningResult(USDHC_Type *base)
```

Checks STD tuning result.

Parameters

- base – USDHC peripheral base address.

```
static inline uint32_t USDHC_CheckTuningError(USDHC_Type *base)
```

Checks tuning error.

Parameters

- base – USDHC peripheral base address.

```
void USDHC_EnableDDRMMode(USDHC_Type *base, bool enable, uint32_t nibblePos)
```

The enable/disable DDR mode.

Parameters

- base – USDHC peripheral base address.
- enable – enable/disable flag
- nibblePos – nibble position

```
static inline void USDHC_EnableHS400Mode(USDHC_Type *base, bool enable)
```

The enable/disable HS400 mode.

Parameters

- base – USDHC peripheral base address.
- enable – enable/disable flag

```
static inline void USDHC_ResetStrobeDLL(USDHC_Type *base)
```

Resets the strobe DLL.

Parameters

- base – USDHC peripheral base address.

```
static inline void USDHC_EnableStrobeDLL(USDHC_Type *base, bool enable)
```

Enables/disables the strobe DLL.

Parameters

- base – USDHC peripheral base address.
- enable – enable/disable flag

```
void USDHC_ConfigStrobeDLL(USDHC_Type *base, uint32_t delayTarget, uint32_t  
updateInterval)
```

Configs the strobe DLL delay target and update interval.

Parameters

- base – USDHC peripheral base address.
- delayTarget – delay target
- updateInterval – update interval

```
static inline void USDHC_SetStrobeDllOverride(USDHC_Type *base, uint32_t delayTaps)
```

Enables manual override for slave delay chain using **STROBE_SLV_OVERRIDE_VAL**.

Parameters

- base – USDHC peripheral base address.
- delayTaps – Valid delay taps range from 1 - 128 taps. A value of 0 selects tap 1, and a value of 0x7F selects tap 128.

```
static inline uint32_t USDHC_GetStrobeDLLStatus(USDHC_Type *base)
```

Gets the strobe DLL status.

Parameters

- base – USDHC peripheral base address.

```
void USDHC_SetDataConfig(USDHC_Type *base, usdhc_transfer_direction_t dataDirection,  
uint32_t blockCount, uint32_t blockSize)
```

USDHC data configuration.

Parameters

- base – USDHC peripheral base address.
- dataDirection – Data direction, tx or rx.
- blockCount – Data block count.
- blockSize – Data block size.

```
void USDHC_TransferCreateHandle(USDHC_Type *base, usdhc_handle_t *handle, const  
usdhc_transfer_callback_t *callback, void *userData)
```

Creates the USDHC handle.

Parameters

- base – USDHC peripheral base address.
- handle – USDHC handle pointer.
- callback – Structure pointer to contain all callback functions.
- userData – Callback function parameter.

```
status_t USDHC_TransferNonBlocking(USDHC_Type *base, usdhc_handle_t *handle,  
                                   usdhc_adma_config_t *dmaConfig, usdhc_transfer_t  
                                   *transfer)
```

Transfers the command/data using an interrupt and an asynchronous method.

This function sends a command and data and returns immediately. It doesn't wait for the transfer to complete or to encounter an error. The application must not call this API in multiple threads at the same time. Because of that this API doesn't support the re-entry mechanism.

Note: Call API USDHC_TransferCreateHandle when calling this API.

Parameters

- base – USDHC peripheral base address.
- handle – USDHC handle.
- dmaConfig – ADMA configuration.
- transfer – Transfer content.

Return values

- kStatus_InvalidArgument – Argument is invalid.
- kStatus_USDHC_BusyTransferring – Busy transferring.
- kStatus_USDHC_PrepareAdmaDescriptorFailed – Prepare ADMA descriptor failed.
- kStatus_Success – Operate successfully.

```
status_t USDHC_TransferBlocking(USDHC_Type *base, usdhc_adma_config_t *dmaConfig,  
                                usdhc_transfer_t *transfer)
```

Transfers the command/data using a blocking method.

This function waits until the command response/data is received or the USDHC encounters an error by polling the status flag.

The application must not call this API in multiple threads at the same time. Because this API doesn't support the re-entry mechanism.

Note: There is no need to call API USDHC_TransferCreateHandle when calling this API.

Parameters

- base – USDHC peripheral base address.
- dmaConfig – adma configuration
- transfer – Transfer content.

Return values

- kStatus_InvalidArgument – Argument is invalid.
- kStatus_USDHC_PrepareAdmaDescriptorFailed – Prepare ADMA descriptor failed.
- kStatus_USDHC_SendCommandFailed – Send command failed.
- kStatus_USDHC_TransferDataFailed – Transfer data failed.

- kStatus_Success – Operate successfully.

void USDHC_TransferHandleIRQ(USDHC_Type *base, *usdhc_handle_t* *handle)
IRQ handler for the USDHC.

This function deals with the IRQs on the given host controller.

Parameters

- base – USDHC peripheral base address.
- handle – USDHC handle.

FSL_USDHC_DRIVER_VERSION

Driver version 2.8.8.

Enum *_usdhc_status*. USDHC status.

Values:

enumerator kStatus_USDHC_BusyTransferring
Transfer is on-going.

enumerator kStatus_USDHC_PrepareAdmaDescriptorFailed
Set DMA descriptor failed.

enumerator kStatus_USDHC_SendCommandFailed
Send command failed.

enumerator kStatus_USDHC_TransferDataFailed
Transfer data failed.

enumerator kStatus_USDHC_DMADDataAddrNotAlign
Data address not aligned.

enumerator kStatus_USDHC_ReTuningRequest
Re-tuning request.

enumerator kStatus_USDHC_TuningError
Tuning error.

enumerator kStatus_USDHC_NotSupport
Not support.

enumerator kStatus_USDHC_TransferDataComplete
Transfer data complete.

enumerator kStatus_USDHC_SendCommandSuccess
Transfer command complete.

enumerator kStatus_USDHC_TransferDMAComplete
Transfer DMA complete.

Enum *_usdhc_capability_flag*. Host controller capabilities flag mask. .

Values:

enumerator kUSDHC_SupportAdmaFlag
Support ADMA.

enumerator kUSDHC_SupportHighSpeedFlag
Support high-speed.

- enumerator kUSDHC_SupportDmaFlag
Support DMA.
- enumerator kUSDHC_SupportSuspendResumeFlag
Support suspend/resume.
- enumerator kUSDHC_SupportV330Flag
Support voltage 3.3V.
- enumerator kUSDHC_SupportV300Flag
Support voltage 3.0V.
- enumerator kUSDHC_Support4BitFlag
Flag in HTCAPBLT_MBL's position, supporting 4-bit mode.
- enumerator kUSDHC_Support8BitFlag
Flag in HTCAPBLT_MBL's position, supporting 8-bit mode.
- enumerator kUSDHC_SupportDDR50Flag
SD version 3.0 new feature, supporting DDR50 mode.
- enumerator kUSDHC_SupportSDR104Flag
Support SDR104 mode.
- enumerator kUSDHC_SupportSDR50Flag
Support SDR50 mode.

Enum _usdhc_wakeup_event. Wakeup event mask. .

Values:

- enumerator kUSDHC_WakeupEventOnCardInt
Wakeup on card interrupt.
- enumerator kUSDHC_WakeupEventOnCardInsert
Wakeup on card insertion.
- enumerator kUSDHC_WakeupEventOnCardRemove
Wakeup on card removal.
- enumerator kUSDHC_WakeupEventsAll
All wakeup events

Enum _usdhc_reset. Reset type mask. .

Values:

- enumerator kUSDHC_ResetAll
Reset all except card detection.
- enumerator kUSDHC_ResetCommand
Reset command line.
- enumerator kUSDHC_ResetData
Reset data line.
- enumerator kUSDHC_ResetTuning
Reset tuning circuit.
- enumerator kUSDHC_ResetsAll
All reset types

Enum `_usdhc_transfer_flag`. Transfer flag mask.

Values:

- enumerator `kUSDHC_EnableDmaFlag`
Enable DMA.
- enumerator `kUSDHC_CommandTypeSuspendFlag`
Suspend command.
- enumerator `kUSDHC_CommandTypeResumeFlag`
Resume command.
- enumerator `kUSDHC_CommandTypeAbortFlag`
Abort command.
- enumerator `kUSDHC_EnableBlockCountFlag`
Enable block count.
- enumerator `kUSDHC_EnableAutoCommand12Flag`
Enable auto CMD12.
- enumerator `kUSDHC_DataReadFlag`
Enable data read.
- enumerator `kUSDHC_MultipleBlockFlag`
Multiple block data read/write.
- enumerator `kUSDHC_EnableAutoCommand23Flag`
Enable auto CMD23.
- enumerator `kUSDHC_ResponseLength136Flag`
136-bit response length.
- enumerator `kUSDHC_ResponseLength48Flag`
48-bit response length.
- enumerator `kUSDHC_ResponseLength48BusyFlag`
48-bit response length with busy status.
- enumerator `kUSDHC_EnableCrcCheckFlag`
Enable CRC check.
- enumerator `kUSDHC_EnableIndexCheckFlag`
Enable index check.
- enumerator `kUSDHC_DataPresentFlag`
Data present flag.

Enum `_usdhc_present_status_flag`. Present status flag mask. .

Values:

- enumerator `kUSDHC_CommandInhibitFlag`
Command inhibit.
- enumerator `kUSDHC_DataInhibitFlag`
Data inhibit.
- enumerator `kUSDHC_DataLineActiveFlag`
Data line active.

- enumerator kUSDHC_SdClockStableFlag
SD bus clock stable.
 - enumerator kUSDHC_WriteTransferActiveFlag
Write transfer active.
 - enumerator kUSDHC_ReadTransferActiveFlag
Read transfer active.
 - enumerator kUSDHC_BufferWriteEnableFlag
Buffer write enable.
 - enumerator kUSDHC_BufferReadEnableFlag
Buffer read enable.
 - enumerator kUSDHC_ReTuningRequestFlag
Re-tuning request flag, only used for SDR104 mode.
 - enumerator kUSDHC_DelaySettingFinishedFlag
Delay setting finished flag.
 - enumerator kUSDHC_CardInsertedFlag
Card inserted.
 - enumerator kUSDHC_CommandLineLevelFlag
Command line signal level.
 - enumerator kUSDHC_Data0LineLevelFlag
Data0 line signal level.
 - enumerator kUSDHC_Data1LineLevelFlag
Data1 line signal level.
 - enumerator kUSDHC_Data2LineLevelFlag
Data2 line signal level.
 - enumerator kUSDHC_Data3LineLevelFlag
Data3 line signal level.
 - enumerator kUSDHC_Data4LineLevelFlag
Data4 line signal level.
 - enumerator kUSDHC_Data5LineLevelFlag
Data5 line signal level.
 - enumerator kUSDHC_Data6LineLevelFlag
Data6 line signal level.
 - enumerator kUSDHC_Data7LineLevelFlag
Data7 line signal level.
- Enum `_usdhc_interrupt_status_flag`. Interrupt status flag mask. .
- Values:*
- enumerator kUSDHC_CommandCompleteFlag
Command complete.
 - enumerator kUSDHC_DataCompleteFlag
Data complete.

enumerator kUSDHC_BlockGapEventFlag
Block gap event.

enumerator kUSDHC_DmaCompleteFlag
DMA interrupt.

enumerator kUSDHC_BufferWriteReadyFlag
Buffer write ready.

enumerator kUSDHC_BufferReadReadyFlag
Buffer read ready.

enumerator kUSDHC_CardInsertionFlag
Card inserted.

enumerator kUSDHC_CardRemovalFlag
Card removed.

enumerator kUSDHC_CardInterruptFlag
Card interrupt.

enumerator kUSDHC_ReTuningEventFlag
Re-Tuning event, only for SD3.0 SDR104 mode.

enumerator kUSDHC_TuningPassFlag
SDR104 mode tuning pass flag.

enumerator kUSDHC_TuningErrorFlag
SDR104 tuning error flag.

enumerator kUSDHC_CommandTimeoutFlag
Command timeout error.

enumerator kUSDHC_CommandCrcErrorFlag
Command CRC error.

enumerator kUSDHC_CommandEndBitErrorFlag
Command end bit error.

enumerator kUSDHC_CommandIndexErrorFlag
Command index error.

enumerator kUSDHC_DataTimeoutFlag
Data timeout error.

enumerator kUSDHC_DataCrcErrorFlag
Data CRC error.

enumerator kUSDHC_DataEndBitErrorFlag
Data end bit error.

enumerator kUSDHC_AutoCommand12ErrorFlag
Auto CMD12 error.

enumerator kUSDHC_DmaErrorFlag
DMA error.

enumerator kUSDHC_CommandErrorFlag
Command error

enumerator kUSDHC_DataErrorFlag
Data error

enumerator kUSDHC_ErrorFlag
All error

enumerator kUSDHC_DataFlag
Data interrupts

enumerator kUSDHC_DataDMAFlag
Data interrupts

enumerator kUSDHC_CommandFlag
Command interrupts

enumerator kUSDHC_CardDetectFlag
Card detection interrupts

enumerator kUSDHC_SDR104TuningFlag
SDR104 tuning flag.

enumerator kUSDHC_AllInterruptFlags
All flags mask

Enum `_usdhc_auto_command12_error_status_flag`. Auto CMD12 error status flag mask. .

Values:

enumerator kUSDHC_AutoCommand12NotExecutedFlag
Not executed error.

enumerator kUSDHC_AutoCommand12TimeoutFlag
Timeout error.

enumerator kUSDHC_AutoCommand12EndBitErrorFlag
End bit error.

enumerator kUSDHC_AutoCommand12CrcErrorFlag
CRC error.

enumerator kUSDHC_AutoCommand12IndexErrorFlag
Index error.

enumerator kUSDHC_AutoCommand12NotIssuedFlag
Not issued error.

Enum `_usdhc_standard_tuning`. Standard tuning flag.

Values:

enumerator kUSDHC_ExecuteTuning
Used to start tuning procedure.

enumerator kUSDHC_TuningSampleClockSel
When **std_tuning_en** bit is set, this bit is used to select sampling clock.

Enum `_usdhc_adma_error_status_flag`. ADMA error status flag mask. .

Values:

enumerator kUSDHC_AdmaLenghMismatchFlag
Length mismatch error.

enumerator kUSDHC_AdmaDescriptorErrorFlag
Descriptor error.

Enum _usdhc_adma_error_state. ADMA error state.

This state is the detail state when ADMA error has occurred.

Values:

enumerator kUSDHC_AdmaErrorStateStopDma
Stop DMA, previous location set in the ADMA system address is errored address.

enumerator kUSDHC_AdmaErrorStateFetchDescriptor
Fetch descriptor, current location set in the ADMA system address is errored address.

enumerator kUSDHC_AdmaErrorStateChangeAddress
Change address, no DMA error has occurred.

enumerator kUSDHC_AdmaErrorStateTransferData
Transfer data, previous location set in the ADMA system address is errored address.

enumerator kUSDHC_AdmaErrorStateInvalidLength
Invalid length in ADMA descriptor.

enumerator kUSDHC_AdmaErrorStateInvalidDescriptor
Invalid descriptor fetched by ADMA.

enumerator kUSDHC_AdmaErrorState
ADMA error state

Enum _usdhc_force_event. Force event bit position. .

Values:

enumerator kUSDHC_ForceEventAutoCommand12NotExecuted
Auto CMD12 not executed error.

enumerator kUSDHC_ForceEventAutoCommand12Timeout
Auto CMD12 timeout error.

enumerator kUSDHC_ForceEventAutoCommand12CrcError
Auto CMD12 CRC error.

enumerator kUSDHC_ForceEventEndBitError
Auto CMD12 end bit error.

enumerator kUSDHC_ForceEventAutoCommand12IndexError
Auto CMD12 index error.

enumerator kUSDHC_ForceEventAutoCommand12NotIssued
Auto CMD12 not issued error.

enumerator kUSDHC_ForceEventCommandTimeout
Command timeout error.

enumerator kUSDHC_ForceEventCommandCrcError
Command CRC error.

enumerator kUSDHC_ForceEventCommandEndBitError
Command end bit error.

enumerator kUSDHC_ForceEventCommandIndexError
Command index error.

enumerator kUSDHC_ForceEventDataTimeout
Data timeout error.

enumerator kUSDHC_ForceEventDataCrcError
Data CRC error.

enumerator kUSDHC_ForceEventDataEndBitError
Data end bit error.

enumerator kUSDHC_ForceEventAutoCommand12Error
Auto CMD12 error.

enumerator kUSDHC_ForceEventCardInt
Card interrupt.

enumerator kUSDHC_ForceEventDmaError
Dma error.

enumerator kUSDHC_ForceEventTuningError
Tuning error.

enumerator kUSDHC_ForceEventsAll
All force event flags mask.

enum _usdhc_transfer_direction
Data transfer direction.

Values:

enumerator kUSDHC_TransferDirectionReceive
USDHC transfer direction receive.

enumerator kUSDHC_TransferDirectionSend
USDHC transfer direction send.

enum _usdhc_data_bus_width
Data transfer width.

Values:

enumerator kUSDHC_DataBusWidth1Bit
1-bit mode

enumerator kUSDHC_DataBusWidth4Bit
4-bit mode

enumerator kUSDHC_DataBusWidth8Bit
8-bit mode

enum _usdhc_endian_mode
Endian mode.

Values:

enumerator kUSDHC_EndianModeBig
Big endian mode.

enumerator kUSDHC_EndianModeHalfWordBig
Half word big endian mode.

enumerator kUSDHC_EndianModeLittle
Little endian mode.

enum _usdhc_dma_mode
DMA mode.

Values:

enumerator kUSDHC_DmaModeSimple
External DMA.

enumerator kUSDHC_DmaModeAdma1
ADMA1 is selected.

enumerator kUSDHC_DmaModeAdma2
ADMA2 is selected.

enumerator kUSDHC_ExternalDMA
External DMA mode selected.

Enum _usdhc_sdio_control_flag. SDIO control flag mask. .

Values:

enumerator kUSDHC_StopAtBlockGapFlag
Stop at block gap.

enumerator kUSDHC_ReadWaitControlFlag
Read wait control.

enumerator kUSDHC_InterruptAtBlockGapFlag
Interrupt at block gap.

enumerator kUSDHC_ReadDoneNo8CLK
Read done without 8 clk for block gap.

enumerator kUSDHC_ExactBlockNumberReadFlag
Exact block number read.

enum _usdhc_boot_mode
MMC card boot mode.

Values:

enumerator kUSDHC_BootModeNormal
Normal boot

enumerator kUSDHC_BootModeAlternative
Alternative boot

enum _usdhc_card_command_type
The command type.

Values:

enumerator kCARD_CommandTypeNormal
Normal command

enumerator kCARD_CommandTypeSuspend
Suspend command

enumerator kCARD_CommandTypeResume
Resume command

enumerator kCARD_CommandTypeAbort
Abort command

enumerator kCARD_CommandTypeEmpty
Empty command

enum _usdhc_card_response_type

The command response type.

Defines the command response type from card to host controller.

Values:

enumerator kCARD_ResponseTypeNone
Response type: none

enumerator kCARD_ResponseTypeR1
Response type: R1

enumerator kCARD_ResponseTypeR1b
Response type: R1b

enumerator kCARD_ResponseTypeR2
Response type: R2

enumerator kCARD_ResponseTypeR3
Response type: R3

enumerator kCARD_ResponseTypeR4
Response type: R4

enumerator kCARD_ResponseTypeR5
Response type: R5

enumerator kCARD_ResponseTypeR5b
Response type: R5b

enumerator kCARD_ResponseTypeR6
Response type: R6

enumerator kCARD_ResponseTypeR7
Response type: R7

Enum _usdhc_adma1_descriptor_flag. The mask for the control/status field in ADMA1 descriptor.

Values:

enumerator kUSDHC_Adma1DescriptorValidFlag
Valid flag.

enumerator kUSDHC_Adma1DescriptorEndFlag
End flag.

enumerator kUSDHC_Adma1DescriptorInterruptFlag
Interrupt flag.

enumerator kUSDHC_Adma1DescriptorActivity1Flag
Activity 1 flag.

enumerator kUSDHC_Adma1DescriptorActivity2Flag
Activity 2 flag.

enumerator kUSDHC_Adma1DescriptorTypeNop
No operation.

enumerator kUSDHC_Adma1DescriptorTypeTransfer
Transfer data.

enumerator kUSDHC_Adma1DescriptorTypeLink
Link descriptor.

enumerator kUSDHC_Adma1DescriptorTypeSetLength
Set data length.

Enum _usdhc_adma2_descriptor_flag. ADMA1 descriptor control and status mask.

Values:

enumerator kUSDHC_Adma2DescriptorValidFlag
Valid flag.

enumerator kUSDHC_Adma2DescriptorEndFlag
End flag.

enumerator kUSDHC_Adma2DescriptorInterruptFlag
Interrupt flag.

enumerator kUSDHC_Adma2DescriptorActivity1Flag
Activity 1 mask.

enumerator kUSDHC_Adma2DescriptorActivity2Flag
Activity 2 mask.

enumerator kUSDHC_Adma2DescriptorTypeNop
No operation.

enumerator kUSDHC_Adma2DescriptorTypeReserved
Reserved.

enumerator kUSDHC_Adma2DescriptorTypeTransfer
Transfer type.

enumerator kUSDHC_Adma2DescriptorTypeLink
Link type.

Enum _usdhc_adma_flag. ADMA descriptor configuration flag. .

Values:

enumerator kUSDHC_AdmaDescriptorSingleFlag
Try to finish the transfer in a single ADMA descriptor. If transfer size is bigger than one ADMA descriptor's ability, new another descriptor for data transfer.

enumerator kUSDHC_AdmaDescriptorMultipleFlag
Create multiple ADMA descriptors within the ADMA table, this is used for mmc boot mode specifically, which need to modify the ADMA descriptor on the fly, so the flag should be used combining with stop at block gap feature.

enum _usdhc_burst_len
DMA transfer burst len config.

Values:

enumerator `kUSDHC_EnBurstLenForINCR`
 Enable burst len for INCR.

enumerator `kUSDHC_EnBurstLenForINCR4816`
 Enable burst len for INCR4/INCR8/INCR16.

enumerator `kUSDHC_EnBurstLenForINCR4816WRAP`
 Enable burst len for INCR4/8/16 WRAP.

Enum `_usdhc_transfer_data_type`. Transfer data type definition.

Values:

enumerator `kUSDHC_TransferDataNormal`
 Transfer normal read/write data.

enumerator `kUSDHC_TransferDataTuning`
 Transfer tuning data.

enumerator `kUSDHC_TransferDataBoot`
 Transfer boot data.

enumerator `kUSDHC_TransferDataBootcontinuous`
 Transfer boot data continuously.

typedef enum `_usdhc_transfer_direction` `usdhc_transfer_direction_t`
 Data transfer direction.

typedef enum `_usdhc_data_bus_width` `usdhc_data_bus_width_t`
 Data transfer width.

typedef enum `_usdhc_endian_mode` `usdhc_endian_mode_t`
 Endian mode.

typedef enum `_usdhc_dma_mode` `usdhc_dma_mode_t`
 DMA mode.

typedef enum `_usdhc_boot_mode` `usdhc_boot_mode_t`
 MMC card boot mode.

typedef enum `_usdhc_card_command_type` `usdhc_card_command_type_t`
 The command type.

typedef enum `_usdhc_card_response_type` `usdhc_card_response_type_t`
 The command response type.

Defines the command response type from card to host controller.

typedef enum `_usdhc_burst_len` `usdhc_burst_len_t`
 DMA transfer burst len config.

typedef uint32_t `usdhc_adma1_descriptor_t`
 Defines the ADMA1 descriptor structure.

typedef struct `_usdhc_adma2_descriptor` `usdhc_adma2_descriptor_t`
 Defines the ADMA2 descriptor structure.

typedef struct `_usdhc_capability` `usdhc_capability_t`
 USDHC capability information.

Defines a structure to save the capability information of USDHC.

`typedef struct _usdhc_boot_config usdhc_boot_config_t`
Data structure to configure the MMC boot feature.

`typedef struct _usdhc_config usdhc_config_t`
Data structure to initialize the USDHC.

`typedef struct _usdhc_command usdhc_command_t`
Card command descriptor.
Defines card command-related attribute.

`typedef struct _usdhc_adma_config usdhc_adma_config_t`
ADMA configuration.

`typedef struct _usdhc_scatter_gather_data_list usdhc_scatter_gather_data_list_t`
Card scatter gather data list.
Allow application register uncontinuous data buffer for data transfer.

`typedef struct _usdhc_scatter_gather_data usdhc_scatter_gather_data_t`
Card scatter gather data descriptor.
Defines a structure to contain data-related attribute. The 'enableIgnoreError' is used when upper card driver wants to ignore the error event to read/write all the data and not to stop read/write immediately when an error event happens. For example, bus testing procedure for MMC card.

`typedef struct _usdhc_scatter_gather_transfer usdhc_scatter_gather_transfer_t`
usdhc scatter gather transfer.

`typedef struct _usdhc_data usdhc_data_t`
Card data descriptor.
Defines a structure to contain data-related attribute. The 'enableIgnoreError' is used when upper card driver wants to ignore the error event to read/write all the data and not to stop read/write immediately when an error event happens. For example, bus testing procedure for MMC card.

`typedef struct _usdhc_transfer usdhc_transfer_t`
Transfer state.

`typedef struct _usdhc_handle usdhc_handle_t`
USDHC handle typedef.

`typedef struct _usdhc_transfer_callback usdhc_transfer_callback_t`
USDHC callback functions.

`typedef status_t (*usdhc_transfer_function_t)(USDHC_Type *base, usdhc_transfer_t *content)`
USDHC transfer function.

`typedef struct _usdhc_host usdhc_host_t`
USDHC host descriptor.

`USDHC_MAX_BLOCK_COUNT`
Maximum block count can be set one time.

`FSL_USDHC_ENABLE_SCATTER_GATHER_TRANSFER`
USDHC scatter gather feature control macro.

`USDHC_ADMA1_ADDRESS_ALIGN`
The alignment size for ADDRESS filed in ADMA1's descriptor.

`USDHC_ADMA1_LENGTH_ALIGN`
The alignment size for LENGTH field in ADMA1's descriptor.

USDHC_ADMA2_ADDRESS_ALIGN

The alignment size for ADDRESS field in ADMA2's descriptor.

USDHC_ADMA2_LENGTH_ALIGN

The alignment size for LENGTH field in ADMA2's descriptor.

USDHC_ADMA1_DESCRIPTOR_ADDRESS_SHIFT

The bit shift for ADDRESS field in ADMA1's descriptor.

Address/page field	Reserved	Attribute						
31 12	11 6	05	04	03	02	01	00	
address or data length	000000	Act2	Act1	0	Int	End	Valid	

Act2	Act1	Comment	31-28	27-12
0	0	No op	Don't care	
0	1	Set data length	0000	Data Length
1	0	Transfer data	Data address	
1	1	Link descriptor	Descriptor address	

USDHC_ADMA1_DESCRIPTOR_ADDRESS_MASK

The bit mask for ADDRESS field in ADMA1's descriptor.

USDHC_ADMA1_DESCRIPTOR_LENGTH_SHIFT

The bit shift for LENGTH field in ADMA1's descriptor.

USDHC_ADMA1_DESCRIPTOR_LENGTH_MASK

The mask for LENGTH field in ADMA1's descriptor.

USDHC_ADMA1_DESCRIPTOR_MAX_LENGTH_PER_ENTRY

The maximum value of LENGTH field in ADMA1's descriptor. Since the max transfer size ADMA1 support is 65535 which is indivisible by 4096, so to make sure a large data load transfer (>64KB) continuously (require the data address be always align with 4096), software will set the maximum data length for ADMA1 to (64 - 4)KB.

USDHC_ADMA2_DESCRIPTOR_LENGTH_SHIFT

The bit shift for LENGTH field in ADMA2's descriptor.

Address field	Length	Reserved	Attribute						
63 32	31 16	15 06	05	04	03	02	01	00	
32-bit address	16-bit length	0000000000	Act2	Act1	0	Int	End	Valid	

Act2	Act1	Comment	Operation
0	0	No op	Don't care
0	1	Reserved	Read this line and go to next one
1	0	Transfer data	Transfer data with address and length set in this descriptor line
1	1	Link descriptor	Link to another descriptor

USDHC_ADMA2_DESCRIPTOR_LENGTH_MASK

The bit mask for LENGTH field in ADMA2's descriptor.

USDHC_ADMA2_DESCRIPTOR_MAX_LENGTH_PER_ENTRY

The maximum value of LENGTH field in ADMA2's descriptor.

struct `_usdhc_adma2_descriptor`

#include <fsl_usdhc.h> Defines the ADMA2 descriptor structure.

Public Members

uint32_t `attribute`

The control and status field.

uint32_t `address`

The address field.

struct `_usdhc_capability`

#include <fsl_usdhc.h> USDHC capability information.

Defines a structure to save the capability information of USDHC.

Public Members

uint32_t `sdVersion`

Support SD card/sdio version.

uint32_t `mmcVersion`

Support EMMC card version.

uint32_t `maxBlockLength`

Maximum block length united as byte.

uint32_t `maxBlockCount`

Maximum block count can be set one time.

uint32_t `flags`

Capability flags to indicate the support information(`_usdhc_capability_flag`).

struct `_usdhc_boot_config`

#include <fsl_usdhc.h> Data structure to configure the MMC boot feature.

Public Members

uint32_t `ackTimeoutCount`

Timeout value for the boot ACK. The available range is 0 ~ 15.

`usdhc_boot_mode_t` `bootMode`

Boot mode selection.

uint32_t `blockCount`

Stop at block gap value of automatic mode. Available range is 0 ~ 65535.

size_t `blockSize`

Block size.

bool `enableBootAck`

Enable or disable boot ACK.

`bool enableAutoStopAtBlockGap`

Enable or disable auto stop at block gap function in boot period.

`struct __usdhc_config`

#include <fsl_usdhc.h> Data structure to initialize the USDHC.

Public Members

`uint32_t dataTimeout`

Data timeout value.

`usdhc_endian_mode_t endianMode`

Endian mode.

`uint8_t readWatermarkLevel`

Watermark level for DMA read operation. Available range is 1 ~ 128.

`uint8_t writeWatermarkLevel`

Watermark level for DMA write operation. Available range is 1 ~ 128.

`struct __usdhc_command`

#include <fsl_usdhc.h> Card command descriptor.

Defines card command-related attribute.

Public Members

`uint32_t index`

Command index.

`uint32_t argument`

Command argument.

`usdhc_card_command_type_t type`

Command type.

`usdhc_card_response_type_t responseType`

Command response type.

`uint32_t response[4U]`

Response for this command.

`uint32_t responseErrorFlags`

Response error flag, which need to check the command reponse.

`uint32_t flags`

Cmd flags.

`struct __usdhc_adma_config`

#include <fsl_usdhc.h> ADMA configuration.

Public Members

`usdhc_dma_mode_t dmaMode`

DMA mode.

`uint32_t *admaTable`

ADMA table address, can't be null if transfer way is ADMA1/ADMA2.

uint32_t admaTableWords

ADMA table length united as words, can't be 0 if transfer way is ADMA1/ADMA2.

struct __usdhc_scatter_gather_data_list

#include <fsl_usdhc.h> Card scatter gather data list.

Allow application register uncontinuous data buffer for data transfer.

struct __usdhc_scatter_gather_data

#include <fsl_usdhc.h> Card scatter gather data descriptor.

Defines a structure to contain data-related attribute. The 'enableIgnoreError' is used when upper card driver wants to ignore the error event to read/write all the data and not to stop read/write immediately when an error event happens. For example, bus testing procedure for MMC card.

Public Members

bool enableAutoCommand12

Enable auto CMD12.

bool enableAutoCommand23

Enable auto CMD23.

bool enableIgnoreError

Enable to ignore error event to read/write all the data.

usdhc_transfer_direction_t dataDirection

data direction

uint8_t dataType

this is used to distinguish the normal/tuning/boot data.

size_t blockSize

Block size.

usdhc_scatter_gather_data_list_t sgData

scatter gather data

struct __usdhc_scatter_gather_transfer

#include <fsl_usdhc.h> usdhc scatter gather transfer.

Public Members

usdhc_scatter_gather_data_t *data

Data to transfer.

usdhc_command_t *command

Command to send.

struct __usdhc_data

#include <fsl_usdhc.h> Card data descriptor.

Defines a structure to contain data-related attribute. The 'enableIgnoreError' is used when upper card driver wants to ignore the error event to read/write all the data and not to stop read/write immediately when an error event happens. For example, bus testing procedure for MMC card.

Public Members

`bool enableAutoCommand12`

Enable auto CMD12.

`bool enableAutoCommand23`

Enable auto CMD23.

`bool enableIgnoreError`

Enable to ignore error event to read/write all the data.

`uint8_t dataType`

this is used to distinguish the normal/tuning/boot data.

`size_t blockSize`

Block size.

`uint32_t blockCount`

Block count.

`uint32_t *rxData`

Buffer to save data read.

`const uint32_t *txData`

Data buffer to write.

`struct __usdhc_transfer`

#include <fsl_usdhc.h> Transfer state.

Public Members

`usdhc_data_t *data`

Data to transfer.

`usdhc_command_t *command`

Command to send.

`struct __usdhc_transfer_callback`

#include <fsl_usdhc.h> USDHC callback functions.

Public Members

`void (*CardInserted)(USDHC_Type *base, void *userData)`

Card inserted occurs when DAT3/CD pin is for card detect

`void (*CardRemoved)(USDHC_Type *base, void *userData)`

Card removed occurs

`void (*SdioInterrupt)(USDHC_Type *base, void *userData)`

SDIO card interrupt occurs

`void (*BlockGap)(USDHC_Type *base, void *userData)`

stopped at block gap event

`void (*TransferComplete)(USDHC_Type *base, usdhc_handle_t *handle, status_t status, void *userData)`

Transfer complete callback.

`void (*ReTuning)(USDHC_Type *base, void *userData)`

Handle the re-tuning.

struct `_usdhc_handle`

#include `<fsl_usdhc.h>` USDHC handle.

Defines the structure to save the USDHC state information and callback function.

Note: All the fields except `interruptFlags` and `transferredWords` must be allocated by the user.

Public Members

usdhc_data_t *volatile data

Transfer parameter. Data to transfer.

usdhc_command_t *volatile command

Transfer parameter. Command to send.

volatile uint32_t transferredWords

Transfer status. Words transferred by DATAPORT way.

usdhc_transfer_callback_t callback

Callback function.

void *userData

Parameter for transfer complete callback.

struct `_usdhc_host`

#include `<fsl_usdhc.h>` USDHC host descriptor.

Public Members

USDHC_Type *base

USDHC peripheral base address.

uint32_t sourceClock_Hz

USDHC source clock frequency united in Hz.

usdhc_config_t config

USDHC configuration.

usdhc_capability_t capability

USDHC capability information.

usdhc_transfer_function_t transfer

USDHC transfer function.

2.77 VREF: Voltage Reference Driver

status_t VREF_Init(VREF_Type *base, const *vref_config_t* *config)

Enables the clock gate and configures the VREF module according to the configuration structure.

This function must be called before calling all other VREF driver functions, read/write registers, and configurations with user-defined settings. The example below shows how to set up *vref_config_t* parameters and how to call the VREF_Init function by passing in these parameters. This is an example.

```
vref_config_t vrefConfig;
vrefConfig.bufferMode = kVREF_ModeHighPowerBuffer;
vrefConfig.enableExternalVoltRef = false;
vrefConfig.enableLowRef = false;
VREF_Init(VREF, &vrefConfig);
```

Parameters

- base – VREF peripheral address.
- config – Pointer to the configuration structure.

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

`void VREF_Deinit(VREF_Type *base)`

Stops and disables the clock for the VREF module.

This function should be called to shut down the module. This is an example.

```
vref_config_t vrefUserConfig;
VREF_Init(VREF);
VREF_GetDefaultConfig(&vrefUserConfig);
...
VREF_Deinit(VREF);
```

Parameters

- base – VREF peripheral address.

`void VREF_GetDefaultConfig(vref_config_t *config)`

Initializes the VREF configuration structure.

This function initializes the VREF configuration structure to default values. This is an example.

```
vrefConfig->bufferMode = kVREF_ModeHighPowerBuffer;
vrefConfig->enableExternalVoltRef = false;
vrefConfig->enableLowRef = false;
```

Parameters

- config – Pointer to the initialization structure.

`status_t VREF_SetTrimVal(VREF_Type *base, uint8_t trimValue)`

Sets a TRIM value for the reference voltage.

This function sets a TRIM value for the reference voltage. Note that the TRIM value maximum is 0x3F.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

```
static inline uint8_t VREF_GetTrimVal(VREF_Type *base)
```

Reads the value of the TRIM meaning output voltage.

This function gets the TRIM value from the TRM register.

Parameters

- base – VREF peripheral address.

Returns

Six-bit value of trim setting.

```
status_t VREF_SetTrim2V1Val(VREF_Type *base, uint8_t trimValue)
```

Sets a TRIM value for the reference voltage (2V1).

This function sets a TRIM value for the reference voltage (2V1). Note that the TRIM value maximum is 0x3F.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

```
static inline uint8_t VREF_GetTrim2V1Val(VREF_Type *base)
```

Reads the value of the TRIM meaning output voltage (2V1).

This function gets the TRIM value from the VREF_TRM4 register.

Parameters

- base – VREF peripheral address.

Returns

Six-bit value of trim setting.

```
status_t VREF_SetLowReferenceTrimVal(VREF_Type *base, uint8_t trimValue)
```

Sets the TRIM value for the low voltage reference.

This function sets the TRIM value for low reference voltage. Note the following.

- The TRIM value maximum is 0x05U
- The values 111b and 110b are not valid/allowed.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set output low reference voltage (maximum 0x05U (3-bit)).

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

```
static inline uint8_t VREF_GetLowReferenceTrimVal(VREF_Type *base)
```

Reads the value of the TRIM meaning output voltage.

This function gets the TRIM value from the VREFL_TRM register.

Parameters

- base – VREF peripheral address.

Returns

Three-bit value of the trim setting.

FSL_VREF_DRIVER_VERSION

Version 2.1.3.

VREF_INTERNAL_VOLTAGE_STABLE_TIMEOUT

Max loops to wait for VREF internal voltage stable.

This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

enum `_vref_buffer_mode`

VREF modes.

Values:

enumerator `kVREF_ModeBandgapOnly`

Bandgap on only, for stabilization and startup

enumerator `kVREF_ModeHighPowerBuffer`

High-power buffer mode enabled

enumerator `kVREF_ModeLowPowerBuffer`

Low-power buffer mode enabled

typedef enum `_vref_buffer_mode` `vref_buffer_mode_t`

VREF modes.

typedef struct `_vref_config` `vref_config_t`

The description structure for the VREF module.

VREF_SC_MODE_LV

VREF_SC_REGEN

VREF_SC_VREFEN

VREF_SC_ICOMPEN

VREF_SC_REGEN_MASK

VREF_SC_VREFST_MASK

VREF_SC_VREFEN_MASK

VREF_SC_MODE_LV_MASK

VREF_SC_ICOMPEN_MASK

TRM

VREF_TRM_TRIM

VREF_TRM_CHOPEN_MASK

VREF_TRM_TRIM_MASK

VREF_TRM_CHOPEN_SHIFT

VREF_TRM_TRIM_SHIFT

VREF_SC_MODE_LV_SHIFT

VREF_SC_REGEN_SHIFT

VREF_SC_VREFST_SHIFT

VREF_SC_ICOMPEN_SHIFT

struct `_vref_config`

#include <fsl_vref.h> The description structure for the VREF module.

Public Members

`vref_buffer_mode_t` `bufferMode`

Buffer mode selection

bool `enableLowRef`

Set VREFL (0.4 V) reference buffer enable or disable

bool `enableExternalVoltRef`

Select external voltage reference or not (internal)

bool `enable2V1VoltRef`

Enable Internal Voltage Reference (2.1V)

2.78 WDOG32: 32-bit Watchdog Timer

void `WDOG32_GetDefaultConfig(wdog32_config_t *config)`

Initializes the WDOG32 configuration structure.

This function initializes the WDOG32 configuration structure to default values. The default values are:

```
wdog32Config->enableWdog32 = true;
wdog32Config->clockSource = kWDOG32_ClockSource1;
wdog32Config->prescaler = kWDOG32_ClockPrescalerDivide1;
wdog32Config->workMode.enableWait = true;
wdog32Config->workMode.enableStop = false;
wdog32Config->workMode.enableDebug = false;
wdog32Config->testMode = kWDOG32_TestModeDisabled;
wdog32Config->enableUpdate = true;
wdog32Config->enableInterrupt = false;
wdog32Config->enableWindowMode = false;
wdog32Config->windowValue = 0U;
wdog32Config->timeoutValue = 0xFFFFU;
```

See also:

`wdog32_config_t`

Parameters

- `config` – Pointer to the WDOG32 configuration structure.

`status_t` `WDOG32_Init(WDOG_Type *base, const wdog32_config_t *config)`

Initializes the WDOG32 module.

This function initializes the WDOG32. To reconfigure the WDOG32 without forcing a reset first, `enableUpdate` must be set to true in the configuration.

Example:

```

wdog32_config_t config;
WDOG32_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
config.enableUpdate = true;
WDOG32_Init(wdog_base,&config);

```

Note: If there is errata ERR010536 (FSL_FEATURE_WDOG_HAS_ERRATA_010536 defined as 1), then after calling this function, user need delay at least 4 LPO clock cycles before accessing other WDOG32 registers.

Parameters

- base – WDOG32 peripheral base address.
- config – The configuration of the WDOG32.

Return values

- kStatus_Success – The initialization was successful
- kStatus_Timeout – The initialization timed out

status_t WDOG32_Deinit(WDOG_Type *base)

De-initializes the WDOG32 module.

This function shuts down the WDOG32. Ensure that the WDOG_CS.UPDATE is 1, which means that the register update is enabled.

Parameters

- base – WDOG32 peripheral base address.

Return values

- kStatus_Success – The de-initialization was successful
- kStatus_Timeout – The de-initialization timed out

status_t WDOG32_Unlock(WDOG_Type *base)

Unlocks the WDOG32 register written.

This function unlocks the WDOG32 register written.

Before starting the unlock sequence and following the configuration, disable the global interrupts. Otherwise, an interrupt could effectively invalidate the unlock sequence and the WCT may expire. After the configuration finishes, re-enable the global interrupts.

Parameters

- base – WDOG32 peripheral base address

Return values

- kStatus_Success – The unlock sequence was successful
- kStatus_Timeout – The unlock sequence timed out

void WDOG32_Enable(WDOG_Type *base)

Enables the WDOG32 module.

This function writes a value into the WDOG_CS register to enable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.

void WDOG32_Disable(WDOG_Type *base)

Disables the WDOG32 module.

This function writes a value into the WDOG_CS register to disable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address

void WDOG32_EnableInterrupts(WDOG_Type *base, uint32_t mask)

Enables the WDOG32 interrupt.

This function writes a value into the WDOG_CS register to enable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- mask – The interrupts to enable. The parameter can be a combination of the following source if defined:
 - kWDOG32_InterruptEnable

void WDOG32_DisableInterrupts(WDOG_Type *base, uint32_t mask)

Disables the WDOG32 interrupt.

This function writes a value into the WDOG_CS register to disable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- mask – The interrupts to disabled. The parameter can be a combination of the following source if defined:
 - kWDOG32_InterruptEnable

static inline uint32_t WDOG32_GetStatusFlags(WDOG_Type *base)

Gets the WDOG32 all status flags.

This function gets all status flags.

Example to get the running flag:

```
uint32_t status;  
status = WDOG32_GetStatusFlags(wdog_base) & kWDOG32_RunningFlag;
```

See also:

`_wdog32_status_flags_t`

- true: related status flag has been set.
- false: related status flag is not set.

Parameters

- base – WDOG32 peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

```
void WDOG32_ClearStatusFlags(WDOG_Type *base, uint32_t mask)
```

Clears the WDOG32 flag.

This function clears the WDOG32 status flag.

Example to clear an interrupt flag:

```
WDOG32_ClearStatusFlags(wdog_base, kWDOG32_InterruptFlag);
```

Parameters

- base – WDOG32 peripheral base address.
- mask – The status flags to clear. The parameter can be any combination of the following values:
 - kWDOG32_InterruptFlag

```
void WDOG32_SetTimeoutValue(WDOG_Type *base, uint16_t timeoutCount)
```

Sets the WDOG32 timeout value.

This function writes a timeout value into the WDOG_TOVAL register. The WDOG_TOVAL register is a write-once register. To ensure the reconfiguration fits the timing of WCT, unlock function will be called inline.

Parameters

- base – WDOG32 peripheral base address
- timeoutCount – WDOG32 timeout value, count of WDOG32 clock ticks.

```
void WDOG32_SetWindowValue(WDOG_Type *base, uint16_t windowValue)
```

Sets the WDOG32 window value.

This function writes a window value into the WDOG_WIN register. The WDOG_WIN register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- windowValue – WDOG32 window value.

```
static inline void WDOG32_Refresh(WDOG_Type *base)
```

Refreshes the WDOG32 timer.

This function feeds the WDOG32. This function should be called before the Watchdog timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WDOG32 peripheral base address

```
static inline uint16_t WDOG32_GetCounterValue(WDOG_Type *base)
```

Gets the WDOG32 counter value.

This function gets the WDOG32 counter value.

Parameters

- base – WDOG32 peripheral base address.

Returns

Current WDOG32 counter value.

WDOG_FIRST_WORD_OF_UNLOCK

First word of unlock sequence

WDOG_SECOND_WORD_OF_UNLOCK

Second word of unlock sequence

WDOG_FIRST_WORD_OF_REFRESH

First word of refresh sequence

WDOG_SECOND_WORD_OF_REFRESH

Second word of refresh sequence

FSL_WDOG32_DRIVER_VERSION

WDOG32 driver version.

enum `_wdog32_clock_source`

Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

Values:

enumerator `kWDOG32_ClockSource0`

Clock source 0

enumerator `kWDOG32_ClockSource1`

Clock source 1

enumerator `kWDOG32_ClockSource2`

Clock source 2

enumerator `kWDOG32_ClockSource3`

Clock source 3

enum `_wdog32_clock_prescaler`

Describes the selection of the clock prescaler.

Values:

enumerator `kWDOG32_ClockPrescalerDivide1`

Divided by 1

enumerator `kWDOG32_ClockPrescalerDivide256`

Divided by 256

enum `_wdog32_test_mode`

Describes WDOG32 test mode.

Values:

enumerator `kWDOG32_TestModeDisabled`

Test Mode disabled

enumerator `kWDOG32_UserModeEnabled`

User Mode enabled

enumerator kWDOG32_LowByteTest
Test Mode enabled, only low byte is used

enumerator kWDOG32_HighByteTest
Test Mode enabled, only high byte is used

enum `_wdog32_interrupt_enable_t`

WDOG32 interrupt configuration structure.

This structure contains the settings for all of the WDOG32 interrupt configurations.

Values:

enumerator kWDOG32_InterruptEnable
Interrupt is generated before forcing a reset

enum `_wdog32_status_flags_t`

WDOG32 status flags.

This structure contains the WDOG32 status flags for use in the WDOG32 functions.

Values:

enumerator kWDOG32_RunningFlag
Running flag, set when WDOG32 is enabled

enumerator kWDOG32_InterruptFlag
Interrupt flag, set when interrupt occurs

typedef enum `_wdog32_clock_source` `wdog32_clock_source_t`

Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

typedef enum `_wdog32_clock_prescaler` `wdog32_clock_prescaler_t`

Describes the selection of the clock prescaler.

typedef struct `_wdog32_work_mode` `wdog32_work_mode_t`

Defines WDOG32 work mode.

typedef enum `_wdog32_test_mode` `wdog32_test_mode_t`

Describes WDOG32 test mode.

typedef struct `_wdog32_config` `wdog32_config_t`

Describes WDOG32 configuration structure.

struct `_wdog32_work_mode`

`#include <fsl_wdog32.h>` Defines WDOG32 work mode.

Public Members

bool `enableWait`
Enables or disables WDOG32 in wait mode

bool `enableStop`
Enables or disables WDOG32 in stop mode

`bool enableDebug`
Enables or disables WDOG32 in debug mode

`struct __wdog32_config`
#include <fsl_wdog32.h> Describes WDOG32 configuration structure.

Public Members

`bool enableWdog32`
Enables or disables WDOG32

`wdog32_clock_source_t clockSource`
Clock source select

`wdog32_clock_prescaler_t prescaler`
Clock prescaler value

`wdog32_work_mode_t workMode`
Configures WDOG32 work mode in debug stop and wait mode

`wdog32_test_mode_t testMode`
Configures WDOG32 test mode

`bool enableUpdate`
Update write-once register enable

`bool enableInterrupt`
Enables or disables WDOG32 interrupt

`bool enableWindowMode`
Enables or disables WDOG32 window mode

`uint16_t windowValue`
Window value

`uint16_t timeoutValue`
Timeout value

2.79 XRDC: Extended Resource Domain Controller

`void XRDC_GetHardwareConfig(XRDC_Type *base, xrdc_hardware_config_t *config)`
Gets the XRDC hardware configuration.

This function gets the XRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- `base` – XRDC peripheral base address.
- `config` – Pointer to the structure to get the configuration.

`static inline void XRDC_LockGlobalControl(XRDC_Type *base)`
Locks the XRDC global control register `XRDC_CR`.

This function locks the `XRDC_CR` register. After it is locked, the register is read-only until the next reset.

Parameters

- `base` – XRDC peripheral base address.

```
static inline void XRDC_SetGlobalValid(XRDC_Type *base, bool valid)
```

Sets the XRDC global valid.

This function sets the XRDC global valid or invalid. When the XRDC is global invalid, all accesses from all bus masters to all slaves are allowed.

Parameters

- base – XRDC peripheral base address.
- valid – True to valid XRDC.

```
static inline uint8_t XRDC_GetCurrentMasterDomainId(XRDC_Type *base)
```

Gets the domain ID of the current bus master.

This function returns the domain ID of the current bus master.

Parameters

- base – XRDC peripheral base address.

Returns

Domain ID of current bus master.

```
status_t XRDC_GetAndClearFirstDomainError(XRDC_Type *base, xrdc_error_t *error)
```

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – XRDC peripheral base address.
- error – Pointer to the error information.

Returns

If the access violation is captured, this function returns the `kStatus_Success`. The error information can be obtained from the parameter `error`. If no access violation is captured, this function returns the `kStatus_XRDC_NoError`.

```
status_t XRDC_GetAndClearFirstSpecificDomainError(XRDC_Type *base, xrdc_error_t *error,
                                                    uint8_t domainId)
```

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – XRDC peripheral base address.
- error – Pointer to the error information.
- domainId – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the `kStatus_Success`. The error information can be obtained from the parameter `error`. If no access violation is captured, this function returns the `kStatus_XRDC_NoError`.

```
void XRDC_GetPidDefaultConfig(xrdc_pid_config_t *config)
```

Gets the default PID configuration structure.

This function initializes the configuration structure to default values. The default values are:

```

config->pid      = 0U;
config->tsmEnable = 0U;
config->sp4smEnable = 0U;
config->lockMode = kXRDC_PidLockSecurePrivilegeWritable;

```

Parameters

- config – Pointer to the configuration structure.

```
void XRDC_SetPidConfig(XRDC_Type *base, xrdc_master_t master, const xrdc_pid_config_t *config)
```

Configures the PID for a specific bus master.

This function configures the PID for a specific bus master. Do not use this function for non-processor bus masters.

Parameters

- base – XRDC peripheral base address.
- master – Which bus master to configure.
- config – Pointer to the configuration structure.

```
static inline void XRDC_SetPidLockMode(XRDC_Type *base, xrdc_master_t master, xrdc_pid_lock_t lockMode)
```

Sets the PID configuration register lock mode.

This function sets the PID configuration register lock XRDC_PIDn[LK2].

Parameters

- base – XRDC peripheral base address.
- master – Which master's PID to lock.
- lockMode – Lock mode to set.

```
void XRDC_GetDefaultNonProcessorDomainAssignment(xrdc_non_processor_domain_assignment_t *domainAssignment)
```

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```

assignment->domainId      = 0U;
assignment->privilegeAttr  = kXRDC_ForceUser;
assignment->privilegeAttr  = kXRDC_ForceSecure;
assignment->bypassDomainId = 0U;
assignment->blogicPartId   = 0U;
assignment->benableLogicPartId = 0U;
assignment->lock           = 0U;

```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void XRDC_GetDefaultProcessorDomainAssignment(xrdc_processor_domain_assignment_t *domainAssignment)
```

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:

```

assignment->domainId      = 0U;
assignment->domainIdSelect = kXRDC_DidMda;
assignment->dpidEnable    = kXRDC_PidDisable;
assignment->pidMask       = 0U;
assignment->pid           = 0U;
assignment->logicPartId   = 0U;
assignment->enableLogicPartId = 0U;
assignment->lock          = 0U;

```

Parameters

- domainAssignment – Pointer to the assignment structure.

```

void XRDC_SetNonProcessorDomainAssignment(XRDC_Type *base, xrdc_master_t master, uint8_t
                                         assignIndex, const
                                         xrdc_non_processor_domain_assignment_t
                                         *domainAssignment)

```

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```

xrdc_non_processor_domain_assignment_t nonProcessorAssignment;

XRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx     = xxx;

XRDC_SetMasterDomainAssignment(XRDC, kXrdcMasterDma0, 0U, &nonProcessorAssignment);

```

Parameters

- base – XRDC peripheral base address.
- master – Which master to configure.
- assignIndex – Which assignment register to set.
- domainAssignment – Pointer to the assignment structure.

```

void XRDC_SetProcessorDomainAssignment(XRDC_Type *base, xrdc_master_t master, uint8_t
                                       assignIndex, const
                                       xrdc_processor_domain_assignment_t
                                       *domainAssignment)

```

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for core 0. In this example, there are 3 assignment registers for core 0.

```

xrdc_processor_domain_assignment_t processorAssignment;

XRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 1;
processorAssignment.xxx     = xxx;
XRDC_SetMasterDomainAssignment(XRDC, kXrdcMasterCpu0, 0U, &processorAssignment);

```

(continues on next page)

(continued from previous page)

```

processorAssignment.domainId = 2;
processorAssignment.xxx      = xxx;
XRDC_SetMasterDomainAssignment(XRDC, kXrdcMasterCpu0, 1U, &processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
XRDC_SetMasterDomainAssignment(XRDC, kXrdcMasterCpu0, 2U, &processorAssignment);

```

Parameters

- base – XRDC peripheral base address.
- master – Which master to configure.
- assignIndex – Which assignment register to set.
- domainAssignment – Pointer to the assignment structure.

```
static inline void XRDC_LockMasterDomainAssignment(XRDC_Type *base, xrdc_master_t master,
                                                  uint8_t assignIndex)
```

Locks the bus master domain assignment register.

This function locks the master domain assignment. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to lock. After it is locked, the register can't be changed until next reset.

Parameters

- base – XRDC peripheral base address.
- master – Which master to configure.
- assignIndex – Which assignment register to lock.

```
static inline void XRDC_SetMasterDomainAssignmentValid(XRDC_Type *base, xrdc_master_t
                                                      master, uint8_t assignIndex, bool
                                                      valid)
```

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to configure.

Parameters

- base – XRDC peripheral base address.
- master – Which master to configure.
- assignIndex – Index for the domain assignment register.
- valid – True to set valid, false to set invalid.

```
void XRDC_GetMemAccessDefaultConfig(xrdc_mem_access_config_t *config)
```

Gets the default memory region access policy.

This function gets the default memory region access policy. It sets the policy as follows:

```

config->enableSema      = false;
config->semaNum         = 0U;
config->subRegionDisableMask = 0U;
config->size            = kXrdcMemSizeNone;
config->lockMode        = kXRDC_AccessConfigLockWritable;
config->baseAddress     = 0U;
config->policy[0]      = kXRDC_AccessPolicyNone;

```

(continues on next page)

(continued from previous page)

```
config->policy[1]      = kXRDC_AccessPolicyNone;
...
config->policy[15]     = kXRDC_AccessPolicyNone;
```

Parameters

- config – Pointer to the configuration structure.

```
void XRDC_SetMemAccessConfig(XRDC_Type *base, const xrdc_mem_access_config_t *config)
```

Sets the memory region access policy.

This function sets the memory region access configuration as valid. There are two methods to use it:

Example 1: Set one configuration run time. Set memory region 0x20000000 ~ 0x20000400 accessible by domain 0, use MRC0_1.

```
xrdc_mem_access_config_t config =
{
    .mem      = kXRDC_MemMrc0_1,
    .baseAddress = 0x20000000U,
    .size     = kXRDC_MemSize1K,
    .policy[0] = kXRDC_AccessPolicyAll
};
XRDC_SetMemAccessConfig(XRDC, &config);
```

Example 2: Set multiple configurations during startup. Set memory region 0x20000000 ~ 0x20000400 accessible by domain 0, use MRC0_1. Set memory region 0x1FFF0000 ~ 0x1FFF0800 accessible by domain 0, use MRC0_2.

```
xrdc_mem_access_config_t configs[] =
{
    {
        .mem      = kXRDC_MemMrc0_1,
        .baseAddress = 0x20000000U,
        .size     = kXRDC_MemSize1K,
        .policy[0] = kXRDC_AccessPolicyAll
    },
    {
        .mem      = kXRDC_MemMrc0_2,
        .baseAddress = 0x1FFF0000U,
        .size     = kXRDC_MemSize2K,
        .policy[0] = kXRDC_AccessPolicyAll
    }
};

for (i=0U; i<((sizeof(configs)/sizeof(configs[0]))); i++)
{
    XRDC_SetMemAccessConfig(XRDC, &configs[i]);
}
```

Parameters

- base – XRDC peripheral base address.
- config – Pointer to the access policy configuration structure.

```
static inline void XRDC_SetMemAccessLockMode(XRDC_Type *base, xrdc_mem_t mem,
                                             xrdc_access_config_lock_t lockMode)
```

Sets the memory region descriptor register lock mode.

Parameters

- base – XRDC peripheral base address.
- mem – Which memory region descriptor to lock.
- lockMode – The lock mode to set.

`static inline void XRDC_SetMemAccessValid(XRDC_Type *base, xrdc_mem_t mem, bool valid)`
Sets the memory region descriptor as valid or invalid.

This function sets the memory region access configuration dynamically. For example:

```
xrdc_mem_access_config_t config =
{
    .mem      = kXRDC_MemMrc0_1,
    .baseAddress = 0x20000000U,
    .size     = kXRDC_MemSize1K,
    .policy[0] = kXRDC_AccessPolicyAll
};
XRDC_SetMemAccessConfig(XRDC, &config);

XRDC_SetMemAccessValid(kXRDC_MemMrc0_1, false);

XRDC_SetMemAccessValid(kXRDC_MemMrc0_1, true);
```

Parameters

- base – XRDC peripheral base address.
- mem – Which memory region descriptor to set.
- valid – True to set valid, false to set invalid.

`void XRDC_SetMemExclAccessLockMode(XRDC_Type *base, xrdc_mem_t mem, xrdc_excl_access_lock_config_t lockMode)`

Sets the memory region exclusive access lock mode configuration.

Note: Any write to MRGD_W[0-3]_n clears the MRGD_W4_n[VLD] indicator so a coherent register state can be supported. It is indispensable to re-assert the valid bit when dynamically changing the EAL in the MRGD, which is done in this API.

Parameters

- base – XRDC peripheral base address.
- mem – Which memory region's exclusive access lock mode to configure.
- lockMode – The exclusive access lock mode to set.

`void XRDC_ForceMemExclAccessLockRelease(XRDC_Type *base, xrdc_mem_t mem)`

Forces the release of the memory region exclusive access lock.

A lock can be forced to the available state (EAL=10) by a domain that does not own the lock through the forced lock release procedure: The procedure to force a exclusive access lock release is as follows:

- a. Write 0x02000046 to W1 register (PAC/MSD) or W3 register (MRC)
- b. Write 0x02000052 to W1 register (PAC/MSD) or W3 register (MRC)

Note: The two writes must be consecutive, any intervening write to the register resets the sequence.

Parameters

- base – XRDC peripheral base address.
- mem – Which memory region's exclusive access lock to force release.

```
static inline uint8_t XRDC_GetMemExclAccessLockDomainOwner(XRDC_Type *base, xrdc_mem_t mem)
```

Gets the exclusive access lock domain owner of the memory region.

This function returns the domain ID of the exclusive access lock owner of the memory region.

Parameters

- base – XRDC peripheral base address.
- mem – Which memory region's exclusive access lock domain owner to get.

Returns

Domain ID of the memory region exclusive access lock owner.

```
void XRDC_SetMemAccsetLock(XRDC_Type *base, xrdc_mem_t mem, xrdc_mem_accset_t accset, bool lock)
```

Sets the memory region ACCSET (programmable access flags) lock.

Parameters

- base – XRDC peripheral base address.
- mem – Which memory region descriptor to lock.
- accset – Which set/index of ACCSET to lock.
- lock – True to set lock, false to set unlock.

```
void XRDC_GetPeriphAccessDefaultConfig(xrdc_periph_access_config_t *config)
```

Gets the default peripheral access configuration.

The default configuration is set as follows:

```
config->enableSema    = false;
config->semaNum       = 0U;
config->lockMode      = kXRDC_AccessConfigLockWritable;
config->policy[0]     = kXRDC_AccessPolicyNone;
config->policy[1]     = kXRDC_AccessPolicyNone;
...
config->policy[15]    = kXRDC_AccessPolicyNone;
```

Parameters

- config – Pointer to the configuration structure.

```
void XRDC_SetPeriphAccessConfig(XRDC_Type *base, const xrdc_periph_access_config_t *config)
```

Sets the peripheral access configuration.

This function sets the peripheral access configuration as valid. Two methods to use it:
Method 1: Set for one peripheral, which is used for runtime settings. Example: set LPTMR0 accessible by domain 0

```
xrdc_periph_access_config_t config;

config.periph = kXRDC_PeriphLptmr0;
config.policy[0] = kXRDC_AccessPolicyAll;
XRDC_SetPeriphAccessConfig(XRDC, &config);
```

Method 2: Set for multiple peripherals, which is used for initialization settings.

```
xrdc_periph_access_config_t configs[] =
{
    {
        .periph = kXRDC_PeriphLptmr0,
```

(continues on next page)

(continued from previous page)

```

    .policy[0] = kXRDC_AccessPolicyAll,
    .policy[1] = kXRDC_AccessPolicyAll
  },
  {
    .periph = kXRDC_PeriphLpuart0,
    .policy[0] = kXRDC_AccessPolicyAll,
    .policy[1] = kXRDC_AccessPolicyAll
  }
};

for (i=0U; i<(sizeof(configs)/sizeof(configs[0])), i++)
{
  XRDC_SetPeriphAccessConfig(XRDC, &config[i]);
}

```

Parameters

- base – XRDC peripheral base address.
- config – Pointer to the configuration structure.

```
static inline void XRDC_SetPeriphAccessLockMode(XRDC_Type *base, xrdc_periph_t periph,
                                               xrdc_access_config_lock_t lockMode)
```

Sets the peripheral access configuration register lock mode.

Parameters

- base – XRDC peripheral base address.
- periph – Which peripheral access configuration register to lock.
- lockMode – The lock mode to set.

```
static inline void XRDC_SetPeriphAccessValid(XRDC_Type *base, xrdc_periph_t periph, bool
                                             valid)
```

Sets the peripheral access as valid or invalid.

This function sets the peripheral access configuration dynamically. For example:

```

xrdc_periph_access_config_t config =
{
  .periph = kXRDC_PeriphLptmr0;
  .policy[0] = kXRDC_AccessPolicyAll;
};
XRDC_SetPeriphAccessConfig(XRDC, &config);

XRDC_SetPeriphAccessValid(kXrdcPeriLptmr0, false);

XRDC_SetPeriphAccessValid(kXrdcPeriLptmr0, true);

```

Parameters

- base – XRDC peripheral base address.
- periph – Which peripheral access configuration to set.
- valid – True to set valid, false to set invalid.

```
static inline void XRDC_SetPeriphExclAccessLockMode(XRDC_Type *base, xrdc_periph_t periph,
                                                    xrdc_excl_access_lock_config_t
                                                    lockMode)
```

Sets the peripheral exclusive access lock mode configuration.

Parameters

- base – XRDC peripheral base address.
- periph – Which peripheral's exclusive access lock mode to configure.
- lockMode – The exclusive access lock mode to set.

```
void XRDC_ForcePeriphExclAccessLockRelease(XRDC_Type *base, xrdc_periph_t periph)
```

Forces the release of the peripheral exclusive access lock.

A lock can be forced to the available state (EAL=10) by a domain that does not own the lock through the forced lock release procedure: The procedure to force a exclusive access lock release is as follows:

- Write 0x02000046 to W1 register (PAC/MS) or W3 register (MRC)
- Write 0x02000052 to W1 register (PAC/MS) or W3 register (MRC)

Note: The two writes must be consecutive, any intervening write to the register resets the sequence.

Parameters

- base – XRDC peripheral base address.
- periph – Which peripheral's exclusive access lock to force release.

```
static inline uint8_t XRDC_GetPeriphExclAccessLockDomainOwner(XRDC_Type *base,
                                                             xrdc_periph_t periph)
```

Gets the exclusive access lock domain owner of the peripheral.

This function returns the domain ID of the exclusive access lock owner of the peripheral.

Parameters

- base – XRDC peripheral base address.
- periph – Which peripheral's exclusive access lock domain owner to get.

Returns

Domain ID of the peripheral exclusive access lock owner.

XRDC status `_xrdc_status`.

Values:

enumerator `kStatus_XRDC_NoError`

No error captured.

```
enum _xrdc_pid_enable
```

XRDC PID enable mode, the register bit `XRDC_MDA_Wx[PE]`, used for domain hit evaluation.

Values:

enumerator `kXRDC_PidDisable`

PID is not used in domain hit evaluation.

enumerator `kXRDC_PidDisable1`

PID is not used in domain hit evaluation.

enumerator `kXRDC_PidExp0`

$((XRDC_MDA_W[PID] \ \& \ \sim XRDC_MDA_W[PIDM]) \ == \ (XRDC_PID[PID] \ \& \ \sim XRDC_MDA_W[PIDM]))$.

enumerator `kXRDC_PidExp1`

$\sim((XRDC_MDA_W[PID] \ \& \ \sim XRDC_MDA_W[PIDM]) \ == \ (XRDC_PID[PID] \ \& \ \sim XRDC_MDA_W[PIDM]))$.

enum `_xrdc_did_sel`

XRDC domain ID select method, the register bit `XRDC_MDA_Wx[DIDS]`, used for domain hit evaluation.

Values:

enumerator `kXRDC_DidMda`

Use `MDAn[3:0]` as DID.

enumerator `kXRDC_DidInput`

Use the input DID (`DID_in`) as DID.

enumerator `kXRDC_DidMdaAndInput`

Use `MDAn[3:2]` concatenated with `DID_in[1:0]` as DID.

enumerator `kXRDC_DidReserved`

Reserved.

enum `_xrdc_secure_attr`

XRDC secure attribute, the register bit `XRDC_MDA_Wx[SA]`, used for non-processor bus master domain assignment.

Values:

enumerator `kXRDC_ForceSecure`

Force the bus attribute for this master to secure.

enumerator `kXRDC_ForceNonSecure`

Force the bus attribute for this master to non-secure.

enumerator `kXRDC_MasterSecure`

Use the bus master's secure/nonsecure attribute directly.

enumerator `kXRDC_MasterSecure1`

Use the bus master's secure/nonsecure attribute directly.

enum `_xrdc_privilege_attr`

XRDC privileged attribute, the register bit `XRDC_MDA_Wx[PA]`, used for non-processor bus master domain assignment.

Values:

enumerator `kXRDC_ForceUser`

Force the bus attribute for this master to user.

enumerator `kXRDC_ForcePrivilege`

Force the bus attribute for this master to privileged.

enumerator `kXRDC_MasterPrivilege`

Use the bus master's attribute directly.

enumerator `kXRDC_MasterPrivilege1`

Use the bus master's attribute directly.

enum `_xrdc_pid_lock`

XRDC PID LK2 definition `XRDC_PIDn[LK2]`.

Values:

enumerator `kXRDC_PidLockSecurePrivilegeWritable`

Writable by any secure privileged write.

enumerator `kXRDC_PidLockSecurePrivilegeWritable1`

Writable by any secure privileged write.

enumerator kXRDC_PidLockMasterXOnly
 PIDx is only writable by master x.

enumerator kXRDC_PidLockLocked
 Read-only until the next reset.

enum `_xrdc_access_policy`
 XRDC domain access control policy.

Values:

enumerator kXRDC_AccessPolicyNone

enumerator kXRDC_AccessPolicySpuR

enumerator kXRDC_AccessPolicySpRw

enumerator kXRDC_AccessPolicySpuRw

enumerator kXRDC_AccessPolicySpuRwNpR

enumerator kXRDC_AccessPolicySpuRwNpuR

enumerator kXRDC_AccessPolicySpuRwNpRw

enumerator kXRDC_AccessPolicyAll

enum `_xrdc_access_config_lock`
 Access configuration lock mode, the register field PDAC and MRGD LK2.

Values:

enumerator kXRDC_AccessConfigLockWritable
 Entire PDACn/MRGDn can be written.

enumerator kXRDC_AccessConfigLockWritable1
 Entire PDACn/MRGDn can be written.

enumerator kXRDC_AccessConfigLockDomainXOnly
 Domain x only write the DxACP field.

enumerator kXRDC_AccessConfigLockLocked
 PDACn is read-only until the next reset.

enum `_xrdc_excl_access_lock_config`
 Exclusive access lock mode configuration, the register field PDAC and MRGD EAL.

Values:

enumerator kXRDC_ExclAccessLockDisabled
 Lock disabled.

enumerator kXRDC_ExclAccessLockDisabledUntilNextRst
 Lock disabled until next reset.

enumerator kXRDC_ExclAccessLockEnabledStateAvail
 Lock enabled, lock state = available.

enumerator kXRDC_ExclAccessLockEnabledStateNotAvail
 Lock enabled, lock state = not available.

enum `_xrdc_mem_accset`
 XRDC memory ACCSET (SET of programmable access flags).

Values:

enumerator kXRDC_MemAccset1

Memory region SET 1 of programmable access flags.

enumerator kXRDC_MemAccset2

Memory region SET 2 of programmable access flags.

enum _xrdc_mem_code_region

XRDC memory code region indicator.

Values:

enumerator kXRDC_MemCodeRegion0

Code region indicator 0=data.

enumerator kXRDC_MemCodeRegion1

Code region indicator 1=code.

enum _xrdc_access_flags_select

XRDC domain access flags/policy select.

Policy: {R,W,X} Read, write, execute flags. flag = 0 : inhibits access, flag = 1 : allows access. policy => SecurePriv_NonSecurePriv_SecureUser_NonSecureUsr xxx_xxx_xxx_xxx => PS{R,W,X}_PN{R,W,X}_US{R,W,X}_UN{R,W,X}

PS > PN > US > UN

PS > PN > US > UN

DxSEL CodeRegion = 0 CodeRegion = 1 000 000_000_000_000 = 0x000 000_000_000_000 = 0x000 001 ACCSET1 010 ACCSET2 011 110_000_000_000 = 0xC00 001_001_001_001 = 0x249 100 110_110_000_000 = 0xD80 111_000_000_000 = 0xE00 101 110_110_100_100 = 0xDA4 110_111_000_000 = 0xDC0 110 110_110_110_000 = 0xDB0 110_110_111_000 = 0xDB8 111 110_110_110_110 = 0xDB6 110_110_111_111 = 0DBF

Values:

enumerator kXRDC_AccessFlagsNone

enumerator kXRDC_AccessFlagsAlt1

enumerator kXRDC_AccessFlagsAlt2

enumerator kXRDC_AccessFlagsAlt3

enumerator kXRDC_AccessFlagsAlt4

enumerator kXRDC_AccessFlagsAlt5

enumerator kXRDC_AccessFlagsAlt6

enumerator kXRDC_AccessFlagsAlt7

enum _xrdc_controller

XRDC controller definition for domain error check.

Values:

enumerator kXRDC_MemController0

Memory region controller 0.

enumerator kXRDC_MemController1

Memory region controller 1.

enumerator kXRDC_MemController2

Memory region controller 2.

enumerator kXRDC_MemController3
Memory region controller 3.

enumerator kXRDC_MemController4
Memory region controller 4.

enumerator kXRDC_MemController5
Memory region controller 5.

enumerator kXRDC_MemController6
Memory region controller 6.

enumerator kXRDC_MemController7
Memory region controller 7.

enumerator kXRDC_MemController8
Memory region controller 8.

enumerator kXRDC_MemController9
Memory region controller 9.

enumerator kXRDC_MemController10
Memory region controller 10.

enumerator kXRDC_MemController11
Memory region controller 11.

enumerator kXRDC_MemController12
Memory region controller 12.

enumerator kXRDC_MemController13
Memory region controller 13.

enumerator kXRDC_MemController14
Memory region controller 14.

enumerator kXRDC_MemController15
Memory region controller 15.

enumerator kXRDC_PeriphController0
Peripheral access controller 0.

enumerator kXRDC_PeriphController1
Peripheral access controller 1.

enumerator kXRDC_PeriphController2
Peripheral access controller 2.

enumerator kXRDC_PeriphController3
Peripheral access controller 3.

enum `_xrdc_error_state`

XRDC domain error state definition `XRDC_DERR_W1_n[EST]`.

Values:

enumerator `kXRDC_ErrorStateNone`
No access violation detected.

enumerator `kXRDC_ErrorStateNone1`
No access violation detected.

enumerator kXRDC_ErrorStateSingle
Single access violation detected.

enumerator kXRDC_ErrorStateMulti
Multiple access violation detected.

enum `_xrdc_error_attr`

XRDC domain error attribute definition `XRDC_DERR_W1_n[EATR]`.

Values:

enumerator kXRDC_ErrorSecureUserInst
Secure user mode, instruction fetch access.

enumerator kXRDC_ErrorSecureUserData
Secure user mode, data access.

enumerator kXRDC_ErrorSecurePrivilegeInst
Secure privileged mode, instruction fetch access.

enumerator kXRDC_ErrorSecurePrivilegeData
Secure privileged mode, data access.

enumerator kXRDC_ErrorNonSecureUserInst
NonSecure user mode, instruction fetch access.

enumerator kXRDC_ErrorNonSecureUserData
NonSecure user mode, data access.

enumerator kXRDC_ErrorNonSecurePrivilegeInst
NonSecure privileged mode, instruction fetch access.

enumerator kXRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum `_xrdc_error_type`

XRDC domain error access type definition `XRDC_DERR_W1_n[ERW]`.

Values:

enumerator kXRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kXRDC_ErrorTypeWrite
Error occurs on write reference.

typedef struct `_xrdc_hardware_config` `xrdc_hardware_config_t`
XRDC hardware configuration.

typedef enum `_xrdc_pid_enable` `xrdc_pid_enable_t`
XRDC PID enable mode, the register bit `XRDC_MDA_Wx[PE]`, used for domain hit evaluation.

typedef enum `_xrdc_did_sel` `xrdc_did_sel_t`
XRDC domain ID select method, the register bit `XRDC_MDA_Wx[DIDS]`, used for domain hit evaluation.

typedef enum `_xrdc_secure_attr` `xrdc_secure_attr_t`
XRDC secure attribute, the register bit `XRDC_MDA_Wx[SA]`, used for non-processor bus master domain assignment.

typedef enum `_xrdc_privilege_attr` `xrdc_privilege_attr_t`
XRDC privileged attribute, the register bit `XRDC_MDA_Wx[PA]`, used for non-processor bus master domain assignment.

```
typedef struct _xrdc_processor_domain_assignment xrdc_processor_domain_assignment_t
    Domain assignment for the processor bus master.
```

```
typedef struct _xrdc_non_processor_domain_assignment
xrdc_non_processor_domain_assignment_t
    Domain assignment for the non-processor bus master.
```

```
typedef enum _xrdc_pid_lock xrdc_pid_lock_t
    XRDC PID LK2 definition XRDC_PIDn[LK2].
```

```
typedef struct _xrdc_pid_config xrdc_pid_config_t
    XRDC process identifier (PID) configuration.
```

```
typedef enum _xrdc_access_policy xrdc_access_policy_t
    XRDC domain access control policy.
```

```
typedef enum _xrdc_access_config_lock xrdc_access_config_lock_t
    Access configuration lock mode, the register field PDAC and MRGD LK2.
```

```
typedef enum _xrdc_excl_access_lock_config xrdc_excl_access_lock_config_t
    Exclusive access lock mode configuration, the register field PDAC and MRGD EAL.
```

```
typedef struct _xrdc_periph_access_config xrdc_periph_access_config_t
    XRDC peripheral domain access control configuration.
```

```
typedef enum _xrdc_mem_accset xrdc_mem_accset_t
    XRDC memory ACCSET (SET of programmable access flags).
```

```
typedef enum _xrdc_mem_code_region xrdc_mem_code_region_t
    XRDC memory code region indicator.
```

```
typedef enum _xrdc_access_flags_select xrdc_access_flags_select_t
    XRDC domain access flags/policy select.
```

Policy: {R,W,X} Read, write, execute flags. flag = 0 : inhibits access, flag = 1 : allows access. policy => SecurePriv_NonSecurePriv_SecureUser_NonSecureUsr xxx_xxx_xxx_xxx => PS{R,W,X}_PN{R,W,X}_US{R,W,X}_UN{R,W,X}

```
PS > PN > US > UN      PS > PN > US > UN
```

```
DxSEL CodeRegion = 0 CodeRegion = 1 000 000_000_000_000 = 0x000 000_000_000_000 =
0x000 001 ACCSET1 010 ACCSET2 011 110_000_000_000 = 0xC00 001_001_001_001 = 0x249
100 110_110_000_000 = 0xD80 111_000_000_000 = 0xE00 101 110_110_100_100 = 0xDA4
110_111_000_000 = 0xDC0 110 110_110_110_000 = 0xDB0 110_110_111_000 = 0xDB8 111
110_110_110_110 = 0xDB6 110_110_111_111 = 0DBF
```

```
typedef struct _xrdc_mem_access_config xrdc_mem_access_config_t
    XRDC memory region domain access control configuration.
```

```
typedef enum _xrdc_controller xrdc_controller_t
    XRDC controller definition for domain error check.
```

```
typedef enum _xrdc_error_state xrdc_error_state_t
    XRDC domain error state definition XRDC_DERR_W1_n[EST].
```

```
typedef enum _xrdc_error_attr xrdc_error_attr_t
    XRDC domain error attribute definition XRDC_DERR_W1_n[EATR].
```

```
typedef enum _xrdc_error_type xrdc_error_type_t
    XRDC domain error access type definition XRDC_DERR_W1_n[ERW].
```

```
typedef struct _xrdc_error xrdc_error_t
    XRDC domain error definition.
```

void XRDC_Init(XRDC_Type *base)

Initializes the XRDC module.

This function enables the XRDC clock.

Parameters

- base – XRDC peripheral base address.

void XRDC_Deinit(XRDC_Type *base)

De-initializes the XRDC module.

This function disables the XRDC clock.

Parameters

- base – XRDC peripheral base address.

FSL_XRDC_DRIVER_VERSION

struct _xrdc_hardware_config

#include <fsl_xrdc.h> XRDC hardware configuration.

Public Members

uint8_t masterNumber

Number of bus masters.

uint8_t domainNumber

Number of domains.

uint8_t pacNumber

Number of PACs.

uint8_t mrcNumber

Number of MRCs.

struct _xrdc_processor_domain_assignment

#include <fsl_xrdc.h> Domain assignment for the processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t domainIdSelect

Domain ID select method, see `xrdc_did_sel_t`.

uint32_t pidEnable

PId enable method, see `xrdc_pid_enable_t`.

uint32_t pidMask

PId mask.

uint32_t __pad0__

Reserved.

uint32_t pid

PId value.

uint32_t __pad1__

Reserved.

uint32_t __pad2__

Reserved.

uint32_t __pad3__

Reserved.

uint32_t __pad4__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad5__

Reserved.

struct _xrdc_non_processor_domain_assignment

#include <fsl_xrdc.h> Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t privilegeAttr

Privileged attribute, see `xrdc_privilege_attr_t`.

uint32_t secureAttr

Secure attribute, see `xrdc_secure_attr_t`.

uint32_t bypassDomainId

Bypass domain ID.

uint32_t __pad0__

Reserved.

uint32_t __pad1__

Reserved.

uint32_t __pad2__

Reserved.

uint32_t __pad3__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad4__

Reserved.

struct _xrdc_pid_config

#include <fsl_xrdc.h> XRDC process identifier (PID) configuration.

Public Members

uint32_t pid

PID value, PIDn[PID].

uint32_t __pad0__

Reserved.

uint32_t tsmEnable
Enable three-state model.

uint32_t lockMode
PIDn configuration lock mode, see `xrdc_pid_lock_t`.

uint32_t __pad1__
Reserved.

struct `_xrdc_periph_access_config`
#include <fsl_xrdc.h> XRDC peripheral domain access control configuration.

Public Members

`xrdc_periph_t` periph
Peripheral name.

`xrdc_access_config_lock_t` lockMode
PDACn lock configuration.

`xrdc_excl_access_lock_config_t` exclAccessLockMode
Exclusive access lock configuration.

`xrdc_access_policy_t` policy[1]
Access policy for each domain.

struct `_xrdc_mem_access_config`
#include <fsl_xrdc.h> XRDC memory region domain access control configuration.

Public Members

`xrdc_mem_t` mem
Memory region descriptor name.

bool enableAccset1Lock
Enable ACCSET1 access lock or not.

bool enableAccset2Lock
Enable ACCSET2 access lock or not.

uint16_t accset1
SET 1 of Programmable access flags. xxx_xxx_xxx_xxx =>
PS{R,W,X}_PN{R,W,X}_US{R,W,X}_UN{R,W,X}. flag = 0 : inhibits access, flag = 1 :
allows access.

uint16_t accset2
SET 2 of Programmable access flags. xxx_xxx_xxx_xxx =>
PS{R,W,X}_PN{R,W,X}_US{R,W,X}_UN{R,W,X}. flag = 0 : inhibits access, flag = 1 :
allows access.

`xrdc_access_config_lock_t` lockMode
MRGDn lock configuration.

`xrdc_access_flags_select_t` policy[1]
Access policy/flags select for each domain.

`xrdc_mem_code_region_t` codeRegion
Code region select. `xrdc_mem_code_region_t`.

`uint32_t` baseAddress
Memory region base/start address.

`uint32_t` endAddress
Memory region end address. The 5 LSB of end address is ignored and forced to 0x1F by hardware.

`xrdc_excl_access_lock_config_t` exclAccessLockMode
Exclusive access lock configuration.

`struct _xrdc_error`
#include <fsl_xrdc.h> XRDC domain error definition.

Public Members

`xrdc_controller_t` controller
Which controller captured access violation.

`uint32_t` address
Access address that generated access violation.

`xrdc_error_state_t` errorState
Error state.

`xrdc_error_attr_t` errorAttr
Error attribute.

`xrdc_error_type_t` errorType
Error type.

`uint8_t` errorPort
Error port.

`uint8_t` domainId
Domain ID.

Chapter 3

Middleware

3.1 File System

3.1.1 FatFs

MCUXpresso SDK : mcuxsdk-middleware-fatfs

Overview This repository is for FatFs middleware delivery and it contains the components officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository (mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [FatFs - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution Contributions are not currently accepted. Guidelines to contribute will be posted in the future.

Repo Specific Content This is MCUXpresso SDK fork of FatFs (FAT file system created by ChaN). Official documentation is available at <http://elm-chan.org/fsw/ff/>

MCUXpresso version is extending original content by following hardware specific porting layers:

- mmc_disk
- nand_disk
- ram_disk
- sd_disk
- sdspi_disk
- usb_disk

Changelog FatFs

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#)

[R0.15_rev0]

- Upgraded to version 0.15
- Applied patches from <http://elm-chan.org/fsw/ff/patches.html>

[R0.14b_rev1]

- Applied patches from <http://elm-chan.org/fsw/ff/patches.html>

[R0.14b_rev0]

- Upgraded to version 0.14b

[R0.14a_rev0]

- Upgraded to version 0.14a
- Applied patch ff14a_p1.diff and ff14a_p2.diff

[R0.14_rev0]

- Upgraded to version 0.14
- Applied patch ff14_p1.diff and ff14_p2.diff

[R0.13c_rev0]

- Upgraded to version 0.13c
- Applied patches ff_13c_p1.diff,ff_13c_p2.diff, ff_13c_p3.diff and ff_13c_p4.diff.

[R0.13b_rev0]

- Upgraded to version 0.13b

[R0.13a_rev0]

- Upgraded to version 0.13a. Added patch ff_13a_p1.diff.

[R0.12c_rev1]

- Add NAND disk support.

[R0.12c_rev0]

- Upgraded to version 0.12c and applied patches ff_12c_p1.diff and ff_12c_p2.diff.

[R0.12b_rev0]

- Upgraded to version 0.12b.

[R0.11a]

- Added glue functions for low-level drivers (SDHC, SDSPI, RAM, MMC). Modified diskio.c.
- Added RTOS wrappers to make FatFs thread safe. Modified syscall.c.
- Renamed ffconf.h to ffconf_template.h. Each application should contain its own ffconf.h.
- Included ffconf.h into diskio.c to enable the selection of physical disk from ffconf.h by macro definition.
- Conditional compilation of physical disk interfaces in diskio.c.

3.2 Motor Control

3.2.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called `FMSTR_TRANSPORT` with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The `mcuxsdk` folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)
- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer’s physical or virtual COM port. The typical transmission speed is 115200 bps.

- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pd_bdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER "middleware" driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.

- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.

- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory

block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
 - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
 - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
 - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
 - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- ***src/drivers/[sdk]/serial*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- ***src/drivers/[sdk]/can*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- ***src/drivers/[sdk]/network*** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
 - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR [0|1]
#define FMSTR_SHORT_INTR [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- FMSTR_SERIAL - serial communication protocol
- FMSTR_CAN - using CAN communication
- FMSTR_PDBDM - using packet-driven BDM communication
- FMSTR_NET - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as **FMSTR_SERIAL_DRV**. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_QUEUE_SIZE

```
#define FMSTR_COMM_QUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode. The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- FMSTR_CAN_MCUX_FLEXCAN - FlexCAN driver
- FMSTR_CAN_MCUX_MCAN - MCAN driver
- FMSTR_CAN_MCUX_MSCAN - msCAN driver
- FMSTR_CAN_MCUX_DSCFLEXCAN - DSC FlexCAN driver
- FMSTR_CAN_MCUX_DSCMSCAN - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetCanBaseAddress()` to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options

FMSTR_DISABLE

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options

FMSTR_USE_SCOPE

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options

FMSTR_USE_RECORDER

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.

Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.

Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature. Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options

FMSTR_USE_TSA

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial "character time" which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the `src/common/platforms/[your_platform]` folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the `freemaster_cfg.h` file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the `freemaster.h` file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the `freemaster_cfg.h` file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: `freemaster.h`
- Implementation: `freemaster_protocol.c`

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the *FMSTR_Poll* function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- *N* is equal to the length of the receive FIFO queue (configured by the *FMSTR_COMM_QUEUE_SIZE* macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see *Driver interrupt modes*), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(<i>m,n</i>)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(<i>m,n</i>)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(<i>name</i>)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()

FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)

/* Directory entry applies to all subsequent MEMFILE entries */
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()

```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when `FMSTR_USE_TSA_DYNAMIC` is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the `FMSTR_TsaAddVar` function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```
FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);
```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
 - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
 - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the `FMSTR_USE_TSA_DYNAMIC` configuration option and when the `FMSTR_SetUpTsaBuff` function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the `FMSTR_APPCMDRESULT_NOCMD` constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the `FMSTR_AppCmdAck` call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The `FMSTR_GetAppCmd` function does not report the commands for which a callback handler function exists. If the `FMSTR_GetAppCmd` function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns `FMSTR_APPCMDRESULT_NOCMD`.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR responseDataAddr, FMSTR_SIZE responseDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↳PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_XXX and FMSTR_PIPE_SIZE_XXX constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the *nGranularity* value equal to the *nLength* value, all data are considered as one chunk which is either written successfully as a whole or not at all. The *nGranularity* value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The *readGranularity* argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables.
-----------------------	--

By default, this is defined as *FM-STR_SIZE*.

<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors.
----------------------	---

By default, this is defined as *FM-STR_SIZE*.

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object.
---------------------	---

Generally, this is a pointer to a void type.

<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data.
-----------------------	--

Generally, this is an unsigned 8-bit or 16-bit type.

<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data.
-----------------------	---

This is used to store the data buffer sizes.

<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function.
----------------------	---------------------------------------

See [FM-STR_PipeOpen](#) for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FM-STR_U16</i>	Unsigned 16-bit integer.
<i>FM-STR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FM-STR_S16</i>	Signed 16-bit integer.
<i>FM-STR_S32</i>	Signed 32-bit integer.
<i>FM-STR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FM-STR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FM-STR_SIZES</i>	Data type holding a general size value, at least 8 bits wide.
<i>FM-STR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FM-STR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FM-STR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

3.3 MultiCore

3.3.1 Multicore SDK

Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

Multicore SDK (MCSDK) Release Notes

Overview These are the release notes for the NXP Multicore Software Development Kit (MCSDK) version 25.12.00.

This software package contains components for efficient work with multicore devices as well as for the multiprocessor communication.

What is new

- eRPC [CHANGELOG](#)
- RPMsg-Lite [CHANGELOG](#)
- MCMgr [CHANGELOG](#)
- Supported evaluation boards (multicore examples):
 - LPCXpresso55S69
 - FRDM-K32L3A6
 - MIMXRT1170-EVKB
 - MIMXRT1160-EVK
 - MIMXRT1180-EVK
 - MCX-N5XX-EVK
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - KW47-EVK
 - KW47-LOC
 - FRDM-MCXW72
 - MCX-W72-EVK
 - FRDM-IMXRT1186
- Supported evaluation boards (multiprocessor examples):
 - LPCXpresso55S36
 - FRDM-K22F
 - FRDM-K32L2B
 - MIMXRT685-EVK
 - MIMXRT1170-EVKB
 - MIMXRT1180
 - FRDM-MCXN236
 - FRDM-MCXC242
 - FRDM-MCXC444
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - FRDM-IMXRT1186

Development tools The Multicore SDK (MCSDK) was compiled and tested with development tools referred in: [Development tools](#)

Release contents This table describes the release contents. Not all MCUXpresso SDK packages contain the whole set of these components.

Deliverable	Location
Multicore SDK location <MCSDK_dir>	<MCUXpressoSDK_install_dir>/middleware/multicore/
Documentation	<MCSDK_dir>/mcuxsdk-doc/
Embedded Remote Procedure Call component	<MCSDK_dir>/erpc/
Multicore Manager component	<MCSDK_dir>/mcmgr/
RPMsg-Lite	<MCSDK_dir>/rpmsg_lite/
Multicore demo applications	<MCUXpressoSDK_install_dir>/examples/multicore_examples/
Multiprocessor demo applications	<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/

Multicore SDK release overview Together, the Multicore SDK (MCSDK) and the MCUXpresso SDK (SDK) form a framework for the development of software for NXP multicore devices. The MCSDK release consists of the following elementary software components for multicore:

- Embedded Remote Procedure Call (eRPC)
- Multicore Manager (MCMGR) - included just in SDK for multicore devices
- Remote Processor Messaging - Lite (RPMsg-Lite) - included just in SDK for multicore devices

The MCSDK is also accompanied with documentation and several multicore and multiprocessor demo applications.

Demo applications The multicore demo applications demonstrate the usage of the MCSDK software components on supported multicore development boards.

The following multicore demo applications are located together with other MCUXpresso SDK examples in

the <MCUXpressoSDK_install_dir>/examples/multicore_examples subdirectories.

- erpc_matrix_multiply_mu
- erpc_matrix_multiply_mu_rtos
- erpc_matrix_multiply_rpmsg
- erpc_matrix_multiply_rpmsg_rtos
- erpc_two_way_rpc_rpmsg_rtos
- freertos_message_buffers
- hello_world
- multicore_manager
- rpmsg_lite_pingpong
- rpmsg_lite_pingpong_rtos
- rpmsg_lite_pingpong_dsp
- rpmsg_lite_pingpong_tzm

The eRPC multicore component can be leveraged for inter-processor communication and remote procedure calls between SoCs / development boards.

The following multiprocessor demo applications are located together with other MCUXpresso SDK examples in


the <MCUXpressoSDK_install_dir>/examples/multiprocessor_examples subdirectories.

- erpc_client_matrix_multiply_spi
- erpc_server_matrix_multiply_spi
- erpc_client_matrix_multiply_uart
- erpc_server_matrix_multiply_uart
- erpc_server_dac_adc
- erpc_remote_control

Getting Started with Multicore SDK (MCSDK)

Overview Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

The following figure highlights the layers and main software components of the MCSDK.

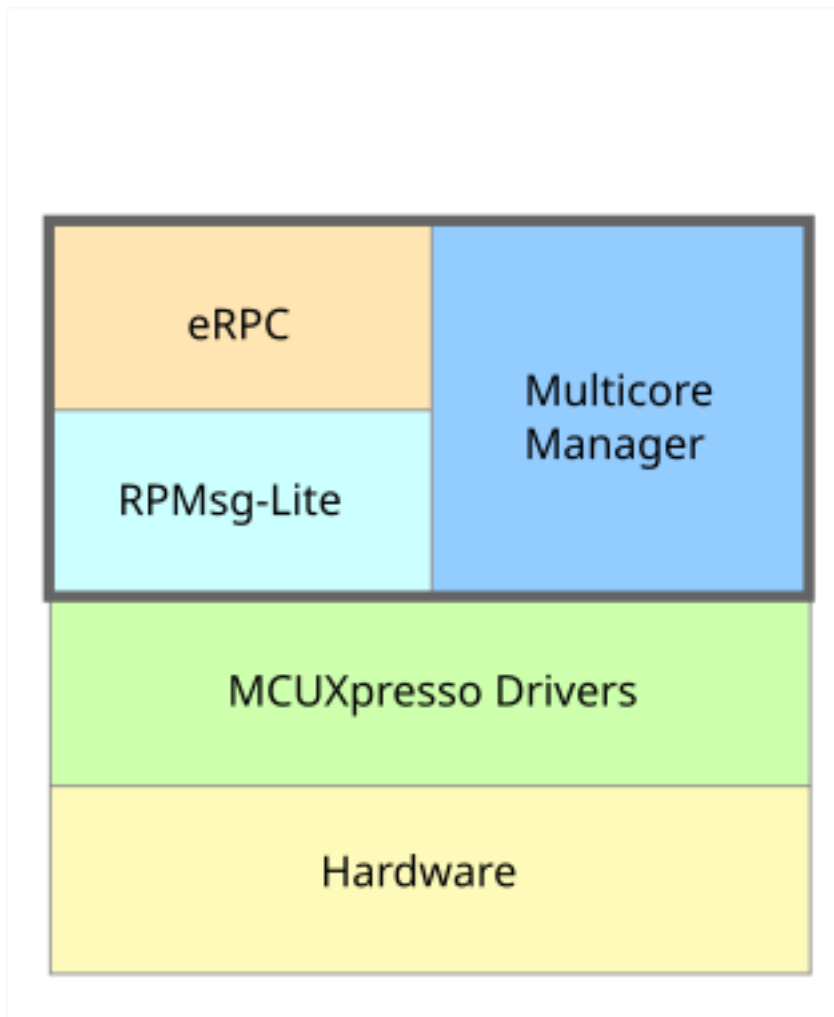


All the MCSDK-related files are located in <MCUXpressoSDK_install_dir>/middleware/multicore folder.

For supported toolchain versions, see the *Multicore SDK v25.12.00 Release Notes* (document MCS-DKRN). For the latest version of this and other MCSDK documents, visit www.nxp.com.


Multicore SDK (MCSDK) components The MCSDK consists of the following software components:

- **Embedded Remote Procedure Call (eRPC):** This component is a combination of a library and code generator tool that implements a transparent function call interface to remote services (running on a different core).
- **Multicore Manager (MCMGR):** This library maintains information about all cores and starts up secondary/auxiliary cores.
- **Remote Processor Messaging - Lite (RPMsg-Lite):** Inter-Processor Communication library.

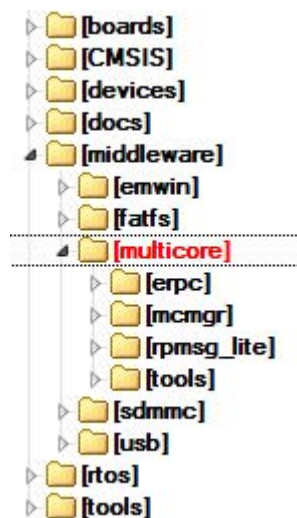

Embedded Remote Procedure Call (eRPC) The Embedded Remote Procedure Call (eRPC) is the RPC system created by NXP. The RPC is a mechanism used to invoke a software routine on a remote system via a simple local function call.

When a remote function is called by the client, the function's parameters and an identifier for the called routine are marshaled (or serialized) into a stream of bytes. This byte stream is transported to the server through a communications channel (IPC, TPC/IP, UART, and so on). The server unmarshals the parameters, determines which function was invoked, and calls it. If the function returns a value, it is marshaled and sent back to the client.

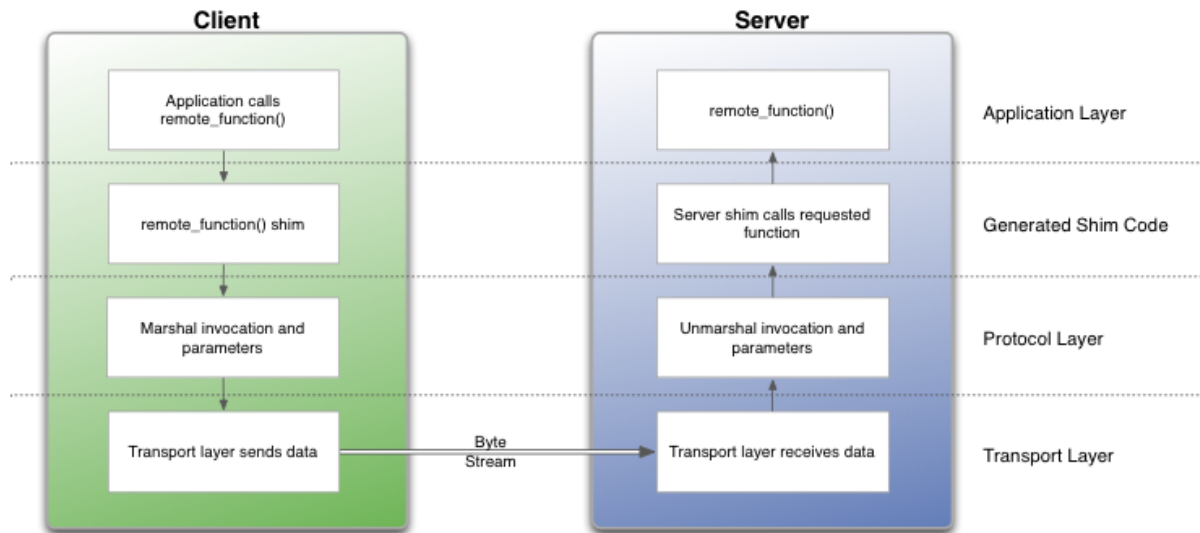

RPC implementations typically use a combination of a tool (erpcgen) and IDL (interface definition language) file to generate source code to handle the details of marshaling a function's parameters and building the data stream.

Main eRPC features:

- Scalable from BareMetal to Linux OS - configurable memory and threading policies.
- Focus on embedded systems - intrinsic support for C, modular, and lightweight implementation.
- Abstracted transport interface - RPMsg is the primary transport for multicore, UART, or SPI-based solutions can be used for multichip.

The eRPC library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc` folder. For detailed information about the eRPC, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems.

The main MCMGR features:

- Maintains information about all cores in system.
- Secondary/auxiliary cores startup and shutdown.
- Remote core monitoring and event handling.

The MCMGR library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr` folder. For detailed information about the MCMGR library, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/doc` folder.

Remote Processor Messaging Lite (RPMsg-Lite) RPMsg-Lite is a lightweight implementation of the RPMsg protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system. Compared to the legacy OpenAMP implementation, RPMsg-Lite offers a code size reduction, API simplification, and improved modularity.

The main RPMsg protocol features:

- Shared memory interprocessor communication.
- Virtio-based messaging bus.
- Application-defined messages sent between endpoints.

- Portable to different environments/platforms.
- Available in upstream Linux OS.

The RPMsg-Lite library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite` folder. For detailed information about the RPMsg-Lite, see the RPMsg-Lite User's Guide located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/doc` folder.

MCSDK demo applications Multicore and multiprocessor example applications are stored together with other MCUXpresso SDK examples, in the dedicated multicore subfolder.

Location	Folder
Multicore example projects	<code><MCUXpressoSDK_install_dir>/examples/multicore_examples/<application_name>/</code>
Multiprocessor example projects	<code><MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/<application_name>/</code>

See the *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) and *Getting Started with MCUXpresso SDK for XXX Derivatives* documents for more information about the MCUXpresso SDK example folder structure and the location of individual files that form the example application projects. These documents also contain information about building, running, and debugging multicore demo applications in individual supported IDEs. Each example application also contains a readme file that describes the operation of the example and required setup steps.

Inter-Processor Communication (IPC) levels The MCSDK provides several mechanisms for Inter-Processor Communication (IPC). Particular ways and levels of IPC are described in this chapter.

IPC using low-level drivers

The NXP multicore SoCs are equipped with peripheral modules dedicated for data exchange between individual cores. They deal with the Mailbox peripheral for LPC parts and the Messaging Unit (MU) peripheral for Kinetis and i.MX parts. The common attribute of both modules is the ability to provide a means of IPC, allowing multiple CPUs to share resources and communicate with each other in a simple manner.

The most lightweight method of IPC uses the MCUXpresso SDK low-level drivers for these peripherals. Using the Mailbox/MU driver API functions, it is possible to pass a value from core to core via the dedicated registers (could be a scalar or a pointer to shared memory) and also to trigger inter-core interrupts for notifications.

For details about individual driver API functions, see the MCUXpresso SDK API Reference Manual of the specific multicore device. The MCUXpresso SDK is accompanied with the RPMsg-Lite documentation that shows how to use this API in multicore applications.

Messaging mechanism

On top of Mailbox/MU drivers, a messaging system can be implemented, allowing messages to send between multiple endpoints created on each of the CPUs. The RPMsg-Lite library of the MCSDK provides this ability and serves as the preferred MCUXpresso SDK messaging library. It implements ring buffers in shared memory for messages exchange without the need of a locking mechanism.

The RPMsg-Lite provides the abstraction layer and can be easily ported to different multicore platforms and environments (Operating Systems). The advantages of such a messaging system are ease of use (there is no need to study behavior of the used underlying hardware) and smooth application code portability between platforms due to unified messaging API.

However, this costs several kB of code and data memory. The MCUXpresso SDK is accompanied by the RPMsg-Lite documentation and several multicore examples. You can also obtain the latest RPMsg-Lite code from the GitHub account github.com/nxp-mcuxpresso/rpmsg-lite.

Remote procedure calls

To facilitate the IPC even more and to allow the remote functions invocation, the remote procedure call mechanism can be implemented. The eRPC of the MCSDK serves for these purposes and allows the ability to invoke a software routine on a remote system via a simple local function call. Utilizing different transport layers, it is possible to communicate between individual cores of multicore SoCs (via RPMsg-Lite) or between separate processors (via SPI, UART, or TCP/IP). The eRPC is mostly applicable to the MPU parts with enough of memory resources like i.MX parts.

The eRPC library allows you to export existing C functions without having to change their prototypes (in most cases). It is accompanied by the code generator tool that generates the shim code for serialization and invocation based on the IDL file with definitions of data types and remote interfaces (API).

If the communicating peer is running as a Linux OS user-space application, the generated code can be either in C/C++ or Python.

Using the eRPC simplifies the access to services implemented on individual cores. This way, the following types of applications running on dedicated cores can be easily interfaced:

- Communication stacks (USB, Thread, Bluetooth Low Energy, Zigbee)
- Sensor aggregation/fusion applications
- Encryption algorithms
- Virtual peripherals

The eRPC is publicly available from the following GitHub account: github.com/EmbeddedRPC/erpc. Also, the MCUXpresso SDK is accompanied by the eRPC code and several multicore and multiprocessor eRPC examples.

The mentioned IPC levels demonstrate the scalability of the Multicore SDK library. Based on application needs, different IPC techniques can be used. It depends on the complexity, required speed, memory resources, system design, and so on. The MCSDK brings users the possibility for quick and easy development of multicore and multiprocessor applications.

Changelog Multicore SDK

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[25.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.2
 - RPMsg-Lite v5.3.0

[25.09.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0

- eRPC generator (erpcgen) v1.14.0
- Multicore Manager (MCMgr) v5.0.1
- RPSmsg-Lite v5.2.1

[25.06.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.0
 - RPSmsg-Lite v5.2.0

[25.03.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.7
 - RPSmsg-Lite v5.1.4

[24.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.6
 - RPSmsg-Lite v5.1.3

[2.16.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSmsg-Lite v5.1.2

[2.15.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.12.0
 - eRPC generator (erpcgen) v1.12.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSmsg-Lite v5.1.1

[2.14.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.11.0
 - eRPC generator (erpcgen) v1.11.0
 - Multicore Manager (MCMgr) v4.1.4
 - RPSMsg-Lite v5.1.0

[2.13.0_imxrt1180a0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.13.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.12.0_imx93]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.1

[2.12.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.0

[2.11.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RMsg-Lite v3.2.1

[2.11.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RMsg-Lite v3.2.0

[2.10.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.1
 - eRPC generator (erpcgen) v1.8.1
 - Multicore Manager (MCMgr) v4.1.1
 - RMsg-Lite v3.1.2

[2.9.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.0
 - eRPC generator (erpcgen) v1.8.0
 - Multicore Manager (MCMgr) v4.1.1
 - RMsg-Lite v3.1.1

[2.8.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.4
 - eRPC generator (erpcgen) v1.7.4
 - Multicore Manager (MCMgr) v4.1.0
 - RMsg-Lite v3.1.0

[2.7.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.3
 - eRPC generator (erpcgen) v1.7.3
 - Multicore Manager (MCMgr) v4.1.0
 - RMsg-Lite v3.0.0

[2.6.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.2
 - eRPC generator (erpcgen) v1.7.2
 - Multicore Manager (MCMgr) v4.0.3
 - RMsg-Lite v2.2.0

[2.5.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.1
 - eRPC generator (erpcgen) v1.7.1
 - Multicore Manager (MCMgr) v4.0.2
 - RMsg-Lite v2.0.2

[2.4.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.0
 - eRPC generator (erpcgen) v1.7.0
 - Multicore Manager (MCMgr) v4.0.1
 - RMsg-Lite v2.0.1

[2.3.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.6.0
 - eRPC generator (erpcgen) v1.6.0
 - Multicore Manager (MCMgr) v4.0.0
 - RMsg-Lite v1.2.0

[2.3.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.5.0
 - eRPC generator (erpcgen) v1.5.0
 - Multicore Manager (MCMgr) v3.0.0
 - RPSMsg-Lite v1.2.0

[2.2.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.4.0
 - eRPC generator (erpcgen) v1.4.0
 - Multicore Manager (MCMgr) v2.0.1
 - RPSMsg-Lite v1.1.0

[2.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.3.0
 - eRPC generator (erpcgen) v1.3.0

[2.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.2.0
 - eRPC generator (erpcgen) v1.2.0
 - Multicore Manager (MCMgr) v2.0.0
 - RPSMsg-Lite v1.0.0

[1.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.1.0
 - Multicore Manager (MCMgr) v1.1.0
 - Open-AMP / RPSMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev01

[1.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.0.0
 - Multicore Manager (MCMgr) v1.0.0
 - Open-AMP / RPSMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev00

Multicore SDK Components

RPMSG-Lite

MCUXpresso SDK : mcuxsdk-middleware-rpmsg-lite

Overview This repository is for MCUXpresso SDK RPMSG-Lite middleware delivery and it contains RPMSG-Lite component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run RPMSG-Lite examples that are based on mcux-sdk-middleware-rpmsg-lite component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [RPMSG-Lite - Documentation](#) to review details on the contents in this sub-repo.

For Further API documentation, please look at [doxygen documentation](#)

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the rpmsg-lite project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

RPMSG-Lite This documentation describes the RPMsg-Lite component, which is a lightweight implementation of the Remote Processor Messaging (RPMsg) protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system.

Compared to the RPMsg implementation of the Open Asymmetric Multi Processing (OpenAMP) framework (<https://github.com/OpenAMP/open-amp>), the RPMsg-Lite offers a code size reduction, API simplification, and improved modularity. On smaller Cortex-M0+ based systems, it is recommended to use RPMsg-Lite.

The RPMsg-Lite is an open-source component developed by NXP Semiconductors and released under the BSD-compatible license.

For overview please read [RPMSG-Lite VirtIO Overview](#).

For RPMSG-Lite Design Considerations please read [RPMSG-Lite Design Considerations](#).

Motivation to create RPMsg-Lite There are multiple reasons why RPMsg-Lite was developed. One reason is the need for the small footprint of the RPMsg protocol-compatible communication component, another reason is the simplification of extensive API of OpenAMP RPMsg implementation.

RPMsg protocol was not documented, and its only definition was given by the Linux Kernel and legacy OpenAMP implementations. This has changed with [1] which is a standardization protocol allowing multiple different implementations to coexist and still be mutually compatible.


Small MCU-based systems often do not implement dynamic memory allocation. The creation of static API in RPMsg-Lite enables another reduction of resource usage. Not only does the dynamic allocation adds another 5 KB of code size, but also communication is slower and less deterministic, which is a property introduced by dynamic memory. The following table shows some rough comparison data between the OpenAMP RPMsg implementation and new RPMsg-Lite implementation:

Component / Configuration	Flash [B]	RAM [B]
OpenAMP RPMsg / Release (reference)	5547	456 + dynamic
RPMsg-Lite / Dynamic API, Release	3462	56 + dynamic
Relative Difference [%]	~62.4%	~12.3%
RPMsg-Lite / Static API (no malloc), Release	2926	352
Relative Difference [%]	~52.7%	~77.2%

Implementation The implementation of RPMsg-Lite can be divided into three sub-components, from which two are optional. The core component is situated in `rpmsg_lite.c`. Two optional components are used to implement a blocking receive API (in `rpmsg_queue.c`) and dynamic “named” endpoint creation and deletion announcement service (in `rpmsg_ns.c`).


The actual “media access” layer is implemented in `virtqueue.c`, which is one of the few files shared with the OpenAMP implementation. This layer mainly defines the shared memory model, and internally defines used components such as `vring` or `virtqueue`.

The porting layer is split into two sub-layers: the environment layer and the platform layer. The first sublayer is to be implemented separately for each environment. (The bare metal environment already exists and is implemented in `rpmsg_env_bm.c`, and the FreeRTOS environment is implemented in `rpmsg_env_freertos.c` etc.) Only the source file, which matches the used environment, is included in the target application project. The second sublayer is implemented in `rpmsg_platform.c` and defines low-level functions for interrupt enabling, disabling, and triggering mainly. The situation is described in the following figure:

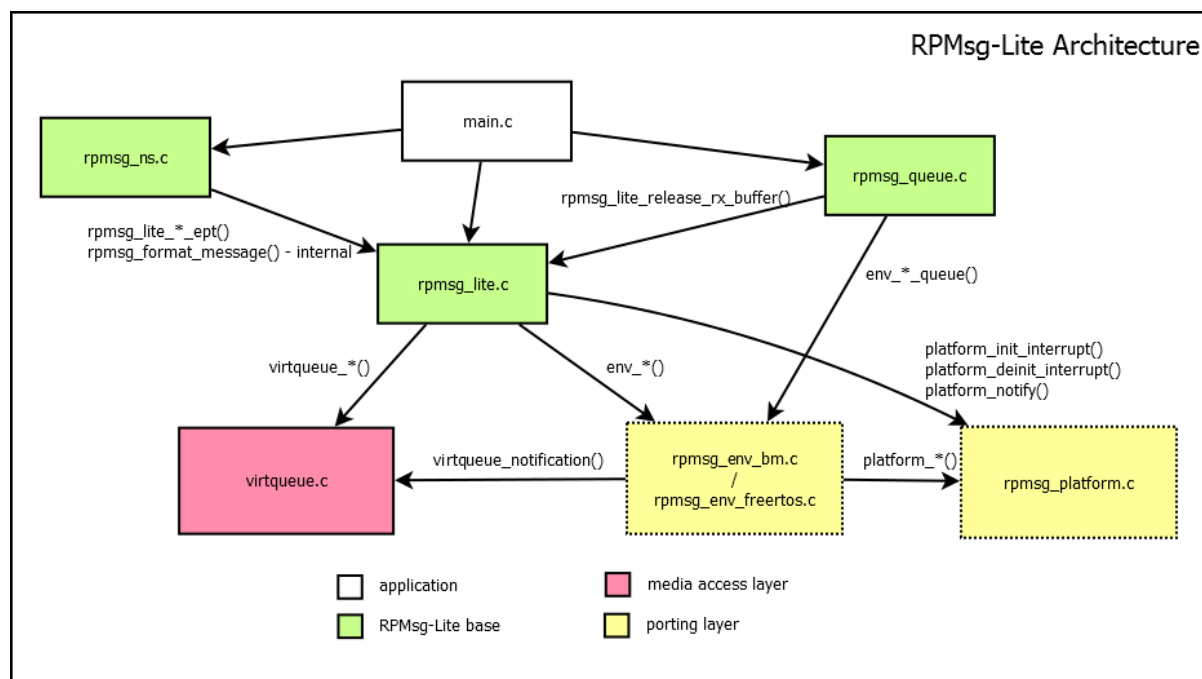

RPMsg-Lite core sub-component This subcomponent implements a blocking send API and callback-based receive API. The RPMsg protocol is part of the transport layer. This is realized by using so-called endpoints. Each endpoint can be assigned a different receive callback function.

However, it is important to notice that the callback is executed in an interrupt environment in current design. Therefore, certain actions like memory allocation are discouraged to execute in the callback. The following figure shows the role of RPMsg in an ISO/OSI-like layered model:

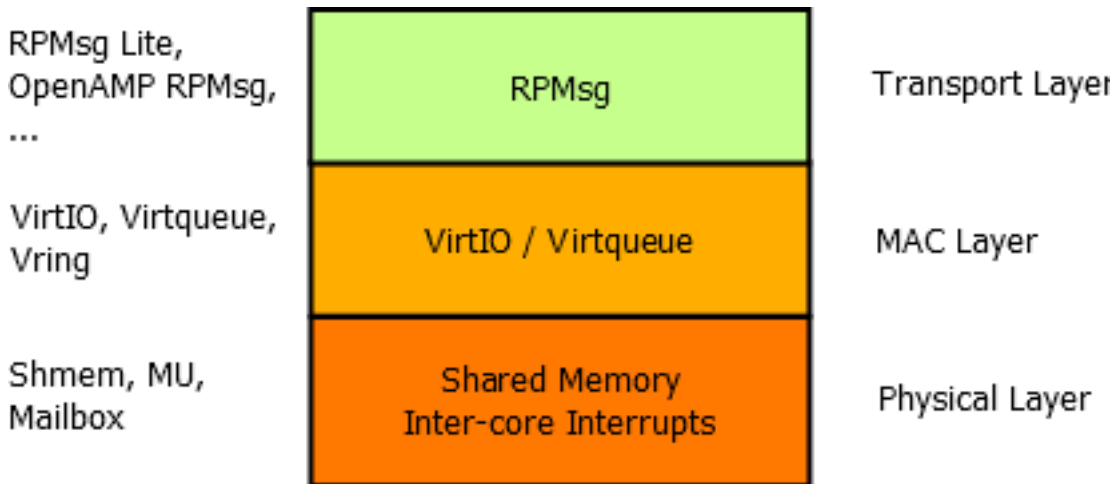

Queue sub-component (optional) This subcomponent is optional and requires implementation of the `env_*_queue()` functions in the environment porting layer. It uses a blocking receive API, which is common in RTOS-environments. It supports both copy and nocopy blocking receive functions.

Name Service sub-component (optional) This subcomponent is a minimum implementation of the name service which is present in the Linux Kernel implementation of RPMsg. It allows the communicating node both to send announcements about “named” endpoint (in other words, channel) creation or deletion and to receive these announcement taking any user-defined action in an application callback. The endpoint address used to receive name service announcements is arbitrarily fixed to be 53 (0x35).

Usage The application should put the `/rpmmsg_lite/lib/include` directory to the include path and in the application, include either the `rpmmsg_lite.h` header file, or optionally also include the `rpmmsg_queue.h` and/or `rpmmsg_ns.h` files. Both porting sublayers should be provided for you by NXP, but if you plan to use your own RTOS, all you need to do is to implement your own environment layer (in other words, `rpmmsg_env_myrtos.c`) and to include it in the project build.

The initialization of the stack is done by calling the `rpmmsg_lite_master_init()` on the master side and the `rpmmsg_lite_remote_init()` on the remote side. This initialization function must be called prior to any RPMsg-Lite API call. After the init, it is wise to create a communication endpoint, otherwise communication is not possible. This can be done by calling the `rpmmsg_lite_create_ept()` function. It optionally accepts a last argument, where an internal context of the endpoint is created, just in case the `RL_USE_STATIC_API` option is set to 1. If not, the stack internally calls `env_alloc()` to allocate dynamic memory for it. In case a callback-based receiving is to be used, an ISR-callback is registered to each new endpoint with user-defined callback data pointer. If a blocking receive is desired (in case of RTOS environment), the `rpmmsg_queue_create()` function must be called before calling `rpmmsg_lite_create_ept()`. The queue handle is passed to the endpoint creation function as a callback data argument and the callback function is set to `rpmmsg_queue_rx_cb()`. Then, it is possible to use `rpmmsg_queue_receive()` function to listen on a queue object for incoming messages. The `rpmmsg_lite_send()` function is used to send messages to the other side.

The RPMsg-Lite also implements no-copy mechanisms for both sending and receiving operations. These methods require specifics that have to be considered when used in an application.


no-copy-send mechanism: This mechanism allows sending messages without the cost for copying data from the application buffer to the RPMsg/virtio buffer in the shared memory. The sequence of no-copy sending steps to be performed is as follows:

- Call the `rpmmsg_lite_alloc_tx_buffer()` function to get the virtio buffer and provide the buffer pointer to the application.
- Fill the data to be sent into the pre-allocated virtio buffer. Ensure that the filled data does not exceed the buffer size (provided as the `rpmmsg_lite_alloc_tx_buffer()` size output parameter).
- Call the `rpmmsg_lite_send_nocopy()` function to send the message to the destination endpoint. Consider the cache functionality and the virtio buffer alignment. See the `rpmmsg_lite_send_nocopy()` function description below.

no-copy-receive mechanism: This mechanism allows reading messages without the cost for copying data from the virtio buffer in the shared memory to the application buffer. The sequence of no-copy receiving steps to be performed is as follows:

- Call the `rpmmsg_queue_rcv_nocopy()` function to get the virtio buffer pointer to the received data.
- Read received data directly from the shared memory.
- Call the `rpmmsg_queue_nocopy_free()` function to release the virtio buffer and to make it available for the next data transfer.

The user is responsible for destroying any RPMsg-Lite objects he has created in case of deinitialization. In order to do this, the function `rpmmsg_queue_destroy()` is used to destroy a queue, `rpmmsg_lite_destroy_ept()` is used to destroy an endpoint and finally, `rpmmsg_lite_deinit()` is used to deinitialize the RPMsg-Lite intercore communication stack. Deinitialize all endpoints using a queue before deinitializing the queue. Otherwise, you are actively invalidating the used queue handle, which is not allowed. RPMsg-Lite does not check this internally, since its main aim is to be lightweight.

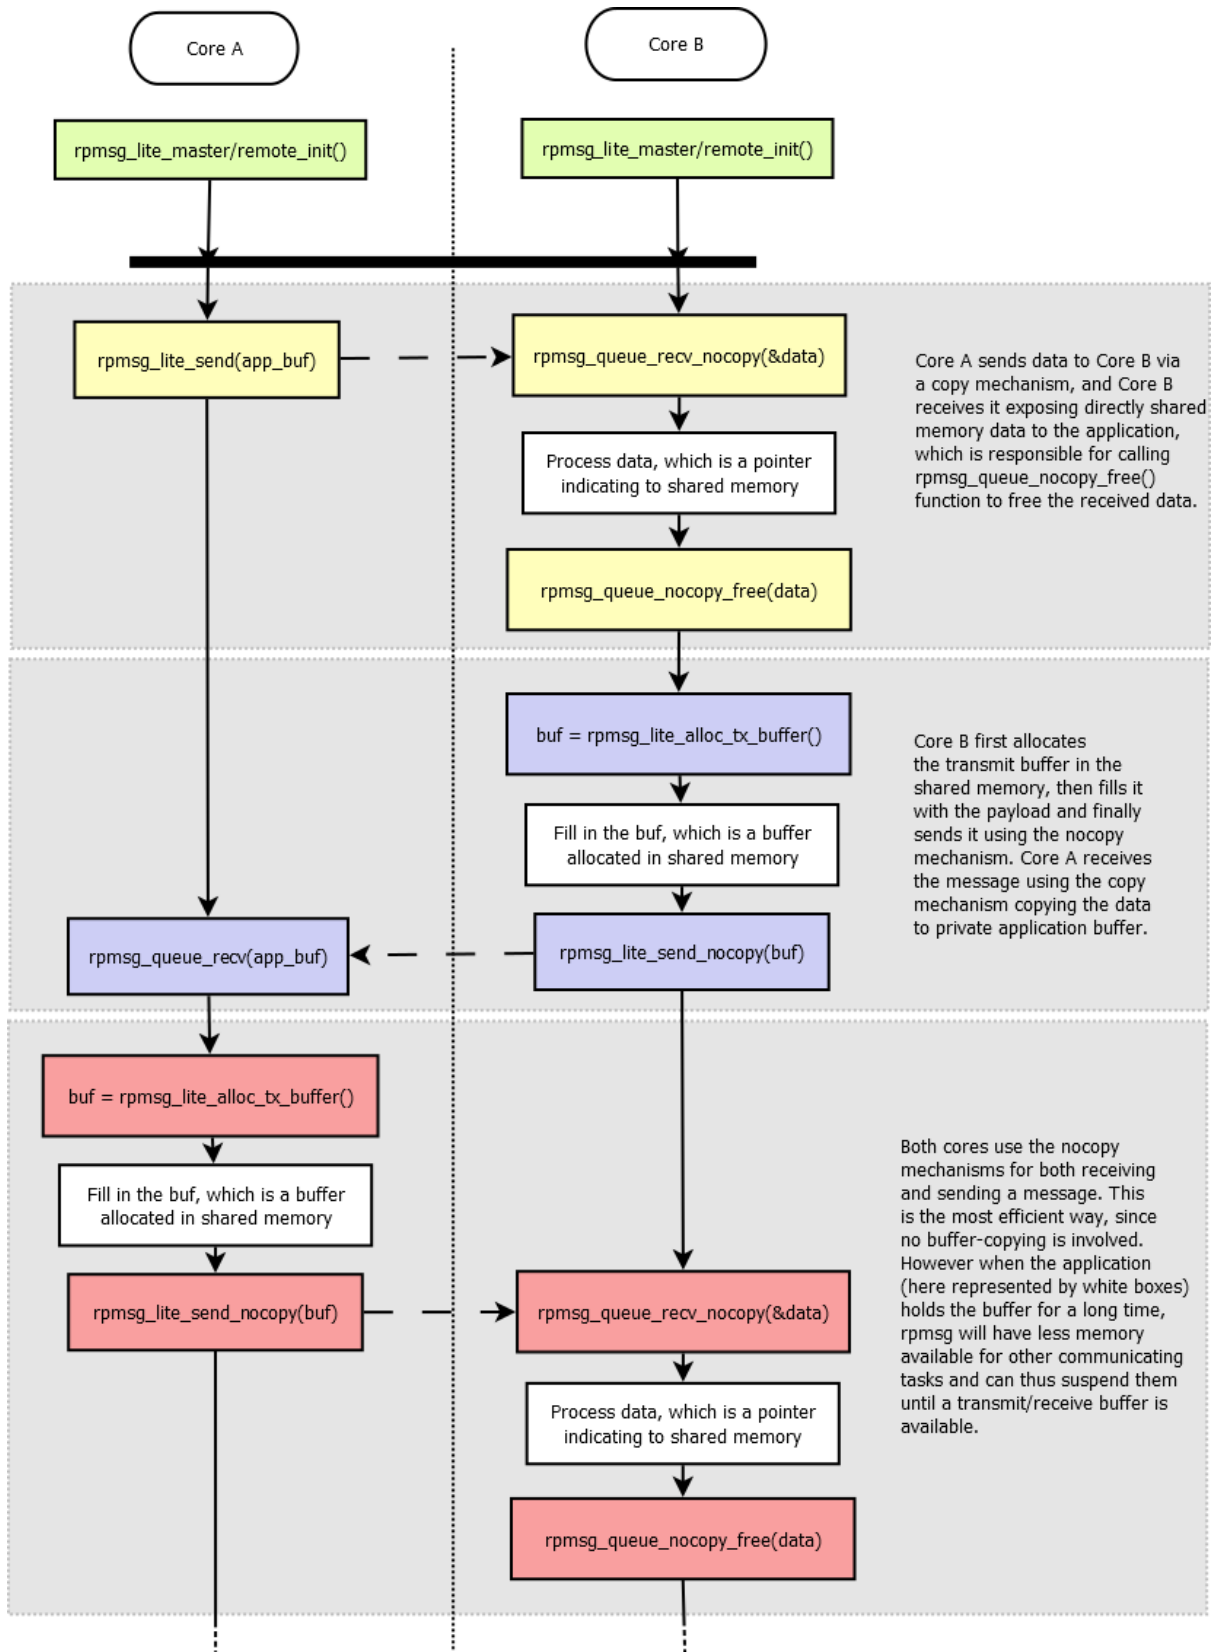

Examples RPMsg_Lite multicore examples are part of NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages. To get the board list with multicore support (RPMsg_Lite included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded,

see

`<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples` for RPMsg_Lite multicore examples with 'rpmmsg_lite_' name prefix.

Another way of getting NXP MCUXpressoSDK RPMsg_Lite multicore examples is using the [mcuxsdk-manifests](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk-manifests repo in [readme section](#). Once done the armgcc rpmmsg_lite examples can be found in

`mcuxsdk/examples/_<board_name>/multicore_examples`

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the RPMsg_Lite examples use the 'rpmmsg_lite_' name prefix.

Notes

Environment layers implementation Several environment layers are provided in `lib/rpmmsg_lite/porting/environment` folder. Not all of them are fully tested however. Here is the list of environment layers that passed testing:

- `rpmmsg_env_bm.c`
- `rpmmsg_env_freertos.c`
- `rpmmsg_env_xos.c`
- `rpmmsg_env_threadx.c`

The rest of environment layers has been created and used in some experimental projects, it has been running well at the time of creation but due to the lack of unit testing there is no guarantee it is still fully functional.

Shared memory configuration It is important to correctly initialize/configure the shared memory for data exchange in the application. The shared memory must be accessible from both the master and the remote core and it needs to be configured as Non-Cacheable memory. Dedicated shared memory section in linker file is also a good practise, it is recommended to use linker files from MCUXpressoSDK packages for NXP devices based applications. It needs to be ensured no other application part/component is unintentionally accessing this part of memory.

Configuration options The RPMsg-Lite can be configured at the compile time. The default configuration is defined in the `rpmmsg_default_config.h` header file. This configuration can be customized by the user by including `rpmmsg_config.h` file with custom settings. The following table summarizes all possible RPMsg-Lite configuration options.

Config- uration option	De- fault value	Usage
RL_MS_PE (1)		Delay in milliseconds used in non-blocking API functions for polling.
RL_BUFFE (496)		Size of the buffer payload, it must be more than 1 byte, and has to be word align (including rpmsg header size 16 bytes), if not it will be aligned up
RL_BUFFE (2)		Number of the buffers, it must be power of two (2, 4, ...)
RL_API_H (1)		Zero-copy API functions enabled/disabled.
RL_USE_S' (0)		Static API functions (no dynamic allocation) enabled/disabled.
RL_USE_D (0)		Memory cache management of shared memory. Use in case of data cache is enabled for shared memory.
RL_CLEAF (0)		Clearing used buffers before returning back to the pool of free buffers enabled/disabled.
RL_USE_M (0)		When enabled IPC interrupts are managed by the Multicore Manager (IPC interrupts router), when disabled RPMsg-Lite manages IPC interrupts by itself.
RL_USE_E (0)		When enabled the environment layer uses its own context. Required for some environments (QNX). The default value is 0 (no context, saves some RAM).
RL_DEBU((0)		When enabled buffer pointers passed to <code>rpmsg_lite_send_nocopy()</code> and <code>rpmsg_lite_release_rx_buffer()</code> functions (enabled by <code>RL_API_HAS_ZEROCOPY</code> config) are checked to avoid passing invalid buffer pointer. The default value is 0 (disabled). Do not use in RPMsg-Lite to Linux configuration.
RL_ALLO\ (0)		When enabled the opposite side is notified each time received buffers are consumed and put into the queue of available buffers. Enable this option in RPMsg-Lite to Linux configuration to allow unblocking of the Linux blocking send. The default value is 0 (RPMsg-Lite to RPMsg-Lite communication).
RL_ALLO\ (0)		It allows to define custom shared memory configuration and replacing the shared memory related global settings from <code>rpmsg_config.h</code> . This is useful when multiple instances are running in parallel but different shared memory arrangement (vring size & alignment, buffers size & count) is required. The default value is 0 (all RPMsg_Lite instances use the same shared memory arrangement as defined by common config macros).
RL_ASSER	see rpmsg	Assert implementation.

How to format rpmsg-lite code To format code, use the application developed by Google, named *clang-format*. This tool is part of the *llvm* project. Currently, the clang-format 10.0.0 version is used for rpmsg-lite. The set of style settings used for clang-format is defined in the `.clang-format` file, placed in a root of the rpmsg-lite directory where Python script `run_clang_format.py` can be executed. This script executes the application named *clang-format.exe*. You need to have the path of this application in the OS's environment path, or you need to change the script.

References

[1] M. Novak, M. Cingel, **Lockless Shared Memory Based Multicore Communication Protocol**
Copyright © 2016 Freescale Semiconductor, Inc. Copyright © 2016-2025 NXP

Changelog RPMMSG-Lite All notable changes to this project will be documented in this file. The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[v5.3.0]

Added

- RT700 porting layer added support to send rpmsg messages between CM33_0 <-> Hifi1 and CM33_1 <-> Hifi4 cores.
- Add new platform macro `RL_PLATFORM_MAX_ISR_COUNT` this will set number of IRQ count per platform. This macro is then used in environment layers to set `isr_table` size where irq handles are registered. It size should match the bit length of `VQ_ID` so all combinations can fit into table.
- Unit tests updated to improve code coverage, new unit tests added covering static allocations in rtos environment layers.

Fixed

- `virtio.h` removed `typedef uint8_t boolean` and in its place use standard C99 `bool` type to avoid potential type conflicts.
- `env_acquire_sync_lock()` and `env_release_sync_lock()` synchronization primitives removed
- Kconfig consolidation, when `RL_ALLOW_CUSTOM_SHMEM_CONFIG` enabled the `platform_get_custom_shmem_config()` function needs to be implemented in platform layer to provide custom shared memory configuration for RPMsg-Lite instance.

v5.2.1

Added

- Doc added RPMsg-Lite VirtIO Overview
- Doc added RPMsg-Lite Design Considerations
- Added `frdmimxrt1186` unit testing

Changed

- Remove limitation that `RL_BUFFER_SIZE` needs to be power of 2. It just has to be more than 16 bytes, e.g. 16 bytes of rpmsg header and payload size at least 1 byte and word aligned, if not it will be aligned up.

Fixed

- Fixed CERT-C INT31-C violation in `platform_notify` function in `rpmsg_platform.c` for `imxrt700_m33`, `imxrt700_hifi4`, `imxrt700_hifi1` platforms

v5.2.0

Added

- Add MCXL20 porting layer and unit testing
- New utility macro `RL_CALCULATE_BUFFER_COUNT_DOWN_SAFE` to safely determine maximum buffer count within shared memory while preventing integer underflow.
- RT700 platform add support for MCMGR in DSPs

Changed

- Change `rpmsg_platform.c` to support new MCMGR API
- Improved input validation in initialization functions to properly handle insufficient memory size conditions.
- Refactored repeated buffer count calculation pattern for better code maintainability.
- To make sure that remote has already registered IRQ there is required App level IPC mechanism to notify master about it

Fixed

- Fixed `env_wait_for_link_up` function to handle timeout in link state checks for baremetal and qnx environment, `RL_BLOCK` mode can be used to wait indefinitely.
- Fixed CERT-C INT31-C violation by adding compile-time check to ensure `RL_PLATFORM_HIGHEST_LINK_ID` remains within safe range for 16-bit casting in virtqueue ID creation.
- Fixed CERT-C INT30-C violations by adding protection against unsigned integer underflow in shared memory calculations, specifically in `shmem_length - (uint32_t)RL_VRING_OVERHEAD` and `shmem_length - 2U * shmem_config.vring_size` expressions.
- Fixed CERT INT31-C violation in `platform_interrupt_disable()` and similar functions by replacing unsafe cast from `uint32_t` to `int32_t` with a return of 0 constant.
- Fixed unsigned integer underflow in `rpmsg_lite_alloc_tx_buffer()` where subtracting header size from buffer size could wrap around if buffer was too small, potentially leading to incorrect buffer sizing.
- Fixed CERT-C INT31-C violation in `rpmsg_lite.c` where `size` parameter was cast from `uint32_t` to `uint16_t` without proper validation.
 - Applied consistent masking approach to both `size` and `flags` parameters: `(uint16_t)(value & 0xFFFFU)`.
 - This fix prevents potential data loss when `size` values exceed 65535.
- Fixed CERT INT31-C violation in `env_memset` functions by explicitly converting `int32_t` values to unsigned char using bit masking. This prevents potential data loss or misinterpretation when passing values outside the unsigned char range (0-255) to the standard `memset()` function.
- Fixed CERT-C INT31-C violations in RPMsg-Lite environment porting: Added validation checks for signed-to-unsigned integer conversions to prevent data loss and misinterpretation.
 - `rpmsg_env_freertos.c`: Added validation before converting `int32_t` to `UBaseType_t`.
 - `rpmsg_env_qnx.c`: Fixed format string and added validation before assigning to `mqstat` fields.
 - `rpmsg_env_threadx.c`: Added validation to prevent integer overflow and negative values.
 - `rpmsg_env_xos.c`: Added range checking before casting to `uint16_t`.
 - `rpmsg_env_zephyr.c`: Added validation before passing values to `k_msgq_init`.
- Fixed a CERT INT31-C compliance issue in `env_get_current_queue_size()` function where an unsigned queue count was cast to a signed `int32_t` without proper validation, which could lead to lost or misinterpreted data if queue size exceeded `INT32_MAX`.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where `memcmp()` return value (signed int) was compared with unsigned constant without proper type handling.

- Fixed CERT INT31-C violation in `rpmsg_platform.c` where casting from `uint32_t` to `uint16_t` could potentially result in data loss. Changed length variable type from `uint16_t` to `uint32_t` to properly handle memory address differences without truncation.
- Fixed potential integer overflow in `env_sleep_msec()` function in ThreadX environment implementation by rearranging calculation order in the sleep duration formula.
- Fixed CERT-C INT31-C violation in RPMsg-Lite where bitwise NOT operations on integer constants were performed in signed integer context before being cast to unsigned. This could potentially lead to misinterpreted data on `imx943` platform.
- Added `RL_MAX_BUFFER_COUNT` (32768U) and `RL_MAX_VRING_ALIGN` (65536U) limit to ensure alignment values cannot contribute to integer overflow
- Fixed CERT INT31-C violation in `vring_need_event()`, added cast to `uint16_t` for each operand.

v5.1.4 - 27-Mar-2025

Added

- Add KW43B43 porting layer

Changed

- Doxygen bump to version 1.9.6

v5.1.3 - 13-Jan-2025

Added

- Memory cache management of shared memory. Enable with `#define RL_USE_DCACHE` (1) in `rpmsg_config.h` in case of data cache is used.
- Cmake/Kconfig support added.
- Porting layers for `imx95`, `imxrt700`, `mcmxw71x`, `mcmxw72x`, `kw47b42` added.

v5.1.2 - 08-Jul-2024

Changed

- Zephyr-related changes.
- Minor Misra corrections.

v5.1.1 - 19-Jan-2024

Added

- Test suite provided.
- Zephyr support added.

Changed

- Minor changes in platform and env. layers, minor test code updates.

v5.1.0 - 02-Aug-2023

Added

- RPLite: Added aarch64 support.

Changed

- RPLite: Increased the queue size to (2 * RL_BUFFER_COUNT) to cover zero copy cases.
- Code formatting using LLVM16.

Fixed

- Resolved issues in ThreadX env. layer implementation.

v5.0.0 - 19-Jan-2023

Added

- Timeout parameter added to `rpmsg_lite_wait_for_link_up` API function.

Changed

- Improved debug check buffers implementation - instead of checking the pointer fits into shared memory check the presence in the VirtIO ring descriptors list.
- `VRING_SIZE` is set based on number of used buffers now (as calculated in `vring_init`) - updated for all platforms that are not communicating to Linux `rpmsg` counterpart.

Fixed

- Fixed wrong `RL_VRING_OVERHEAD` macro comment in `platform.h` files
- Misra corrections.

v4.0.0 - 20-Jun-2022

Added

- Added support for custom shared memory arrangement per the `RPLite` instance.
- Introduced new `rpmsg_lite_wait_for_link_up()` API function - this allows to avoid using busy loops in rtos environments, GitHub PR #21.

Changed

- Adjusted `rpmsg_lite_is_link_up()` to return `RL_TRUE/RL_FALSE`.

v3.2.0 - 17-Jan-2022

Added

- Added support for i.MX8 MP multicore platform.

Changed

- Improved static allocations - allow OS-specific objects being allocated statically, GitHub PR #14.
- Aligned rpmsg_env_xos.c and some platform layers to latest static allocation support.

Fixed

- Minor Misra and typo corrections, GitHub PR #19, #20.

v3.1.2 - 16-Jul-2021

Added

- Addressed MISRA 21.6 rule violation in rpmsg_env.h (use SDK's PRINTF in MCUXpressoSDK examples, otherwise stdio printf is used).
- Added environment layers for XOS.
- Added support for i.MX RT500, i.MX RT1160 and i.MX RT1170 multicore platforms.

Fixed

- Fixed incorrect description of the rpmsg_lite_get_endpoint_from_addr function.

Changed

- Updated RL_BUFFER_COUNT documentation (issue #10).
- Updated imxrt600_hifi4 platform layer.

v3.1.1 - 15-Jan-2021

Added

- Introduced RL_ALLOW_CONSUMED_BUFFERS_NOTIFICATION config option to allow opposite side notification sending each time received buffers are consumed and put into the queue of available buffers.
- Added environment layers for Threadx.
- Added support for i.MX8QM multicore platform.

Changed

- Several MISRA C-2012 violations addressed.

v3.1.0 - 22-Jul-2020

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed (7.4).
- Fixed missing lock in `rpmsg_lite_rx_callback()` for QNX env.
- Correction of `rpmsg_lite_instance` structure members description.
- Address -Waddress-of-packed-member warnings in GCC9.

Changed

- Clang update to v10.0.0, code re-formatted.

v3.0.0 - 20-Dec-2019

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed, incl. data types consolidation.
- Code formatted.

v2.2.0 - 20-Mar-2019

Added

- Added configuration macro `RL_DEBUG_CHECK_BUFFERS`.
- Several MISRA violations fixed.
- Added environment layers for QNX and Zephyr.
- Allow environment context required for some environment (controlled by the `RL_USE_ENVIRONMENT_CONTEXT` configuration macro).
- Data types consolidation.

v1.1.0 - 28-Apr-2017

Added

- Supporting i.MX6SX and i.MX7D MPU platforms.
- Supporting LPC5411x MCU platform.
- Baremetal and FreeRTOS support.
- Support of copy and zero-copy transfer.
- Support of static API (without dynamic allocations).

Multicore Manager

MCUXpresso SDK : mcuxsdk-middleware-mcmgr (Multicore Manager)

Overview This repository is for MCUXpresso SDK Multicore Manager middleware delivery and it contains Multicore Manager component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run Multicore Manager examples that are based on mcux-sdk-middleware-mcmgr component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [Multicore Manager - Documentation](#) to review details on the contents in this sub-repo.


For Further API documentation, please look at [doxygen documentation](#)

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the mcmgr project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems. This library is distributed as a part of the Multicore SDK (MCSDK). Together, the MCSDK and the MCUXpresso SDK (SDK) form a framework for development of software for NXP multicore devices.

The MCMGR component is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr` directory.

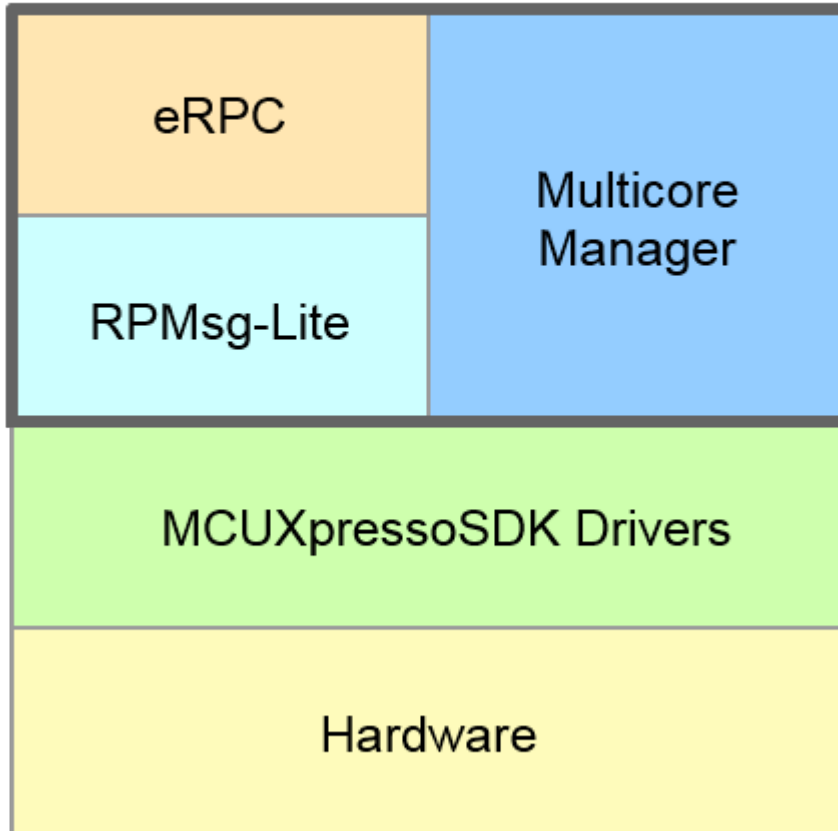

The Multicore Manager provides the following major functions:

- Maintains information about all cores in system.
- Secondary/auxiliary core(s) startup and shutdown.
- Remote core monitoring and event handling.

Usage of the MCMGR software component The main use case of MCMGR is the secondary/auxiliary core start. This functionality is performed by the public API function.

Example of MCMGR usage to start secondary core:

```

#include "mcmgr.h"

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
  
```

(continues on next page)

(continued from previous page)

```

    /* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass "1" as startup data,
    ↪starting synchronously. */
    MCMGR_StartCore(kMCMGR_Core1, CORE1_BOOT_ADDRESS, 1, kMCMGR_Start_Synchronous);
    .
    .
    .
    /* Stop secondary core execution. */
    MCMGR_StopCore(kMCMGR_Core1);
}

```

Some platforms allow stopping and re-starting the secondary core application again, using the MCMGR_StopCore / MCMGR_StartCore API calls. It is necessary to ensure the initially loaded image is not corrupted before re-starting, especially if it deals with the RAM target. Cache coherence has to be considered/ensured as well.

It could also happen that the secondary core application stops running correctly and the primary core application does not know about that situation. Therefore, it is beneficial to implement a mechanism for core health monitoring. The *test_heartbeat* unit test can serve as an example how to ensure that: secondary core could periodically send heartbeat signals to the primary core using MCMGR_TriggerEvent() API to indicate that it is alive and functioning properly.

Another important MCMGR feature is the ability for remote core monitoring and handling of events such as reset, exception, and application events. Application-specific callback functions for events are registered by the MCMGR_RegisterEvent() API. Triggering these events is done using the MCMGR_TriggerEvent() API. *mcmgr_event_type_t* enums all possible event types.

An example of MCMGR usage for remote core monitoring and event handling. Code for the primary side:

```

#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)
#define APP_NUMBER_OF_CORES (2)
#define APP_SECONDARY_CORE kMCMGR_Core1

/* Callback function registered via the MCMGR_RegisterEvent() and triggered by MCMGR_TriggerEvent()
↪called on the secondary core side */
void RMsgRemoteReadyEventHandler(mcmgr_core_t coreNum, uint16_t eventData, void *context)
{
    uint16_t *data = &((uint16_t *)context)[coreNum];

    *data = eventData;
}

void main()
{
    uint16_t RMsgRemoteReadyEventData[NUMBER_OF_CORES] = {0};

    /* Initialize MCMGR - low level multicore management library.
    Call this function as close to the reset entry as possible,
    (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Register the application event before starting the secondary core */
    MCMGR_RegisterEvent(kMCMGR_RemoteApplicationEvent, RMsgRemoteReadyEventHandler, (void
    ↪*)RMsgRemoteReadyEventData);
}

```

(continues on next page)

(continued from previous page)

```

/* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass rpmsg_lite_base address
↳as startup data, starting synchronously. */
MCMGR_StartCore(APP_SECONDARY_CORE, CORE1_BOOT_ADDRESS, (uint32_t)rpmsg_lite_
↳base, kMCMGR_Start_Synchronous);

/* Wait until the secondary core application signals the rpmsg remote has been initialized and is ready to
↳communicate. */
while(APP_RPMSG_READY_EVENT_DATA != RPSMsgRemoteReadyEventData[APP_SECONDARY_
↳CORE]) {};
.
.
.
}

```

Code for the secondary side:

```

#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)


void main()
{
/* Initialize MCMGR - low level multicore management library.
Call this function as close to the reset entry as possible,
(into the startup sequence) to allow CoreUp event triggering. */
MCMGR_EarlyInit();

/* Initialize MCMGR, install generic event handlers */
MCMGR_Init();
.
.
.

/* Signal the to other core that we are ready by triggering the event and passing the APP_RPMSG_
↳READY_EVENT_DATA */
MCMGR_TriggerEvent(kMCMGR_Core0, kMCMGR_RemoteApplicationEvent, APP_RPMSG_
↳READY_EVENT_DATA);
.
.
.
}

```

MCMGR Data Exchange Diagram The following picture shows how the handshakes are supposed to work between the two cores in the MCMGR software.

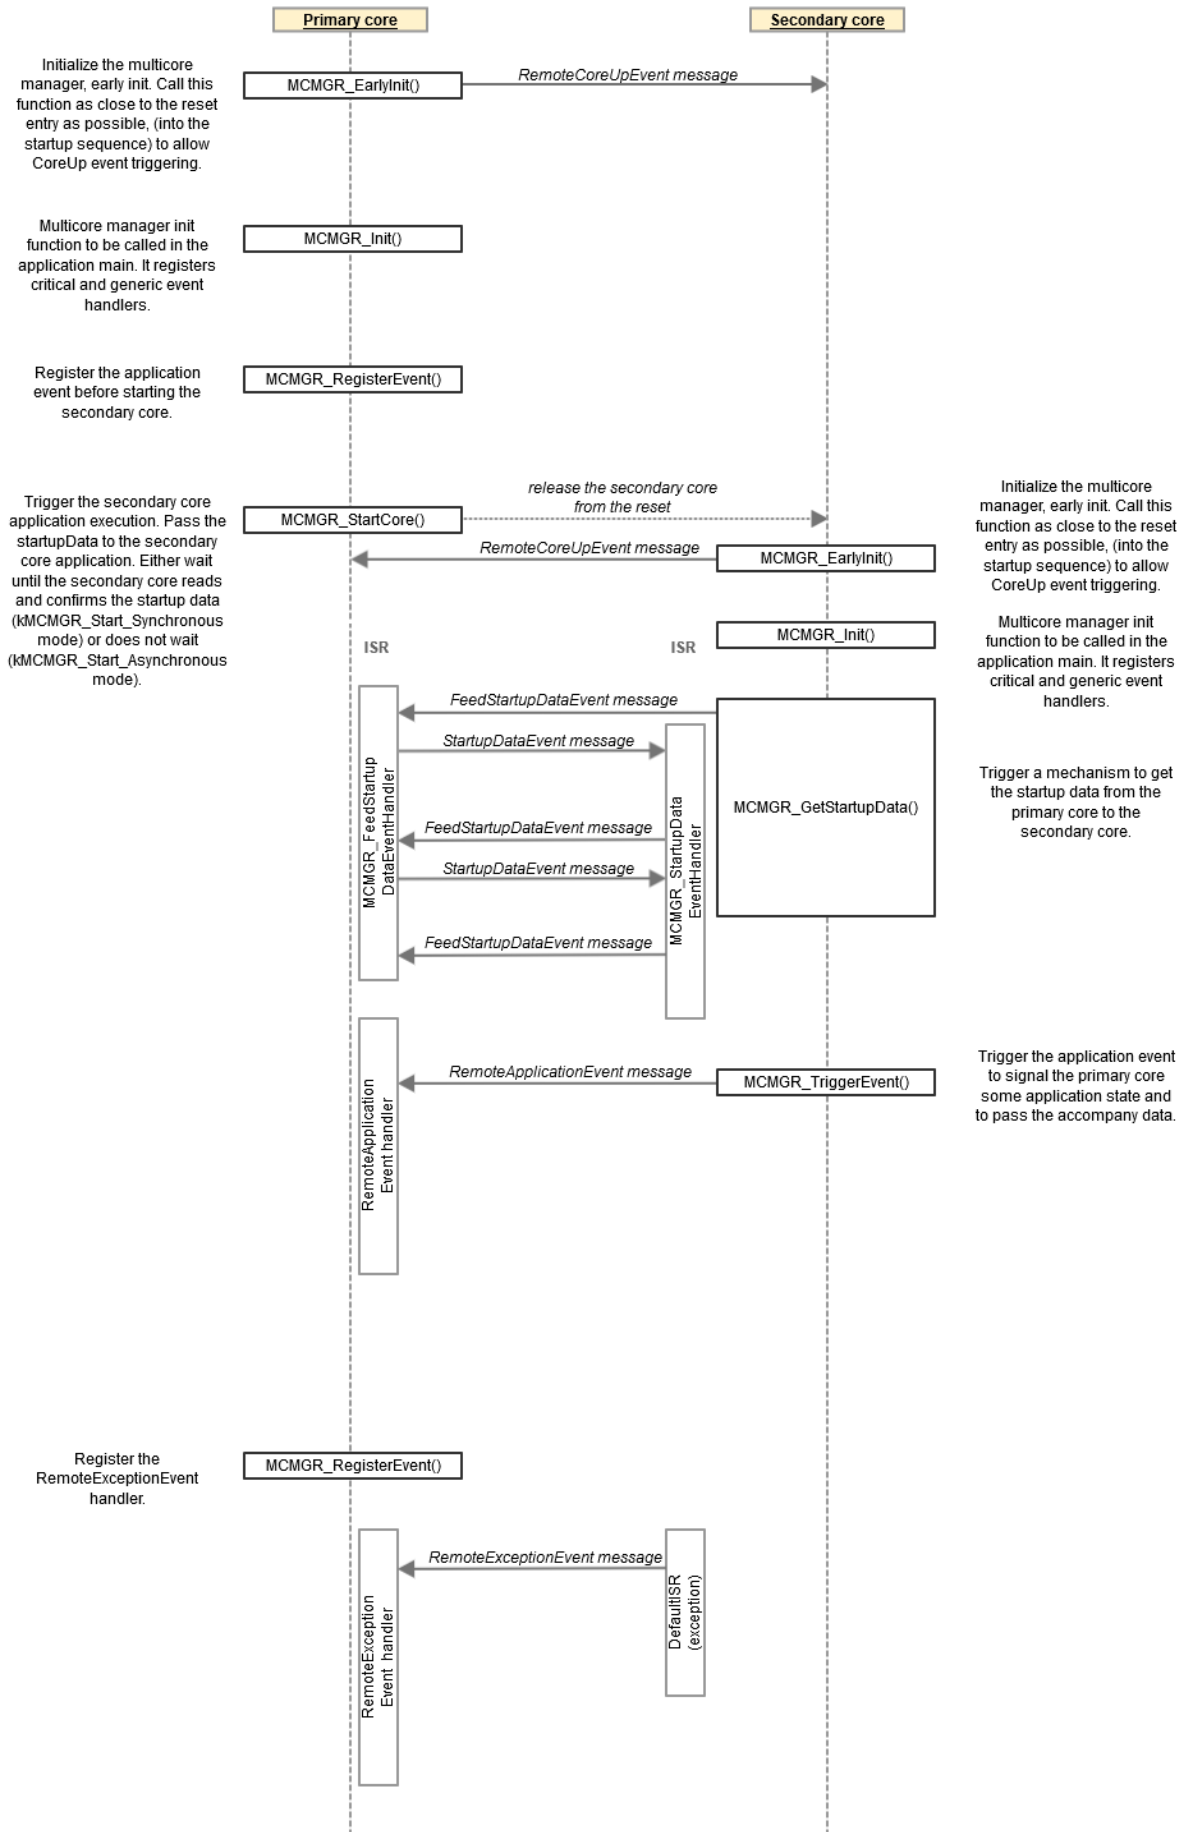

Changelog Multicore Manager All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[v5.0.2]

Added

- Added gcov options and configs to support mcmgr code coverage
- Added new test_weak_mu_isr testcase for devices with MU peripheral
- Added new test_heartbeat testcase showing heartbeat mechanism between primary and secondary cores using the MCMGR

v5.0.1

Added

- Added frdmimxrt1186 unit testing

Changed

- [KW43] Rename core#1 reset control register

Fixed

- Added CX flag into CMakeLists.txt to allow c++ build compatibility.
- Fix path to mcmgr headers directory in doxyfile

v5.0.0

Added

- Added MCMGR_BUSY_POLL_COUNT macro to prevent infinite polling loops in MCMGR operations.
- Implemented timeout mechanism for all polling loops in MCMGR code.
- Added support to handle more than two cores. Breaking API change by adding parameter coreNum specifying core number in functions bellow.
 - MCMGR_GetStartupData(uint32_t *startupData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEvent(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEventForce(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - typedef void (*mcmgr_event_callback_t)(uint16_t data, void *context, mcmgr_core_t coreNum);

When registering the event with function `MCMGR_RegisterEvent()` user now needs to provide `callbackData` pointer to array of elements per every core in system (see `README.md` for example). In case of systems with only two cores the `coreNum` in callback can be ignored as events can arrive only from one core. Please see Porting guide for more details: `Porting-GuideTo_v5.md`

- Updated all porting files to support new MCMGR API.
- Added new platform specific include file `mcmgr_platform.h`. It will contain common platform specific macros that can be then used in `mcmgr` and application. e.g. platform core count `MCMGR_CORECOUNT 4`.
- Move all header files to new `inc` directory.
- Added new platform-specific include files `inc/platform/<platform_name>/mcmgr_platform.h`.

Added

- Add MCXL20 porting layer and unit testing

v4.1.7

Fixed

- `mcmgr_stop_core_internal()` function now returns `kStatus_MCMGR_NotImplemented` status code instead of `kStatus_MCMGR_Success` when device does not support stop of secondary core. Ports affected: `kw32w1`, `kw45b41`, `kw45b42`, `mcxw716`, `mcxw727`.

[v4.1.6]

Added

- Multicore Manager moved to standalone repository.
- Add porting layers for `imxrt700`, `mcmxw727`, `kw47b42`.
- New `MCMGR_ProcessDeferredRxIsr()` API added.

[v4.1.5]

Added

- Add notification into `MCMGR_EarlyInit` and `mcmgr_early_init_internal` functions to avoid using uninitialized data in their implementations.

[v4.1.4]

Fixed

- Avoid calling tx isr callbacks when respective Messaging Unit Transmit Interrupt Enable flag is not set in the CR/TCR register.
- Messaging Unit RX and status registers are cleared after the initialization.

[v4.1.3]

Added

- Add porting layers for imxrt1180.

Fixed

- mu_isr() updated to avoid calling tx isr callbacks when respective Transmit Interrupt Enable flag is not set in the CR/TCR register.
- mcmgr_mu_internal.c code adaptation to new supported SoCs.

[v4.1.2]

Fixed

- Update mcmgr_stop_core_internal() implementations to set core state to kMCMGR_ResetCoreState.

[v4.1.0]

Fixed

- Code adjustments to address MISRA C-2012 Rules

[v4.0.3]

Fixed

- Documentation updated to describe handshaking in a graphic form.
- Minor code adjustments based on static analysis tool findings

[v4.0.2]

Fixed

- Align porting layers to the updated MCUXpressoSDK feature files.

[v4.0.1]

Fixed

- Code formatting, removed unused code

[v4.0.0]

Added

- Add new MCMGR_TriggerEventForce() API.

[v3.0.0]

Removed

- Removed MCMGR_LoadApp(), MCMGR_MapAddress() and MCMGR_SignalReady()

Modified

- Modified MCMGR_GetStartupData()

Added

- Added MCMGR_EarlyInit(), MCMGR_RegisterEvent() and MCMGR_TriggerEvent()
- Added the ability for remote core monitoring and event handling

[v2.0.1]

Fixed

- Updated to be Misra compliant.

[v2.0.0]

Added

- Support for lpcxpresso54114 board.

[v1.1.0]

Fixed

- Ported to KSDK 2.0.0.

[v1.0.0]

Added

- Initial release.

eRPC

MCUXpresso SDK : mcuxsdk-middleware-erpc

Overview This repository is for MCUXpresso SDK eRPC middleware delivery and it contains eRPC component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run eRPC examples that are based on mcux-sdk-middleware-erpc component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [eRPC - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the eRPC project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

eRPC

- [MCUXpresso SDK : mcuxsdk-middleware-erpc](#)
 - [Overview](#)
 - [Documentation](#)
 - [Setup](#)
 - [Contribution](#)
- [eRPC](#)
 - [About](#)
 - [Releases](#)
 - * [Edge releases](#)
 - [Documentation](#)
 - [Examples](#)
 - [References](#)
 - [Directories](#)
 - [Building and installing](#)
 - * [Requirements](#)
 - [Windows](#)
 - [Mac OS X](#)
 - * [Building](#)
 - [CMake and KConfig](#)
 - [Make](#)

- * *Installing for Python*

- *Known issues and limitations*
- *Code providing*

About

eRPC (Embedded RPC) is an open source Remote Procedure Call (RPC) system for multichip embedded systems and heterogeneous multicore SoCs.

Unlike other modern RPC systems, such as the excellent [Apache Thrift](#), eRPC distinguishes itself by being designed for tightly coupled systems, using plain C for remote functions, and having a small code size (<5kB). It is not intended for high performance distributed systems over a network.

eRPC does not force upon you any particular API style. It allows you to export existing C functions, without having to change their prototypes. (There are limits, of course.) And although the internal infrastructure is written in C++, most users will be able to use only the simple C setup APIs shown in the examples below.

A code generator tool called `erpcgen` is included. It accepts input IDL files, having an `.erpc` extension, that have definitions of your data types and remote interfaces, and generates the shim code that handles serialization and invocation. `erpcgen` can generate either C/C++ or Python code.

Example `.erpc` file:

```
// Define a data type.
enum LEDName { kRed, kGreen, kBlue }

// An interface is a logical grouping of functions.
interface IO {
    // Simple function declaration with an empty reply.
    set_led(LEDName whichLed, bool onOrOff) -> void
}
}
```

Client side usage:

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* init eRPC client IO service */
    initIO_client(client_manager);

    // Now we can call the remote function to turn on the green LED.
    set_led(kGreen, true);

    /* deinit objects */
    deinitIO_client();
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
}
```

(continues on next page)

(continued from previous page)

```

    erpc_transport_tcp_deinit(transport);
}

void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* scope for client service */
    {
        /* init eRPC client IO service */
        IO_client client(client_manager);

        // Now we can call the remote function to turn on the green LED.
        client.set_led(kGreen, true);
    }

    /* deinit objects */
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

Server side usage:

```

// Implement the remote function.
void set_led(LEDName whichLed, bool onOrOff) {
    // implementation goes here
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    erpc_service_t service = create_IO_service();

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, service);

    // Run the server.
    erpc_server_run();

    /* deinit objects */
    destroy_IO_service(service);
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

```

// Implement the remote function.
class IO : public IO_interface

```

(continues on next page)

(continued from previous page)

```
{
  /* eRPC call definition */
  void set_led(LEDName whichLed, bool onOrOff) override {
    // implementation goes here
  }
}

void example_server(void) {
  erpc_transport_t transport;
  erpc_mbf_t message_buffer_factory;
  erpc_server_t server;
  IO IOImpl;
  IO_service io(&IOImpl);

  /* Init eRPC server infrastructure */
  transport = erpc_transport_cmsis_uart_init(Driver_USART0);
  message_buffer_factory = erpc_mbf_dynamic_init();
  server = erpc_server_init(transport, message_buffer_factory);

  /* add custom service implementation to the server */
  erpc_add_service_to_server(server, &io);

  /* poll for requests */
  erpc_status_t err = server.run();

  /* deinit objects */
  erpc_server_deinit(server);
  erpc_mbf_dynamic_deinit(message_buffer_factory);
  erpc_transport_tcp_deinit(transport);
}
```

A number of transports are supported, and new transport classes are easy to write.

Supported transports can be found in *erpc/erpc_c/transport* folder. E.g:

- CMSIS UART
- NXP Kinetis SPI and DSPI
- POSIX and Windows serial port
- TCP/IP (mostly for testing)
- NXP RPMsg-Lite / RPMsg TTY
- SPIdev Linux
- USB CDC
- NXP Messaging Unit

eRPC is available with an unrestrictive BSD 3-clause license. See the [LICENSE](#) file for the full license text.

Releases [eRPC releases](#)

Edge releases Edge releases can be found on [eRPC CircleCI](#) webpage. Choose build of interest, then platform target and choose ARTIFACTS tab. Here you can find binary application from chosen build.

Documentation Documentation is in the [wiki](#) section.

[eRPC Infrastructure documentation](#)

Examples *Example IDL* is available in the *examples/* folder.

Plenty of eRPC multicore and multiprocessor examples can be also found in NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages.

To get the board list with multicore support (eRPC included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded, see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for eRPC multicore examples (RPMsg_Lite or Messaging Unit transports used) or

<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples for eRPC multiprocessor examples (UART or SPI transports used).

eRPC examples use the 'erpc_' name prefix.

Another way of getting NXP MCUXpressoSDK eRPC multicore and multiprocessor examples is using the [mcux-sdk](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk repo in [readme Overview section](#). Once done the armgcc eRPC examples can be found in

mcuxsdk/examples/<board_name>/multicore_examples or in

mcuxsdk/examples/<board_name>/multiprocessor_examples folders.

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the eRPC examples use the 'erpc_' name prefix.

References This section provides links to interesting erpc-based projects, articles, blogs or guides:

- [erpc \(EmbeddedRPC\) getting started notes](#)
- [ERPC Linux Local Environment Construction and Use](#)
- [The New Wio Terminal eRPC Firmware](#)

Directories *doc* - Documentation.

doxygen - Configuration and support files for running Doxygen over the eRPC C++ infrastructure and erpcgen code.

erpc_c - Holds C/C++ infrastructure for eRPC. This is the code you will include in your application.

erpc_python - Holds Python version of the eRPC infrastructure.

erpcgen - Holds source code for erpcgen and makefiles or project files to build erpcgen on Windows, Linux, and OS X.

erpcsniffer - Holds source code for erpcsniffer application.

examples - Several example IDL files.

mk - Contains common makefiles for building eRPC components.

test - Client/server tests. These tests verify the entire communications path from client to server and back.

utilities - Holds utilities which bring additional benefit to eRPC apps developers.

Building and installing These build instructions apply to host PCs and embedded Linux. For bare metal or RTOS embedded environments, you should copy the *erpc_c* directory into your application sources.

CMake and KConfig build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests and examples.

CMake is compatible with gcc and clang. On Windows local MingGW downloaded by *script* can be used.

Make build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests.

The makefiles are compatible with gcc or clang on Linux, OS X, and Cygwin. A Windows build of *erpcgen* using Visual Studio is also available in the *erpcgen/VisualStudio_v14* directory. There is also an Xcode project file in the *erpcgen* directory, which can be used to build *erpcgen* for OS X.

Requirements eRPC now support building **erpcgen**, **erpc_lib**, **tests** and **C examples** using CMake.

Requirements when using CMake:

- **CMake** (minimal version 3.20.0)
- Generator - **Make**, **Ninja**, ...
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Binson** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Requirements when using Make:

- **Make**
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Binson** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Windows Related steps to build **erpcgen** using **Visual Studio** are described in *erpcgen/VisualStudio_v14/readme_erpcgen.txt*.

To install MinGW, Bison, Flex locally on Windows:

```
./install_dependencies.ps1
* ***

#### Linux

``` bash
./install_dependencies.sh
```

Mandatory for case, when build for different architecture is needed

- **gcc-multilib**, **g++-multilib**

#### **Mac OS X**

```
./install_dependencies.sh
```

## Building

**CMake and KConfig** eRPC use CMake and KConfig to configurate and build eRPC related targets. KConfig can be edited by *prj.conf* or *menuconfig* when building.

Generate project, config and build. In *erpc/* execute:

```
cmake -B ./build # in erpc/build generate cmake project
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and
↳examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

**\*\*CMake will use the system's default compilers and generator**

If you want to use Windows and locally installed MinGW, use *CMake preset* :

```
cmake --preset mingw64 # Generate project in ./build using mingw64's make and compilers
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and
↳examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

**Make** To build the library and erpcgen, run from the repo root directory:

```
make
```

To install the library, erpcgen, and include files, run:

```
make install
```

You may need to sudo the make install.

By default this will install into */usr/local*. If you want to install elsewhere, set the *PREFIX* environment variable. Example for installing into */opt*:

```
make install PREFIX=/opt
```

List of top level Makefile targets:

- erpc: build the liberpc.a static library
- erpcgen: build the erpcgen tool
- erpcsniffer: build the sniffer tool
- test: build the unit tests under the *test* directory
- all: build all of the above
- install: install liberpc.a, erpcgen, and include files

eRPC code is validated with respect to the C++ 11 standard.

**Installing for Python** To install the Python infrastructure for eRPC see instructions in the *erpc python readme*.

### Known issues and limitations

- Static allocations controlled by the `ERPC_ALLOCATION_POLICY` config macro are not fully supported yet, i.e. not all erpc objects can be allocated statically now. It deals with the ongoing process and the full static allocations support will be added in the future.

**Code providing** Repository on Github contains two main branches: **main** and **develop**. Code is developed on **develop** branch. Release version is created via merging **develop** branch into **main** branch.

---

Copyright 2014-2016 Freescale Semiconductor, Inc.

Copyright 2016-2025 NXP

### eRPC Getting Started

**Overview** This *Getting Started User Guide* shows software developers how to use Remote Procedure Calls (RPC) in embedded multicore microcontrollers (eRPC).

The eRPC documentation is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

**Create an eRPC application** This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
  1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
  2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
  3. Add infrastructure files.
  4. Add user code for client and server applications.
  5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


**Multicore server application** The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4/iar/`

The project files for the eRPC server have the `_cm4` suffix.

**Server project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

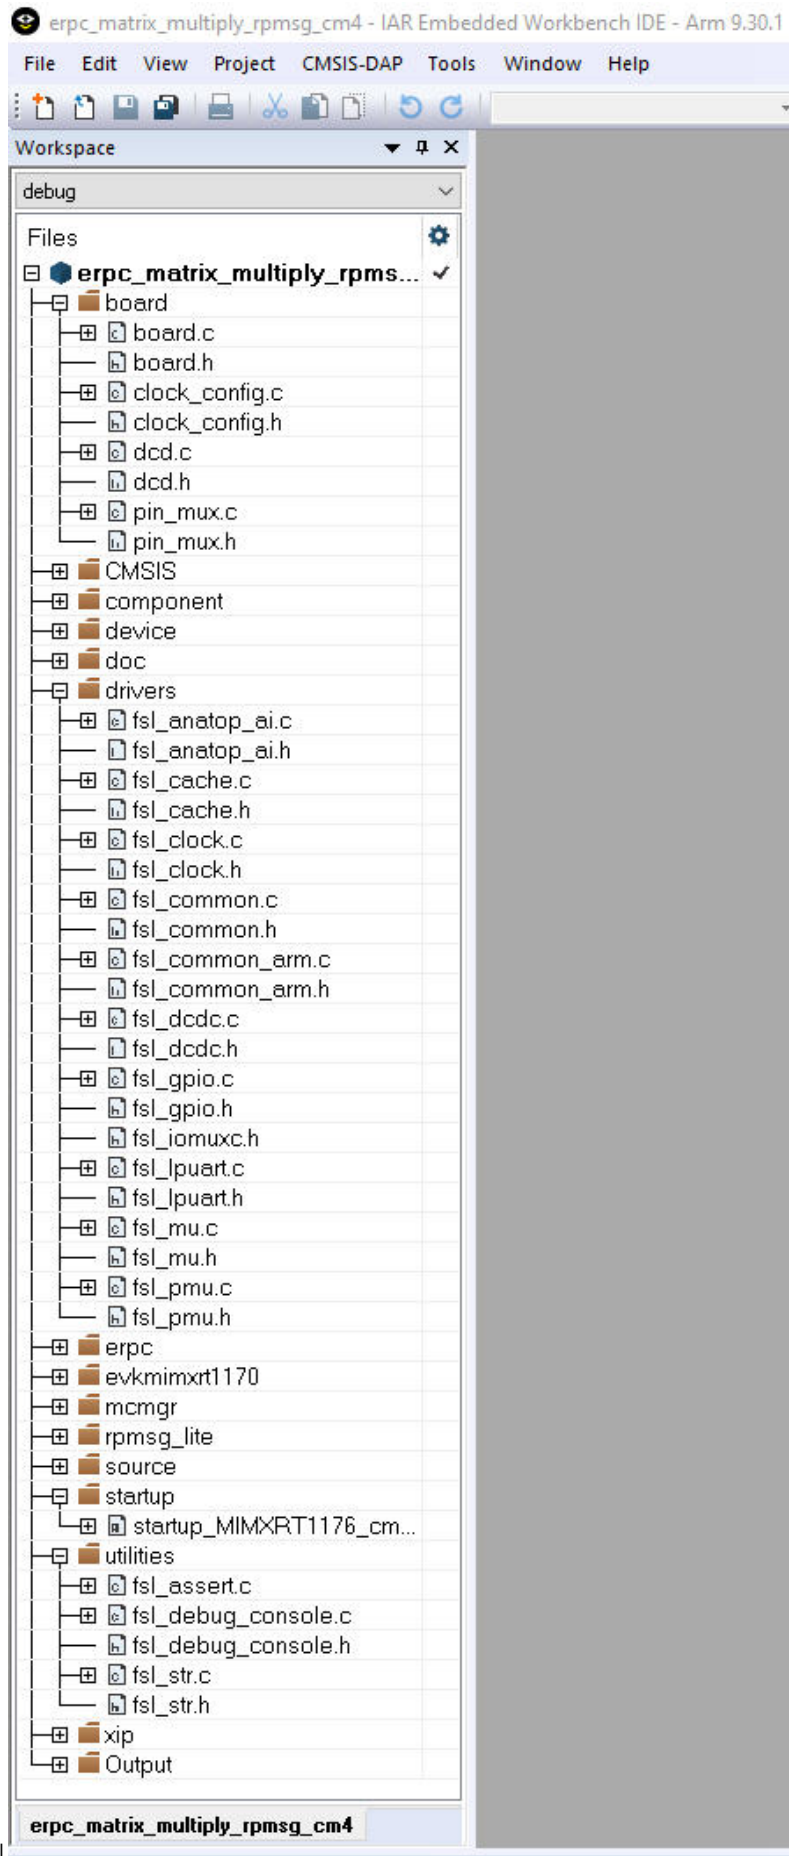

|


**Parent topic:**Multicore server application

**Server related generated files** The server-related generated files are:

- erpc\_matric\_multiply.h
- erpc\_matrix\_multiply\_server.h
- erpc\_matrix\_multiply\_server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/s`

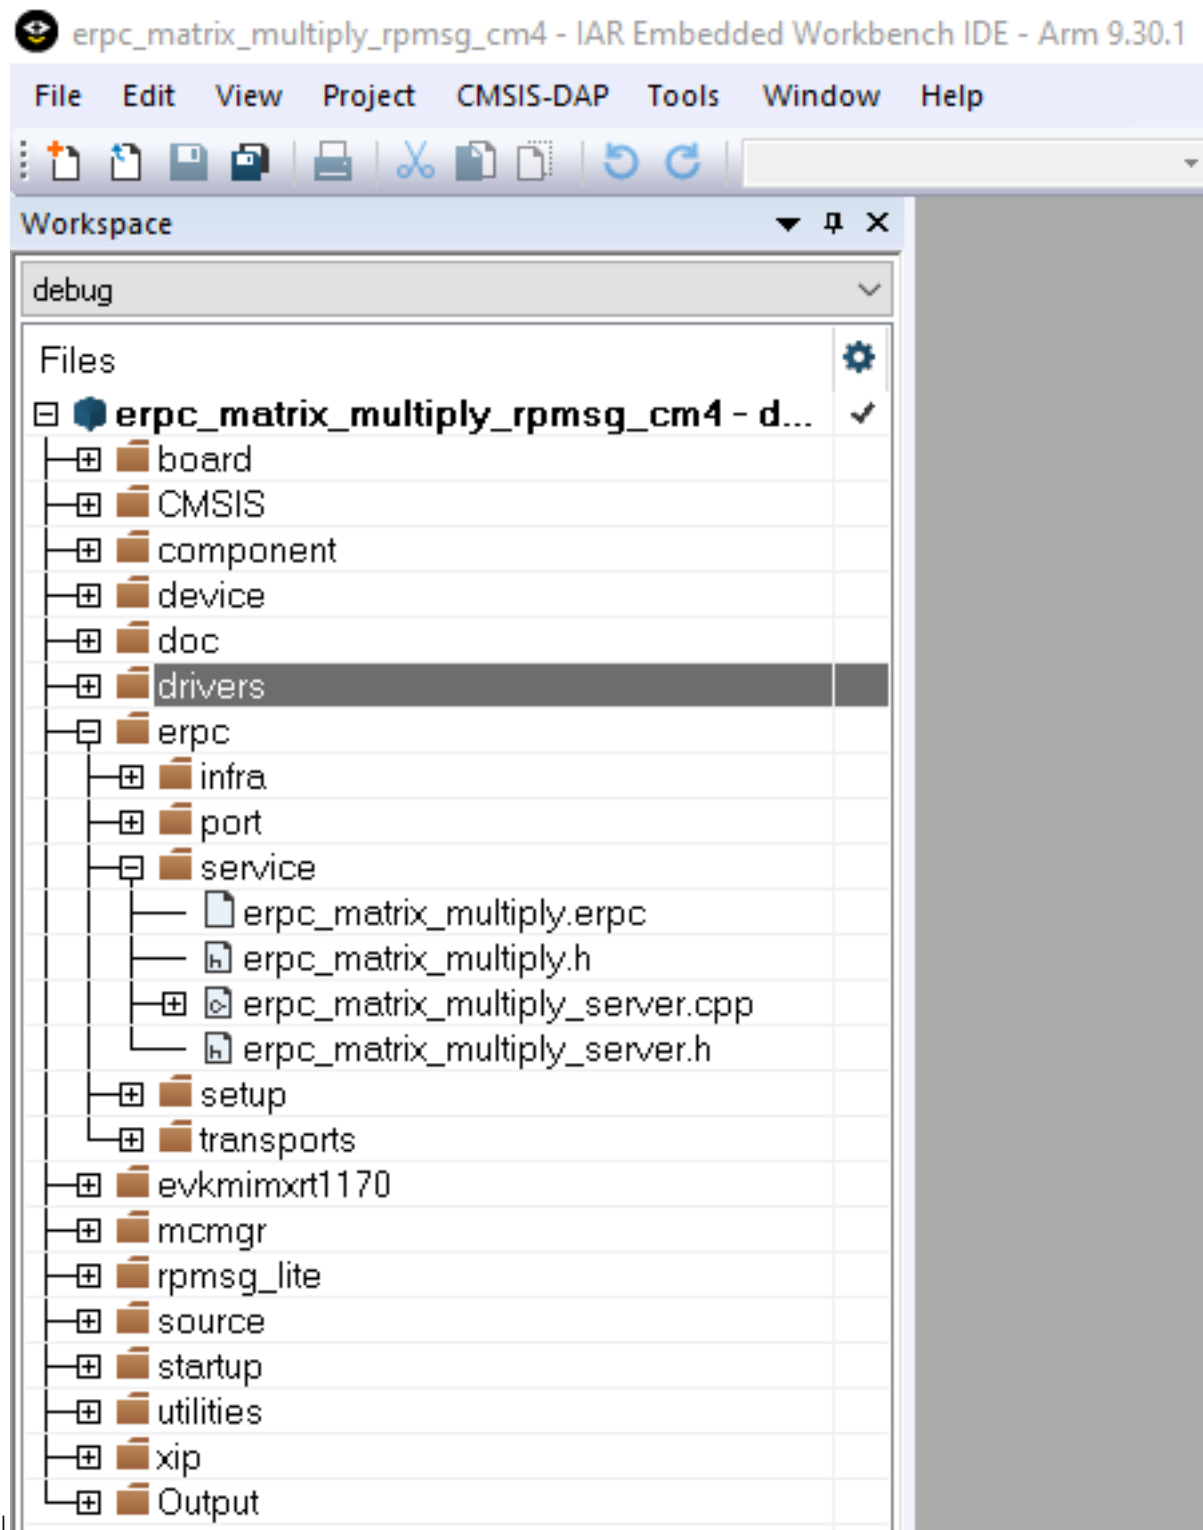


**Parent topic:**Multicore server application

**Server infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
  - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
  - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
  - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
  - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
  - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
  - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
  - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
  - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
  - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
  - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
  - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
  - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
  - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

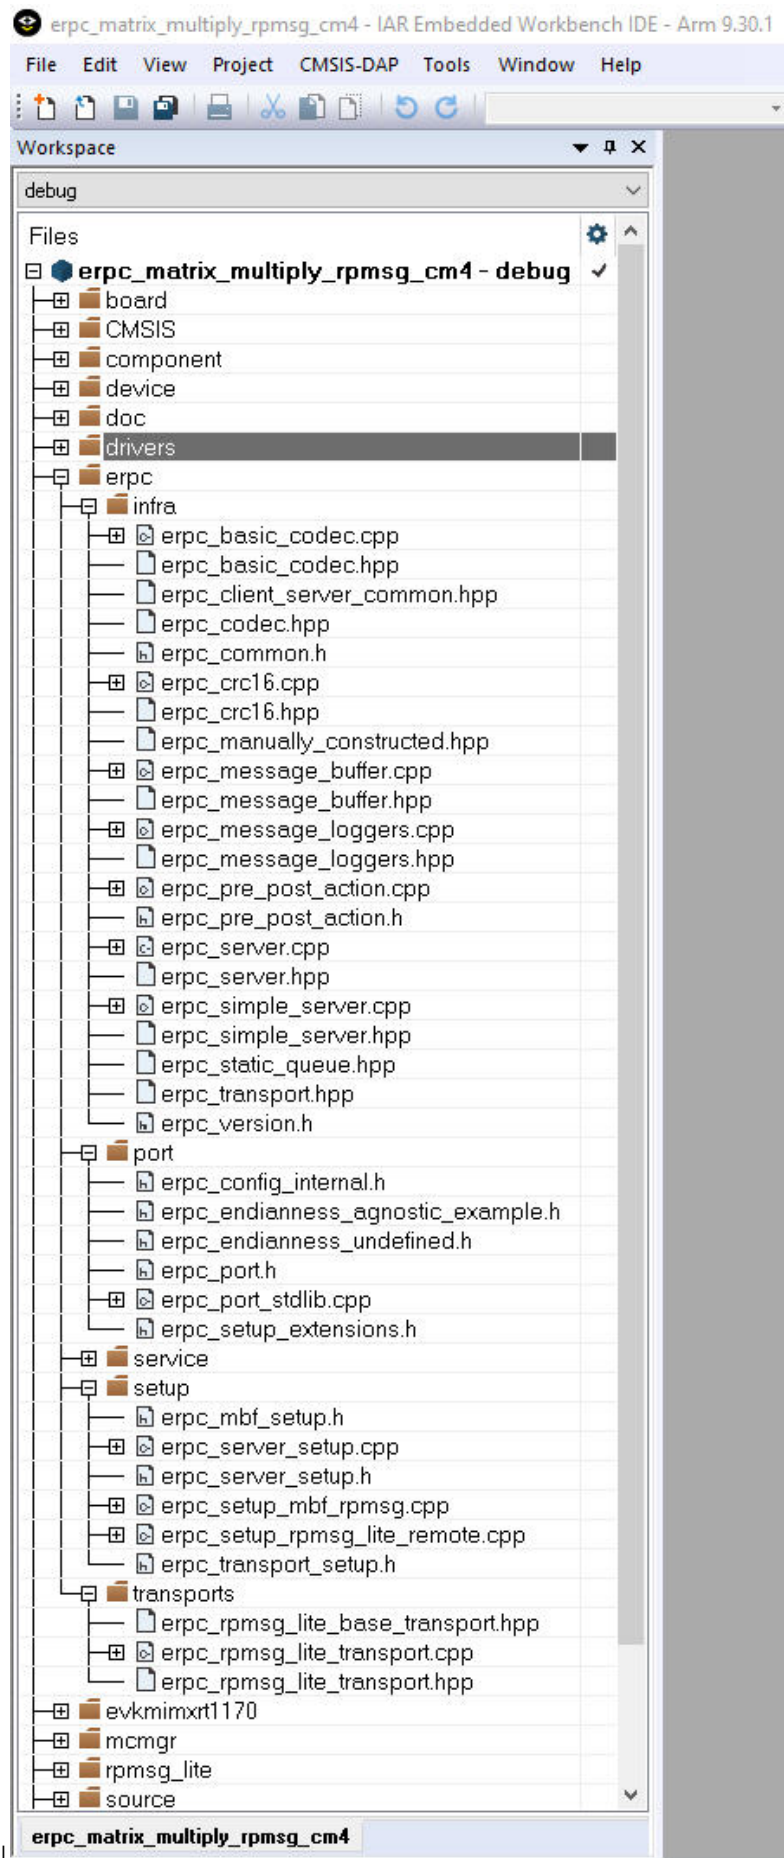

|


**Parent topic:**Multicore server application

**Server multicore infrastructure files** Because of the RPLite (transport layer), it is also necessary to include RPLite related files, which are in the following folder:

*<MCUXpressoSDK\_install\_dir>/middleware/multicore/rplite/*

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

*<MCUXpressoSDK\_install\_dir>/middleware/multicore/mcmgr/*

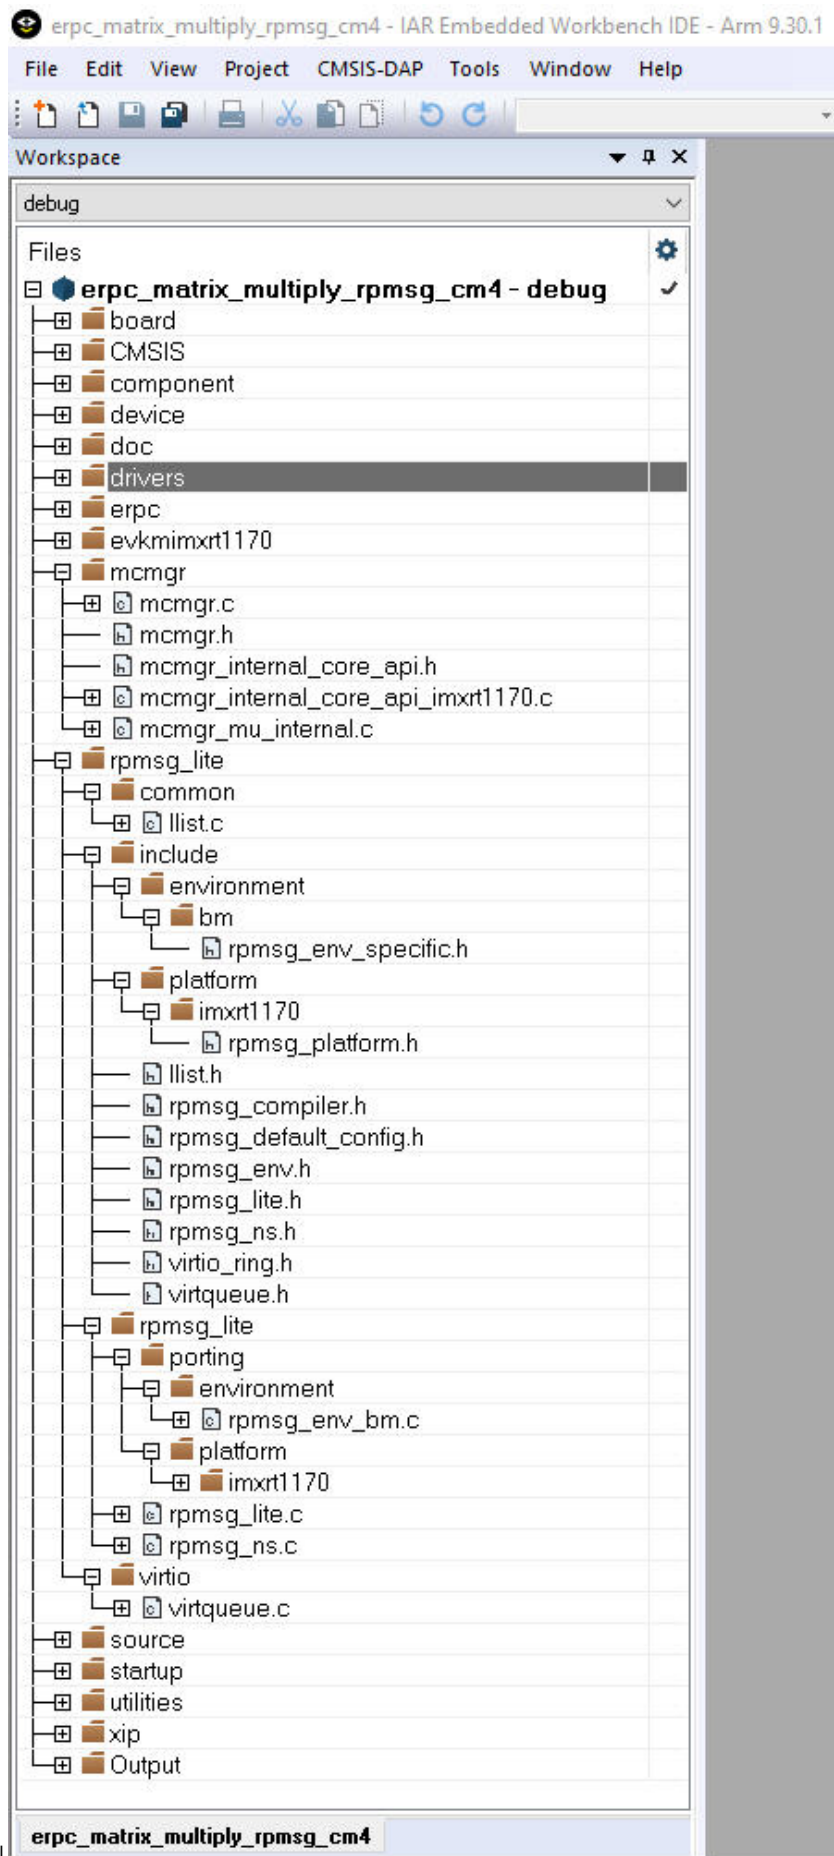

|  
**Parent topic:**Multicore server application

**Server user code** The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`

The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.


The eRPC-relevant code is captured in the following code snippet:

```

/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
 ...
}
int main()
{
 ...
 /* RPMsg-Lite transport layer initialization */
 erpc_transport_t transport;
 transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
 ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_rpmsg_init(transport);
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server);
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}

```

Except for the application main file, there are configuration files for the RPSMsg-Lite (`rpmsg_config.h`) and eRPC (`erpc_config.h`), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/ erpc_matrix_multiply_rpmsg` folder.

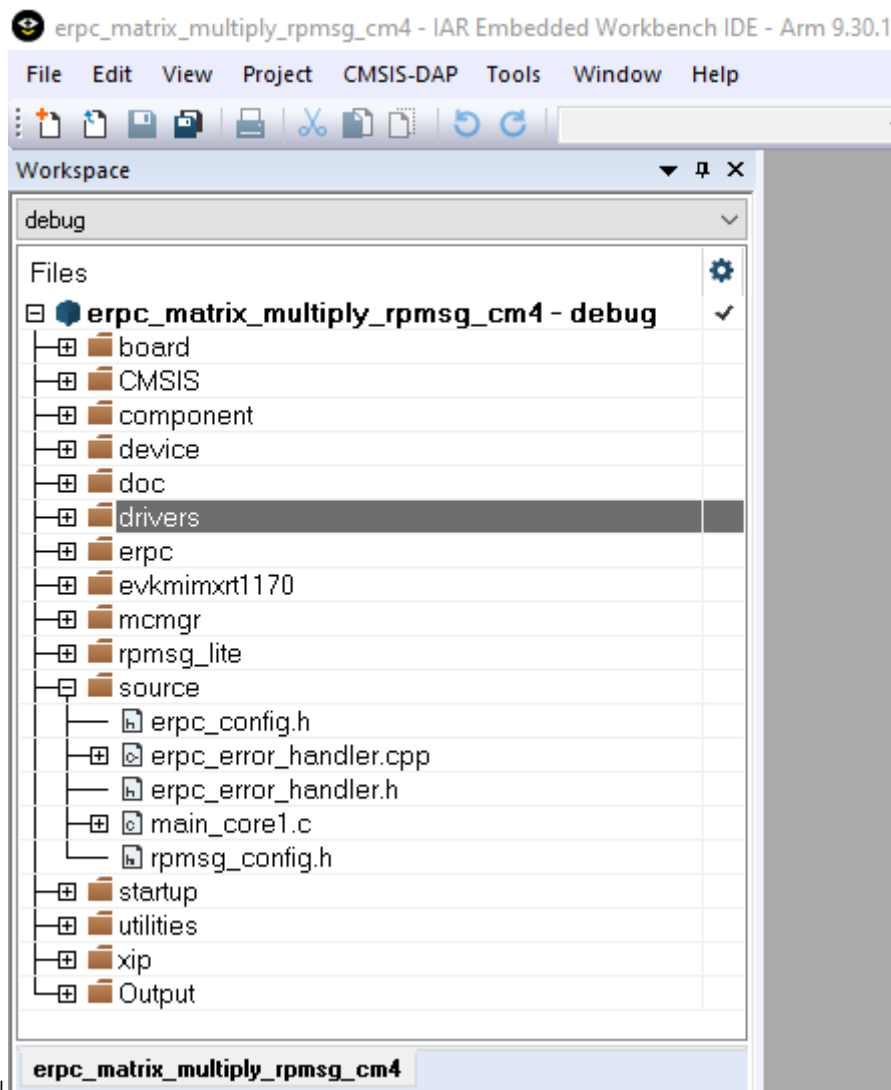

**Parent topic:**Multicore server application

**Parent topic:**[Create an eRPC application](#)


**Multicore client application** The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

**Client project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

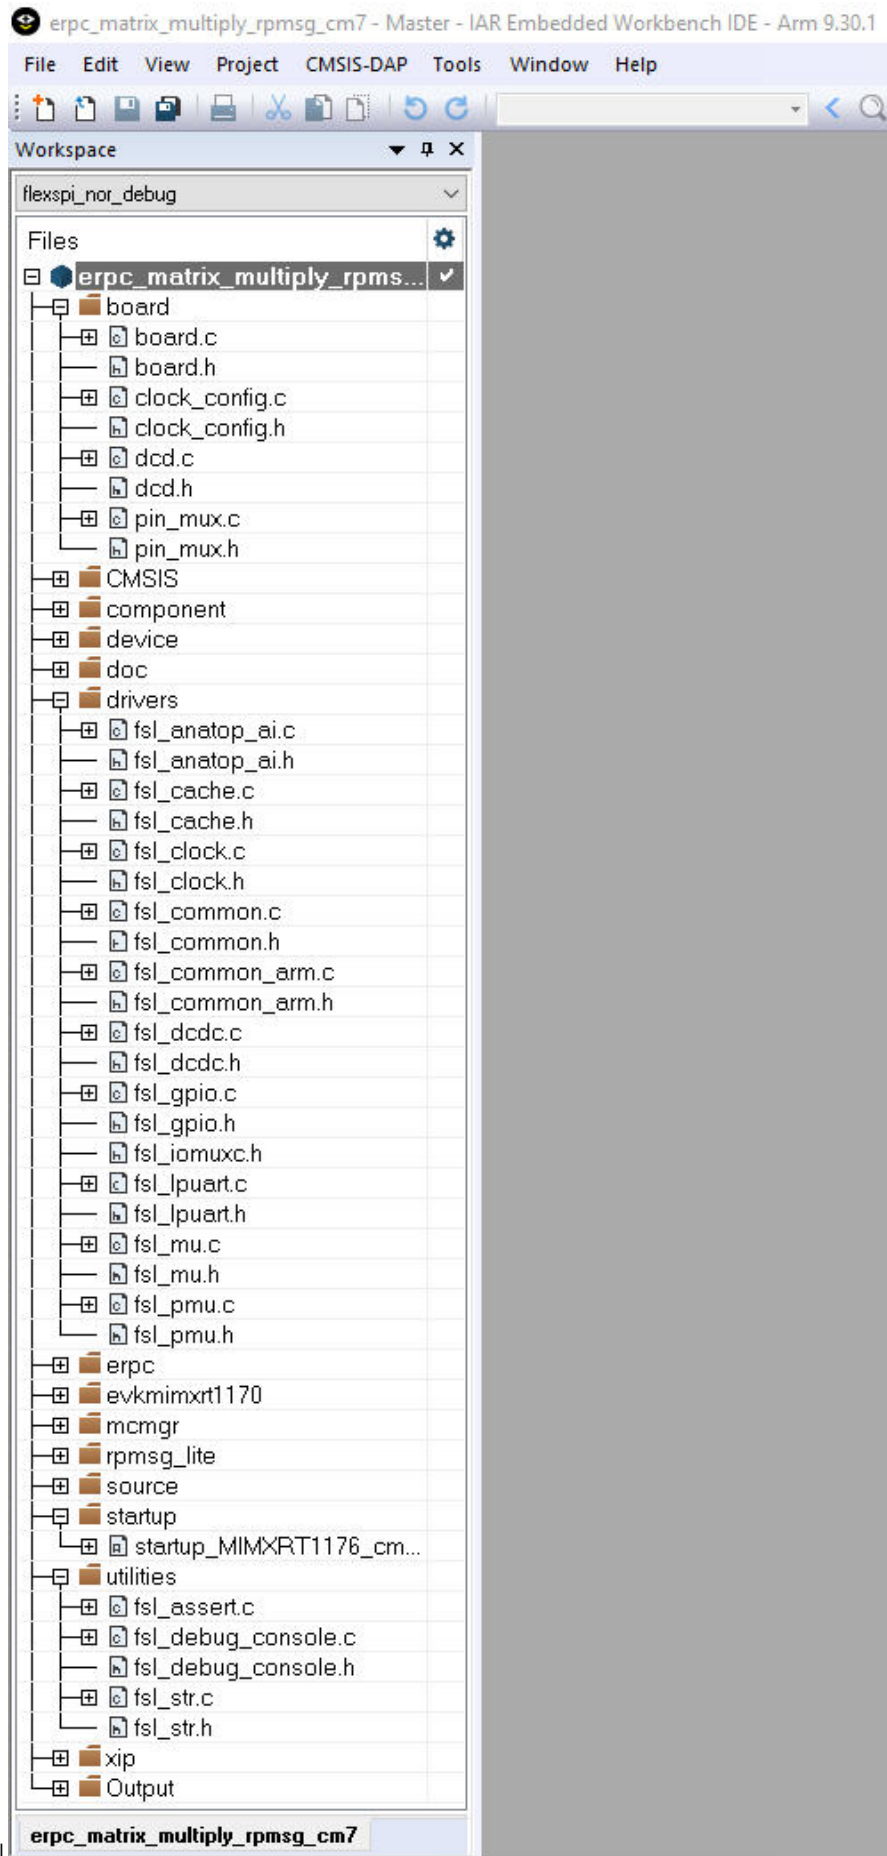


|

**Parent topic:**Multicore client application

**Client-related generated files** The client-related generated files are:

- erpc\_matric\_multiply.h
- erpc\_matrix\_multiply\_client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

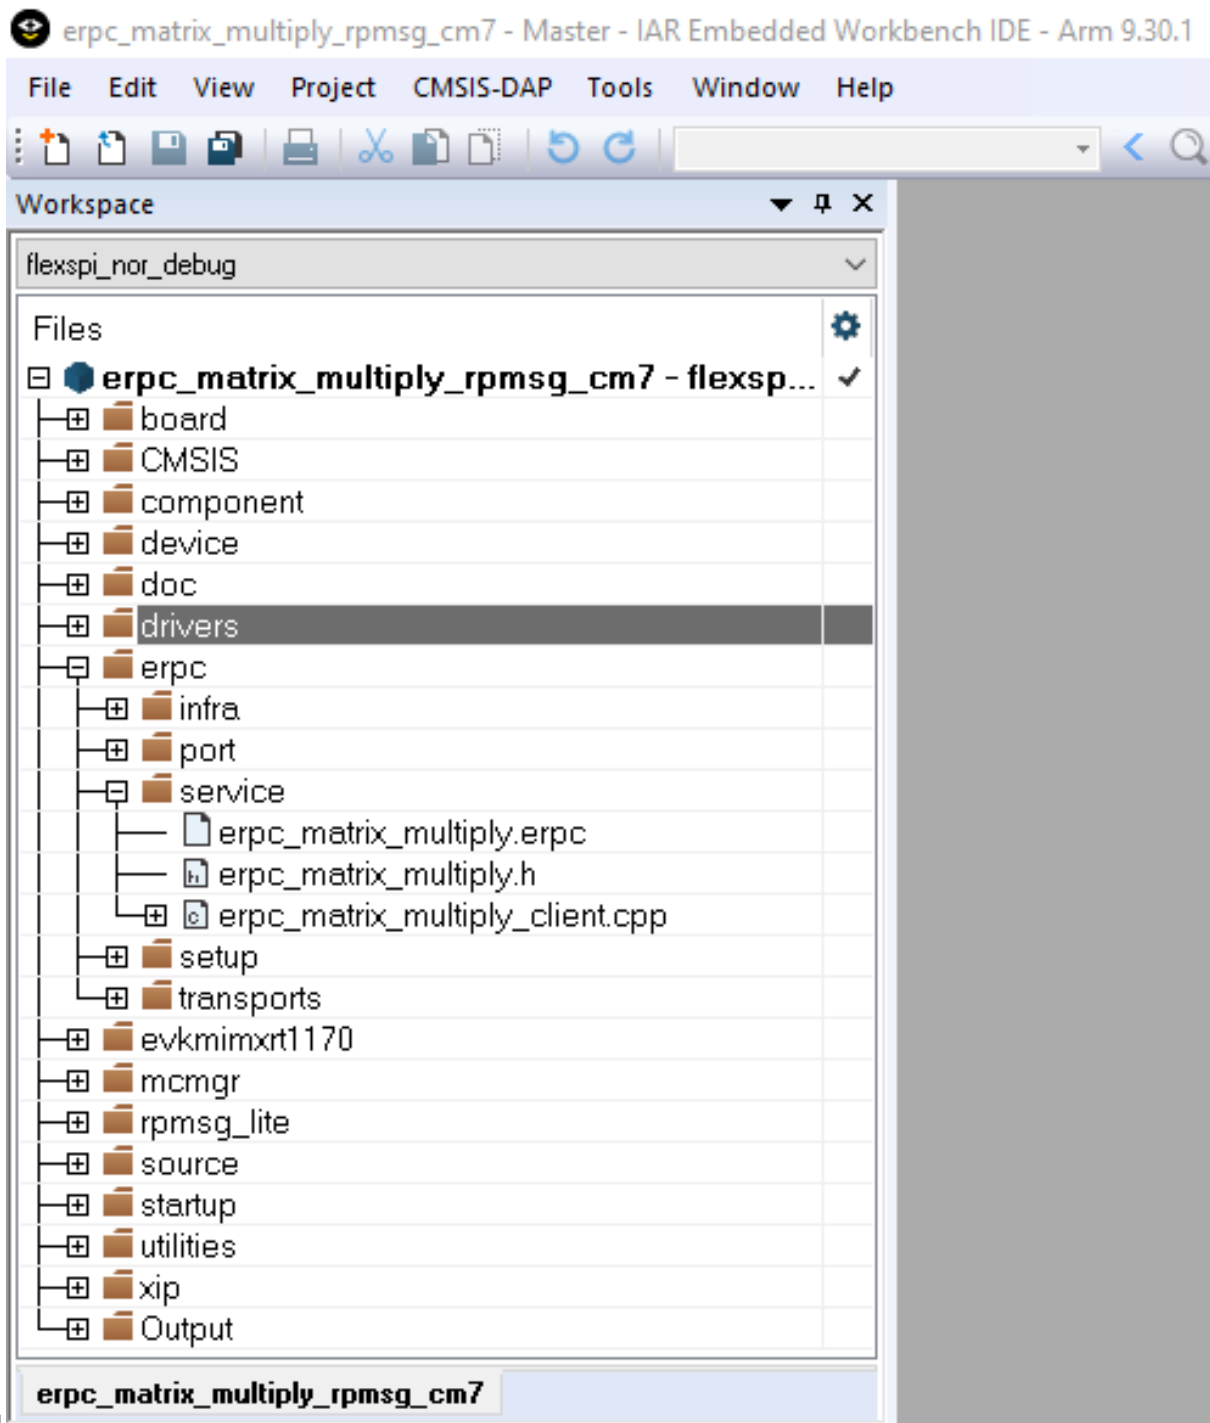

**Parent topic:**Multicore client application

**Client infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

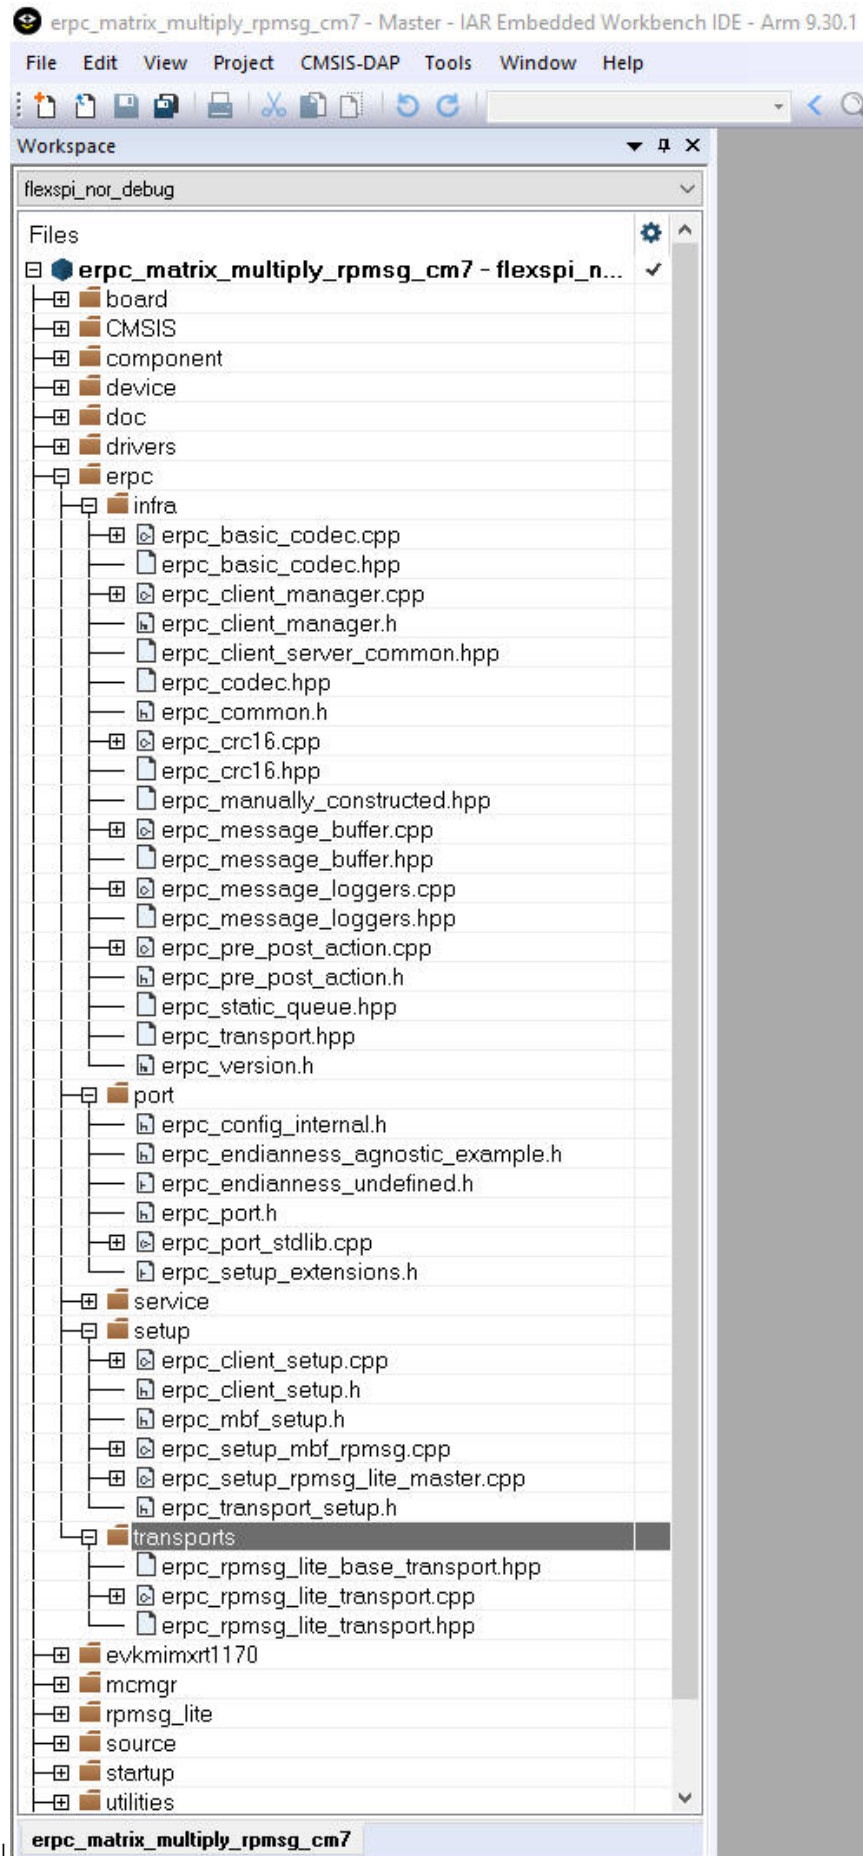

|

**Parent topic:**Multicore client application


**Client multicore infrastructure files** Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

*<MCUXpressoSDK\_install\_dir>/middleware/multicore/rpmsg\_lite/*

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

*<MCUXpressoSDK\_install\_dir>/middleware/multicore/mcmgr/*

erpc\_matrix\_multiply\_rpmsg\_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1

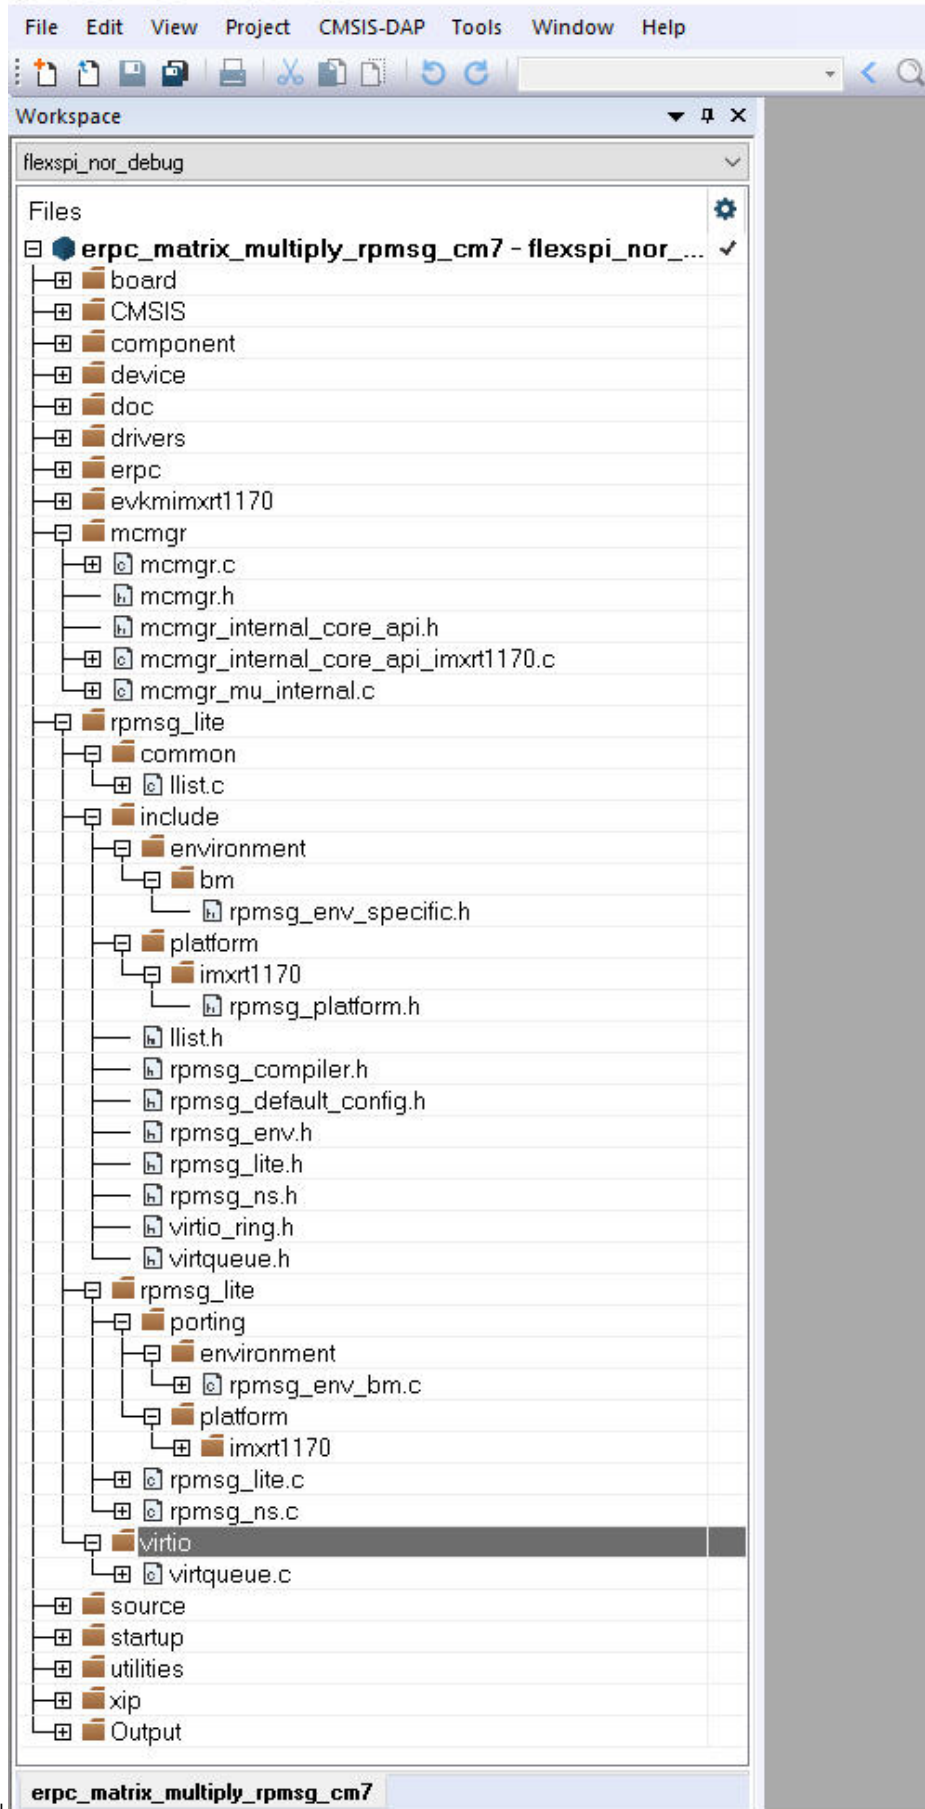

|  
**Parent topic:**Multicore client application

**Client user code** The client's user code is stored in the main\_core0.c file, located in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_example/erpc\_matrix\_multiply\_rpmsg/cm7

The main\_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc\_error\_handler.h and erpc\_error\_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPSMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
/* Invoke the erpcMatrixMultiply function */
erpcMatrixMultiply(matrix1, matrix2, result_matrix);
...
/* Check if some error occurred in eRPC */
if (g_erpc_error_occurred)
{
/* Exit program loop */
break;
}
...
}
```

Except for the application main file, there are configuration files for the RPSMsg-Lite (rpmsg\_config.h) and eRPC (erpc\_config.h), located in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_examples/erpc\_matrix\_multiply\_rpmsg

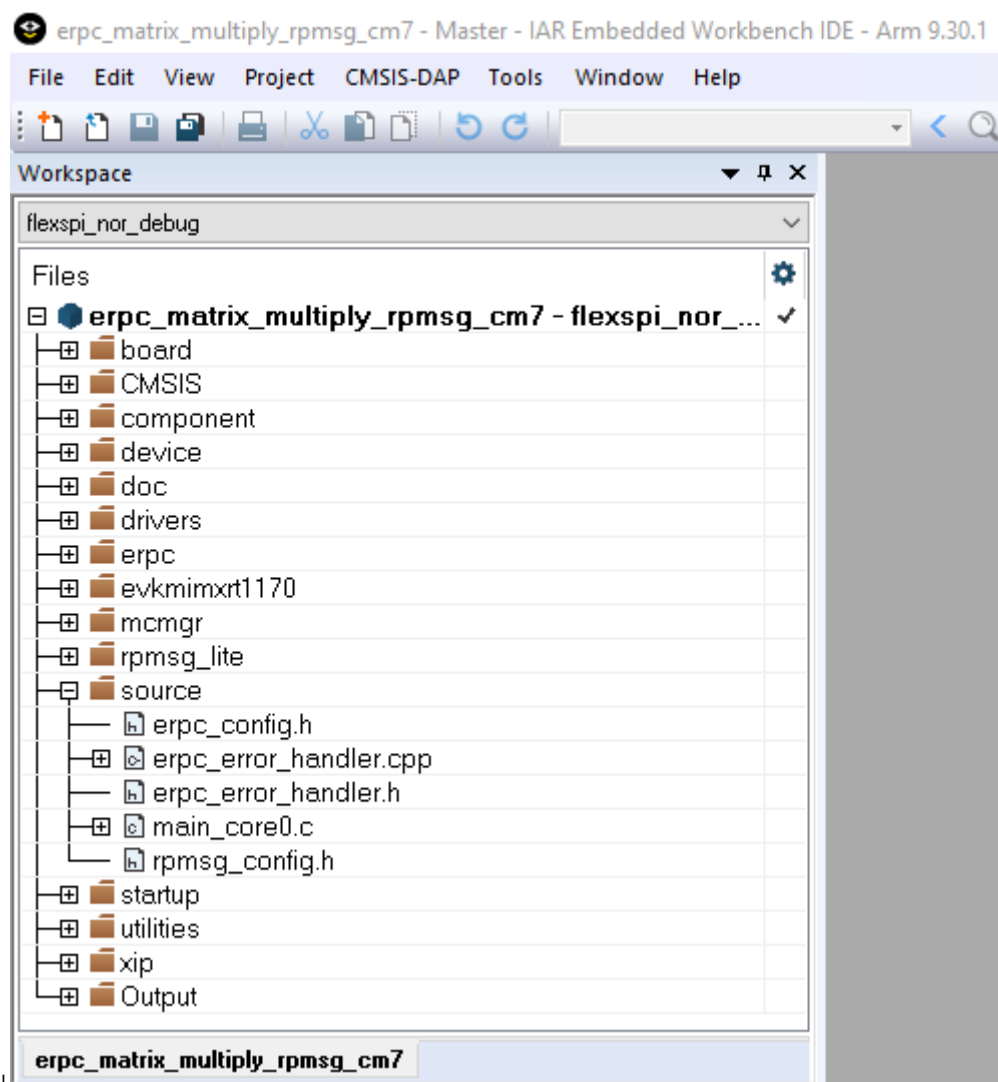

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

**Multiprocessor server application** The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

| SPI | `<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp`

`<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp`

`<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp`

| UART | `<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp`

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.hpp

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.cpp

|

**Server user code** The server's user code is stored in the main\_server.c file, located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_server\_matrix\_multiply\_<transport\_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
 ...
}
int main()
{
 ...
 /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
 ↪operations */
 erpc_transport_t transport;
 transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_dynamic_init();
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server)
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}
```

**Parent topic:**Multiprocessor server application

**Multiprocessor client application** The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_client\_matrix\_multiply\_<transport\_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

**Client user code** The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```

...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
/* Invoke the erpcMatrixMultiply function */
erpcMatrixMultiply(matrix1, matrix2, result_matrix);
...
/* Check if some error occurred in eRPC */
if (g_erpc_error_occurred)
{
/* Exit program loop */
break;
}
...
}


```

**Parent topic:**Multiprocessor client application

**Parent topic:**Multiprocessor server application

Parent topic:[Create an eRPC application](#)

**Running the eRPC application** Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK\_install\_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

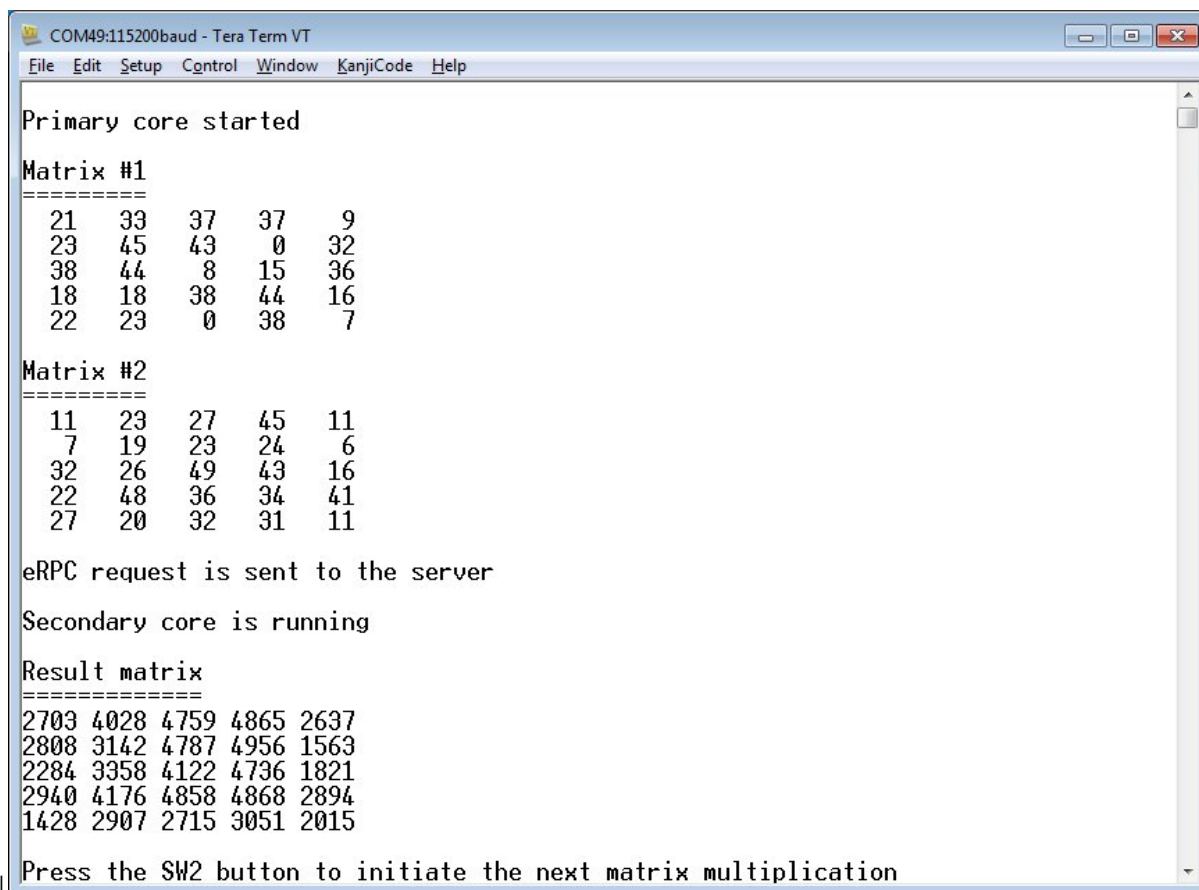

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21 33 37 37 9
 23 45 43 0 32
 38 44 8 15 36
 18 18 38 44 16
 22 23 0 38 7

Matrix #2
=====
 11 23 27 45 11
 7 19 23 24 6
 32 26 49 43 16
 22 48 36 34 41
 27 20 32 31 11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

**eRPC example** This section shows how to create an example eRPC application called “Matrix multiply”, which implements one eRPC function (matrix multiply) with two function parameters (two matrices). The client-side application calls this eRPC function, and the server side performs the multiplication of received matrices. The server side then returns the result.

For example, use the NXP MIMXRT1170-EVK board as the target dual-core platform, and the IAR Embedded Workbench for ARM (EWARM) as the target IDE for developing the eRPC example.

- The primary core (CM7) runs the eRPC client.
- The secondary core (CM4) runs the eRPC server.
- RMsg-Lite (Remote Processor Messaging Lite) is used as the eRPC transport layer.

The “Matrix multiply” application can be also run in the multi-processor setup. In other words, the eRPC client running on one SoC communicates with the eRPC server that runs on another SoC, utilizing different transport channels. It is possible to run the board-to-PC example (PC as the eRPC server and a board as the eRPC client, and vice versa) and also the board-to-board example. These multiprocessor examples are prepared for selected boards only.

| Multicore application source and project files | `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore/`  
 | Multiprocessor application source and project files | `<MCUXpressoSDK_install_dir>/boards/<board_name>/multi`  
`<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<tr`  
 | |eRPC source files| `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/|` | RMsg-Lite  
 source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/|`

**Designing the eRPC application** The matrix multiply application is based on calling single eRPC function that takes 2 two-dimensional arrays as input and returns matrix multiplication results as another 2 two-dimensional array. The IDL file syntax supports arrays with the dimension length set by the number only (in the current eRPC implementation). Because of this, a variable is declared in the IDL dedicated to store information about matrix dimension length, and to allow easy maintenance of the user and server code.

For a simple use of the two-dimensional array, the alias name (new type definition) for this data type has is declared in the IDL. Declaring this alias name ensures that the same data type can be used across the client and server applications.

**Parent topic:** [eRPC example](#)

**Creating the IDL file** The created IDL file is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/`

The created IDL file contains the following code:

```
program erpc_matrix_multiply
/*! This const defines the matrix size. The value has to be the same as the
Matrix array dimension. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
const int32 matrix_size = 5;
/*! This is the matrix array type. The dimension has to be the same as the
matrix size const. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
type Matrix = int32[matrix_size][matrix_size];
interface MatrixMultiplyService {
erpcMatrixMultiply(in Matrix matrix1, in Matrix matrix2, out Matrix result_matrix) ->
void
}
```

Details:

- The IDL file starts with the program name (*erpc\_matrix\_multiply*), and this program name is used in the naming of all generated outputs.
- The declaration and definition of the constant variable named *matrix\_size* follows next. The *matrix\_size* variable is used for passing information about the length of matrix dimensions to the client/server user code.
- The alias name for the two-dimensional array type (*Matrix*) is declared.
- The interface group *MatrixMultiplyService* is located at the end of the IDL file. This interface group contains only one function declaration *erpcMatrixMultiply*.
- As shown above, the function’s declaration contains three parameters of Matrix type: *matrix1* and *matrix2* are input parameters, while *result\_matrix* is the output parameter. Additionally, the returned data type is declared as void.

When writing the IDL file, the following order of items is recommended:

1. Program name at the top of the IDL file.
2. New data types and constants declarations.
3. Declarations of interfaces and functions at the end of the IDL file.

**Parent topic:** [eRPC example](#)

**Using the eRPC generator tool** | Windows OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x64`  
| Linux OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`  
`<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`  
| | Mac OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Mac` |

The files for the “Matrix multiply” example are pre-generated and already a part of the application projects. The following section describes how they have been created.

- The easiest way to create the shim code is to copy the erpcgen application to the same folder where the IDL file (\*.erpc) is located; then run the following command:

```
erpcgen <IDL_file>.erpc
```

- In the “Matrix multiply” example, the command should look like:

```
erpcgen erpc_matrix_multiply.erpc
```

Additionally, another method to create the shim code is to execute the eRPC application using input commands:

- “-?”/”—help” – Shows supported commands.
- “-o <filePath>”/”—output<filePath>” – Sets the output directory.

For example,

```
<path_to_erpcgen>/erpcgen -o <path_to_output>
<path_to_IDL>/<IDL_file_name>.erpc
```

For the “Matrix multiply” example, when the command is executed from the default erpcgen location, it looks like:

```
erpcgen -o
```

```
../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service
../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/erpc_matrix_mu
```

In both cases, the following four files are generated into the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service` folder:

- erpc\_matrix\_multiply.h
- erpc\_matrix\_multiply\_client.cpp
- erpc\_matrix\_multiply\_server.h
- erpc\_matrix\_multiply\_server.cpp

For multiprocessor examples, the eRPC file and pre-generated files can be found in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_common/erpc_matrix_multiply/service` folder.

**For Linux OS users:**

- Do not forget to set the permissions for the eRPC generator application.
- Run the application as `./erpcgen...` instead of as `erpcgen ....`

Parent topic: [eRPC example](#)

**Create an eRPC application** This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
  1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
  2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
  3. Add infrastructure files.
  4. Add user code for client and server applications.
  5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


**Multicore server application** The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmcg/cm4/iar`

The project files for the eRPC server have the `_cm4` suffix.

**Server project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

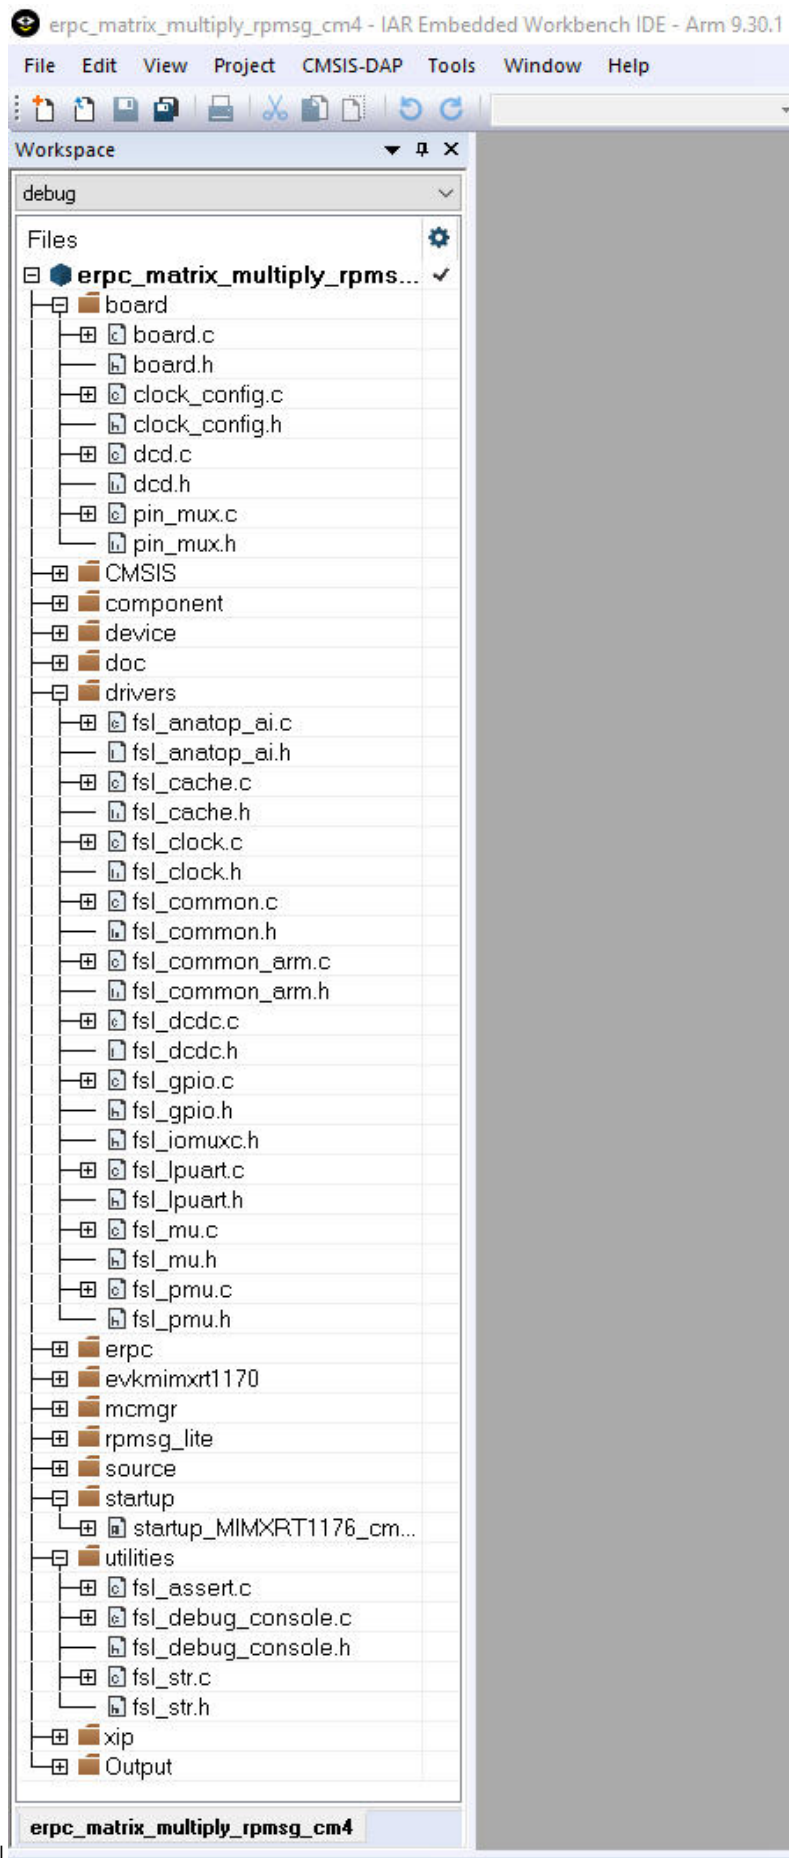

|


**Parent topic:**Multicore server application

**Server related generated files** The server-related generated files are:

- erpc\_matric\_multiply.h
- erpc\_matrix\_multiply\_server.h
- erpc\_matrix\_multiply\_server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/s`

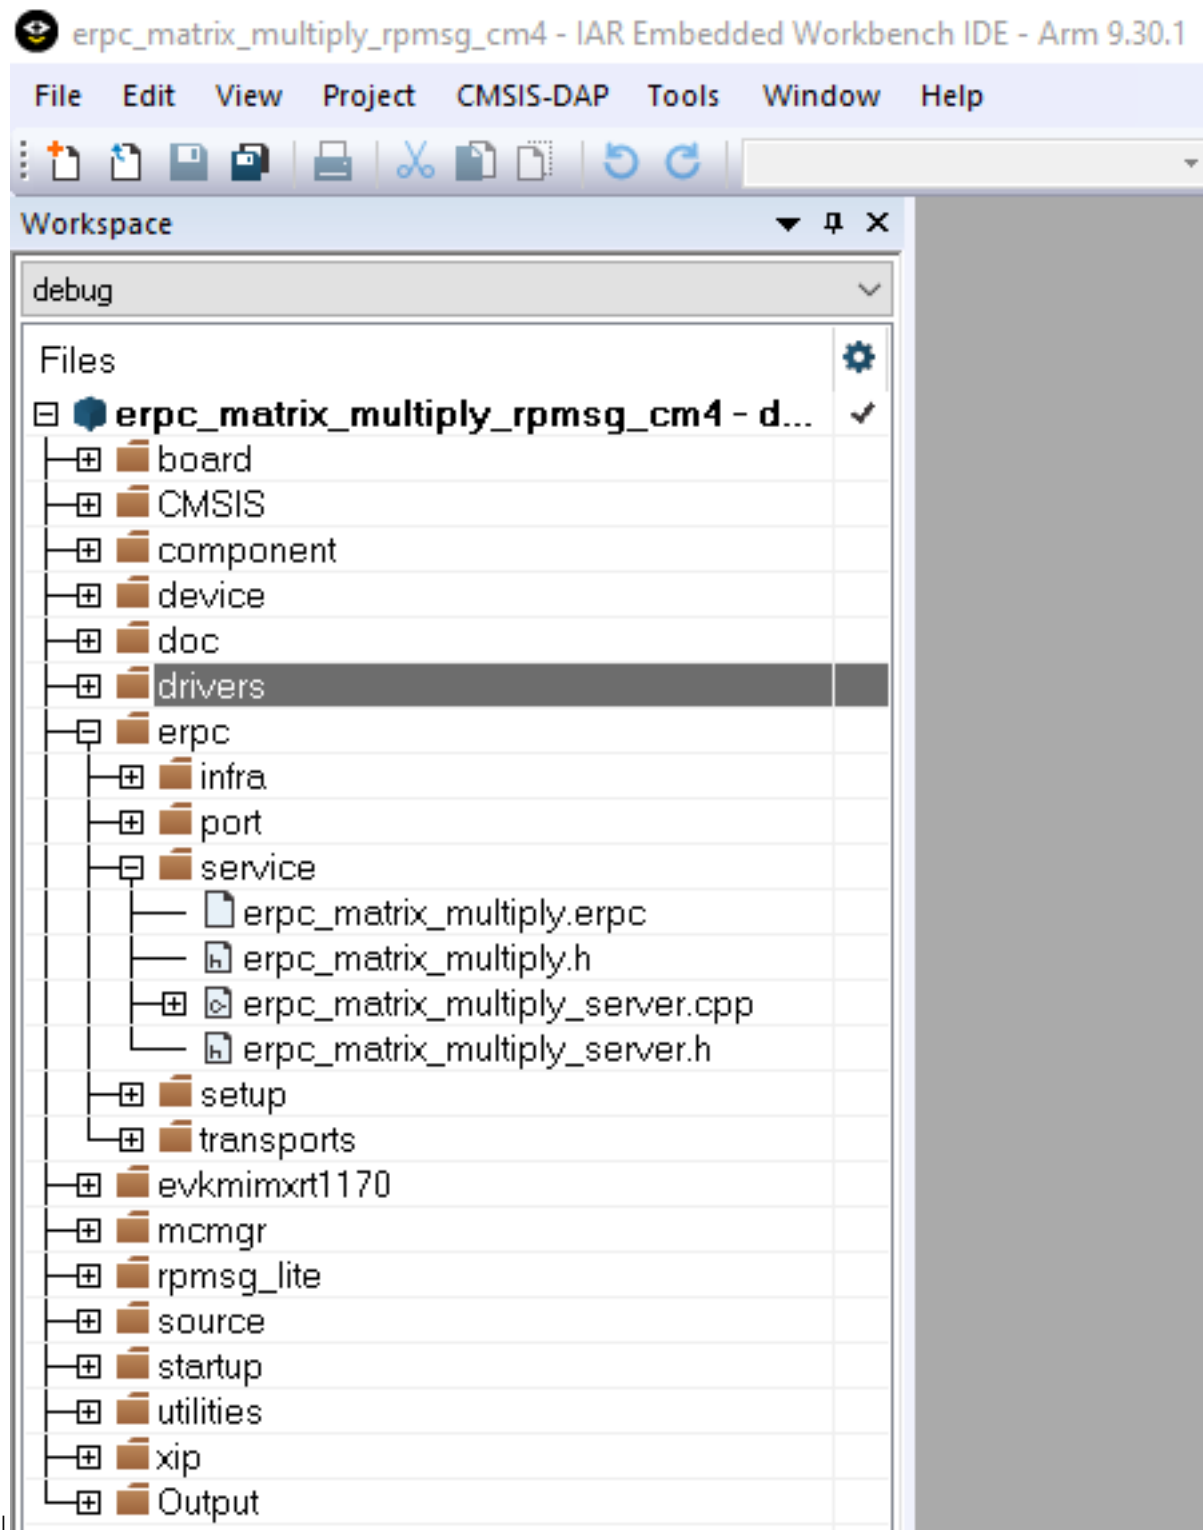


**Parent topic:**Multicore server application

**Server infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
  - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
  - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
  - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
  - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
  - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
  - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
  - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
  - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
  - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
  - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
  - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
  - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
  - RPLite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

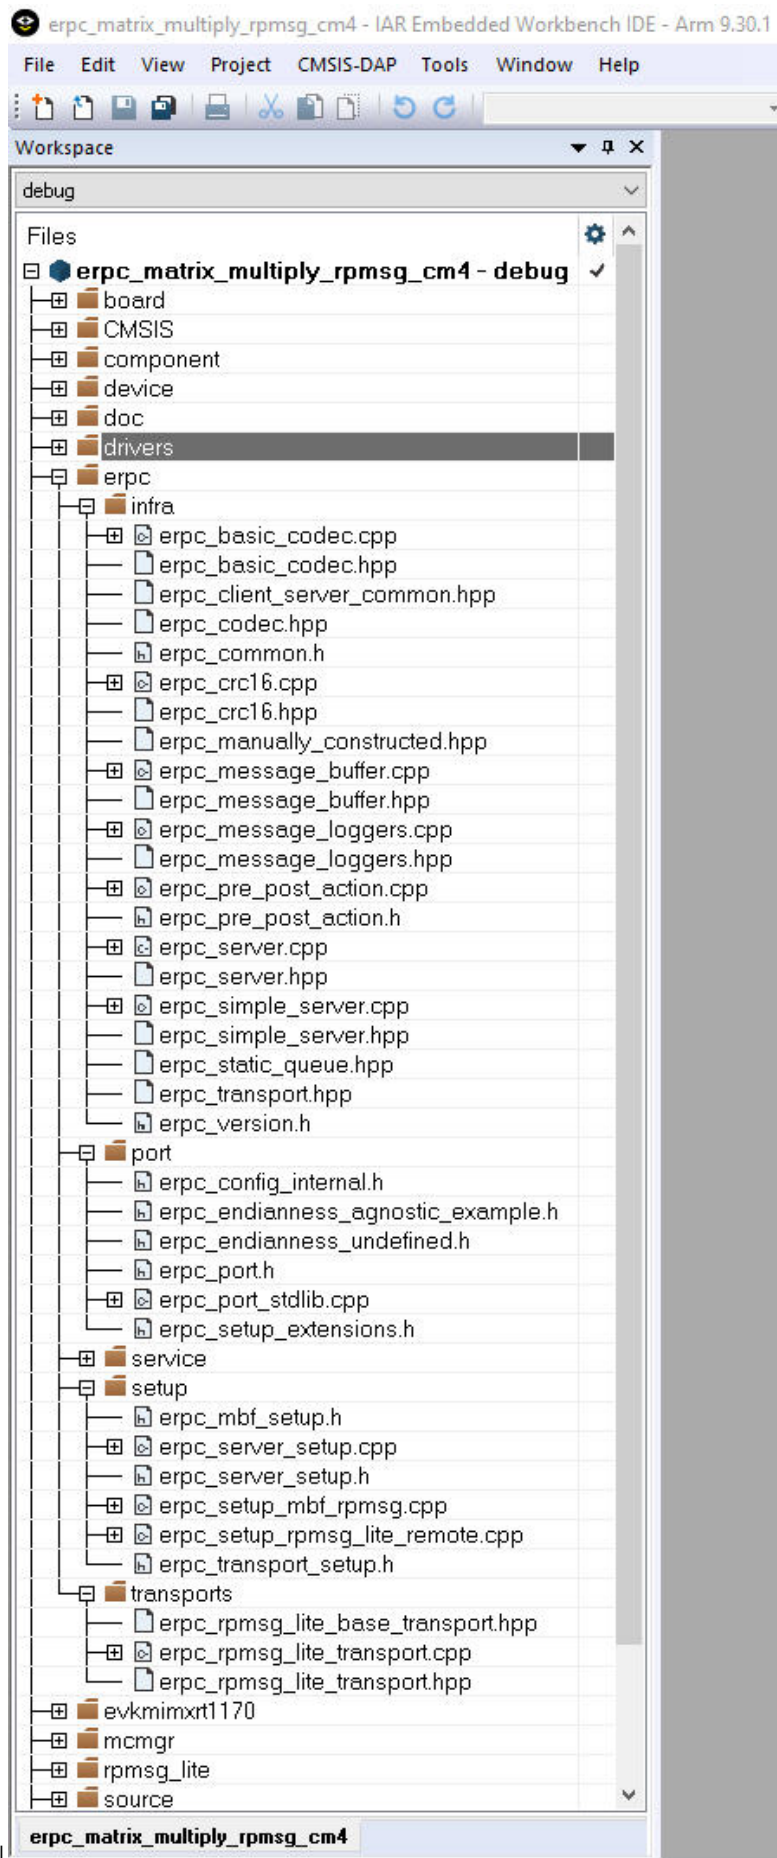

|


**Parent topic:**Multicore server application

**Server multicore infrastructure files** Because of the RPSMsg-Lite (transport layer), it is also necessary to include RPSMsg-Lite related files, which are in the following folder:

*<MCUXpressoSDK\_install\_dir>/middleware/multicore/rpsmsg\_lite/*

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

*<MCUXpressoSDK\_install\_dir>/middleware/multicore/mcmgr/*

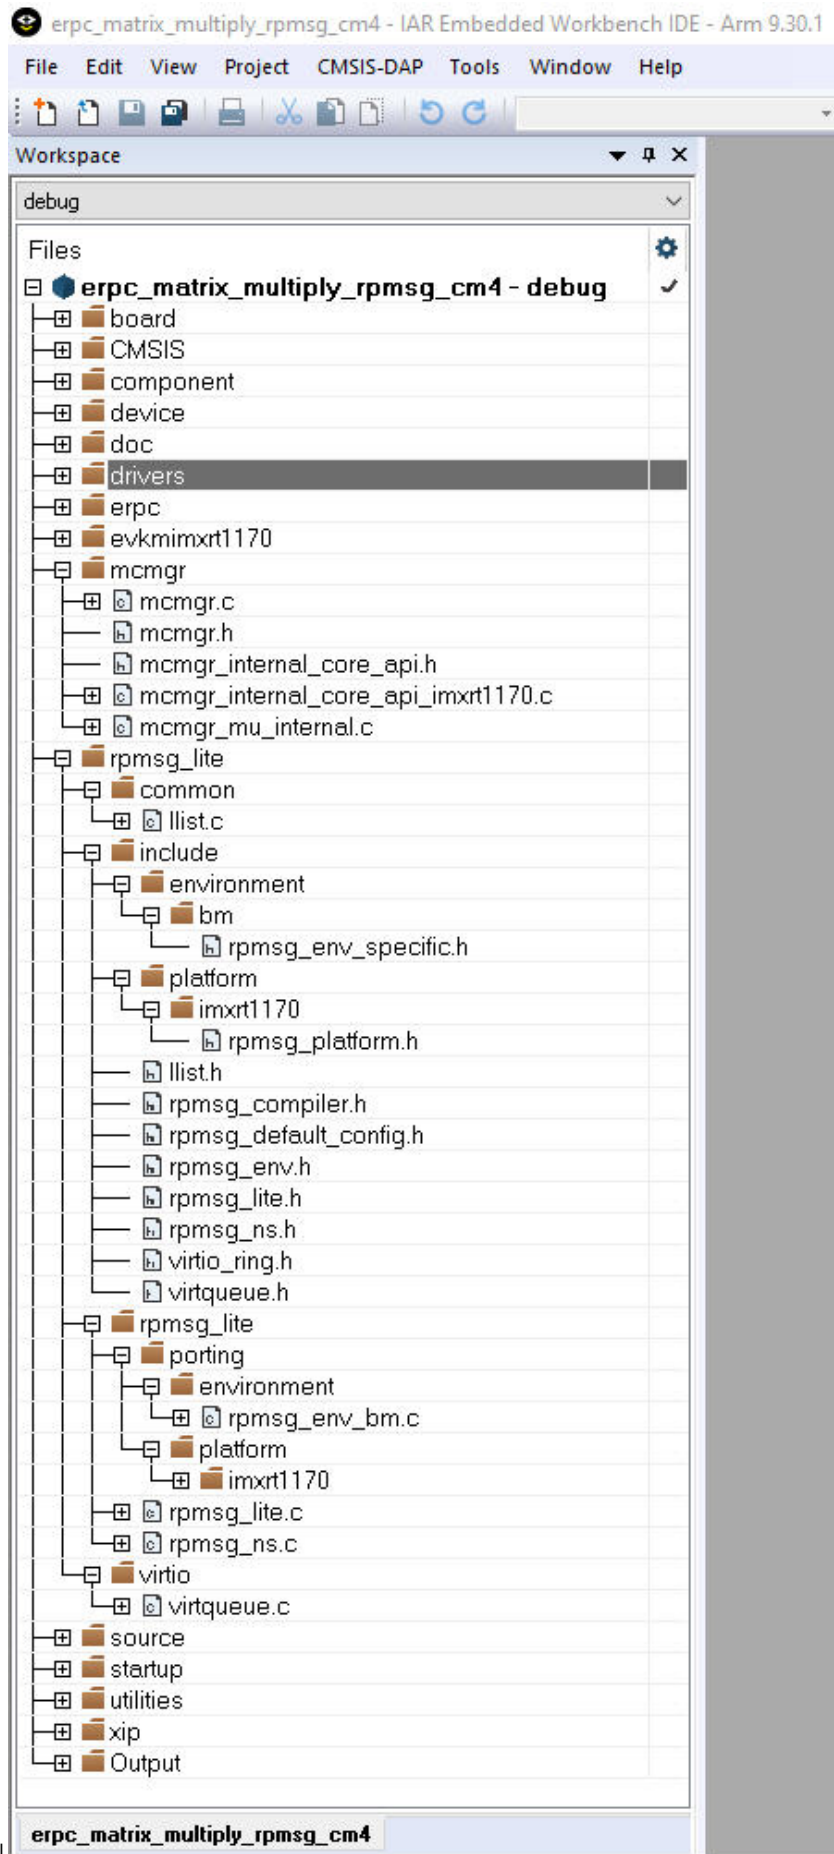

|  
**Parent topic:**Multicore server application

**Server user code** The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`

The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.


The eRPC-relevant code is captured in the following code snippet:

```

/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
 ...
}
int main()
{
 ...
 /* RPMsg-Lite transport layer initialization */
 erpc_transport_t transport;
 transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
 ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_rpmsg_init(transport);
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server);
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}

```

Except for the application main file, there are configuration files for the RPMsg-Lite (`rpmsg_config.h`) and eRPC (`erpc_config.h`), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/ erpc_matrix_multiply_rpmsg` folder.

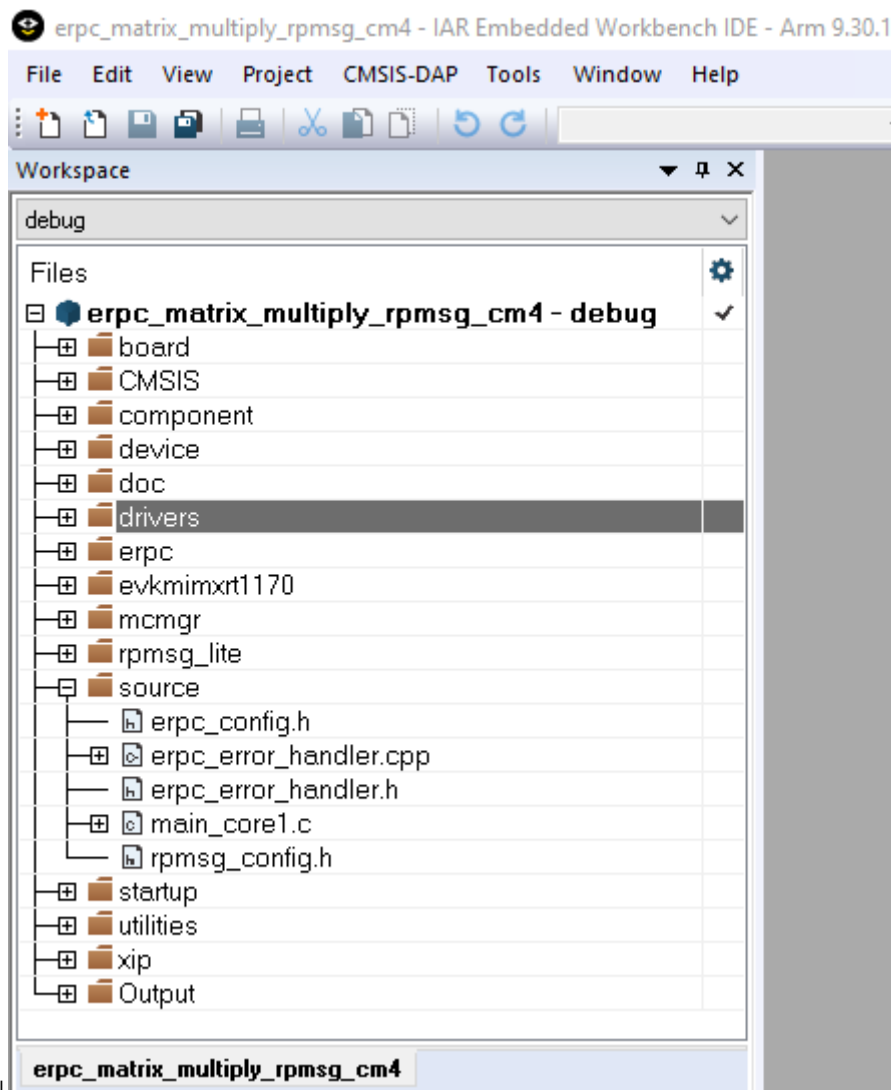

**Parent topic:** Multicore server application

**Parent topic:** [Create an eRPC application](#)


**Multicore client application** The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar/`

Project files for the eRPC client have the `_cm7` suffix.

**Client project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

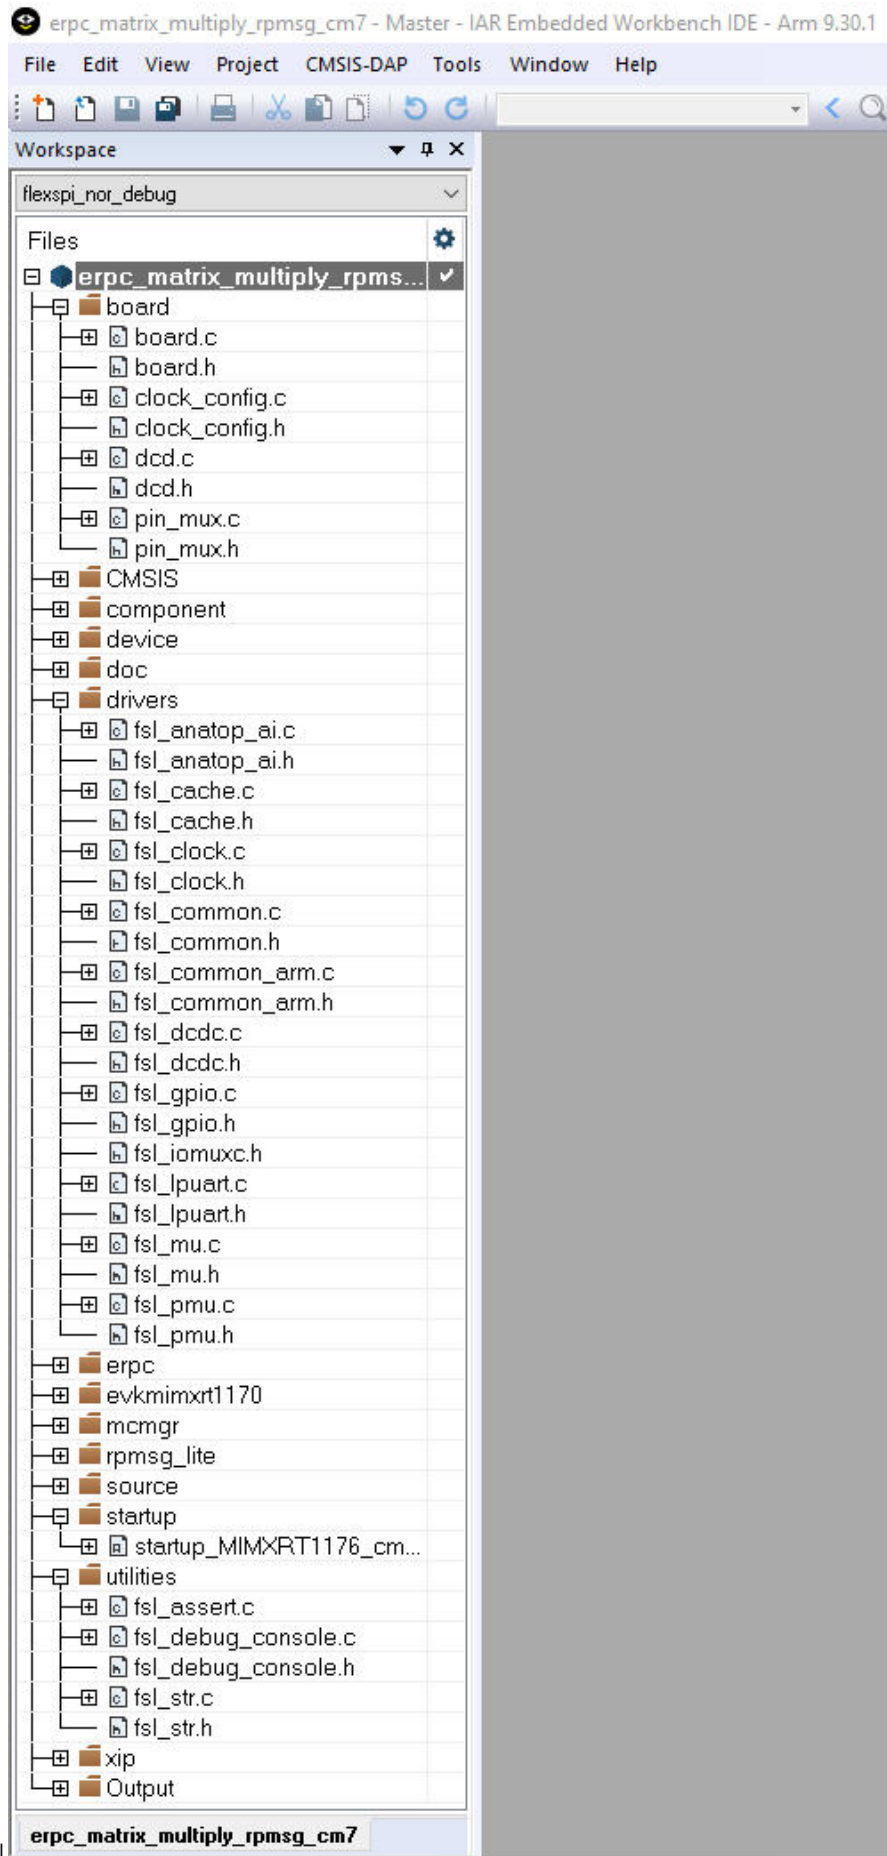


|

**Parent topic:**Multicore client application

**Client-related generated files** The client-related generated files are:

- erpc\_matric\_multiply.h
- erpc\_matrix\_multiply\_client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

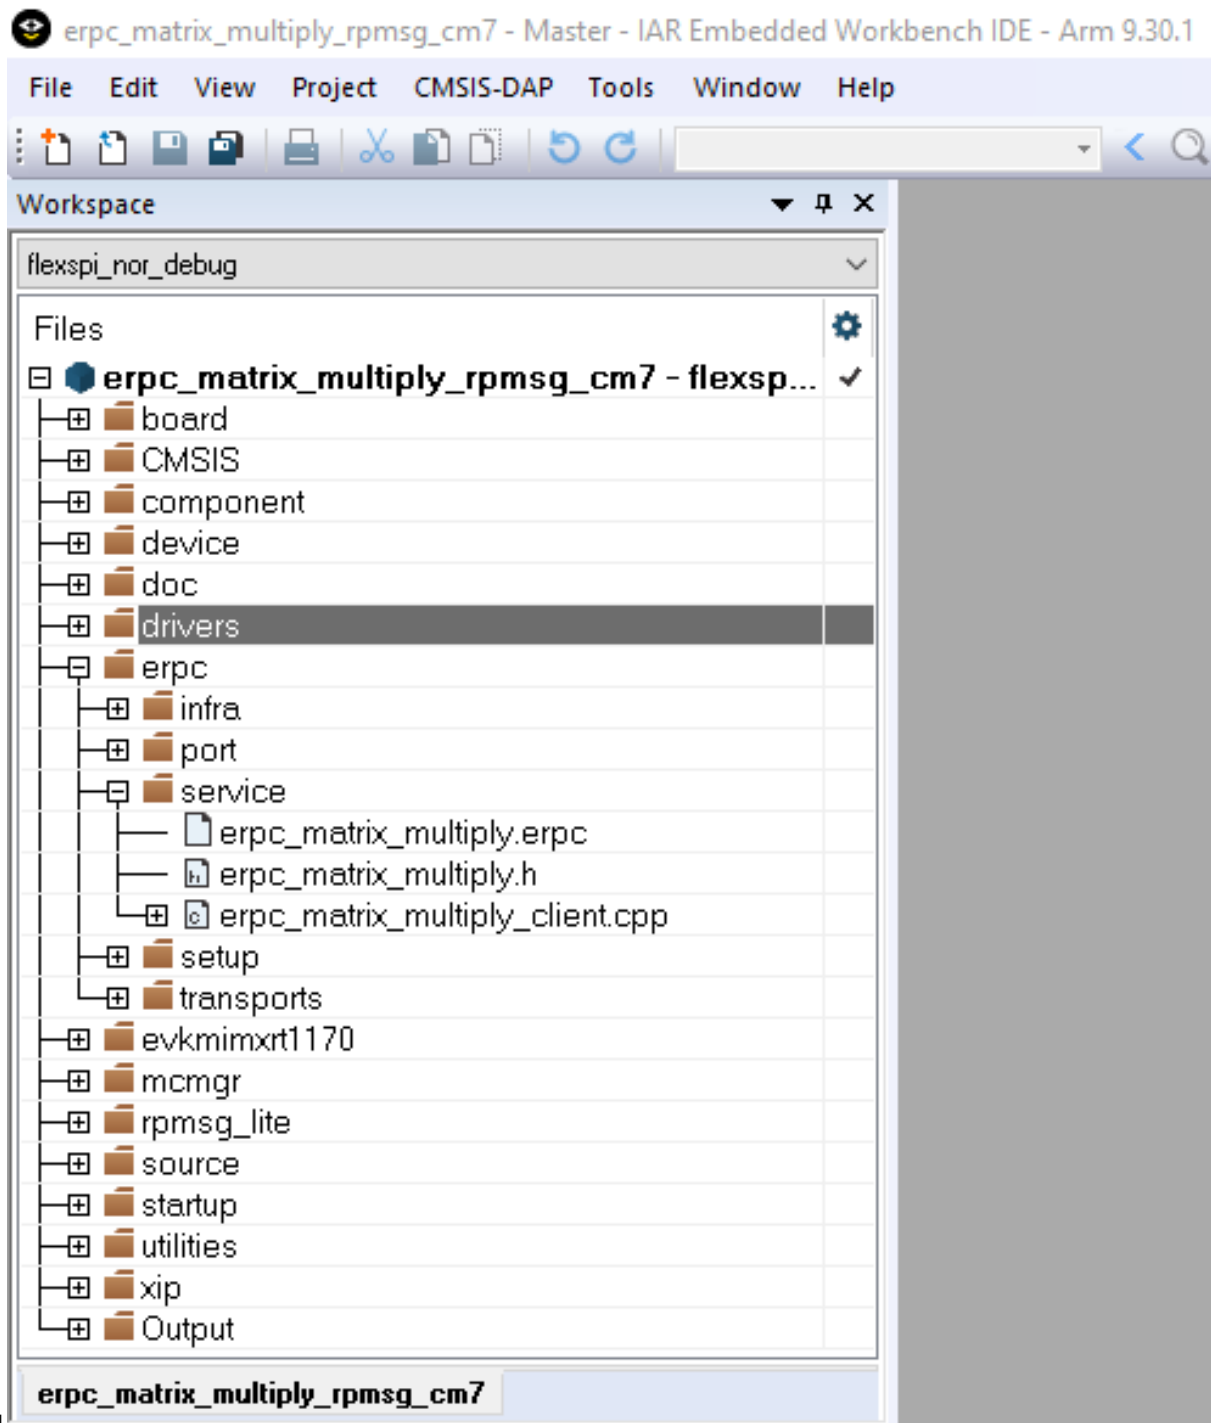

**Parent topic:**Multicore client application

**Client infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

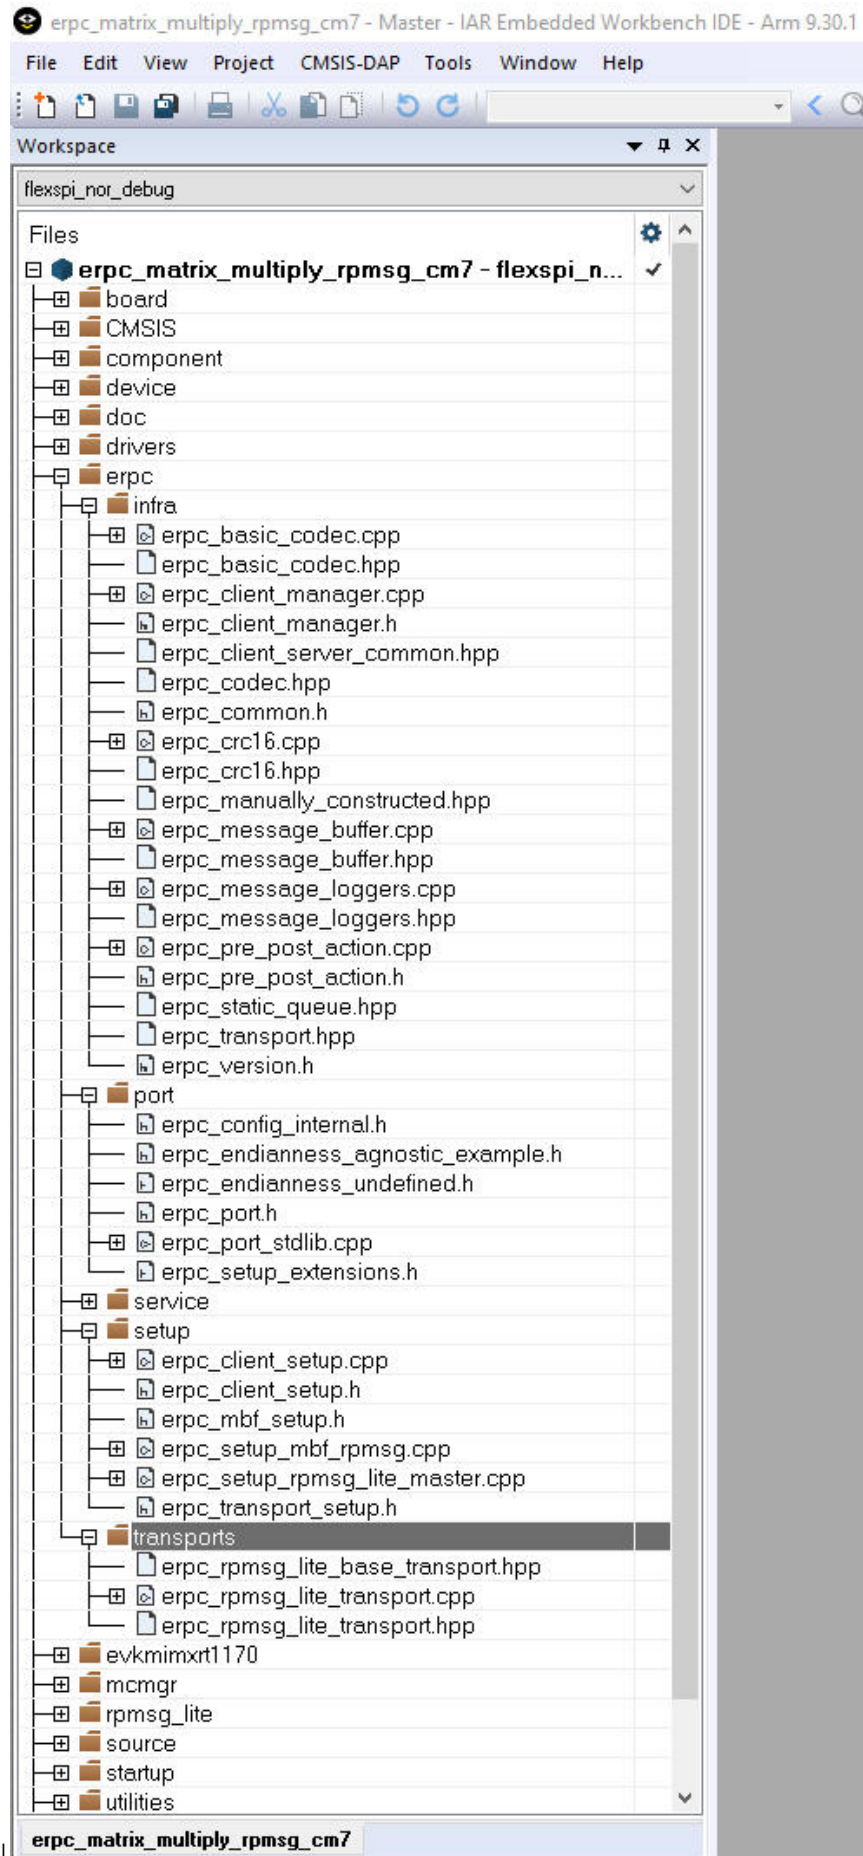

|


**Parent topic:**Multicore client application

**Client multicore infrastructure files** Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

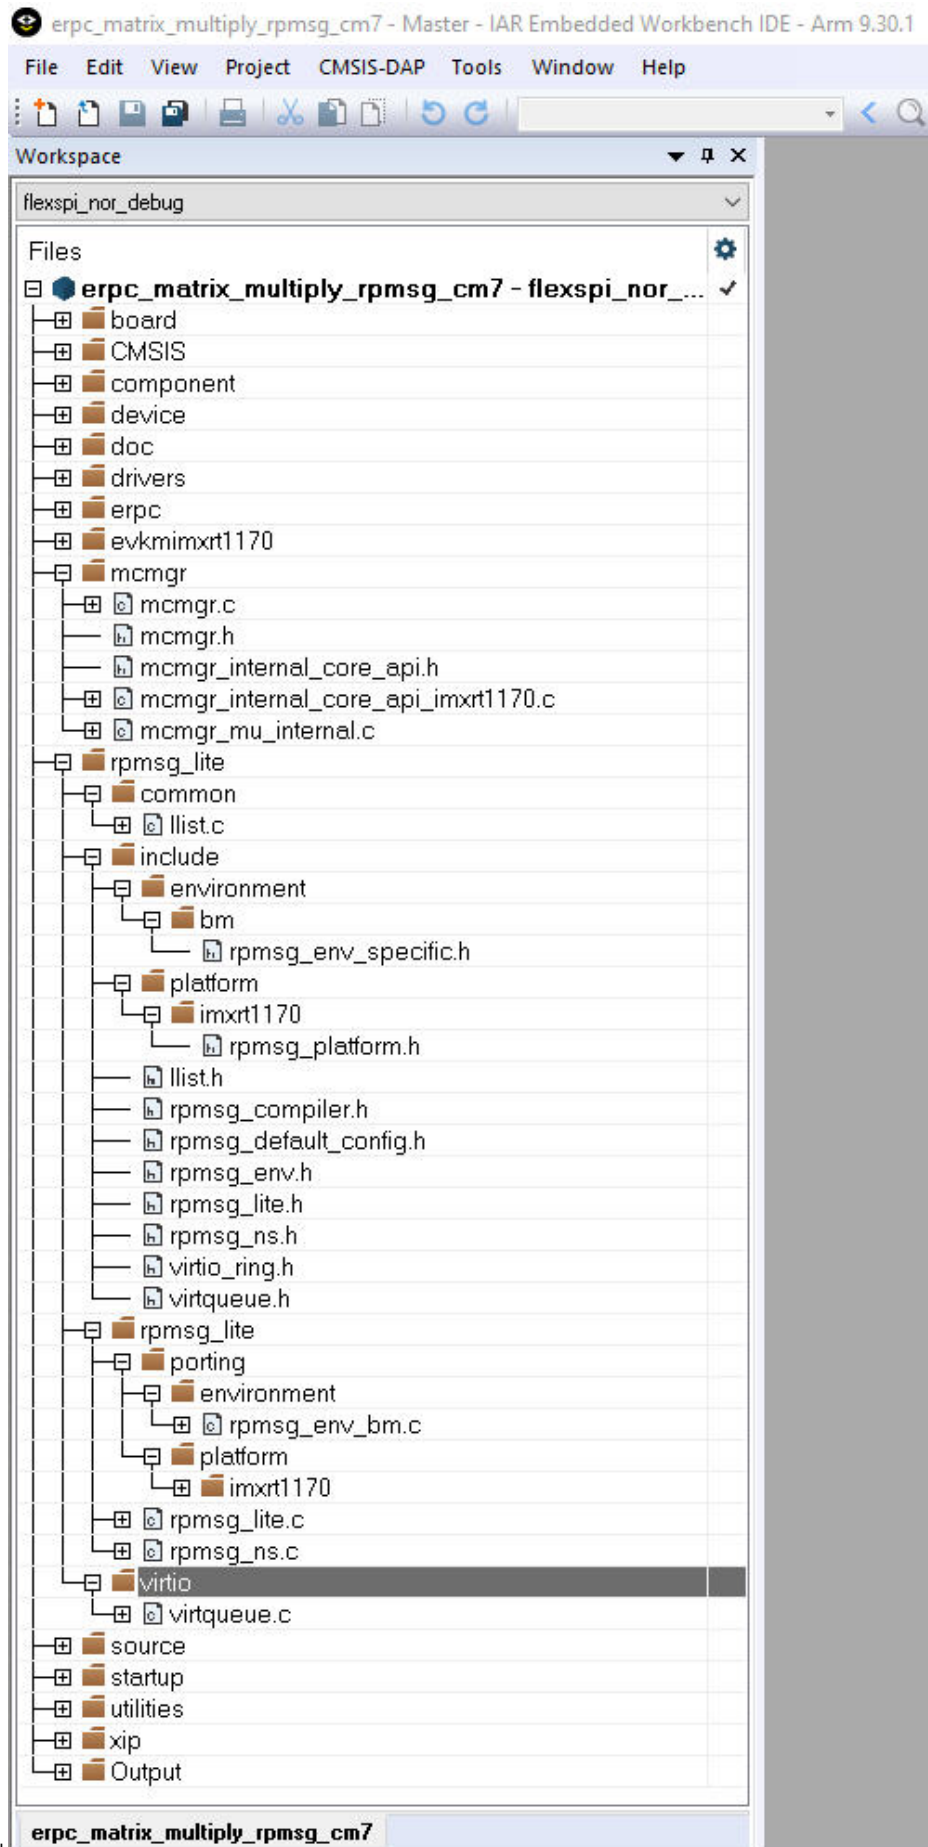

|  
**Parent topic:**Multicore client application

**Client user code** The client's user code is stored in the main\_core0.c file, located in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_example/erpc\_matrix\_multiply\_rpmsg/cm7

The main\_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc\_error\_handler.h and erpc\_error\_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPSMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
/* Invoke the erpcMatrixMultiply function */
erpcMatrixMultiply(matrix1, matrix2, result_matrix);
...
/* Check if some error occurred in eRPC */
if (g_erpc_error_occurred)
{
/* Exit program loop */
break;
}
...
}
```

Except for the application main file, there are configuration files for the RPSMsg-Lite (rpmsg\_config.h) and eRPC (erpc\_config.h), located in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_examples/erpc\_matrix\_multiply\_rpmsg

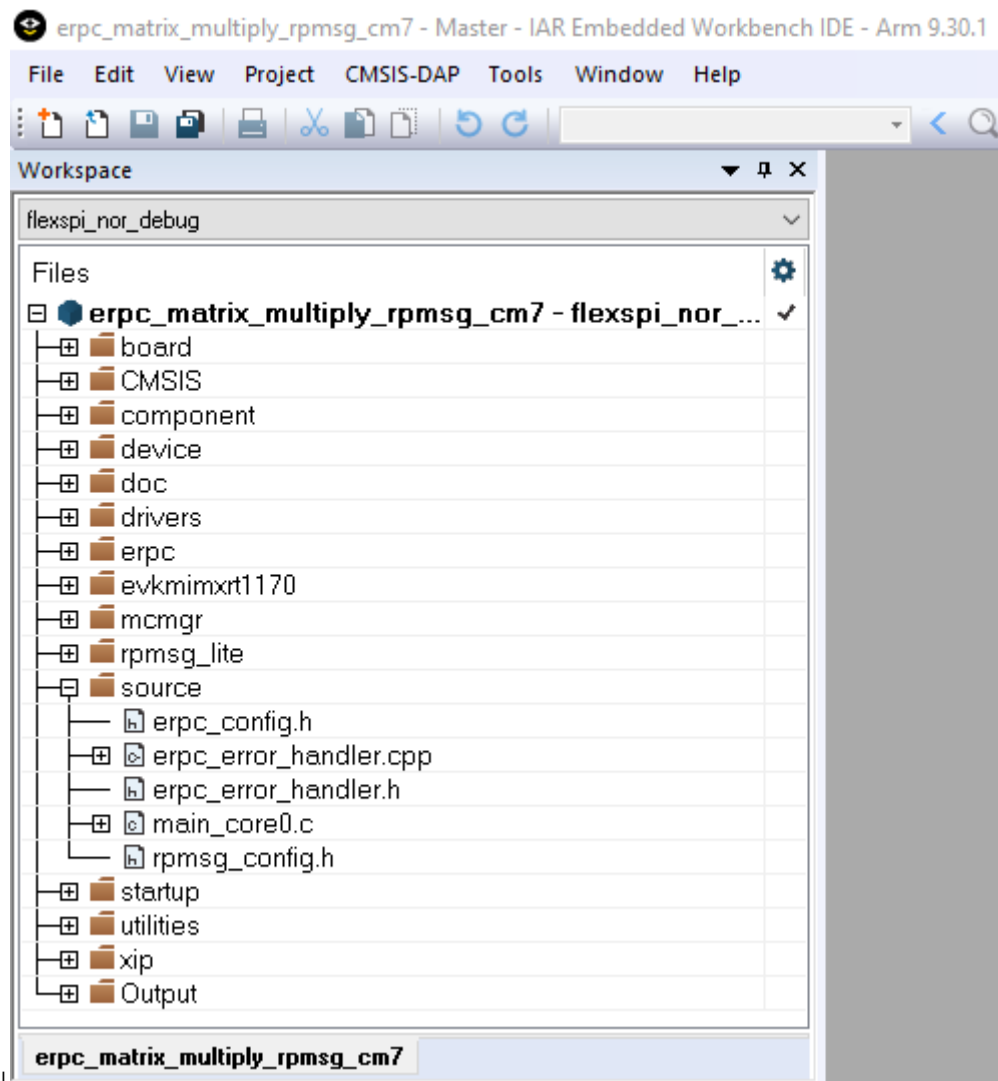

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

**Multiprocessor server application** The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.hpp

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.cpp

|

**Server user code** The server's user code is stored in the main\_server.c file, located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_server\_matrix\_multiply\_<transport\_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
 ...
}
int main()
{
 ...
 /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
 ↪operations */
 erpc_transport_t transport;
 transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_dynamic_init();
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server)
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}
```

**Parent topic:**Multiprocessor server application

**Multiprocessor client application** The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_client\_matrix\_multiply\_<transport\_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RMPMsg-Lite). The RMPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

**Client user code** The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver_
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
/* Invoke the erpcMatrixMultiply function */
erpcMatrixMultiply(matrix1, matrix2, result_matrix);
...
/* Check if some error occurred in eRPC */
if (g_erpc_error_occurred)
{
/* Exit program loop */
break;
}
...
}
```

**Parent topic:**Multiprocessor client application

**Parent topic:**Multiprocessor server application

Parent topic:[Create an eRPC application](#)

**Running the eRPC application** Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK\_install\_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

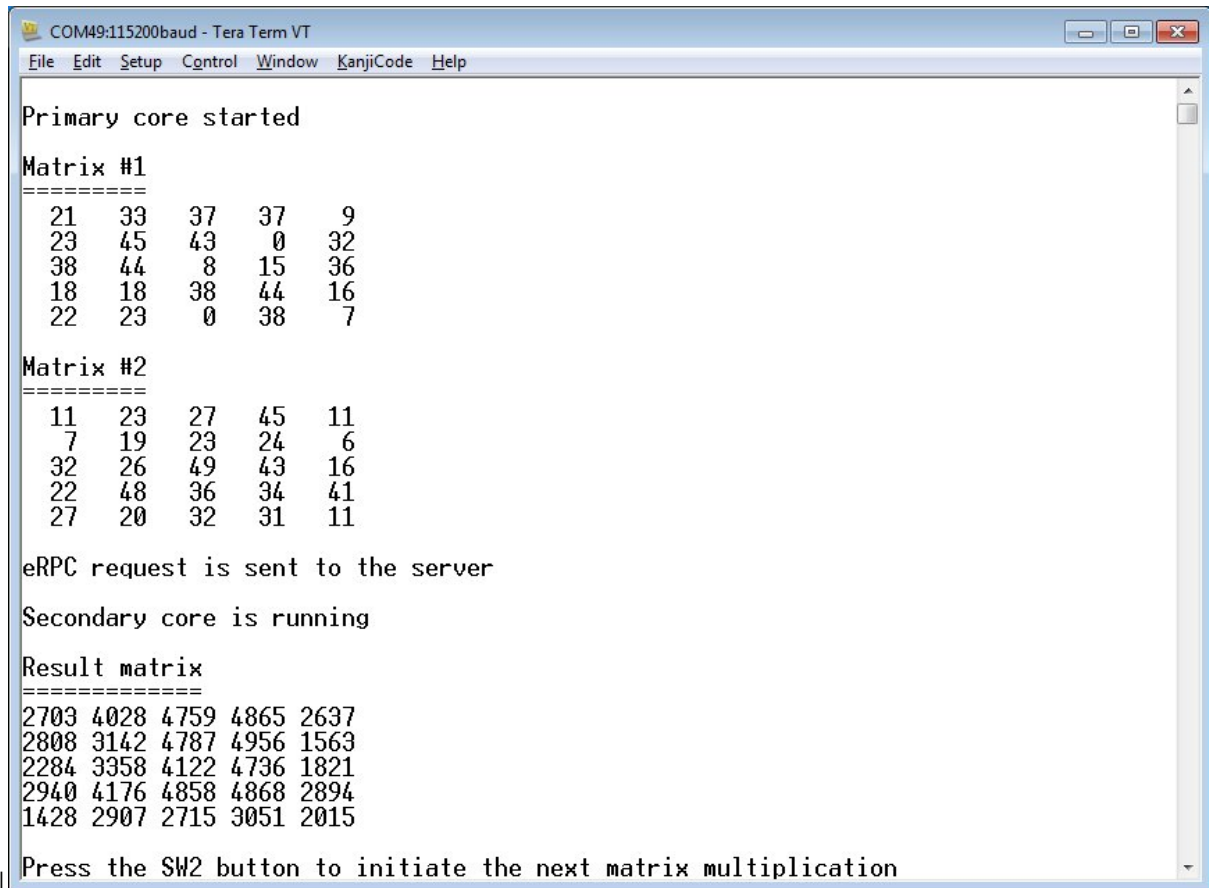

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21 33 37 37 9
 23 45 43 0 32
 38 44 8 15 36
 18 18 38 44 16
 22 23 0 38 7

Matrix #2
=====
 11 23 27 45 11
 7 19 23 24 6
 32 26 49 43 16
 22 48 36 34 41
 27 20 32 31 11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

**Other uses for an eRPC implementation** The eRPC implementation is generic, and its use is not limited to just embedded applications. When creating an eRPC application outside the embedded world, the same principles apply. For example, this manual can be used to create an eRPC application for a PC running the Linux operating system. Based on the used type of transport medium, existing transport layers can be used, or new transport layers can be implemented.

For more information and erpc updates see the [github.com/EmbeddedRPC](https://github.com/EmbeddedRPC).

**Note about the source code in the document** Example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2024 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

**Changelog eRPC** All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

## Unreleased

### Added

### Fixed

- Python code of the eRPC infrastructure was updated to match the proper python code style, add type annotations and improve readability.

## 1.14.0

### Added

- Added Cmake/Kconfig support.
- Made java code jdk11 compliant, GitHub PR #432.
- Added imxrt1186 support into mu transport layer.
- erpcgen: Added assert for listType before usage, GitHub PR #406.

### Fixed

- eRPC: Sources reformatted.
- erpc: Fixed typo in semaphore get (mutex -> semaphore), and write it can fail in case of timeout, GitHub PR #446.
- erpc: Free the arbitrated client token from client manager, GitHub PR #444.

- erpc: Fixed Makefile, install the erpc\_simple\_server header, GitHub PR #447.
- erpc\_python: Fixed possible AttributeError and OSError on calling TCPTransport.close(), GitHub PR #438.
- Examples and tests consolidated.

### 1.13.0

#### Added

- erpc: Add BSD-3 license to endianness agnostic files, GitHub PR #417.
- eRPC: Add new Zephyr-related transports (zephyr\_uart, zephyr\_mbox).
- eRPC: Add new Zephyr-related examples.

#### Fixed

- eRPC,erpcgen: Fixing/improving markdown files, GitHub PR #395.
- eRPC: Fix Python client TCPTransports not being able to close, GitHub PR #390.
- eRPC,erpcgen: Align switch brackets, GitHub PR #396.
- erpc: Fix zephyr uart transport, GitHub PR #410.
- erpc: UART ZEPHYR Transport stop to work after a few transactions when using USB-CDC resolved, GitHub PR #420.

#### Removed

- eRPC,erpcgen: Remove cstbool library, GitHub PR #403.

### 1.12.0

#### Added

- eRPC: Add dynamic/static option for transport init, GitHub PR #361.
- eRPC,erpcgen: Winsock2 support, GitHub PR #365.
- eRPC,erpcgen: Feature/support multiple clients, GitHub PR #271.
- eRPC,erpcgen: Feature/buffer head - Framed transport header data stored in Message-Buffer, GitHub PR #378.
- eRPC,erpcgen: Add experimental Java support.

#### Fixed

- eRPC: Fix receive error value for spidev, GitHub PR #363.
- eRPC: UartTransport::init adaptation to changed driver.
- eRPC: Fix typo in assert, GitHub PR #371.
- eRPC,erpcgen: Move enums to enum classes, GitHub PR #379.
- eRPC: Fixed rpmsg tty transport to work with serial transport, GitHub PR #373.

### 1.11.0

#### Fixed

- eRPC: Makefiles update, GitHub PR #301.
- eRPC: Resolving warnings in Python, GitHub PR #325.
- eRPC: Python3.8 is not ready for usage of typing.Any type, GitHub PR #325.
- eRPC: Improved codec function to use reference instead of address, GitHub PR #324.
- eRPC: Fix NULL check for pending client creation, GitHub PR #341.
- eRPC: Replace sprintf with snprintf, GitHub PR #343.
- eRPC: Use MU\_SendMsg blocking call in MU transport.
- eRPC: New LPSPI and LPI2C transport layers.
- eRPC: Freeing static objects, GitHub PR #353.
- eRPC: Fixed casting in deinit functions, GitHub PR #354.
- eRPC: Align LIBUSBSIO.GetNumPorts API use with libusbsio python module v. 2.1.11.
- erpcgen: Renamed temp variable to more generic one, GitHub PR #321.
- erpcgen: Add check that string read is not more than max length, GitHub PR #328.
- erpcgen: Move to g++ in pytest, GitHub PR #335.
- erpcgen: Use build=release for make, GitHub PR #334.
- erpcgen: Removed boost dependency, GitHub PR #346.
- erpcgen: Mingw support, GitHub PR #344.
- erpcgen: VS build update, GitHub PR #347.
- erpcgen: Modified name for common types macro scope, GitHub PR #337.
- erpcgen: Fixed memcopy for template, GitHub PR #352.
- eRPC,erpcgen: Change default build target to release + adding artefacts, GitHub PR #334.
- eRPC,erpcgen: Remove redundant includes, GitHub PR #338.
- eRPC,erpcgen: Many minor code improvements, GitHub PR #323.

### 1.10.0

#### Fixed

- eRPC: MU transport layer switched to blocking MU\_SendMsg() API use.

### 1.10.0

#### Added

- eRPC: Add TCP\_NODELAY option to python, GitHub PR #298.

**Fixed**

- eRPC: MUPTransport adaptation to new supported SoCs.
- eRPC: Simplifying CI with installing dependencies using shell script, GitHub PR #267.
- eRPC: Using event for waiting for sock connection in TCP python server, formatting python code, C specific includes, GitHub PR #269.
- eRPC: Endianness agnostic update, GitHub PR #276.
- eRPC: Assertion added for functions which are returning status on freeing memory, GitHub PR #277.
- eRPC: Fixed closing arbitrator server in unit tests, GitHub PR #293.
- eRPC: Makefile updated to reflect the correct header names, GitHub PR #295.
- eRPC: Compare value length to used length() in reading data from message buffer, GitHub PR #297.
- eRPC: Replace EXPECT\_TRUE with EXPECT\_EQ in unit tests, GitHub PR #318.
- eRPC: Adapt rpmsg\_lite based transports to changed rpmsg\_lite\_wait\_for\_link\_up() API parameters.
- eRPC, erpcgen: Better distinguish which file can and cannot be linked by C linker, GitHub PR #266.
- eRPC, erpcgen: Stop checking if pointer is NULL before sending it to the erpc\_free function, GitHub PR #275.
- eRPC, erpcgen: Changed api to count with more interfaces, GitHub PR #304.
- erpcgen: Check before reading from heap the buffer boundaries, GitHub PR #287.
- erpcgen: Several fixes for tests and CI, GitHub PR #289.
- erpcgen: Refactoring erpcgen code, GitHub PR #302.
- erpcgen: Fixed assigning const value to enum, GitHub PR #309.
- erpcgen: Enable runTesttest\_enumErrorCode\_allDirection, serialize enums as int32 instead of uint32.

**1.9.1****Fixed**

- eRPC: Construct the USB CDC transport, rather than a client, GitHub PR #220.
- eRPC: Fix premature import of package, causing failure when attempting installation of Python library in a clean environment, GitHub PR #38, #226.
- eRPC: Improve python detection in make, GitHub PR #225.
- eRPC: Fix several warnings with deprecated call in pytest, GitHub PR #227.
- eRPC: Fix freeing union members when only default need be freed, GitHub PR #228.
- eRPC: Fix making test under Linux, GitHub PR #229.
- eRPC: Assert costumizing, GitHub PR #148.
- eRPC: Fix corrupt clientList bug in TransportArbitrator, GitHub PR #199.
- eRPC: Fix build issue when invoking g++ with -Wno-error=free-nonheap-object, GitHub PR #233.
- eRPC: Fix inout cases, GitHub PR #237.

- eRPC: Remove ERPC\_PRE\_POST\_ACTION dependency on return type, GitHub PR #238.
- eRPC: Adding NULL to ptr when codec function failed, fixing memcopy when fail is present during deserialization, GitHub PR #253.
- eRPC: MessageBuffer usage improvement, GitHub PR #258.
- eRPC: Get rid for serial and enum34 dependency (enum34 is in python3 since 3.4 (from 2014)), GitHub PR #247.
- eRPC: Several MISRA violations addressed.
- eRPC: Fix timeout for Freertos semaphore, GitHub PR #251.
- eRPC: Use of rpmsg\_lite\_wait\_for\_link\_up() in rpmsg\_lite based transports, GitHub PR #223.
- eRPC: Fix codec nullptr dereferencing, GitHub PR #264.
- erpcgen: Fix two syntax errors in erpcgen Python output related to non-encapsulated unions, improved test for union, GitHub PR #206, #224.
- erpcgen: Fix serialization of list/binary types, GitHub PR #240.
- erpcgen: Fix empty list parsing, GitHub PR #72.
- erpcgen: Fix templates for malloc errors, GitHub PR #110.
- erpcgen: Get rid of encapsulated union declarations in global scale, improve enum usage in unions, GitHub PR #249, #250.
- erpcgen: Fix compile error:UniqueIdChecker.cpp:156:104:'sort' was not declared, GitHub PR #265.

## 1.9.0

### Added

- eRPC: Allow used LIBUSB\_SIO device index being specified from the Python command line argument.

### Fixed

- eRPC: Improving template usage, GitHub PR #153.
- eRPC: run\_clang\_format.py cleanup, GitHub PR #177.
- eRPC: Build TCP transport setup code into liberpc, GitHub PR #179.
- eRPC: Fix multiple definitions of g\_client error, GitHub PR #180.
- eRPC: Fix memset past end of buffer in erpc\_setup\_mbf\_static.cpp, GitHub PR #184.
- eRPC: Fix deprecated error with newer pytest version, GitHub PR #203.
- eRPC, erpcgen: Static allocation support and usage of rpmsg static FreeRTOSs related API, GitHub PR #168, #169.
- erpcgen: Remove redundant module imports in erpcgen, GitHub PR #196.

## 1.8.1

### Added

- eRPC: New i2c\_slave\_transport transport introduced.

### Fixed

- eRPC: Fix misra erpc c, GitHub PR #158.
- eRPC: Allow conditional compilation of message\_loggers and pre\_post\_action.
- eRPC: (D)SPI slave transports updated to avoid busy loops in rtos environments.
- erpcgen: Re-implement EnumMember::hasValue(), GitHub PR #159.
- erpcgen: Fixing several misra issues in shim code, erpcgen and unit tests updated, GitHub PR #156.
- erpcgen: Fix bison file, GitHub PR #156.

### 1.8.0

### Added

- eRPC: Support win32 thread, GitHub PR #108.
- eRPC: Add mbed support for malloc() and free(), GitHub PR #92.
- eRPC: Introduced pre and post callbacks for eRPC call, GitHub PR #131.
- eRPC: Introduced new USB CDC transport.
- eRPC: Introduced new Linux spidev-based transport.
- eRPC: Added formatting extension for VSC, GitHub PR #134.
- erpcgen: Introduce ustring type for unsigned char and force cast to char\*, GitHub PR #125.

### Fixed

- eRPC: Update makefile.
- eRPC: Fixed warnings and error with using MessageLoggers, GitHub PR #127.
- eRPC: Extend error msg for python server service handle function, GitHub PR #132.
- eRPC: Update CMSIS UART transport layer to avoid busy loops in rtos environments, introduce semaphores.
- eRPC: SPI transport update to allow usage without handshaking GPIO.
- eRPC: Native \_WIN32 erpc serial transport and threading.
- eRPC: Arbitrator deadlock fix, TCP transport updated, TCP setup functions introduced, GitHub PR #121.
- eRPC: Update of matrix\_multiply.py example: Add -serial and -baud argument, GitHub PR #137.
- eRPC: Update of .clang-format, GitHub PR #140.
- eRPC: Update of erpc\_framed\_transport.cpp: return error if received message has zero length, GitHub PR #141.
- eRPC, erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136, #139.
- eRPC, erpcgen: Core re-formatted using Clang version 10.
- erpcgen: Enable deallocation in server shim code when callback/function pointer used as out parameter in IDL.
- erpcgen: Removed '\$' character from generated symbol name in '\_\$union' suffix, GitHub PR #103.

- erpcgen: Resolved mismatch between C++ and Python for callback index type, GitHub PR #111.
- erpcgen: Python generator improvements, GitHub PR #100, #118.
- erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136.

#### 1.7.4

##### Added

- eRPC: Support MU transport unit testing.
- eRPC: Adding mbed os support.

##### Fixed

- eRPC: Unit test code updated to handle service add and remove operations.
- eRPC: Several MISRA issues in rpmsg-based transports addressed.
- eRPC: Fixed Linux/TCP acceptance tests in release target.
- eRPC: Minor documentation updates, code formatting.
- erpcgen: Whitespace removed from C common header template.

#### 1.7.3

##### Fixed

- eRPC: Improved the test\_callbacks logic to be more understandable and to allow requested callback execution on the server side.
- eRPC: TransportArbitrator::prepareClientReceive modified to avoid incorrect return value type.
- eRPC: The ClientManager and the ArbitratedClientManager updated to avoid performing client requests when the previous serialization phase fails.
- erpcgen: Generate the shim code for destroy of statically allocated services.

#### 1.7.2

##### Added

- eRPC: Add missing doxygen comments for transports.

##### Fixed

- eRPC: Improved support of const types.
- eRPC: Fixed Mac build.
- eRPC: Fixed serializing python list.
- eRPC: Documentation update.

### 1.7.1

#### Fixed

- eRPC: Fixed semaphore in static message buffer factory.
- erpcgen: Fixed MU received error flag.
- erpcgen: Fixed tcp transport.

### 1.7.0

#### Added

- eRPC: List names are based on their types. Names are more deterministic.
- eRPC: Service objects are as a default created as global static objects.
- eRPC: Added missing doxygen comments.
- eRPC: Added support for 64bit numbers.
- eRPC: Added support of program language specific annotations.

#### Fixed

- eRPC: Improved code size of generated code.
- eRPC: Generating crc value is optional.
- eRPC: Fixed CMSIS Uart driver. Removed dependency on KSDK.
- eRPC: Forbid users use reserved words.
- eRPC: Removed outByref for function parameters.
- eRPC: Optimized code style of callback functions.

### 1.6.0

#### Added

- eRPC: Added @nullable support for scalar types.

#### Fixed

- eRPC: Improved code size of generated code.
- eRPC: Improved eRPC nested calls.
- eRPC: Improved eRPC list length variable serialization.

### 1.5.0

**Added**

- eRPC: Added support for unions type non-wrapped by structure.
- eRPC: Added callbacks support.
- eRPC: Added support @external annotation for functions.
- eRPC: Added support @name annotation.
- eRPC: Added Messaging Unit transport layer.
- eRPC: Added RPMSG Lite RTOS TTY transport layer.
- eRPC: Added version verification and IDL version verification between eRPC code and eRPC generated shim code.
- eRPC: Added support of shared memory pointer.
- eRPC: Added annotation to forbid generating const keyword for function parameters.
- eRPC: Added python matrix multiply example.
- eRPC: Added nested call support.
- eRPC: Added struct member “byref” option support.
- eRPC: Added support of forward declarations of structures
- eRPC: Added Python RPMsg Multiendpoint kernel module support
- eRPC: Added eRPC sniffer tool

**1.4.0****Added**

- eRPC: New RPMsg-Lite Zero Copy (RPMsgZC) transport layer.

**Fixed**

- eRPC: win\_flex\_bison.zip for windows updated.
- eRPC: Use one codec (instead of inCodec outCodec).

**[1.3.0]****Added**

- eRPC: New annotation types introduced (@length, @max\_length, ...).
- eRPC: Support for running both erpc client and erpc server on one side.
- eRPC: New transport layers for (LP)UART, (D)SPI.
- eRPC: Error handling support.

**[1.2.0]****Added**

- eRPC source directory organization changed.
- Many eRPC improvements.

[1.1.0]

**Added**

- Multicore SDK 1.1.0 ported to KSDK 2.0.0.

[1.0.0]

**Added**

- Initial Release

# Chapter 4

## RTOS

### 4.1 FreeRTOS

#### 4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

[FreeRTOS kernel for MCUXpresso SDK Readme](#)

[FreeRTOS kernel for MCUXpresso SDK ChangeLog](#)

[FreeRTOS kernel Readme](#)

#### 4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

#### 4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

[Readme](#)

#### 4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

#### 4.1.5 corejson

JSON parser.

**Readme**

#### **4.1.6 coremqtt**

MQTT publish/subscribe messaging library.

#### **4.1.7 corepkcs11**

PKCS #11 key management library.

**Readme**

#### **4.1.8 freertos-plus-tcp**

Open source RTOS FreeRTOS Plus TCP.

**Readme**